



1. Technical Specifications :

Please fill below information in Remarks, Below given remarks are for reference only

Particular	Remarks
Key Matrix For Flashing	"Volume –" key ,then insert battery
Chipset	SPREADTRUM7731,Quad-core
Android Version	Android 4.4.3
Frequency	GSM 900/1800, WCDMA900/2100;GPRS/EGDE/WCDMA ,HSPA+ 21M
Network Mode	GSM900/DCS1800 WCDMA 900/2100
Rom	4GB
RAM	512MB
Internal SD Card memory	1216MB
Expandable Memory	32GB
Factory mode code	*##83789#*##
Good Earpiece volume	8Ω±15% ohm
Good Loudspeaker volume	-42db
Good MIC volume	max 80mA
Good Vibrator volume	max 80mA


2. CAUTIONS

- I. Flashing & Servicing must be undertaken by qualified personnel only.
- II. Ensure all work is carried out at an anti-static workstation and that an anti-static wrist strap is worn.
- III. Use only approved Tools & components as specified in the parts list.
- IV. Ensure all components, modules, screws, and insulators are correctly re-fitted after servicing and alignment
- V. Ensure all cables and wires are repositioned correctly if Handset disassembled
- VI. Electrostatic discharge can easily damage the sensitive components of electronic products.
Therefore, Service Centre must adhere the precautions which mentioned above.

3. Flashing Procedure

USB Driver installation

Step1, open “32install.exe” to start install the driver; (please select “64install.exe” for your 64bit OS)

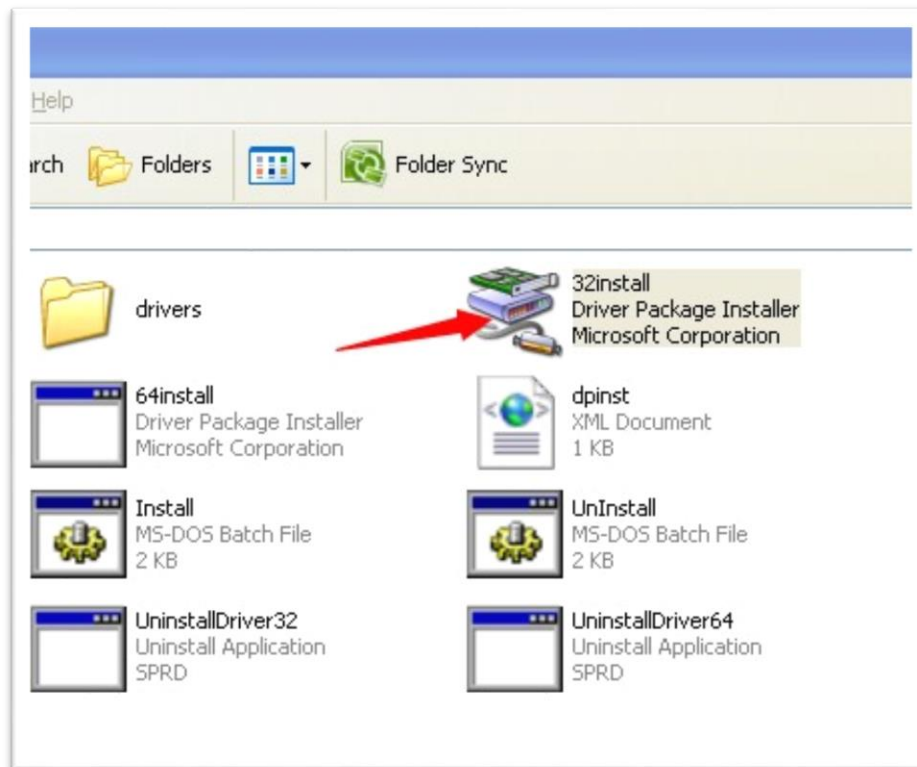


Step 2, Select “Next”



Step3, the driver has been installed in your PC;




Step 4 , Connect the mobile phone with USB cable, install the driver for your mobile phone ;

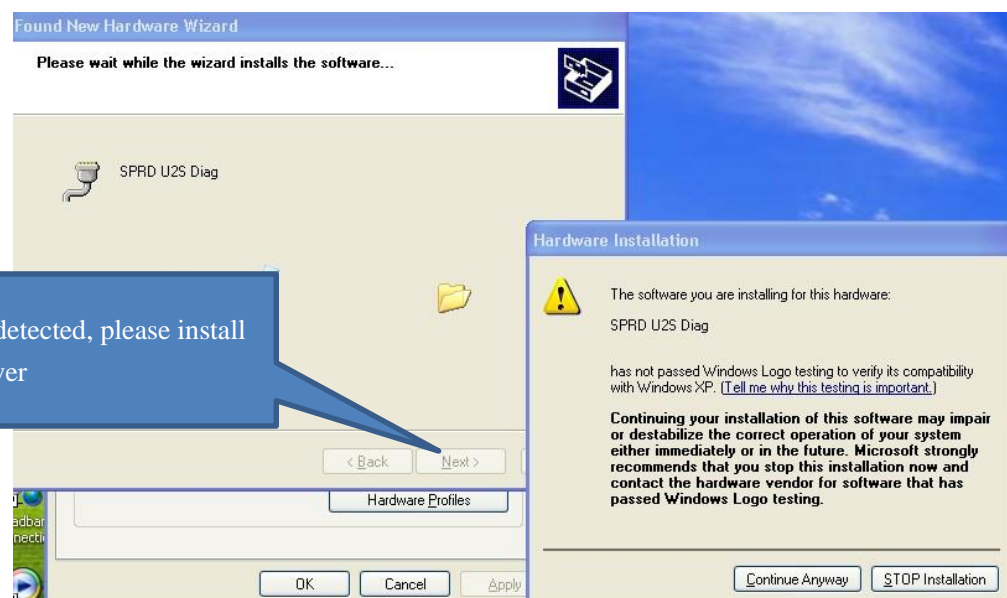

Step 5, Continue Anyway




Step 6, The mobile driver has been installed successful;
System/ properties/Hardware/Device manager/SPRD U2S DIAG (COM NO)

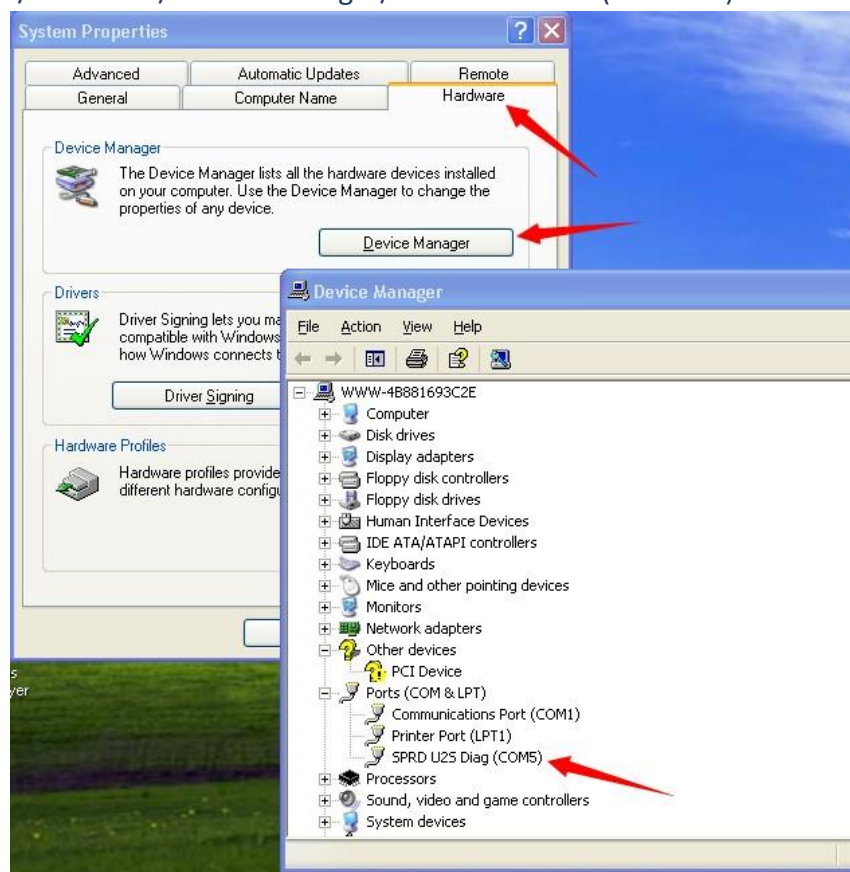


Flashing Steps:


1. Choose the UpgradeDownload documents.

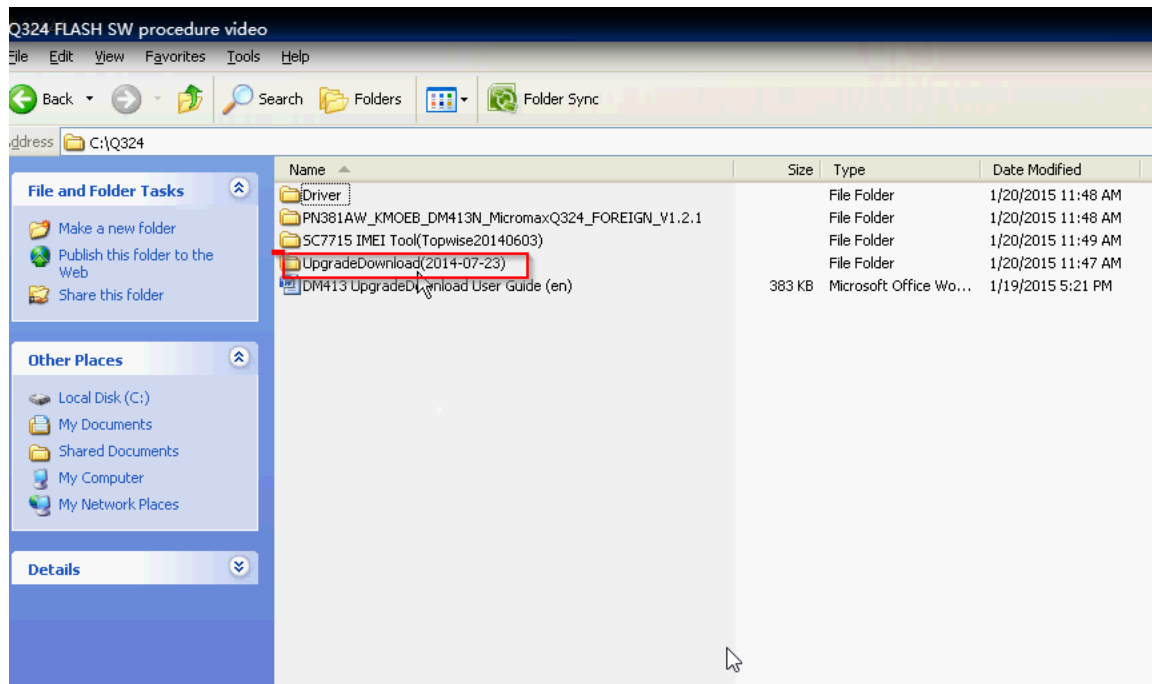


2. Open the upgradedownload documents

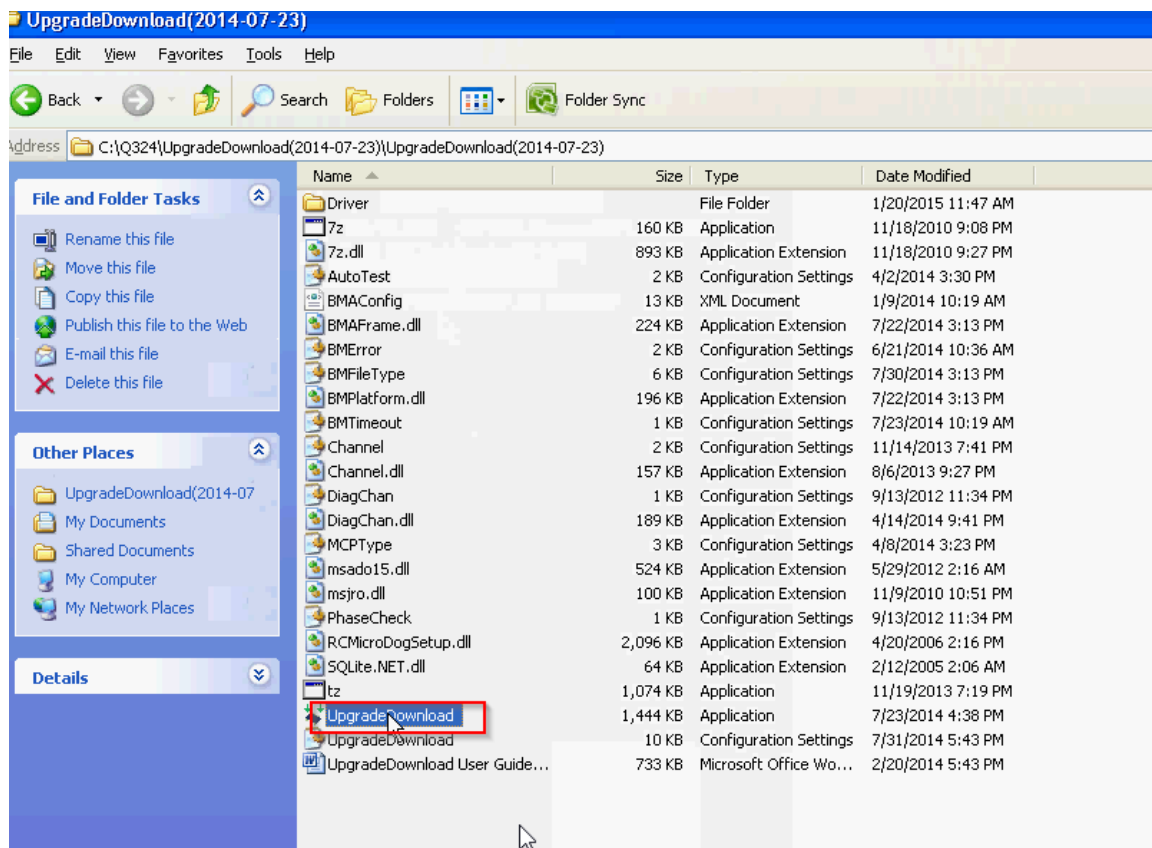


3. Press this button

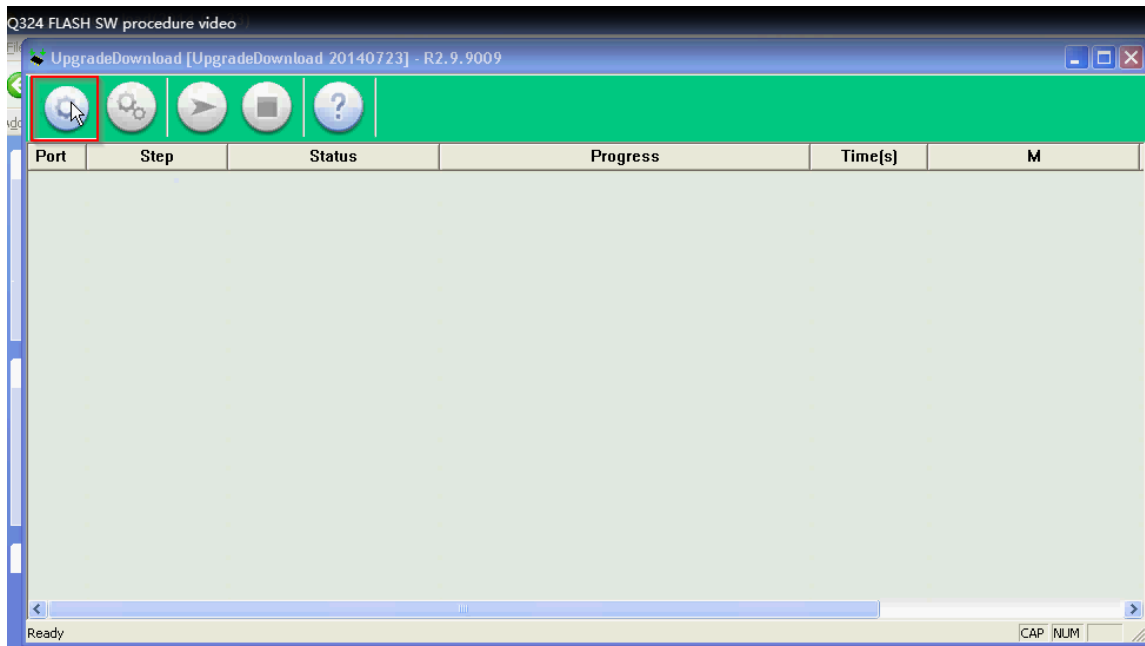


4. Load the flashing file

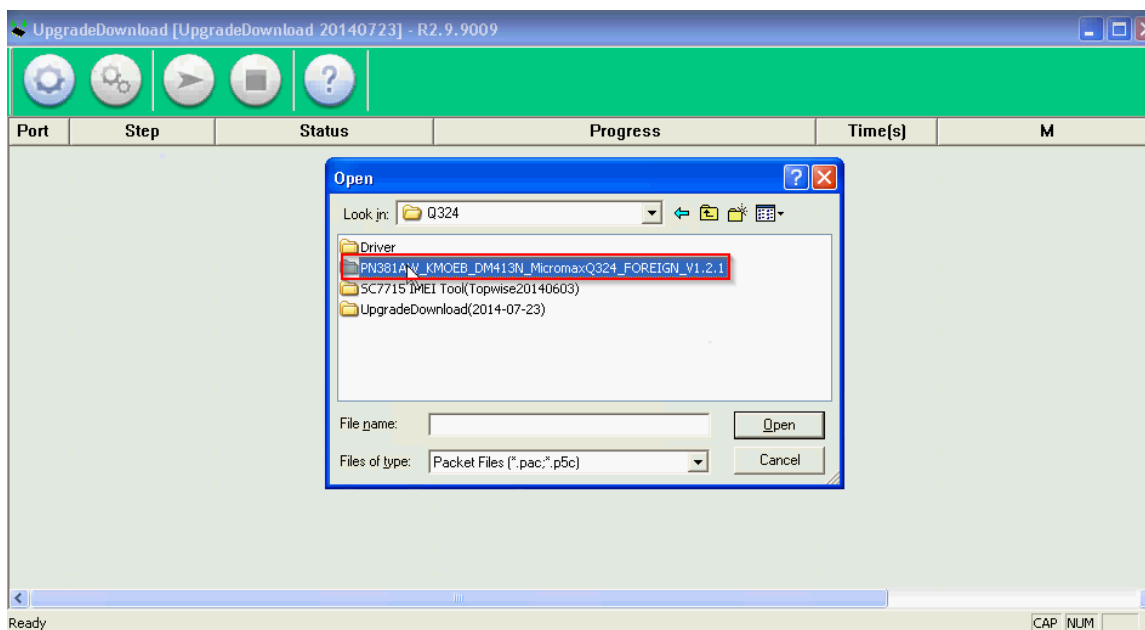


5. Choose the right software, and press open

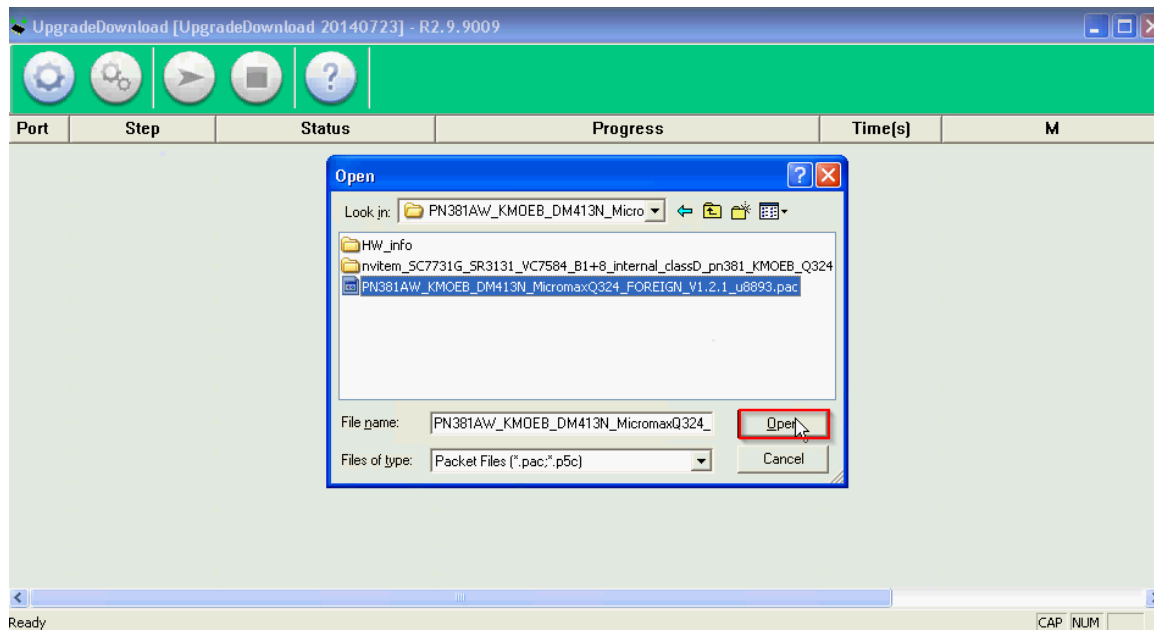


6. Press the red part

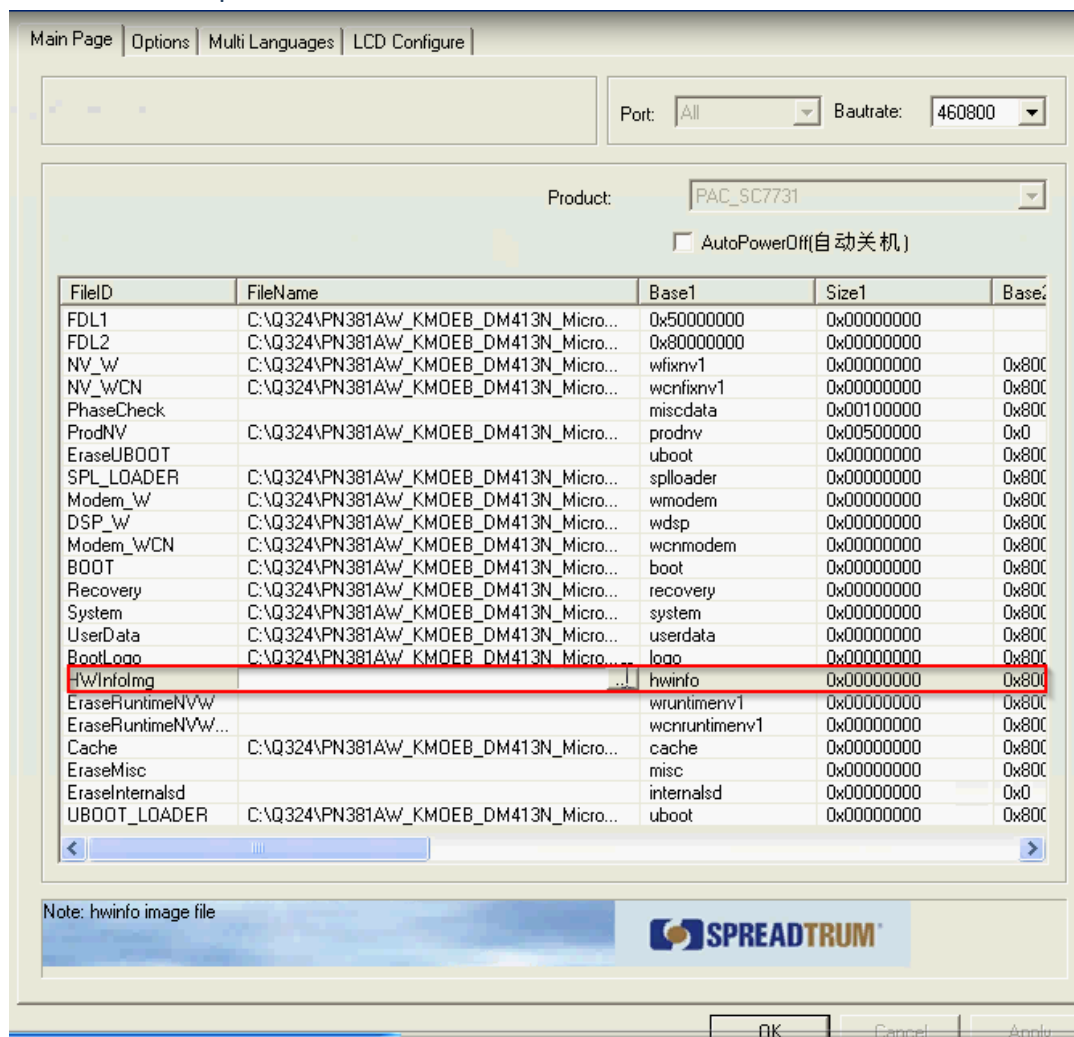


7. Choose the TXD_TXD400CGP_ILI9806E_40_CPT_MIPI_KMOEB_RAM512_Q324_HW_info.img., and press open

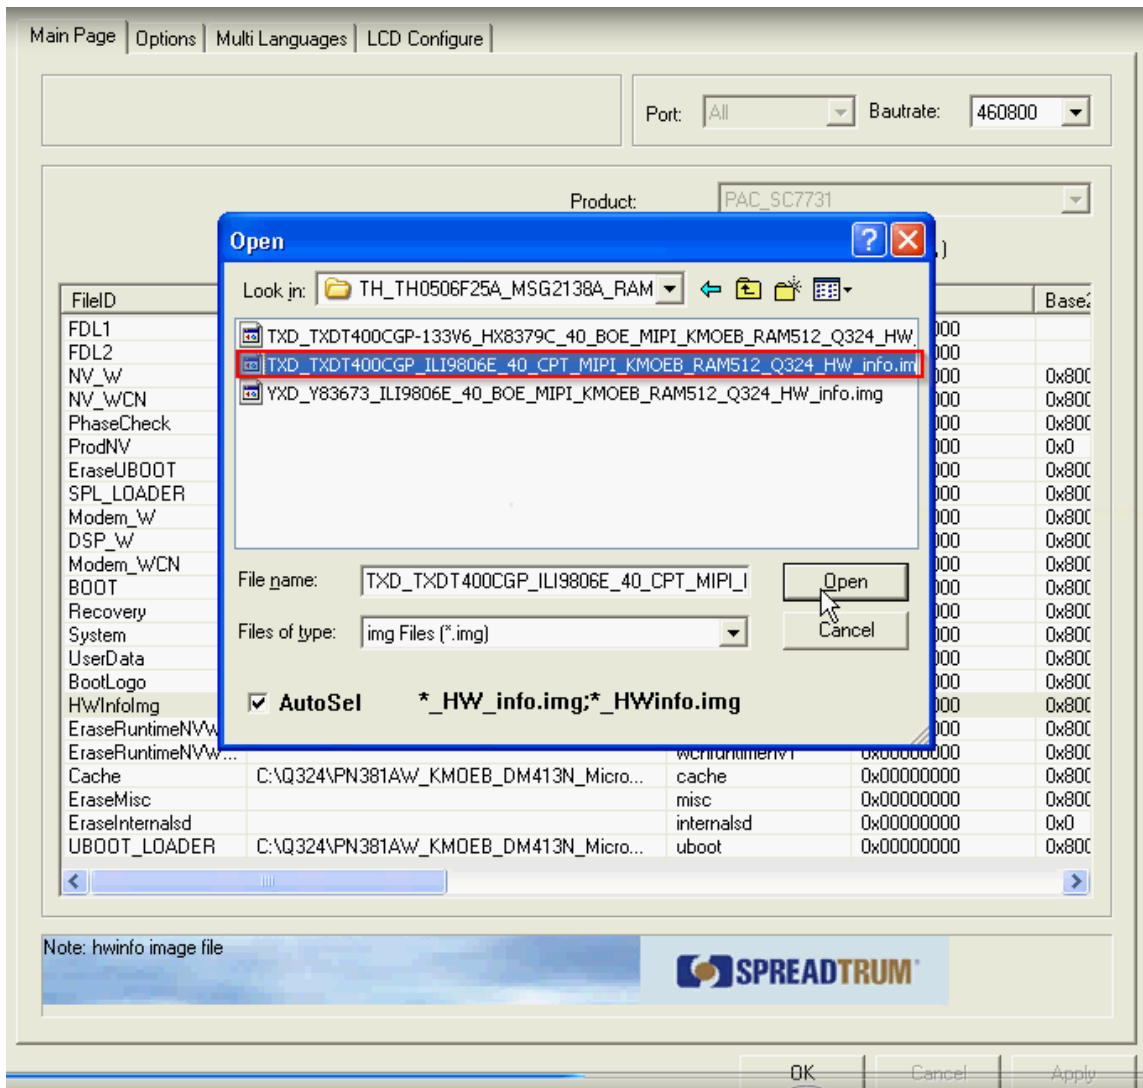

8. Press this button

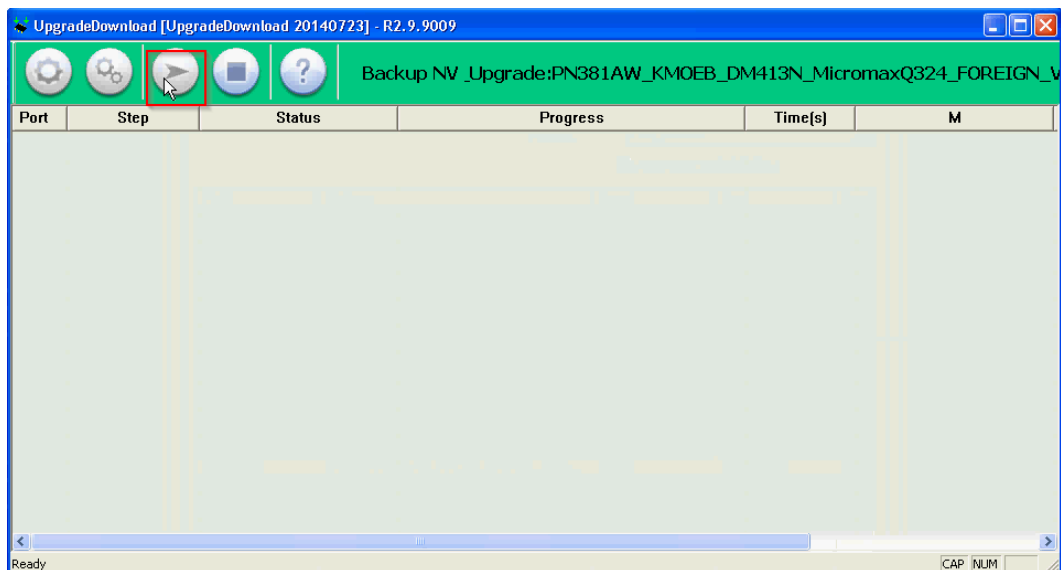

9. when it shows passed, it means flashing successfully.

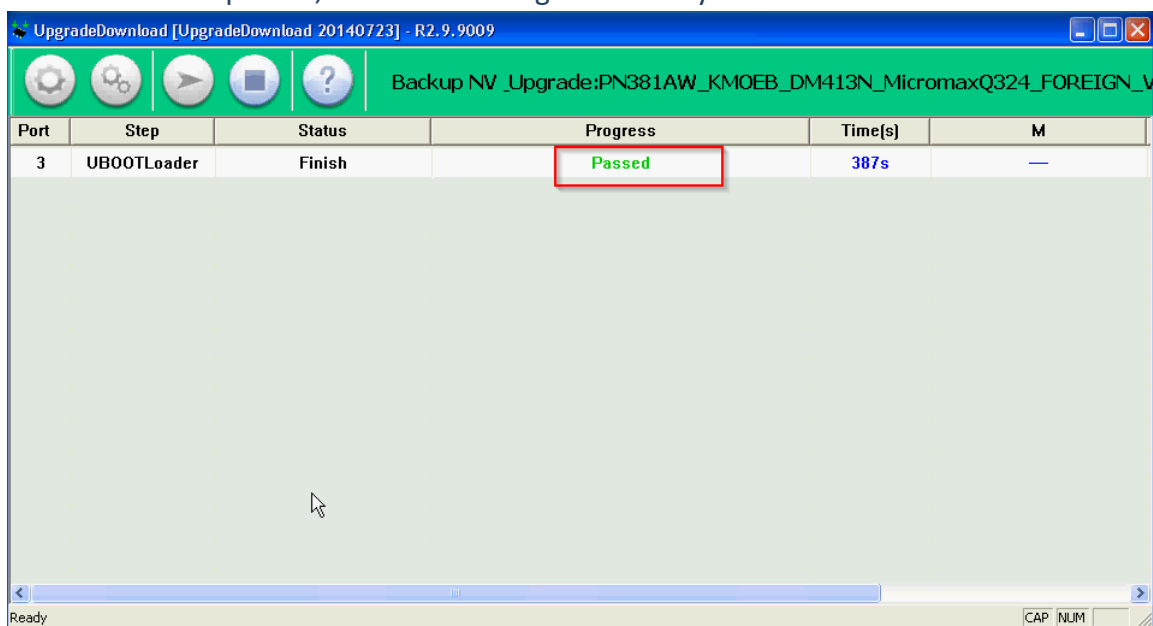

Thanks

For any Query or suggestion, Please write to tech.help@micromaxinfo.com