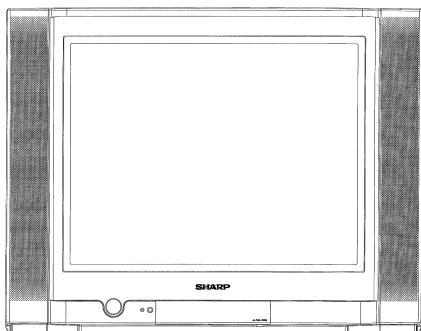


SHARP SERVICE MANUAL

No. S95O521JF2-RU



COLOUR TELEVISION *Chassis No. GA-4M*

21JF2-RU
21JF2-GA
21JF2-SA
21JF2-SF
MODELS 21JF2-SS

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

FEATURES

- Multi 18 Systems
- Full Auto Channel Preset and Auto Channel Skip
- 100-CH Program Memory
- CATV (Hyper Band) Ready
 <Used Frequency Synthesizer Tuner>
- Black Stretch Circuit
- On Timer / Off Timer / Reminder Timer
- Blue Back Function
- Front AV IN & Rear AV IN / OUT Terminals
- Front Headphone Jack
- Aperture Control Circuit
- Auto Fine Tuning
- NTSC Colour Comb Filter (AV THRU)
- High Contrast Picture
- Hotel Mode
- White Temperature Select
- Multi Languages OSD
 (ENG / CHI / FRE / MAL / ARA / RUS)
 for Model 21JF2-SF / SS Only.
 (ENG / CHI / FRE / MAL / ARA)
 for Model 21JF2-GA / SA Only.
 (ENG / RUS)
 for Model 21JF2-RU Only.
- MONO

CONTENTS

CHAPTER 1. SPECIFICATIONS

- [1] SPECIFICATIONS 1-1

CHAPTER 2. IMPORTANT SERVICE NOTES

- [1] IMPORTANT SERVICE NOTES 2-1

CHAPTER 3. ADJUSTMENT PRECAUTIONS

- [1] ADJUSTMENT PRECAUTIONS 3-1
 [2] ADJUSTMENT 3-14

CHAPTER 4. MEMORY MAP

- [1] MEMORY MAP 4-1

CHAPTER 5. TROUBLE SHOOTING FLOWCHART

- [1] TROUBLE SHOOTING FLOWCHART 5-1

CHAPTER 6. SOLID STATE DEVICE BASE DIAGRAM

- [1] SOLID STATE DEVICE BASE DIAGRAM..... 6-1

CHAPTER 7. CHASSIS LAYOUT

- [1] CHASSIS LAYOUT 7-1

CHAPTER 8. BLOCK DIAGRAM

- [1] BLOCK DIAGRAM: CRT UNIT 8-1

- [2] BLOCK DIAGRAM: HEADPHONE UNIT.....8-1

- [3] BLOCK DIAGRAM: MAIN UNIT8-2

CHAPTER 9. DESCRIPTION OF SCHEMATIC DIAGRAM

- [1] DESCRIPTION OF SCHEMATIC DIAGRAM.....9-1

CHAPTER 10. WAVEFORMS

- [1] WAVEFORMS 10-1

CHAPTER 11. SCHEMATIC DIAGRAM

- [1] SCHEMATIC DIAGRAM: MAIN UNIT..... 11-1
 [2] SCHEMATIC DIAGRAM: CRT UNIT 11-7
 [3] SCHEMATIC DIAGRAM: HEADPHONE UNIT 11-7

CHAPTER 12. PRINTED WIRING BOARD ASSEMBLIES

- [1] PWB-B: CRT UNIT 12-1
 [2] PWB-C: HEADPHONE UNIT 12-1
 [3] PWB-A: MAIN UNIT 12-2

Parts Guide

WARNING

The chassis in this receiver is partially hot. Use an isolation transformer between the line cord plug and power receptacle, when servicing this chassis. To prevent electric shock, do not remove cover. No user - serviceable parts inside. Refer servicing to qualified service personnel.

CHAPTER 2. IMPORTANT SERVICE NOTES

[1] IMPORTANT SERVICE NOTES

Maintenance and repair of this receiver should be done by qualified service personnel only.

1. SERVICE OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE

When servicing the high voltage system, remove static charge from it by connecting a 10K ohm resistor in series with an insulated wire (such as a test probe) between picture tube dag and 2nd anode lead. (AC line cord should be disconnected from AC outlet.)

- 1) Picture tube in this receiver employs integral implosion protection.
- 2) Replace with the same type number of picture tube for continued safety.
- 3) Do not lift picture tube by the neck.
- 4) Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage completely.

2. X-RAY

This receiver is designed so that any X-Ray radiation is kept to an absolute minimum. Since certain malfunctions or servicing may produce potentially hazardous radiation with prolonged exposure at close range, the following precautions should be observed:

- 1) When repairing the circuit, please make sure do not increase the high voltage of the set to more than 30.0kV (at beam 0 μ A).
- 2) To keep the set in a normal operation, please make sure it's function at 26.5kV \pm 0.5kV (at beam 1000 μ A). The set has been factory - adjusted to the above-mentioned high voltage.
*If there is a possibility that the high voltage fluctuates as a result of the repairs, never forget to check for such high voltage after the work.
- 3) Do not substitute a picture tube with unauthorized types and/or brands which may cause excessive X-ray radiation.

3. BEFORE RETURNING THE RECEIVER

Before returning the receiver to the user, perform the following safety checks.

- 1) Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the receiver.
- 2) Inspect all protective devices such as non-metal control knobs, insulating materials, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators etc.

CHAPTER 3. ADJUSTMENT PRECAUTIONS

[1] ADJUSTMENT PRECAUTIONS

This model's setting are adjusted in two different ways: through the I2C bus control and in the conventional analog manner. The adjustments via the I2C bus control include preset-only items and variable data.

CAUTION: Make sure TV set in "Normal condition" before switch to Service Mode for adjustment.

1. Setting the service mode by the microprocessor.

- i) Press SERVICE key on the remote controller to set the TV set to SERVICE mode position, and the microprocessor is in input mode. (Adjustment through the I2C bus control).
- ii) Press the MENU key on the remote controller to get ready to select the mode (Adjustment mode, Setting mode, Check mode and Option mode) one by one.
- iii) Press the CH DOWN / UP key on the remote controller to select the item in Adjustment mode, Setting mode or Option mode.
- iv) Using the VOLUME UP/ DOWN key on the remote controller, the data can be modified. Please wait approximately 200 msec for data storage in EEPROM before select to another mode.
- v) In Check mode the data cannot be changed.
- vi) Press the SERVICE key again, it will switch to the NORMAL mode position, and the microprocessor is out of the SERVICE mode.

2. Factory Presetting.

- i) Power ON the TV set, press the SERVICE key on the remote controller, then press both the CH UP and VOL UP button on the set simultaneously for 5secs. Initial values are automatically preset, only when a new EEPROM is used.
- ii) The initial data are preset as listed in page 3-7 to 3-13.
- iii) Make sure the data need modification or not (Initial data).

Precaution: If haven't done this initialization, it may possibly generate excessive Beam current.

3. For reference please check with memory map RH-IXB226WJZZ. (See Page 4-1 ~ 4-16)

1. ADJUSTMENT ITEM

***Below are the adjustment items that should be done, PLS FOLLOW THE PROCEDURE. Otherwise some adjustment items will not be accurate.

NO ***	ADJUSTMENT ITEM	EFFECTIVE MODEL	REVISION
1	BUS SET UP	ALL MODELS	
2	OPTION SET UP		
3	H-VCO		
4	VIF-VCO		
5	S-TRAP fo		
6	RF-AGC		
7	PURITY ADJ		
8	CONVERGENCE ADJ		
9	FOCUS ADJ		
10	V-SHIFT (50 Hz)		
11	H-SHIFT (50 Hz)		
12	V-SIZE (50 Hz)		
13	SCREEN		
14	WHITE BALANCE		
15	SUB-BRIGHTNESS		
16	SUB-CONTRAST		
17	SUB-TINT		
18	SUB-COLOR		
19	SECAM-OFFSET		
20	SIF VCO ADJ		
21	BEAM CURRENT CHECK		
22	BEAM PROTECTOR CHECK		
23	HV PROTECTOR CHECK		
24	OTHER PROTECTOR CHECK		
25	AV OUT CHECK		
26	AV IN CHECK		
27	CONTRAST CONTROL CHECK		
28	COLOR CONTROL CHECK		
29	BRIGHTNESS CONTROL CHECK		
30	TINT CONTROL CHECK		
31	SHARPNESS CONTROL CHECK		
32	CH DISPLAY COLOR CHECK		
33	NORMAL DISPLAY CHECK		
34	WHITE TEMP CONTROL CHECK		
35	COLOR SYSTEM CHECK		
36	SOUND SYSTEM CHECK		
37	NOISE MUTE CHECK		
38	OSD LANGUAGE QUANTITY CHECK		
39	HEAD PHONE CHECK		
40	SHOCK TEST CHECK		
41	ROM CORRECTION CHECK		

2. USER DATA IN SERVICE MODE

- 1) While SERVICE mode ON, EEPROM DATA will switch to the service data. Also, once SERVICE mode OFF, EEPROM will switch back to previous USER DATA.
- 2) In the service mode, the user data establish as below,

	USER DATA
CONTRAST	MAX (60)
COLOUR	CENT (0)
BRIGHTNESS	CENT (0)
TINT	CENT (0)
SHARPNESS	CENT (0)
WHITE TEMP	STANDARD
S-VOLUME	MIN
BLUE BACK	OFF
C SYSTEM	AUTO
S SYSTEM	*1

*1: For each CH, data is same as before switch to Service mode.

The flow of Mode list as following.

* Direct Key-in Mode for Service Items in Service Mode

RC CODE (HEX)	R/C KEY NAME	SERVICE-ITEM
80	POS 1	R-C UP (IN SERVICE MODE V00)
40	POS 2	G-C UP (IN SERVICE MODE V00)
C0	POS 3	B-C UP (IN SERVICE MODE V00)
20	POS 4	R-C DOWN (IN SERVICE MODE V00)
A0	POS 5	G-C DOWN (IN SERVICE MODE V00)
60	POS 6	B-C DOWN (IN SERVICE MODE V00)
E0	POS 7	R-D UP (IN SERVICE MODE V00)
10	POS 8	B-D UP (IN SERVICE MODE V00)
50	POS 0	B-D DOWN (IN SERVICE MODE V00)
E4	FLASHBACK	R-D DOWN (IN SERVICE MODE V00)
E4	FLASHBACK	Y-MUTE (BESIDES OF SERVICE MODE V00)
75	WHITE TEMP UP	RF-AGC (V01)
F5	WHITE TEMP DOWN	VIF-VC0 (V02)
C2	TUNE DOWN	H-VCO (V03)
8D	SHARPNESS DOWN	SUB-CON (V04)
D6	BALANCE LEFT	SUB-COL (V05)
0D	SHARPNESS UP	SUB-BRIGHT (V06)
36	BALANCE RIGHT	SUB-TINT (V07)
46	TREBLE UP	SUB-SHP (V08)
C6	TREBLE DOWN	SUB-COL-YUV (V09)
26	BASS UP	SUB-TINT-YUV (V10)
24	COLOUR UP	V-SIZE (V11), V-SIZE60 (V17)
54	BRIGHTNESS DOWN	V-SHIFT (V12), V-SHIFT60 (V18)
74	TINT DOWN	H-SHIFT (V13), H-SHIFT60 (V19)
66	SURROUND UP	SCM-BR (V14)
E6	SURROUND DOWN	SCM-BB (V15)
C4	CONTRAST DOWN	SUB-VOL (V16)
4C	PICTURE	S-TRAP-BG (V20)
CC	HOLD	S-TRAP-I (V21)
2C	TEXT	S-TRAP-DK (V22)
AC	CANCEL	S-TRAP-M (V23)
EC	SIZE	S-TRAP-574 (V24)
80	POS 1	R-C UP YUV (IN SERVICE MODE V25)
40	POS 2	G-C UP YUV (IN SERVICE MODE V25)
C0	POS 3	B-C UP YUV (IN SERVICE MODE V25)
20	POS 4	R-C DOWN YUV (IN SERVICE MODE V25)
A0	POS 5	G-C DOWN YUV (IN SERVICE MODE V25)
60	POS 6	B-C DOWN YUV (IN SERVICE MODE V25)
E0	POS 7	R-D UP YUV (IN SERVICE MODE V25)
10	POS 8	B-D UP YUV (IN SERVICE MODE V25)
50	POS 0	B-D DOWN YUV (IN SERVICE MODE V25)

RC CODE (HEX)	R/C KEY NAME	SERVICE-ITEM
E4	FLASHBACK	R-D DOWN YUV (IN SERVICE MODE V25)
C1		AUTO ADJ FOR V01, V02, V03, V20, V21, V22, V23, V24
CA		T-SET
81		SERVICE MODE

1) Please set the MCL to MCL1 as below:

2) After set the MCL, please set the INITIAL SETTING for each models.

INITIAL 3 : For Singapore and Africa (All Channel Sound System are set to B/G)

INITIAL 4 : For Middle-East (All Channel Sound System are set to B/G)

INITIAL 5 : For Russia (All Channel Sound System are set to D/K)

MCL1 (HEX AE)		
CH-No	Fv (MHz)	Sound Sys
0		
1	48.25	B/G
2	62.25	B/G
3	77.25	D/K
4	175.25	B/G
5	182.25	B/G
6	183.25	D/K
7	191.25	D/K
8	196.25	B/G
9	199.25	M
10	210.25	B/G
11	224.25	B/G
12	471.25	B/G
13	487.25	I
14	503.25	B/G
15	575.25	B/G
16	583.25	B/G
17	599.25	B/G
18	621.25	M
19	639.25	D/K
20	703.25	B/G
21	735.25	I
22	767.25	B/G
23	815.25	B/G
24	855.25	I
25	855.25	B/G
26	55.25	M
27	83.25	M
28	183.25	M
29	193.25	M
30	217.25	M
31	471.25	M
32	477.25	M
33	693.25	M
34	885.25	M
35	112.25	B/G
36	168.25	B/G
37		
38	294.25	B/G
39	463.25	B/G
40		
41	647.25	B/G
42	663.25	B/G
43	679.25	B/G
44	174.95	B/G
45	175.55	B/G
46		
47		
48		
49		

MCL1 (HEX AE)		
CH-No	Fv (MHz)	Sound Sys
50		
51		
52		
53		
54		
55		
56		
57		
58		
59		
60		
61		
62		
63		
64		
65		
66		
67		
68		
69		
70		

NOTE: PLL DATA OF ABOVE FREQ SHOULD TAKE THE ACCOUNT OF PIF SETTING IN SERVICE OPTION 004 (VIF) BEFORE STORING INTO EEPROM.

3. SHIPPING SETTING & CHECKING

(1) The following default data has been factory-set for the E2PROM follow by INITIAL DATA selected.

ITEMS	DATA SETTING
LAST POWER	ON
LAST TV/AV MODE	TV MODE
LAST POSITION	CH 1
FLASHBACK CHANNEL	CH 1
1/2 DIGIT ENTRY	2 DIGIT ENTRY
VOLUME	0 (Min)
BLUE BACK	OFF
OFF TIMER	--:--
ON TIMER	--:--
ON TIMER POSITION	--
ON TIMER VOLUME	--
REMINDER	--:--
AFT	ALL CH ON
COLOR SYSTEM	ALL CH AUTO
SKIP	ALL CH OFF
CONTRAST	60
COLOR	0
BRIGHTNESS	0
TINT	0
SHARPNESS	0
WHITE TEMP	0

INITIAL	LANGUAGE	SOUND SYSTEM
1	CHINESE	D/K
2	CHINESE	I
3	ENGLISH	B/G
4	ARABIC	B/G
5	RUSSIAN	D/K
6	MALAY	B/G
7	FRENCH	D/K

(Reference: Geomagnetism Adjustment)

MODEL	MAGNETIC FIELD(V, H) nT		BACKGROUND	LANG.	S-SYS	LANG QTY
SINGAPORE	-10000	40000	12300°K	ENGLISH	B/G	5
AFRICA	-10000	40000	12300°K	ENGLISH	B/G	5
MID-EAST	30000	20000	18000°K	ARABIC	B/G	6
RUSSIA	45000	20000	7500°K	RUSSIAN	D/K	2

*NOTE FOR OSD TYPE:

2: ENGLISH/RUSSIAN

5: ENGLISH/CHINESE/FRENCH/ARABIC/MALAY

6: ENGLISH/CHINESE/FRENCH/ARABIC/MALAY/RUSSIAN

21JF2-RU/GA/SA/SF/SS

**AFTER INITIALIZED THE EEPROM (REFER TO FACTORY PRESETTING), READ DATA FROM EEPROM ADDRESS 00H ~ 03H, AND COMPARE TO THE LIST BELOW, IF DIFFERENT, INITIALIZE THE EEPROM.

ADDRESS	DATA	ADDRESS	DATA
00H:	7BH	02H:	72H
01H:	72H	03H:	76H

*** There are four stages of service mode data. First stage data from V00 ~ V31 (Adjustment Mode).

To go into second stage of service mode data, press MENU key. Second stage data from F01 ~ F142 (Setting Mode).

To go into third stage of service mode data, press MENU key. Third stage data is Check Mode.

To go into fourth stage of service mode data, press MENU key. Fourth stage data from O01 ~ O31 (Option Mode).

ADJUSTMENT MODE (FIRST STAGE)					
EEPROM ITEMS	OSD	DATA LENGTH	INITIAL DATA	FIX/ADJ/AUTO	REMARK
R-DRIVE	V00	0~127	63	ADJ	PLS REFER TO ADJ ITEM FOR SCREEN AND WHITE BALANCE
B-DRIVE	V00	0~127	63	ADJ	
R-CUT	V00	0~255	127	ADJ	
G-CUT	V00	0~255	127	ADJ	
B-CUT	V00	0~255	127	ADJ	
RF-AGC	V01	0~127	50	AUTO	
VIF-VCO	V02	0~63	31	AUTO	
H-VCO	V03	0~7	3	AUTO	
SUB-CONTRAST	V04	0~127	100	ADJ	
SUB-COLOR	V05	0~127	63	ADJ	
SUB-BRIGHT	V06	0~255	127	ADJ	
SUB-TINT	V07	0~127	63	ADJ	
SUB-SHARPNESS	V08	0~63	43	*FIX	BUS SETUP
SUB-COLOR -YUV	V09	0~127	90	FIX	
SUB-TINT-YUV	V10	0~127	63	FIX	
V-SIZE 50 Hz	V11	0~63	38	ADJ	
V-SHIFT 50 Hz	V12	0~7	3	ADJ	
H-SHIFT 50 Hz	V13	0~31	9	ADJ	
SECAM-BR	V14	0~63	37	ADJ	
SECAM-BB	V15	0~63	22	ADJ	
SUB-VOL	V16	0~60	60	FIX	
V-SIZE 60 Hz	V17	-31~0~+31	0	FIX	IF NECESSARY, ADJ
V-SHIFT 60 Hz	V18	-7~0~+7	-1	FIX	IF NECESSARY, ADJ
H-SHIFT 60 Hz	V19	-15~0~+15	+2	FIX	IF NECESSARY, ADJ
S-TRAP (BG)	V20	0~15	7	AUTO	
S-TRAP (I)	V21	0~15	7	AUTO	
S-TRAP (DK)	V22	0~15	7	AUTO	
S-TRAP (M)	V23	0~15	7	AUTO	
S-TRAP (5.74)	V24	0~15	7	AUTO	
CUTOFF/BKGD YUV	V25				
R-DRI YUV	V25	0~127	63	FIX	
B-DRI YUV	V25	0~127	63	FIX	
R-CUT YUV	V25	0~255	127	FIX	
G-CUT YUV	V25	0~255	127	FIX	
B-CUT YUV	V25	0~255	127	FIX	
SUB-CON YUV	V26	0~127	100	FIX	
SUB-BRGHT YUV	V27	0~255	127	FIX	
VS-CORRECT	V28	0~63	32	FIX	ONLY FOR M61266
VC-CORRECT OFFSET	V29	-13~+13	0	FIX	ONLY FOR M61266
V LINEARITY	V30	0~63	32	FIX	ONLY FOR M61266
V LINEARITY OFFSET	V31	-13~+13	0	FIX	ONLY FOR M61266

SETTING MODE (SECOND STAGE)						
EEPROM ITEMS	FUNCTION	OSD	DATA LENGTH	INITIAL DATA	FIX/ADJ/AUTO	REMARK
C.CLIP-LVL	CLIP LEVEL CONTRAST CONTROL OF RGB INPUT	F01	0(20H) / 1(40H)	0	FIX	
RGB-CLIP	CLIPPING OF RGB CONTRAST CONTROL	F02	0 (CLIP OFF) / 1(CLIP ON)	0	FIX	
BS	BLACK STRETCH	F03	0(ON) / 1(OFF)	0	FIX	
ABCL	ABCL PROCESSING (ACL PROCESSING)	F04	0(OFF) / 1(ON)	0	FIX	
ABCL-GAIN	ABCL PROCESSING GAIN	F05	0(LOW) / 1(HIGH)	0	FIX	
S-OUT-LVL	AUDIO OUTPUT GAIN CONTROL	F06	0~127	95	*FIX	BUS SETUP
VIF-G	P-IF DETECTION GAIN OUTPUT	F07	0~7	4	FIX	
SHPG	SHARPNESS GAIN	F08	0(NORMAL) / 1(HIGH)	0	FIX	
SHPG-P	SHARPNESS GAIN PAL	F09	0(NORMAL) / 1(HIGH)	0	FIX	
SHPG-S	SHARPNESS GAIN SECAM	F10	0(NORMAL) / 1(HIGH)	0	FIX	
SHPG-N4	SHARPNESS GAIN N443	F11	0(NORMAL) / 1(HIGH)	0	FIX	
SHPG-N3	SHARPNESS GAIN N358	F12	0(NORMAL) / 1(HIGH)	1	FIX	
YDL	Y SIGNAL DELAY	F13	0~7	5	FIX	
YDL-P	Y SIGNAL DELAY PAL	F14	0~7	5	FIX	
YDL-S	Y SIGNAL DELAY SECAM	F15	0~7	7	FIX	
YDL-N4	Y SIGNAL DELAY N443	F16	0~7	5	FIX	
YDL-N3	Y SIGNAL DELAY N358	F17	0~7	5	FIX	
YDL-AV	Y SIGNAL DELAY AV	F18	0~7	6	FIX	
YDL-AV-P	Y SIGNAL DELAY PAL (AV)	F19	0~7	6	FIX	
YDL-AV-S	Y SIGNAL DELAY SECAM (AV)	F20	0~7	7	FIX	
YDL-AV-N4	Y SIGNAL DELAY N443 (AV)	F21	0~7	6	FIX	
YDL-AV-N3	Y SIGNAL DELAY N358 (AV)	F22	0~7	6	FIX	
YDL-YUV	Y SIGNAL DELAY YUV	F23	0~7	6	FIX	
COL-AV (OFFSET)	COLOUR OFFSET AV	F24	-31~0~+31	+10	*FIX	BUS SETUP
COL-P (OFFSET)	COLOUR OFFSET PAL	F25	-31~0~+31	0	FIX	
COL-S (OFFSET)	COLOUR OFFSET SECAM	F26	-31~0~+31	+9	FIX	
COL-N4 (OFFSET)	COLOUR OFFSET N443	F27	-31~0~+31	-8	FIX	
COL-N3 (OFFSET)	COLOUR OFFSET N358	F28	-31~0~+31	-7	FIX	
COL-ADJ (OFFSET)	COLOUR OFFSET ADJUST	F29	-31~0~+31	0	*FIX	BUS SETUP
SHP-AV (OFFSET)	SHARPNESS OFFSET AV	F30	-31~0~+31	+5	*FIX	BUS SETUP
SHP-YUV (OFFSET)	SHARPNESS OFFSET YUV	F31	-31~0~+31	0	FIX	
SHP-P (OFFSET)	SHARPNESS OFFSET PAL	F32	-31~0~+31	0	FIX	
SHP-S (OFFSET)	SHARPNESS OFFSET SECAM	F33	-31~0~+31	-5	FIX	
SHP-N4 (OFFSET)	SHARPNESS OFFSET N443	F34	-31~0~+31	0	FIX	
SHP-N3 (OFFSET)	SHARPNESS OFFSET N358	F35	-31~0~+31	0	FIX	
TINT-AV (OFFSET)	TINT OFFSET AV	F36	-63~0~+63	0	*FIX	BUS SETUP
TINT-ADJ (OFFSET)	TINT OFFSET ADJUST	F37	-63~0~+63	0	*FIX	BUS SETUP
TINT-YUV-ADJ (OFFSET)	TINT YUV OFFSET ADJUST	F38	-63~0~+63	0	FIX	
R-R (OFFSET)	R-DRIVE OFFSET WHEN WHITE TEMP IS RED	F39	-63~0~+63	+8	*FIX	BUS SETUP
B-R (OFFSET)	B-DRIVE OFFSET WHEN WHITE TEMP IS RED	F40	-63~0~+63	-10	*FIX	BUS SETUP
R-B (OFFSET)	R-DRIVE OFFSET WHEN WHITE TEMP IS BLUE	F41	-63~0~+63	-3	*FIX	BUS SETUP
B-B (OFFSET)	B-DRIVE OFFSET WHEN WHITE TEMP IS BLUE	F42	-63~0~+63	+13	*FIX	BUS SETUP
TRAP	CENTER VALUE OF CHROMA TRAP	F43	0~3	2	FIX	
TRAP-P	CENTER VALUE OF CHROMA TRAP PAL	F44	0~3	2	FIX	
TRAP-S	CENTER VALUE OF CHROMA TRAP SECAM	F45	0~3	2	FIX	
TRAP-N4	CENTER VALUE OF CHROMA TRAP N443	F46	0~3	2	FIX	
TRAP-N3	CENTER VALUE OF CHROMA TRAP N358	F47	0~3	2	FIX	
1W-TV	VERT SYNC DETECTION MODE FOR AV (1 WINDOW/2 WINDOW)	F48	ACCEPTABLE PERIOD: 0(AUTOMATIC CHANGE) / 1(FIX (WIDE))	0	FIX	
1W-AV	VERT SYNC DETECTION MODE FOR TV (1 WINDOW/2 WINDOW)	F49	ACCEPTABLE PERIOD: 0(AUTOMATIC CHANGE) / 1(FIX (WIDE))	1	FIX	
V-FREE (NO SYNC)	SET VERTICAL TO FORCED FREE RUN MODE	F50	0(NORMAL) / 1(FREE-RUN)	0	FIX	

SETTING MODE (SECOND STAGE)						
EEPROM ITEMS	FUNCTION	OSD	DATA LENGTH	INITIAL DATA	FIX/ADJ/AUTO	REMARK
AFC2 (NO SYNC)	HORIZONTAL AFC2 GAIN	F51	0(NORMAL) / 1(DOWN)	0	FIX	
GAMMA	GAMMA CORRECTION QTY	F52	0~3	0	FIX	
BS-D/C	BLACK STRETCH CONTROL LEVEL	F53	0~15	10	FIX	
BS-GAIN	BLACK STRETCH LEVEL	F54	0(NORMAL) / 1(DOWN)	0	FIX	
OM-DET	OVER MODULATION DETECT	F55	0(OFF) / 1(ON)	0	FIX	
SL-TV	SLICE LEVEL OF SYNC DETECTION TV	F56	0~7	2	FIX	
SL-AV	SLICE LEVEL OF SYNC DETECTION AV	F57	0~7	4	FIX	
SL-YUV	SLICE LEVEL OF SYNC DETECTION YUV	F58	0~7	4	FIX	
VD2/VD1/AS/FBP-TV	VD2 & VD1-VERT SYNC DETECT MIN WIDTH MSB & LSB RESPECTIVELY, AS-TV/AV/YUV SWITCH & CH CHANGE, FBP-FLYBACK PULSE SLICE LEVEL (TV)	F59	0~15	6	FIX	
VD2/VD1/AS/FBP-AV	VD2 & VD1-VERT SYNC DETECT MIN WIDTH MSB & LSB RESPECTIVELY, AS-TV/AV/YUV SWITCH & CH CHANGE, FBP-FLYBACK PULSE SLICE LEVEL (AV)	F60	0~15	14	FIX	
VD2/VD1/AS/FBP-YUV	VD2 & VD1-VERT SYNC DETECT MIN WIDTH MSB & LSB RESPECTIVELY, AS-TV/AV/YUV SWITCH & CH CHANGE, FBP-FLYBACK PULSE SLICE LEVEL (YUV)	F61	0~15	14	FIX	
VDL	COLOUR DIFF. INPUT PHASE ADJ	F62	0~3	0	FIX	
UDL	COLOUR DIFF. INPUT PHASE ADJ	F63	0~3	0	FIX	
AUTO-SCM-KIL-TV	SECAM COLOUR KILLER SENSITIVITY (TV)	F64	0~3	1	FIX	
SECAM-BGP	INTERNAL SECAM BGP TIMING	F65	0~3	0	FIX	
N45	INHIBIT 50Hz NTSC 4.43	F66	0(NORMAL) / 1(INHIBIT)	0	FIX	
TXT-POS-H (TELE-TEXT)	TELETEXT HORIZONTAL POSITION	F67	0~63	30	FIX	
TXT-POS-V (TELE-TEXT)	TELETEXT VERTICAL POSITION	F68	0~63	34	FIX	
OSD-POS	OSD POSITION	F69	0~127	9	FIX	
CP	CHARGE PUMP	F70	0(FAST TUNING) / 1(MODERATE SPEED TUNING)	1	FIX	
SMALL-SURR (S-CTRL)	SURROUND MODE SELECT	F71	0(EALA EFFECT LARGE) / 1(EALA EFFECT SMALL)	0	FIX	
SUB-BASS (S-CTRL)	SUB BASS CONTROL	F72	0(0dB), 1(-1dB), 2(-2dB), 3(-3dB), 4(0dB), 5(+1dB), 6(+2dB), 7(+3dB)	6	FIX	
SUB-TREB (S-CTRL)	SUB TREBLE CONTROL	F73	0(0dB), 1(-1dB), 2(-2dB), 3(-3dB), 4(0dB), 5(+1dB), 6(+2dB), 7(+3dB)	0	*FIX	
AGC-ADJ (S-CTRL)	AGC LEVEL ADJUST	F74	0(AGC Off), 1(300mVrms), 2(400mVrms), 3(500Vrms), 4(600mVrms)	0	*FIX	
AGC-SW-OFF (NICAM)	NICAM AGC SWITCH OFF	F75	0(DISABLE, FIX GAIN), 1(ENABLE)	1	FIX	
AGC-GAIN-ADJ (NICAM)	NICAM AGC GAIN ADJUST	F76	0~31	16	FIX	
FM-LEVEL-ADJ (NICAM)	FM LEVEL ADJUST	F77	-15~0~+15	0	FIX	
IGR-LEVEL-ADJ (NICAM)	IGR LEVEL ADJUST	F78	-15~0~+15	+1	FIX	
NICAM-BG-LVL-ADJ (NICAM)	NICAM B/G LEVEL ADJUST	F79	-15~0~+15	-2	FIX	
NICAM-I-LVL-ADJ (NICAM)	NICAM I LEVEL ADJUST	F80	-15~0~+15	+3	FIX	
NICAM-DK-LVL-ADJ (NICAM)	NICAM D/K LEVEL ADJUST	F81	-15~0~+15	-1	FIX	
NICAM-LOW-ERR-LIM (NICAM)	NICAM LOWER ERROR LIMIT	F82	0~255	35	FIX	
NICAM-UPP-ERR-LIM (NICAM)	NICAM UPPER ERROR LIMIT	F83	0~255	70	FIX	
IGR-GAIN-ADJ (IGR)	IGR GAIN ADJUST	F84	-6~0~+7	0	FIX	

SETTING MODE (SECOND STAGE)						
EEPROM ITEMS	FUNCTION	OSD	DATA LENGTH	INITIAL DATA	FIX/ADJ/AUTO	REMARK
FM-ID-SPEED (NICAM)	FM SOUND IDENTIFICATION MODE	F85	0(SLOW) / 1(MEDIUM) / 2(FAST) / 3(OFF)	1	FIX	
NICAM-AUTO-MUTE	NICAM AUTO DETECTION	F86	0(MUTE) / 1(DEMUTE)	0	FIX	
AUTO-SCM-KIL-AV-YUV	SECAM COLOUR KILLER SENSITIVITY (AV/YUV)	F87	0~3	1	FIX	
AFC1-GAIN-TV	MSB OF HORIZONTAL AFC GAIN1 (TV)	F88	0(NORMAL) / 1(x2) / 2(x1.5) / 3(3.5)	0	FIX	
AFC1-GAIN-AV	MSB OF HORIZONTAL AFC GAIN1 (AV)	F89	0(NORMAL) / 1(x2) / 2(x1.5) / 3(3.5)	3	FIX	
AFC1-GAIN-YUV	MSB OF HORIZONTAL AFC GAIN1 (YUV)	F90	0(NORMAL) / 1(x2) / 2(x1.5) / 3(3.5)	3	FIX	
CON-REDUCE	CONTRAST (PICTURE LEVEL) CONTROL	F91	0(0%)~1(25%)~2(50%)	0	FIX	
TAKE-OFF-TV	TAKEOFF/BPF OF CHROMA BPF PROCESSING TV	F92	0(BPF) / 1(TAKEOFF)	1	FIX	
TAKE-OFF-AV	TAKEOFF/BPF OF CHROMA BPF PROCESSING AV	F93	0(BPF) / 1(TAKEOFF)	0	FIX	
TAKE-OFF-YUV	TAKEOFF/BPF OF CHROMA BPF PROCESSING YUV	F94	0(BPF) / 1(TAKEOFF)	0	FIX	
C-ANGLE (103 DEG/ 95 DEG)	CHROMA MODULATION ANGLE	F95	0(103DEG) / 1(95DEG)	1	FIX	
AC-FAIL-WO-BRIGHT	PICTURE BLACK LEVEL (BRIGHT) CONTROL - AC FAILURE	F96	0~255	255	FIX	
FORCED-SCM-KIL-TV	FORCED SECAM COLOUR KILLER SENSITIVITY (TV)	F97	0~3	2	FIX	
FORCED-SCM-KIL-AV-YUV	FORCED SECAM COLOUR KILLER SENSITIVITY (AV/YUV)	F98	0~3	2	FIX	
R-Y ADJ.	COLOUR EDGE IMPROVEMENT	F99	0(DISABLE) / 1(ENABLE)	1	FIX	
V-DEMUTE-DELAY	VIDEO DEMUTE DELAY	F100	0~255	0	*FIX	BUS SETUP
S-DEMUTE-DELAY	SOUND DEMUTE DELAY	F101	0~255	0	*FIX	BUS SETUP
MER	S-BOOSTER FREQ. CHARACTERISTIC CONTROL	F102	0~255	70	FIX	
MEL1	S-BOOSTER LEVEL1	F103	0~255	150	FIX	
MEL2	S-BOOSTER LEVEL2	F104	0~255	156	FIX	
MEL3	S-BOOSTER LEVEL3	F105	0~255	163	FIX	
MEL4	S-BOOSTER LEVEL4	F106	0~255	165	FIX	
MEL5	S-BOOSTER LEVEL5	F107	0~255	170	FIX	
MEL6	S-BOOSTER LEVEL6	F108	0~255	180	FIX	
S-ST-POINT	S-BOOSTER START POINT	F109	0~60	21	FIX	
S-SP-POINT	S-BOOSTER STOP POINT	F110	0~60	60	FIX	
S-STEP	S-BOOSTER STEP	F111	0~60	7	FIX	
POW-STORAGE	CONTRAST/BRIGHTNESS INCREASE GRADUALLY	F112	0(DISABLE) / 1(ENABLE)	1	FIX	
S-B-BASS	S-BOOSTER BASS LIMITER (WHEN S-BOOSTER ON)	F113	-30~0~+30	+15	FIX	
S-B-TREB	S-BOOSTER TREBLE LIMITER (WHEN S-BOOSTER ON)	F114	-30~0~+30	+15	FIX	
S-BASS	S-BOOSTER BASS LIMITER (WHEN S-BOOSTER OFF)	F115	-30~0~+30	+30	FIX	
S-TREB	S-BOOSTER TREBLE LIMITER (WHEN S-BOOSTER OFF)	F116	-30~0~+30	+30	FIX	
V-STD-TV	VERTICAL STANDARD SIGNAL DETECTOR SWITCH (TV)	F117	0(DISABLE) / 1(ENABLE)	0	FIX	
V-STD-AV	VERTICAL STANDARD SIGNAL DETECTOR SWITCH (AV)	F118	0(DISABLE) / 1(ENABLE)	0	FIX	
V-STD-YUV	VERTICAL STANDARD SIGNAL DETECTOR SWITCH (YUV)	F119	0(DISABLE) / 1(ENABLE)	0	FIX	
WO-Bright-after-WO-TIME	WHITE OUT BRIGHT AFTER WHITE OUT TIME	F120	0~255	255	FIX	
WO-Contrast-after-WO-TIME	WHITE OUT CONTRAST AFTER WHITE OUT TIME	F121	0~127	127	FIX	
WO-Bright-before-WO-TIME	WHITE OUT BRIGHT BEFORE WHITE OUT TIME	F122	0~255	255	FIX	
WO-Contrast-before-WO-TIME	WHITE OUT CONTRAST BEFORE WHITE OUT TIME	F123	0~127	127	FIX	
WO-TIME	WHITE OUT	F124	0~31	0	FIX	

SETTING MODE (SECOND STAGE)						
EEPROM ITEMS	FUNCTION	OSD	DATA LENGTH	INITIAL DATA	FIX/ADJ/AUTO	REMARK
A2-ID-Response	SETTING IDENTIFICATION RESPONSE TIME	F125	0(NORMAL) / 1(FAST)	1	FIX	
R-DRI YUV OFFSET	RGB OUTPUT RED GAIN OFFSET (YUV)	F126	-63~0~+63	0	FIX	
B-DRI YUV OFFSET	RGB OUTPUT BLUE GAIN OFFSET (YUV)	F127	-63~0~+63	0	FIX	
R-CUT YUV OFFSET	RGB OUTPUT-RED BIAS LEVEL OFFSET (YUV)	F128	-63~0~+63	0	FIX	
G-CUT YUV OFFSET	RGB OUTPUT-GREEN BIAS LEVEL OFFSET (YUV)	F129	-63~0~+63	0	FIX	
B-CUT YUV OFFSET	RGB OUTPUT-BLUE BIAS LEVEL OFFSET (YUV)	F130	-63~0~+63	0	FIX	
CON YUV OFFSET	SUB-CONTRAS OFFSET (YUV)	F131	-63~0~+63	0	FIX	
BRT YUV OFFSET	SUB-BRIGHT OFFSET (YUV)	F132	-63~0~+63	0	FIX	
SHP ANT-ONII OFF-SET	SHARP ANT-ON II OFFSET FOR VIDEO TONE	F133	-31~0~+31	0	FIX	
WAIT MD TIME	SETTING CYCLE PROCESS TIME AT LOW POWER	F134	0~4	2	FIX	
Contrast OFFSET	CONTRAST (PICTURE LEVEL) OFFSET	F135	-63~0~+63	0	FIX	
Bright OFFSET	PICTURE BLACK LEVEL (BRIGHT) OFF-SET	F136	-63~0~+63	0	FIX	
CR-PEDESTEL-ADJ	Cr SIGNAL LEVEL ADJUSTMENT	F137	0~15	8	FIX	ONLY FOR M62166
CB-PEDESTEL-ADJ	Cb SIGNAL LEVEL ADJUSTMENT	F138	0~15	8	FIX	ONLY FOR M62166
SIF-PAL	SOUND S/N SWITCH FOR PAL	F139	0(DISABLE) / 1(ENABLE)	0	FIX	ONLY FOR M62166
AV2 BRIGHTNESS OFFSET	AV2 BRIGHT OFFSET	F140	-15~0~+15	+7	FIX	
BASS OFFSET	BASS OFFSET	F141	-30~0~+30	0	FIX	
TREBLE OFFSET	TREBLE OFFSET	F142	-30~0~+30	0	FIX	

OPTION MODE (FOURTH STAGE)				
EEPROM ITEMS	OSD	DATA LENGTH	INITIAL DATA	REMARK
***HOTEL MODE	O01	0 (OFF) / 1 (ON)	0	OPTION SET UP
***HTL-POS	O02	0~99,--	--	OPTION SET UP
***HTL-VOL	O03	0~60,--	--	OPTION SET UP
VIF	O04	0 (38.0) / 1 (38.9)	1	OPTION SET UP
SECAM	O05	0 (DISABLE) / 1 (ENABLE)	1	OPTION SET UP
N443(RF)	O06	0 (DISABLE) / 1 (ENABLE)	1	OPTION SET UP
N358(RF)	O07	0 (DISABLE) / 1 (ENABLE)	1	OPTION SET UP
FORCE-COL	O08	0 (DISABLE) / 1 (ENABLE)	0	OPTION SET UP
S-SYS	O09	1(BG ONLY)~15(ALL)	15	OPTION SET UP
AV	O10	0 (DISABLE) / 1 (ENABLE)	1	OPTION SET UP
AV2	O11	0 (DISABLE) / 1 (ENABLE)	1	OPTION SET UP
YUV	O12	0 (DISABLE) / 1 (ENABLE)	1	OPTION SET UP
S-CTRL	O13	0 (DISABLE) / 1 (ENABLE)	1	OPTION SET UP
NICAM	O14	0 (DISABLE) / 1 (ENABLE)	0	OPTION SET UP
A2	O15	0 (DISABLE) / 1 (ENABLE)	0	OPTION SET UP
TELETEXT	O16	0 (DISABLE) / 1 (ENABLE)	0	OPTION SET UP
BILINGUAL	O17	0 (DISABLE) / 1 (ENABLE)	0	OPTION SET UP
LANGUAGE	O18	1~255	63	OPTION SET UP
SEARCH-SPEED	O19	1(350)~2(450)~3(550)~4(650)~5(750)	3	OPTION SET UP
R/C-MENU	O20	0 (ENABLE) / 1 (DISABLE)	0	OPTION SET UP
LED-CONT	O21	0 (ONE LED) / 1 (TWO LED)	0	OPTION SET UP
S-BOOSTER	O22	0 (DISABLE) / 1 (ENABLE)	0	OPTION SET UP
SHARP-LOGO	O23	0 (DISABLE) / 1 (ENABLE)	0	OPTION SET UP
YUV BKGD ADJ	O24	0 (DISABLE) / 1 (ENABLE)	0	OPTION SET UP
WHITE BACK	O25	0 (DISABLE) / 1 (ENABLE)	1	OPTION SET UP
BOOSTER	O26	0 (DISABLE) / 1 (ENABLE)	0	OPTION SET UP
****MESSAGE	O27	0 (DISABLE) / 1 (ENABLE)	0	OPTION SET UP
****MESSAGE SCROLL TIME	O28	Message Display Timing	0	OPTION SET UP
LNA TUNER	O29	0(Alps) / 1(Matsushita)	0	OPTION SET UP
ONE CHIP IC	O30	0(M61260 & M61262) / 1(M61266)	0	OPTION SET UP
MESSAGE INPUT TIMMING	O31	0~4	2	OPTION SET UP

*** HOTEL MODE

OPERATION OF HOTEL MODE:

WHEN CHANGE SERVICE DATA O01 TO 1, HOTEL MODE IS ON

WHEN HOTEL MODE IS ON,

1. Max volume data is determined by option setting HTL-VOL (O03)
2. Channel position after POWER ON is determined by option setting HOTEL-POS (O02) (if option setting HOTEL-POS is not set, processing is according to last position data).
3. User data updates of EEPROM regarding the video and audio control is not allowed.
4. Preset mode is disable.
5. CH SETTING menu is not available.

4. ADJ ITEM: BUS SET UP (1 ST & 2ND STAGE SERVICE DATA)

SERVICE ITEMS		21JF2-RU	21JF2-GA/SA	21JF2-SF	21JF2-SS
V08	SUB-SHARPNESS	46	46	46	46
F06	S-OUT-LVL	105	105	105	105
F24	COL-AV	+10	0	0	0
F29	COL-ADJ	0	+5	+5	+5
F30	SHP-AV	+1	+1	+1	+1
F36	TINT-AV	0	-3	-3	-3
F37	TINT-ADJ	0	-8	-8	-8
F39	R-R	+8	0	0	0
F40	B-R	-10	-9	-9	-9
F41	R-B	-3	-6	-6	-6
F42	B-B (OFFSET)	+16	+8	+8	+8




5. ADJ ITEM: OPTION SET UP (4TH STAGE SERVICE DATA)

SERVICE ITEMS		21JF2-RU	21JF2-GA/SA	21JF2-SF	21JF2-SS
O01	HTL MODE 0 (OFF) / 1 (ON)	0	0	0	0
O02	HTL-POS 0~99,--	--	--	--	--
O03	HTL-VOL 0~60,--	--	--	--	--
O04	VIF 0 (38.0) / 1 (38.9)	1	1	1	1
O05	SECAM 0 (DISABLE) / 1 (ENABLE)	1	1	1	1
O06	N443(RF) 0 (DISABLE) / 1 (ENABLE)	1	1	1	1
O07	N358(RF) 0 (DISABLE) / 1 (ENABLE)	0	0	0	0
O08	FORCE-COL 0 (DISABLE) / 1 (ENABLE)	0	0	0	0
O09	S-SYS 1(BG ONLY)~15(ALL)	7	7	7	7
O10	AV 0 (DISABLE) / 1 (ENABLE)	1	1	1	1
O11	AV2 0 (DISABLE) / 1 (ENABLE)	1	1	1	1
O12	YUV 0 (DISABLE) / 1 (ENABLE)	0	0	0	0
O13	S-CTRL 0 (DISABLE) / 1 (ENABLE)	0	0	0	0
O14	NICAM 0 (DISABLE) / 1 (ENABLE)	0	0	0	0
O15	A2 0 (DISABLE) / 1 (ENABLE)	0	0	0	0
O16	TEXT 0 (DISABLE) / 1 (ENABLE)	0	0	0	0
O17	BIL 0 (DISABLE) / 1 (ENABLE)	0	0	0	0
O18	LANG 1~255	9	55	63	63
O19	SEARCH-SP 1(350)~2(450)~3(550)~4(650)~5(750)	3	3	3	3
O20	R/C MENU 0 (ENABLE) / 1 (DISABLE)	1	1	1	1
O21	LED-CONT 0 (ONE LED) / 1 (TWO LED)	0	0	0	0
O22	S-BOOSTER 0 (DISABLE) / 1 (ENABLE)	0	0	0	0
O23	SHARP-LOGO 0 (DISABLE) / 1 (ENABLE)	0	0	0	0
O24	YUV BKGD ADJ 0 (DISABLE) / 1 (ENABLE)	0	0	0	0
O25	WHITE BACK 0 (DISABLE) / 1 (ENABLE)	0	0	0	0
O26	BOOSTER 0 (DISABLE) / 1 (ENABLE)	0	0	0	0
O27	MESSAGE 0 (DISABLE) / 1 (ENABLE)	0	0	0	0
O28	MESSAGE SCROLL TIME 0 ~ 20	0	0	0	0
O29	LNA TUNER 0(Alps) / 1(Matsushita)	0	0	0	0
O30	ONE CHIP IC 0(M61260 & M61262) / 1(M61266)	0	0	0	0
O31	MSG IN TM	2	2	2	2

[2] ADJUSTMENT

ADJUSTMENT PRECAUTION: Make sure TV Set is in "Normal Condition" before switch to Service Mode for Adjustment.

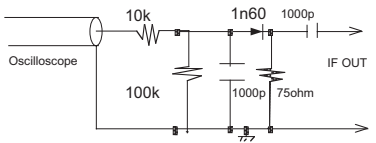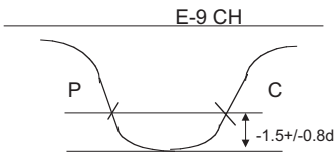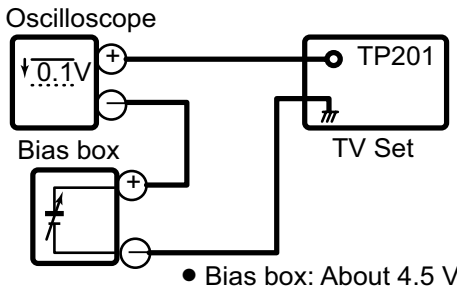1. PIF ADJUSTMENT

No.	Adjustment point	Adjustment procedure/conditions	Waveform and others
1	Tuner IFT (PRESET)	<ol style="list-style-type: none"> 1. Get the tuner ready to receive the CH. E - 9 signal, but with no signal input. Adjust the PLL data. 2. Connect the sweep generator's output cable to the tuner antenna. (RF SWEEP) 3. Adjust the sweep generator's to 80dBμV. 4. Connect the response lead (use LOW IMPEDANCE probe with wave detector ; see Fig.1) to the tuner's IF output terminal. (This terminal must have the probe alone connected). 5. Set the RF AGC to 0 - 6 V with no saturation with the waveform. 6. Adjust the tuner IF coil to obtain the waveform as shown in Fig. 2. <p>Note: Be sure to keep the tuner cover in position during this adjustment.</p>	 <p>Fig.1</p>  <p>Fig.2</p>
2	RF-AGC TAKE OVER POINT ADJUSTMENT (I²C BUS CONTROL) (AUTO & MANUAL ADJ)	<ol style="list-style-type: none"> 1. Receive "PAL COLOUR BAR" signal. <ul style="list-style-type: none"> • Signal Strength: 56 \pm 1 dBμV (75 ohm open) 2. Connect the oscilloscope to TP201 (Tuner's AGC Terminal) as shown in Fig. 3-1. <div data-bbox="568 1092 1023 1375" data-label="Diagram">  <p>• Bias box: About 4.5 V</p> </div> <p>Fig. 3-1</p> 3. Call "V01" mode in service mode. Adjust the "V01" bus data to obtain the Tuner output pin drop 0.1~1.0V below maximum voltage. 4. Change the antenna input signal to 63~67dBμV, and make sure there is no noise. 5. Turn up the input signal to 90~95 dBμV to be sure that there is no cross modulation beat. 	<p>* for Auto ADJ</p> <ol style="list-style-type: none"> 1) Receive "PAL COLOUR BAR" signal. signal strength: 56 \pm 1dBμV(75 ohm open) 1) Go to service mode. 2) Go to service data V01, press R/C to operate auto key (Hex C1) and confirm the 'OK' display on the screen. 3) If appear NG, increase data some step and pls repeat step 2. 4) Proceed step 4 & 5 in manual mode.


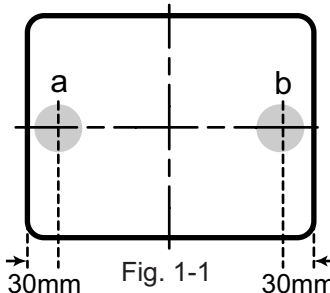
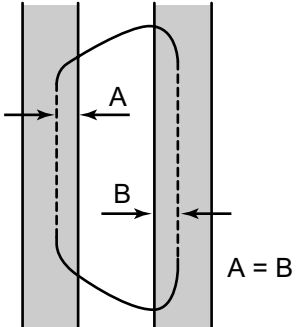
No.	Adjustment point	Adjustment procedure/conditions	Waveform and others
1	PURITY ADJ.	<div>1. Receive the GREEN-ONLY signal. Adjust the beam current to ~700 μA .</div> <div>2. Degauss the CRT enough with the degaussing coil. Note: Follow the Job Instruction Sheet to adjust the magnetic field.</div> <div>(Reference: page 3-6)</div> <div>3. Maintain the purity magnet at the zero magnetic field and keep the static convergence roughly adjusted.</div> <div>4. Observe the points a, b,as shown in Fig. 1-1 through the microscope. Adjust the landings to A rank requirement.</div> <div>5. Orient the raster rotation to 0 eastward.</div> <div>6. Tighten up the deflection coil screws. • Tightening torque: 108 ± 20 N (11 ± 2 kgf)</div> <div>7. Make sure the CRT corners landing meet the A rank requirements. If not, stick the magnet sheet to correct it.</div> <div>Note: This adjustment must be done after warming up the unit for 30 minutes or longer with a beam current over 700 μA.</div> <div>Note: Set to service mode by remote controller then press factory process R/C RGB key to change to RGB mono colour mode.</div> <div>* For the following colours press R/C RGB(Hex 7E) key to change.</div> <div><div><div>GREEN ONLY</div><div>BLUE ONLY</div><div>RED ONLY</div><div>Signal-colour screen cleared</div></div></div>	<div><p>Fig. 1-1</p></div> <div><p>Fig. 1-2</p></div> <div><p>Rank "A" (on the right of the CRT)</p></div> <div><p>Fig. 1-3</p></div> <div><p>Rank "A" (on the left of the CRT)</p></div> <div><p>* Press R/C RGB key for 1 second in NORMAL MODE, the colour will change to RGB mono colour mode.</p></div>



Fig. 1-1

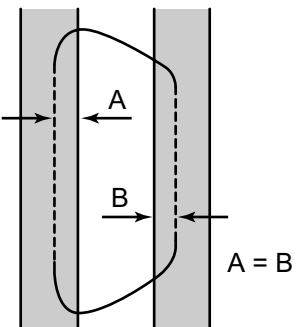

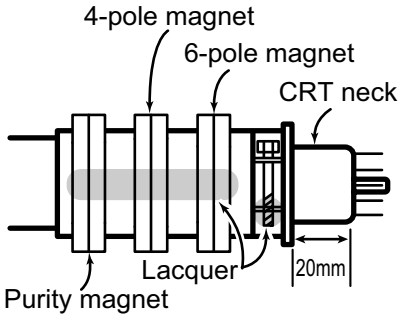
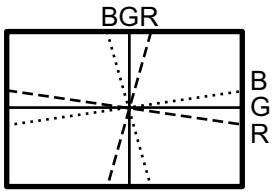
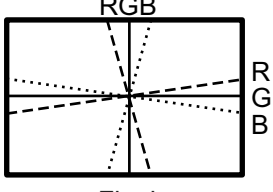
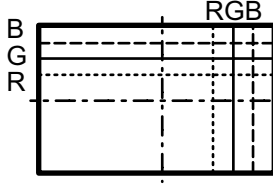
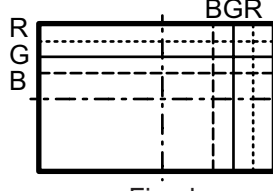
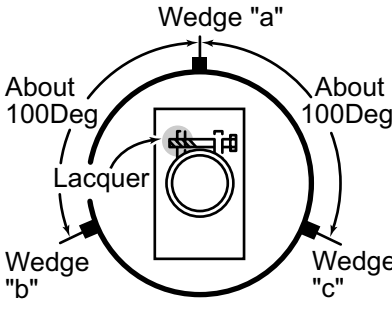
Fig. 1-2
Rank "A"
(on the right of the CRT)



Fig. 1-3
Rank "A"
(on the left of the CRT)

* Press R/C RGB key for 1 second in NORMAL MODE, the colour will change to RGB mono colour mode.


3. CONVERGENCE ADJUSTMENT



No.	Adjustment point	Adjustment procedure/conditions	Waveform and others
1	CONVERGENCE ADJ. (To be done after the purity adjustment.)	<ol style="list-style-type: none"> 1. Receive the "Crosshatch Pattern" signal. 2. Using the remote controller, call NORMAL mode. <p>Static convergence</p> <ol style="list-style-type: none"> 1. Turn the 4-pole magnet to a proper opening angle in order to superpose the blue and red colours. 2. Turn the 6-pole magnet to a proper opening angle in order to superpose the green colour over the blue and red colours. <p>Dynamic convergence</p> <ol style="list-style-type: none"> 1. Adjust the convergence on the fringes of the screen in the following steps. <ol style="list-style-type: none"> a) Fig. a: Drive the wedge at point "a" and swing the deflection coil upward. b) Fig. b: Drive the wedge at point "b" and "c" and swing the deflection coil downward. c) Fig. c: Drive the "c" wedge deeper and swing the deflection coil rightward. d) Fig. d: Drive the "b" wedge deeper and swing the deflection coil leftward. 2. Fix all the wedges on the CRT and apply glass tape over them. 3. Apply lacquer to the deflection yoke lock screw, magnet unit (purity, 4-pole, 6-pole magnets) and magnet unit lock screw. <p>Finally received the Red-only and Blue-only signals to make sure there is no other colours on the screen.</p> 	 <p>Fig. a</p>  <p>Fig. b</p>  <p>Fig. c</p>  <p>Fig. d</p> 

4. H-VCO, VIF-VCO & S-TRAP fo ADJUSTMENT

No.	Adjustment point	Adjustment procedure/conditions	Waveform and others
1	H-VCO ADJ (I²C BUS CONTROL) (AUTO & MANUAL ADJ)	(MANUAL ADJ) 1) In No signal (RASTER) condition. 2) Go to service mode, choose service data V03 . 3) Connect oscilloscope to IC801 pin11 , adj V03 until freq become 15.625 ± 0.15 KHz (Auto Adj) 1) In No signal (RASTER) condition. 2) Go to service mode. 3) Choose service data V03 , by pressing R/C Auto (Hex C1) key, OSD will appear "OK" at screen. 4) If appear "NG" pls repeat step 3.	
2	VIF-VCO ADJ (I²C BUS CONTROL) (AUTO & MANUAL ADJ)	(Manual ADJ) 1) In No signal (RASTER) condition. 2) Go to service mode, choose service data V02 . 3) Connect oscilloscope to IC801 pin2 , adj V02 until voltage become 2.5 ± 1 V . (Auto Adj) 1) In No signal (RASTER) condition. 2) Go to service mode, choose service data V02 . 3) Press the R/C Auto (Hex C1) key, OSD will appear "OK" at screen. 4) If appear "NG" pls repeat step 3.	This adjustment must be done after aging at least 3 minutes.
3	S-TRAP fo ADJ (I²C BUS CONTROL) (AUTO & MANUAL ADJ)	(Manual ADJ) 1) In No signal (RASTER) condition. 2) Go to service mode, choose service data V21 . 3) Connect oscilloscope to TP 801 , adj V21 until voltage become Min (below 5 V). 4) After that pls adj service data V20 & V24 same as "V21", V22 to "V21-1", V23 to "V21+2" . (Auto Adj) 1) In No signal (RASTER) condition. 2) Go to service mode, choose service data V21 . 3) Press the R/C Auto (Hex C1) key, OSD will appear "OK" at screen. 4) If appear "NG" pls repeat step 3.	

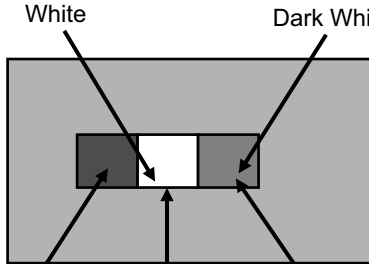5. SCREEN, WHITE BALANCE, SUB-BRIGHTNESS & SUB-CONTRAST ADJUSTMENT

No.	Adjustment point	Adjustment procedure/conditions	Waveform and others																				
1	SCREEN ADJUSTMENT (I ² C BUS CONTROL)	<p>1) In window pattern signal condition.</p> <p>2) Go to service mode, then select V00.</p> <p>3) By pressing R/C key S-Mute (Hex E8), R-D auto switch to 63, B-D auto switch to 63, R-C auto switch to 127, G-C auto switch to 127, B-C auto switch to 127, Sub-brightness V06 auto switch to 127. Y-mute & Vertical off, screen will be in vertical cut-off condition.</p> <p>4) Adjust the Screen so that cut-off line appear in low bright, then judge that whether the cut-off line appear in Red or Green or Blue color, in this condition between R-C & G-C & B-C, fix the data of the color appear in cut-off line and adj the other two cut-off data (Note 1) so that cut-off line color become white.</p> <p>5) Turn the screen VR of FBT so that cut-off line just disappear and use R/C by pressing key S-Mute (Hex E8) to disable the Y-mute & V-cut so that picture appear in normal mode.</p>	<table><tr><td>R-CUTOFF (R-C) UP</td><td>RC key "1" (HEX 80)</td></tr><tr><td>R-CUTOFF (R-C) DOWN</td><td>RC key "4" (HEX 20)</td></tr><tr><td>G-CUTOFF (G-C) UP</td><td>RC key "2" (HEX 40)</td></tr><tr><td>G-CUTOFF (G-C) DOWN</td><td>RC key "5" (HEX A0)</td></tr><tr><td>B-CUTOFF (B-C) UP</td><td>RC key "3" (HEX C0)</td></tr><tr><td>B-CUTOFF (B-C) DOWN</td><td>RC key "6" (HEX 60)</td></tr><tr><td>R-DRIVE (R-D) UP</td><td>RC key "7" (HEX E0)</td></tr><tr><td>R-DRIVE (R-D) DOWN</td><td>RC key "Flashback" (HEX E4)</td></tr><tr><td>B-DRIVE (B-D) UP</td><td>RC key "8" (HEX 10)</td></tr><tr><td>B-DRIVE (B-D) DOWN</td><td>RC key "0" (HEX 50)</td></tr></table>	R-CUTOFF (R-C) UP	RC key "1" (HEX 80)	R-CUTOFF (R-C) DOWN	RC key "4" (HEX 20)	G-CUTOFF (G-C) UP	RC key "2" (HEX 40)	G-CUTOFF (G-C) DOWN	RC key "5" (HEX A0)	B-CUTOFF (B-C) UP	RC key "3" (HEX C0)	B-CUTOFF (B-C) DOWN	RC key "6" (HEX 60)	R-DRIVE (R-D) UP	RC key "7" (HEX E0)	R-DRIVE (R-D) DOWN	RC key "Flashback" (HEX E4)	B-DRIVE (B-D) UP	RC key "8" (HEX 10)	B-DRIVE (B-D) DOWN	RC key "0" (HEX 50)
R-CUTOFF (R-C) UP	RC key "1" (HEX 80)																						
R-CUTOFF (R-C) DOWN	RC key "4" (HEX 20)																						
G-CUTOFF (G-C) UP	RC key "2" (HEX 40)																						
G-CUTOFF (G-C) DOWN	RC key "5" (HEX A0)																						
B-CUTOFF (B-C) UP	RC key "3" (HEX C0)																						
B-CUTOFF (B-C) DOWN	RC key "6" (HEX 60)																						
R-DRIVE (R-D) UP	RC key "7" (HEX E0)																						
R-DRIVE (R-D) DOWN	RC key "Flashback" (HEX E4)																						
B-DRIVE (B-D) UP	RC key "8" (HEX 10)																						
B-DRIVE (B-D) DOWN	RC key "0" (HEX 50)																						
2	WHITE BALANCE ADJ (to be done after screen adj) (I ² C BUS CONTROL)	<p>1) WHITE (HIGH BEAM) (In Window Pattern Signal) First use Minolta Color Analyzer CA100, let the gun point at Dark White position (as drawing attach), Adj V06 until LUMINANCE Y become 5 cd/m2, then let the gun point at White position (as drawing attach), Adj V04 until LUMINANCE Y become: 160 cd/m2. Adj the R-D & B-D until the axis of color temperature become</p> <table><tr><td>7500°K</td><td>X : 300</td></tr><tr><td></td><td>Y : 310</td></tr><tr><td>12300°K</td><td>X : 272</td></tr><tr><td></td><td>Y : 275</td></tr><tr><td>18000°K</td><td>X : 255</td></tr><tr><td></td><td>Y : 255</td></tr></table> <p>2) DARK WHITE (LOW BEAM) (In Window Pattern Signal) Let the gun point at Dark White position, if the color temperature data shift away from the data adjusted in step 1, adjust R-C, G-C & B-C but between them, first color appears in Screen adj item 1)-4 is fixed, adj the other two so that to obtain the similar axis as above. ** Repeat step 1 & 2 to get a regulated position</p>	7500°K	X : 300		Y : 310	12300°K	X : 272		Y : 275	18000°K	X : 255		Y : 255	<p>WINDOW PATTERN SIGNAL</p>  <p>5.5% IRE 50% IRE 9.5% IRE</p> <p>*Note : Signal using W/B Pattern Generator SX-1006 (IWATSU) or equivalent. Window Pattern Signal output level are as above:</p>								
7500°K	X : 300																						
	Y : 310																						
12300°K	X : 272																						
	Y : 275																						
18000°K	X : 255																						
	Y : 255																						

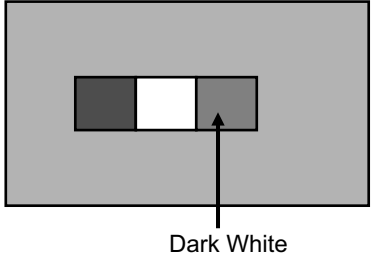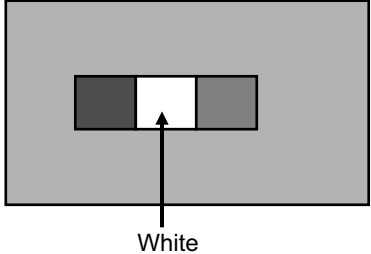No.	Adjustment point	Adjustment procedure/conditions	Waveform and others
3	SUB-BRIGHTNESS (to be done after screen, white balance adj) (I ² C BUS CONTROL)	1) In Window Pattern Signal condition. 2) Using Minolta Color Analyzer CA-100, let the gun point at Dark White position (as attach drawing), adjust V06 Bus data until LUMINANCE Y = 3 ± 0.5 cd/m² .	WINDOW PATTERN SIGNAL 
4	SUB-CONTRAST (to be done after screen, white balance adj, sub-brightness adj) (I ² C BUS CONTROL)	1) In Window Pattern Signal condition. 2) Using Minolta Color Analyzer CA-100, let the gun point at White position (as attach drawing), adjust V04 Bus data until LUMINANCE Y = 160 ± 10 cd/m²	WINDOW PATTERN SIGNAL 
5	Beam Current Check	1) Receive the "Monoscope Pattern" signal. 2) Press R/C to set Picture NORMAL condition. 3) Connect the DC miliammeter between TP 603 (+) & TP 602 (-). (Full Scale: 3mA Range) 4) Beam current must be within $1000 \pm 100 \mu\text{A}$.	


6. HORIZONTAL, VERTICAL, DEFLECTION LOOP and FOCUS ADJUSTMENT

No.	Adjustment point	Adjustment procedure/conditions	Waveform and others
1	H-SHIFT (I²C BUS CONTROL) (to be done after purity adj)	1) Receive Monoscope Pattern Signal (PAL 50 Hz) 2) Choose the service data V13 . 3) Adjust the V13 bus data to have a balance position to spec of A=B (as attach drawing) 4) If cannot make it to A=B , adjust from the best point so that B slightly smaller than A .	
2	V-SHIFT (I²C BUS CONTROL) (to be done after purity adj)	1) Receive Monoscope Pattern Signal (PAL 50 Hz) 2) Choose the service data V12 . 3) Adjust V12 bus data to have a most acceptable vertical position, the monoscope pattern should be Balance in vertical position. Note: B line (Monoscope middle line) must same or nearest higher position to the A mark (Tube middle mark), refer to the attach drawing.	Figure:
3	V-SIZE (I²C BUS CONTROL) (to be done after purity, V-shift adj)	1) Receive Monoscope Pattern Signal (PAL 50 Hz) 2) Choose the service data V11 . 3) Adjust V11 bus data until the overscan become 10 ± 1.5 % Caution1: Pls aging TV more than 10 minutes before adjustment.	
4	SUB-SHARPNESS	1) Confirm Service data V08 is 46 .	
5	Focus	1) Receive the "Monoscope Pattern" signal. 2) Press R/C to set Picture NORMAL condition. 3) Adjust the focus control to get the best focusing.	



7. PAL CHROMA ADJUSTMENT

No.	Adjustment point	Adjustment procedure/conditions	Waveform and others
1	SUB COLOUR (I²C BUS CONTROL) (to be done after sub-picture, sub-tint adj)	1) Receive the "PAL Colour Bar" signal. 2) Press R/C to set Picture Normal condition. 3) Connect the oscilloscope to R-Amp Transistor Base(TP 851). Range : 100mV/Div (AC) (Using 10:1 Probe) Sweep Time : 10 μ sec/Div 4) Using the R/C call V05 in SERVICE mode. Adjust V05 bus data, so that the 75% White & Red portions of PAL Colour Bar be at the same level shown as Fig 1-1. 5) Clear the SERVICE mode.	

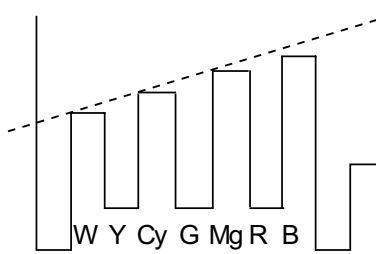8. NTSC CHROMA ADJUSTMET

No.	Adjustment point	Adjustment procedure/conditions	Waveform and others
1	SUB-TINT (I²C BUS CONTROL)	1) Receive the "NTSC3.58 Colour Bar" signal thru AV in. 2) Connect the oscilloscope to B-Amp Transistor Base (TP853). • Range : 100mV/Div. (AC)(Use Probe 10:1) • Sweep time : 10 μ sec/Div. 3) In Service mode, go to V07 , press R/C Y-mute(Hex E4) or FLASHBACK Key . 4) Call the " V07 " data in service mode. Adjust the " V07 " bus data to obtain the waveform shown as Fig. 1-1. 5) Disable Y-Mute by pressing key(Hex E4) or FLASHBACK , then clear the SERVICE mode.	 <p>Fig. 1-1</p>

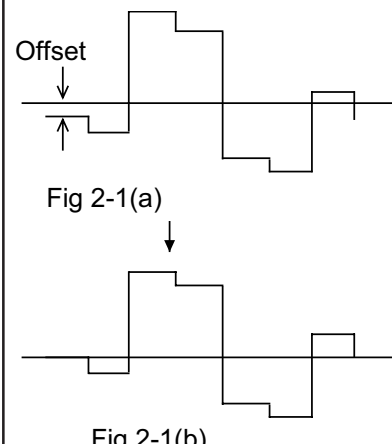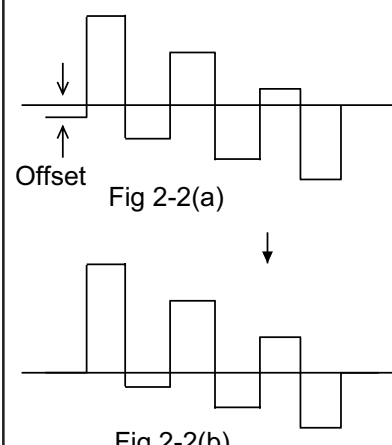9. SECAM CHROMA ADJUSTMENT

No.	Adjustment point	Adjustment procedure/conditions	Waveform and others
1	SECAM BLACK LEVEL R-Y/B-Y (I²C BUS CONTROL)	1) Receive "SECAM COLOUR BAR" signal. 2) In the service mode, select service data V14 . 3) Connect oscilloscope to TP 801 . • Range : 20mV/Div. (AC)(Use Probe 10:1) • Sweep time : 20 μ sec/Div. 4) Adjust the V14 so that the offset of R-Y is minimum, shown in Fig 2-1(b) , it means adjust the offset of between No signal line and Signal line to minimum. 5) In the service mode, select service data V15 . 6) Connect oscilloscope to TP 801 . • Range : 20mV/Div. (AC)(Use Probe 10:1) • Sweep time : 20 μ sec/Div. 7) Adjust the V15 so that the offset of B-Y to minimum, shown in Fig 2-2(b) , it means adjust the offset of between No signal line and Signal line to minimum.	 <p>Fig 2-1(a)</p> <p>Fig 2-1(b)</p>  <p>Fig 2-2(a)</p> <p>Fig 2-2(b)</p>

10. PROTECTOR OPERATION CHECKING

No.	Adjustment point	Adjustment procedure/conditions	Waveform and others
1	BEAM PROTECTOR	1) Receive "Monoscope Pattern" signal. 2) Set CONTRAST MAX. 3) Set BRIGHT MAX. 4) During the Collector & Emitter of Q853/4/5 short, make sure the protector ON and switch to standby mode.	* Select one of Q853/4/5 to do each short.
2	H, V PROTECTOR	1) Receive "Monoscope Pattern" signal. 2) Connect output of Bias Box to D602 cathode (C602 positive). 3) Set voltage of Bias Box to 18V and make sure the protector is not working. 4) Set voltage of Bias Box to 27V , and make sure the protector is working.	
3	OTHER PROTECTOR	1) Once finish rectified Electrolytic Capacitor short testing in +B line, check all possible damaged components on +B line. (Use random selected set for inspection)	

11. A/V INPUT, OUTPUT CHECKING

No.	Adjustment point	Adjustment procedure/conditions	Waveform and others
1	VIDEO AND AUDIO OUTPUT CHECK	1) Receive the "PAL Color Bar" signal (100% White Color Bar, Sound 400 Hz 100% Mod). 2) Terminate the Video output with a 75 ohm impedance. Make sure the output is as specified (1.0 Vp-p \pm 3 dB). 3) Terminate the Audio output with a 10K ohm impedance. Make sure the O/P is as specified (1.5 Vp-p \pm 3 dB).	
2	VIDEO AND AUDIO INPUT CHECK	1) Using the TV/VIDEO key on the remote controller, make sure that the modes change in order of TV, AV1, AV2 & TV again and the video & audio output are according to the input terminal for each mode.	

12. FUNCTION OPERATION CHECKING (VIDEO AND AUDIO)

No.	Adjustment point	Adjustment procedure/conditions	Waveform and others
1	CONTRAST key	1) Receive "Monoscope Pattern" signal. 2) Set MENU, then go into PICTURE mode to select CONTRAST. 3) Press Volume Up/Down key to check whether the CONTRAST effect is OK or not.	
2	COLOUR key	1) Receive "Colour Bar" signal. 2) Set MENU, then go into PICTURE mode to select COLOUR. 3) Press Volume Up/Down key to check whether the COLOUR effect is OK or not.	
3	BRIGHTNESS key	1) Receive "Monoscope Pattern" signal. 2) Set MENU, then go into PICTURE mode to select BRIGHTNESS. 3) Press Volume Up/Down key to check whether the BRIGHTNESS effect is OK or not.	
4	TINT key	1) Receive the "NTSC Colour Bar" signal thru AV in. 2) Set MENU, then go into PICTURE mode to select TINT. 3) Press Volume Up/Down key to check TINT, UP for GREEN direction and DOWN for PURPLE direction whether is OK or not.	
5	SHARPNESS Key	1) Receive "Monoscope Pattern" signal. 2) Set MENU, then go into PICTURE mode to select SHARPNESS. 3) Press Volume Up/Down key to check whether the SHARPNESS effect is OK or not.	
6	CH DISPLAY COLOUR	1) All Ch (1~99) will have an OSD display of the channel number in green colour under AFT ON condition.	
7	NORMAL Key	1) Once in PICTURE or SOUND Mode, and the NORMAL key is pressed, all the settings will be preset to normal setting accordingly. (Normal setting value for every mode) PICTURE MODE CONTRAST : MAX COLOUR : CENTER BRIGHTNESS : CENTER TINT : CENTER SHARPNESS : CENTER WHITE TEMP : CENTER	In NORMAL Mode, when press NORMAL key, will appear NORMAL OSD and all setting PICTURE, functions set to NORMAL.
8	WHITE TEMP	1) Receive "Monoscope Pattern" signal. 2) Set MENU, then go into PICTURE mode to select WHITE TEMP. 3) Press Volume Up/Down key to check WHITE TEMP function The back ground will change to (shift right) bluish and (shift left) reddish.	

No.	Adjustment point	Adjustment procedure/conditions	Waveform and others																																																
9	COLOUR SYSTEM	1)Receive the "PAL COLOUR BAR" signal, press MENU, choose CH-SETTING to select COLOR modes except PAL, check the COLOUR is not working properly. Then, select the "PAL" mode. Check again its colour so that it is working properly. 2)Receive "SECAM COLOUR BAR" signal, press MENU, choose CH-SETTING to select COLOR modes except SECAM, check the COLOUR is not working properly. Then, select the "SECAM" mode. Check again its colour so that it is working properly. 3)Receive "NTSC 4.43" signal, press MENU, choose CH-SETTING to select COLOR modes except N443, check the COLOUR is not working properly. Then, select the N443 mode. Check again its colour so that it is working properly. 4)Receive "NTSC 3.58" signal thru AV, press MENU, choose CH-SETTING to select COLOR modes except N358, check the COLOUR is not working properly. Then, select the N358 mode. Check again its colour so that it is working properly.																																																	
10	NOISE MUTE CHECKING	1)Receive "PAL COLOUR BAR" signal. 2)Turn up the volume control to maximum, make sure the sound is heard from the speakers. Then put the unit in no signal state. 3)Check the sound mute is effective. 4)Finally turn sound level of CTV to minimum.																																																	
11	SOUND SYSTEM	1)Receive "PAL-D/K" signal, press MENU, choose CH-SETTING then go into SOUND mode to select B/G, I, M. Check the sound output is not working properly. Select D/K and check the sound output to make sure it is working properly. 2)Receive "PAL-I" signal, press MENU, choose CH-SETTING then go into SOUND mode to select B/G, D/K, M. Check the sound output is not working properly. Select I and check the sound output to make sure it is working properly. 3)Receive "PAL-B/G" signal, press MENU, choose CH-SETTING then go into SOUND mode to select I, D/K, M. Check the sound output is not working properly. Select B/G and check the sound output to make sure it is working properly.																																																	
12	OSD LANGUAGE QUANTITY CHECK	1)Check OSD LANGUAGE quantity and type for respect model. <table><tr><th>MODEL</th><th>QUANTITY</th><th>ENGLISH</th><th>RUSSIAN</th><th>CHINESE</th><th>FRENCH</th><th>ARABIC</th><th>MALAY</th></tr><tr><td>21JF2-RU</td><td>2</td><td>O</td><td>O</td><td>-</td><td>-</td><td>-</td><td>-</td></tr><tr><td>21JF2-GA</td><td>5</td><td>O</td><td>-</td><td>O</td><td>O</td><td>O</td><td>O</td></tr><tr><td>21JF2-SA</td><td>5</td><td>O</td><td>-</td><td>O</td><td>O</td><td>O</td><td>O</td></tr><tr><td>21JF2-SF</td><td>6</td><td>O</td><td>O</td><td>O</td><td>O</td><td>O</td><td>O</td></tr><tr><td>21JF2-SS</td><td>6</td><td>O</td><td>O</td><td>O</td><td>O</td><td>O</td><td>O</td></tr></table>	MODEL	QUANTITY	ENGLISH	RUSSIAN	CHINESE	FRENCH	ARABIC	MALAY	21JF2-RU	2	O	O	-	-	-	-	21JF2-GA	5	O	-	O	O	O	O	21JF2-SA	5	O	-	O	O	O	O	21JF2-SF	6	O	O	O	O	O	O	21JF2-SS	6	O	O	O	O	O	O	
MODEL	QUANTITY	ENGLISH	RUSSIAN	CHINESE	FRENCH	ARABIC	MALAY																																												
21JF2-RU	2	O	O	-	-	-	-																																												
21JF2-GA	5	O	-	O	O	O	O																																												
21JF2-SA	5	O	-	O	O	O	O																																												
21JF2-SF	6	O	O	O	O	O	O																																												
21JF2-SS	6	O	O	O	O	O	O																																												

13. HEADPHONE JACK CHECKING

No.	Adjustment point	Adjustment procedure/conditions	Waveform and others
1	HEADPHONE OUTPUT CHECKING	1) Receive PAL COLOUR BAR with SOUND 400Hz, 100% MODULATION ($\pm 50\text{kHz}$ Dev). 2) Maximum volume, and check the headphone output with 400Hz sound and no sound output from speaker.	

14. SHOCK TEST CHECKING

No.	Adjustment point	Adjustment procedure/conditions	Waveform and others
1	SHOCK TEST	1) Hit at the top of TV set for two time. 2) Check TV set not damage and TV operation operate correctly.	

15. ROM CORRECTION CHECKING

No.	Adjustment point	Adjustment procedure/conditions	Waveform and others																																										
1	ROM CORRECTION CHECK	<div>1) Go to SERVICE mode, press "MENU" key until the SERVICE mode display as in Figure 1 appeared.*</div> <div>2) Check the ROM CORRECTION status by monitoring the screen, follow the model's setting.</div> <table><tr><th>MODEL</th><th>Micon Version</th><th>CHK1</th><th>CHK2</th><th>FIGURE</th></tr><tr><td>21JF2-RU</td><td>RH-IXB226WJZZ(Software Ver. 1.0)</td><td>ACT</td><td>ACT</td><td></td></tr><tr><td>21JF2-GA</td><td>RH-IXB226WJZZ(Software Ver. 1.0)</td><td>ACT</td><td>ACT</td><td></td></tr><tr><td>21JF2-SA</td><td>RH-IXB226WJZZ(Software Ver. 1.0)</td><td>ACT</td><td>ACT</td><td></td></tr><tr><td>21JF2-SF</td><td>RH-IXB226WJZZ(Software Ver. 1.0)</td><td>ACT</td><td>ACT</td><td></td></tr><tr><td>21JF2-SS</td><td>RH-IXB226WJZZ(Software Ver. 1.0)</td><td>ACT</td><td>ACT</td><td></td></tr></table> <div>CHK1: AC-DET protection loop is to be exited when AD3 (Prot) is detected HIGH so that protection mode can perform properly</div> <div>CHK2: During OSD interrupt, OSD vertical position is adjusted.</div>	MODEL	Micon Version	CHK1	CHK2	FIGURE	21JF2-RU	RH-IXB226WJZZ(Software Ver. 1.0)	ACT	ACT		21JF2-GA	RH-IXB226WJZZ(Software Ver. 1.0)	ACT	ACT		21JF2-SA	RH-IXB226WJZZ(Software Ver. 1.0)	ACT	ACT		21JF2-SF	RH-IXB226WJZZ(Software Ver. 1.0)	ACT	ACT		21JF2-SS	RH-IXB226WJZZ(Software Ver. 1.0)	ACT	ACT		<div>* OTHERS:</div> <div><div>INFO</div><table><tr><td>SLV1</td><td>0</td><td>0</td></tr><tr><td>SLV2</td><td>0</td><td>0</td></tr><tr><td>SLV4</td><td>0</td><td>0</td></tr><tr><td>SLV7</td><td>0</td><td>0</td></tr></table><div>MICON : ZZ CHK1 : ACT SOFT : 1.0 CHK2 : ACT</div></div> <div>Figure 1</div>	SLV1	0	0	SLV2	0	0	SLV4	0	0	SLV7	0	0
MODEL	Micon Version	CHK1	CHK2	FIGURE																																									
21JF2-RU	RH-IXB226WJZZ(Software Ver. 1.0)	ACT	ACT																																										
21JF2-GA	RH-IXB226WJZZ(Software Ver. 1.0)	ACT	ACT																																										
21JF2-SA	RH-IXB226WJZZ(Software Ver. 1.0)	ACT	ACT																																										
21JF2-SF	RH-IXB226WJZZ(Software Ver. 1.0)	ACT	ACT																																										
21JF2-SS	RH-IXB226WJZZ(Software Ver. 1.0)	ACT	ACT																																										
SLV1	0	0																																											
SLV2	0	0																																											
SLV4	0	0																																											
SLV7	0	0																																											

16. ROM CORRECTION DATA

MCU:	M37160MAH-052FP									
Soft Ver.	V1.00H									
ROMCORRECT1...	AC-DET protection loop is to be exited when AD3(Prot) is detected HIGH so that protection mode can perform properly									
ROMCORRECT2...	During OSD interrupt, OSD vertical position is adjusted.									
EEPROM Data										
Slave	Sub.	Data								Comment
\$A2	\$76	A0								ROMCORRECT1 Permission
\$A2	\$77	92								ROMCORRECT1 Address(H)
\$A2	\$78	14								ROMCORRECT1 Address(L)
\$A2	\$79	0F								ROMCORRECT1 Code length
\$A2	\$7A	07								ROMCORRECT1 Checksum
\$A2	\$7B	A0								ROMCORRECT2 Permission
\$A2	\$7C	73								ROMCORRECT2 Address(H)
\$A2	\$7D	9A								ROMCORRECT2 Address(L)
\$A2	\$7E	1F								ROMCORRECT2 Code length
\$A2	\$7F	47								ROMCORRECT2 Checksum
\$A2	\$80-\$87	A2	40	A9	02	20	D2	F3	90	ROMCORRECT1 Data
\$A2	\$88-\$8F	03	4C	CD	91	4C	17	92	FF	ROMCORRECT1 Data
\$A2	\$90-\$97	FF	FF	FF	FF	FF	FF	FF	FF	ROMCORRECT1 Data
\$A2	\$98-\$9F	FF	FF	FF	FF	FF	FF	FF	FF	ROMCORRECT1 Data
\$A2	\$A0-\$A7	86	BF	85	8E	A6	82	E0	0F	ROMCORRECT2 Data
\$A2	\$A8-\$AF	F0	0E	18	69	0A	47	03	08	ROMCORRECT2 Data
\$A2	\$B0-\$B7	B0	04	C9	D8	90	02	A5	8E	ROMCORRECT2 Data
\$A2	\$B8-\$BF	A6	BF	95	D4	4C	9C	73	FF	ROMCORRECT2 Data

NOTE: Add ROM Correction for countermeasure for data change when AGING and AC POWER OFF. There is possibility of changing background color if no implement ROM Correction when AGING and AC power OFF.

CHAPTER 4. MEMORY MAP

[1] MEMORY MAP

SLAVE ADDRESS : A0(00-FF) A2(100-1FF) A4(200-2FF) A6(300-3FF) A8(400-4FF)

ADDRESS (HEX)										DATA										MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL		REMARK								
										DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE	SETTING DATA																				
00										EEPROM INITIALIZATION JUDGEMENT BYTE-0										7B	00-FF								* depend on bcode, current this model is 0XB226 so set as 7B 72 72 76.								
01										EEPROM INITIALIZATION JUDGEMENT BYTE-1										72	00-FF																
02										EEPROM INITIALIZATION JUDGEMENT BYTE-2										72	00-FF																
03										EEPROM INITIALIZATION JUDGEMENT BYTE-3										76	00-FF																
04										ROM VERSION										00	00-FF																
05										SOFTWARE VERSION (HIGH BYTE)										00	00-FF								*depend on final release version. If version 0.70 so it will become 00 & 46								
06										SOFTWARE VERSION (LOW BYTE)										46	00-FF																
07																																					
08										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 0								
09										TUNING FREQUENCY (HIGH BYTE)											00-FF																
0A										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 1								
0B										TUNING FREQUENCY (HIGH BYTE)											00-FF																
0C										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 2								
0D										TUNING FREQUENCY (HIGH BYTE)											00-FF																
0E										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 3								
0F										TUNING FREQUENCY (HIGH BYTE)											00-FF																
10										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 4								
11										TUNING FREQUENCY (HIGH BYTE)											00-FF																
12										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 5								
13										TUNING FREQUENCY (HIGH BYTE)											00-FF																
14										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 6								
15										TUNING FREQUENCY (HIGH BYTE)											00-FF																
16										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 7								
17										TUNING FREQUENCY (HIGH BYTE)											00-FF																
18										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 8								
19										TUNING FREQUENCY (HIGH BYTE)											00-FF																
1A										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 9								
1B										TUNING FREQUENCY (HIGH BYTE)											00-FF																
1C										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 10								
1D										TUNING FREQUENCY (HIGH BYTE)											00-FF																
1E										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 11								
1F										TUNING FREQUENCY (HIGH BYTE)											00-FF																
20										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 12								
21										TUNING FREQUENCY (HIGH BYTE)											00-FF																
22										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 13								
23										TUNING FREQUENCY (HIGH BYTE)											00-FF																
24										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 14								
25										TUNING FREQUENCY (HIGH BYTE)											00-FF																
26										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 15								
27										TUNING FREQUENCY (HIGH BYTE)											00-FF																
28										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 16								
29										TUNING FREQUENCY (HIGH BYTE)											00-FF																
2A										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 17								
2B										TUNING FREQUENCY (HIGH BYTE)											00-FF																
2C										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 18								
2D										TUNING FREQUENCY (HIGH BYTE)											00-FF																
2E										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 19								
2F										TUNING FREQUENCY (HIGH BYTE)											00-FF																
30										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 20								
31										TUNING FREQUENCY (HIGH BYTE)											00-FF																
32										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 21								
33										TUNING FREQUENCY (HIGH BYTE)											00-FF																
34										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 22								
35										TUNING FREQUENCY (HIGH BYTE)											00-FF																
36										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 23								
37										TUNING FREQUENCY (HIGH BYTE)											00-FF																
38										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 24								
39										TUNING FREQUENCY (HIGH BYTE)											00-FF																
3A										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 25								
3B										TUNING FREQUENCY (HIGH BYTE)											00-FF																
3C										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 26								
3D										TUNING FREQUENCY (HIGH BYTE)											00-FF																
3E										TUNING FREQUENCY (LOW BYTE)											00-FF								POS 27								
3F										TUNING FREQUENCY (HIGH BYTE)											00-FF																
MODEL																				MODEL																	
LETTER NO.																				LETTER NO.																	

MEMORY MAP (Continued)

SLAVE ADDRESS : A0(00-FF) A2(100-1FF) A4(200-2FF) A6(300-3FF) A8(400-4FF)

ADDRESS (HEX)	DATA							MICON DEFAULT	EEPROM RANGE	EEPROM WRITE(CPU)	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
	D7	D6	D5	D4	D3	D2	D1	D0			CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
40										00-FF						POS 28
41										00-FF						
42										00-FF						POS 29
43										00-FF						
44										00-FF						POS 30
45										00-FF						
46										00-FF						POS 31
47										00-FF						
48										00-FF						POS 32
49										00-FF						
4A										00-FF						POS 33
4B										00-FF						
4C										00-FF						POS 34
4D										00-FF						
4E										00-FF						POS 35
4F										00-FF						
50										00-FF						POS 36
51										00-FF						
52										00-FF						POS 37
53										00-FF						
54										00-FF						POS 38
55										00-FF						
56										00-FF						POS 39
57										00-FF						
58										00-FF						POS 40
59										00-FF						
5A										00-FF						POS 41
5B										00-FF						
5C										00-FF						POS 42
5D										00-FF						
5E										00-FF						POS 43
5F										00-FF						
60										00-FF						POS 44
61										00-FF						
62										00-FF						POS 45
63										00-FF						
64										00-FF						POS 46
65										00-FF						
66										00-FF						POS 47
67										00-FF						
68										00-FF						POS 48
69										00-FF						
6A										00-FF						POS 49
6B										00-FF						
6C										00-FF						POS 50
6D										00-FF						
6E										00-FF						POS 51
6F										00-FF						
70										00-FF						POS 52
71										00-FF						
72										00-FF						POS 53
73										00-FF						
74										00-FF						POS 54
75										00-FF						
76										00-FF						POS 55
77										00-FF						
78										00-FF						POS 56
79										00-FF						
7A										00-FF						POS 57
7B										00-FF						
7C										00-FF						POS 58
7D										00-FF						
7E										00-FF						POS 59
7F										00-FF						
MODEL									MODEL							
LETTER NO.									LETTER NO.							

MEMORY MAP (Continued)

SLAVE ADDRESS : A0(00-FF) A2(100-1FF) A4(200-2FF) A6(300-3FF) A8(400-4FF)

ADDRESS (HEX)	DATA							MICON DEFAULT	EEPROM RANGE	EEPROM WRITE(CPU)	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
	D7	D6	D5	D4	D3	D2	D1				CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
80	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 60
81	TUNING FREQUENCY (HIGH BYTE)								00-FF							
82	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 61
83	TUNING FREQUENCY (HIGH BYTE)								00-FF							
84	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 62
85	TUNING FREQUENCY (HIGH BYTE)								00-FF							
86	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 63
87	TUNING FREQUENCY (HIGH BYTE)								00-FF							
88	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 64
89	TUNING FREQUENCY (HIGH BYTE)								00-FF							
8A	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 65
8B	TUNING FREQUENCY (HIGH BYTE)								00-FF							
8C	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 66
8D	TUNING FREQUENCY (HIGH BYTE)								00-FF							
8E	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 67
8F	TUNING FREQUENCY (HIGH BYTE)								00-FF							
90	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 68
91	TUNING FREQUENCY (HIGH BYTE)								00-FF							
92	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 69
93	TUNING FREQUENCY (HIGH BYTE)								00-FF							
94	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 70
95	TUNING FREQUENCY (HIGH BYTE)								00-FF							
96	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 71
97	TUNING FREQUENCY (HIGH BYTE)								00-FF							
98	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 72
99	TUNING FREQUENCY (HIGH BYTE)								00-FF							
9A	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 73
9B	TUNING FREQUENCY (HIGH BYTE)								00-FF							
9C	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 74
9D	TUNING FREQUENCY (HIGH BYTE)								00-FF							
9E	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 75
9F	TUNING FREQUENCY (HIGH BYTE)								00-FF							
A0	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 76
A1	TUNING FREQUENCY (HIGH BYTE)								00-FF							
A2	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 77
A3	TUNING FREQUENCY (HIGH BYTE)								00-FF							
A4	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 78
A5	TUNING FREQUENCY (HIGH BYTE)								00-FF							
A6	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 79
A7	TUNING FREQUENCY (HIGH BYTE)								00-FF							
A8	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 80
A9	TUNING FREQUENCY (HIGH BYTE)								00-FF							
AA	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 81
AB	TUNING FREQUENCY (HIGH BYTE)								00-FF							
AC	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 82
AD	TUNING FREQUENCY (HIGH BYTE)								00-FF							
AE	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 83
AF	TUNING FREQUENCY (HIGH BYTE)								00-FF							
B0	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 84
B1	TUNING FREQUENCY (HIGH BYTE)								00-FF							
B2	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 85
B3	TUNING FREQUENCY (HIGH BYTE)								00-FF							
B4	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 86
B5	TUNING FREQUENCY (HIGH BYTE)								00-FF							
B6	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 87
B7	TUNING FREQUENCY (HIGH BYTE)								00-FF							
B8	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 88
B9	TUNING FREQUENCY (HIGH BYTE)								00-FF							
BA	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 89
BB	TUNING FREQUENCY (HIGH BYTE)								00-FF							
BC	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 90
BD	TUNING FREQUENCY (HIGH BYTE)								00-FF							
BE	TUNING FREQUENCY (LOW BYTE)								00-FF							POS 91
BF	TUNING FREQUENCY (HIGH BYTE)								00-FF							
MODEL								MODEL								
LETTER NO.								LETTER NO.								

MEMORY MAP (Continued)

SLAVE ADDRESS : A0(00-FF) A2(100-1FF) A4(200-2FF) A6(300-3FF) A8(400-4FF)

ADDRESS (HEX)	DATA									MICON DEFAULT	EEPROM RANGE	EEPROM WRITE(CPU)	CHASSIS		CTV/FINAL		LAST INITIAL SETTING DATA	REMARK
	D7	D6	D5	D4	D3	D2	D1	D0	CHECK DATA				CHECK TYPE	CHECK DATA	CHECK TYPE			
C0	TUNING FREQUENCY (LOW BYTE)										00-FF						POS 92	
C1	TUNING FREQUENCY (HIGH BYTE)										00-FF							
C2	TUNING FREQUENCY (LOW BYTE)										00-FF						POS 93	
C3	TUNING FREQUENCY (HIGH BYTE)										00-FF							
C4	TUNING FREQUENCY (LOW BYTE)										00-FF						POS 94	
C5	TUNING FREQUENCY (HIGH BYTE)										00-FF							
C6	TUNING FREQUENCY (LOW BYTE)										00-FF						POS 95	
C7	TUNING FREQUENCY (HIGH BYTE)										00-FF							
C8	TUNING FREQUENCY (LOW BYTE)										00-FF						POS 96	
C9	TUNING FREQUENCY (HIGH BYTE)										00-FF							
CA	TUNING FREQUENCY (LOW BYTE)										00-FF						POS 97	
CB	TUNING FREQUENCY (HIGH BYTE)										00-FF							
CC	TUNING FREQUENCY (LOW BYTE)										00-FF						POS 98	
CD	TUNING FREQUENCY (HIGH BYTE)										00-FF							
CE	TUNING FREQUENCY (LOW BYTE)										00-FF						POS 99	
CF	TUNING FREQUENCY (HIGH BYTE)										00-FF							
D0	FAVORITE CHANNEL 1									0A	00-65						POS 10	
D1	FAVORITE CHANNEL 2									14	00-65						POS 20	
D2	FAVORITE CHANNEL 3									1E	00-65						POS 30	
D3	FAVORITE CHANNEL 4									28	00-65						POS 40	
D4	LAST CONTRAST									3C	00-3C							
D5	LAST COLOUR									1E	00-3C							
D6	LAST BRIGHTNESS									1E	00-3C							
D7	LAST TINT									1E	00-3C							
D8	LAST SHARPNESS									1E	00-3C							
D9							LAST WHITE TEMP.			01	00-02							
DA							LAST SURROUND MODE			00	00-02							
DB	LAST TREBLE									1E	00-3C							
DC	LAST BASS									1E	00-3C							
DD	LAST BALANCE									1E	00-3C							
DE							Message Screen	Message Display	S-Booster	01	00-01						(1) Add Message Display ON/OFF setting.	
DF																		
E0	POS 7	POS 6	POS 5	POS4	POS 3	POS 2	POS 1	POS 0	FF	00-FF							1= AFT ON, 0=AFT OFF	
E1	POS15	POS14	POS13	POS12	POS11	POS10	POS 9	POS 8	FF	00-FF								
E2	POS23	POS22	POS21	POS20	POS19	POS18	POS17	POS16	FF	00-FF								
E3	POS31	POS30	POS29	POS28	POS27	POS26	POS25	POS24	FF	00-FF								
E4	POS39	POS38	POS37	POS36	POS35	POS34	POS33	POS32	FF	00-FF								
E5	POS47	POS46	POS45	POS44	POS43	POS42	POS41	POS40	FF	00-FF								
E6	POS55	POS54	POS53	POS52	POS51	POS50	POS49	POS48	FF	00-FF								
E7	POS63	POS62	POS61	POS60	POS59	POS58	POS57	POS56	FF	00-FF								
E8	POS71	POS70	POS69	POS68	POS67	POS66	POS65	POS64	FF	00-FF								
E9	POS79	POS78	POS77	POS76	POS75	POS74	POS73	POS72	FF	00-FF								
EA	POS87	POS86	POS85	POS84	POS83	POS82	POS81	POS80	FF	00-FF								
EB	POS95	POS94	POS93	POS92	POS91	POS90	POS89	POS88	FF	00-FF								
EC						POS99	POS98	POS97	POS96	FF	00-0F							
ED																		
EE	Blue Back	1/2 digit	TEXT				LANGUAGE			48	00-FF							
EF	LAST VOLUME									00	00-3C							
F0	POS 7	POS 6	POS 5	POS4	POS 3	POS 2	POS 1	POS 0	01	00-FF							1= SKIP ON, 0=SKIP OFF	
F1	POS15	POS14	POS13	POS12	POS11	POS10	POS 9	POS 8	00	00-FF								
F2	POS23	POS22	POS21	POS20	POS19	POS18	POS17	POS16	00	00-FF								
F3	POS31	POS30	POS29	POS28	POS27	POS26	POS25	POS24	00	00-FF								
F4	POS39	POS38	POS37	POS36	POS35	POS34	POS33	POS32	00	00-FF								
F5	POS47	POS46	POS45	POS44	POS43	POS42	POS41	POS40	00	00-FF								
F6	POS55	POS54	POS53	POS52	POS51	POS50	POS49	POS48	00	00-FF								
F7	POS63	POS62	POS61	POS60	POS59	POS58	POS57	POS56	00	00-FF								
F8	POS71	POS70	POS69	POS68	POS67	POS66	POS65	POS64	00	00-FF								
F9	POS79	POS78	POS77	POS76	POS75	POS74	POS73	POS72	00	00-FF								
FA	POS87	POS86	POS85	POS84	POS83	POS82	POS81	POS80	00	00-FF								
FB	POS95	POS94	POS93	POS92	POS91	POS90	POS89	POS88	00	00-FF								
FC						POS99	POS98	POS97	POS96	00	00-0F							
FD	POWER									AA	AA(On), 55(Off)							
FE	ON TIMER VOLUME									FF	00-3C, FF							
FF	ON TIMER CHANNEL									FF	00-65, FF							
MODEL									MODEL									
LETTER NO.									LETTER NO.									

21JF2-RU/GA/SA/SF/SS

MEMORY MAP (Continued)

SLAVE ADDRESS : A0(00-FF) A2(100-1FF) A4(200-2FF) A6(300-3FF) A8(400-4FF)

ADDRESS (HEX)	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL	REMARK
	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE	SETTING DATA	
100	ANT-BOOSTER (POS0)		S-SYSTEM (POS0)		C-SYSTEM (POS0)				00	00-34							S-SYSTEM 0: B/G 2: D/K 3: M
101	ANT-BOOSTER (POS1)		S-SYSTEM (POS1)		C-SYSTEM (POS1)				00	00-34							
102	ANT-BOOSTER (POS2)		S-SYSTEM (POS2)		C-SYSTEM (POS2)				00	00-34							
103	ANT-BOOSTER (POS3)		S-SYSTEM (POS3)		C-SYSTEM (POS3)				00	00-34							
104	ANT-BOOSTER (POS4)		S-SYSTEM (POS4)		C-SYSTEM (POS4)				00	00-34							
105	ANT-BOOSTER (POS5)		S-SYSTEM (POS5)		C-SYSTEM (POS5)				00	00-34							C-SYSTEM 0: AUTO 1: PAL 2: SECAM 3: N443 4: N358
106	ANT-BOOSTER (POS6)		S-SYSTEM (POS6)		C-SYSTEM (POS6)				00	00-34							
107	ANT-BOOSTER (POS7)		S-SYSTEM (POS7)		C-SYSTEM (POS7)				00	00-34							
108	ANT-BOOSTER (POS8)		S-SYSTEM (POS8)		C-SYSTEM (POS8)				00	00-34							
109	ANT-BOOSTER (POS9)		S-SYSTEM (POS9)		C-SYSTEM (POS9)				00	00-34							
10A	ANT-BOOSTER (POS10)		S-SYSTEM (POS10)		C-SYSTEM (POS10)				00	00-34							ANT-BOOSTER 0: OFF 1: ON I 2: ON II
10B	ANT-BOOSTER (POS11)		S-SYSTEM (POS11)		C-SYSTEM (POS11)				00	00-34							
10C	ANT-BOOSTER (POS12)		S-SYSTEM (POS12)		C-SYSTEM (POS12)				00	00-34							
10D	ANT-BOOSTER (POS13)		S-SYSTEM (POS13)		C-SYSTEM (POS13)				00	00-34							
10E	ANT-BOOSTER (POS14)		S-SYSTEM (POS14)		C-SYSTEM (POS14)				00	00-34							
10F	ANT-BOOSTER (POS15)		S-SYSTEM (POS15)		C-SYSTEM (POS15)				00	00-34							
110	ANT-BOOSTER (POS16)		S-SYSTEM (POS16)		C-SYSTEM (POS16)				00	00-34							
111	ANT-BOOSTER (POS17)		S-SYSTEM (POS17)		C-SYSTEM (POS17)				00	00-34							
112	ANT-BOOSTER (POS18)		S-SYSTEM (POS18)		C-SYSTEM (POS18)				00	00-34							
113	ANT-BOOSTER (POS19)		S-SYSTEM (POS19)		C-SYSTEM (POS19)				00	00-34							
114	ANT-BOOSTER (POS20)		S-SYSTEM (POS20)		C-SYSTEM (POS20)				00	00-34							
115	ANT-BOOSTER (POS21)		S-SYSTEM (POS21)		C-SYSTEM (POS21)				00	00-34							
116	ANT-BOOSTER (POS22)		S-SYSTEM (POS22)		C-SYSTEM (POS22)				00	00-34							
117	ANT-BOOSTER (POS23)		S-SYSTEM (POS23)		C-SYSTEM (POS23)				00	00-34							
118	ANT-BOOSTER (POS24)		S-SYSTEM (POS24)		C-SYSTEM (POS24)				00	00-34							
119	ANT-BOOSTER (POS25)		S-SYSTEM (POS25)		C-SYSTEM (POS25)				00	00-34							
11A	ANT-BOOSTER (POS26)		S-SYSTEM (POS26)		C-SYSTEM (POS26)				00	00-34							
11B	ANT-BOOSTER (POS27)		S-SYSTEM (POS27)		C-SYSTEM (POS27)				00	00-34							
11C	ANT-BOOSTER (POS28)		S-SYSTEM (POS28)		C-SYSTEM (POS28)				00	00-34							
11D	ANT-BOOSTER (POS29)		S-SYSTEM (POS29)		C-SYSTEM (POS29)				00	00-34							
11E	ANT-BOOSTER (POS30)		S-SYSTEM (POS30)		C-SYSTEM (POS30)				00	00-34							
11F	ANT-BOOSTER (POS31)		S-SYSTEM (POS31)		C-SYSTEM (POS31)				00	00-34							
120	ANT-BOOSTER (POS32)		S-SYSTEM (POS32)		C-SYSTEM (POS32)				00	00-34							
121	ANT-BOOSTER (POS33)		S-SYSTEM (POS33)		C-SYSTEM (POS33)				00	00-34							
122	ANT-BOOSTER (POS34)		S-SYSTEM (POS34)		C-SYSTEM (POS34)				00	00-34							
123	ANT-BOOSTER (POS35)		S-SYSTEM (POS35)		C-SYSTEM (POS35)				00	00-34							
124	ANT-BOOSTER (POS36)		S-SYSTEM (POS36)		C-SYSTEM (POS36)				00	00-34							
125	ANT-BOOSTER (POS37)		S-SYSTEM (POS37)		C-SYSTEM (POS37)				00	00-34							
126	ANT-BOOSTER (POS38)		S-SYSTEM (POS38)		C-SYSTEM (POS38)				00	00-34							
127	ANT-BOOSTER (POS39)		S-SYSTEM (POS39)		C-SYSTEM (POS39)				00	00-34							
128	ANT-BOOSTER (POS40)		S-SYSTEM (POS40)		C-SYSTEM (POS40)				00	00-34							
129	ANT-BOOSTER (POS41)		S-SYSTEM (POS41)		C-SYSTEM (POS41)				00	00-34							
12A	ANT-BOOSTER (POS42)		S-SYSTEM (POS42)		C-SYSTEM (POS42)				00	00-34							
12B	ANT-BOOSTER (POS43)		S-SYSTEM (POS43)		C-SYSTEM (POS43)				00	00-34							
12C	ANT-BOOSTER (POS44)		S-SYSTEM (POS44)		C-SYSTEM (POS44)				00	00-34							
12D	ANT-BOOSTER (POS45)		S-SYSTEM (POS45)		C-SYSTEM (POS45)				00	00-34							
12E	ANT-BOOSTER (POS46)		S-SYSTEM (POS46)		C-SYSTEM (POS46)				00	00-34							
12F	ANT-BOOSTER (POS47)		S-SYSTEM (POS47)		C-SYSTEM (POS47)				00	00-34							
130	ANT-BOOSTER (POS48)		S-SYSTEM (POS48)		C-SYSTEM (POS48)				00	00-34							
131	ANT-BOOSTER (POS49)		S-SYSTEM (POS49)		C-SYSTEM (POS49)				00	00-34							
132	ANT-BOOSTER (POS50)		S-SYSTEM (POS50)		C-SYSTEM (POS50)				00	00-34							
133	ANT-BOOSTER (POS51)		S-SYSTEM (POS51)		C-SYSTEM (POS51)				00	00-34							
134	ANT-BOOSTER (POS52)		S-SYSTEM (POS52)		C-SYSTEM (POS52)				00	00-34							
135	ANT-BOOSTER (POS53)		S-SYSTEM (POS53)		C-SYSTEM (POS53)				00	00-34							
136	ANT-BOOSTER (POS54)		S-SYSTEM (POS54)		C-SYSTEM (POS54)				00	00-34							
137	ANT-BOOSTER (POS55)		S-SYSTEM (POS55)		C-SYSTEM (POS55)				00	00-34							
138	ANT-BOOSTER (POS56)		S-SYSTEM (POS56)		C-SYSTEM (POS56)				00	00-34							
139	ANT-BOOSTER (POS57)		S-SYSTEM (POS57)		C-SYSTEM (POS57)				00	00-34							
13A	ANT-BOOSTER (POS58)		S-SYSTEM (POS58)		C-SYSTEM (POS58)				00	00-34							
13B	ANT-BOOSTER (POS59)		S-SYSTEM (POS59)		C-SYSTEM (POS59)				00	00-34							
13C	ANT-BOOSTER (POS60)		S-SYSTEM (POS60)		C-SYSTEM (POS60)				00	00-34							
13D	ANT-BOOSTER (POS61)		S-SYSTEM (POS61)		C-SYSTEM (POS61)				00	00-34							
13E	ANT-BOOSTER (POS62)		S-SYSTEM (POS62)		C-SYSTEM (POS62)				00	00-34							
13F	ANT-BOOSTER (POS63)		S-SYSTEM (POS63)		C-SYSTEM (POS63)				00	00-34							
MODEL									MODEL								
LETTER NO.									LETTER NO.								

MEMORY MAP (Continued)

SLAVE ADDRESS : A0(00-FF) A2(100-1FF) A4(200-2FF) A6(300-3FF) A8(400-4FF)

ADDRESS (HEX)	DATA									MICON DEFAULT	EEPROM RANGE	EEPROM WRITE(CPU)	CHASSIS		CTV/FINAL		LAST INITIAL						
	D7	D6	D5	D4	D3	D2	D1	D0	CHECK DATA				CHECK TYPE	CHECK DATA	CHECK TYPE	SETTING DATA	REMARK						
140	ANT-BOOSTER (POS64)		S-SYSTEM (POS64)			C-SYSTEM (POS64)			00	00-9C													
141	ANT-BOOSTER (POS65)		S-SYSTEM (POS65)			C-SYSTEM (POS65)			00	00-34													
142	ANT-BOOSTER (POS66)		S-SYSTEM (POS66)			C-SYSTEM (POS66)			00	00-34													
143	ANT-BOOSTER (POS67)		S-SYSTEM (POS67)			C-SYSTEM (POS67)			00	00-34													
144	ANT-BOOSTER (POS68)		S-SYSTEM (POS68)			C-SYSTEM (POS68)			00	00-34													
145	ANT-BOOSTER (POS69)		S-SYSTEM (POS69)			C-SYSTEM (POS69)			00	00-34													
146	ANT-BOOSTER (POS70)		S-SYSTEM (POS70)			C-SYSTEM (POS70)			00	00-34													
147	ANT-BOOSTER (POS71)		S-SYSTEM (POS71)			C-SYSTEM (POS71)			00	00-34													
148	ANT-BOOSTER (POS72)		S-SYSTEM (POS72)			C-SYSTEM (POS72)			00	00-34													
149	ANT-BOOSTER (POS73)		S-SYSTEM (POS73)			C-SYSTEM (POS73)			00	00-34													
14A	ANT-BOOSTER (POS74)		S-SYSTEM (POS74)			C-SYSTEM (POS74)			00	00-34													
14B	ANT-BOOSTER (POS75)		S-SYSTEM (POS75)			C-SYSTEM (POS75)			00	00-34													
14C	ANT-BOOSTER (POS76)		S-SYSTEM (POS76)			C-SYSTEM (POS76)			00	00-34													
14D	ANT-BOOSTER (POS77)		S-SYSTEM (POS77)			C-SYSTEM (POS77)			00	00-34													
14E	ANT-BOOSTER (POS78)		S-SYSTEM (POS78)			C-SYSTEM (POS78)			00	00-34													
14F	ANT-BOOSTER (POS79)		S-SYSTEM (POS79)			C-SYSTEM (POS79)			00	00-34													
150	ANT-BOOSTER (POS80)		S-SYSTEM (POS80)			C-SYSTEM (POS80)			00	00-34													
151	ANT-BOOSTER (POS81)		S-SYSTEM (POS81)			C-SYSTEM (POS81)			00	00-34													
152	ANT-BOOSTER (POS82)		S-SYSTEM (POS82)			C-SYSTEM (POS82)			00	00-34													
153	ANT-BOOSTER (POS83)		S-SYSTEM (POS83)			C-SYSTEM (POS83)			00	00-34													
154	ANT-BOOSTER (POS84)		S-SYSTEM (POS84)			C-SYSTEM (POS84)			00	00-34													
155	ANT-BOOSTER (POS85)		S-SYSTEM (POS85)			C-SYSTEM (POS85)			00	00-34													
156	ANT-BOOSTER (POS86)		S-SYSTEM (POS86)			C-SYSTEM (POS86)			00	00-34													
157	ANT-BOOSTER (POS87)		S-SYSTEM (POS87)			C-SYSTEM (POS87)			00	00-34													
158	ANT-BOOSTER (POS88)		S-SYSTEM (POS88)			C-SYSTEM (POS88)			00	00-34													
159	ANT-BOOSTER (POS89)		S-SYSTEM (POS89)			C-SYSTEM (POS89)			00	00-34													
15A	ANT-BOOSTER (POS90)		S-SYSTEM (POS90)			C-SYSTEM (POS90)			00	00-34													
15B	ANT-BOOSTER (POS91)		S-SYSTEM (POS91)			C-SYSTEM (POS91)			00	00-34													
15C	ANT-BOOSTER (POS92)		S-SYSTEM (POS92)			C-SYSTEM (POS92)			00	00-34													
15D	ANT-BOOSTER (POS93)		S-SYSTEM (POS93)			C-SYSTEM (POS93)			00	00-34													
15E	ANT-BOOSTER (POS94)		S-SYSTEM (POS94)			C-SYSTEM (POS94)			00	00-34													
15F	ANT-BOOSTER (POS95)		S-SYSTEM (POS95)			C-SYSTEM (POS95)			00	00-34													
160	ANT-BOOSTER (POS96)		S-SYSTEM (POS96)			C-SYSTEM (POS96)			00	00-34													
161	ANT-BOOSTER (POS97)		S-SYSTEM (POS97)			C-SYSTEM (POS97)			00	00-34													
162	ANT-BOOSTER (POS98)		S-SYSTEM (POS98)			C-SYSTEM (POS98)			00	00-34													
163	ANT-BOOSTER (POS99)		S-SYSTEM (POS99)			C-SYSTEM (POS99)			00	00-34													
164		C-SYSTEM (AV2)							C-SYSTEM (AV1)			00	00-44										
165	SLV1 (HIGH)									00	00-FF												
166	SLV1 (LOW)									00	00-FF												
167	SLV2 (HIGH)									00	00-FF												
168	SLV2 (LOW)									00	00-FF												
169	SLV3 (HIGH)									00	00-FF												
16A	SLV3 (LOW)									00	00-FF												
16B	SLV4 (HIGH)									00	00-FF												
16C	SLV4 (LOW)									00	00-FF												
16D	SLV5 (HIGH)									00	00-FF												
16E	SLV5 (LOW)									00	00-FF												
16F	SLV6 (HIGH)									00	00-FF												
170	SLV6 (LOW)									00	00-FF												
171	SLV7 (HIGH)									00	00-FF												
172	SLV7 (LOW)									00	00-FF												
173									TV/AV	00	0(TV), 1(AV1), 2(AV2)												
174		LAST CHANNEL POSITION								01	00-63												
175	FLASH BACK POSITION									01	00-FF												
176	ROM CORRECTION-1 ID										00-FF						Valid (A0)						
177	ROM CORRECTION-1 HIGH BYTE ADDRESS										00-FF												
178	ROM CORRECTION-1 LOW BYTE ADDRESS										00-FF												
179	ROM CORRECTION-1 DATA LENGTH										00-FF												
17A	ROM CORRECTION-1 CHECKSUM										00-FF												
17B	ROM CORRECTION-2 ID										00-FF						Valid (A0)						
17C	ROM CORRECTION-2 HIGH BYTE ADDRESS										00-FF												
17D	ROM CORRECTION-2 LOW BYTE ADDRESS										00-FF												
17E	ROM CORRECTION-2 DATA LENGTH										00-FF												
17F	ROM CORRECTION-2 CHECKSUM										00-FF												
MODEL												MODEL											
LETTER NO.												LETTER NO.											

21JF2-RU/GA/SA/SF/SS

MEMORY MAP (Continued)

SLAVE ADDRESS : A0(00-FF) A2(100-1FF) A4(200-2FF) A6(300-3FF) A8(400-4FF)

ADDRESS (HEX)	DATA								MICON DEFAULT	EEPROM RANGE	EEPROM WRITE(CPU)	CHASSIS		CTV FINAL		LAST INITIAL		REMARK
	D7	D6	D5	D4	D3	D2	D1	D0				CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE	SETTING DATA		
180	ROM CORRECTION-1 CODE									00-FF								
181	ROM CORRECTION-1 CODE									00-FF								
182	ROM CORRECTION-1 CODE									00-FF								
183	ROM CORRECTION-1 CODE									00-FF								
184	ROM CORRECTION-1 CODE									00-FF								
185	ROM CORRECTION-1 CODE									00-FF								
186	ROM CORRECTION-1 CODE									00-FF								
187	ROM CORRECTION-1 CODE									00-FF								
188	ROM CORRECTION-1 CODE									00-FF								
189	ROM CORRECTION-1 CODE									00-FF								
18A	ROM CORRECTION-1 CODE									00-FF								
18B	ROM CORRECTION-1 CODE									00-FF								
18C	ROM CORRECTION-1 CODE									00-FF								
18D	ROM CORRECTION-1 CODE									00-FF								
18E	ROM CORRECTION-1 CODE									00-FF								
18F	ROM CORRECTION-1 CODE									00-FF								
190	ROM CORRECTION-1 CODE									00-FF								
191	ROM CORRECTION-1 CODE									00-FF								
192	ROM CORRECTION-1 CODE									00-FF								
193	ROM CORRECTION-1 CODE									00-FF								
194	ROM CORRECTION-1 CODE									00-FF								
195	ROM CORRECTION-1 CODE									00-FF								
196	ROM CORRECTION-1 CODE									00-FF								
197	ROM CORRECTION-1 CODE									00-FF								
198	ROM CORRECTION-1 CODE									00-FF								
199	ROM CORRECTION-1 CODE									00-FF								
19A	ROM CORRECTION-1 CODE									00-FF								
19B	ROM CORRECTION-1 CODE									00-FF								
19C	ROM CORRECTION-1 CODE									00-FF								
19D	ROM CORRECTION-1 CODE									00-FF								
19E	ROM CORRECTION-1 CODE									00-FF								
19F	ROM CORRECTION-1 CODE									00-FF								
1A0	ROM CORRECTION-2 CODE									00-FF								
1A1	ROM CORRECTION-2 CODE									00-FF								
1A2	ROM CORRECTION-2 CODE									00-FF								
1A3	ROM CORRECTION-2 CODE									00-FF								
1A4	ROM CORRECTION-2 CODE									00-FF								
1A5	ROM CORRECTION-2 CODE									00-FF								
1A6	ROM CORRECTION-2 CODE									00-FF								
1A7	ROM CORRECTION-2 CODE									00-FF								
1A8	ROM CORRECTION-2 CODE									00-FF								
1A9	ROM CORRECTION-2 CODE									00-FF								
1AA	ROM CORRECTION-2 CODE									00-FF								
1AB	ROM CORRECTION-2 CODE									00-FF								
1AC	ROM CORRECTION-2 CODE									00-FF								
1AD	ROM CORRECTION-2 CODE									00-FF								
1AE	ROM CORRECTION-2 CODE									00-FF								
1AF	ROM CORRECTION-2 CODE									00-FF								
1B0	ROM CORRECTION-2 CODE									00-FF								
1B1	ROM CORRECTION-2 CODE									00-FF								
1B2	ROM CORRECTION-2 CODE									00-FF								
1B3	ROM CORRECTION-2 CODE									00-FF								
1B4	ROM CORRECTION-2 CODE									00-FF								
1B5	ROM CORRECTION-2 CODE									00-FF								
1B6	ROM CORRECTION-2 CODE									00-FF								
1B7	ROM CORRECTION-2 CODE									00-FF								
1B8	ROM CORRECTION-2 CODE									00-FF								
1B9	ROM CORRECTION-2 CODE									00-FF								
1BA	ROM CORRECTION-2 CODE									00-FF								
1BB	ROM CORRECTION-2 CODE									00-FF								
1BC	ROM CORRECTION-2 CODE									00-FF								
1BD	ROM CORRECTION-2 CODE									00-FF								
1BE	ROM CORRECTION-2 CODE									00-FF								
1BF	ROM CORRECTION-2 CODE									00-FF								
MODEL									MODEL									
LETTER NO.									LETTER NO.									

MEMORY MAP (Continued)

SLAVE ADDRESS : A0(00-FF) A2(100-1FF) A4(200-2FF) A6(300-3FF) A8(400-4FF)

ADDRESS (HEX)	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL	REMARK
	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE	SETTING DATA	
1C0			Message Favorite Three - Character 01						FF	00-FF							1) Add new area for Message Data for Favorite Message Three.
1C1			Message Favorite Three - Character 02						FF	00-FF							
1C2			Message Favorite Three - Character 03						FF	00-FF							
1C3			Message Favorite Three - Character 04						FF	00-FF							
1C4			Message Favorite Three - Character 05						FF	00-FF							
1C5			Message Favorite Three - Character 06						FF	00-FF							
1C6			Message Favorite Three - Character 07						FF	00-FF							
1C7			Message Favorite Three - Character 08						FF	00-FF							
1C8			Message Favorite Three - Character 09						FF	00-FF							
1C9			Message Favorite Three - Character 10						FF	00-FF							
1CA			Message Favorite Three - Character 11						FF	00-FF							
1CB			Message Favorite Three - Character 12						FF	00-FF							
1CC			Message Favorite Three - Character 13						FF	00-FF							
1CD			Message Favorite Three - Character 14						FF	00-FF							
1CE			Message Favorite Three - Character 15						FF	0-FF							
1CF			Message Favorite Three - Character 16						FF	0-FF							
1D0			Message Favorite Three - Character 17						FF	0-FF							
1D1			Message Favorite Three - Character 18						FF	0-FF							
1D2			Message Favorite Three - Character 19						FF	0-FF							
1D3			Message Favorite Three - Character 20						FF	0-FF							
1D4			Message Favorite Three - Character 21						FF	0-FF							
1D5			Message Favorite Three - Character 22						FF	0-FF							
1D6			Message Favorite Three - Character 23						FF	0-FF							
1D7			Message Favorite Three - Character 24						FF	0-FF							
1D8			Message Favorite Three - Character 25						FF	0-FF							
1D9			Message Favorite Three - Character 26						FF	0-FF							
1DA			Message Favorite Three - Character 27						FF	0-FF							
1DB			Message Favorite Three - Character 28						FF	0-FF							
1DC			Message Favorite Three - Character 29						FF	0-FF							
1DD			Message Favorite Three - Character 30						FF	0-FF							
1DE			Message Favorite Three - Character 31						FF	0-FF							
1DF			Message Favorite Three - Character 32						FF	0-FF							
1E0			Message Favorite Three - Character 33						FF	0-FF							
1E1			Message Favorite Three - Character 34						FF	0-FF							
1E2			Message Favorite Three - Character 35						FF	0-FF							
1E3			Message Favorite Three - Character 36						FF	0-FF							
1E4			Message Favorite Three - Character 37						FF	0-FF							
1E5			Message Favorite Three - Character 38						FF	0-FF							
1E6			Message Favorite Three - Character 39						FF	0-FF							
1E7			Message Favorite Three - Character 40						FF	0-FF							
1E8			Message Favorite Three - Character 41						FF	0-FF							
1E9			Message Favorite Three - Character 42						FF	0-FF							
1EA			Message Favorite Three - Character 43						FF	0-FF							
1EB			Message Favorite Three - Character 44						FF	0-FF							
1EC			Message Favorite Three - Character 45						FF	0-FF							
1ED			Message Favorite Three - Character 46						FF	0-FF							
1EE			Message Favorite Three - Character 47						FF	0-FF							
1EF			Message Favorite Three - Character 48						FF	0-FF							
1F0			Message Favorite Three - Character 49						FF	0-FF							
1F1			Message Favorite Three - Character 50						FF	0-FF							
1F2			Message Favorite Three - Character 51						FF	0-FF							
1F3			Message Favorite Three - Character 52						FF	0-FF							
1F4			Message Favorite Three - Character 53						FF	0-FF							
1F5			Message Favorite Three - Character 54						FF	0-FF							
1F6			Message Favorite Three - Character 55						FF	0-FF							
1F7			Message Favorite Three - Character 56						FF	0-FF							
1F8			Message Favorite Three - Character 57						FF	0-FF							
1F9			Message Favorite Three - Character 58						FF	0-FF							
1FA			Message Favorite Three - Character 59						FF	0-FF							
1FB			Message Favorite Three - Character 60						FF	0-FF							
1FC			Message Favorite Three - Character 61						FF	0-FF							
1FD			Message Favorite Three - Character 62						FF	0-FF							
1FE			Message Favorite Three - Character 63						FF	0-FF							
1FF			Message Favorite Three - Character 64						FF	0-FF							
MODEL									MODEL								
LETTER NO.									LETTER NO.								

21JF2-RU/GA/SA/SF/SS

MEMORY MAP (Continued)

SLAVE ADDRESS : A0(00-FF) A2(100-1FF) A4(200-2FF) A6(300-3FF) A8(400-4FF)

ADDRESS (HEX)	DATA							MICON DEFAULT	EEPROM RANGE	EEPROM WRITE(CPU)	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
	D7	D6	D5	D4	D3	D2	D1	D0			CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
200									3F	00-7F						
201									3F	00-7F						
202									7F	00-FF						
203									7F	00-FF						
204									7F	00-FF						
205									32	00-7F						
206									1F	00-3F						
207									03	00-07						
208									64	00-7F						
209									3F	00-7F						
20A									7F	00-FF						
20B									3F	00-7F						
20C									2B	00-3F						
20D									5A	00-7F						
20E									3F	00-7F						
20F									26	00-3F						
210									03	00-07						
211									09	00-1F						
212									25	00-3F						
213									16	00-3F						
214									3C	00-3C						
215									1F	00-3E						
216									06	00-0E						
217									11	00-1E						
218									07	00-0F						
219									07	00-0F						
21A									07	00-0F						
21B									07	00-0F						
21C									07	00-0F						
21D									3F	00-7F						(1) New item V25
21E									3F	00-7F						(1) New item V25
21F									7F	00-FF						(1) New item V25
220									7F	00-FF						(1) New item V25
221									7F	00-FF						(1) New item V25
222									64	00-7F						(1) New item V26
223									7F	00-FF						(1) New item V27
224									20	00-3F						
225									0D	00-1A						
226									20	00-3F						
227									0D	00-1A						
228																
229																
22A																
22B																
22C									5F	00-7F						
22D									04	00-07						
22E									05	00-07						
22F									05	00-07						
230									07	00-07						
231									05	00-07						
232									05	00-07						
233									06	00-07						
234									06	00-07						
235									07	00-07						
236									06	00-07						
237									06	00-07						
238									06	00-07						
239									29	00-3E						
23A									1F	00-3E						
23B									28	00-3E						
23C									17	00-3E						
23D									18	00-3E						
23E									1F	00-3E						
23F									24	00-3E						
MODEL									MODEL							
LETTER NO.									LETTER NO.							

MEMORY MAP (Continued)

SLAVE ADDRESS : A0(00-FF) A2(100-1FF) A4(200-2FF) A6(300-3FF) A8(400-4FF)

ADDRESS (HEX)	DATA							MICON DEFAULT	EEPROM RANGE	EEPROM WRITE(CPU)	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
	D7	D6	D5	D4	D3	D2	D1	D0			CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
240									SHARPNESS-YUV (F31)	1F	00-3E					
241									SHARPNESS-PAL (F32)	1F	00-3E					
242									SHARPNESS-SECAM (F33)	1A	00-3E					
243									SHARPNESS-N443 (F34)	1F	00-3E					
244									SHARPNESS-N358 (F35)	1F	00-3E					
245									TINT-AV (F36)	3F	00-7E					
246									TINT-ADJ (F37)	3F	00-7E					
247									TINT-YUV-ADJ (F38)	3F	00-7E					
248									R-R DRIVE (F39)	47	00-7E					
249									B-R DRIVE (F40)	35	00-7E					
24A									R-B DRIVE (F41)	3C	00-7E					
24B									B-B DRIVE (F42)	4C	00-7E					
24C									TRAP (F43)	02	00-03					
24D									TRAP-PAL (F44)	02	00-03					
24E									TRAP-SECAM (F45)	02	00-03					
24F									TRAP-N443 (F46)	02	00-03					
250									TRAP-N358 (F47)	02	00-03					
251									GAMMA (F52)	00	00-03					
252									BS-D/C (F53)	0A	00-0F					
253									SL-TV (F56)	02	00-07					
254									SL-AV (F57)	04	00-07					
255									SL-YUV (F58)	04	00-07					
256									VD2/VD1/AS/FBP-TV (F59)	06	00-0F					
257									VD2/VD1/AS/FBP-AV (F60)	0E	00-0F					
258									VD2/VD1/AS/FBP-YUV (F61)	0E	00-0F					
259									VDL (F62)	00	00-03					
25A									UDL (F63)	00	00-03					
25B									AUTO-SCM-KIL-TV (F64)	01	00-03					
25C									SECAM-BGP (F65)	00	00-03					
25D									TEXT POS-H (F67)	1E	00-3F					
25E									TEXT POS-V (F68)	22	00-3F					(1) No teletext function
25F									OSD-POS (F69)	09	00-7F					
260									SUB-BASS (F72)	06	00-07					
261									SUB-TREBLE (F73)	00	00-07					
262									AGC-ADJ (F74)	00	00-04					
263									AGC-GAIN-ADJUST (F76)	10	00-1F					
264									FM-LEVEL-ADJUST (F77)	0F	00-1E					
265									IGR-LEVEL-ADJUST (F78)	10	00-1E					
266									NICAM-BG-LEVEL-ADJUST (F79)	0D	00-1E					
267									NICAM-I-LEVEL-ADJUST (F80)	12	00-1E					
268									NICAM-DK-LEVEL-ADJUST (F81)	0E	00-1E					
269									NICAM-LOWER-ERROR-LIMIT (F82)	23	00-FF					
26A									NICAM-UPPER-ERROR-LIMIT (F83)	46	00-FF					
26B									IGR-GAIN-ADJUST (F84)	06	00-0D					
26C									FM-ID-SPEED (F85)	01	00-03					
26D									AUTO-SCM-KIL-AV-YUV (F87)	01	00-03					
26E									AFC1-GAIN-TV (F88)	00	00-03					
26F									AFC1-GAIN-AV (F89)	03	00-03					
270									AFC1-GAIN-YUV (F90)	03	00-03					
271									CON-REDUCE (F91)	00	00-02					1. Keep but no use
272									AC-FAIL-WO-BRIGHT (F96)	FF	00-FF					
273									FORCED-SCM-KIL-TV (F97)	02	00-03					
274									FORCED-SCM-KIL-AV-YUV (F98)	02	00-03					
275									VIDEO-DEMUTE-DELAY (F100)	00	00-FF					
276									SOUND-DEMUTE-DELAY (F101)	00	00-FF					
277									MEL1 (F102)	46	00-FF					
278									MEL1 (F103)	96	00-FF					
279									MEL1 (F104)	9C	00-FF					
27A									MEL1 (F105)	A3	00-FF					
27B									MEL1 (F106)	A5	00-FF					
27C									MEL1 (F107)	AA	00-FF					
27D									MEL6 (F108)	B4	1-FF					
27E									S-Start Point (F109)	15	00-3C					
27F									S-Stop Point (F110)	3C	00-3C					
MODEL									MODEL							
LETTER NO.									LETTER NO.							

MEMORY MAP (Continued)

SLAVE ADDRESS : A0(00-FF) A2(100-1FF) A4(200-2FF) A6(300-3FF) A8(400-4FF)

ADDRESS (HEX)	DATA								MICON DEFAULT	EEPROM RANGE	EEPROM WRITE(CPU)	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
	D7	D6	D5	D4	D3	D2	D1	D0				CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
280					S-Step (F111)				07	00-3C							
281					S-B-BASS (F113)				2D	00-3C							
282					S-B-TREB (F114)				2D	00-3C							
283					S-BASS (F115)				3C	00-3C							
284					S-TREB (F116)				3C	00-3C							
285	WO-Bright-After-WO-TIME (F120)								FF	00-FF							
286			WO-Contrast-After-WO-TIME (F121)						7F	00-7F							
287	WO-Bright-Before-WO-TIME(F122)								FF	00-FF							
288			WO-Contrast-Before-WO-TIME (F123)						7F	00-7F							
289				WO-TIME (F124)				00	00-1F								
28A			R-DRI YUV OFFSET (F126)						3F	00-7E							
28B			B-DRI YUV OFFSET (F127)						3F	00-7E							
28C			R-CUT OFF YUV OFFSET (F128)						3F	00-7E							
28D			G-CUT OFF YUV OFFSET (F129)						3F	00-7E							
28E			B-CUT OFF YUV OFFSET (F130)						3F	00-7E							
28F			CONTRAST YUV OFFSET (F131)						3F	00-7E							
290			BRIGHT YUV OFFSET (F132)						3F	00-7E							
291			SHP ANT ON II OFFSET (F133)						1F	00-3E							
292			WAIT MODE TIME (F134)						02	00-04							
293	CONTRAST OFFSET (F135)								3F	00-7E							
294	BRIGHT OFFSET (F136)								3F	00-7E							
295	CR-PEDESTEL ADJ (F137)								08	00-0F							
296	CB-PEDESTEL ADJ (F138)								08	00-0F							
297	AV-BRIGHTNESS OFFSET (F140)								16	00-1E							
298	BASS OFFSET (F141)								1E	00-1F							
299	TREBLE OFFSET (F142)								1E	00-1F						1) New item for IxB226	
29A																	
29B																	
29C																	
29D																	
29E																	
29F																	
2A0				ABCL-G (F05)	ABCL (F04)	BS OFF (F03)	RGB CLIP (F02)	C.CLIP- LVL (F01)	00	00-1F							
2A1				SHP-G- N3 (F12)	SHP-G- N4 (F11)	SHP-G- SCM (F10)	SHP-G- PAL (F09)	SHP-G (F08)	10	00-1F							
2A2	PLL-CP (F70)	N45 (F66)	OM DET (F55)	BS GAIN (F54)	AFC2 (F51)	V-FREE (F50)	1W-AV (F49)	1W-TV (F48)	82	00-FF							
2A3			Pow- Storage (F112)	R-Y Adj. (F99)	C-ANGLE (F95)	TAKE- OFF-YUV (F94)	TAKE- OFF-AV (F93)	TAKE- OFF-TV (F92)	39	00-3F							
2A4				SIF-PAL (F139)	A2-ID- Response (F125)	V-STD YUV (F119)	V-STD-AV (F118)	V-STD-TV (F117)	08	00-1F							
2A5						NICAM- AUTO- MUTE (F96)	AGC-SW- OFF (F75)	SMALL- SURRE (F71)	02	00-07							
2A6	AV2 (O11)	AV (O10)	Forced- Col (O08)	N358-TV (O07)	N443-TV (O06)	SECAM (O05)	VIF (O04)	HOTEL (O01)	DE	00-FF							
2A7	LED- CONT (O21)	R/C MENU (O20)	BIL (O17)	TEXT (O16)	A2 (O15)	NICAM (O14)	S-CTR (O13)	YUV (O12)	03	00-FF							
2A8	1-Chip (O30)	LNA TUNER (O29)	MESSAGE (O27)	ANT- BOOSTE R (O26)	WHITE BACK (O25)	YUV BKGD (O24)	Sharp- logo (O23)	S-Booster (O22)	08	00-FF							
2A9					M (O09)	D/K (O09)	I (O09)	B/G (O09)	0F	01-0F							
2AA		Thai (O18)	Malay (O18)	Arabic (O18)	Russian (O18)	France (O18)	Chinese (O18)	English (O18)	3F	01-3F							
2AB						SEARCH SPEED (O19)			03	01-05							
2AC	HOTEL CHANNEL POSITION (O02)								FF	00-63, FF							
2AD	HOTEL VOLUME (O03)								FF	00-3C, FF							
2AE	MESSAGE SCROLL TIME (O28)								00	00-14							
2AF																	
2B0																	
2B1																	
2B2																	
2B3																	
2B4																	
2B5																	
2B6																	
2B7																	
2B8	Inbox Message - Character 65								FF	00-FF							
2B9	Inbox Message - Character 66								FF	00-FF							
2BA	Inbox Message - Character 67								FF	00-FF							
2BB	Inbox Message - Character 68								FF	00-FF							
2BC	Inbox Message - Character 69								FF	00-FF							
2BD	Inbox Message - Character 70								FF	00-FF							
2BE	Inbox Message - Character 71								FF	00-FF							
2BF	Inbox Message - Character 72								FF	00-FF							
MODEL									MODEL								
LETTER NO.									LETTER NO.								

MEMORY MAP (Continued)

SLAVE ADDRESS : A0(00-FF) A2(100-1FF) A4(200-2FF) A6(300-3FF) A8(400-4FF)

ADDRESS (HEX)	DATA							MICON DEFAULT	EEPROM RANGE	EEPROM WRITE(CPU)	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
	D7	D6	D5	D4	D3	D2	D1	D0			CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
2C0									FF	0-FF						
2C1									FF	0-FF						
2C2									FF	0-FF						
2C3									FF	0-FF						
2C4									FF	0-FF						
2C5									FF	0-FF						
2C6									FF	0-FF						
2C7									FF	0-FF						
2C8									FF	0-FF						
2C9									FF	0-FF						
2CA									FF	0-FF						
2CB									FF	0-FF						
2CC									FF	0-FF						
2CD									FF	0-FF						
2CE									FF	0-FF						
2CF									FF	0-FF						
2D0									FF	0-FF						
2D1									FF	0-FF						
2D2									FF	0-FF						
2D3									FF	0-FF						
2D4									FF	0-FF						
2D5									FF	0-FF						
2D6									FF	0-FF						
2D7									FF	0-FF						
2D8									FF	0-FF						
2D9									FF	0-FF						
2DA									FF	0-FF						
2DB									FF	0-FF						
2DC									FF	0-FF						
2DD									FF	0-FF						
2DE									FF	0-FF						
2DF									FF	0-FF						
2E0									FF	0-FF						
2E1									FF	0-FF						
2E2									FF	0-FF						
2E3									FF	0-FF						
2E4									FF	0-FF						
2E5									FF	0-FF						
2E6									FF	0-FF						
2E7									FF	0-FF						
2E8									FF	0-FF						
2E9									FF	0-FF						
2EA									FF	0-FF						
2EB									FF	0-FF						
2EC									FF	0-FF						
2ED									FF	0-FF						
2EE									FF	0-FF						
2EF									FF	0-FF						
2F0									FF	0-FF						
2F1									FF	0-FF						
2F2									FF	0-FF						
2F3									FF	0-FF						
2F4									FF	0-FF						
2F5									FF	0-FF						
2F6									FF	0-FF						
2F7									FF	0-FF						
2F8									FF	0-FF						
2F9									FF	0-FF						
2FA									FF	0-FF						
2FB									FF	0-FF						
2FC									FF	0-FF						
2FD									FF	0-FF						
2FE									FF	0-FF						
2FF									FF	0-FF						
MODEL								MODEL								
LETTER NO.								LETTER NO.								

*1 0 : individually selectable rating system 1 : threshold selectable rating system

*2 0 : CATEGORY bit mask with (01,05) 1st character 1 : CATEGORY bit mask with (01,05) 2nd character

1) Add new
area for
Message Data
for Inbox
Message .

21JF2-RU/GA/SA/SF/SS

MEMORY MAP (Continued)

SLAVE ADDRESS : A0(00-FF) A2(100-1FF) A4(200-2FF) A6(300-3FF) A8(400-4FF)

ADDRESS (HEX)	DATA								MICON DEFAULT	EEPROM RANGE	EEPROM WRITE(CPU)	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
	D7	D6	D5	D4	D3	D2	D1	D0				CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
300	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 0
301	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 1
302	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 2
303	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 3
304	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 4
305	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 5
306	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 6
307	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 7
308	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 8
309	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 9
30A	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 10
30B	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 11
30C	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 12
30D	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 13
30E	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 14
30F	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 15
310	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 16
311	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 17
312	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 18
313	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 19
314	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 20
315	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 21
316	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 22
317	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 23
318	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 24
319	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 25
31A	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 26
31B	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 27
31C	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 28
31D	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 29
31E	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 30
31F	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 31
320	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 32
321	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 33
322	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 34
323	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 35
324	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 36
325	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 37
326	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 38
327	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 39
328	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 40
329	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 41
32A	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 42
32B	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 43
32C	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 44
32D	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 45
32E	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 46
32F	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 47
330	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 48
331	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 49
332	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 50
333	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 51
334	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 52
335	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 53
336	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 54
337	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 55
338	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 56
339	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 57
33A	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 58
33B	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 59
33C	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 60
33D	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 61
33E	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 62
33F	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF							POS 63
MODEL									MODEL								
LETTER NO.									LETTER NO.								

MEMORY MAP (Continued)

SLAVE ADDRESS : A0(00-FF) A2(100-1FF) A4(200-2FF) A6(300-3FF) A8(400-4FF)

ADDRESS (HEX)	DATA								MICON DEFAULT	EEPROM RANGE	EEPROM WRITE(CPU)	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
	D7	D6	D5	D4	D3	D2	D1	D0				CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
340	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 64	
341	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 65	
342	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 66	
343	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 67	
344	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 68	
345	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 69	
346	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 70	
347	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 71	
348	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 72	
349	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 73	
34A	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 74	
34B	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 75	
34C	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 76	
34D	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 77	
34E	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 78	
34F	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 79	
350	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 80	
351	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 81	
352	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 82	
353	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 83	
354	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 84	
355	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 85	
356	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 86	
357	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 87	
358	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 88	
359	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 89	
35A	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 90	
35B	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 91	
35C	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 92	
35D	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 93	
35E	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 94	
35F	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 95	
360	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 96	
361	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 97	
362	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 98	
363	A2 FM	A2 ST	A2 BIL1	NCM FM	NCM MONO	NCM ST	NCM BIL2	NCM BIL1	4C	00-FF						POS 99	
364																	
365																	
366																	
367																	
368	Message Favorite Three- Character 65								FF	0-FF							
369	Message Favorite Three- Character 66								FF	0-FF							
36A	Message Favorite Three- Character 67								FF	0-FF							
36B	Message Favorite Three- Character 68								FF	0-FF							
36C	Message Favorite Three- Character 69								FF	0-FF							
36D	Message Favorite Three- Character 70								FF	0-FF						1) Add in for Favorite Message Three.	
36E	Message Favorite Three- Character 71								FF	0-FF							
36F	Message Favorite Three- Character 72								FF	0-FF							
370	Message Favorite Two- Character 65								FF	0-FF							
371	Message Favorite Two- Character 66								FF	0-FF							
372	Message Favorite Two- Character 67								FF	0-FF							
373	Message Favorite Two- Character 68								FF	0-FF							
374	Message Favorite Two- Character 69								FF	0-FF							
375	Message Favorite Two- Character 70								FF	0-FF						1) Add in for Favorite Message Two.	
376	Message Favorite Two- Character 71								FF	0-FF							
377	Message Favorite Two- Character 72								FF	0-FF							
378	Message Favorite One- Character 65								FF	0-FF							
379	Message Favorite One- Character 66								FF	0-FF							
37A	Message Favorite One- Character 67								FF	0-FF							
37B	Message Favorite One- Character 68								FF	0-FF							
37C	Message Favorite One- Character 69								FF	0-FF							
37D	Message Favorite One- Character 70								FF	0-FF						1) Add in for Favorite Message One.	
37E	Message Favorite One- Character 71								FF	0-FF							
37F	Message Favorite One- Character 72								FF	0-FF							
MODEL									MODEL								
LETTER NO.									LETTER NO.								

MEMORY MAP (Continued)

SLAVE ADDRESS : A0(00-FF) A2(100-1FF) A4(200-2FF) A6(300-3FF) A8(400-4FF)

ADDRESS (HEX)	DATA								MICON DEFAULT	EEPROM RANGE	EEPROM WRITE(CPU)	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
	D7	D6	D5	D4	D3	D2	D1	D0				CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
380									FF	00-FF							
381									FF	00-FF							
382									FF	0-FF							
383									FF	0-FF							
384									FF	0-FF							
385									FF	0-FF							
386									FF	0-FF							
387									FF	0-FF							
388									FF	0-FF							
389									FF	0-FF							
38A									FF	0-FF							
38B									FF	0-FF							
38C									FF	0-FF							
38D									FF	0-FF							
38E									FF	0-FF							
38F									FF	0-FF							
390									FF	0-FF							
391									FF	0-FF							
392									FF	0-FF							
393									FF	0-FF							
394									FF	0-FF							
395									FF	0-FF							
396									FF	0-FF							
397									FF	0-FF							
398									FF	0-FF							
399									FF	0-FF							
39A									FF	0-FF							
39B									FF	0-FF							
39C									FF	0-FF							
39D									FF	0-FF							
39E									FF	0-FF							
39F									FF	0-FF							
3A0									FF	0-FF							
3A1									FF	0-FF							
3A2									FF	0-FF							
3A3									FF	0-FF							
3A4									FF	0-FF							
3A5									FF	0-FF							
3A6									FF	0-FF							
3A7									FF	0-FF							
3A8									FF	0-FF							
3A9									FF	0-FF							
3AA									FF	0-FF							
3AB									FF	0-FF							
3AC									FF	0-FF							
3AD									FF	0-FF							
3AE									FF	0-FF							
3AF									FF	0-FF							
3B0									FF	0-FF							
3B1									FF	0-FF							
3B2									FF	0-FF							
3B3									FF	0-FF							
3B4									FF	0-FF							
3B5									FF	0-FF							
3B6									FF	0-FF							
3B7									FF	0-FF							
3B8									FF	0-FF							
3B9									FF	0-FF							
3BA									FF	0-FF							
3BB									FF	0-FF							
3BC									FF	0-FF							
3BD									FF	0-FF							
3BE									FF	0-FF							
3BF									FF	0-FF							
MODEL									MODEL								
LETTER NO.									LETTER NO.								

1) Add new
area for
Message Data
for Favorite
Message One.

MEMORY MAP (Continued)


SLAVE ADDRESS : A0(00-FF) A2(100-1FF) A4(200-2FF) A6(300-3FF) A8(400-4FF)

ADDRESS (HEX)	DATA							MICON DEFAULT	EEPROM RANGE	EEPROM WRITE(CPU)	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
	D7	D6	D5	D4	D3	D2	D1				CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
3C0								FF	0-FF							
3C1								FF	0-FF							
3C2								FF	0-FF							
3C3								FF	0-FF							
3C4								FF	0-FF							
3C5								FF	0-FF							
3C6								FF	0-FF							
3C7								FF	0-FF							
3C8								FF	0-FF							
3C9								FF	0-FF							
3CA								FF	0-FF							
3CB								FF	0-FF							
3CC								FF	0-FF							
3CD								FF	0-FF							
3CE								FF	0-FF							
3CF								FF	0-FF							
3D0								FF	0-FF							
3D1								FF	0-FF							
3D2								FF	0-FF							
3D3								FF	0-FF							
3D4								FF	0-FF							
3D5								FF	0-FF							
3D6								FF	0-FF							
3D7								FF	0-FF							
3D8								FF	0-FF							
3D9								FF	0-FF							
3DA								FF	0-FF							
3DB								FF	0-FF							
3DC								FF	0-FF							
3DD								FF	0-FF							
3DE								FF	0-FF							
3DF								FF	0-FF							
3E0								FF	0-FF							
3E1								FF	0-FF							
3E2								FF	0-FF							
3E3								FF	0-FF							
3E4								FF	0-FF							
3E5								FF	0-FF							
3E6								FF	0-FF							
3E7								FF	0-FF							
3E8								FF	0-FF							
3E9								FF	0-FF							
3EA								FF	0-FF							
3EB								FF	0-FF							
3EC								FF	0-FF							
3ED								FF	0-FF							
3EE								FF	0-FF							
3EF								FF	0-FF							
3F0								FF	0-FF							
3F1								FF	0-FF							
3F2								FF	0-FF							
3F3								FF	0-FF							
3F4								FF	0-FF							
3F5								FF	0-FF							
3F6								FF	0-FF							
3F7								FF	0-FF							
3F8								FF	0-FF							
3F9								FF	0-FF							
3FA								FF	0-FF							
3FB								FF	0-FF							
3FC								FF	0-FF							
3FD								FF	0-FF							
3FE								FF	0-FF							
3FF								FF	0-FF							
MODEL								MODEL								
LETTER NO.								LETTER NO.								

1) Add new
area for
Message Data
for Favorite
Message Two.


CHAPTER 5. TROUBLE SHOOTING FLOWCHART

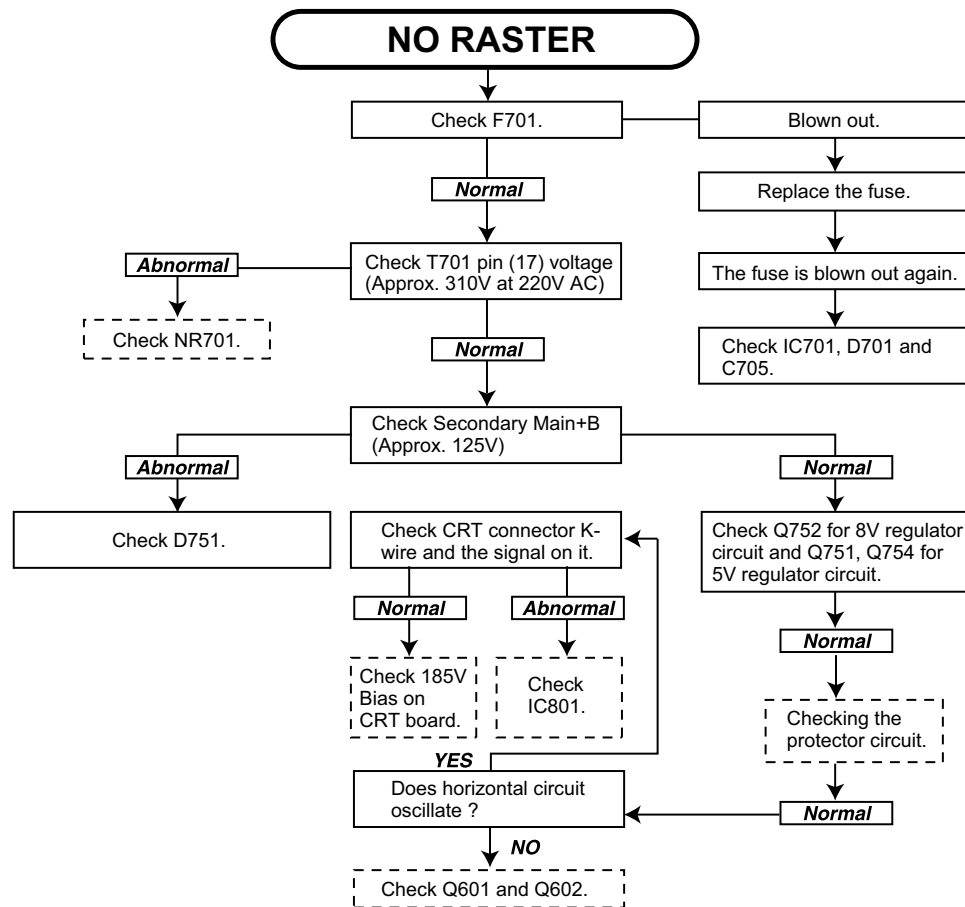[1] TROUBLE SHOOTING FLOWCHART



CIRCUITS TO BE CHECKED:

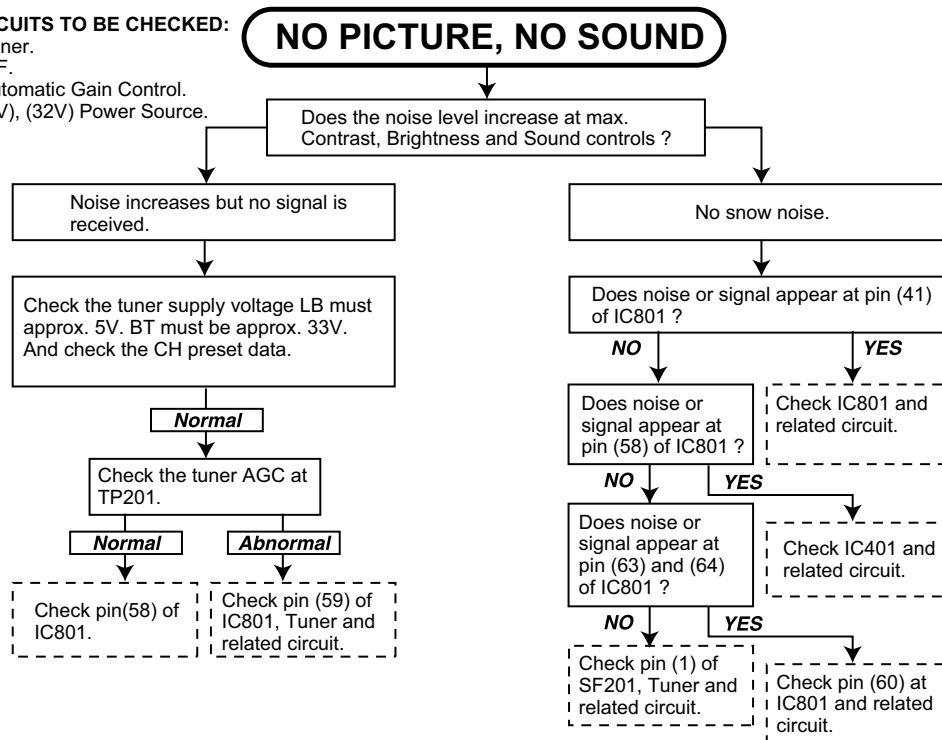
- Tuner.
- PIF.
- Automatic Gain Control.
- (5V), (32V) Power Source.



TROUBLE SHOOTING FLOWCHART (Continued)

CIRCUITS TO BE CHECKED:

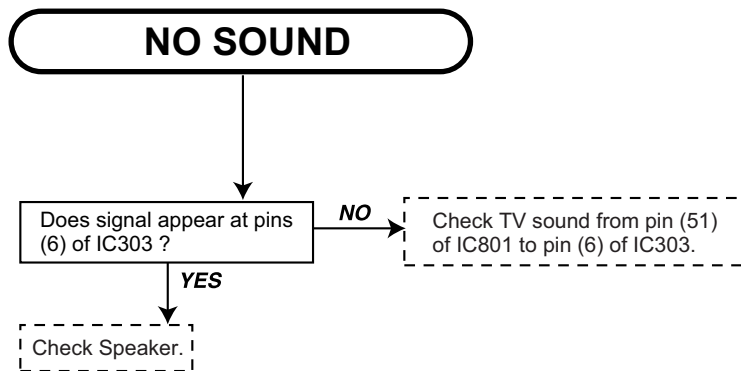- Sound Detector Circuit.
- Sound Switch and Att. Control.
- Audio Output Circuit.



NEITHER VERTICAL NOR HORIZONTAL SYNCHRONIZATION

CIRCUIT TO BE CHECKED:

- Sync. Separator Circuit.

Check pins (5), (6), (10) and (11) of IC801.

DEFECTIVE VERTICAL AMP. AND VERTICAL LINEARITY

Re-adjust vertical size. (Bus Data)

Vertical linearity and size are abnormal.

Check R503, R506, R513, R520 and C515.

NO VERTICAL SCAN

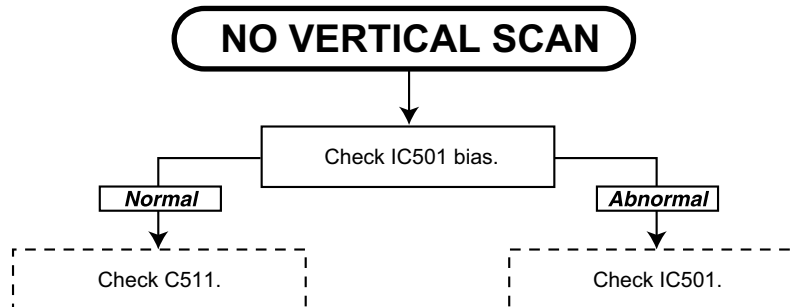
Check IC501 bias.

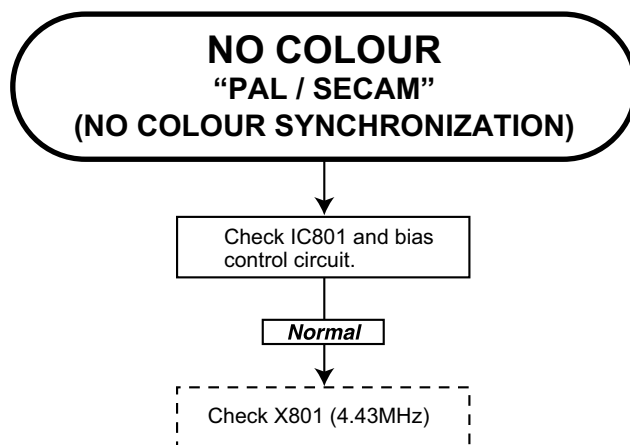
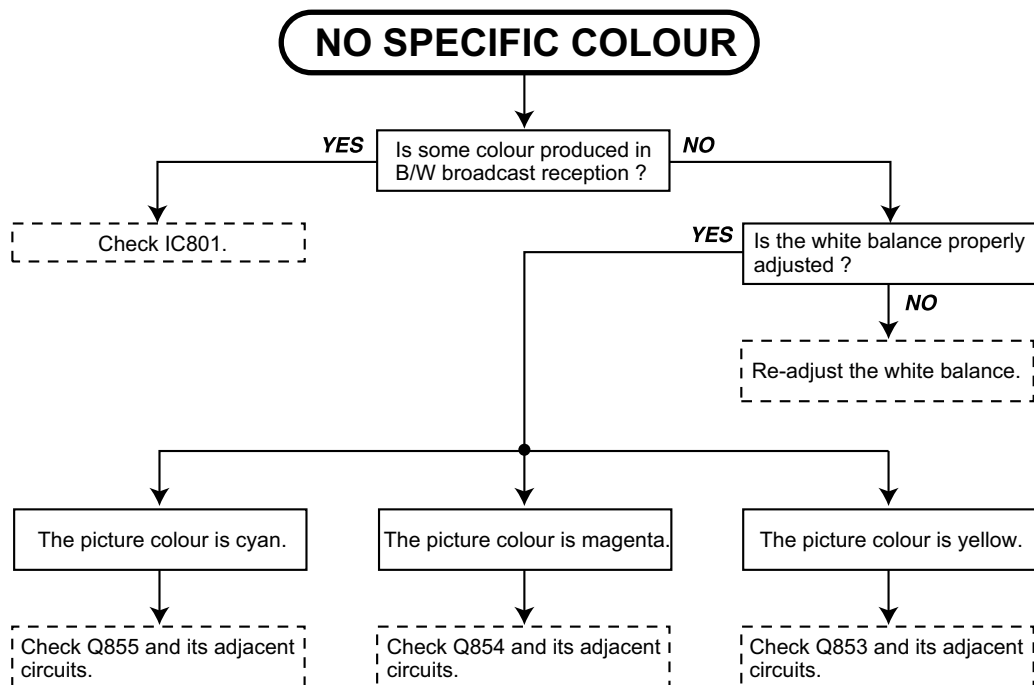
Normal

Check C511.

Abnormal

Check IC501.







CHAPTER 6. SOLID STATE DEVICE BASE DIAGRAM

[1] SOLID STATE DEVICE BASE DIAGRAM

 
TOP VIEW




BR24L08

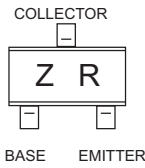

D601A

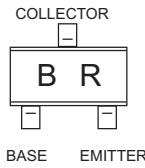


B709A

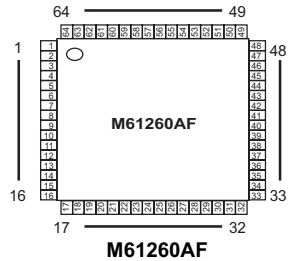


EX1393C



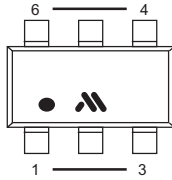
EX0263T




M1501XN

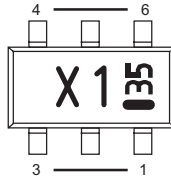

IMX1C/C

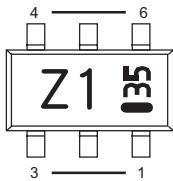


IMZ1A

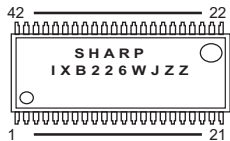


IXB226W

 
SIDE VIEW




TX0110BM

 


2SD468-C
2SC2235

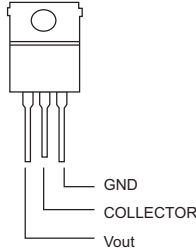


SE125N

 


TT2140

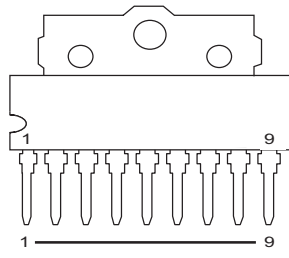


AN17823A

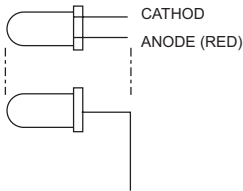


PX0013

 


PQ09RDA

 


STV9302A

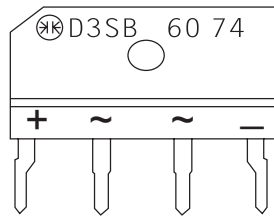


DX0476CE

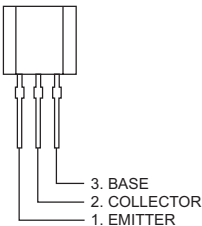


TX0110BM

 

STRW5453

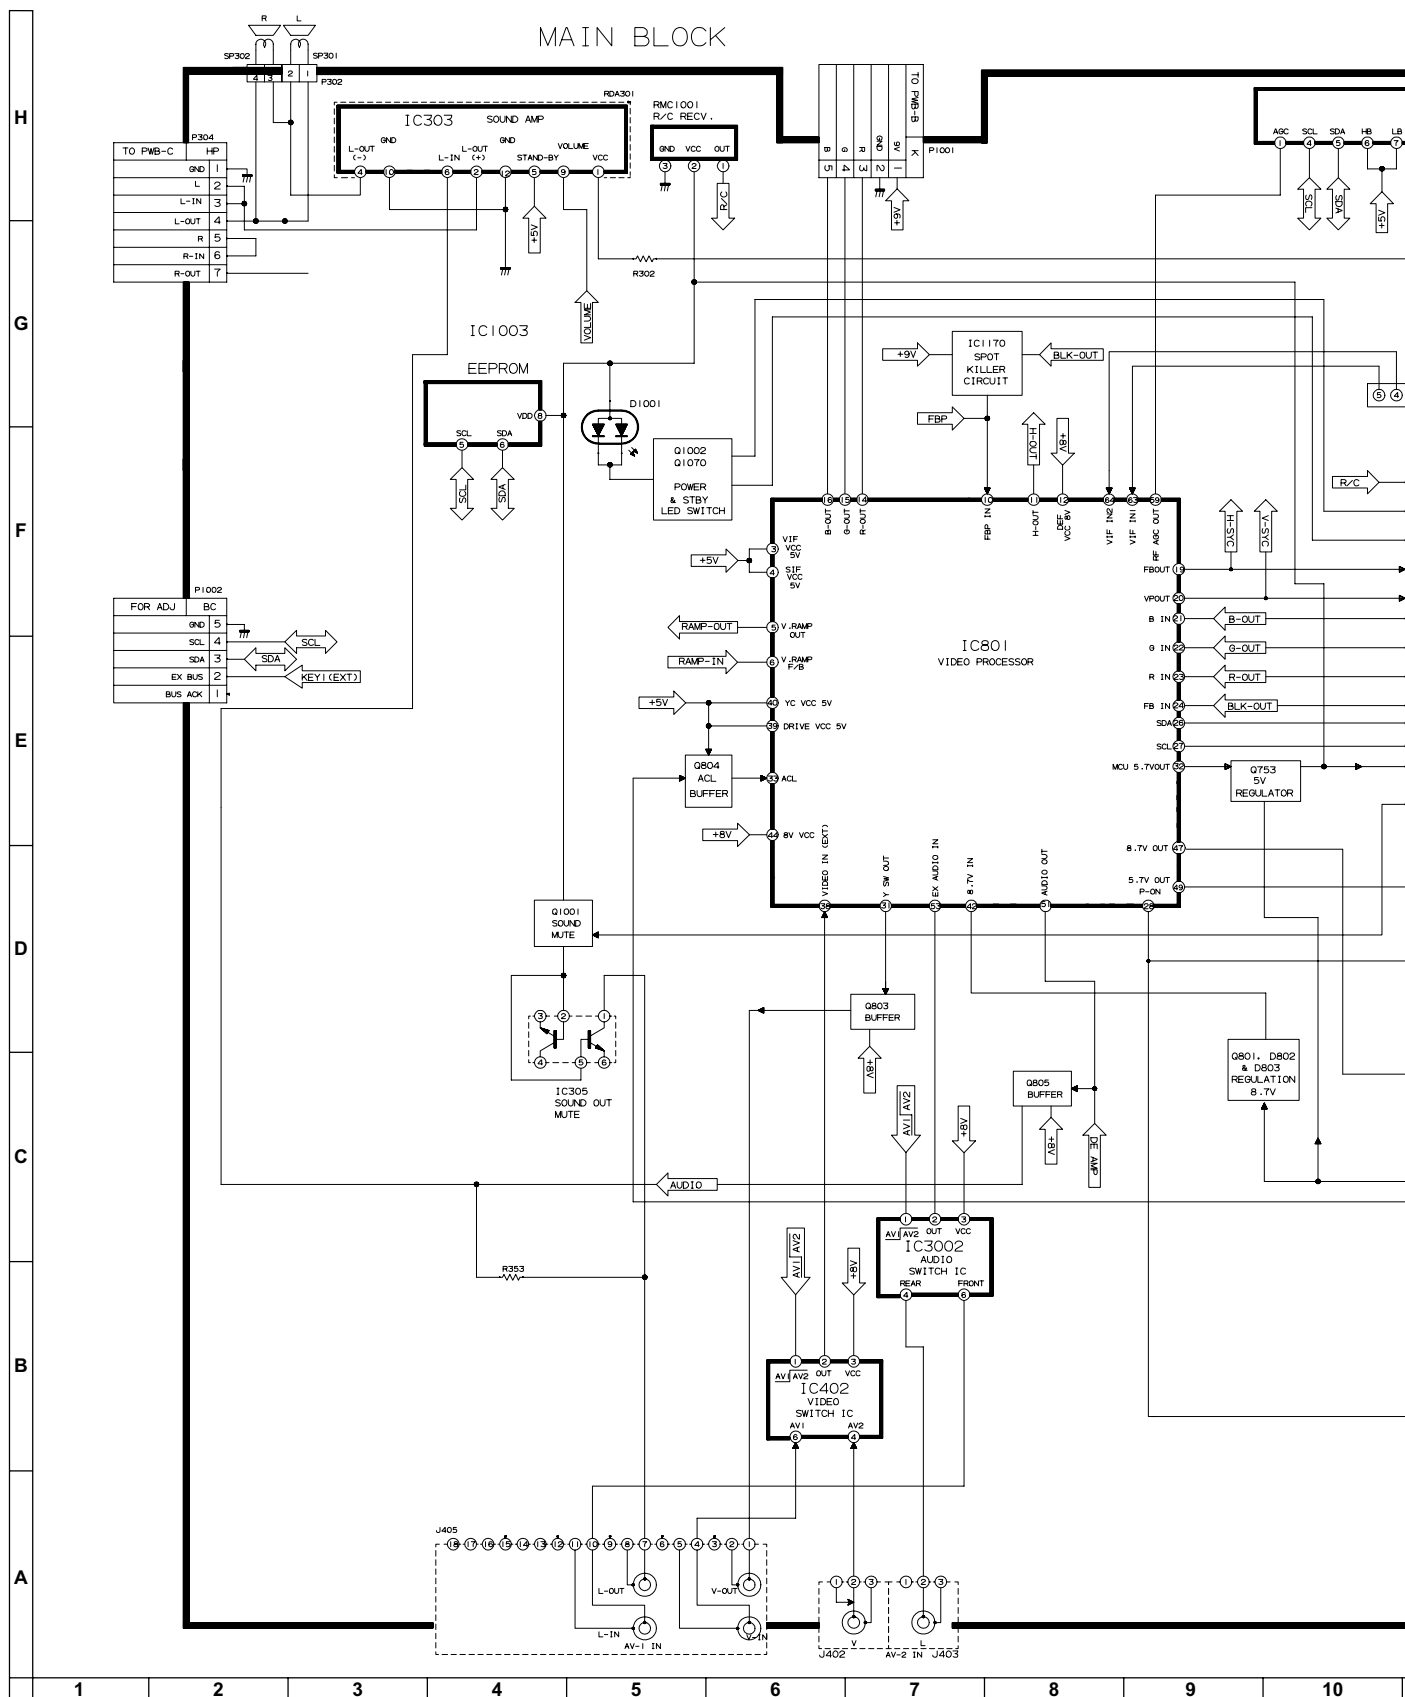[3] BLOCK DIAGRAM: MAIN UNIT

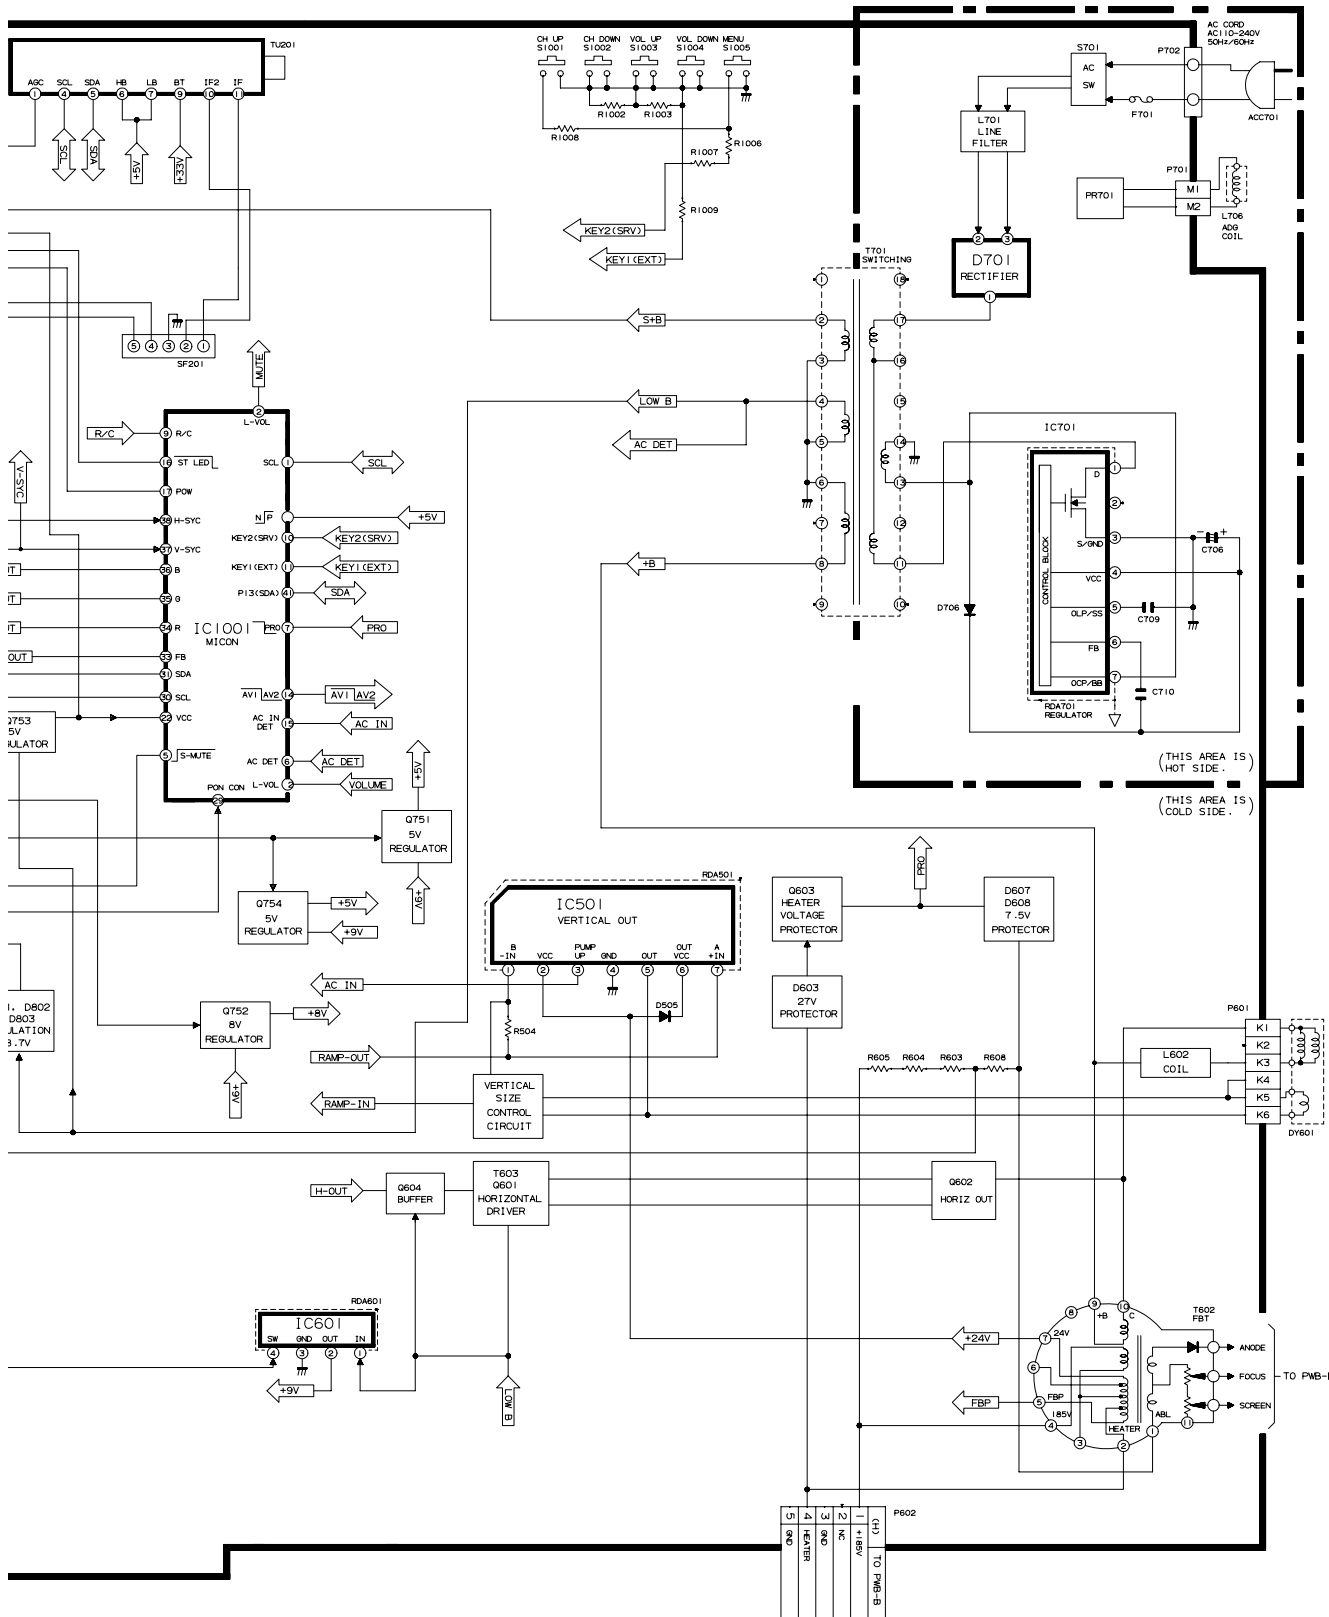



CHAPTER 9. DESCRIPTION OF SCHEMATIC DIAGRAM

[1] DESCRIPTION OF SCHEMATIC DIAGRAM

SAFETY NOTES:

1. DISCONNECT THE AC PLUG FROM THE AC OUT-LET BEFORE REPLACING PARTS.
2. SEMICONDUCTOR HEAT SINKS SHOULD BE REGARDED AS POTENTIAL SHOCK HAZARDS WHEN THE CHASSIS IS OPERATING.

IMPORTANT SAFETY NOTICE:

PARTS MARKED WITH "  " () ARE IMPORTANT FOR MAINTAINING THE SAFETY OF THE SET. BE SURE TO REPLACE THESE PARTS WITH SPECIFIED ONES FOR MAINTAINING THE SAFETY AND PERFORMANCE OF THE SET.

SERVICE PRECAUTION:

THE AREA ENCLOSED BY THIS LINE (— - —) IS DIRECTLY CONNECTED WITH AC MAINS VOLTAGE. WHEN SERVICING THE AREA, CONNECT AN ISOLATING TRANSFORMER BETWEEN TV RECEIVER AND AC LINE TO ELIMINATE HAZARD OF ELECTRIC SHOCK.

CAUTION:

This circuit diagram is a standard one, printed circuits may be subject to change for product improvement without prior notice.

NOTES:

1. The unit of resistance "ohm" is omitted.
(K = 1000 ohms, M = Mega ohm).
2. All resistors are 1/16 watt, unless otherwise noted.
3. All capacitors are μF , unless otherwise noted.
(P = $\mu\mu\text{F}$).

VOLTAGE MEASUREMENT CONDITIONS:


1. Voltages in parenthesis measured with no signal.
2. Voltages without parenthesis measured with 3mV B & W or Colour signal.
3. All the voltages in each point are measured with VTVM.

WAVEFORM MEASUREMENT CONDITIONS:

1. The colour bar generator signal of 1.0V peak applied at pin (41) of IC801.
2. Approximately 4V AGC bias.


CHAPTER 10. WAVEFORMS

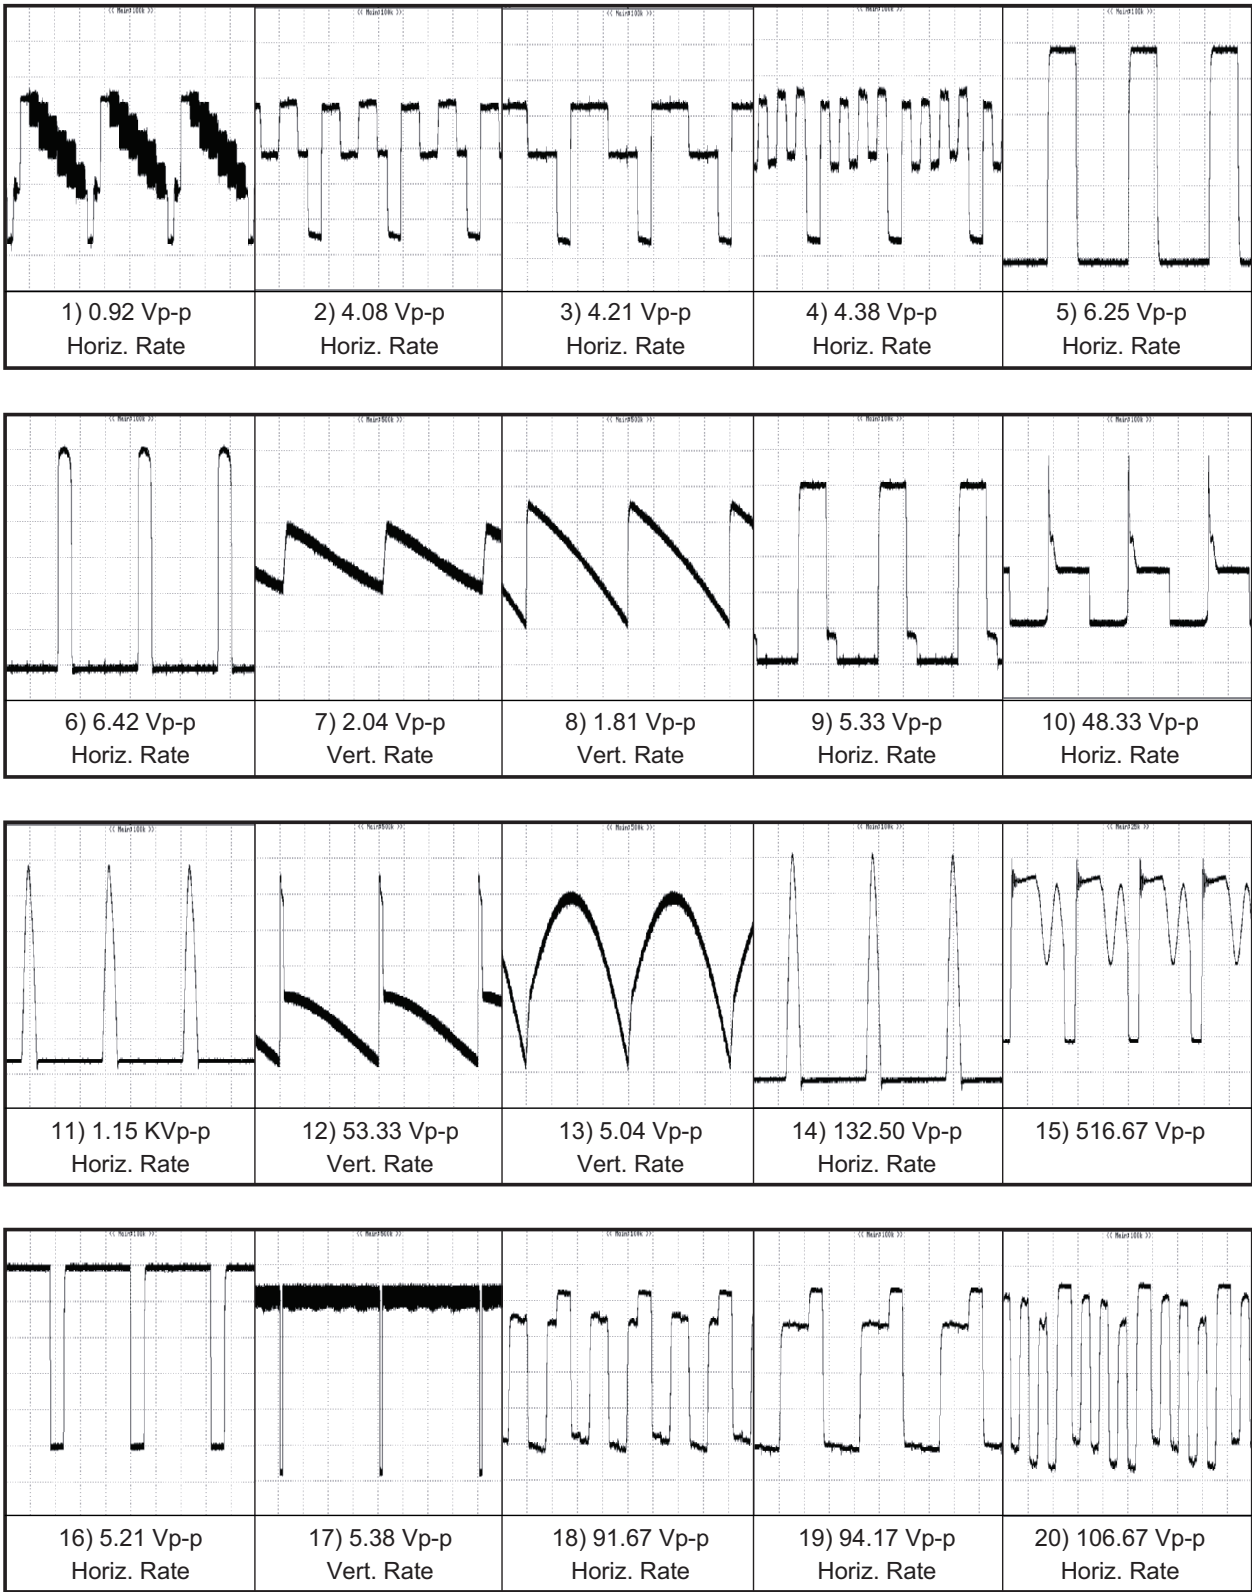[1] WAVEFORMS



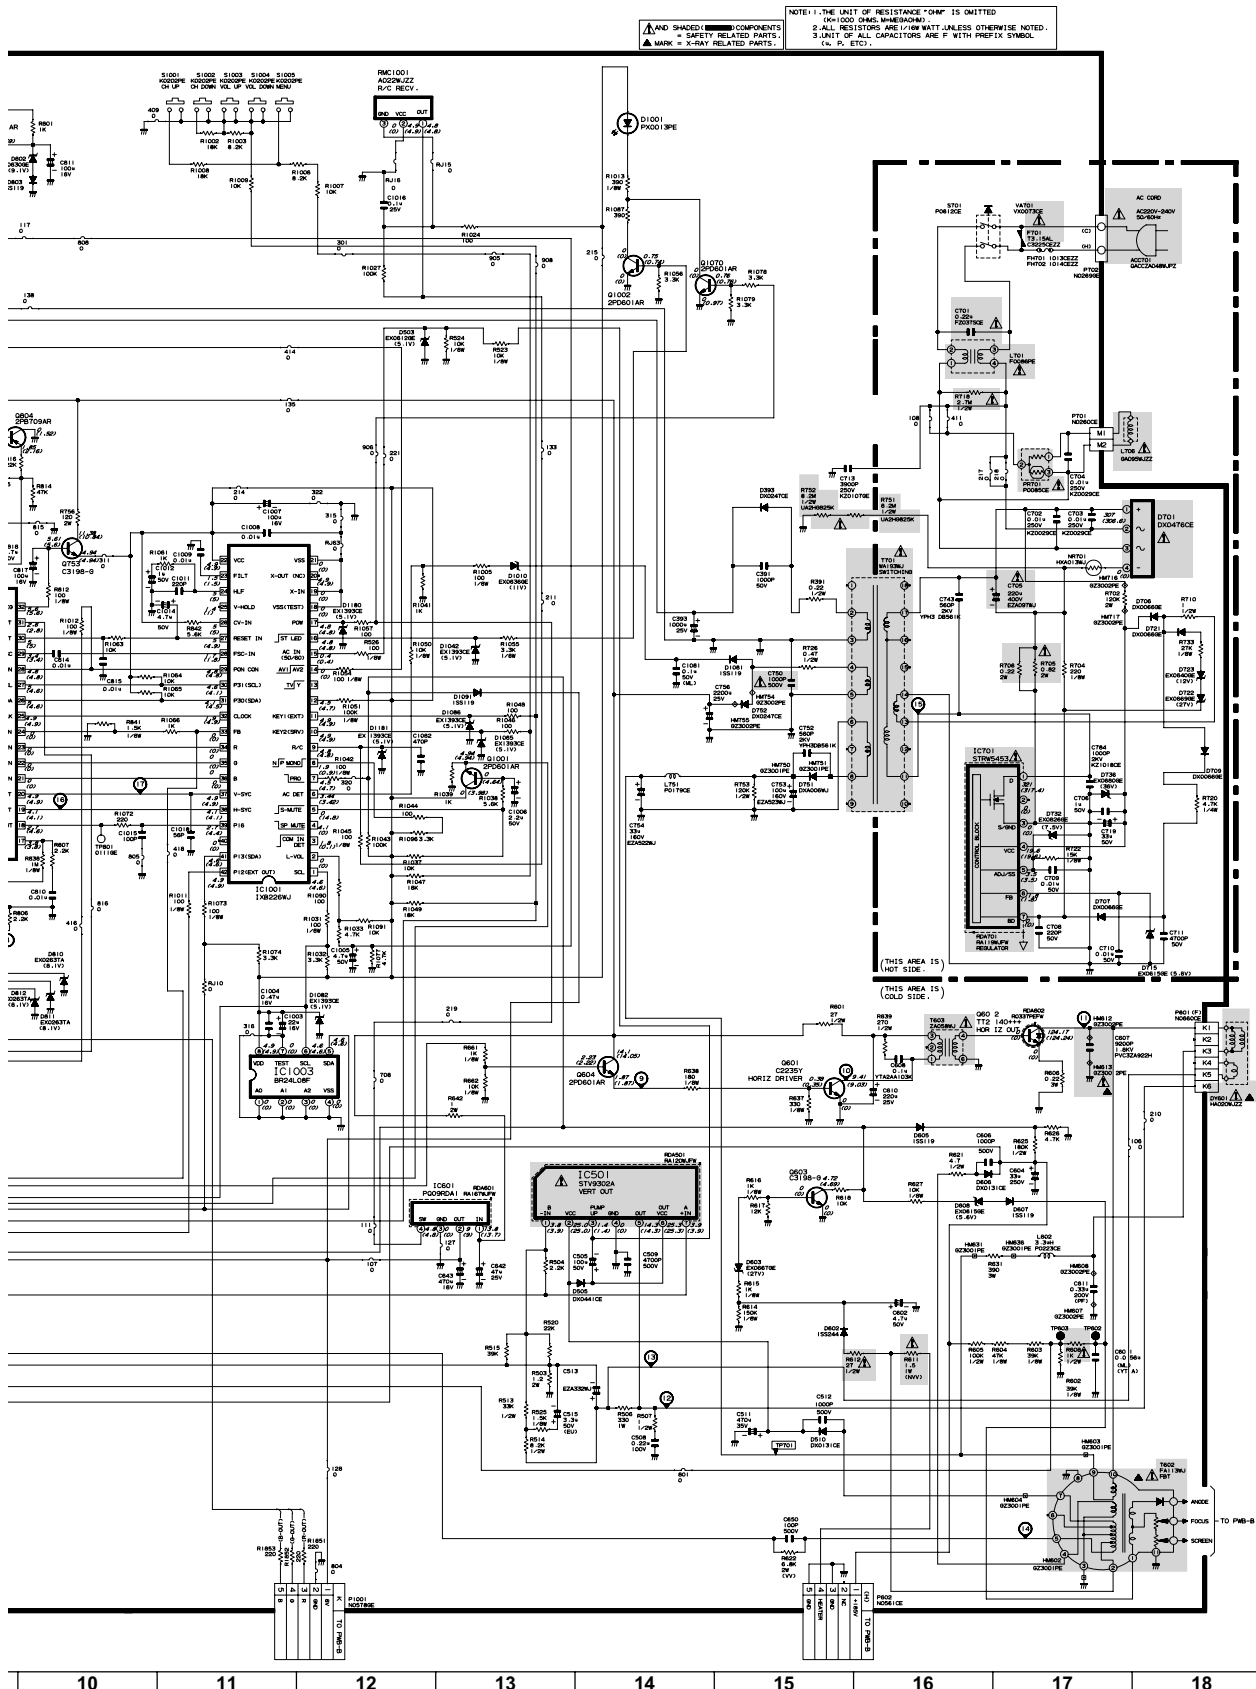1. (21JF2-RU)














▲ AND SHADED (■) COMPONENTS
 * SAFETY RELATED PARTS
 ▲ MARK = X-RAY RELATED PARTS

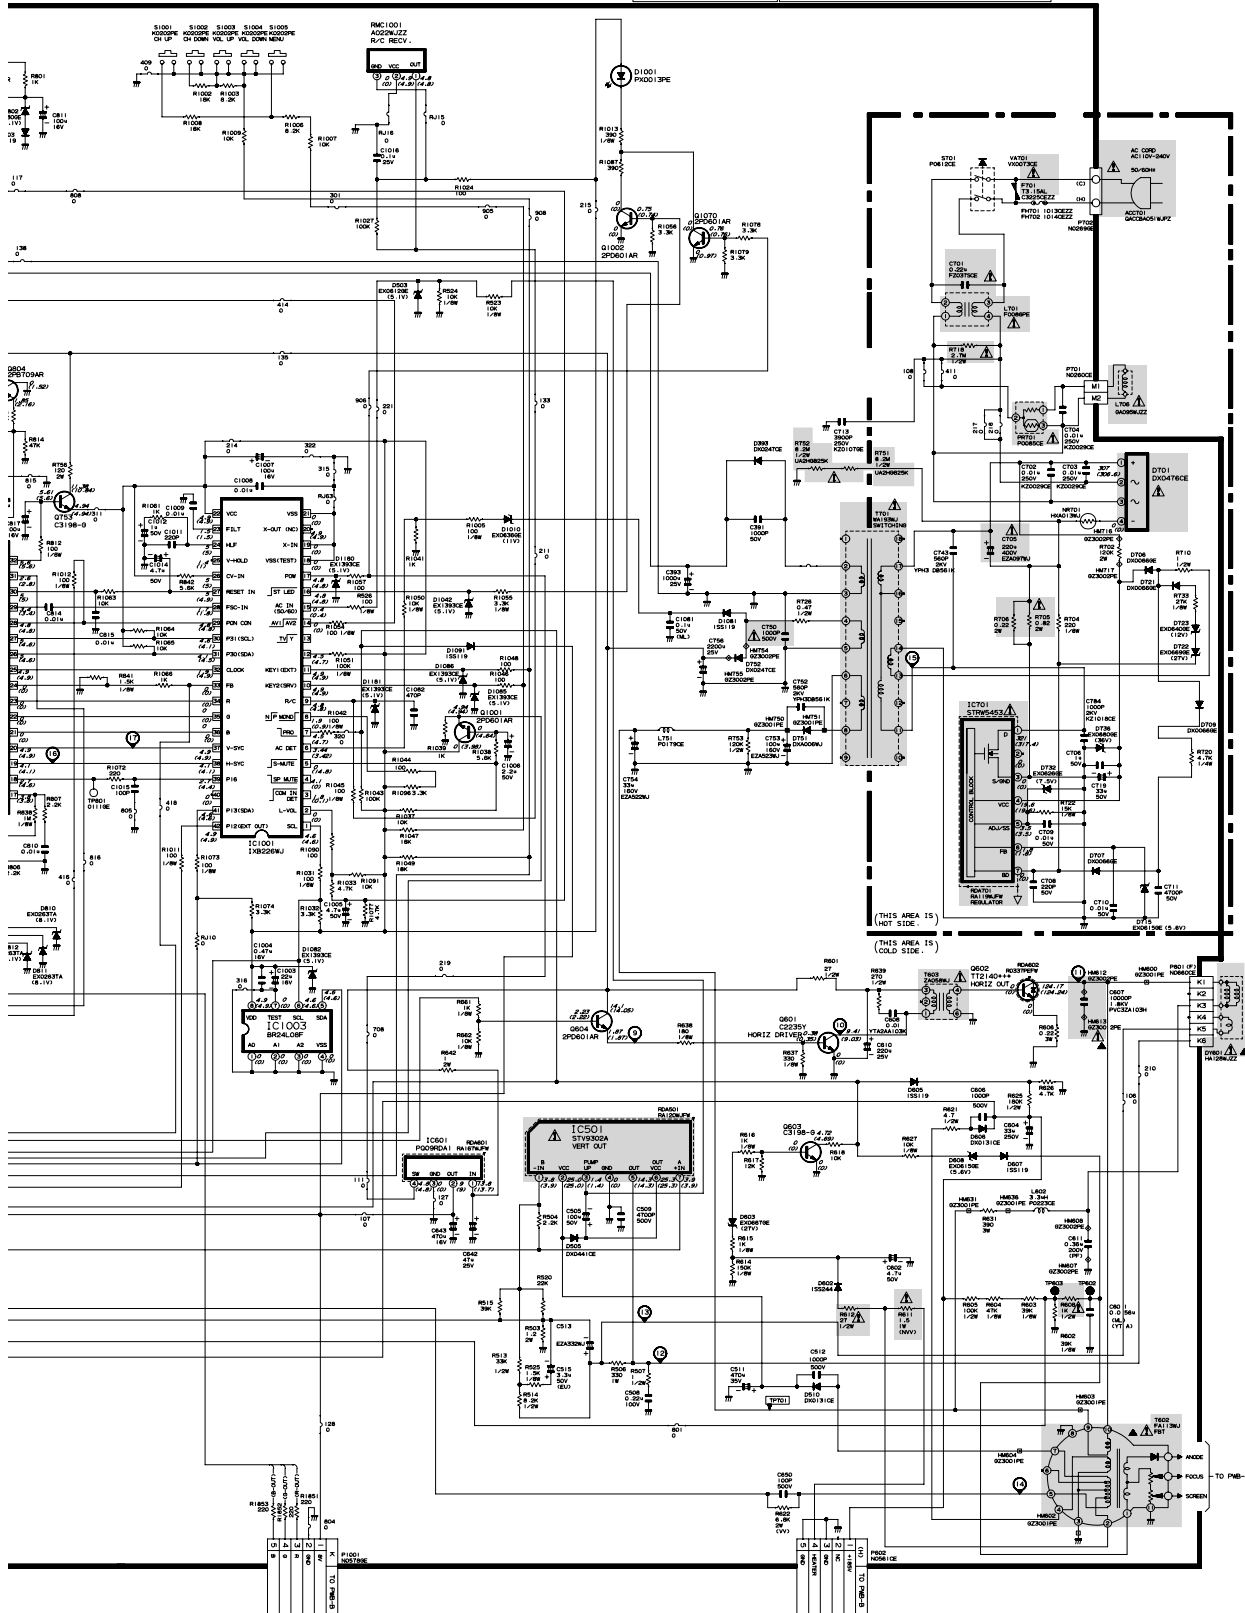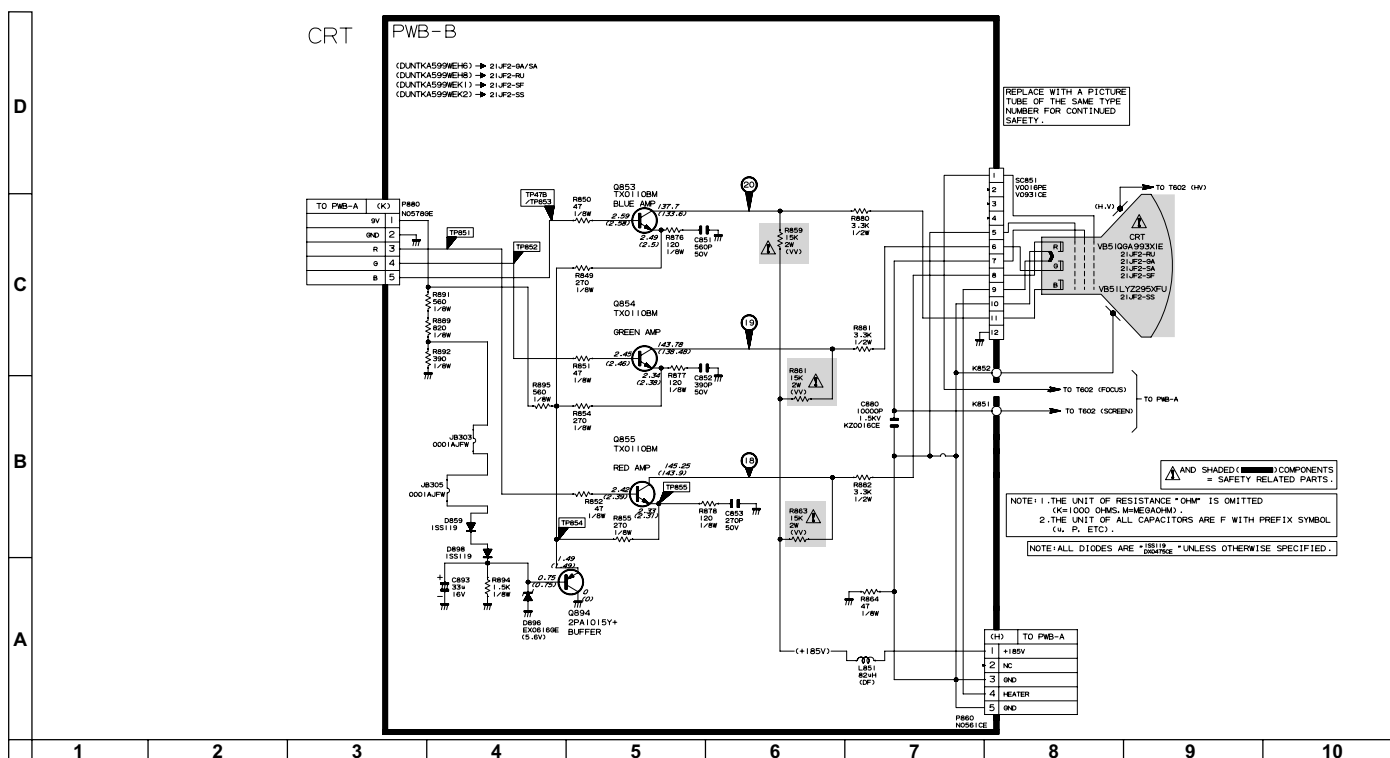NOTE 1: THE UNIT OF RESISTANCE "OHM" IS OMITTED
 1. 10K, 100K, 1M, 1000K, 10000K, 100000K, 1000000K
 2. ALL RESISTORS ARE 1/10W UNLESS OTHERWISE NOTED.
 3. UNIT OF ALL CAPACITORS ARE P, WITH PREFIX SYMBOL
 (K, M, P, ETC.)






[3] SCHEMATIC DIAGRAM: HEADPHONE UNIT

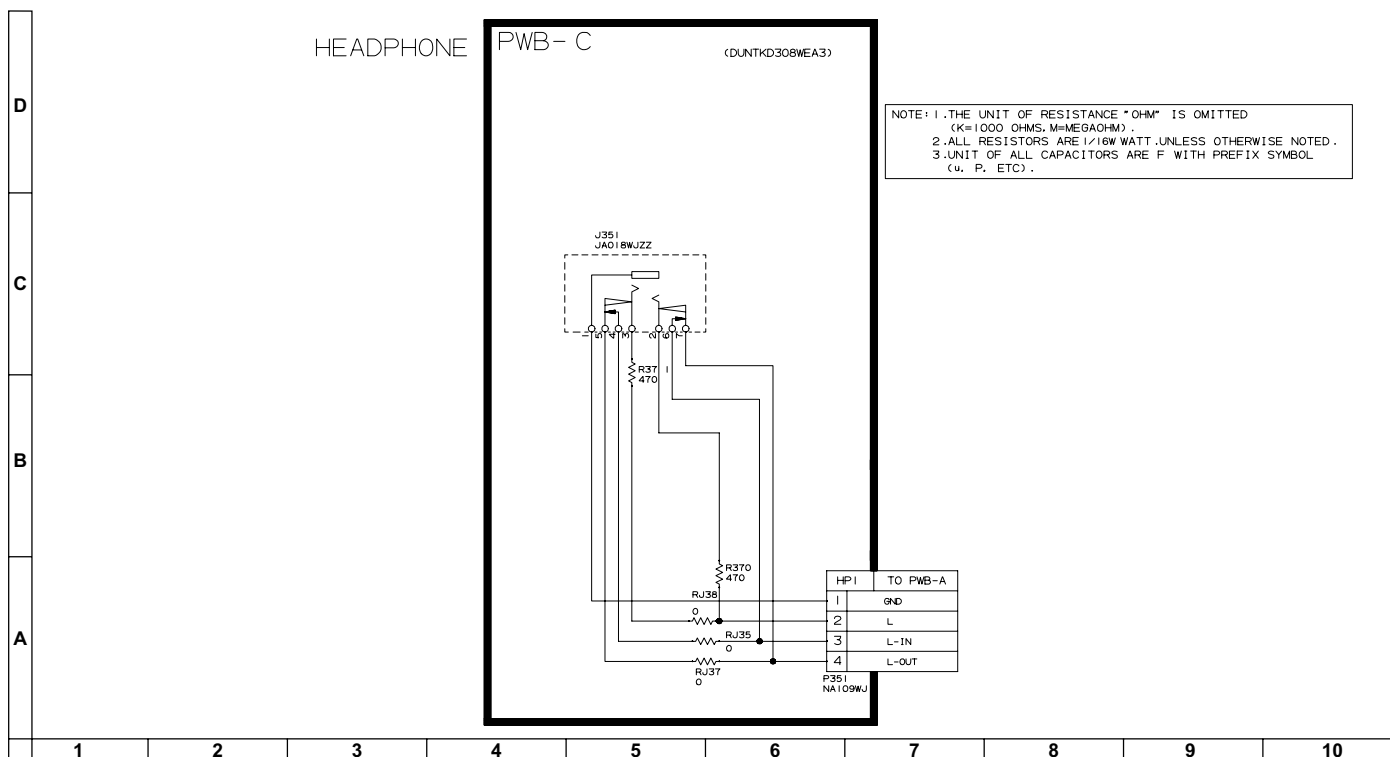

CHAPTER 12. PRINTED WIRING BOARD ASSEMBLIES


[1] PWB-B: CRT UNIT

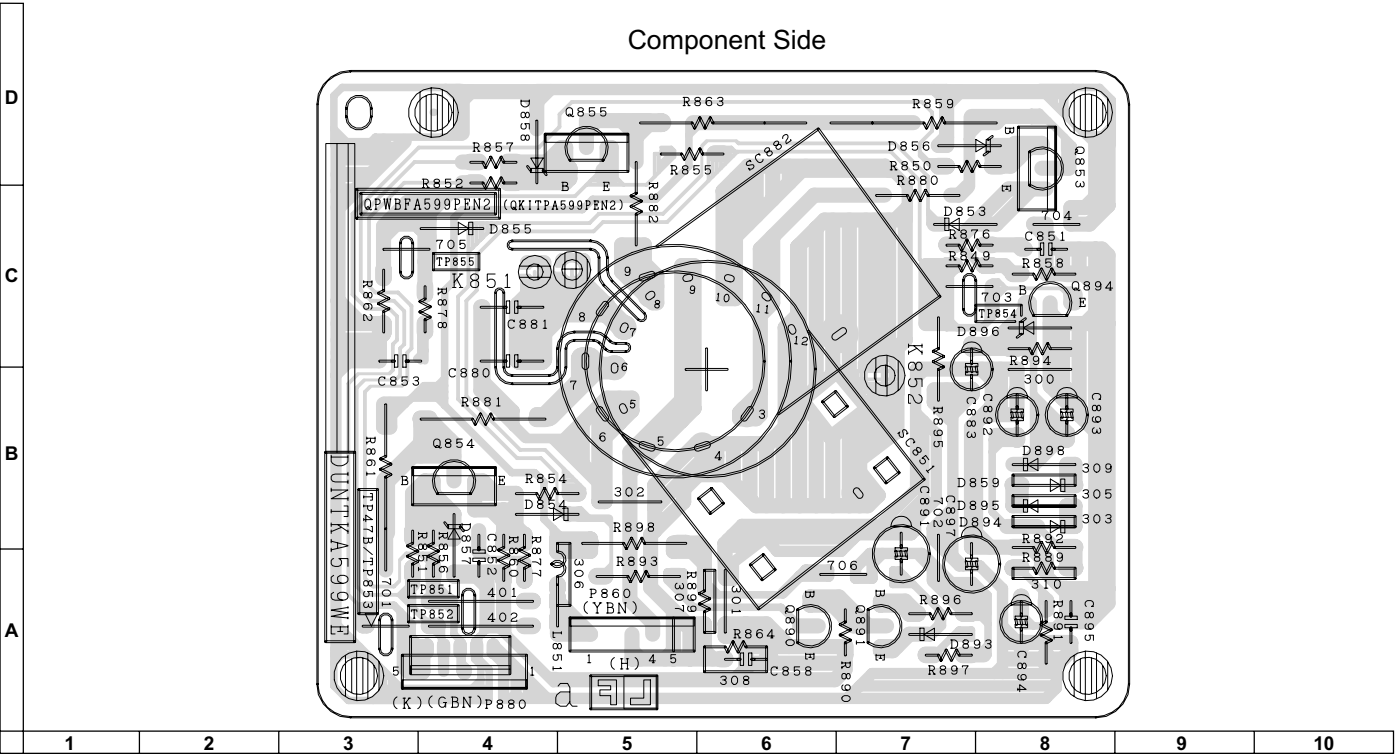
1. CRT UNIT (Component Side)




[2] PWB-C: HEADPHONE UNIT

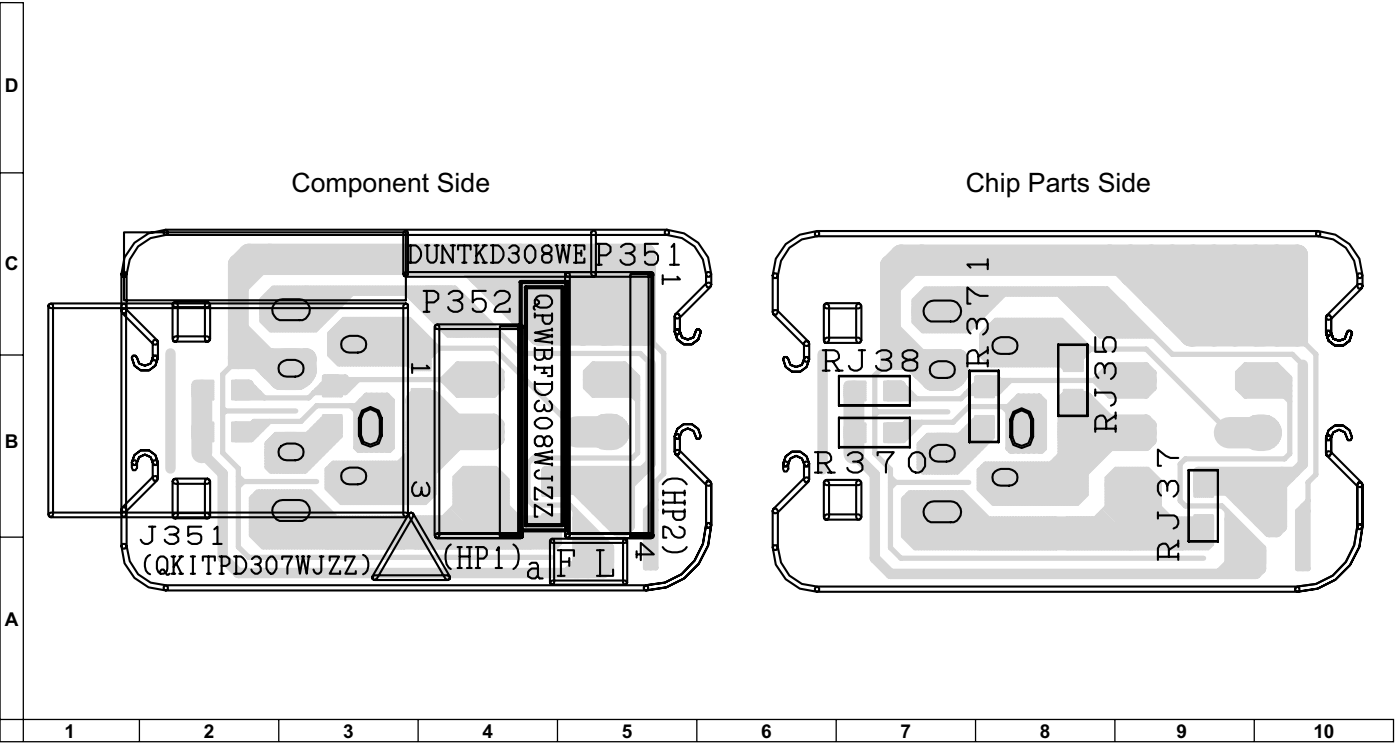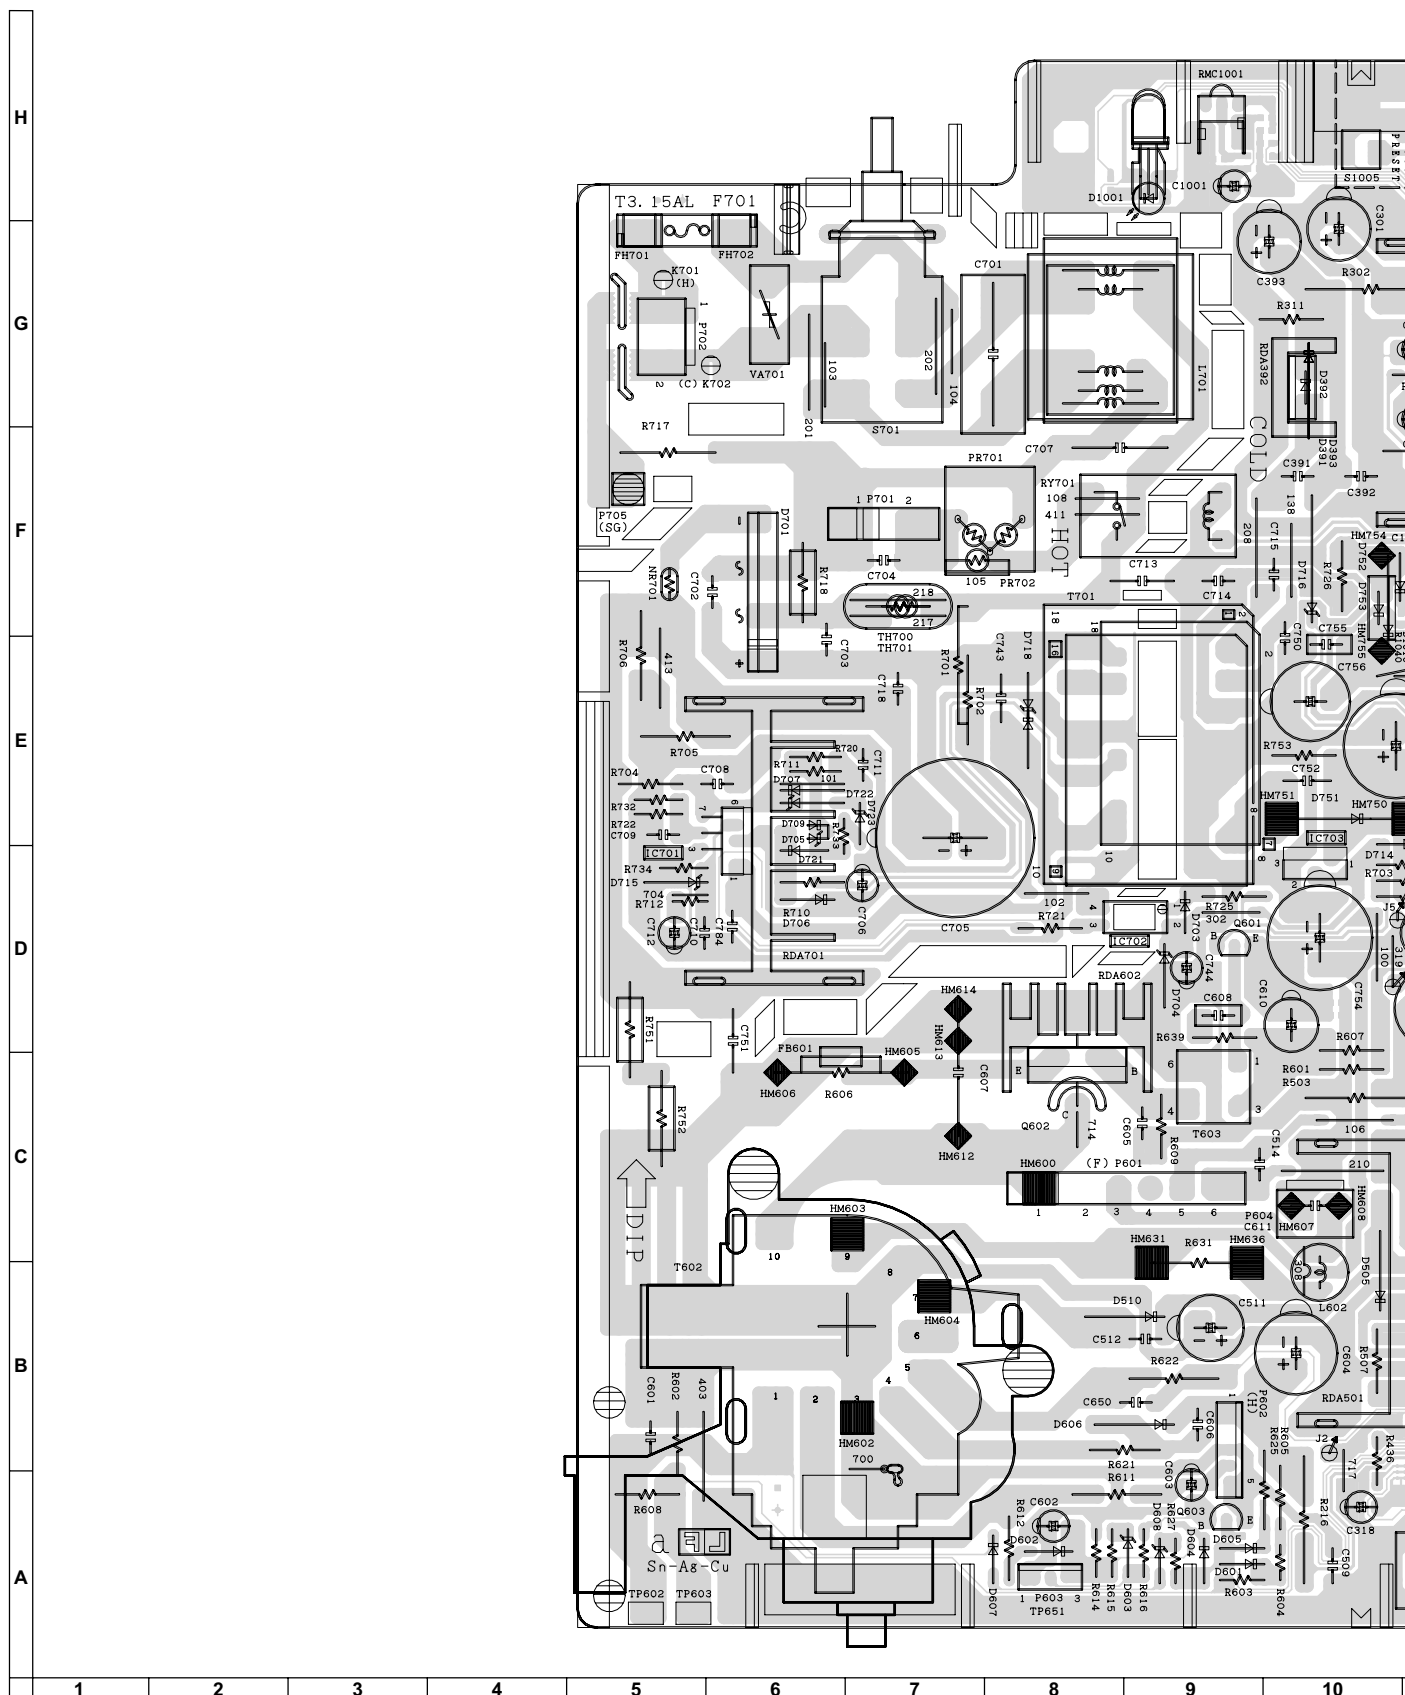1. HEADPHONE UNIT (Component Side) (Chip Parts Side)




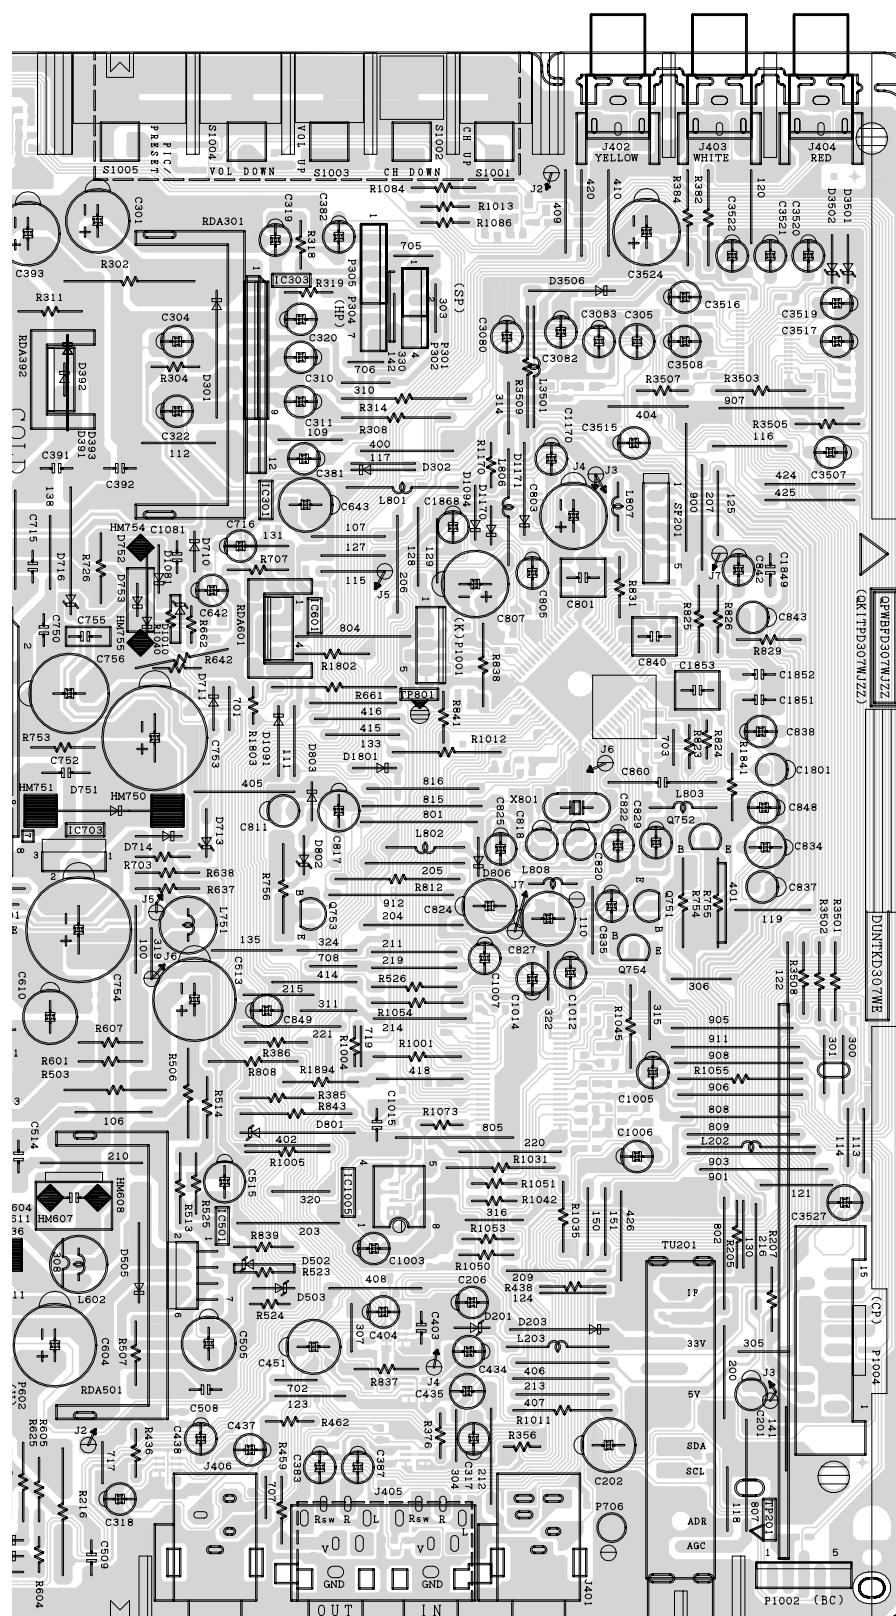1. MAIN UNIT (Component Side)



10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----



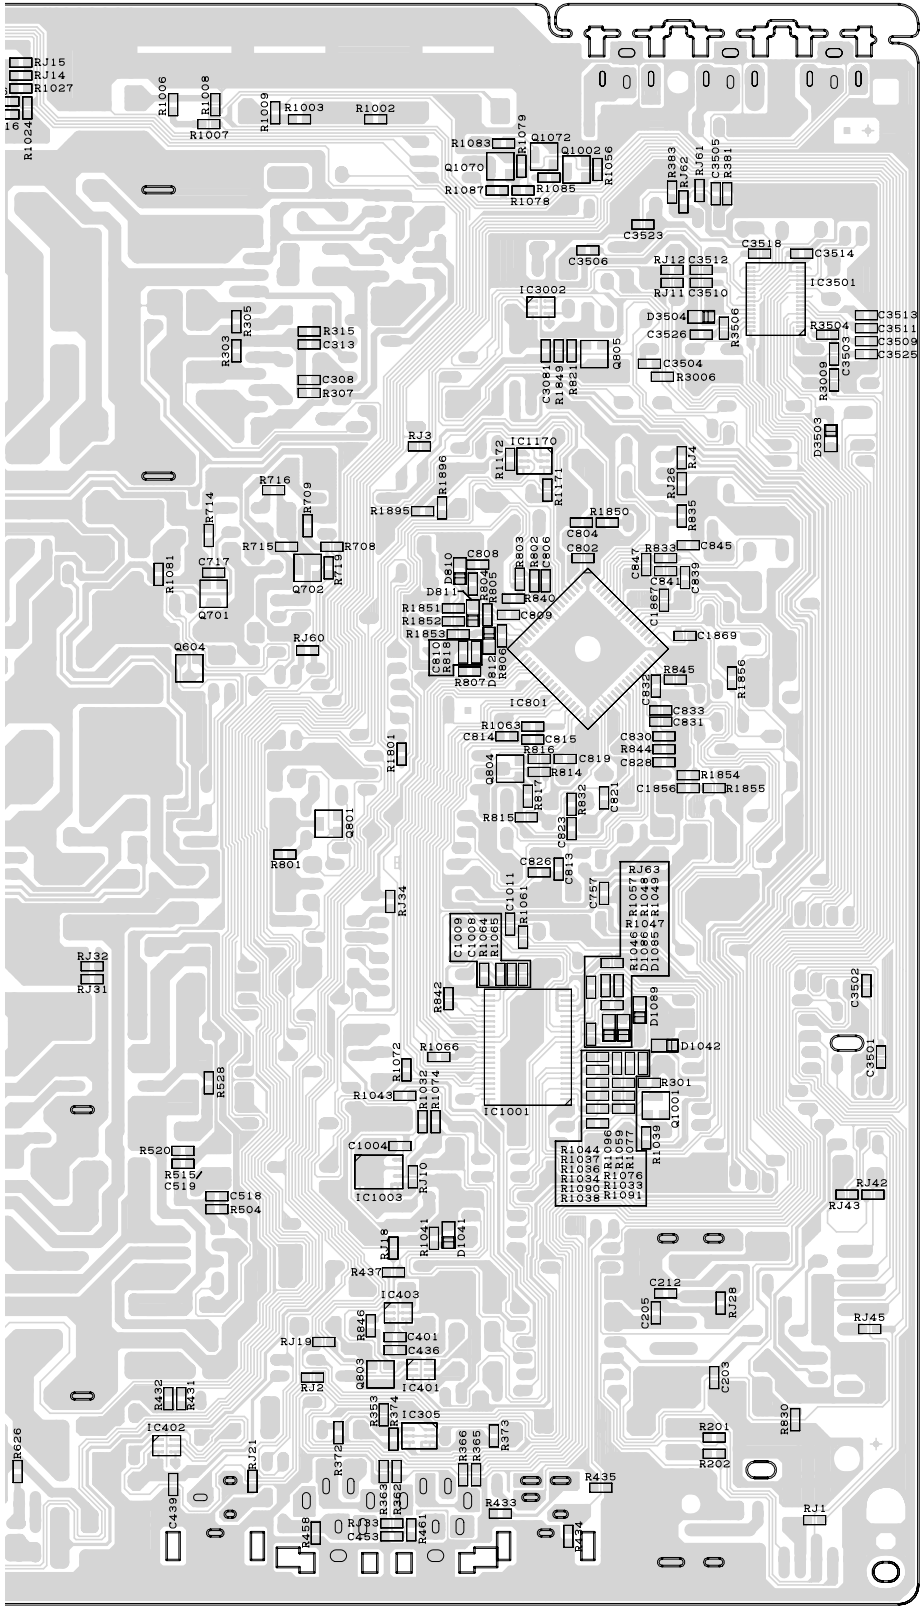

10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----

SHARP PARTS GUIDE

No. S95O521JF2-RU

21JF2-RU 21JF2-GA 21JF2-SA 21JF2-SF MODELS 21JF2-SS

CONTENTS

- | | |
|--|--------------------------|
| [1] PICTURE TUBE | [6] MISCELLANEOUS PARTS |
| [2] PRINTED WIRING BOARD
ASSEMBLIES | [7] CABINET PARTS |
| [3] MAIN UNIT | [8] SUPPLIED ACCESSORIES |
| [4] CRT UNIT | [9] PACKING PARTS |
| [5] HEADPHONE UNIT | |

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[1] PICTURE TUBE					
△				R	Picture Tube [21JF2-RU/GA/SA/SF]
△				R	Picture Tube [21JF2-SS]
△	L706			R	Degaussing Coil
△	DY601			R	Deflection Yoke [21JF2-SS]
	QEARCA012WJZZ			R	Ground-Part
	PMAGF3046CEZZ			R	Magnet
[2] PRINTED WIRING BOARD ASSEMBLIES					
					(NOT REPLACEMENT ITEM)
	DUNTKD307WEA3	-		-	MAIN Unit [21JF2-RU]
	DUNTKD307WEA4	-		-	MAIN Unit [21JF2-GA/SA]
	DUNTKD307WED3	-		-	MAIN Unit [21JF2-SF]
	DUNTKD307WED4	-		-	MAIN Unit [21JF2-SS]
	DUNTKA599WEH8	-		-	CRT Unit [21JF2-RU]
	DUNTKA599WEH6	-		-	CRT Unit [21JF2-GA/SA]
	DUNTKA599WEK1	-		-	CRT Unit [21JF2-SF]
	DUNTKA599WEK2	-		-	CRT Unit [21JF2-SS]
	DUNTKD308WEA3	-		-	HEADPHONE Unit
[3] MAIN UNIT					
					PWB-A: DUNTKD307WEA3 (21JF2-RU)
					PWB-A: DUNTKD307WEA4 (21JF2-GA)(21JF2-SA)
					PWB-A: DUNTKD307WED3 (21JF2-SF)
					PWB-A: DUNTKD307WED4 (21JF2-SS)
△	TU201			R	TUNER
	IC303			R	AN17823A
	IC305			R	IMX1T110
	IC402			R	MM1501XNRE
△	IC501			R	STV9302A
	IC601			R	PQ090RDA1SZ
△	IC701			R	Power I.C.
	IC801			R	I.C.
	IC1001			R	I.C.
	IC1003			R	BR24L08F-WE2
	IC1170			R	iMZ1A
	IC3002			R	MM1501XNRE
	Q601			R	2SC2235
	Q602			R	TT2140
	Q603			R	2SC3198
	Q604			R	2PD601AR
	Q751			R	2SD468
	Q752			R	2SD468
	Q753			R	2SC3198
	Q754			R	2SD468
	Q801			R	2PD601AR
	Q803			R	2PD601AR
	Q804			R	2PB709AR
	Q805			R	2PB709AR
	Q1001			R	2PD601AR
	Q1002			R	2PD601AR
	Q1070			R	2PD601AR
	D201			R	Zener Diode, 33V
	D203			R	Diode, 1SS119
	D204			R	Diode, 1SS119
	D393			R	Diode, DX0247CE
	D503			R	Zener Diode, 5.1V
	D505			R	Diode, DX0441CE
	D510			R	Diode, DX0131CE
	D602			R	Diode, 1SS244
	D603			R	Zener Diode, 27V
	D605			R	Diode, 1SS119
	D606			R	Diode, DX0131CE
	D607			R	Diode, 1SS119
	D608			R	Zener Diode, 5.6V
△	D701			R	Diode, DX0476CE
	D706			R	Diode, DX0066GE
	D707			R	Diode, DX0066GE
	D709			R	Diode, DX0066GE
	D715			R	Zener Diode, 5.6V
	D721			R	Diode, DX0066GE
	D722			R	Zener Diode, 27V
	D723			R	Zener Diode, 12V
	D732			R	Zener Diode, 7.5V
	D736			R	Zener Diode, 36V
	D751			R	Diode, DXA006WJ
	D752			R	Diode, DX0247CE
	D801			R	Zener Diode, 5.1V
	D802			R	Zener Diode, 9.1V
	D803			R	Diode, 1SS119
	D806			R	Diode, 1SS119
	D810			R	Zener Diode, 8.1V
	D811			R	Zener Diode, 8.1V
	D812			R	Zener Diode, 8.1V
	D1001			R	Photodiode

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[3] MAIN UNIT					
	D1010	RH-EX0636GEZZY	AC	R	Zener Diode, 11V
	D1042	RH-EX1393CEZZY	AB	R	Zener Diode, 5.1V
	D1081	VHD1SS119//1Y	AA	R	Diode, 1SS119
	D1082	RH-EX1393CEZZY	AB	R	Zener Diode, 5.1V
	D1085	RH-EX1393CEZZY	AB	R	Zener Diode, 5.1V
	D1086	RH-EX1393CEZZY	AB	R	Zener Diode, 5.1V
	D1091	VHD1SS119//1Y	AA	R	Diode, 1SS119
	D1094	VHD1SS119//1Y	AA	R	Diode, 1SS119
	D1170	VHD1SS119//1Y	AA	R	Diode, 1SS119
	D1171	VHD1SS119//1Y	AA	R	Diode, 1SS119
	D1180	RH-EX1393CEZZY	AB	R	Zener Diode, 5.1V
	D1181	RH-EX1393CEZZY	AB	R	Zener Diode, 5.1V
	D1801	VHD1SS119//1Y	AA	R	Diode, 1SS119
△	VA701	RH-VX0073CEZZ	AD	R	Varistor
△	PR701	RMPTP0085CEZZ	AL	R	Packaged Circuit
	X801	RCRSAA019WJZZ	AF	R	Crystal
	L203	VP-DF270K0000Y	AB	R	Peaking 27μH
	L602	RCILP0223CEZZ+	AD	R	Coil
△	L701	RCILF0086PEN1	AF	R	Coil [21JF2-RU/SS]
△	L701	RCILFA187WJZZ		R	Coil [21JF2-GA/SA/SF]
	L751	RCILP0179CEZZ+	AD	R	Coil
	L801	VP-CF220K0000Y	AB	R	Peaking 22μH
	L802	VP-DF100K0000Y	AB	R	Peaking 10μH
	L803	VP-DF100K0000Y	AB	R	Peaking 10μH
	L806	VP-DF100K0000Y	AB	R	Peaking 10μH
	L807	VP-XF2R2K0000Y	AB	R	Peaking 2.2μH
	L808	VP-XF330K0000Y	AB	R	Peaking 33μH
	SF201	RFILC0442CEZZ	AL	R	Filter
△	T602	RTRNFA113WJZZ	AV	R	H-Volt Transformer
△	T603	RTRNZA058WJZZ	AD	R	Transformer
△	T701	RTRNWA193WJZZ		R	Transformer
	C201	VCEA9M1CW476M+	AB	R	47 16V Electrolytic
	C202	VCEA0A1AW108M+	AC	R	1000 10V Electrolytic
	C203	VCKYCY1HF103ZY	AA	R	0.01 50V Ceramic
	C206	VCEA0A1HW106M+	AB	R	10 50V Electrolytic
	C304	VCEA0A1HW105M+	AB	R	1 50V Electrolytic
	C305	VCE9GA1CW106M+	AB	R	10 16V Electrolytic (N.P)
	C310	VCEA0A1HW105M+	AB	R	1 50V Electrolytic
	C313	VCKYCY1HB332KY	AA	R	3300p 50V Ceramic
	C318	VCEA0A1CW107M+	AC	R	100 16V Electrolytic
	C319	VCEA0A1CW106M+	AB	R	10 16V Electrolytic
	C383	VCEA0A1CW106M+	AB	R	10 16V Electrolytic
	C391	VCKYPA1HB102K+	AA	R	1000p 50V Ceramic
	C393	VCEA0A1EW108M+	AD	R	1000 25V Electrolytic
	C401	VCKYCY1HF103ZY	AA	R	0.01 50V Ceramic
	C437	VCEA0A1CW106M+	AB	R	10 16V Electrolytic
	C438	VCEA0A1CW106M+	AB	R	10 16V Electrolytic
	C451	VCEA0A1CW477M+	AC	R	470 16V Electrolytic
	C505	VCEA0A1HW107M+	AB	R	100 50V Electrolytic
	C508	VCFYAA2AA224J+	AD	R	0.22 100V Mylar
	C509	VCKYPA2HB472K+	AB	R	4700p 500V Ceramic [21JF2-RU/SS]
	C511	VCEA0A1VW477M+	AB	R	470 35V Electrolytic
	C512	VCKYPA2HB102K+	AA	R	1000p 500V Ceramic
	C513	RC-EZA332WJZZ+	AD	R	Capacitor
	C515	VCEACA1HC335J+	AC	R	3.3 50V Electrolytic
	C601	VCQYTA1HM563J+	AB	R	0.056 50V Mylar
	C602	VCEA0A1HW475M+	AB	R	4.7 50V Electrolytic
	C604	VCEA0A2EW336M+	AD	R	33 250V Electrolytic
	C606	VCKYPA2HB102K+	AA	R	1000p 500V Ceramic
△	C607	VCFPVC3ZA922H		R	9200p 1.8kV Metalized Polypro Film [21JF2-RU/GA/SA/SF]
△	C607	VCFPVC3ZA103H	AD	R	10000p 1.8kV Metalized Polypro Film [21JF2-SS]
	C608	VCQYTA2AA103K+	AC	R	0.01 100V Mylar
	C610	VCEA0A1EW227M+	AB	R	220 25V Electrolytic
	C611	VCFPVC2DB334J	AD	R	0.33 200V Metalized Polypro Film [21JF2-RU/GA/SA/SF]
	C611	VCFPVC2DB364J	AC	R	0.36 200V Metalized Polypro Film [21JF2-SS]
	C642	VCEA0A1EW476M+	AB	R	47 25V Electrolytic
	C643	VCEA0A1CW477M+	AC	R	470 16V Electrolytic
	C650	VCKYPA2HB101K+	AB	R	100p 500V Ceramic
△	C701	RC-FZ037SCEZZ	AD	R	0.22 275V Metalized Polypro Film [21JF2-RU/SS]
△	C701	RC-FZ031SCEZZ	AD	R	0.1 275V Metalized Polypro Film [21JF2-GA/SA/SF]
	C702	RC-KZ0029CEZZ+	AC	R	0.01 250V Ceramic
	C703	RC-KZ0029CEZZ+	AC	R	0.01 250V Ceramic
	C704	RC-KZ0029CEZZ+	AC	R	0.01 250V Ceramic
△	C705	RC-EZA097WJZZ	AM	R	220 400V Electrolytic
	C706	VCFYFA1HA105J+	AE	R	1 50V Mylar
	C708	VCKYPA1HB221K+	AA	R	220p 50V Ceramic
	C709	VCQYTA1HM103J+	AB	R	0.01 50V Mylar
	C710	VCQYTA1HM103J+	AB	R	0.01 50V Mylar
	C711	VCKYPA1HB472K+	AB	R	4700p 50V Ceramic
	C713	RC-KZ0107GEZZ	AE	R	3900p 250V Ceramic [21JF2-RU/SS]
	C713	RC-KZ0102GEZZ	AE	R	680p 250V Ceramic [21JF2-GA/SA/SF]
	C719	VCEA0A1HW336M+	AA	R	33 50V Electrolytic
	C743	VCKYPH3DB561K	AC	R	560p 2kV Ceramic
△	C750	VCKYPA2HB102K+	AA	R	1000p 500V Ceramic

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[3] MAIN UNIT					
C752	VCKYPH3DB561K	AC		R	560p 2kV Ceramic
C753	RC-EZA523WJZZ	AD		R	100 160V Electrolytic
C754	RC-EZA522WJZZ	AD		R	33 160V Electrolytic
C756	VCEA0A1EW228M+	AE		R	2200 25V Electrolytic
C757	VCKYCY1HB471KY	AA		R	470p 50V Ceramic
C784	RC-KZ1018CEZZ+	AC		R	1000p 2kV Ceramic
C801	VCIFYFA1HA1051+	AE		R	1 50V Mylar
C802	VCKYCY1HF103ZY	AA		R	0.01 50V Ceramic
C803	VCEA0A1CW108M+	AD		R	1000 16V Electrolytic
C804	VCKYCY1HF103ZY	AA		R	0.01 50V Ceramic
C805	VCEA0A1HW105M+	AB		R	1 50V Electrolytic
C806	VCKYCY1HF103ZY	AA		R	0.01 50V Ceramic
C807	VCEA0A1CW108M+	AD		R	1000 16V Electrolytic
C808	VCKYCY1HF103ZY	AA		R	0.01 50V Ceramic
C809	VCKYCY1HF103ZY	AA		R	0.01 50V Ceramic
C810	VCKYCY1HF103ZY	AA		R	0.01 50V Ceramic
C811	VCEA9M1CW107M+	AB		R	100 16V Electrolytic
C813	VCCCCY1HH181JY	AA		R	180p 50V Ceramic
C814	VCKYCY1HF103ZY	AA		R	0.01 50V Ceramic
C815	VCKYCY1HF103ZY	AA		R	0.01 50V Ceramic
C817	VCEA0A1CW107M+	AC		R	100 16V Electrolytic
C818	VCEA9M1HW475M+	AB		R	4.7 50V Electrolytic
C819	VCCCCY1HH121JY	AA		R	120p 50V Ceramic
C820	VCEA9M1HW474M+	AB		R	0.47 50V Electrolytic
C821	VCKYCY1HF153ZY	AA		R	0.015 50V Ceramic
C822	VCEA0A1HW105M+	AB		R	1 50V Electrolytic
C823	VCKYCY1CB104KY	AB		R	0.1 16V Ceramic
C824	VCEA0A1CW337M+	AC		R	330 16V Electrolytic
C825	VCE9GA1HW105M+	AB		R	1 50V Electrolytic (N.P)
C827	VCEA0A1CW477M+	AC		R	470 16V Electrolytic
C828	VCKYCY1HF103ZY	AA		R	0.01 50V Ceramic
C829	VCEA0A1CW476M+	AB		R	47 16V Electrolytic
C830	VCKYCY1CB104KY	AB		R	0.1 16V Ceramic
C832	VCKYCY1CB104KY	AB		R	0.1 16V Ceramic
C834	VCEA0A1CW476M+	AB		R	47 16V Electrolytic
C835	VCEA0A1CW106M+	AB		R	10 16V Electrolytic
C837	VCEA9M1HW474M+	AB		R	0.47 50V Electrolytic
C838	VCEA0A1CW106M+	AB		R	10 16V Electrolytic
C839	VCKYCY1HB392KY	AA		R	3900p 50V Ceramic
C840	VCIFYFA1HA1051+	AE		R	1 50V Mylar
C841	VCCCCY1HH220JY	AA		R	22p 50V Ceramic
C842	VCEA0A1HW474M+	AB		R	0.47 50V Electrolytic
C843	VCEA9M1HW105M+	AB		R	1 50V Electrolytic
C845	VCKYCY1CF224ZY	AB		R	0.22 16V Ceramic
C847	VCCCCY1HH220JY	AA		R	22p 50V Ceramic
C848	VCEA0A1HW474M+	AB		R	0.47 50V Electrolytic
C1003	VCEA0A1CW226M+	AB		R	22 16V Electrolytic
C1004	VCKYCY1CF474ZY	AB		R	0.47 16V Ceramic
C1005	VCEA0A1HW475M+	AB		R	4.7 50V Electrolytic
C1006	VCEA0A1HW225M+	AB		R	2.2 50V Electrolytic
C1007	VCEA0A1CW107M+	AC		R	100 16V Electrolytic
C1008	VCKYCY1HF103ZY	AA		R	0.01 50V Ceramic
C1009	VCKYCY1HF103ZY	AA		R	0.01 50V Ceramic
C1011	VCKYCY1HB221KY	AA		R	220p 50V Ceramic
C1012	VCEA0A1HW105M+	AB		R	1 50V Electrolytic
C1014	VCEA0A1HW475M+	AB		R	4.7 50V Electrolytic
C1015	VCCCPA1HH101J+	AA		R	100p 50V Ceramic
C1016	VCKYCY1EF104ZY	AA		R	0.1 25V Ceramic
C1018	VCCCCY1HH560JY	AB		R	56p 50V Ceramic
C1081	VCQYTA1HM104J+	AB		R	0.1 50V Mylar
C1082	VCKYCY1HB471KY	AA		R	470p 50V Ceramic
C1170	VCEA0A1CW107M+	AC		R	100 16V Electrolytic
C1801	VCEA9M1CW106M+	AB		R	10 16V Electrolytic
C1849	VCIFYFA1HA104J+	AA		R	0.1 50V Mylar
C1853	VCIFYFA1HA105J+	AE		R	1 50V Mylar
C1856	VCKYCY1HB102KY	AA		R	1000p 50V Ceramic
C1867	VCCCCY1HH150JY	AA		R	15p 50V Ceramic
C1868	VCEA0A1CW336M+	AB		R	33 16V Electrolytic
C3080	VCEA0A1CW107M+	AC		R	100 16V Electrolytic
C3081	VCKYCY1HF103ZY	AA		R	0.01 50V Ceramic
C3082	VCEA0A1CW106M+	AB		R	10 16V Electrolytic
C3083	VCEA0A1CW106M+	AB		R	10 16V Electrolytic
RJ1	VRS-CY1JF000JY	AA		R	0 1/16W Metal Oxide
RJ3	VRS-CY1JF000JY	AA		R	0 1/16W Metal Oxide
RJ10	VRS-CY1JF000JY	AA		R	0 1/16W Metal Oxide
RJ11	VRS-CY1JF000JY	AA		R	0 1/16W Metal Oxide
RJ15	VRS-CY1JF000JY	AA		R	0 1/16W Metal Oxide
RJ16	VRS-CY1JF000JY	AA		R	0 1/16W Metal Oxide
RJ61	VRS-CY1JF000JY	AA		R	0 1/16W Metal Oxide
RJ63	VRS-CY1JF000JY	AA		R	0 1/16W Metal Oxide
R201	VRS-CY1JF101JY	AA		R	100 1/16W Metal Oxide
R202	VRS-CY1JF101JY	AA		R	100 1/16W Metal Oxide
R216	VRS-RG3LB393J+	AC		R	39k 3W Metal Oxide
R304	VRD-RA2BE683JY	AA		R	68k 1/8W Carbon
R305	VRS-CY1JF274JY	AA		R	270k 1/16W Metal Oxide


NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[3] MAIN UNIT					
R314	VRD-RA2BE562JY	AA		R	5.6k 1/8W Carbon
R315	VRS-CY1JF182JY	AA		R	1.8k 1/16W Metal Oxide
R318	VRD-RA2BE680JY	AA		R	68 1/8W Carbon
R353	VRS-CY1JF102JY	AA		R	1k 1/16W Metal Oxide
R366	VRS-CY1JF332JY	AA		R	3.3k 1/16W Metal Oxide
R372	VRS-CY1JF104JY	AA		R	100k 1/16W Metal Oxide
R373	VRS-CY1JF103JY	AA		R	10k 1/16W Metal Oxide
R376	VRD-RA2BE472JY	AA		R	4.7k 1/8W Carbon
R384	VRD-RA2BE332JY	AA		R	3.3k 1/8W Carbon
R391	VRN-RL2HCR22J+			R	0.22 1/2W Metal Film
R431	VRS-CY1JF101JY	AA		R	100 1/16W Metal Oxide
R432	VRS-CY1JF750JY	AA		R	75 1/16W Metal Oxide
R436	VRD-RA2BE101JY	AA		R	100 1/8W Carbon
R458	VRS-CY1JF103JY	AA		R	10k 1/16W Metal Oxide
R459	VRD-RA2EE750JY	AA		R	75 1/4W Carbon
R461	VRS-CY1JF750JY	AA		R	75 1/16W Metal Oxide
R462	VRD-RA2BE101JY	AA		R	100 1/8W Carbon
R503	VRN-RL3DB1R2J+	AB		R	1.2 2W Metal Film
R504	VRS-CY1JF222JY	AA		R	2.2k 1/16W Metal Oxide
R506	VRS-RG3AB331J+	AB		R	330 1W Metal Oxide
R507	VRD-RM2HD1R0JY	AA		R	1 1/2W Carbon
R513	VRD-RM2HD333JY	AB		R	33k 1/2W Carbon
R514	VRD-RM2HD822JY	AA		R	8.2k 1/2W Carbon
R515	VRS-CY1JF393JY	AA		R	39k 1/16W Metal Oxide
R520	VRS-CY1JF223JY	AA		R	22k 1/16W Metal Oxide
R523	VRD-RA2BE103JY	AA		R	10k 1/8W Carbon
R524	VRD-RA2BE103JY	AA		R	10k 1/8W Carbon
R525	VRD-RA2BE152JY	AA		R	1.5k 1/8W Carbon
R526	VRD-RA2BE101JY	AA		R	100 1/8W Carbon
R601	VRD-RM2HD270JY	AA		R	27 1/2W Carbon
R602	VRD-RA2BE393JY	AA		R	39k 1/8W Carbon
R603	VRD-RA2BE393JY	AA		R	39k 1/8W Carbon
R604	VRD-RA2BE473JY	AA		R	47k 1/8W Carbon
R605	VRD-RM2HD104JY	AA		R	100k 1/2W Carbon
R606	VRN-RL3LBR22J+	AD		R	0.22 3W Metal Film
R608	VRD-RM2HD102JY	AA		R	1k 1/2W Carbon
R611	VRN-RL3AB1R5J+	AB		R	1.5 1W Metal Film
R612	VRD-RM2HD270JY	AA		R	27 1/2W Carbon
R614	VRD-RA2BE154JY	AA		R	150k 1/8W Carbon
R615	VRD-RA2BE102JY	AA		R	1k 1/8W Carbon
R616	VRD-RA2BE102JY	AA		R	1k 1/8W Carbon
R617	VRS-CY1JF123JY	AA		R	12k 1/16W Metal Oxide
R618	VRS-CY1JF103JY	AA		R	10k 1/16W Metal Oxide
R621	VRN-RL2HC4R7J+	AB		R	4.7 1/2W Metal Film
R622	VRS-VV3DB682J	AA		R	6.8k 2W Metal Oxide
R625	VRD-RM2HD184JY	AA		R	180k 1/2W Carbon
R626	VRS-CY1JF472JY	AA		R	4.7k 1/16W Metal Oxide
R627	VRD-RA2BE103JY	AA		R	10k 1/8W Carbon
R631	VRS-KT3LB391J	AD		R	390 3W Metal Oxide
R637	VRD-RA2BE331JY	AA		R	330 1/8W Carbon
R638	VRD-RA2BE181JY	AA		R	180 1/8W Carbon
R639	VRD-RM2HD271JY	AA		R	270 1/2W Carbon
R642	VRN-RL3DB1R0J+	AB		R	1 2W Metal Film
R661	VRD-RA2BE102JY	AA		R	1k 1/8W Carbon
R662	VRD-RA2BE103JY	AA		R	10k 1/8W Carbon
R702	VRS-VV3DB124J	AB		R	120k 2W Metal Oxide
R704	VRD-RA2BE221JY	AA		R	220 1/8W Carbon
R705	VRN-RL3DBR82J+	AB		R	0.82 2W Metal Film
R706	VRN-RL3DBR22J+	AA		R	0.22 2W Metal Film
R710	VRD-RM2HD1R0JY	AA		R	1 1/2W Carbon
R718	VRC-UA2HG275KY	AC		R	2.7M 1/2W Solid
R720	VRD-RA2EE472JY	AA		R	4.7k 1/4W Carbon
R722	VRD-RA2BE153JY	AA		R	15k 1/8W Carbon
R726	VRN-RL2HCR47J+	AB		R	0.47 1/2W Metal Film
R733	VRD-RA2BE273JY	AA		R	27k 1/8W Carbon
R751	VRC-UA2HG825KY	AA		R	8.2M 1/2W Solid
R752	VRC-UA2HG825KY	AA		R	8.2M 1/2W Solid
R753	VRD-RM2HD124JY	AA		R	120k 1/2W Carbon
R754	VRN-RL3AB8R2J+	AB		R	8.2 1W Metal Film
R756	VRS-RG3DB121J+	AB		R	120 2W Metal Oxide
R801	VRS-CY1JF102JY	AA		R	1k 1/16W Metal Oxide
R802	VRS-CY1JF682JY	AA		R	6.8k 1/16W Metal Oxide
R803	VRS-CY1JF103JY	AA		R	10k 1/16W Metal Oxide
R804	VRS-CY1JF222JY	AA		R	2.2k 1/16W Metal Oxide
R805	VRS-CY1JF222JY	AA		R	2.2k 1/16W Metal Oxide
R806	VRS-CY1JF222JY	AA		R	2.2k 1/16W Metal Oxide
R807	VRS-CY1JF222JY	AA		R	2.2k 1/16W Metal Oxide
R808	VRD-RA2BE273JY	AA		R	27k 1/8W Carbon
R812	VRD-RA2BE101JY	AA		R	100 1/8W Carbon
R814	VRS-CY1JF473JY	AA		R	47k 1/16W Metal Oxide
R815	VRS-CY1JF473JY	AA		R	47k 1/16W Metal Oxide
R816	VRS-CY1JF223JY	AA		R	22k 1/16W Metal Oxide
R817	VRS-CY1JF473JY	AA		R	47k 1/16W Metal Oxide
R821	VRS-CY1JF000JY	AA		R	0 1/16W Metal Oxide
R823	VRD-RA2BE101JY	AA		R	100 1/8W Carbon

[21JF2-RU/SS]

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[3] MAIN UNIT					
R824	VRD-RA2BE101JY	AA		R	100 1/8W Carbon
R825	VRD-RA2BE101JY	AA		R	100 1/8W Carbon
R829	VRD-RA2BE472JY	AA		R	4.7k 1/8W Carbon
R830	VRS-CY1JF393JY	AA		R	39k 1/16W Metal Oxide
R831	VRD-RA2BE331JY	AA		R	330 1/8W Carbon
R832	VRS-CY1JF822JY	AA		R	8.2k 1/16W Metal Oxide
R833	VRS-CY1JF220JY	AA		R	22 1/16W Metal Oxide
R835	VRS-CY1JF332JY	AA		R	3.3k 1/16W Metal Oxide
R837	VRD-RM2HD151JY	AA		R	150 1/2W Carbon
R838	VRD-RA2BE105JY	AA		R	1M 1/8W Carbon
R839	VRD-RA2BE101JY	AA		R	100 1/8W Carbon
R840	VRS-CY1JF124JY	AA		R	120k 1/16W Metal Oxide
R841	VRD-RA2BE152JY	AA		R	1.5k 1/8W Carbon
R842	VRS-CY1JF562JY	AA		R	5.6k 1/16W Metal Oxide
R843	VRD-RA2BE103JY	AA		R	10k 1/8W Carbon
R844	VCKYCY1CB104KY	AB		R	0.1 16V Ceramic
R1002	VRS-CY1JF183JY	AA		R	18k 1/16W Metal Oxide
R1003	VRS-CY1JF822JY	AA		R	8.2k 1/16W Metal Oxide
R1005	VRD-RA2BE101JY	AA		R	100 1/8W Carbon
R1006	VRS-CY1JF822JY	AA		R	8.2k 1/16W Metal Oxide
R1007	VRS-CY1JF103JY	AA		R	10k 1/16W Metal Oxide
R1008	VRS-CY1JF183JY	AA		R	18k 1/16W Metal Oxide
R1009	VRS-CY1JF103JY	AA		R	10k 1/16W Metal Oxide
R1011	VRD-RA2BE101JY	AA		R	100 1/8W Carbon
R1012	VRD-RA2BE101JY	AA		R	100 1/8W Carbon
R1013	VRD-RA2BE391JY	AA		R	390 1/8W Carbon
R1024	VRS-CY1JF101JY	AA		R	100 1/16W Metal Oxide
R1027	VRS-CY1JF104JY	AA		R	100k 1/16W Metal Oxide
R1031	VRD-RA2BE101JY	AA		R	100 1/8W Carbon
R1032	VRS-CY1JF332JY	AA		R	3.3k 1/16W Metal Oxide
R1033	VRS-CY1JF472JY	AA		R	4.7k 1/16W Metal Oxide
R1037	VRS-CY1JF103JY	AA		R	10k 1/16W Metal Oxide
R1038	VRS-CY1JF562JY	AA		R	5.6k 1/16W Metal Oxide
R1039	VRS-CY1JF102JY	AA		R	1k 1/16W Metal Oxide
R1041	VRS-CY1JF102JY	AA		R	1k 1/16W Metal Oxide
R1042	VRD-RA2BE101JY	AA		R	100 1/8W Carbon
R1043	VRS-CY1JF104JY	AA		R	100k 1/16W Metal Oxide
R1044	VRS-CY1JF101JY	AA		R	100 1/16W Metal Oxide
R1045	VRD-RA2BE101JY	AA		R	100 1/8W Carbon
R1046	VRS-CY1JF101JY	AA		R	100 1/16W Metal Oxide
R1047	VRS-CY1JF183JY	AA		R	18k 1/16W Metal Oxide
R1048	VRS-CY1JF101JY	AA		R	100 1/16W Metal Oxide
R1049	VRS-CY1JF183JY	AA		R	18k 1/16W Metal Oxide
R1050	VRD-RA2BE103JY	AA		R	10k 1/8W Carbon
R1051	VRD-RA2BE104JY	AA		R	100k 1/8W Carbon
R1054	VRD-RA2BE101JY	AA		R	100 1/8W Carbon
R1055	VRD-RA2BE332JY	AA		R	3.3k 1/8W Carbon
R1056	VRS-CY1JF332JY	AA		R	3.3k 1/16W Metal Oxide
R1057	VRS-CY1JF101JY	AA		R	100 1/16W Metal Oxide
R1061	VRS-CY1JF102JY	AA		R	1k 1/16W Metal Oxide
R1063	VRS-CY1JF103JY	AA		R	10k 1/16W Metal Oxide
R1064	VRS-CY1JF103JY	AA		R	10k 1/16W Metal Oxide
R1065	VRS-CY1JF103JY	AA		R	10k 1/16W Metal Oxide
R1066	VRS-CY1JF102JY	AA		R	1k 1/16W Metal Oxide
R1072	VRS-CY1JF221JY	AA		R	220 1/16W Metal Oxide
R1073	VRD-RA2BE101JY	AA		R	100 1/8W Carbon
R1074	VRS-CY1JF332JY	AA		R	3.3k 1/16W Metal Oxide
R1077	VRS-CY1JF472JY	AA		R	4.7k 1/16W Metal Oxide
R1078	VRS-CY1JF332JY	AA		R	3.3k 1/16W Metal Oxide
R1079	VRS-CY1JF332JY	AA		R	3.3k 1/16W Metal Oxide
R1087	VRS-CY1JF391JY	AA		R	390 1/16W Metal Oxide
R1090	VRS-CY1JF101JY	AA		R	100 1/16W Metal Oxide
R1091	VRS-CY1JF103JY	AA		R	10k 1/16W Metal Oxide
R1096	VRS-CY1JF332JY	AA		R	3.3k 1/16W Metal Oxide
R1170	VRD-RA2BE103JY	AA		R	10k 1/8W Carbon
R1171	VRS-CY1JF103JY	AA		R	10k 1/16W Metal Oxide
R1172	VRS-CY1JF222JY	AA		R	2.2k 1/16W Metal Oxide
R1511	VRS-CY1JF000JY	AA		R	0 1/16W Metal Oxide
R1801	VRS-CY1JF222JY	AA		R	2.2k 1/16W Metal Oxide
R1802	VRD-RA2BE124JY	AA		R	120k 1/8W Carbon
R1841	VRD-RA2BE825JY	AA		R	8.2M 1/8W Carbon
R1849	VRS-CY1JF272JY	AA		R	2.7k 1/16W Metal Oxide
R1850	VRS-CY1JF681JY	AA		R	680 1/16W Metal Oxide
R1851	VRS-CY1JF221JY	AA		R	220 1/16W Metal Oxide
R1852	VRS-CY1JF221JY	AA		R	220 1/16W Metal Oxide
R1853	VRS-CY1JF221JY	AA		R	220 1/16W Metal Oxide
R1854	VRS-CY1JF103JY	AA		R	10k 1/16W Metal Oxide
R1855	VRS-CY1JF122JY	AA		R	1.2k 1/16W Metal Oxide
R1856	VRS-CY1JF223JY	AA		R	22k 1/16W Metal Oxide
R1894	VRD-RA2BE223JY	AA		R	22k 1/8W Carbon
R1895	VRS-CY1JF473JY	AA		R	47k 1/16W Metal Oxide
R1896	VRS-CY1JF473JY	AA		R	47k 1/16W Metal Oxide
S701	QSW-P0612CEZZ	AG		R	Switch, POWER
S1001	QSW-K0202PEZZ+	AC		R	Switch, CH UP
S1002	QSW-K0202PEZZ+	AC		R	Switch, CH DOWN

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[3] MAIN UNIT					
	S1003	QSW-K0202PEZZ+	AC	R	Switch, VOL UP
	S1004	QSW-K0202PEZZ+	AC	R	Switch, VOL DOWN
	S1005	QSW-K0202PEZZ+	AC	R	Switch, MENU
△	F701	QFS-C3225CEZZ	AC	R	Fuse, 3.15A 250V
	FH701	QFSHD1013CEZZ+	AC	R	Fuse Holder
	FH702	QFSHD1014CEZZ+	AC	R	Fuse Holder
	J402	QJAKEA056WJ04	AB	R	Jack
	J403	QJAKEA056WJ09	AB	R	Jack
	J405	QJAKHA017WJZZ	AD	R	Jack
	P302	QPLGN0461CEZZA	AB	R	Plug, 4Pin (S)
	P305	QPLGNA110WJZZ	AB	R	Plug, 4Pin (HP)
	P601	QPLGN0660CEZZ	AC	R	Plug, 6Pin (F)
	P602	QPLGN0561CEZZA	AB	R	Plug, 5Pin (H)
	P701	QPLGN0260CEZZ	AC	R	Plug, 2Pin (M)
	P702	QPLGN0269GEZZ	AB	R	Plug, 2Pin
	P1001	QPLGN0578GEZZ	AB	R	Plug, 5Pin (K)
	P1002	QPLGN0561CEZZ	AB	R	Plug, 5Pin (BC)
	RMC1001	RRMCUA022WJZZ	AG	R	Remote Receiver
	RDA303	PRDARA172WJFW	AC	R	Heat Sink for IC303
	RDA501	PRDARA120WJFW	AD	R	Heat Sink for IC501
	RDA601	PRDARA167WJFW	AD	R	Heat Sink for IC601
	RDA602	PRDAR0337PEFW	AD	R	Heat Sink for Q602
	RDA701	PRDARA119WJFW	AF	R	Heat Sink for IC701
	NR701	RH-HXA013WJZZ+	AD	R	Thermistor
	TP801	QLUGP0111GEFW	AA	R	Lug
		LHLDP1066PE00	AC	R	Holder
[4] CRT UNIT					
					PWB-B: DUNTKA599WEH8 (21JF2-RU)
					PWB-B: DUNTKA599WEH6 (21JF2-GA)(21JF2-SA)
					PWB-B: DUNTKA599WEK1 (21JF2-SF)
					PWB-B: DUNTKA599WEK2 (21JF2-SS)
	Q853	RH-TX0110BMZZ+	AC	R	TX0110
	Q854	RH-TX0110BMZZ+	AC	R	TX0110
	Q855	RH-TX0110BMZZ+	AC	R	TX0110
	Q894	VS2PA1015Y+-1+	AC	R	2PA1015Y
	D859	VHD1SS119//1Y	AA	R	Diode, 1SS119
	D896	RH-EX0616GEZZY	AA	R	Zener Diode, 5.6V
	D898	VHD1SS119//1Y	AA	R	Diode, 1SS119
	L851	VP-MK820K0000+	AB	R	Peaking 82μH
	C851	VCKYPA1HB561K+	AA	R	560p 50V Ceramic
	C852	VCKYPA1HB391K+	AA	R	390p 50V Ceramic
	C853	VCKYPA1HB271K+	AB	R	270p 50V Ceramic
	C880	RC-KZ0016CEZZ	AC	R	10000p 1.5kV Ceramic
	C893	VCEA0A1CW336M+	AB	R	33 16V Electrolytic
	R849	VRD-RA2BE271JY	AA	R	270 1/8W Carbon
	R850	VRD-RA2BE470JY	AA	R	47 1/8W Carbon
	R851	VRD-RA2BE470JY	AA	R	47 1/8W Carbon
	R852	VRD-RA2BE470JY	AA	R	47 1/8W Carbon
	R854	VRD-RA2BE271JY	AA	R	270 1/8W Carbon
	R855	VRD-RA2BE271JY	AA	R	270 1/8W Carbon
△	R859	VRS-VV3DB153J	AA	R	15k 2W Metal Oxide
△	R861	VRS-VV3DB153J	AA	R	15k 2W Metal Oxide
△	R863	VRS-VV3DB153J	AA	R	15k 2W Metal Oxide
	R864	VRD-RA2BE470JY	AA	R	47 1/8W Carbon
	R876	VRD-RA2BE121JY	AA	R	120 1/8W Carbon
	R877	VRD-RA2BE121JY	AA	R	120 1/8W Carbon
	R878	VRD-RA2BE121JY	AA	R	120 1/8W Carbon
	R880	VRD-RM2HD332JY	AA	R	3.3k 1/2W Carbon
	R881	VRD-RM2HD332JY	AA	R	3.3k 1/2W Carbon
	R882	VRD-RM2HD332JY	AA	R	3.3k 1/2W Carbon
	R889	VRD-RA2BE821JY	AA	R	820 1/8W Carbon
	R891	VRD-RA2BE561JY	AA	R	560 1/8W Carbon
	R892	VRD-RA2BE391JY	AA	R	390 1/8W Carbon
	R894	VRD-RA2BE152JY	AA	R	1.5k 1/8W Carbon
	R895	VRD-RA2BE561JY	AA	R	560 1/8W Carbon
	P860	QPLGN0561CEZZ	AB	R	Plug, 5Pin (H)
	P880	QPLGN0578GEZZ	AB	R	Plug, 5Pin (K)
	SC851	QSOCV0016PEZZ	AF	R	Socket, 12Pin
[5] HEADPHONE UNIT					
					PWB-C: DUNTKD308WEA3
	RJ35	VRS-CY1JF000JY	AA	R	0 1/16W Metal Oxide
	RJ37	VRS-CY1JF000JY	AA	R	0 1/16W Metal Oxide
	RJ38	VRS-CY1JF000JY	AA	R	0 1/16W Metal Oxide
	R370	VRS-CY1JF471JY	AA	R	470 1/16W Metal Oxide
	R371	VRS-CY1JF471JY	AA	R	470 1/16W Metal Oxide
	J351	QJAKJA018WJZZ	AD	R	Jack
	P351	QPLGNA109WJZZ	AB	R	Plug, 4Pin (HP1)


NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[6] MISCELLANEOUS PARTS					
△ ACC701	QACCZA048WJPZ	AG		R	Ac Cord [21JF2-RU/GA/SA/SF]
△ ACC701	QACCA051WJPZ			R	Ac Cord [21JF2-SS]
SP301	VSP9050PB53WA	AH		R	Speaker (L)
SP302	VSP9050PB53WA	AH		R	Speaker (R)
	QCNW-A922WJZZ	AF		R	Connecting Cord
	QCNW-A923WJZZ	AE		R	Connecting Cord
	QCNW-2452PEZZ	AE		R	Connecting Cord
	QCNW-D818WJPZ	AF		R	Connecting Cord

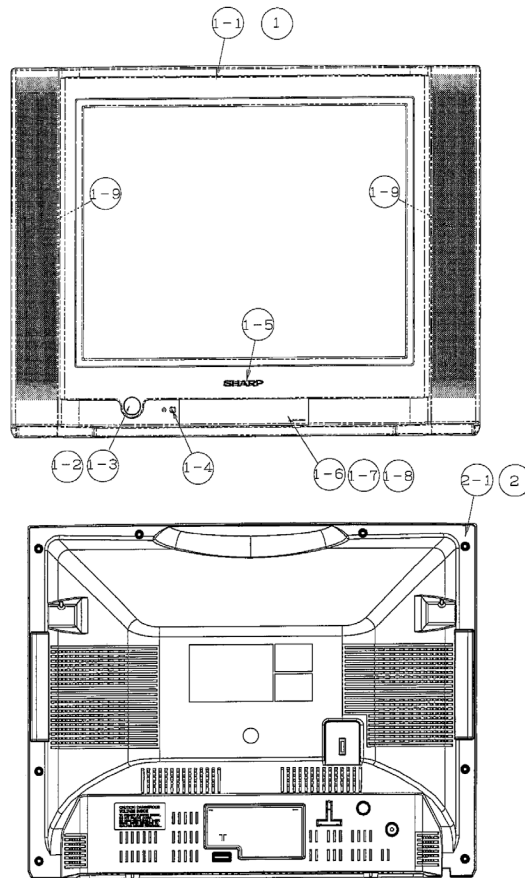[7] CABINET PARTS

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[7] CABINET PARTS					
1	CCABAB102WEV0	BK		R	Front Cabinet Ass'y [21JF2-RU]
1	CCABAB119WEV0			R	Front Cabinet Ass'y [21JF2-GA]
1	CCABAB114WEV0			R	Front Cabinet Ass'y [21JF2-SA]
1	CCABAB222WEV0			R	Front Cabinet Ass'y [21JF2-SF]
1	CCABAB224WEV0			R	Front Cabinet Ass'y [21JF2-SS]
1-1	Not Available	-		-	Front Cabinet
1-2	JBTA-A485WJSA	AF		R	Power Button
1-3	MSPRC0005PEFW	AB		R	Power Button Spring
1-4	GCOVAB345WJSA	AD		R	R/C Cover
1-5	HBDGB3155CESA	AF		R	SHARP Badge
1-6	GDORFA158WJSA			R	Door [21JF2-RU/SA]
1-6	GDORFA158WJSB			R	Door [21JF2-GA]
1-6	GDORFA158WJSC			R	Door [21JF2-SF/SS]
1-7	MSPRPA031WJFW	AB		R	Door Spring
1-8	HiNDPB393WJZZ	AB		R	Indication Plate [21JF2-RU/SA/SF/SS]
1-8	HiNDPB469WJZZ			R	Indication Plate [21JF2-GA]
1-9	LHLDZA651WJZZ	AD		R	Speaker Holder
2	CCABBA631WEV0	BE		R	Rear Cabinet Ass'y [21JF2-RU/SA/SS]
2	CCABBA631WEV1			R	Rear Cabinet Ass'y [21JF2-GA]
2	CCABBA624WEV0			R	Rear Cabinet Ass'y [21JF2-SF]
2-1	Not Available	-		-	Rear Cabinet

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[8] SUPPLIED ACCESSORIES					
X1	RRMCGA307WJSB	AN		R	Infrared Remote Control Unit [21JF2-RU/SA/SF/SS]
X1	RRMCGA307WJSA	AN		R	Infrared Remote Control Unit [21JF2-GA]
X2	TiNS-B981WJZZ	AM		R	Operation Manual [21JF2-RU]
X2	TiNS-B996WJZZ			R	Operation Manual [21JF2-GA/SA]
X3	TiNS-C042WJZZ			R	Operation Manual [21JF2-GA/SA]
X3	TiNS-C140WJZZ			R	Operation Manual [21JF2-SF/SS]
X4	TiNS-C043WJZZ			R	Operation Manual [21JF2-GA/SA]
X4	TiNS-C141WJZZ			R	Operation Manual [21JF2-SF/SS]
X5	TGAN-A101WJZZ	AC		R	Guarantee Card [21JF2-RU]
X6	TCAUAA005WJZZ	AA		R	Caution Card

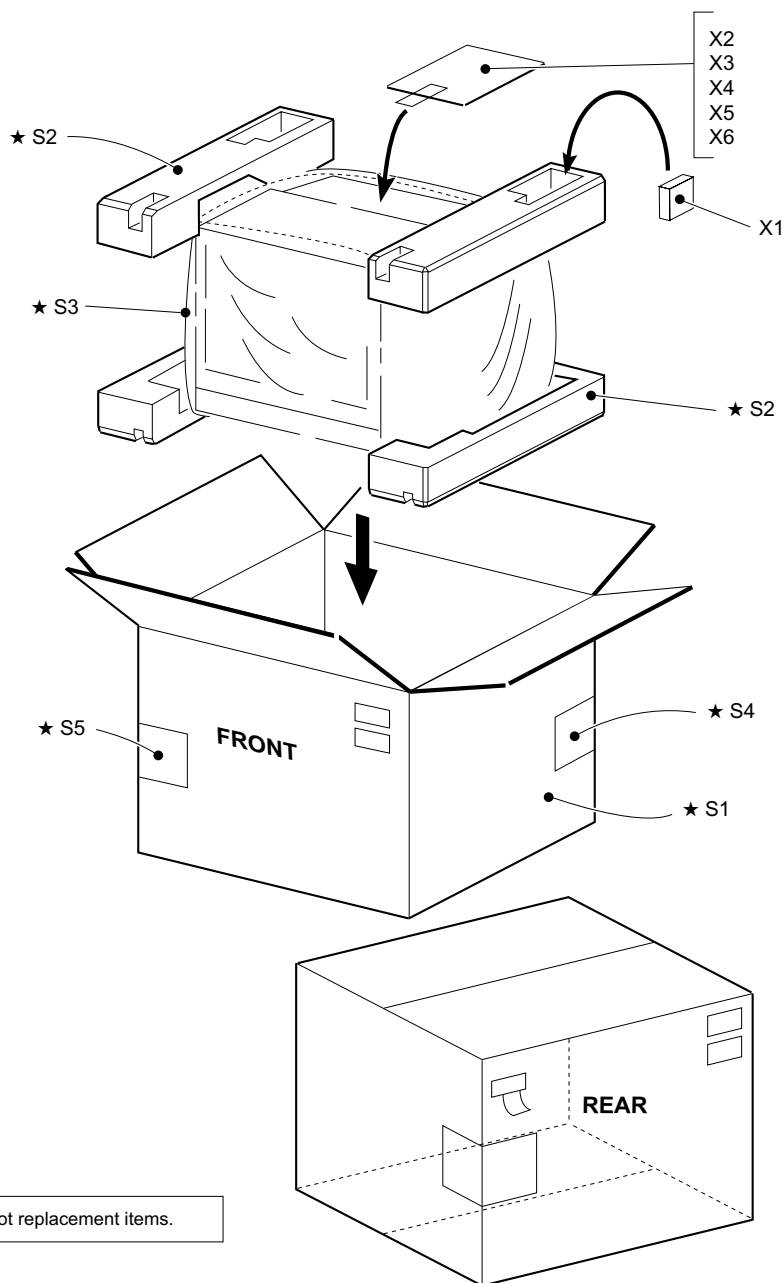[9] PACKING PARTS



NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[9] PACKING PARTS					
					(NOT REPLACEMENT ITEM)
S1	SPAKCC260WJZZ	-		-	Packing Case [21JF2-RU]
S1	SPAKCC112WJZZ	-		-	Packing Case [21JF2-GA/SA/SF/SS]
S2	SPAKXA822WJZZ	-		-	Packing Foam (Top/Bottom)
S3	SPAKPA771WJZZ	-		-	Wrapping Paper [21JF2-RU]
S3	SSAKH0016PEZZ	-		-	Wrapping Paper [21JF2-GA/SA/SF/SS]
S4	TLABMB751WJZZ	-		-	Model Label [21JF2-RU]
S4	TLABMB848WJZZ	-		-	Model Label [21JF2-GA]
S4	TLABMB757WJZZ	-		-	Model Label [21JF2-SA]
S4	TLABMB933WJZZ	-		-	Model Label [21JF2-SF]
S4	TLABMB935WJZZ	-		-	Model Label [21JF2-SS]
S5	TLABZB001WJZZ	-		-	Packing Label [21JF2-RU]
S5	TLABZB037WJZZ	-		-	Packing Label [21JF2-GA]
S5	TLABZB017WJZZ	-		-	Packing Label [21JF2-SA]
S5	TLABZB086WJZZ	-		-	Packing Label [21JF2-SF]
S5	TLABZB088WJZZ	-		-	Packing Label [21JF2-SS]

SHARP

COPYRIGHT © 2005 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted in
any form or by any means, electronic, mechanical,
photocopying, recording, or otherwise, without
prior written permission of the publisher.

TQ1948-S

Dec. 2005 Printed in Japan

Design and Production Information	
Design	: SEM
Production	: SREC

MY. KD

SHARP CORPORATION

AV Systems Group

CS Promotion Center

Yaita, Tochigi 329-2193, Japan