



7. Schematic Diagram

7-1 Circuit Description


7-1-1 Overall Block Description

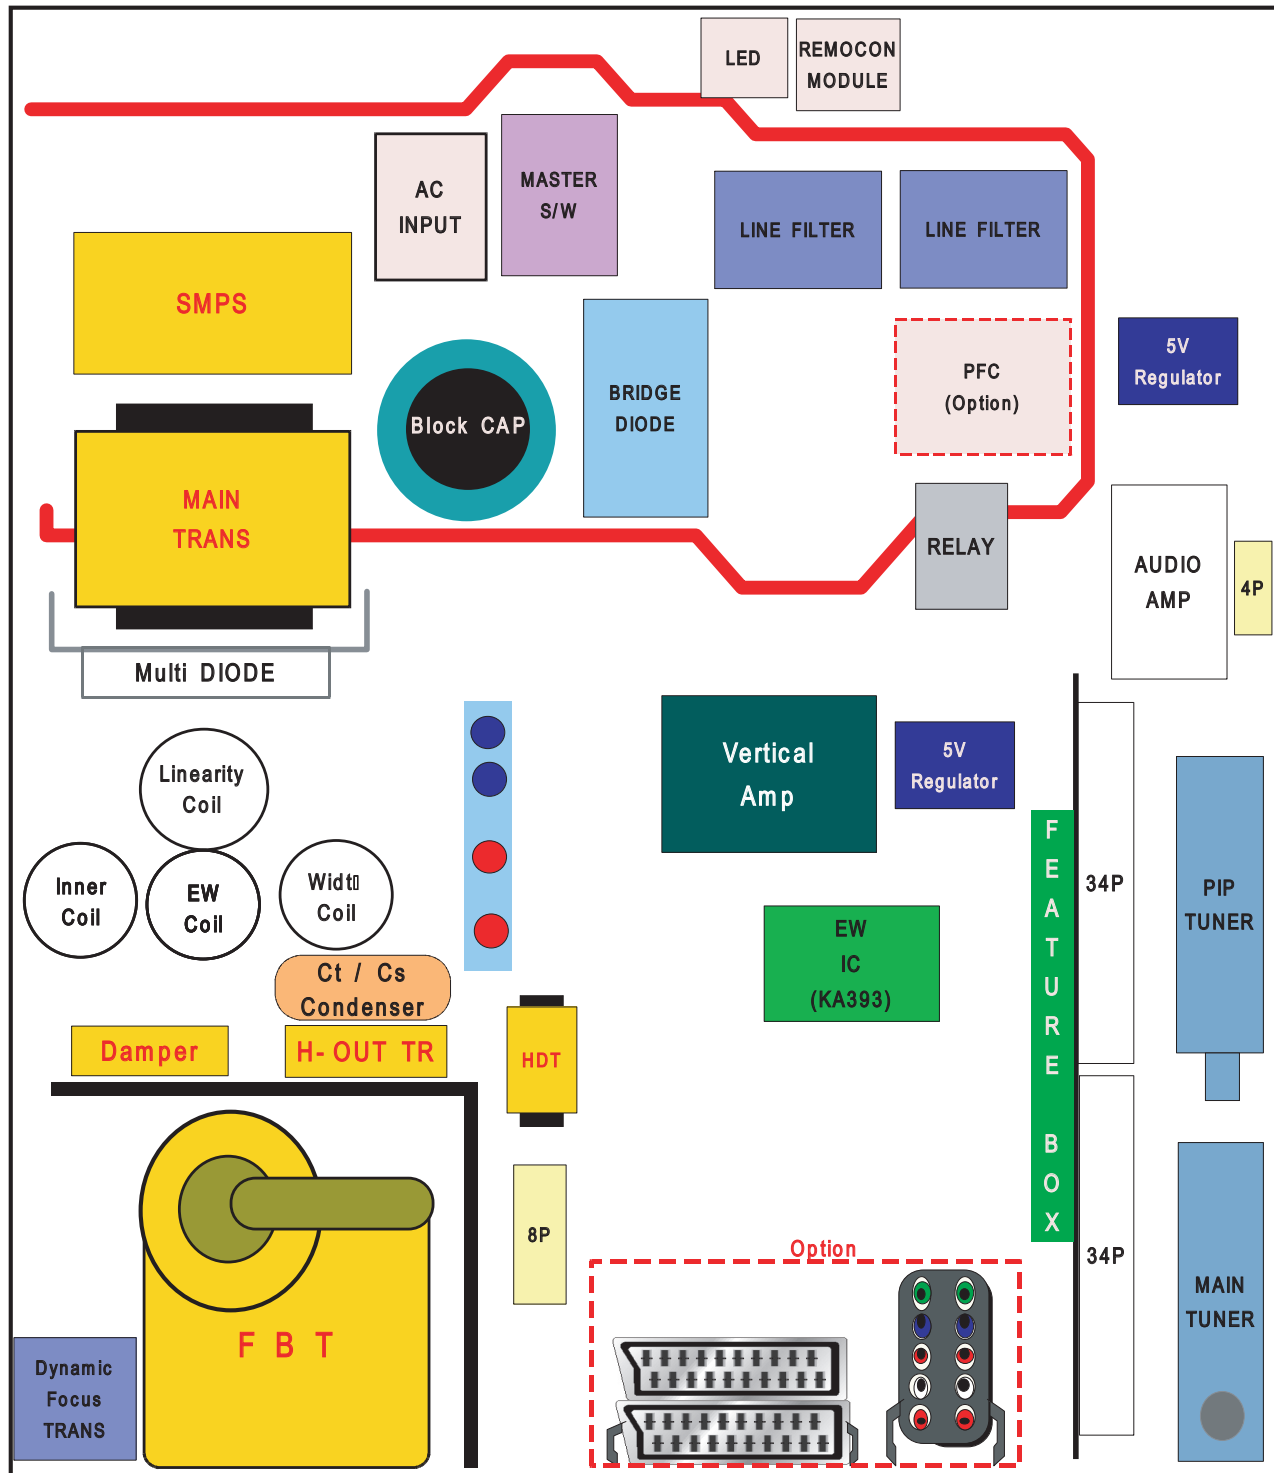

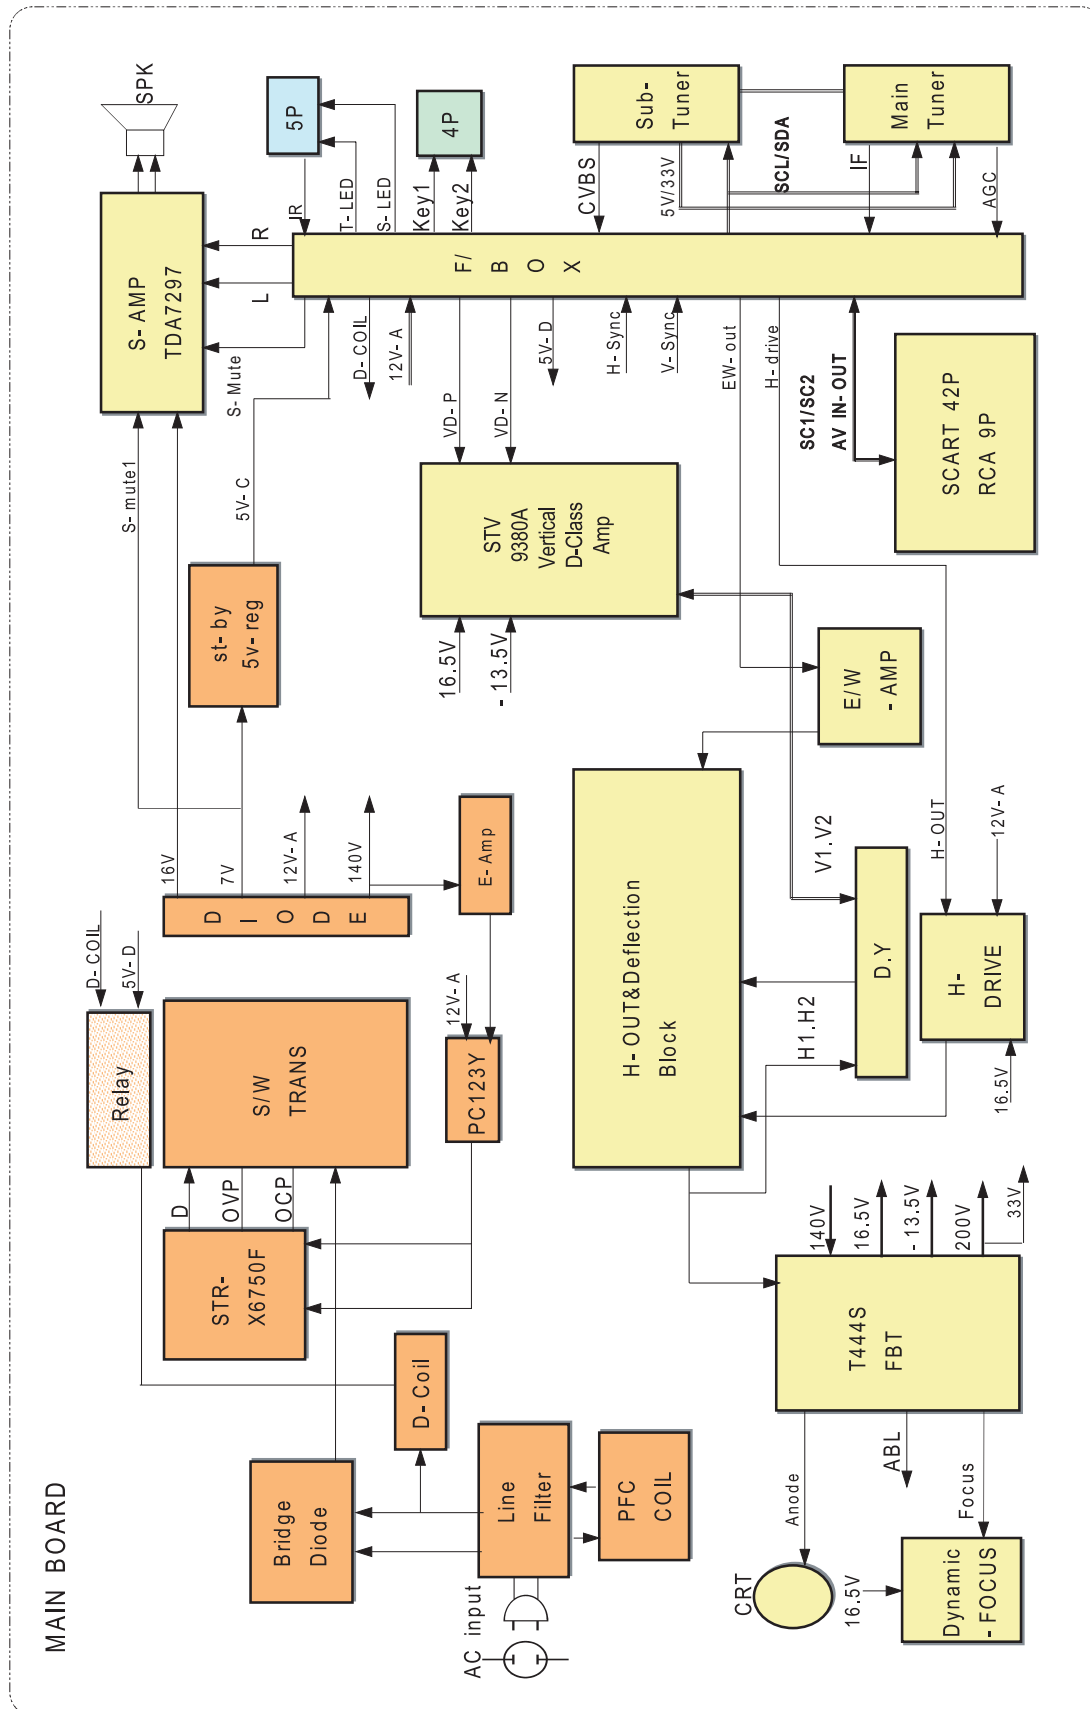


7-1-2 Partial Block Diagram


1. F-Box Block Diagram

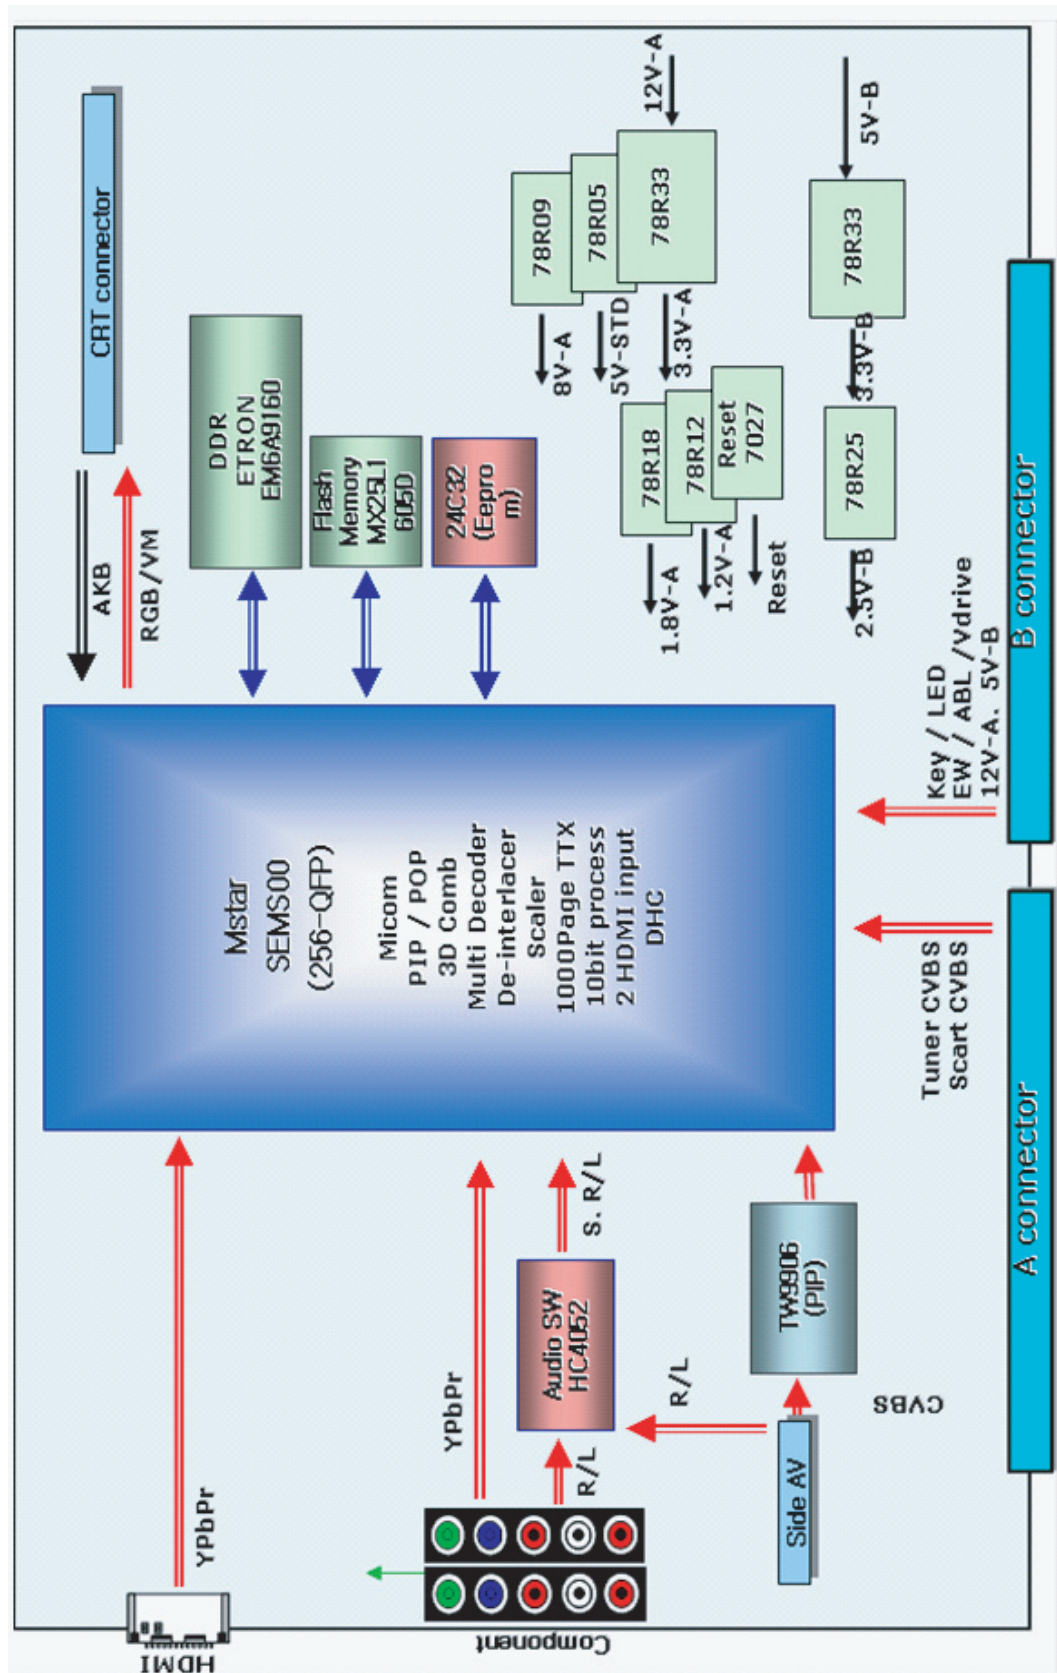


2. Sound Block Diagram

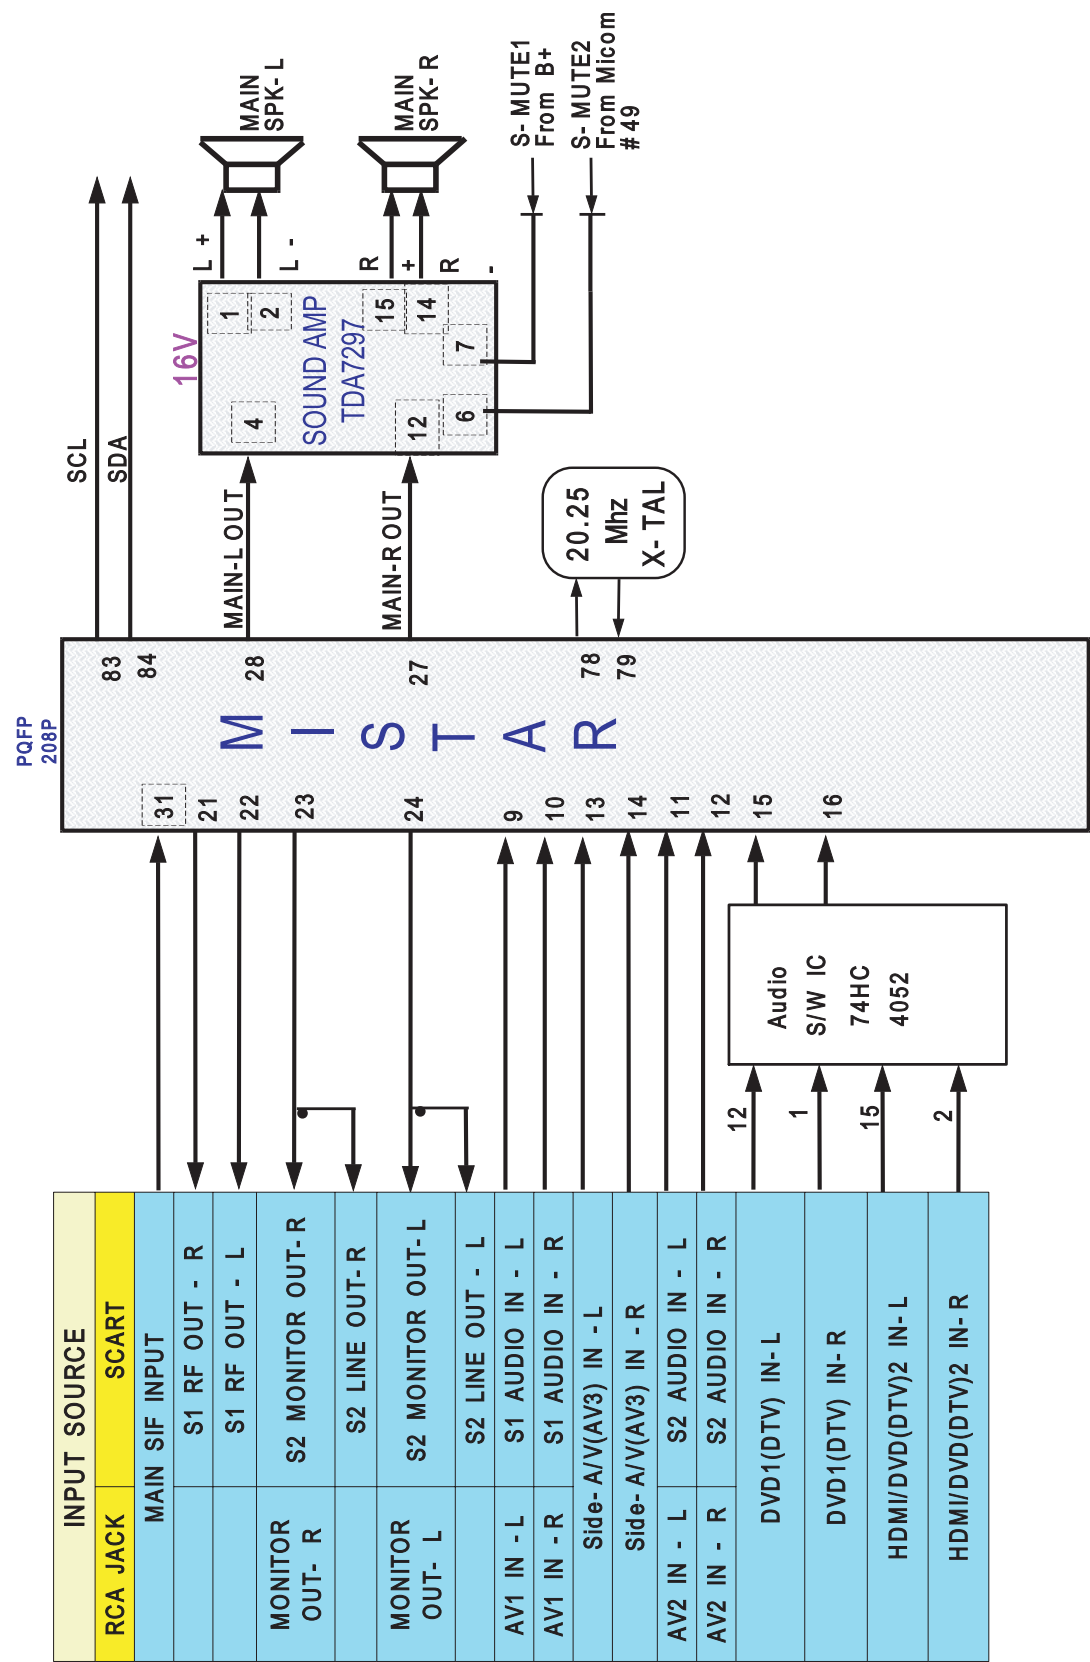

3. CRT Diagram

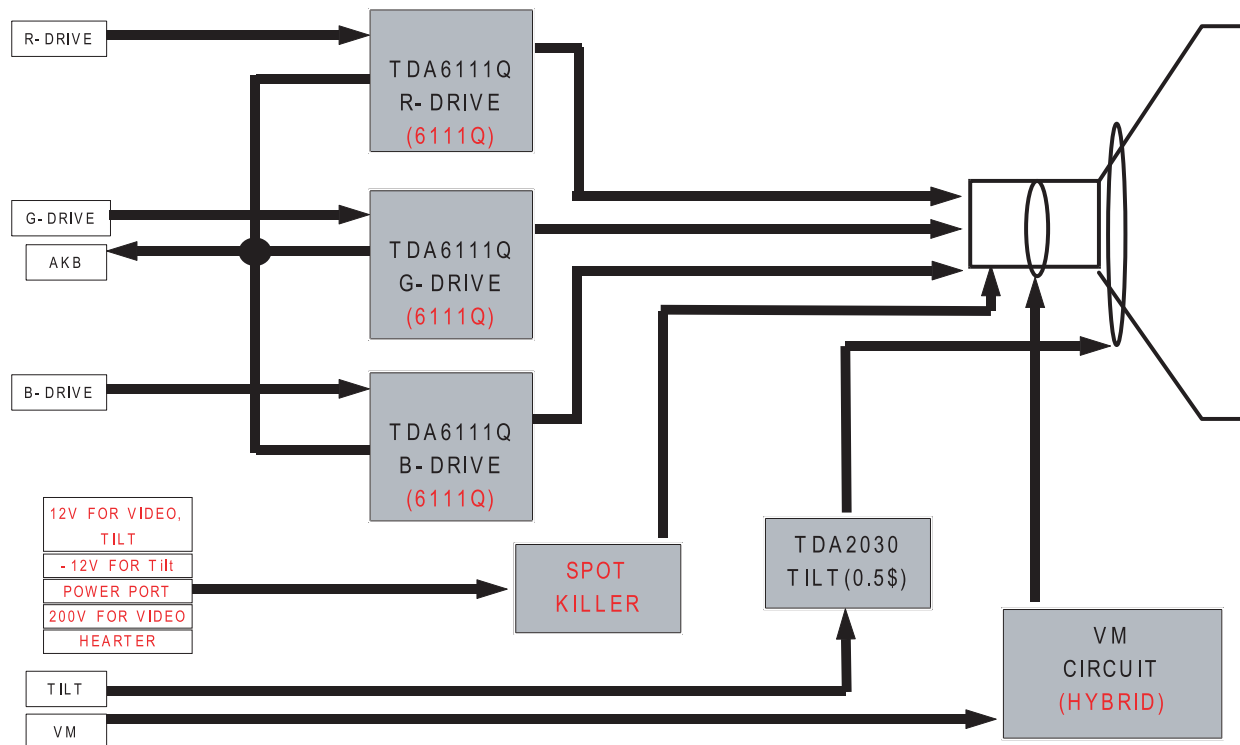

7-1-3 Power Current Block Diagram

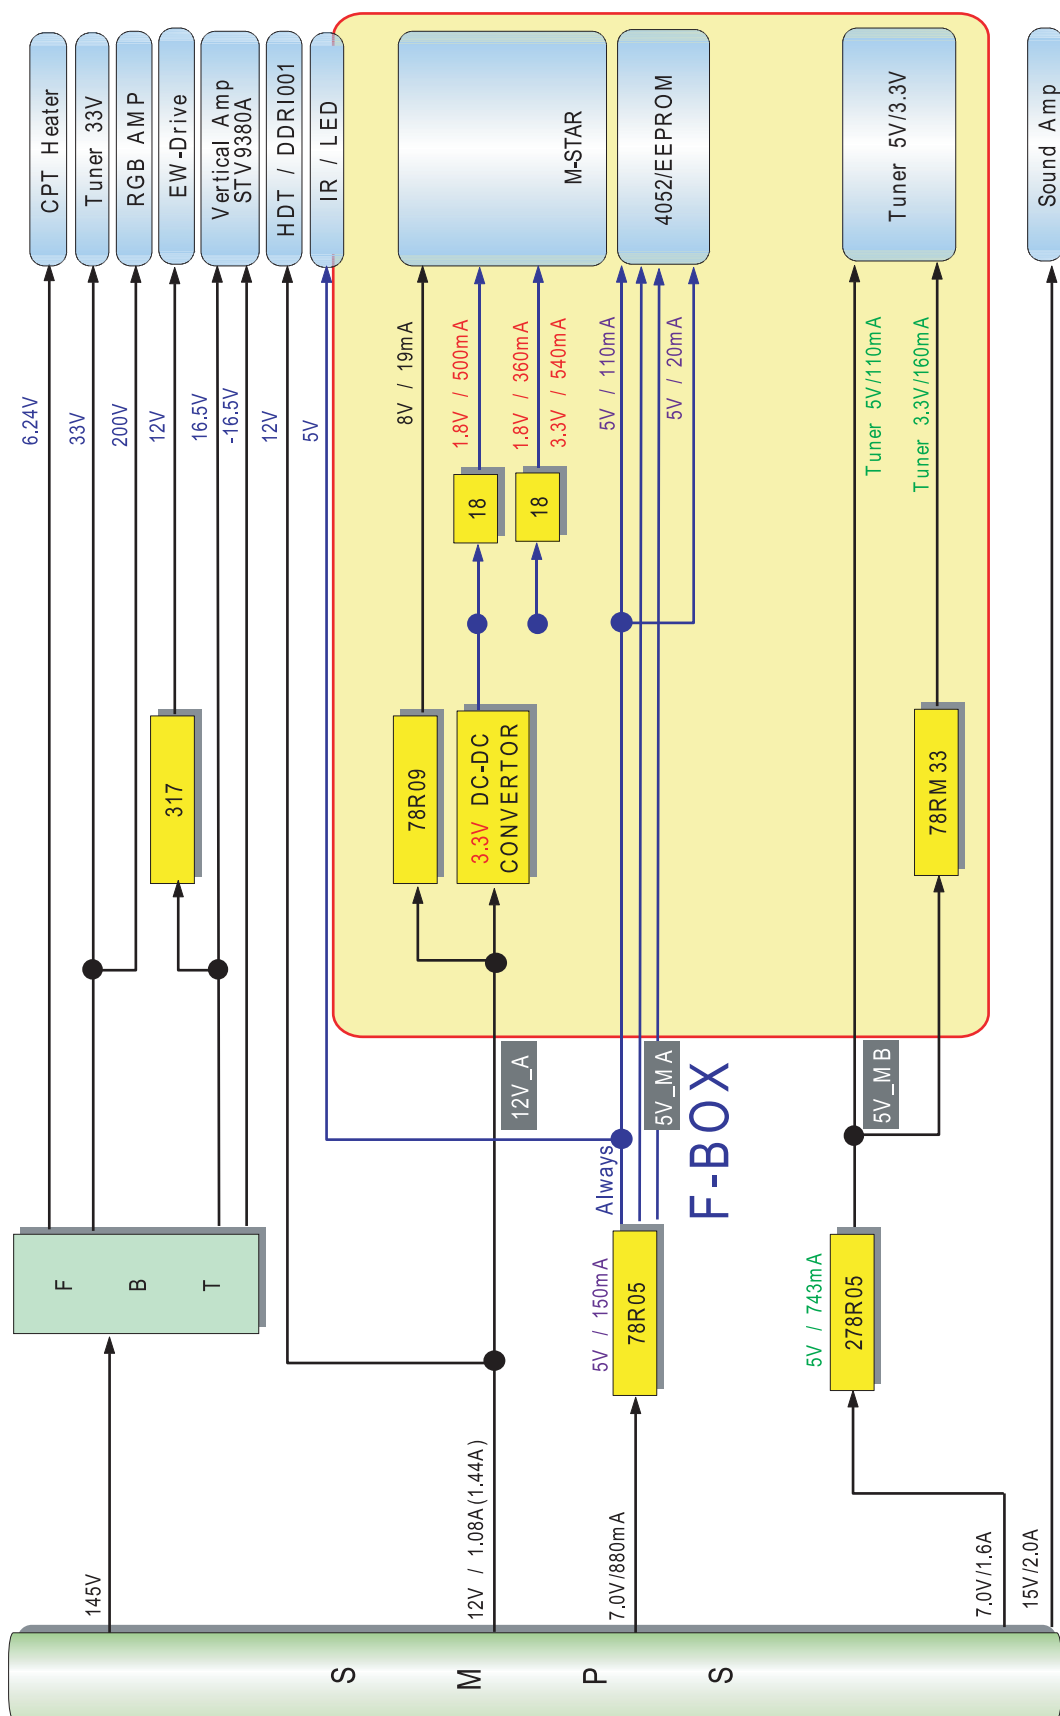


7-2 Schematic Diagram

7-2-1 Main 1

This Document can not be used without Samsung's authorization.


	Power
	Video
	Audio

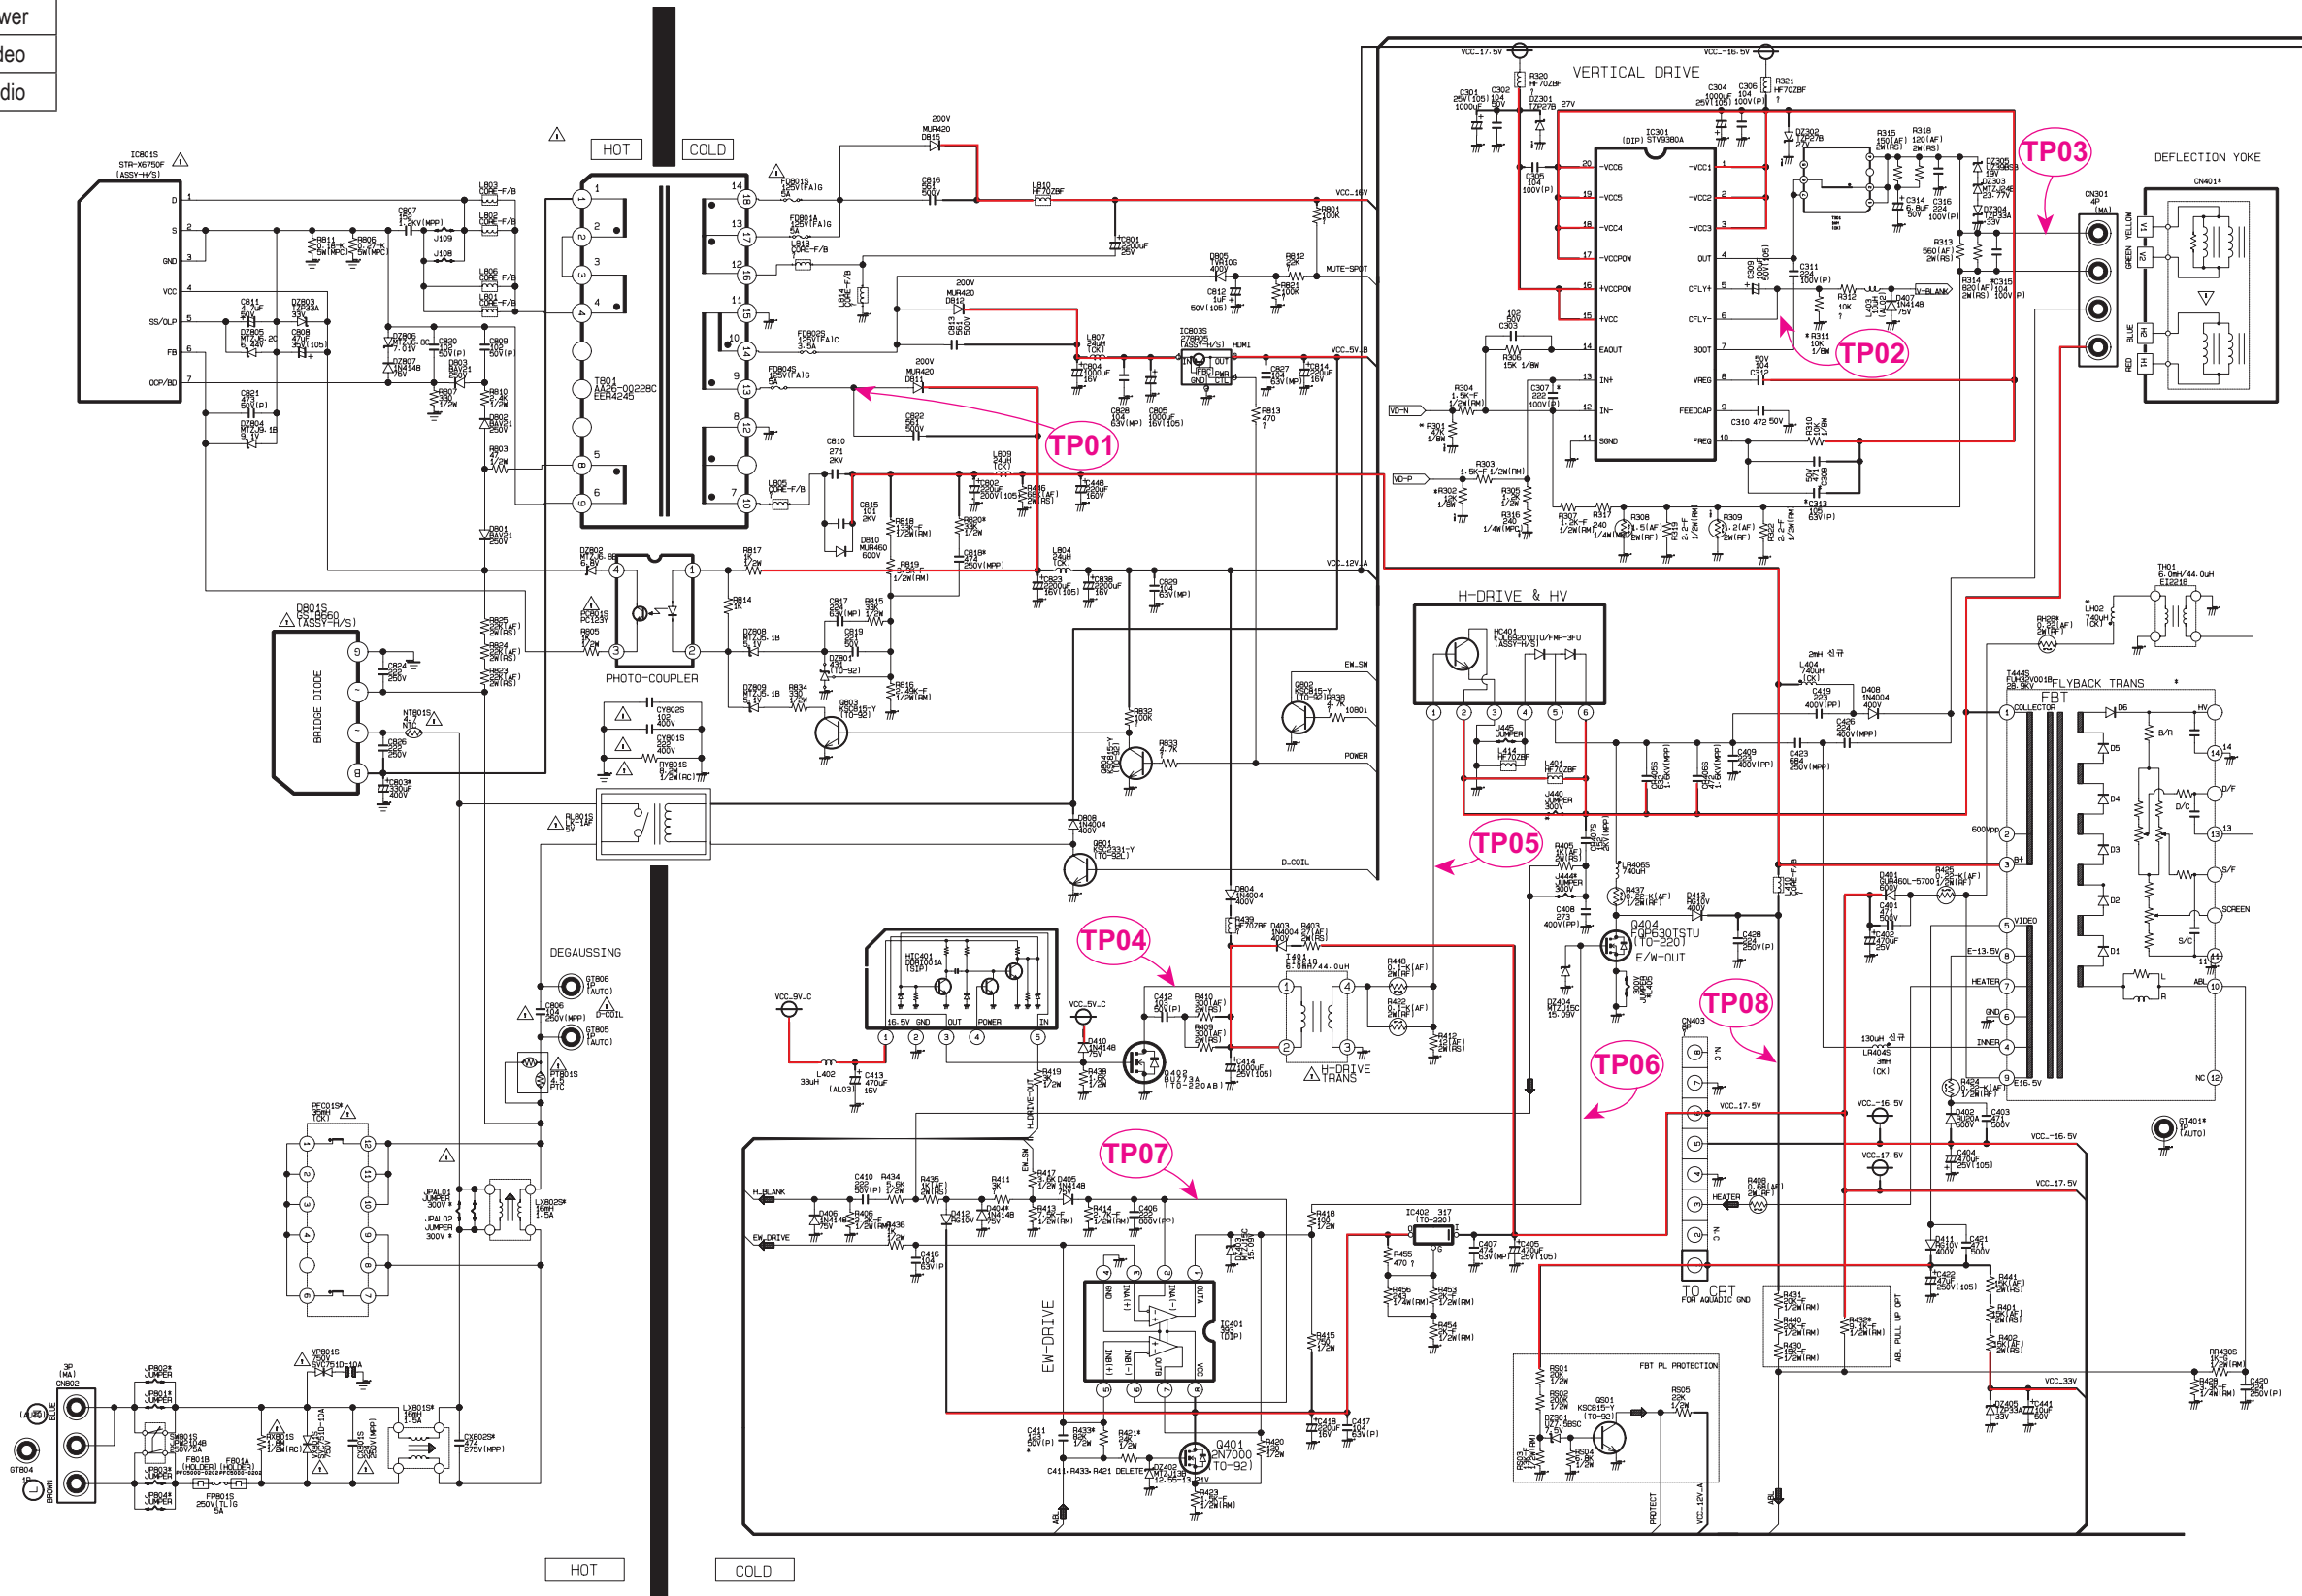


7-2-2 Main 2


This Document can not be used without Samsung's authorization.

—	Power
—	Video
—	Audio

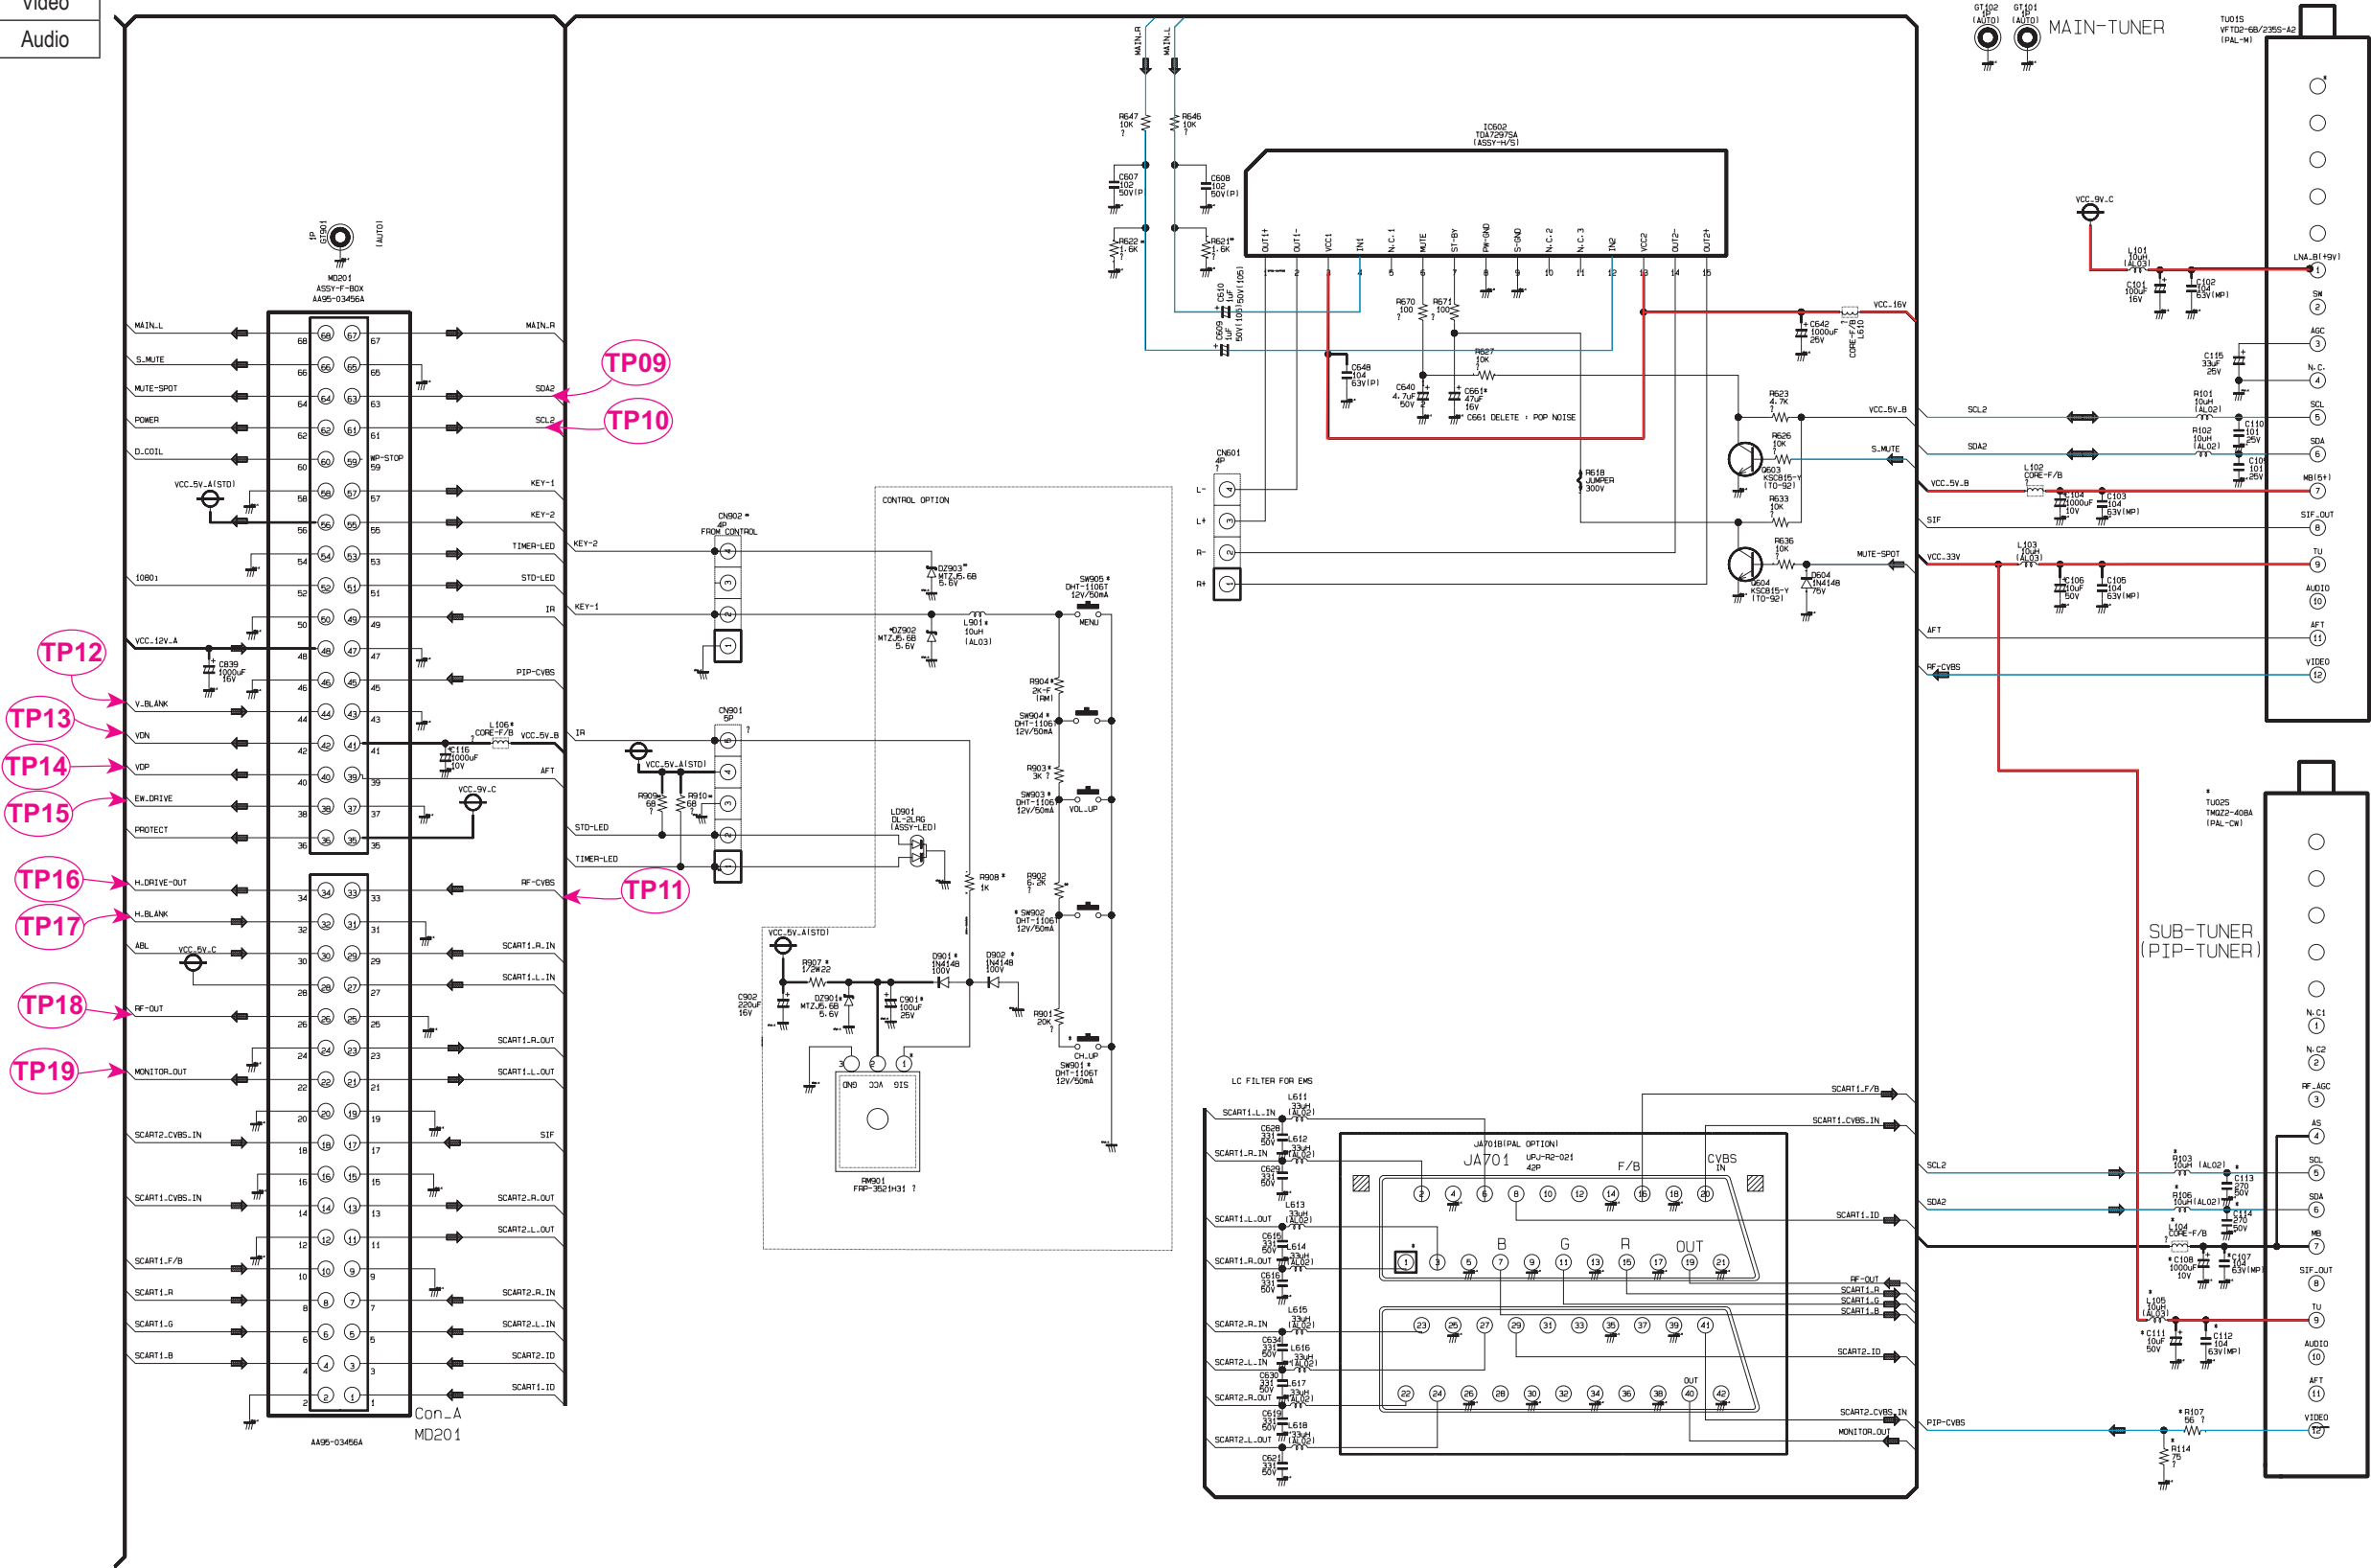


WAVEFORM

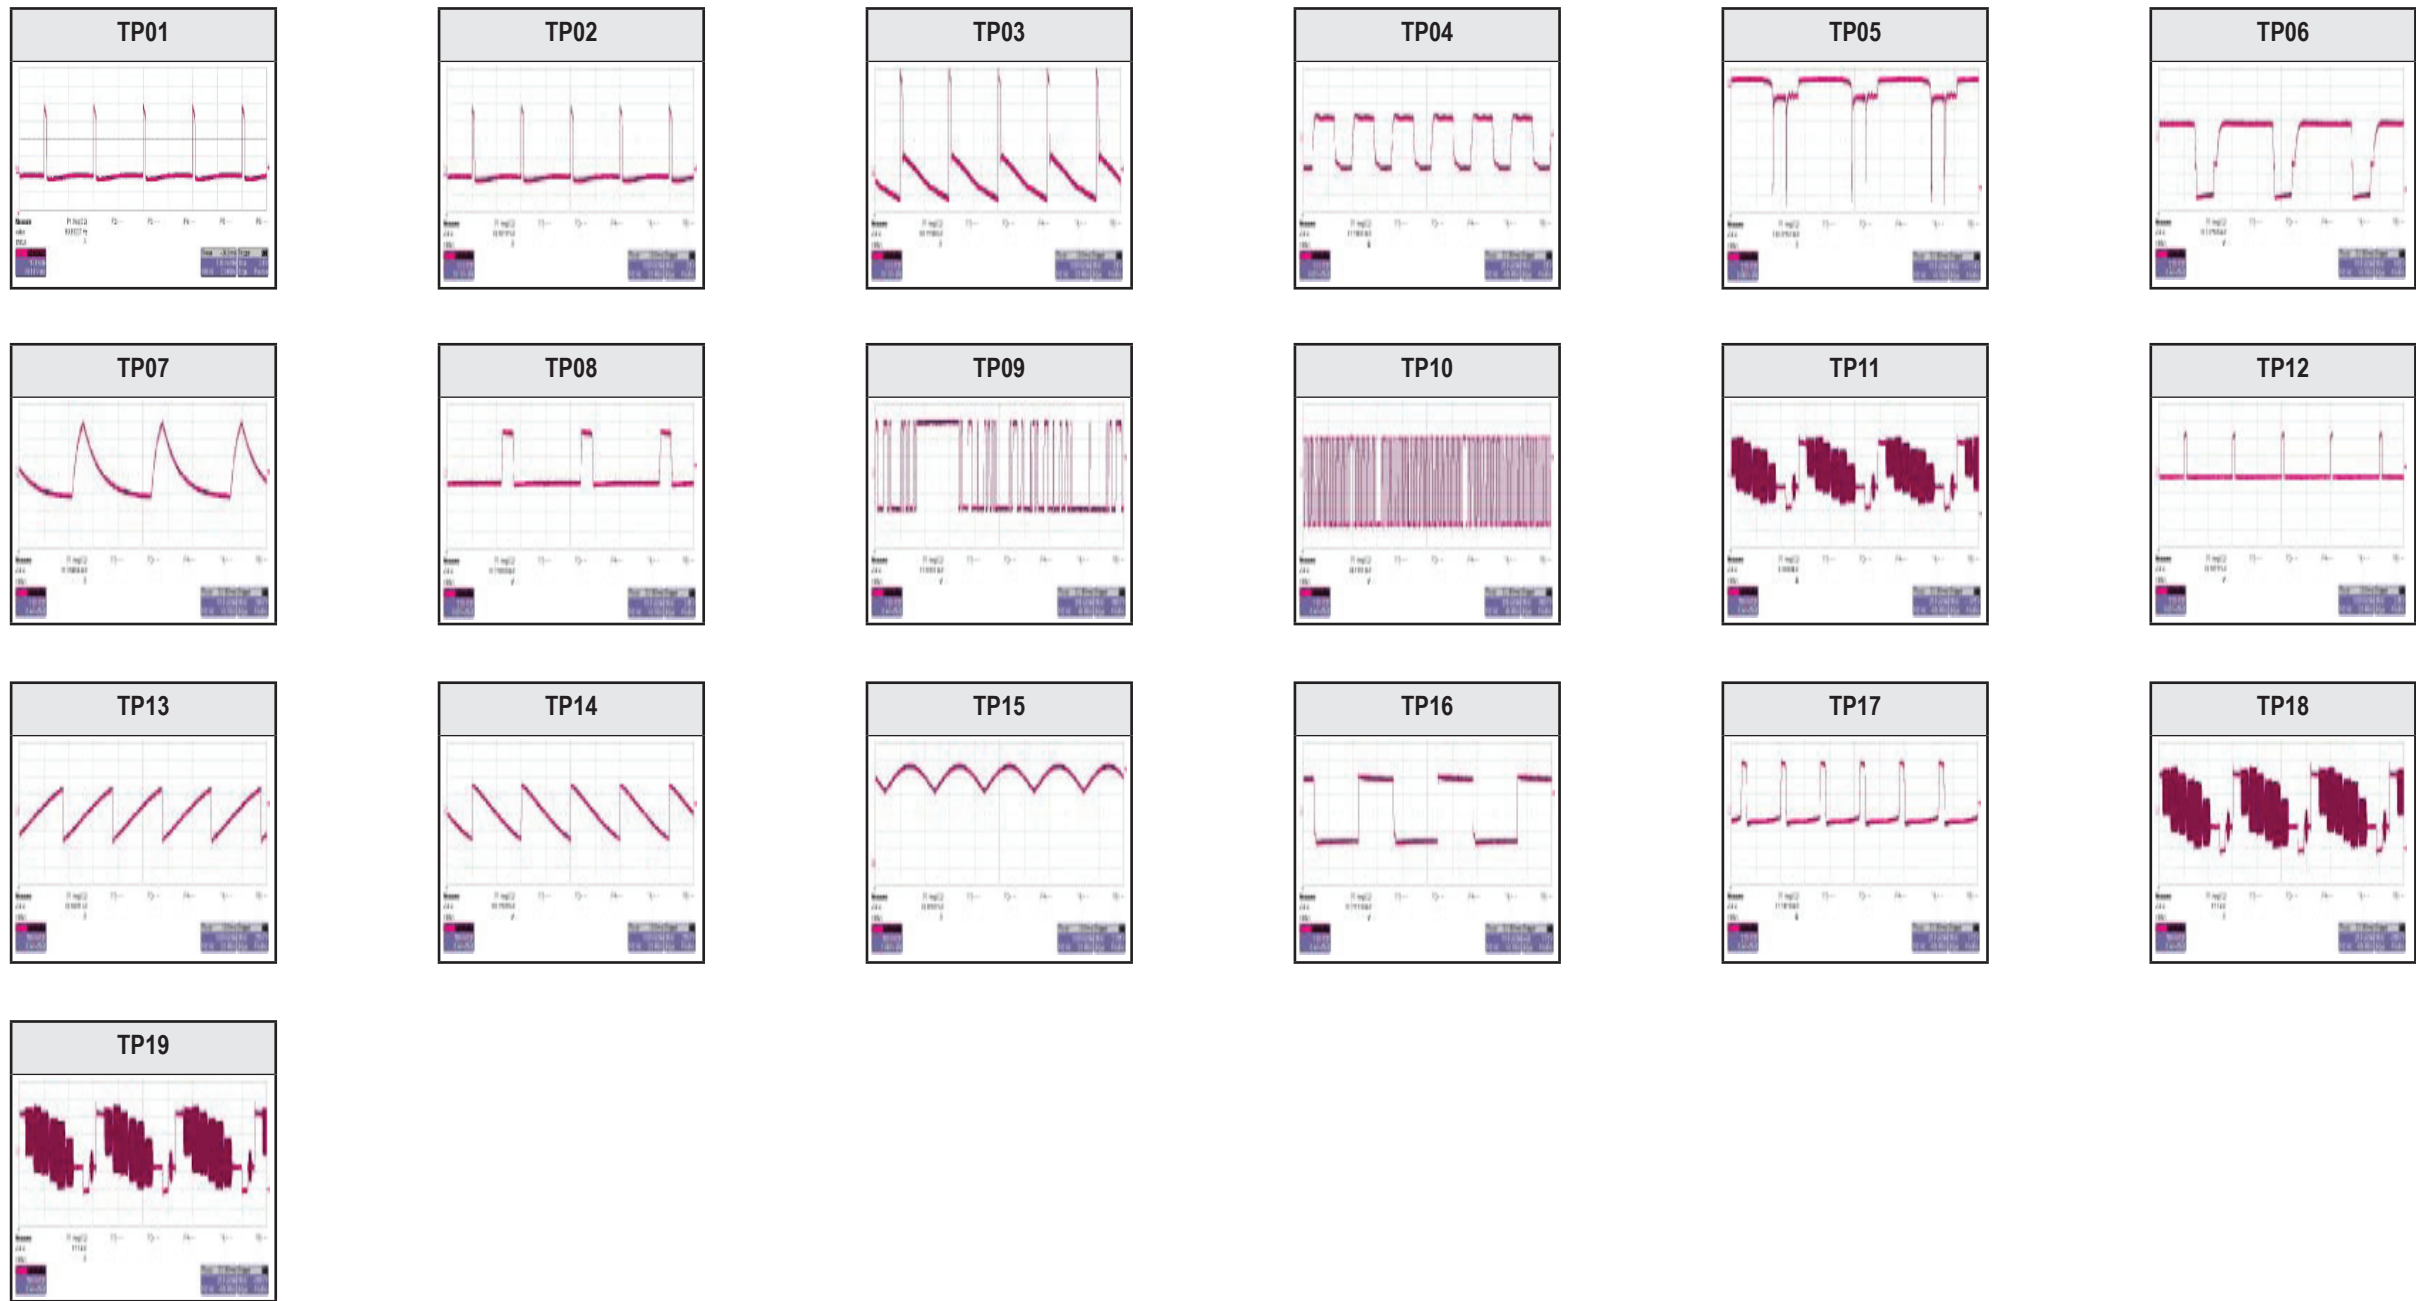

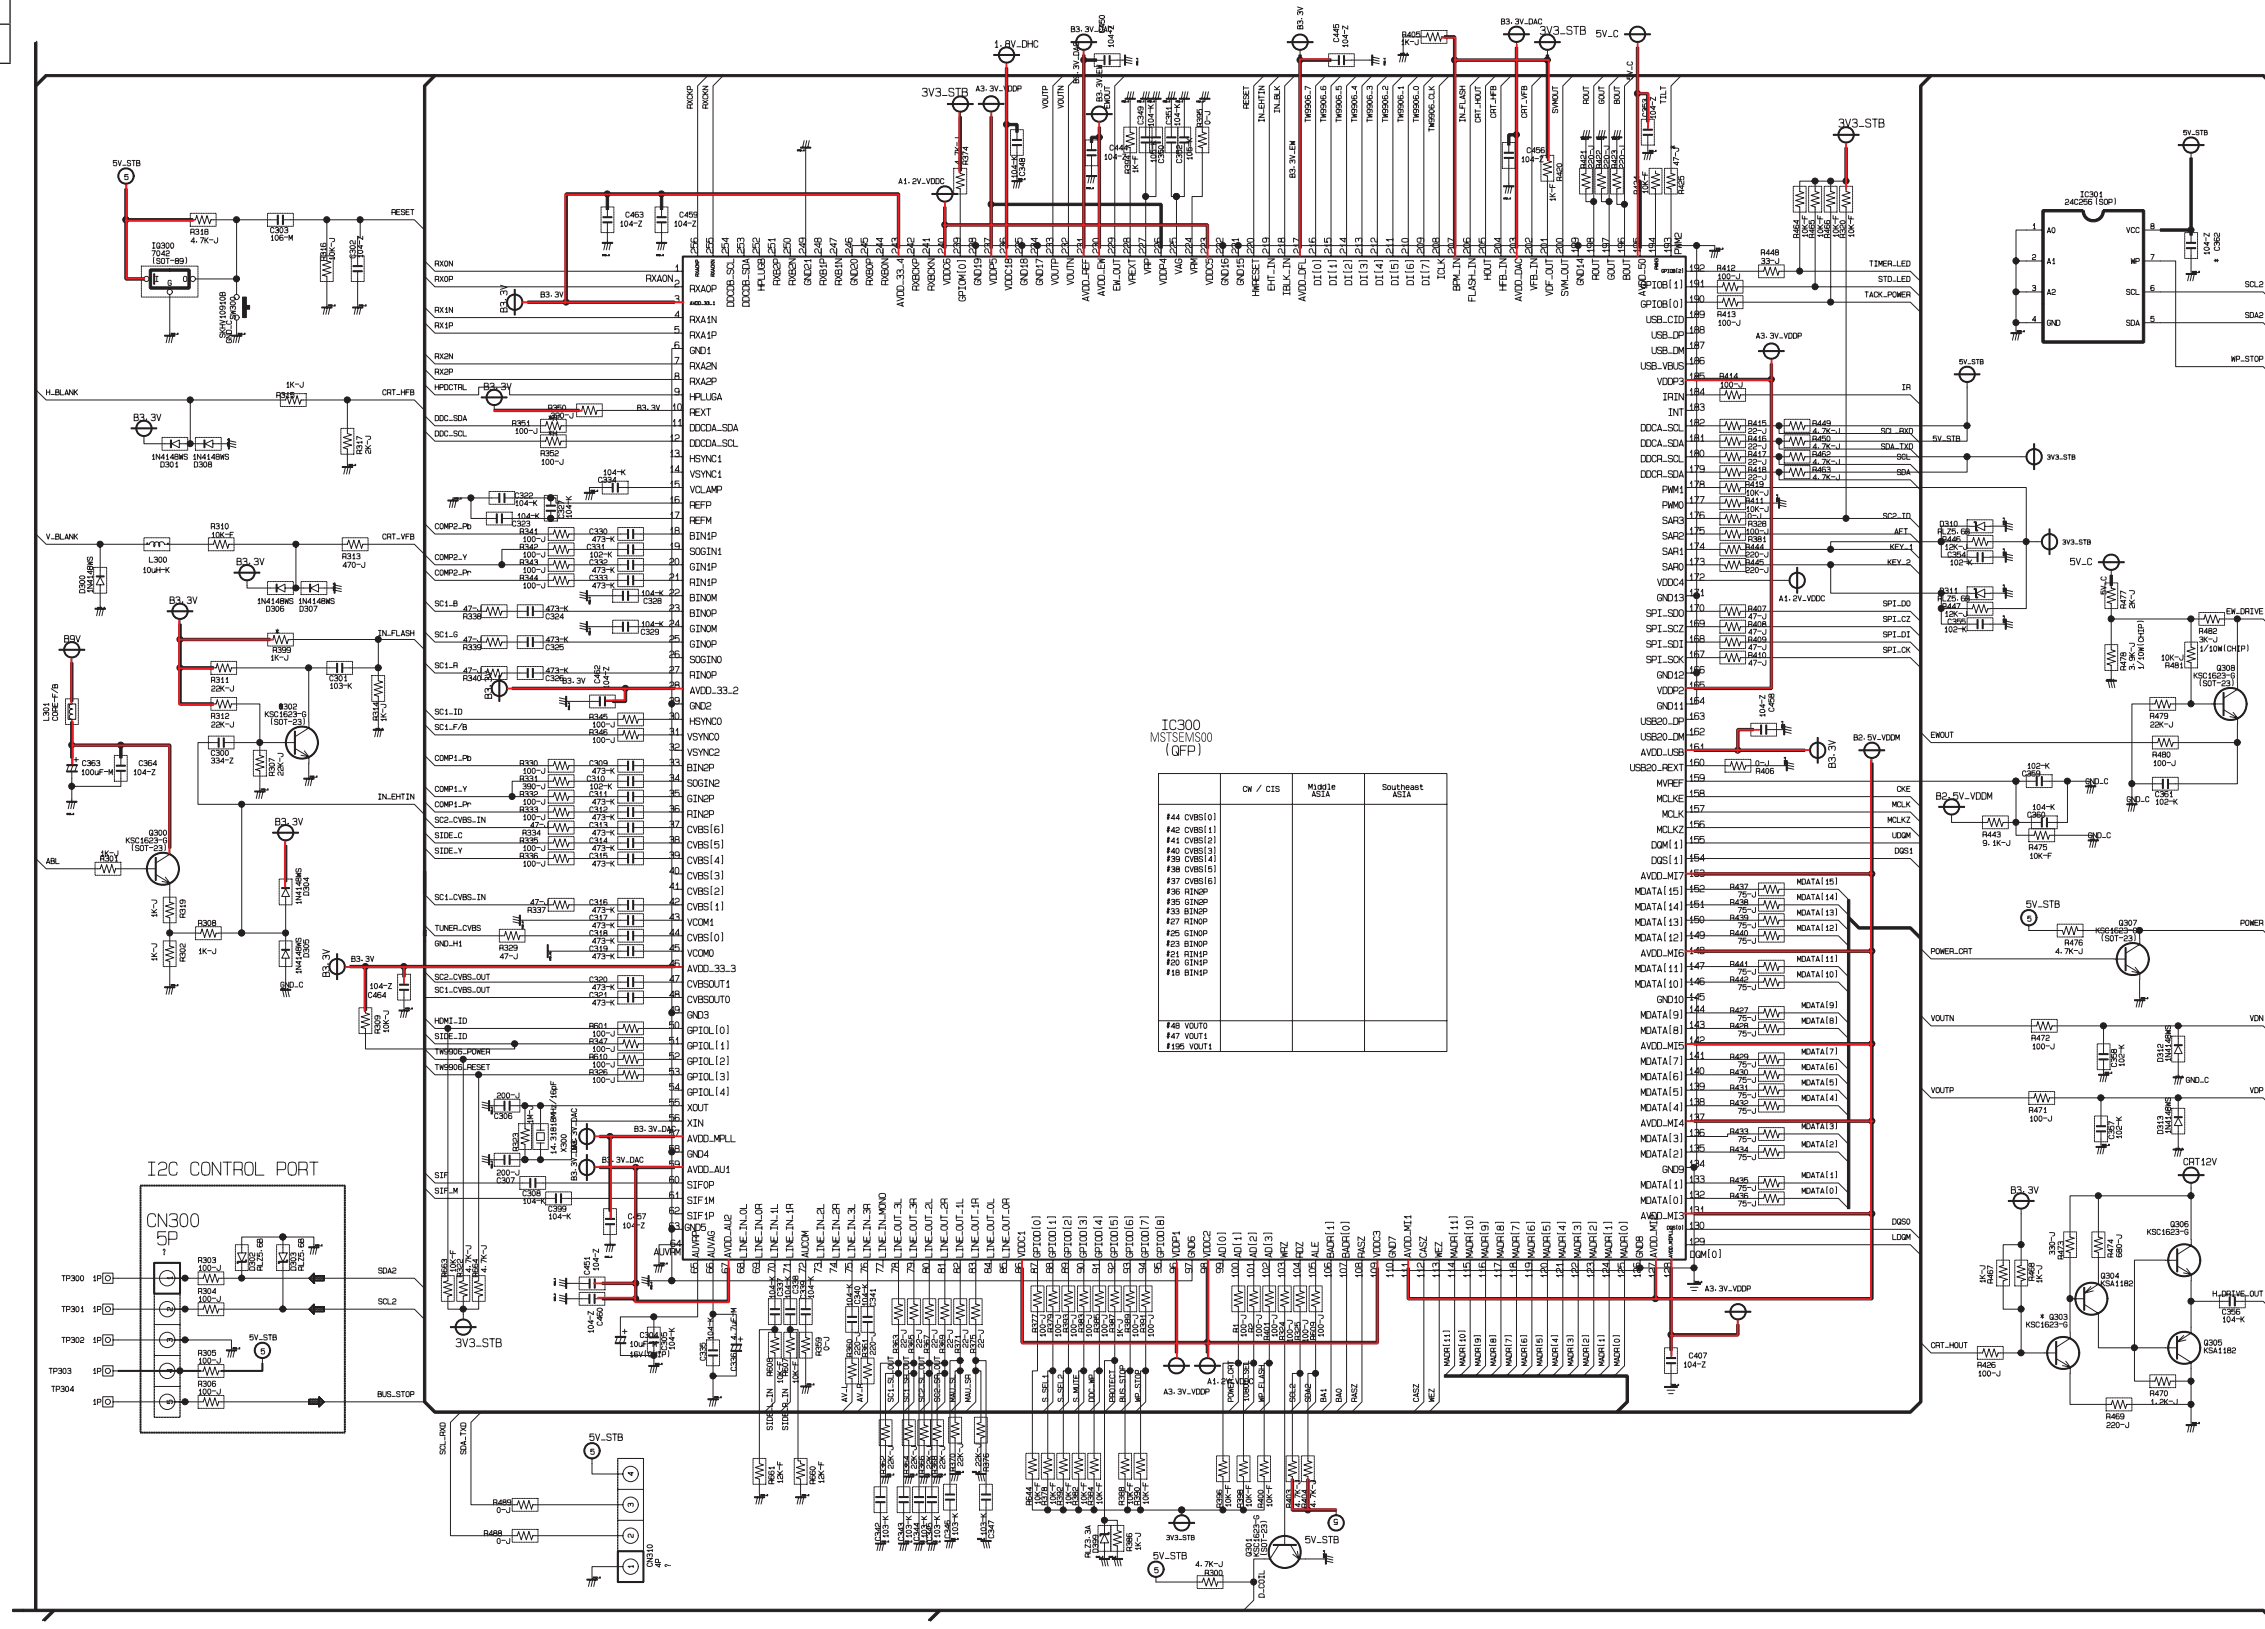




	Power
	Video
	Audio

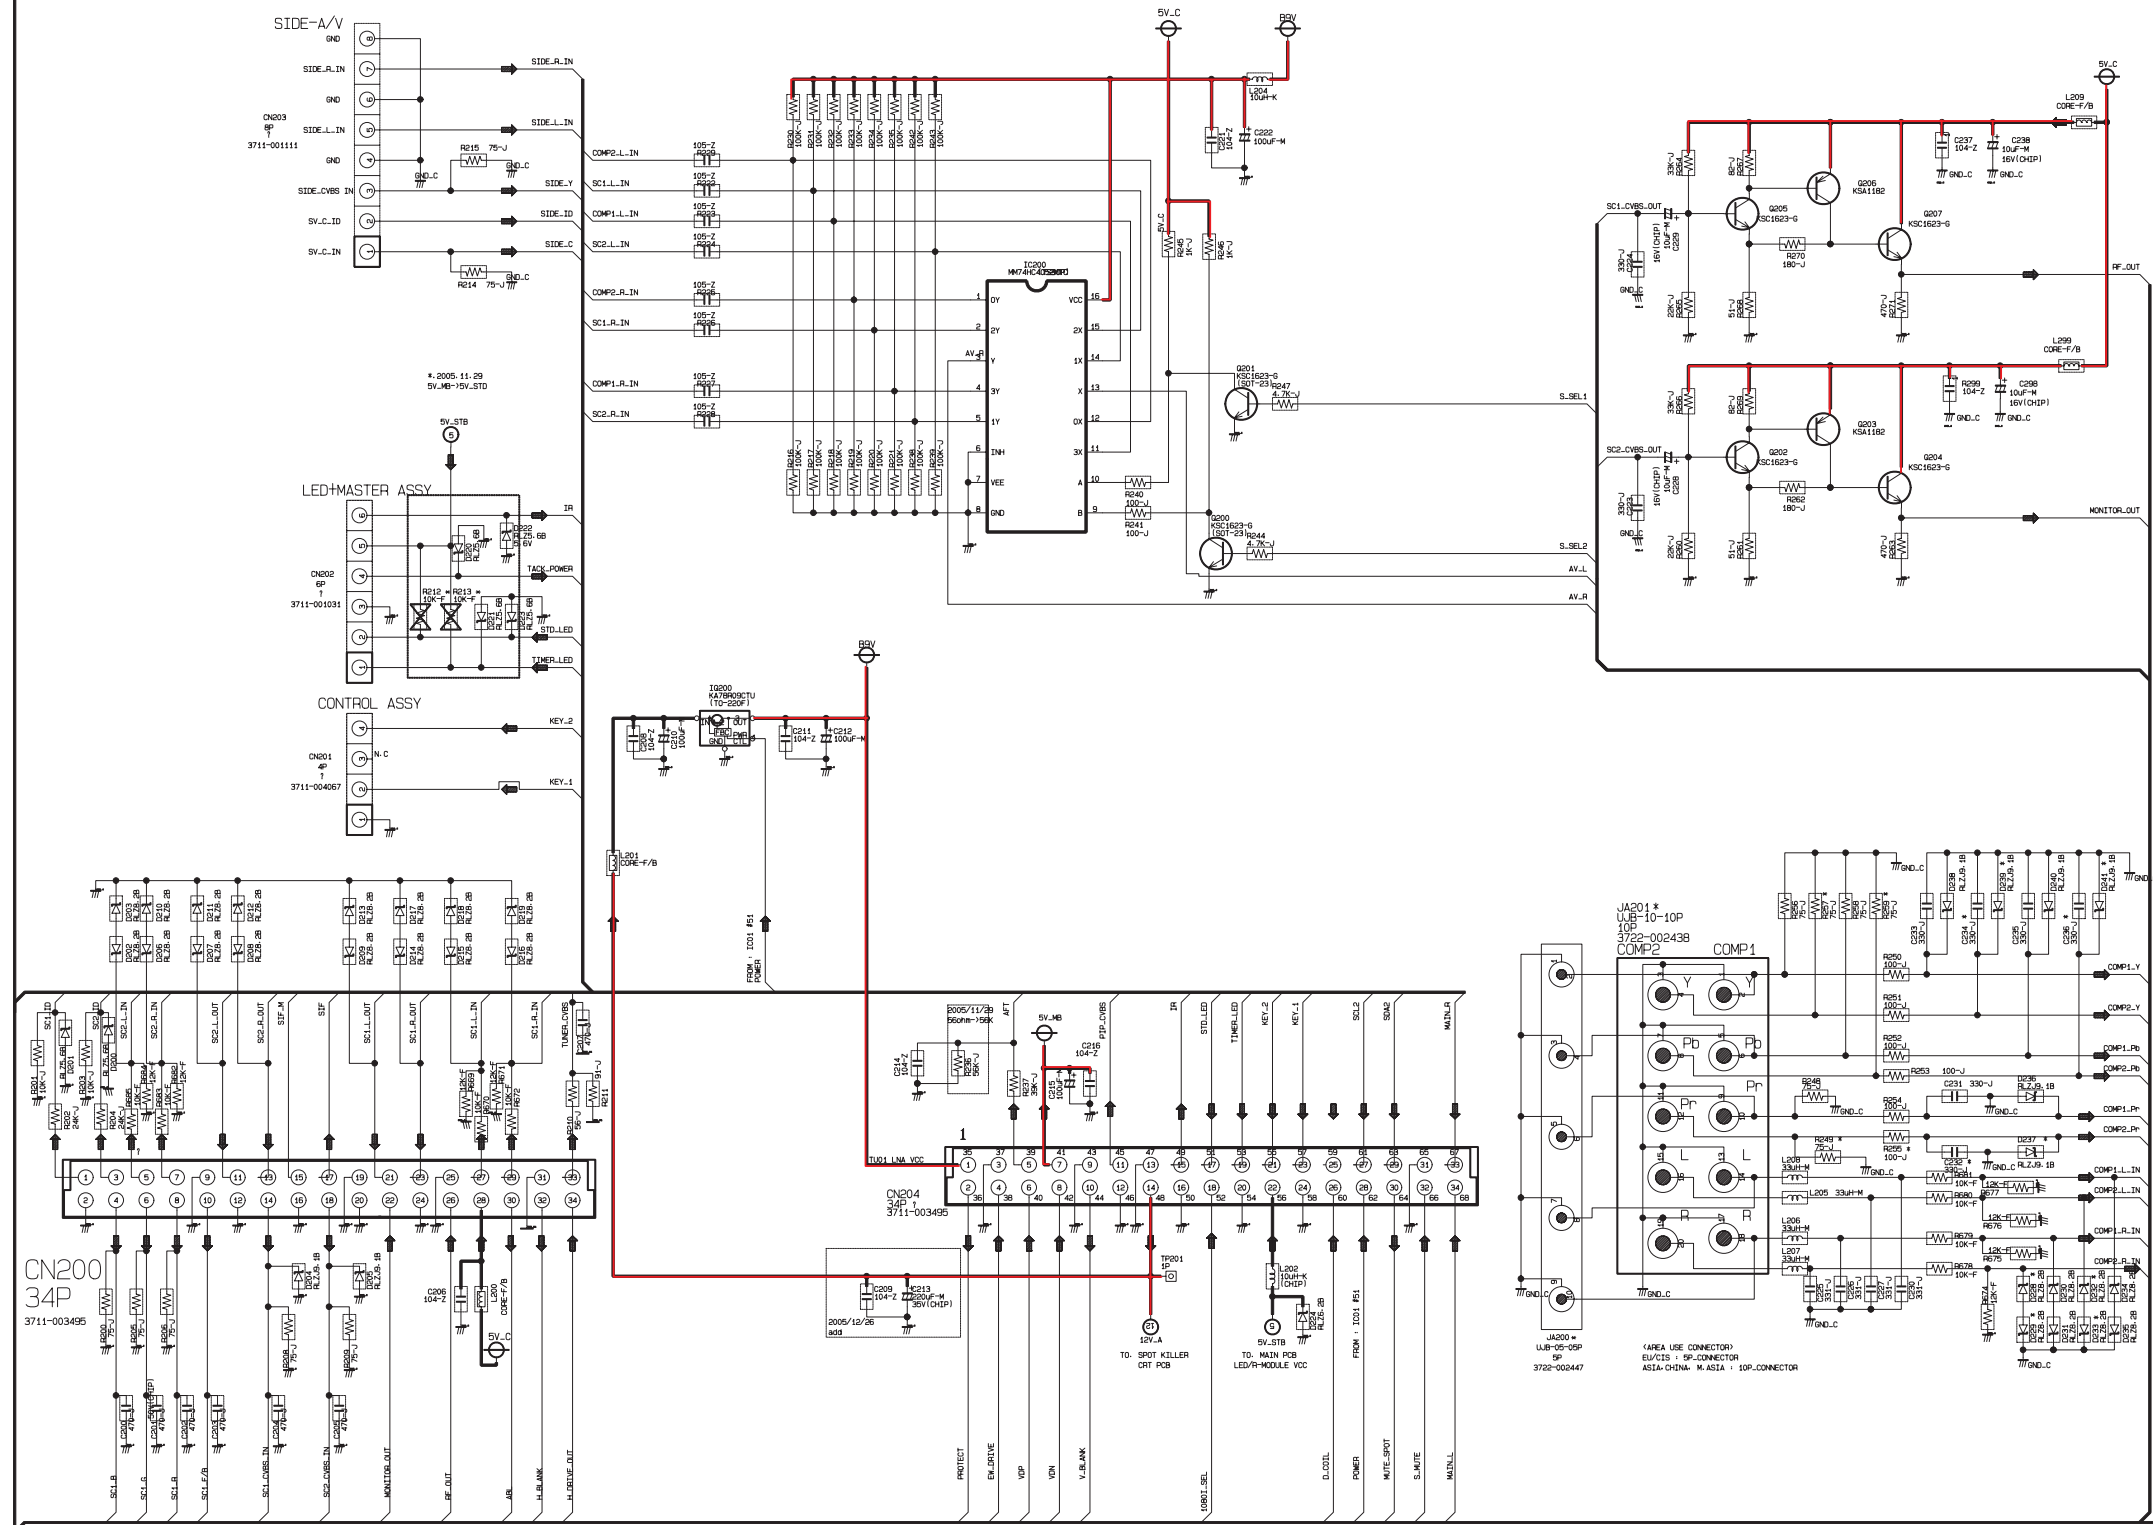


7-2-6 OP AMP/DDR_Flash Board

 This Document can not be used without Samsung's authorization.

	Power
	Video
	Audio

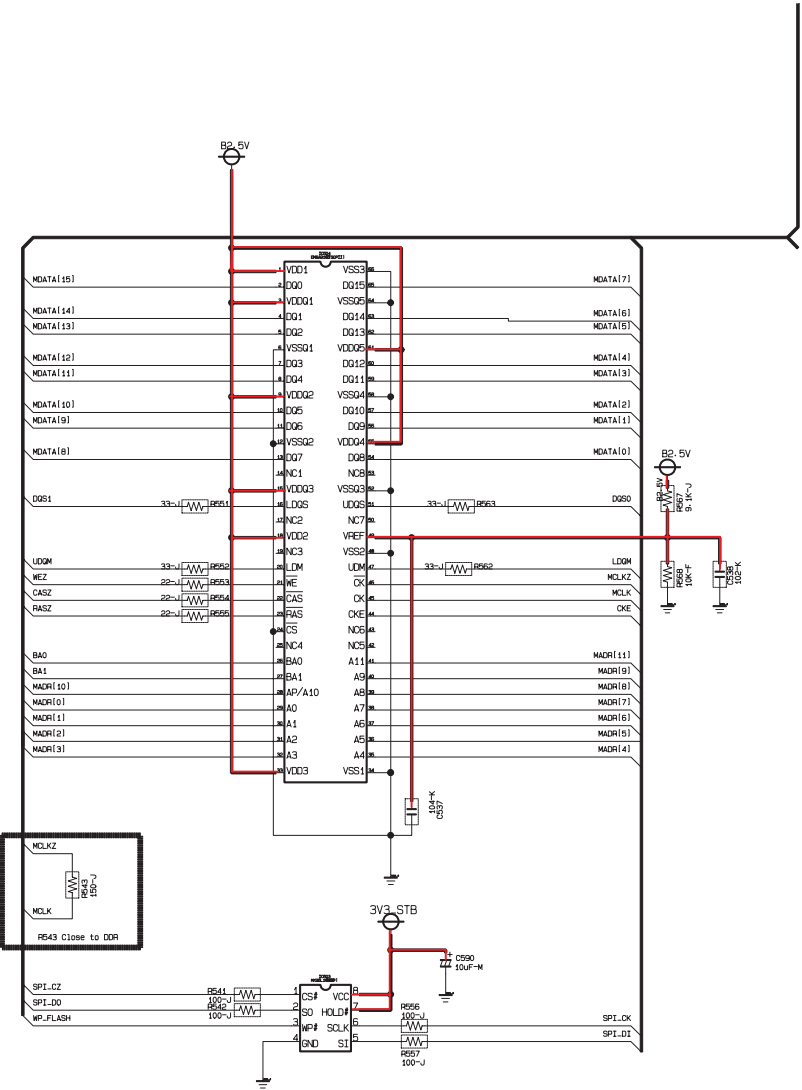
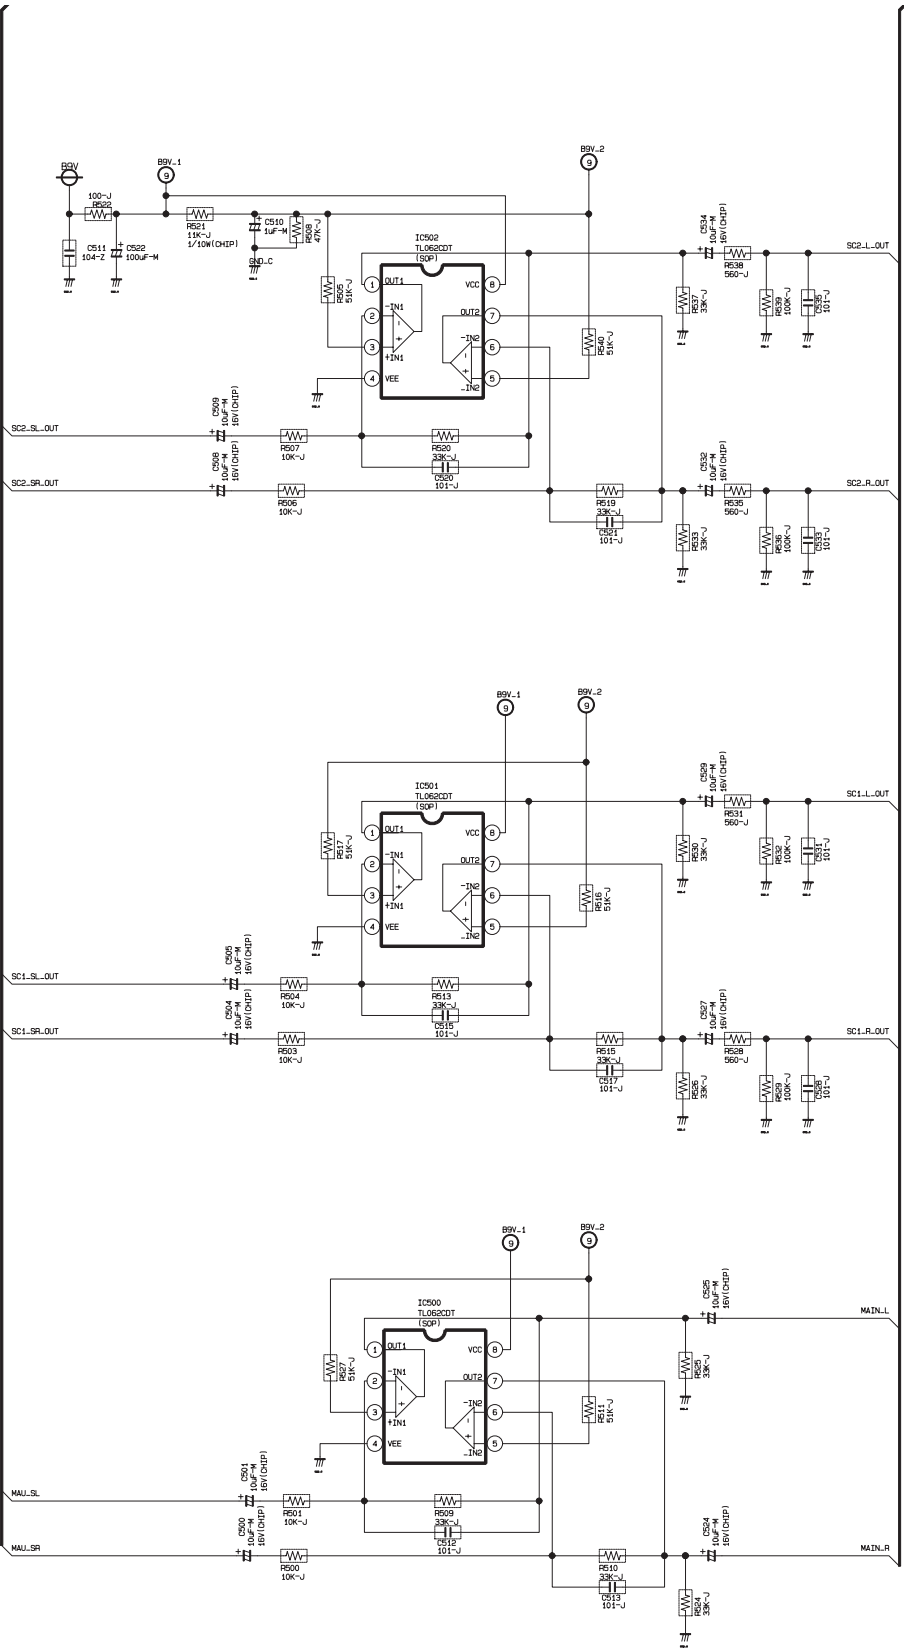


This Document can not be used without Samsung's authorization.

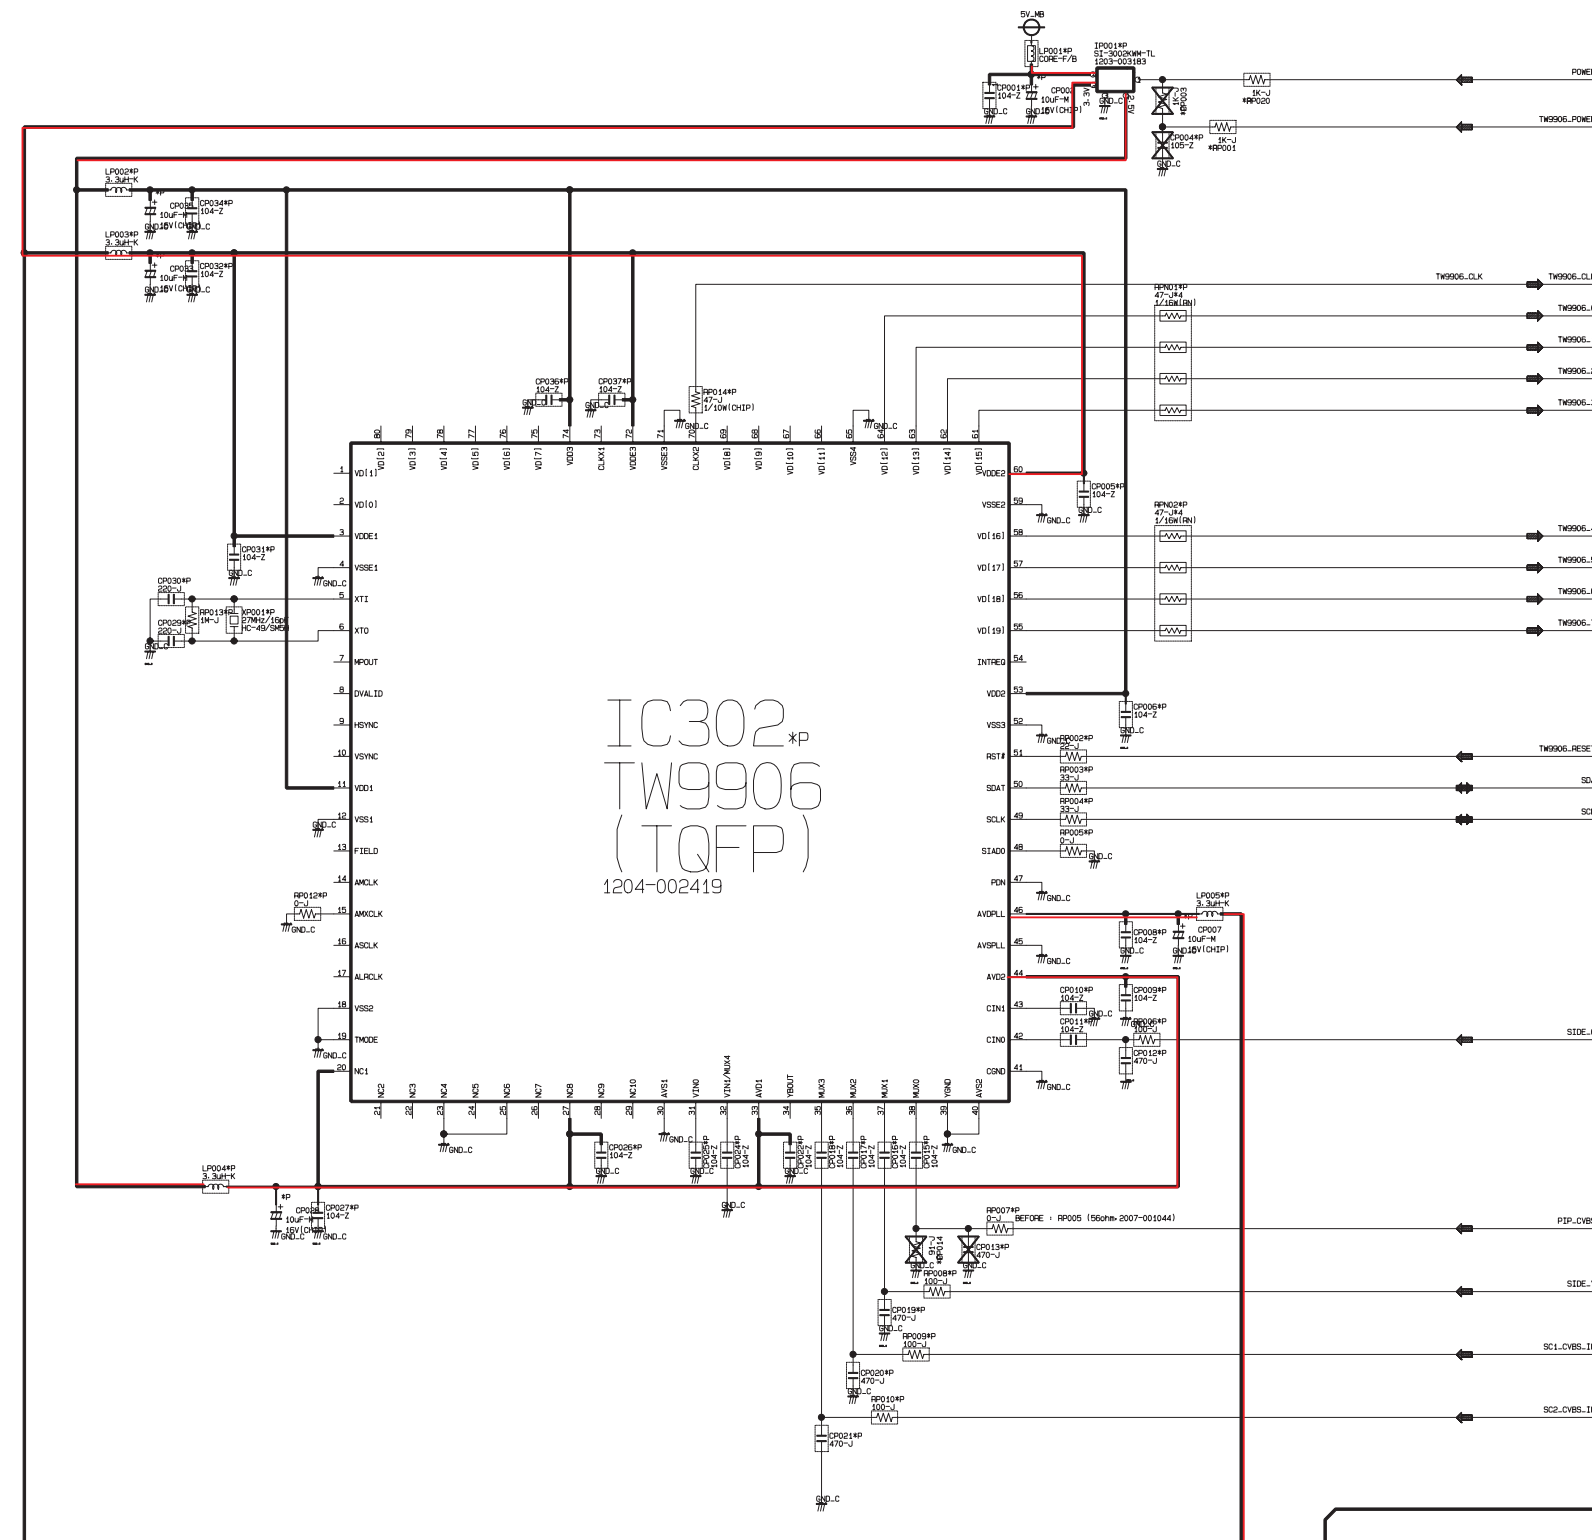


7-2-8 HDMI Block

This Document can not be used without Samsung's authorization.

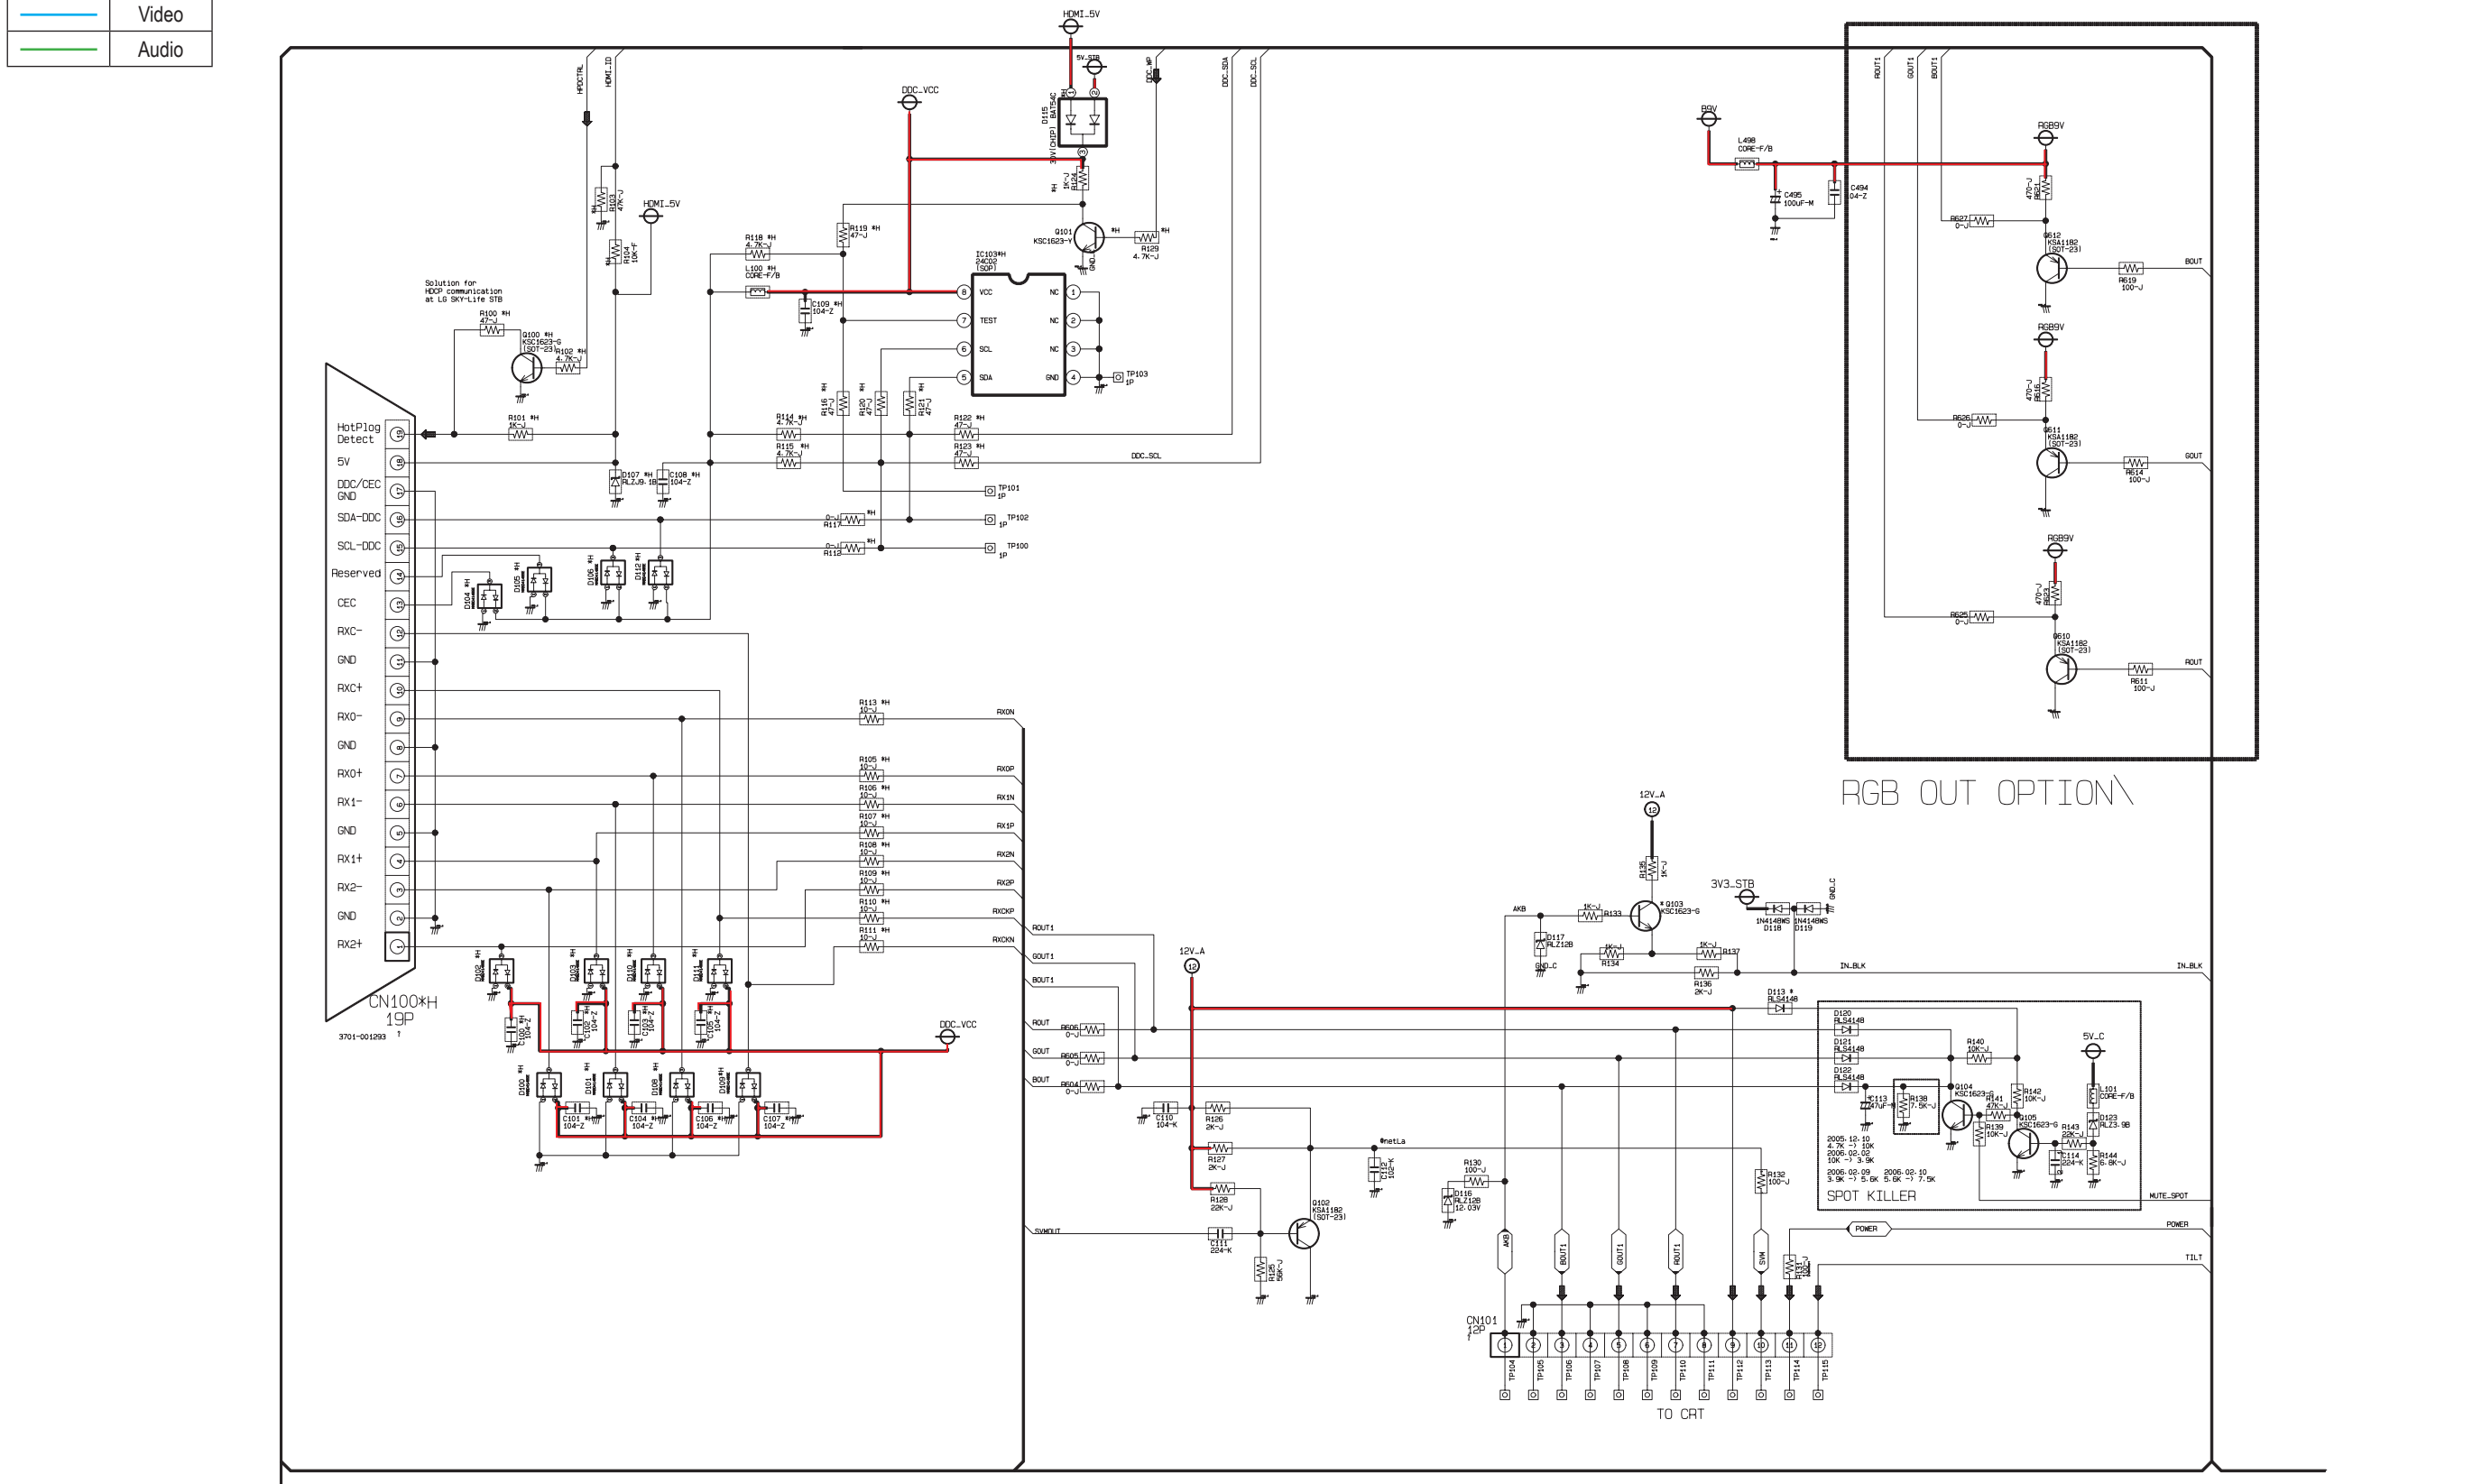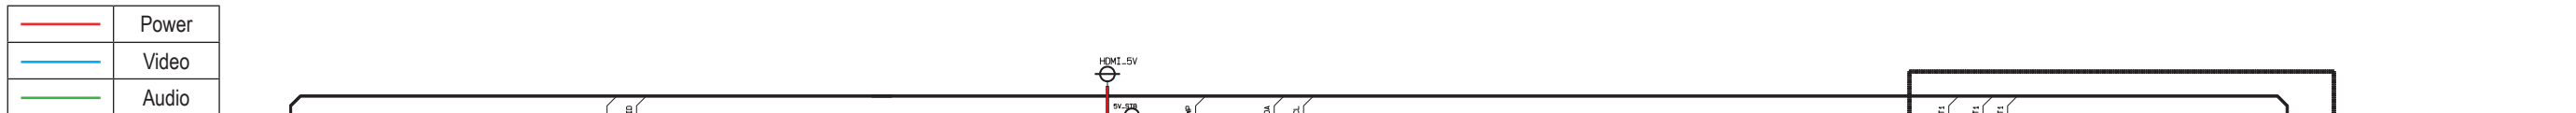


This Document can not be used without Samsung's authorization.

	Power
	Video
	Audio

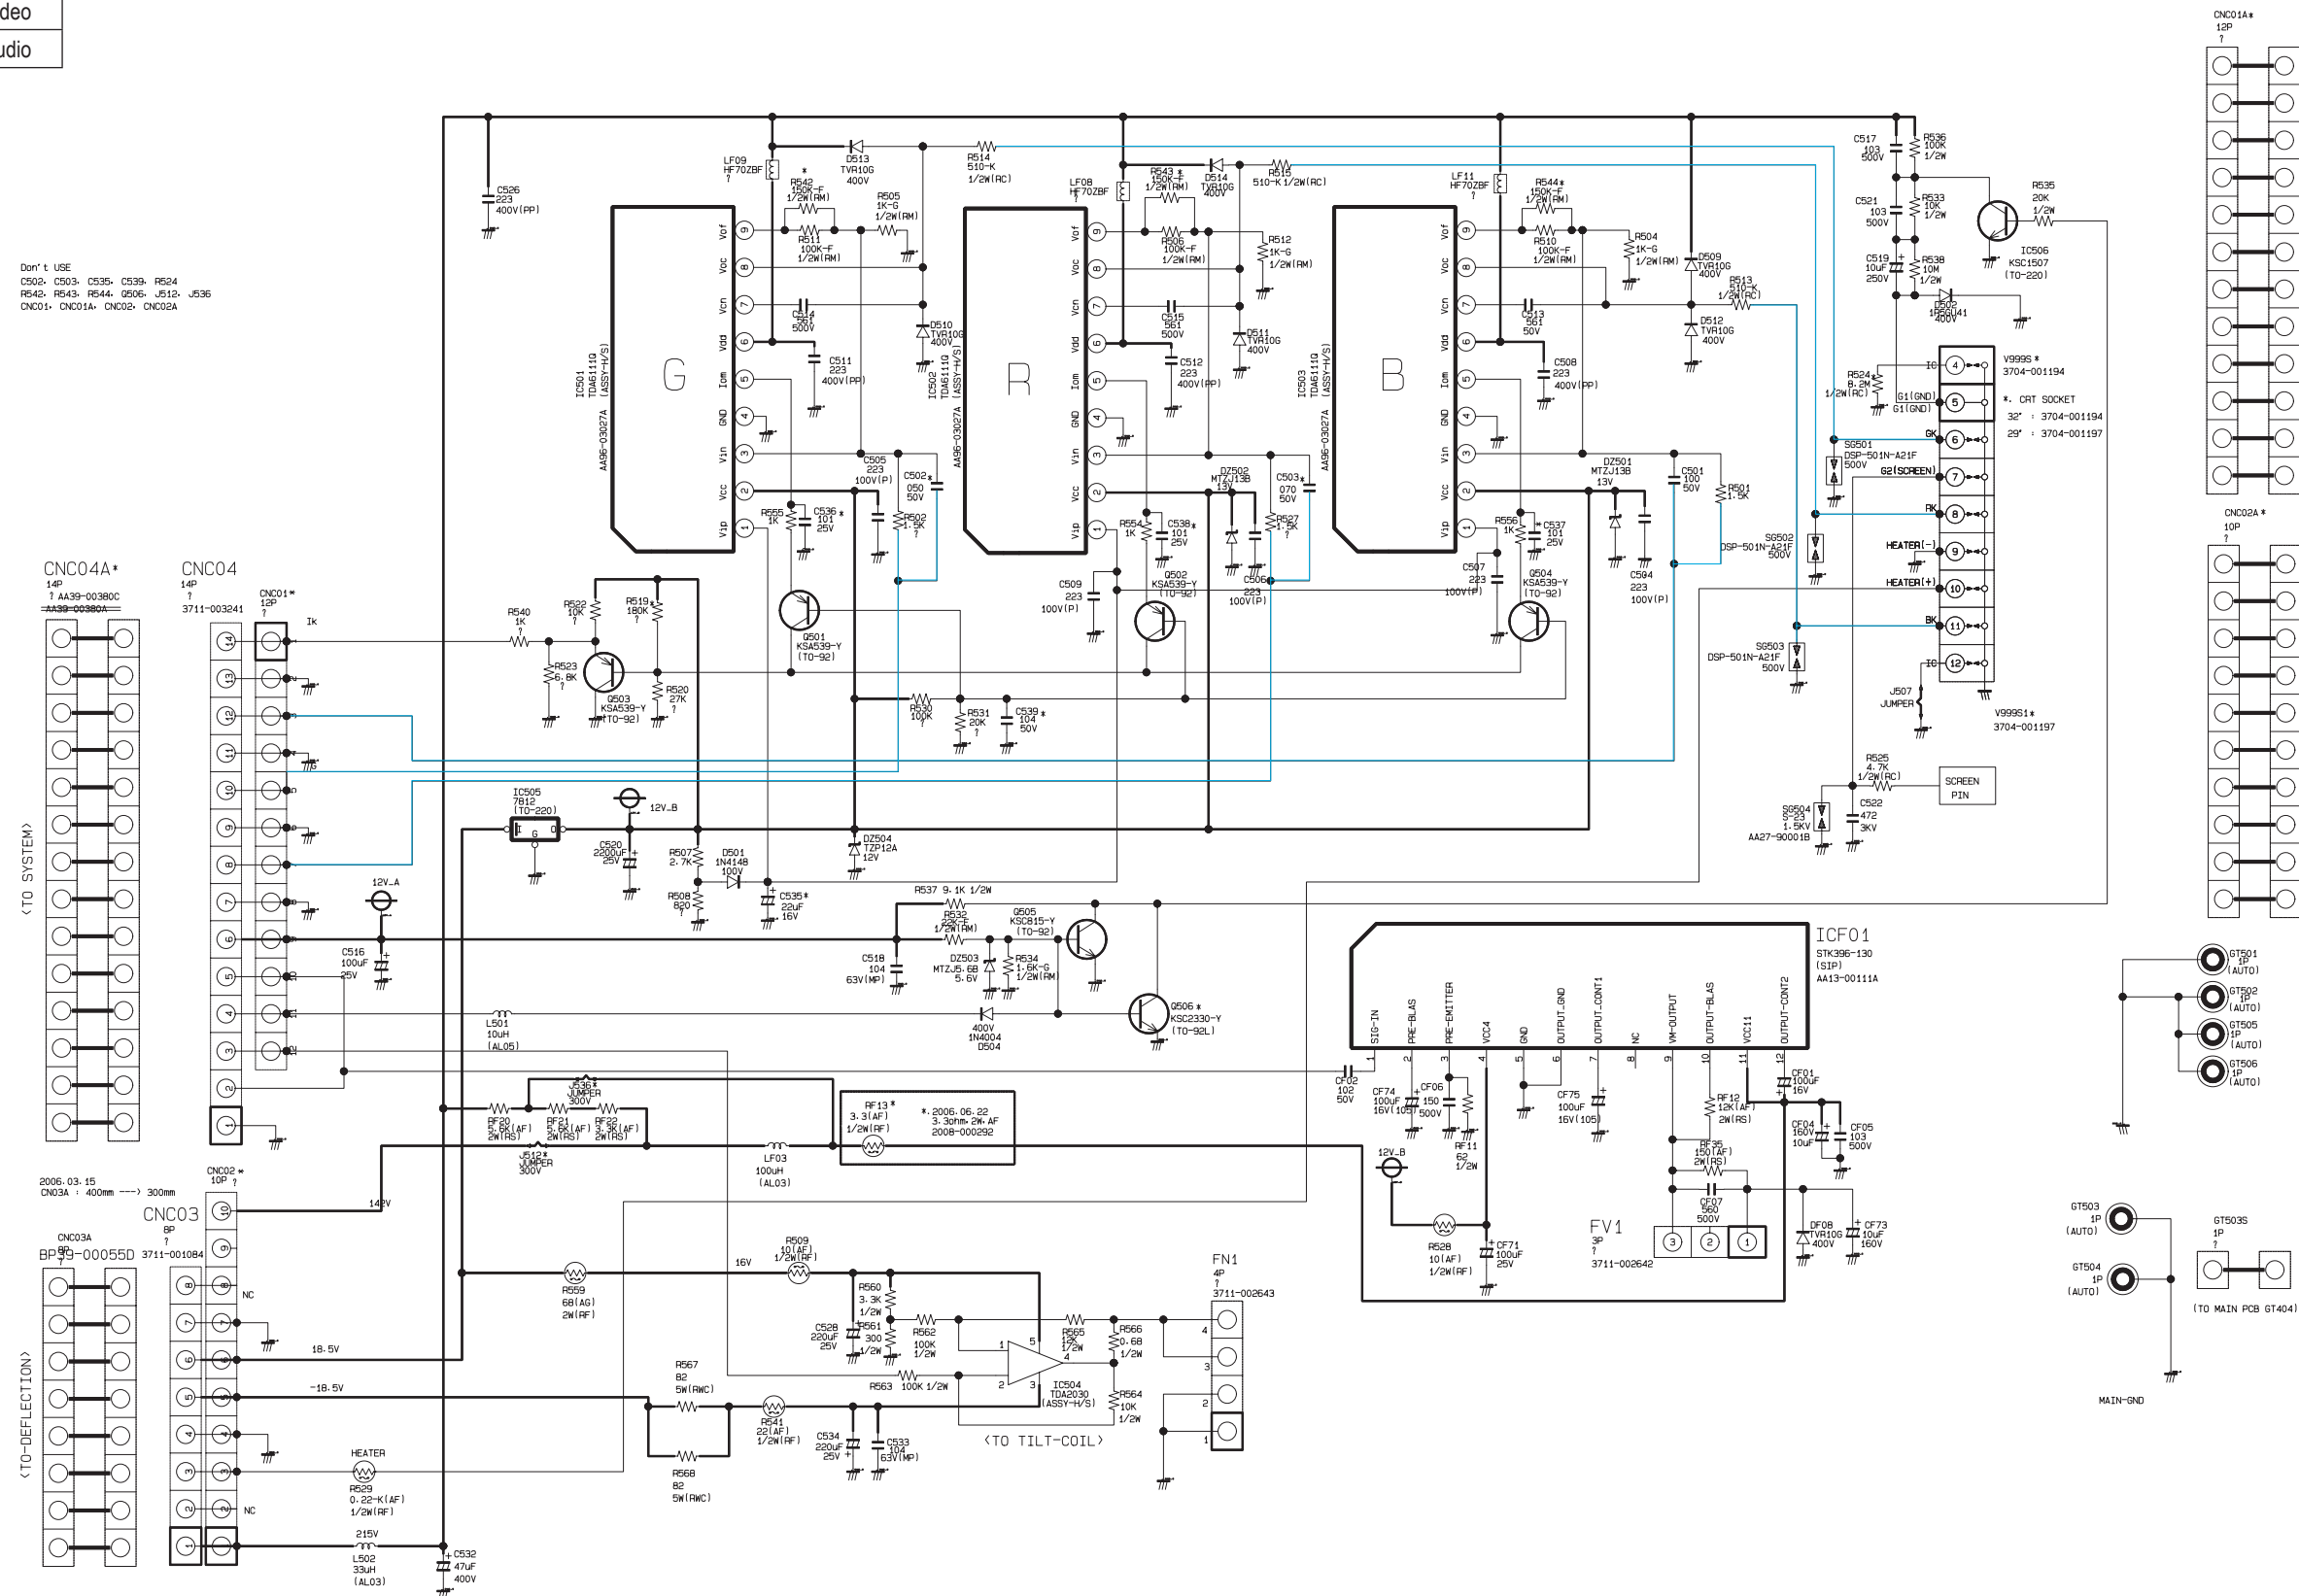

7-2-10 AV

This Document can not be used without Samsung's authorization.

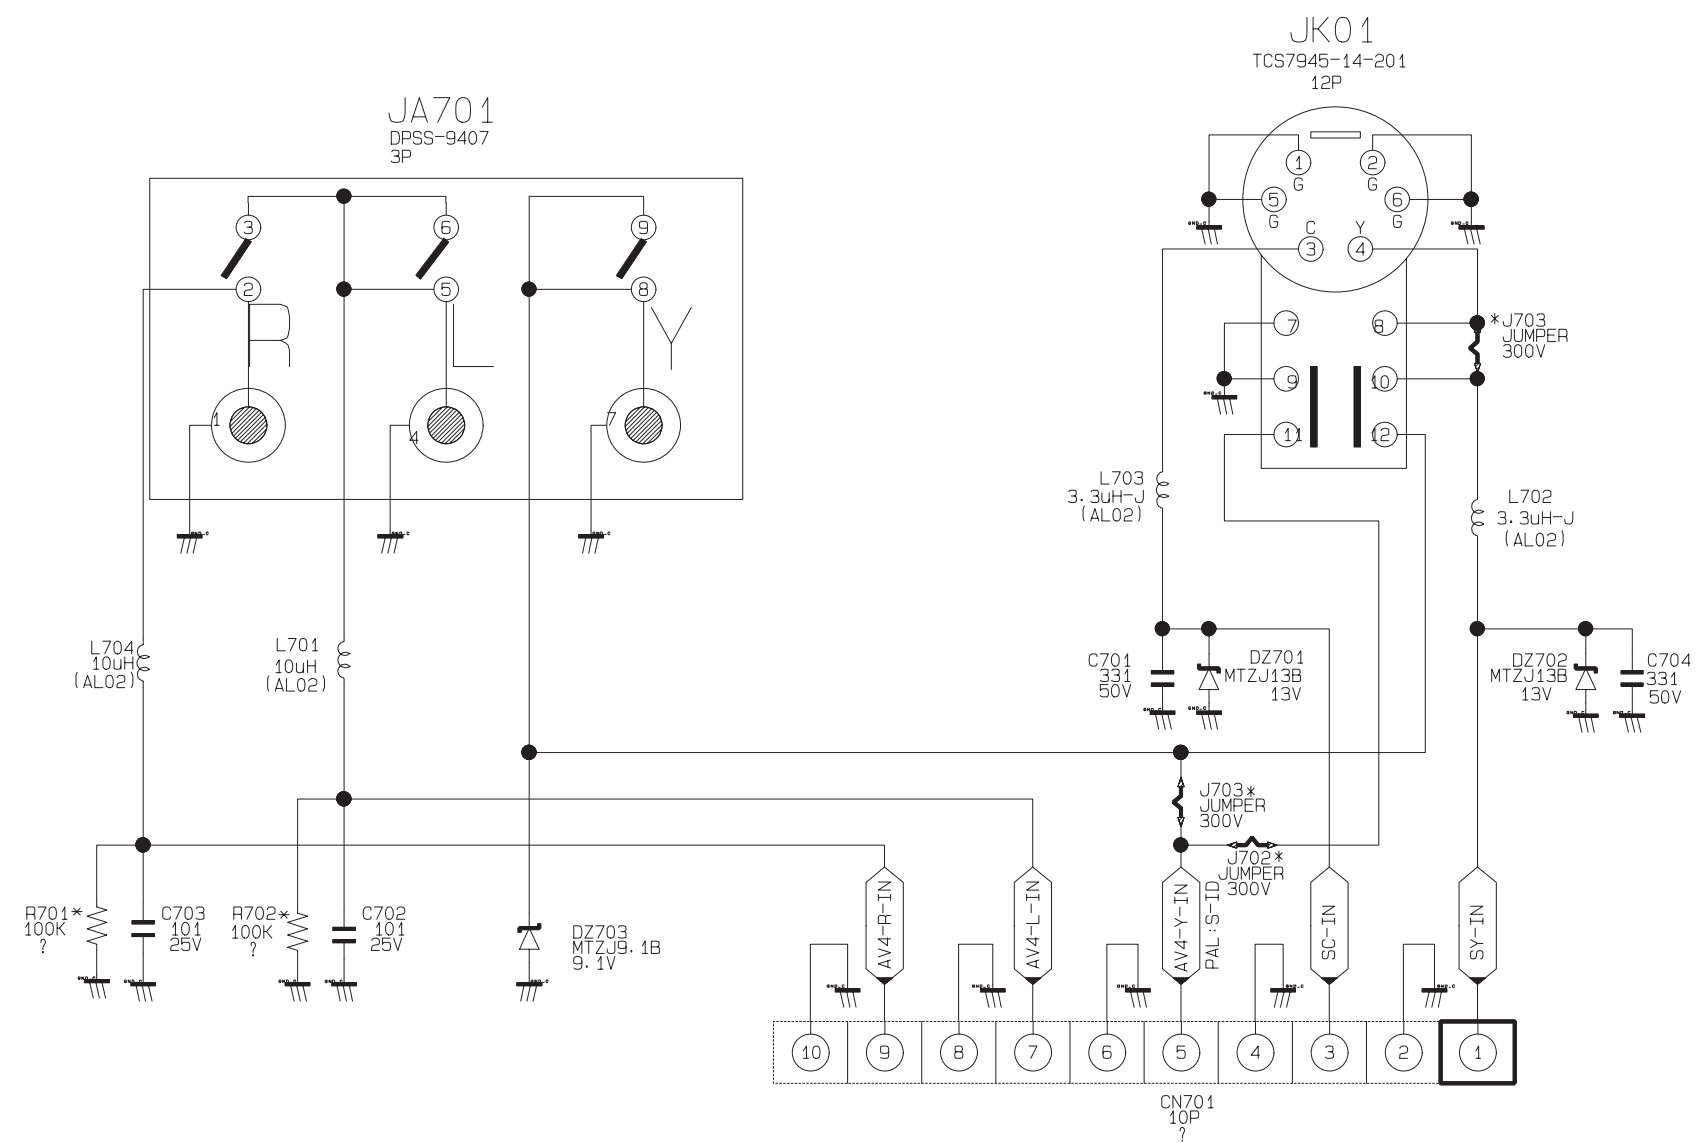

OPTION

LOC	NT	PAL
J701	DELETE	JUMPER
J702	DELETE	JUMPER
J703	JUMPER	DELETE
R701	DELETE	1/BW 100K
R702	DELETE	1/BW 100K

7-2-11 Control

This Document can not be used without Samsung's authorization.

