

Service Manual

BBK MP070S

Model No. MP070S

Digital Media Player

TABLE OF CONTENTS


1. Specification.....	3
2. Block Diagrams.....	4
3. Power Diagrams.....	5
4. Troubleshooting.....	6~7
5. PCB Layout Diagrams.....	8~13
6. Schematic Diagrams.....	14~23
7. Exploded Diagram And Spare Parts List.....	17

1. Specification


Features	MP070S
IC	Realtek1073
Built-In Memory	NAND FLASH 2GB

Video Support Format	Category	Codec	Extension
	MJPEG	MJPEG	.avi
	DTA	VCD	.DTA
	MPEG1/2/4	Div3	.avi
	JPEG	JPEG	.JPEG
	RMVB	RMVB	.RMVB
	RM	RMVB	.RM
	MP3	MP3	.MP3
Audio Support Format	DTS、DTS-HD、DUBLY、DUBLY HD		
Connectors			
Slot	SD, MMC,MS		
USB Host	USB2.0		
Audio Output	Coaxial;Optical		
Power AC Input	100-240V; 50/ 60 Hz;0.6A,MAX		
Power Adaptor	- AC Input: 100-240V; 50/ 60 Hz; - DC Output:12V, 2A - CE		
40-Key IR Remote Control	x1		
Picture Support Format	JPEG		
EMI/EMC			
Operation Requirement	Operating Temperature/Humidity 0°C to 40°C/10% to 90%		


Main system frame diagram

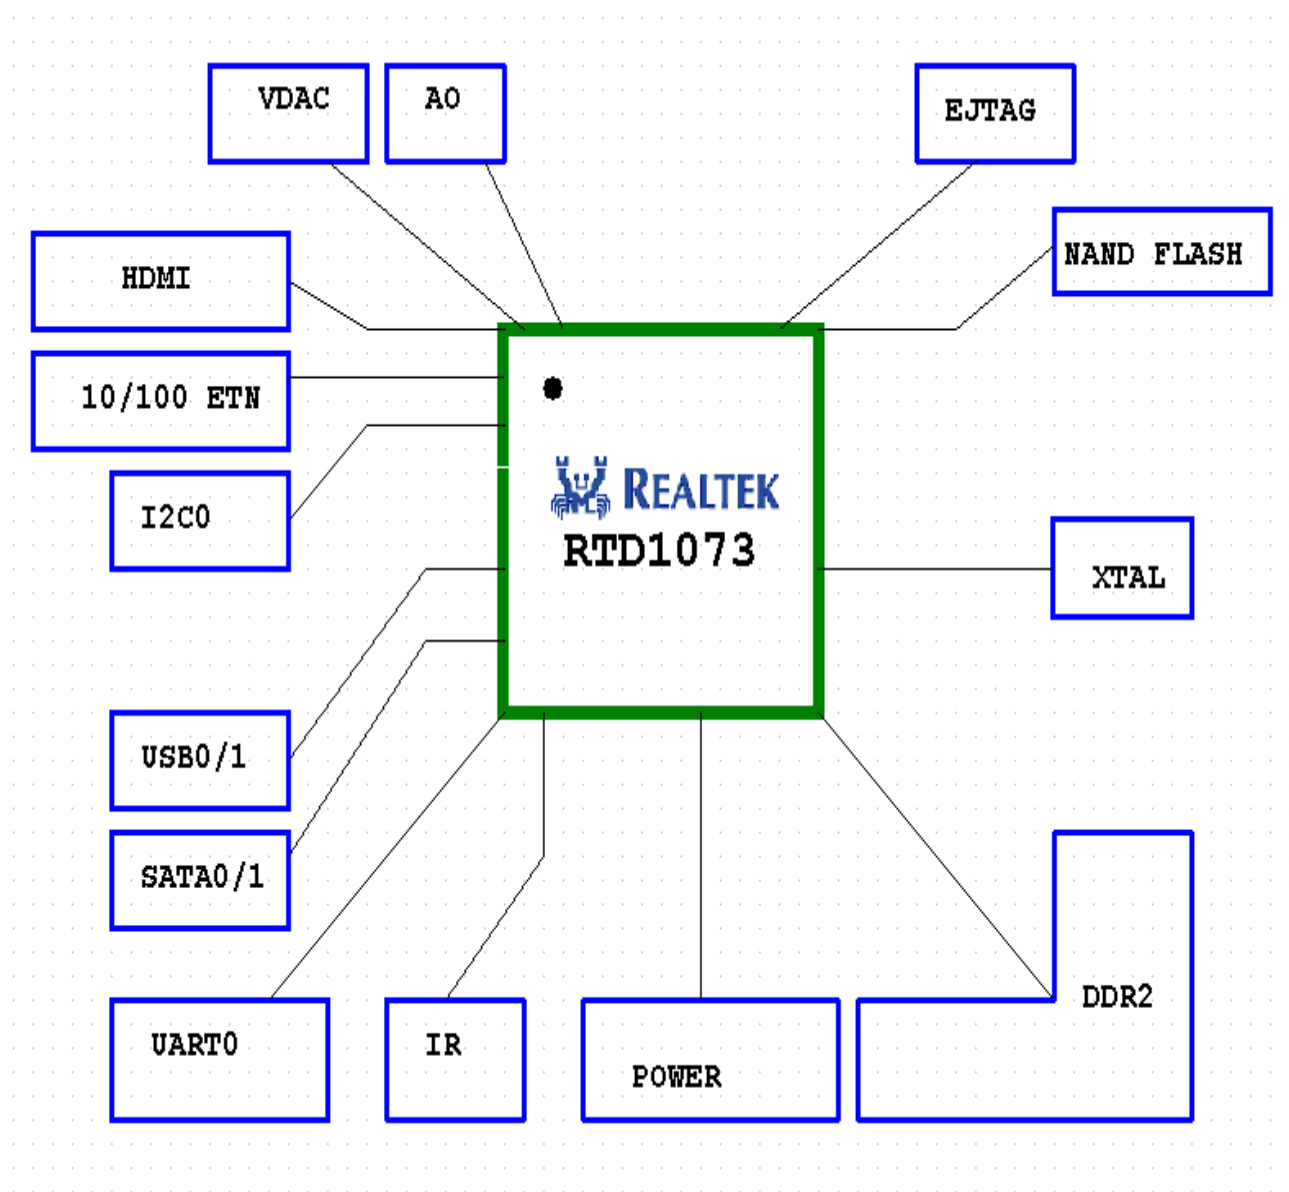

power supply frame diagram

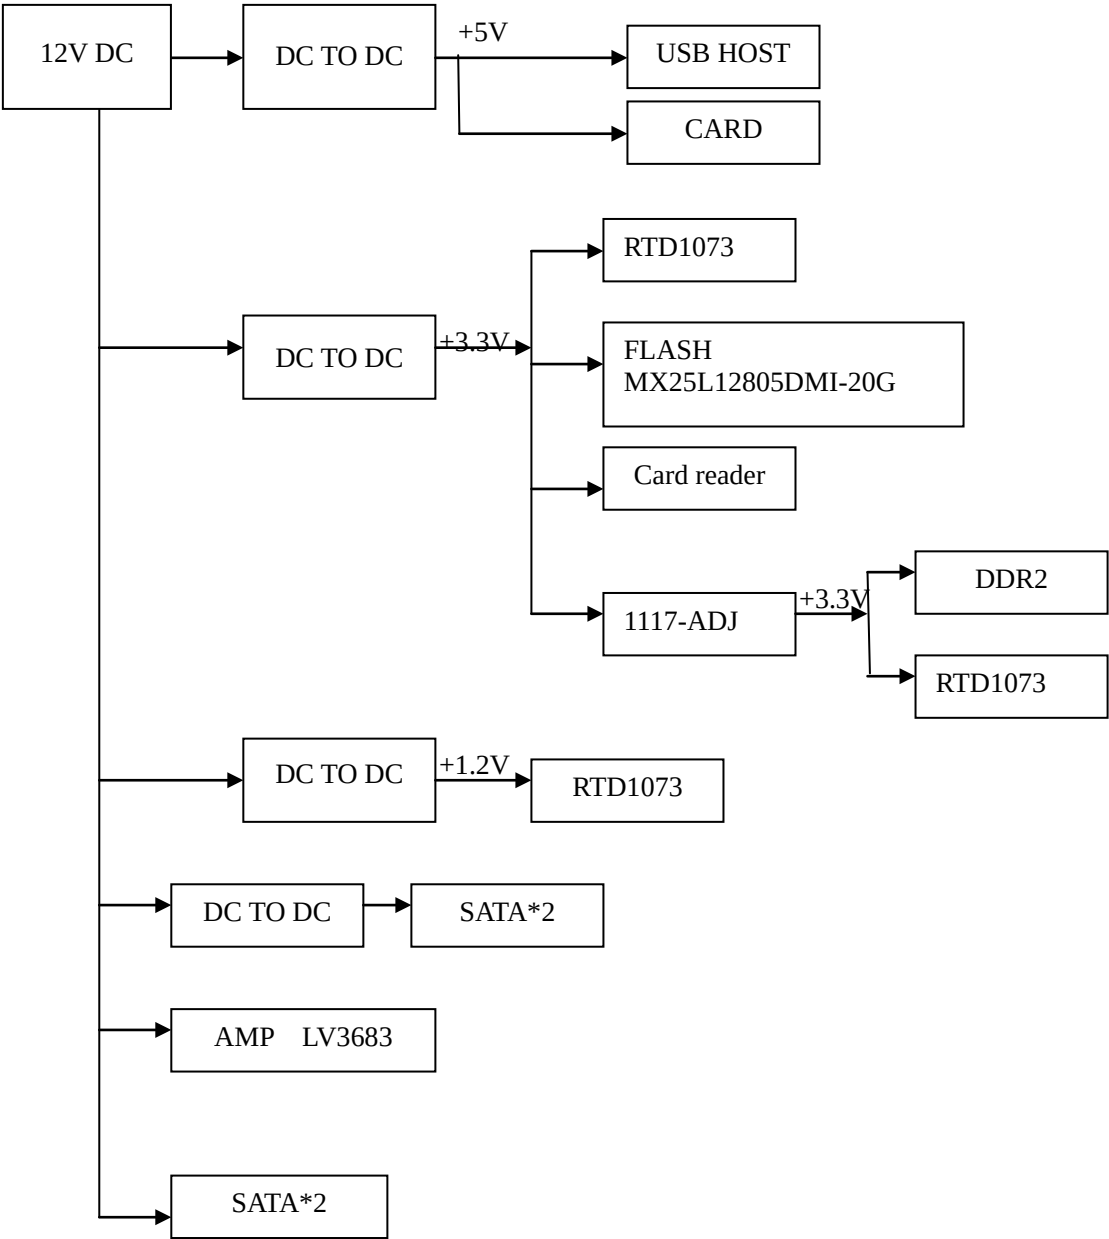

5. Troubleshooting

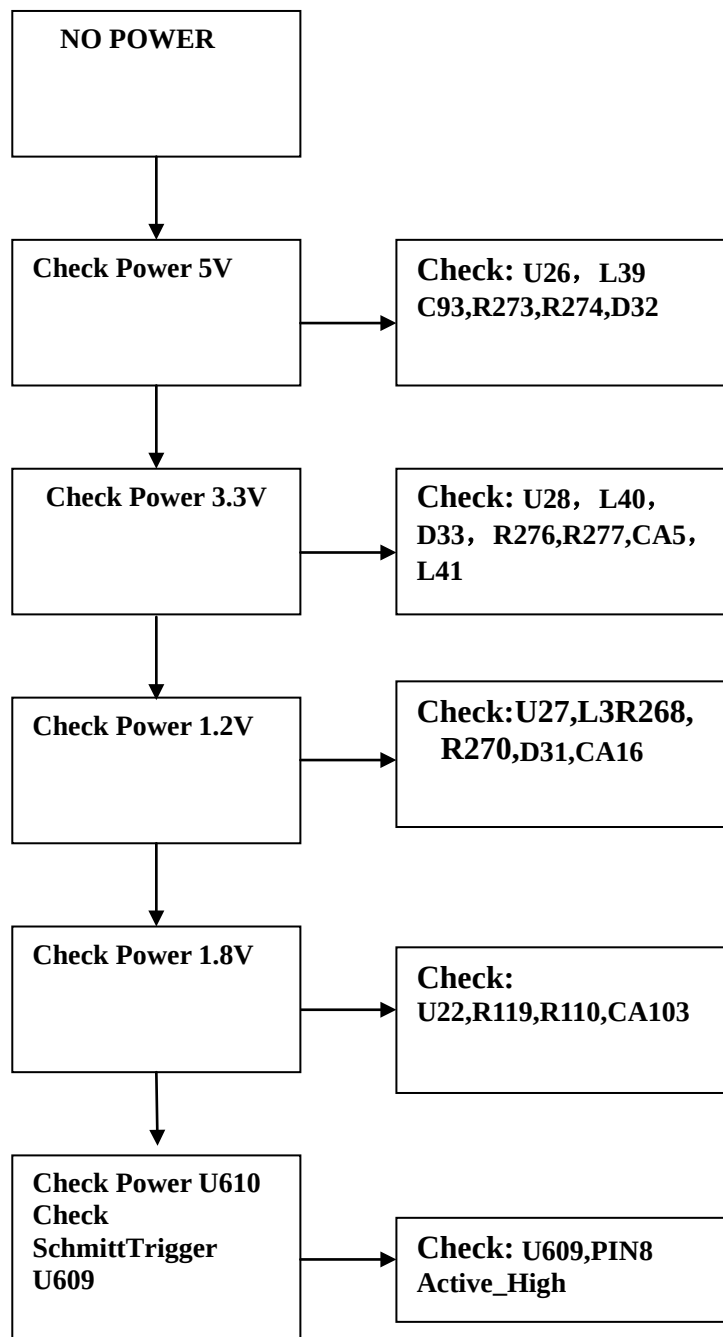


Case analysis:

1. If remote control not work, please:
 - a) check if (IR) incomplete weld / weld defect,
 - b) Check if +3.3VDD is normal,
 - c) Check if R52 is breakover,
 - d) Check if U 75 is incomplete weld / weld defect and IR1 breakover.
2. Indicator light doesn't work, please check if D4 , D5 incomplete weld / weld defect or not, or check LED control circuit if R282,R283,R284,R285,R286,R224,Q11,Q18 work or not.
3. If the card SD/MMC/MS can not be read, please check the card slot is damaged or not and U6work or not, for example, whether the voltage 3.3V and voltage 5VD of U6 are normal, or whether the frequency 12MHZ of G2 is OK.
4. If the USB can not be read, please check whether the voltage is 5V , whether R118 and R116 have a short circuit or not, whether R94 R92 R98 R97 is breakover with 40, 41, 45, 46, 66 feet of U1 or not, whetherU6 voltage is normal
5. If there is no Coaxial output or abnormal output, please check if C0N2 incomplete weld / weld defect or it is damaged or not. Check if U44 is normal or not
6. If there is no HDMI output, please check the HDMI slot is damaged or not. Check Q6 works or not . R686R67 incomplete weld / weld defect ,Or check if power supply is normal or not.


6.PCB Layout Diagrams

Bottom silk

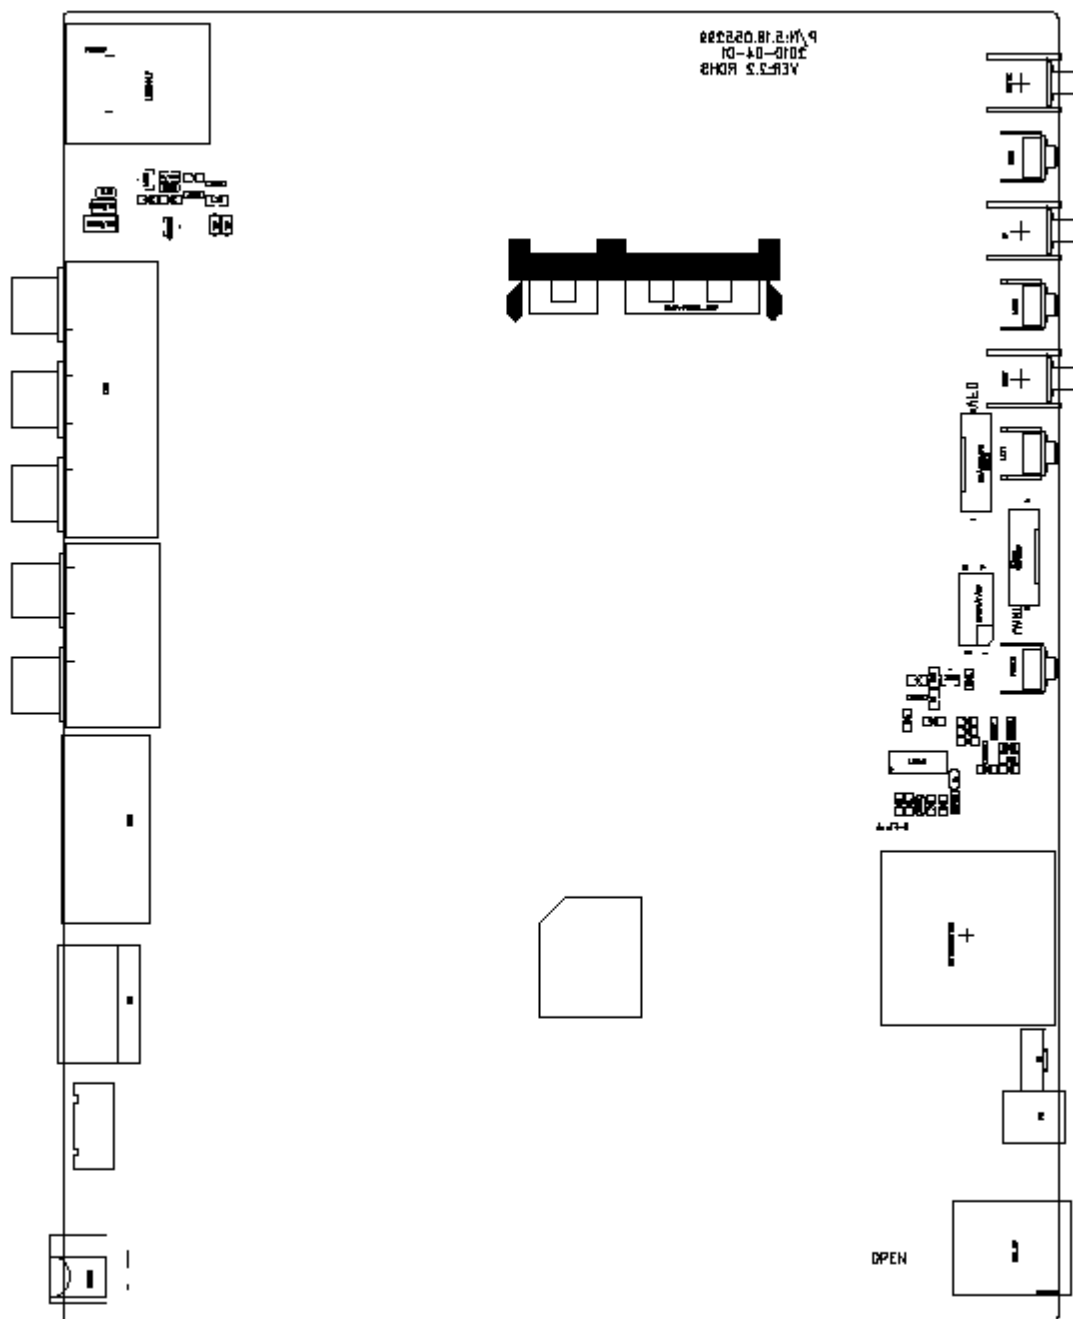


E30T 20091030.pcb - Wed May 05 16:18:10 2010

Bottom Traces

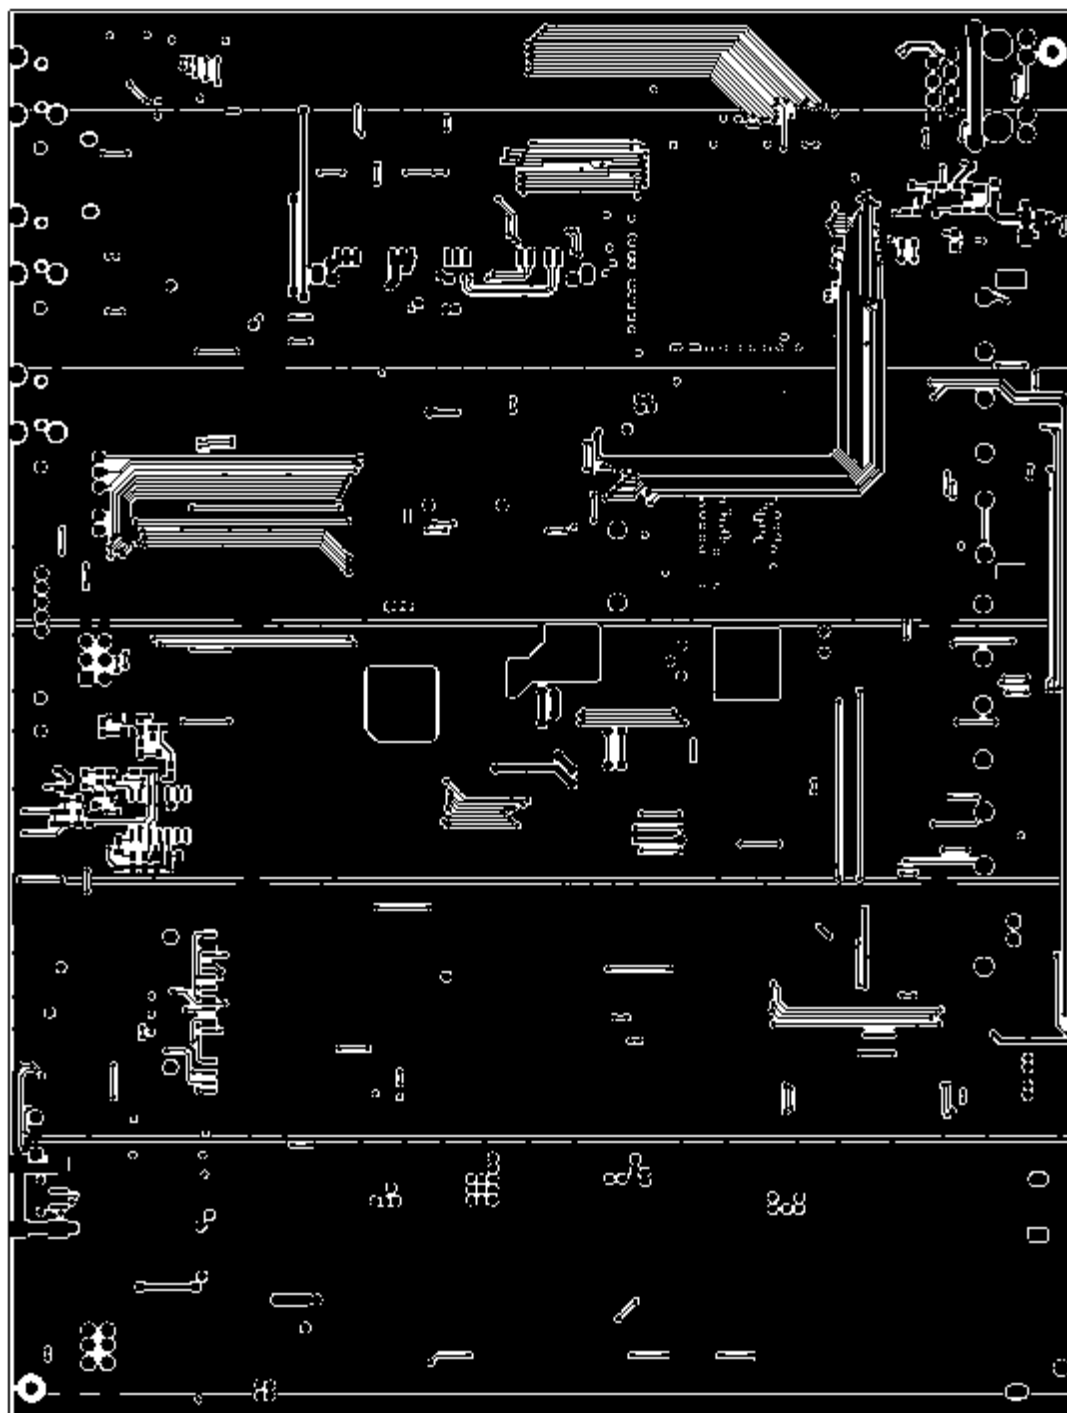


E30T 20091030.pcb - Wed Jul 21 11:58:55 2010

TOP silk

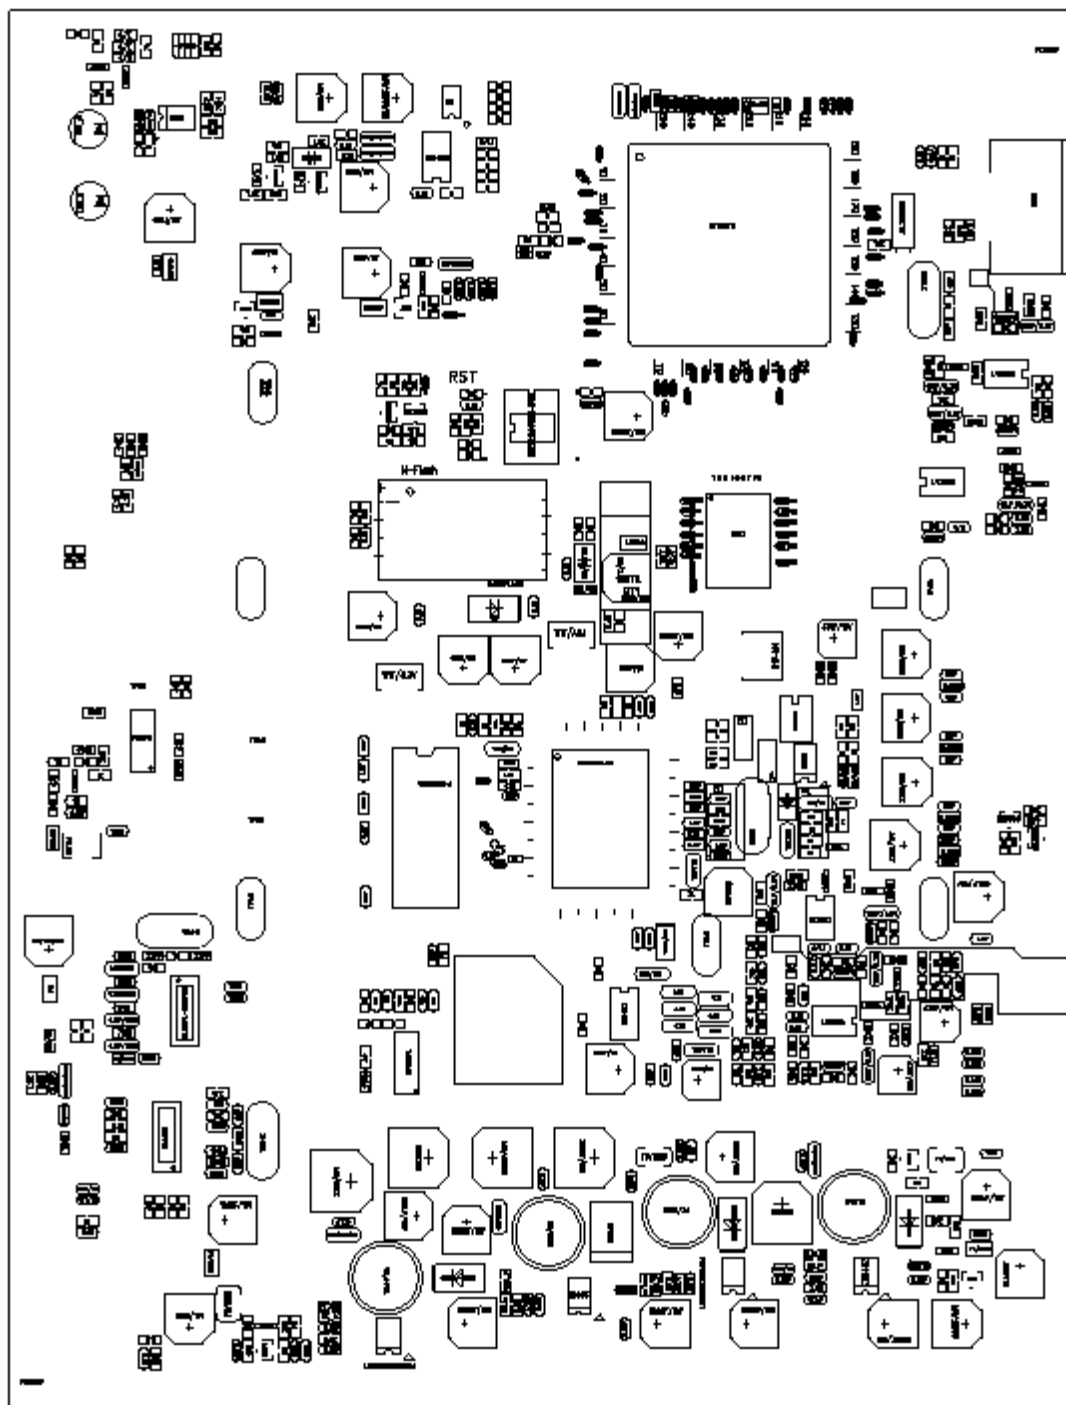


E30T 2D091030.pcb - Wed May 05 16:16:34 2010

TOP Traces

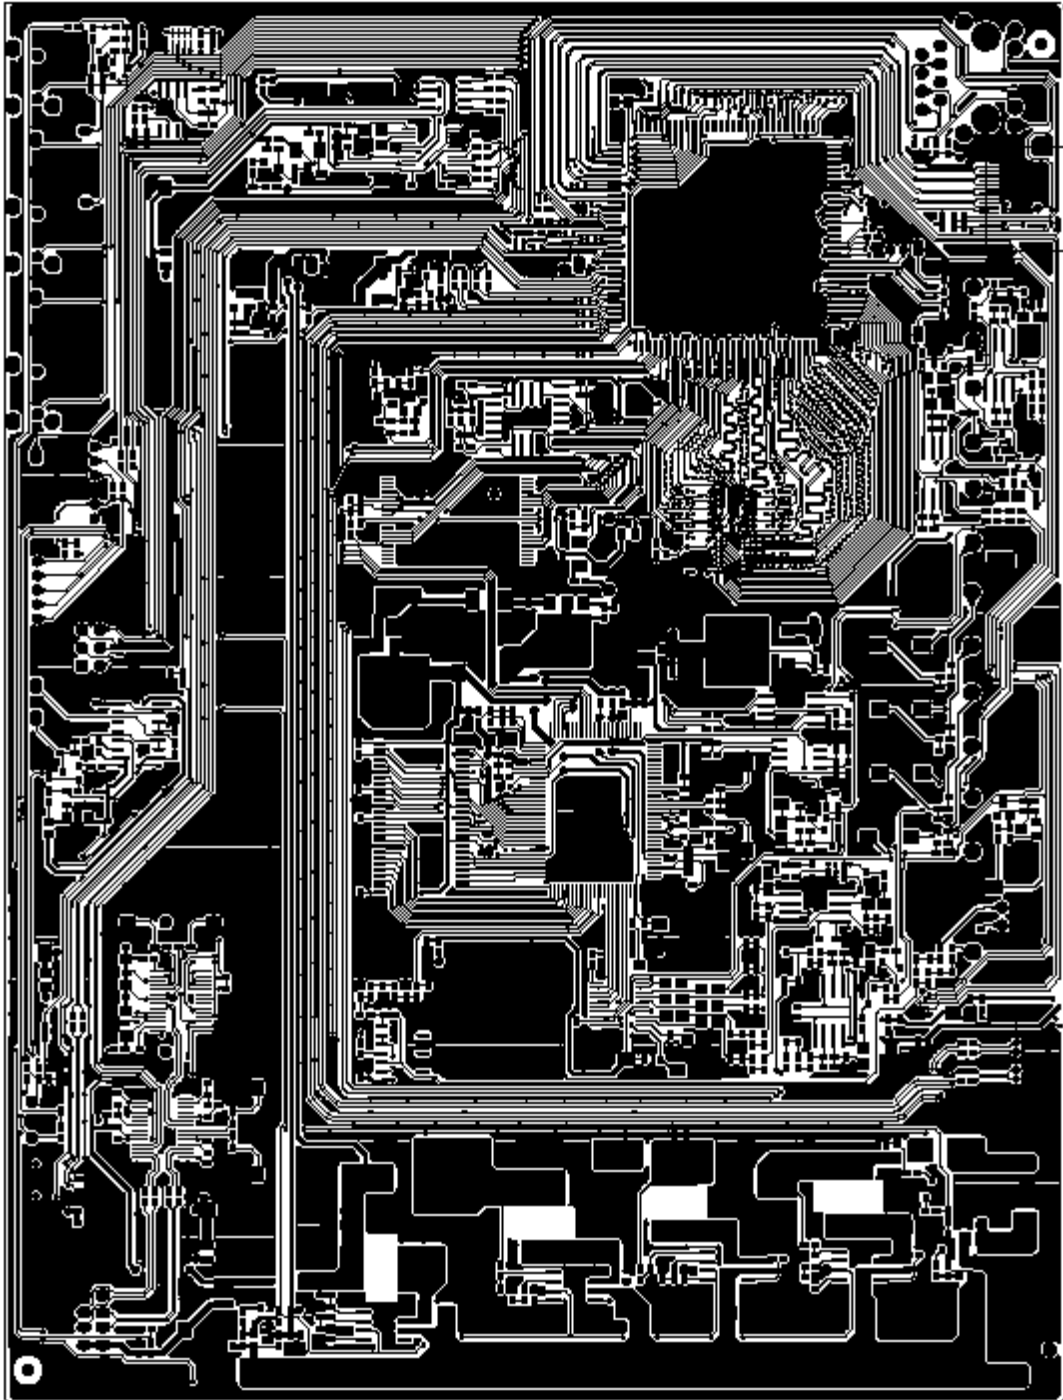


E30T 2D091030.pcb - Wed Jul 21 11:55:44 2010

GND Traces

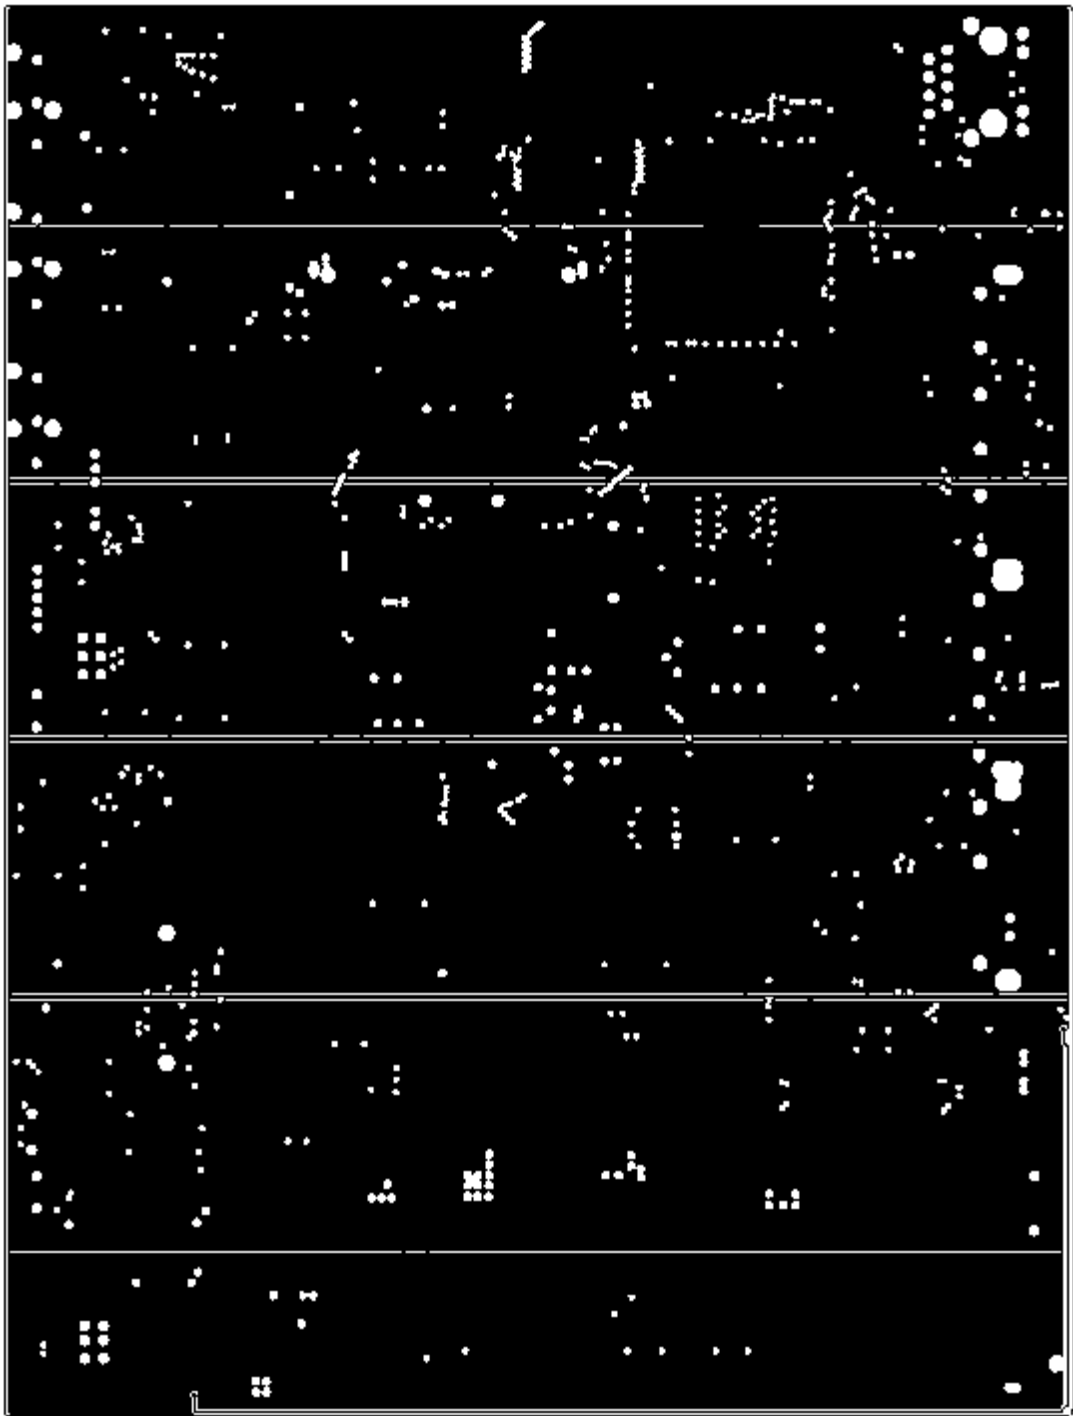


E30T 20091030.pcb - Wed Jul 21 11:53:37 2010


POWER Traces

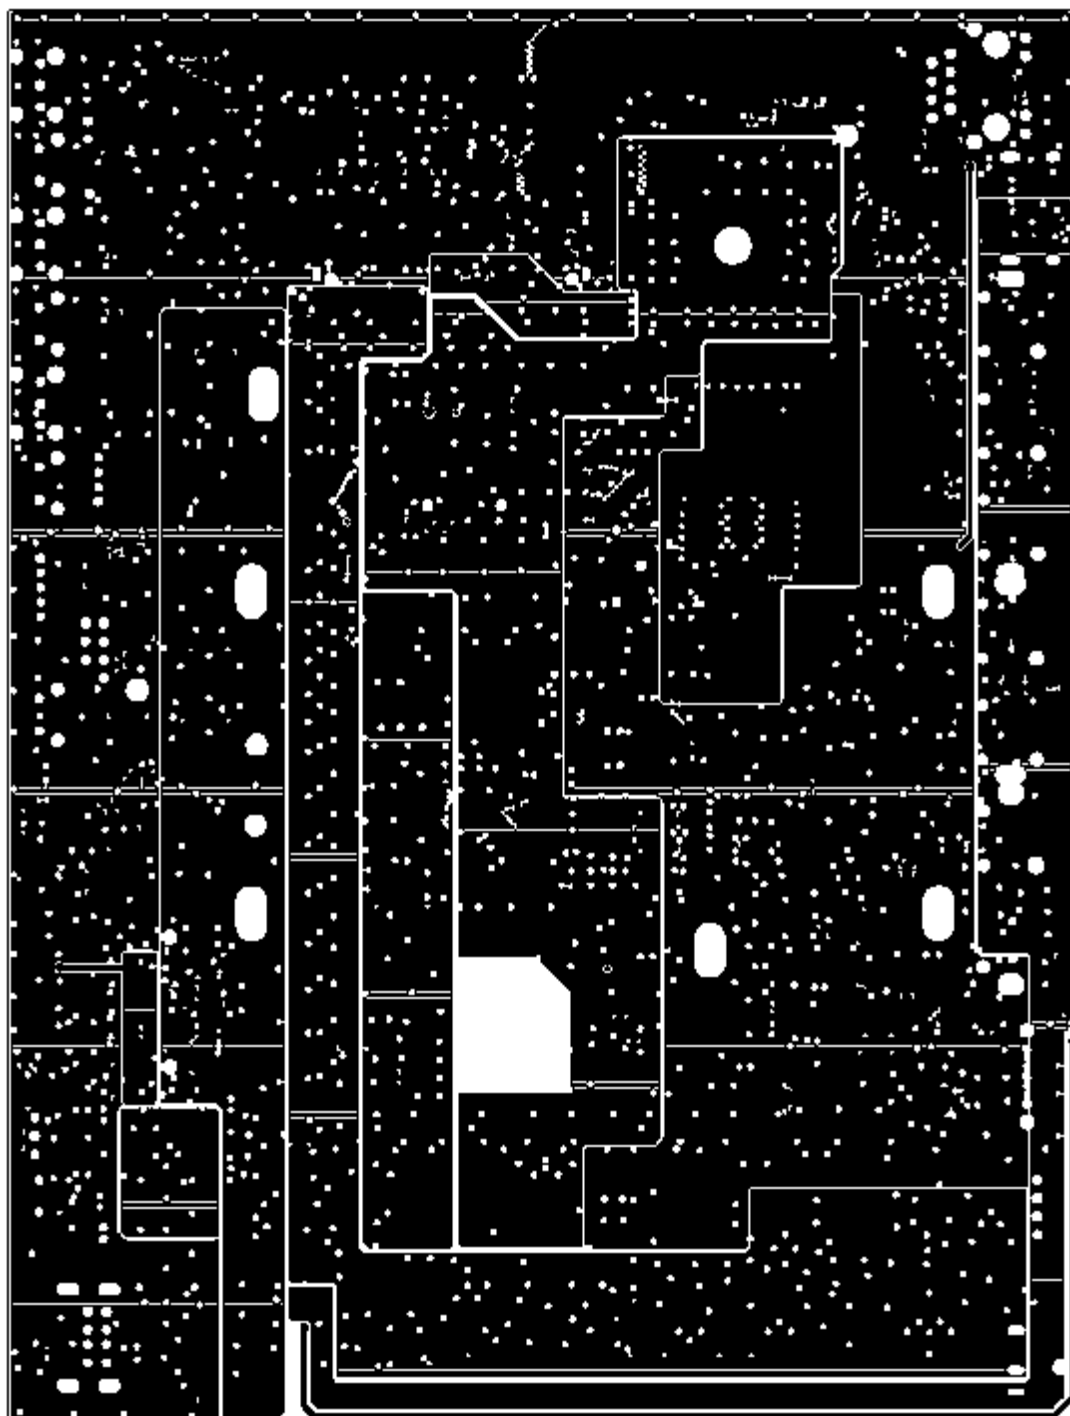



E30T 20091030.pcb - Wed Jul 21 11:52:00 2010


7. Schematic Diagrams

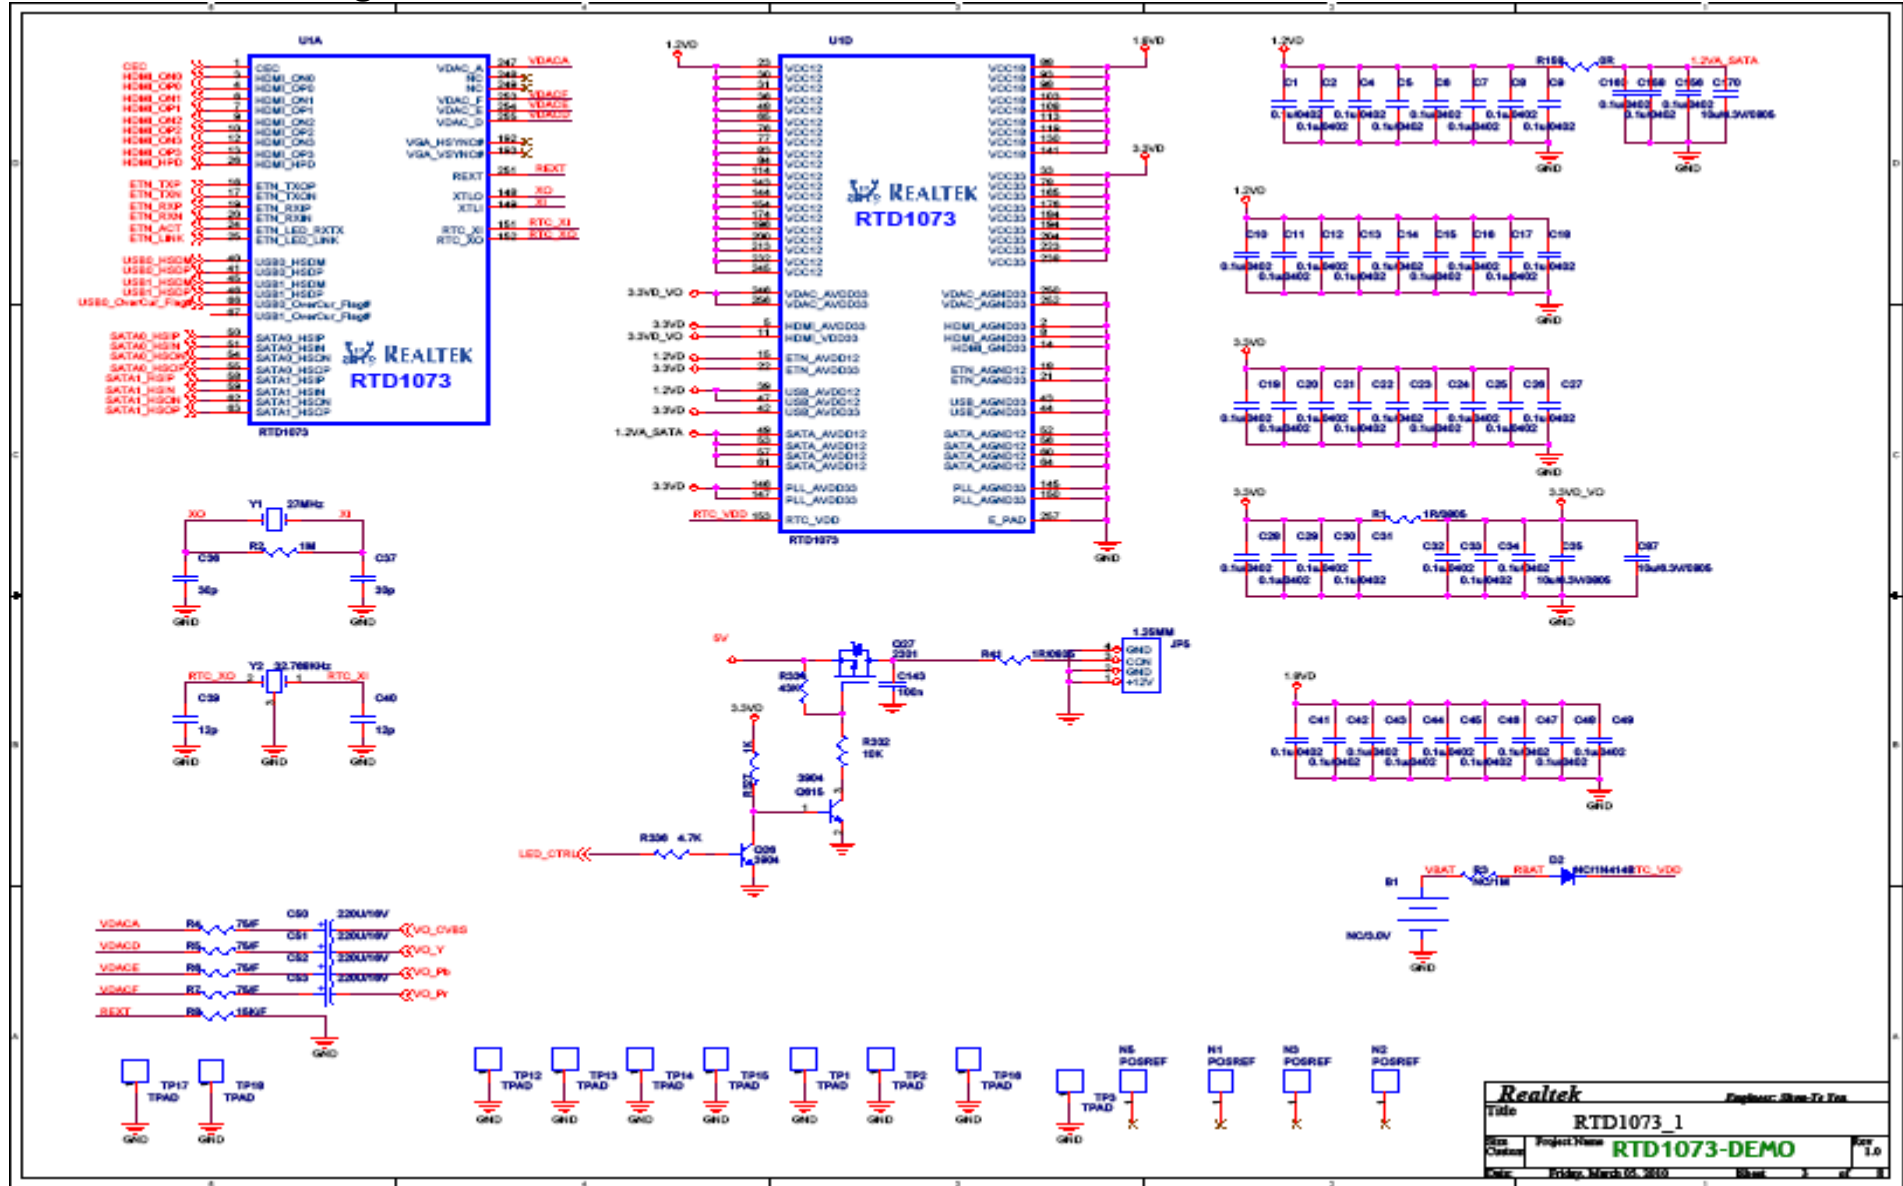

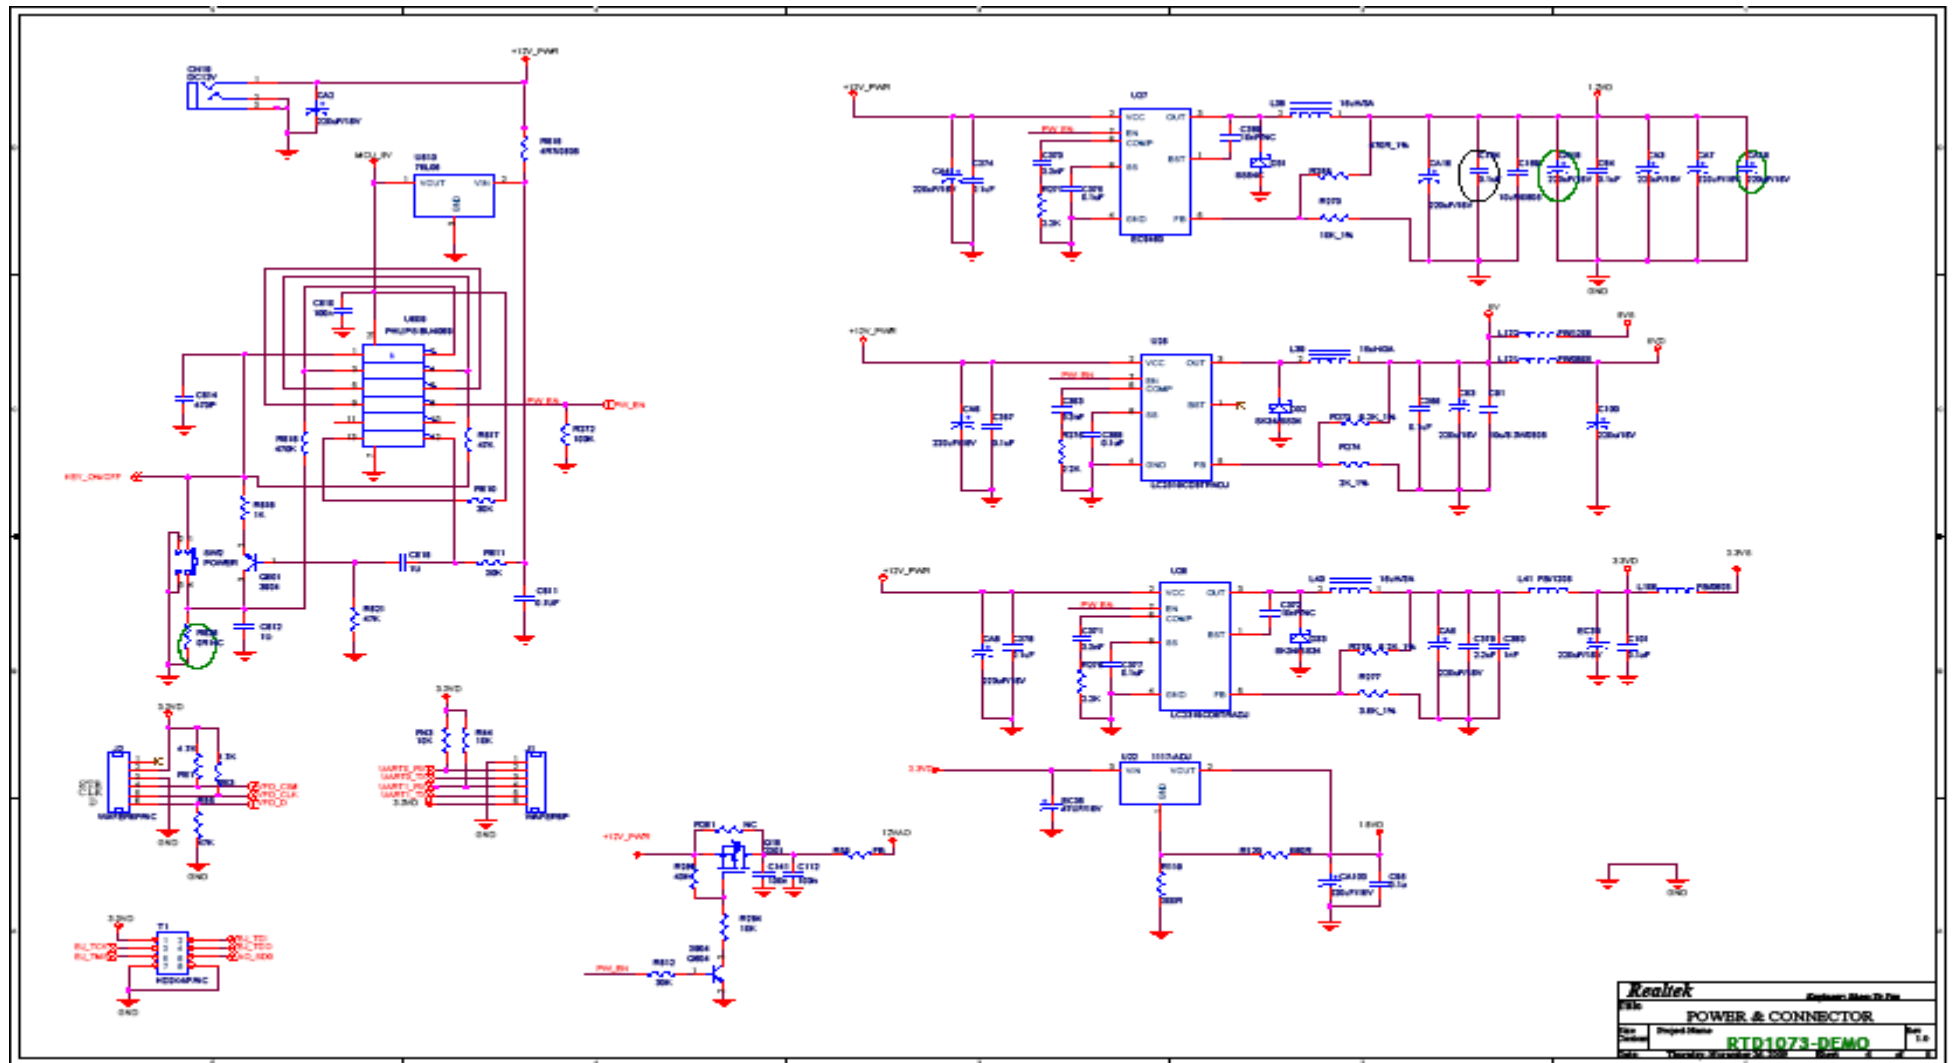

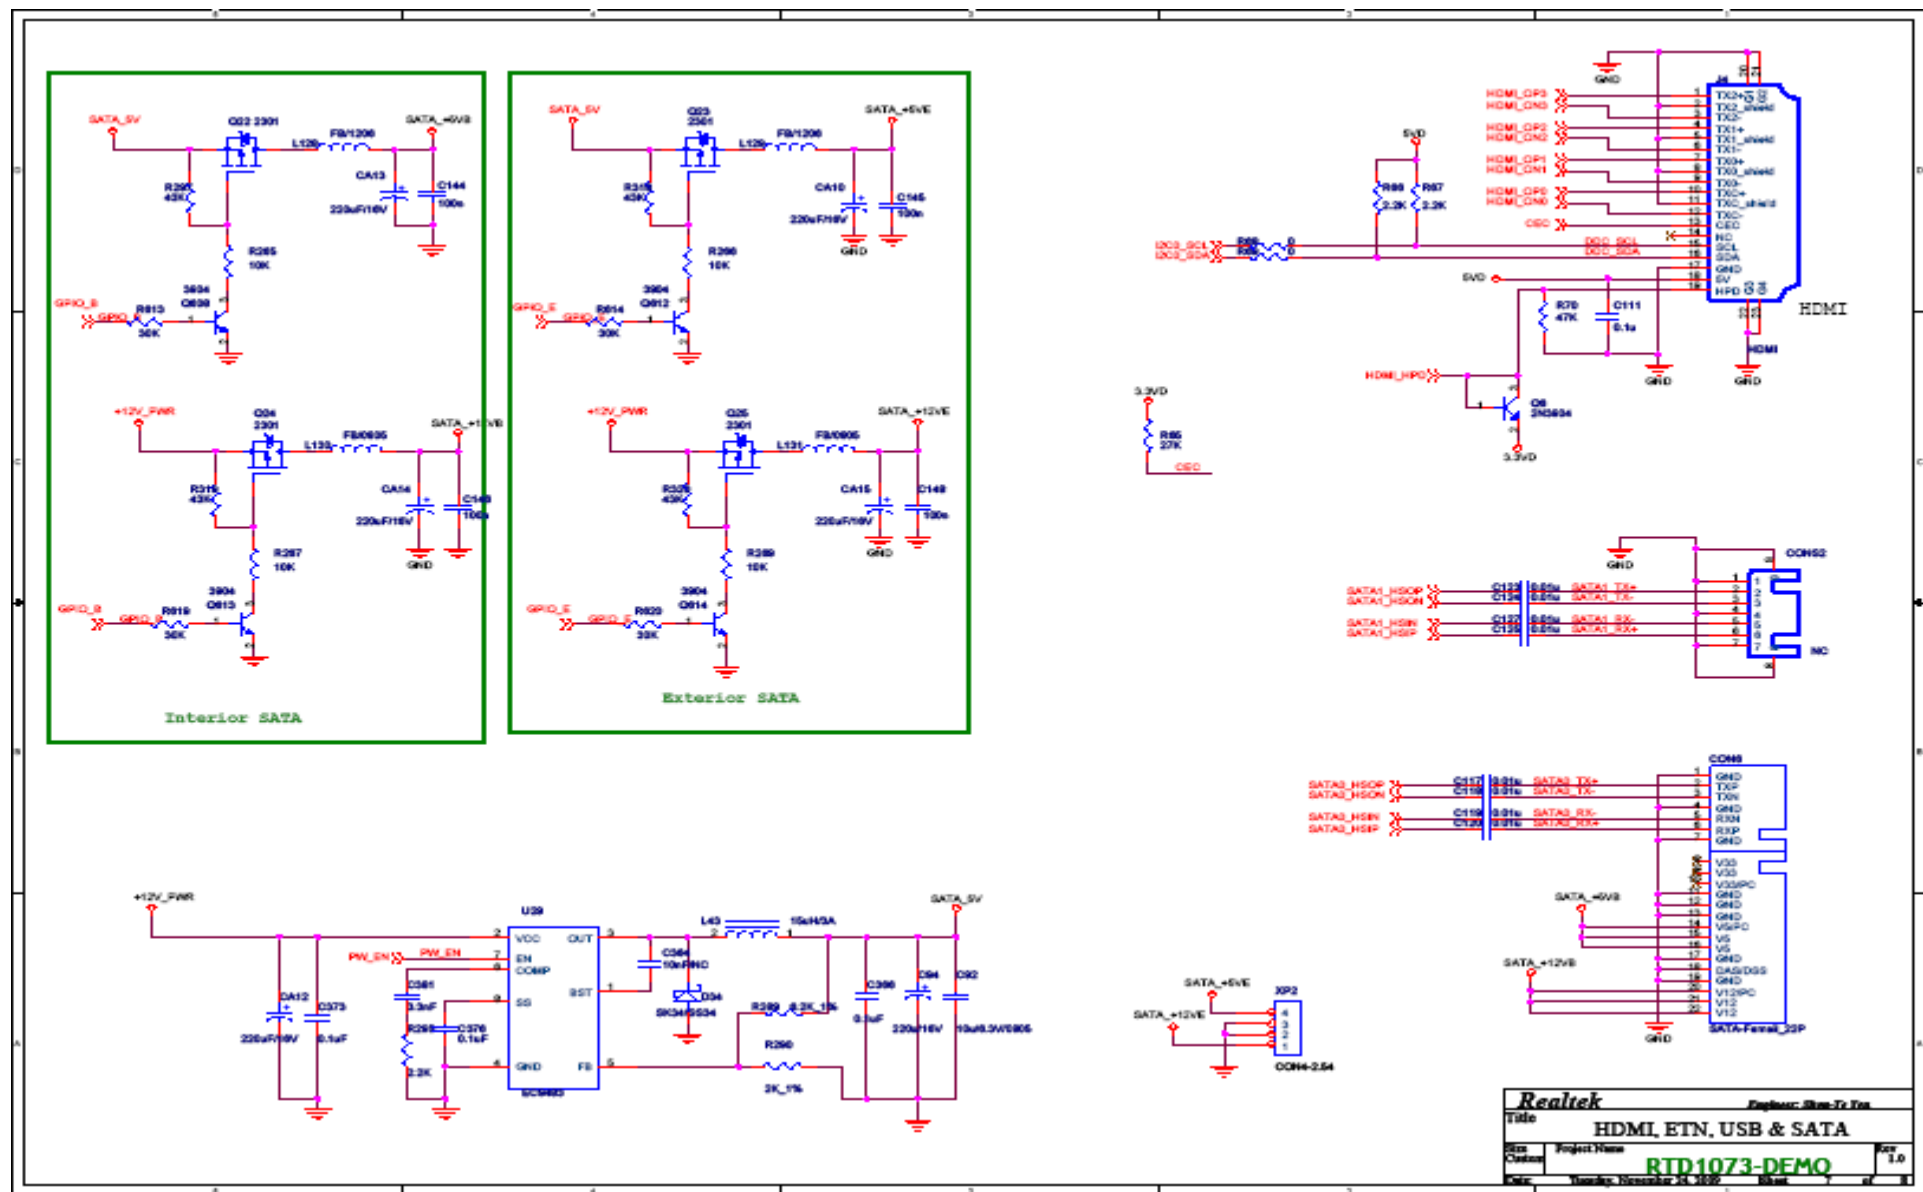

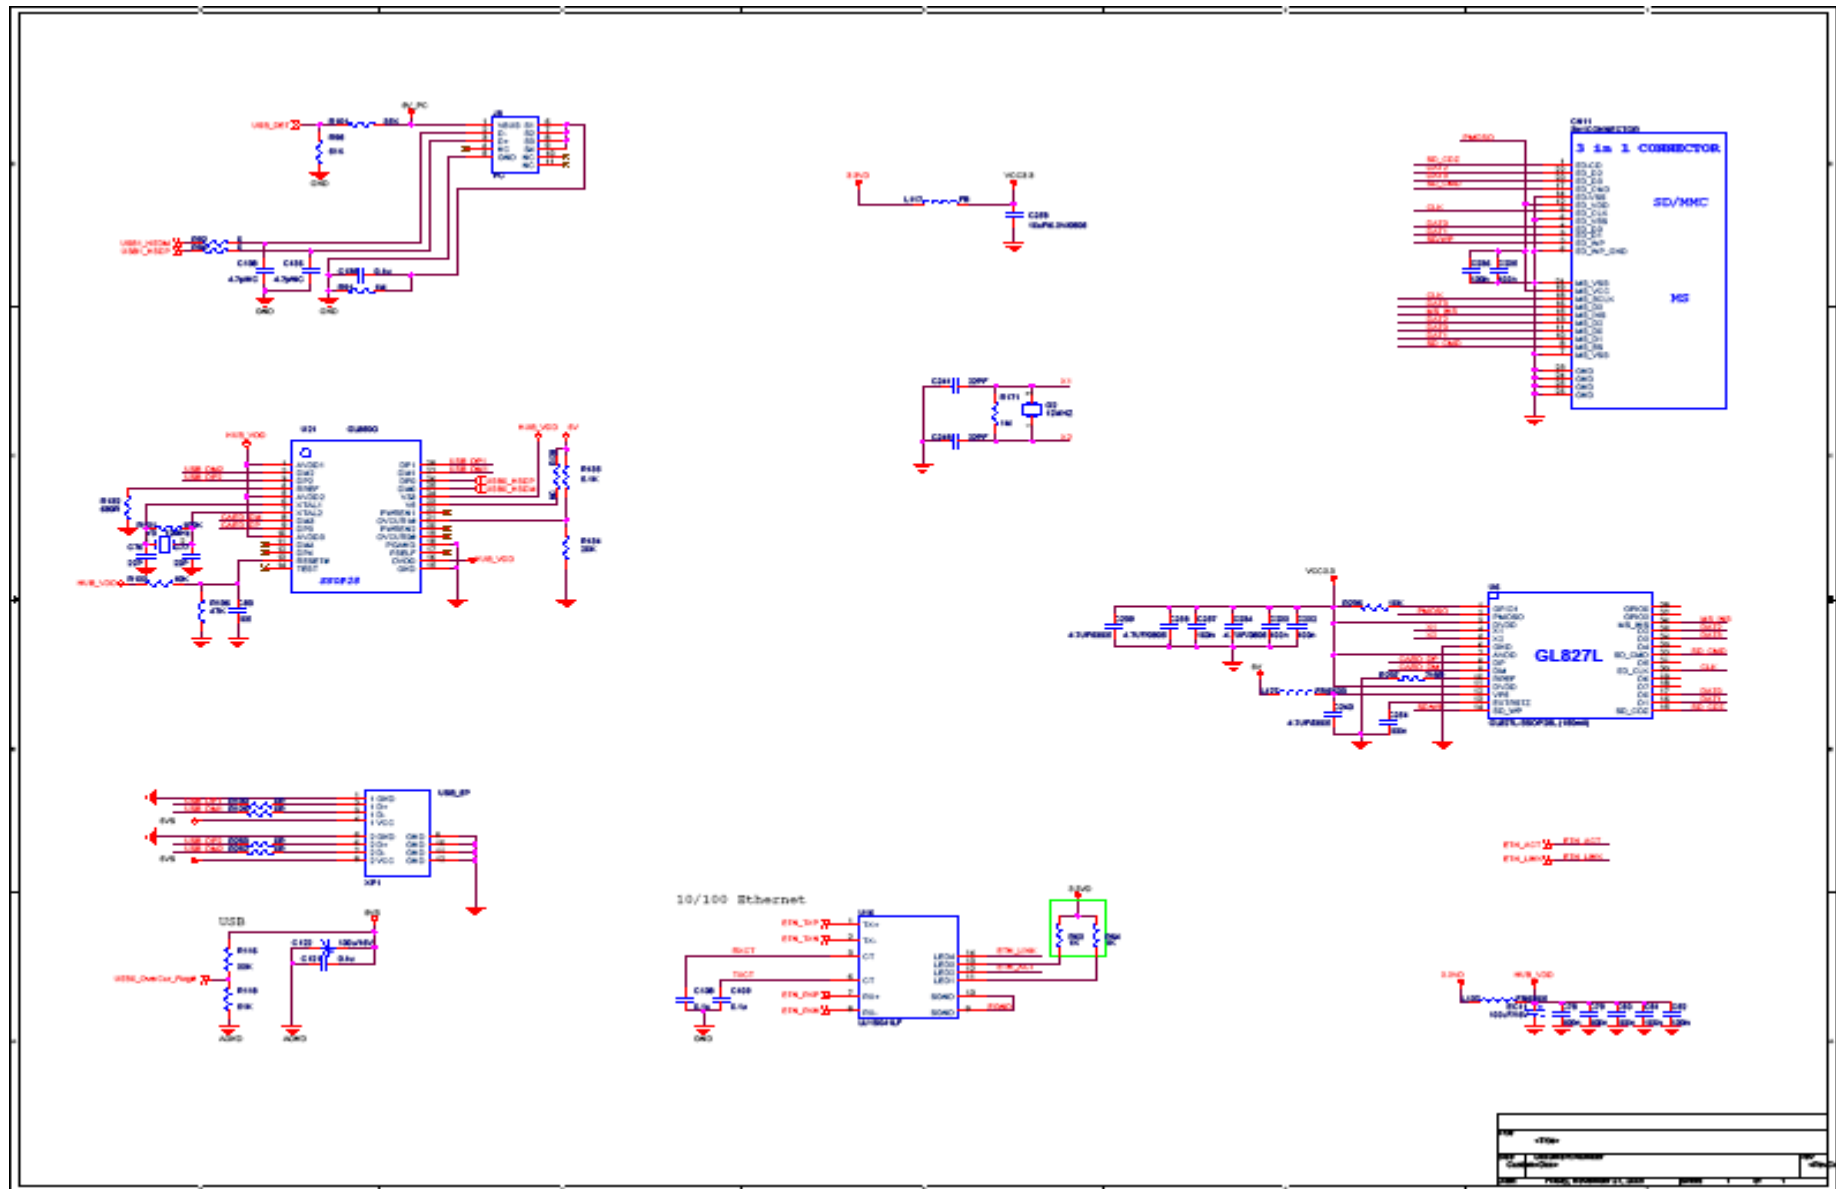

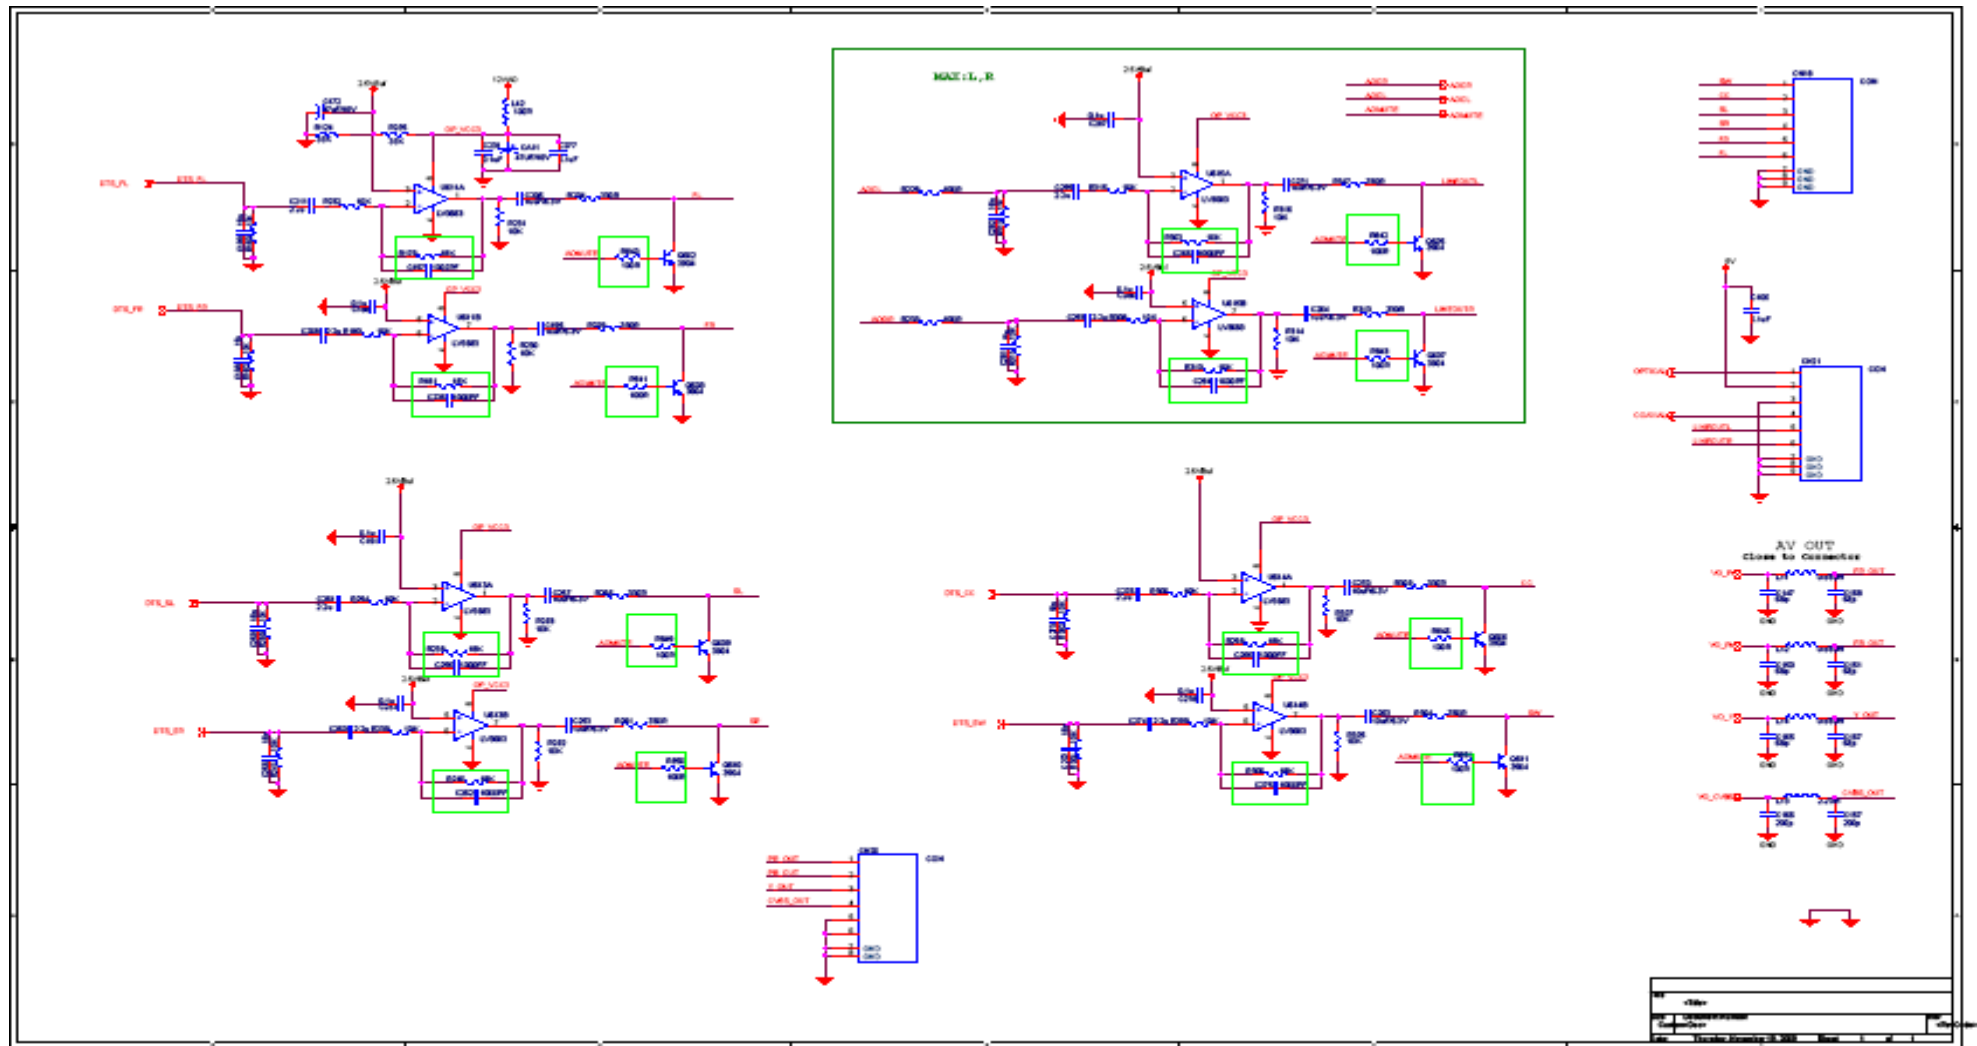

[illegible]

