


PCD7808 MAIN UNIT EXPLODED

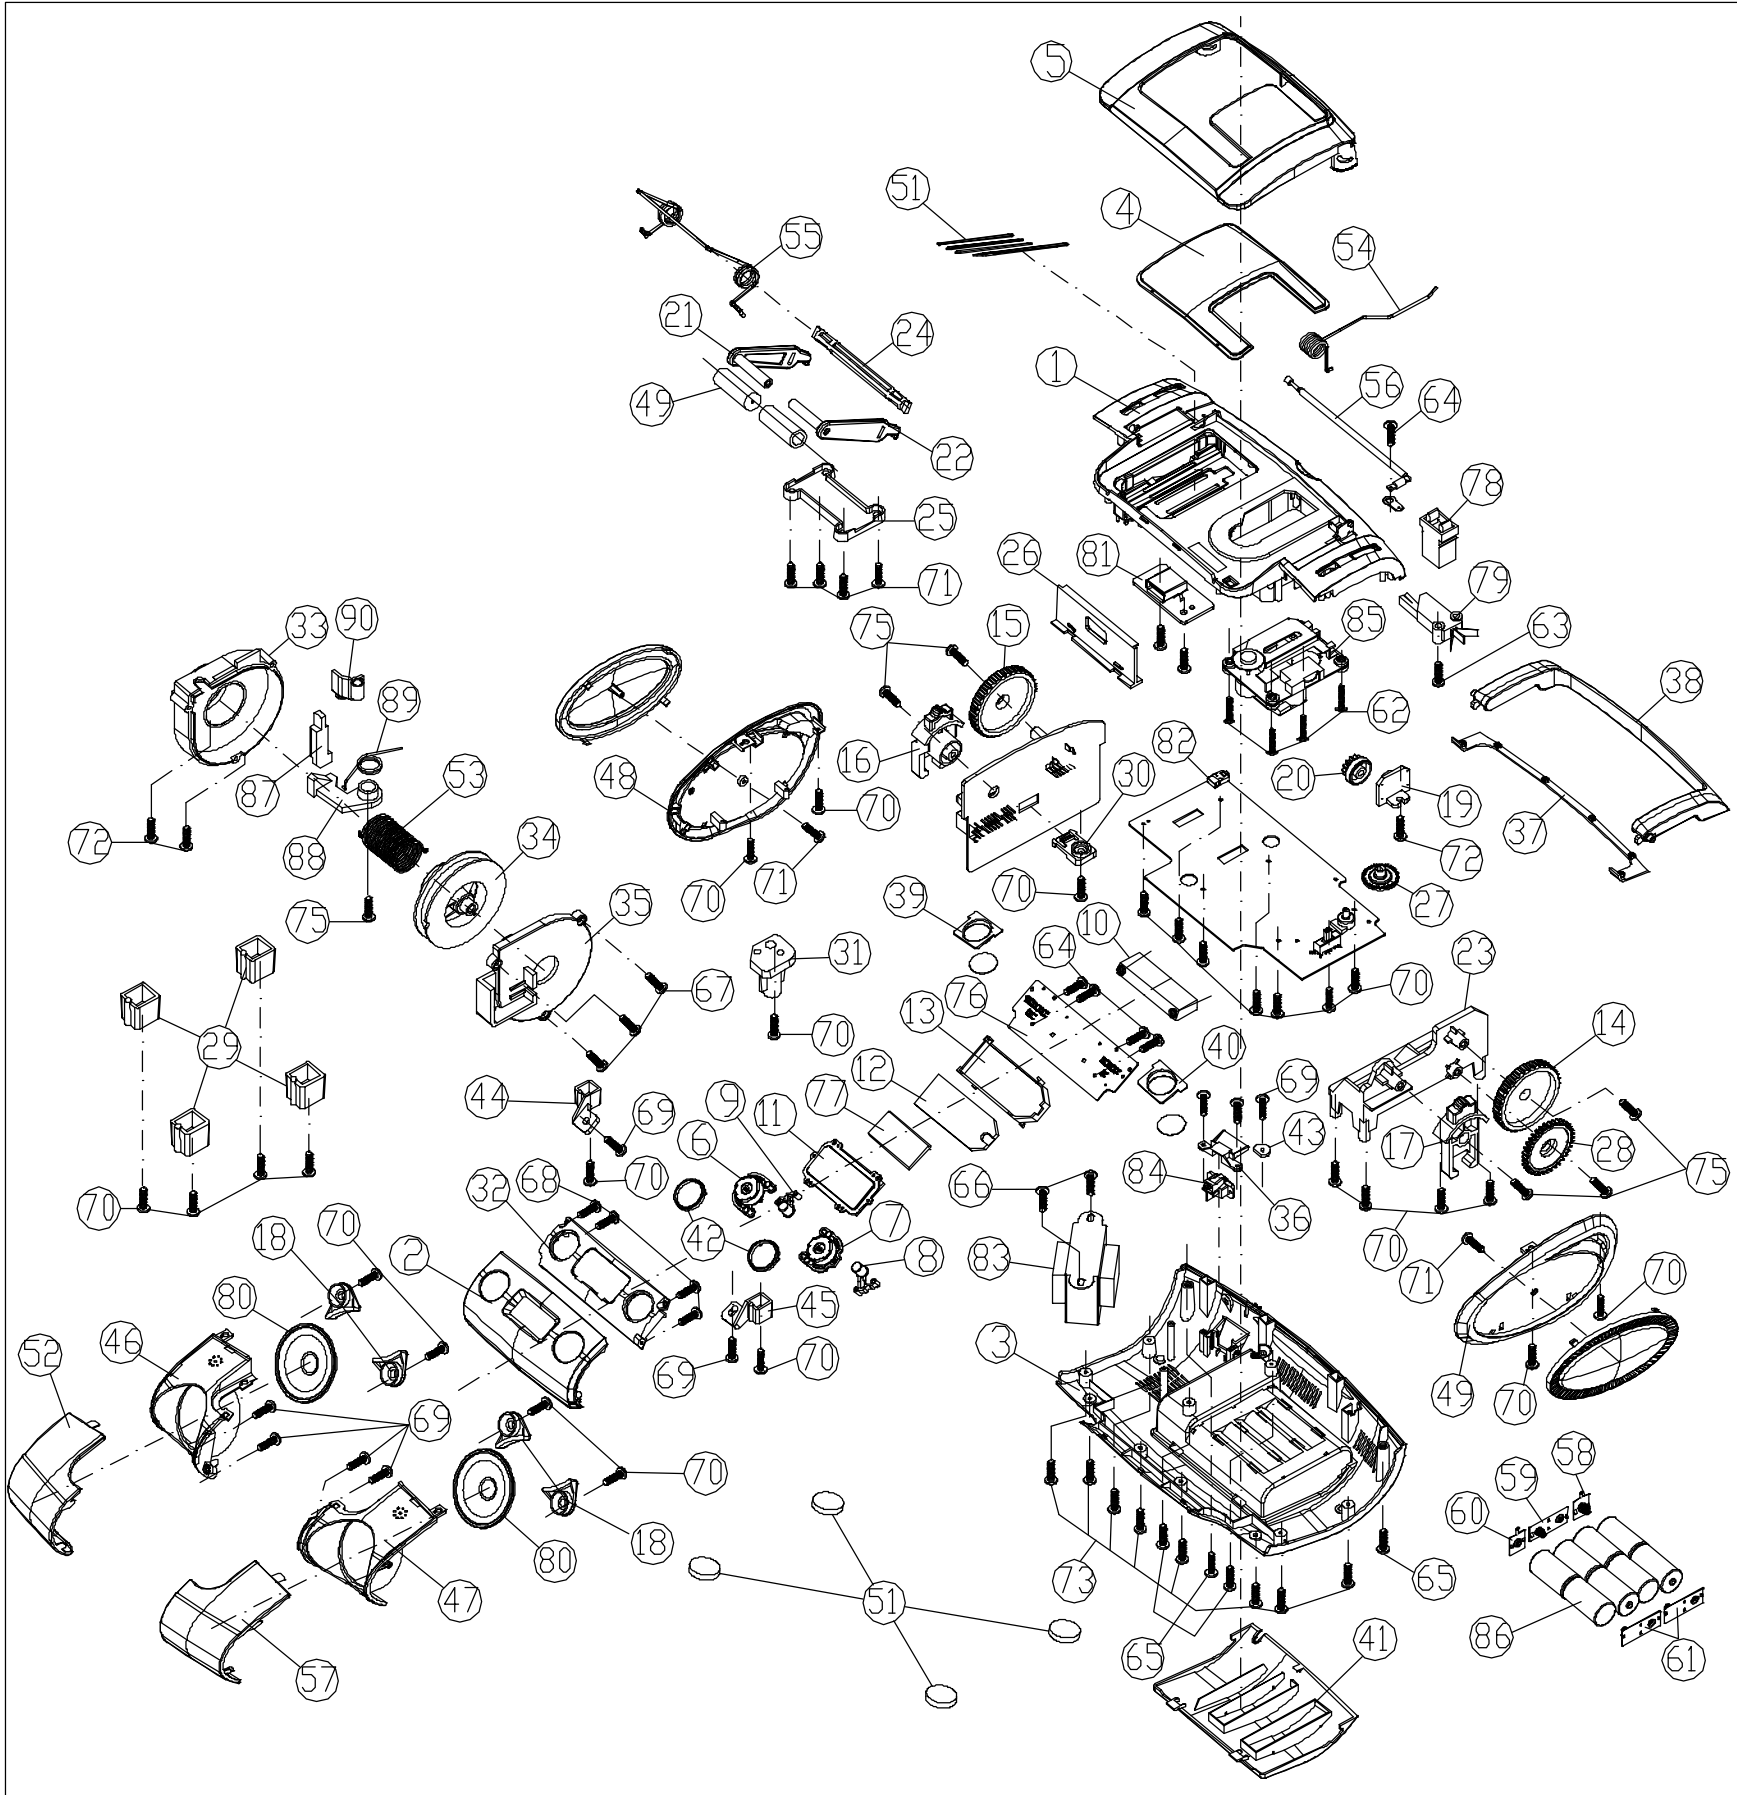

NO.	DESCRIPTION	QTY	NO.	DESCRIPTION	QTY
1	TOP CABINET	1	48	SIDE COVER BIG LEFT	1
2	FRONT PANEL	1	49	SIDE COVER BIG LEFT	1
3	BOTTOM CABINET	1	50	SILICON PLATE	6
4	CD DOOR LENS	1	51	RUBBER FOOT $\phi 10.0 \times 2.0$	4
5	CD DOOR	1	52	SPEAKER NET LEFT	1
6	BUTTON GROUP LEFT	1	53	WIRE WHEEL SPRING	1
7	BUTTON GROUP RIGHT	1	54	CD DOOR SPRING	1
8	CD PLAY BUTTON	1	55	FIXING IPOD SPRING	1
9	XBASS BUTTON	1	56	ANTENNA ROD	1
10	FRONT PANEL FIXING BRACKET	1	57	SPEAKER NET RIGHT	1
11	DISPLAY LENS	1	58	POSITIVE POLE	1
12	REFLECTOR	1	59	POSITIVE_NEGATIVE POLE	1
13	LCD BRACKET	1	60	NEGATIVE POLE	1
14	KNOB - TUNING	1	61	NEGATIVE_POSITIVE POLE	2
15	KNOB - VOLUME	1	62	SCREW TT/PWH M2.3x16	4
16	SLIDE KNOB - FUNCTION	1	63	SCREW TA/PH M2.0x12	1
17	SLIDE KNOB - BAND	1	64	SCREW TA/BH M2.6x10	5
18	SPEAKER CLAMP	4	65	SCREW TA/PH M3.0x16<BLACK>	4
19	GEAR HOLDER	1	66	SCREW TA/PWH M3.0x18	2
20	DAMPER GEAR	1	67	SCREW TA/BH M2.3x10	3
21	IPOD FIXER ARM LEFT	1	68	SCREW TA/PH M2.6x8	4
22	IPOD FIXER ARM RIGHT	1	69	SCREW TA/PH M3.0x12	7
23	TUNING BRACKET	1	70	SCREW TA/PH M3.0x10	36
24	SHAFT_IPOD FIXING ARM	1	71	SCREW TA/PH M3.0x8	6
25	SHAFT FIXING PLATE	1	72	SCREW TA/PWH M3.0x10	3
26	IPOD SD_USB AUX COVER	1	73	SCREW TA/PH M3.0x12<Black>	8
27	PVC GEAR	1	74	SCREW TA/PWH M3.0x10<W10>	1
28	GEAR - SPEED DOWN	1	75	SCREW TA/PWH M3.0x8	5
29	SPEAKER COVER LOCK UNIT	4	76	DISPLAY_PCB	1
30	VOL PCB FIXER	1	77	LCD	1
31	WIRE BOX FIXER	1	78	CD_DOOR LOCK	1
32	KEY PCB BRACKET	1	79	LEAF SWITCH	1
33	WIRE WHEEL CABINET	1	80	SPEAKER	2
34	WIRE WHEEL	1	81	SD_USB PCB	1
35	WIRE WHEEL COVER	1	82	MAIN PCB	1
36	SOCKET FIXING PLATE	1	83	X'FORMER	1
37	HANDLE BACK	1	84	AC SOCKET	1
38	HANDLE FRONT DIGITAL	1	85	CD MECH	1
39	BUZZER PLATE COVER LEFT	1	86	BATTERY	8
40	BUZZER PLATE COVER RIGHT	1	87	WIRE RELEASE BUTTON	1
41	BATTERY DOOR	1	88	WIRE LOCK PLATE	1
42	CD BUTTON RING	2	89	WIRE LOCK SPRING	1
43	AC CORD FIXER	1	90	AUX WIRE COVER	1
44	FRONT PANEL LOCK UNIT LEFT	1			
45	FRONT PANEL LOCK UNIT RIGHT	1			
46	SPEAKER BRACKET LEFT	1			
47	SPEAKER BRACKET RIGHT	1			