


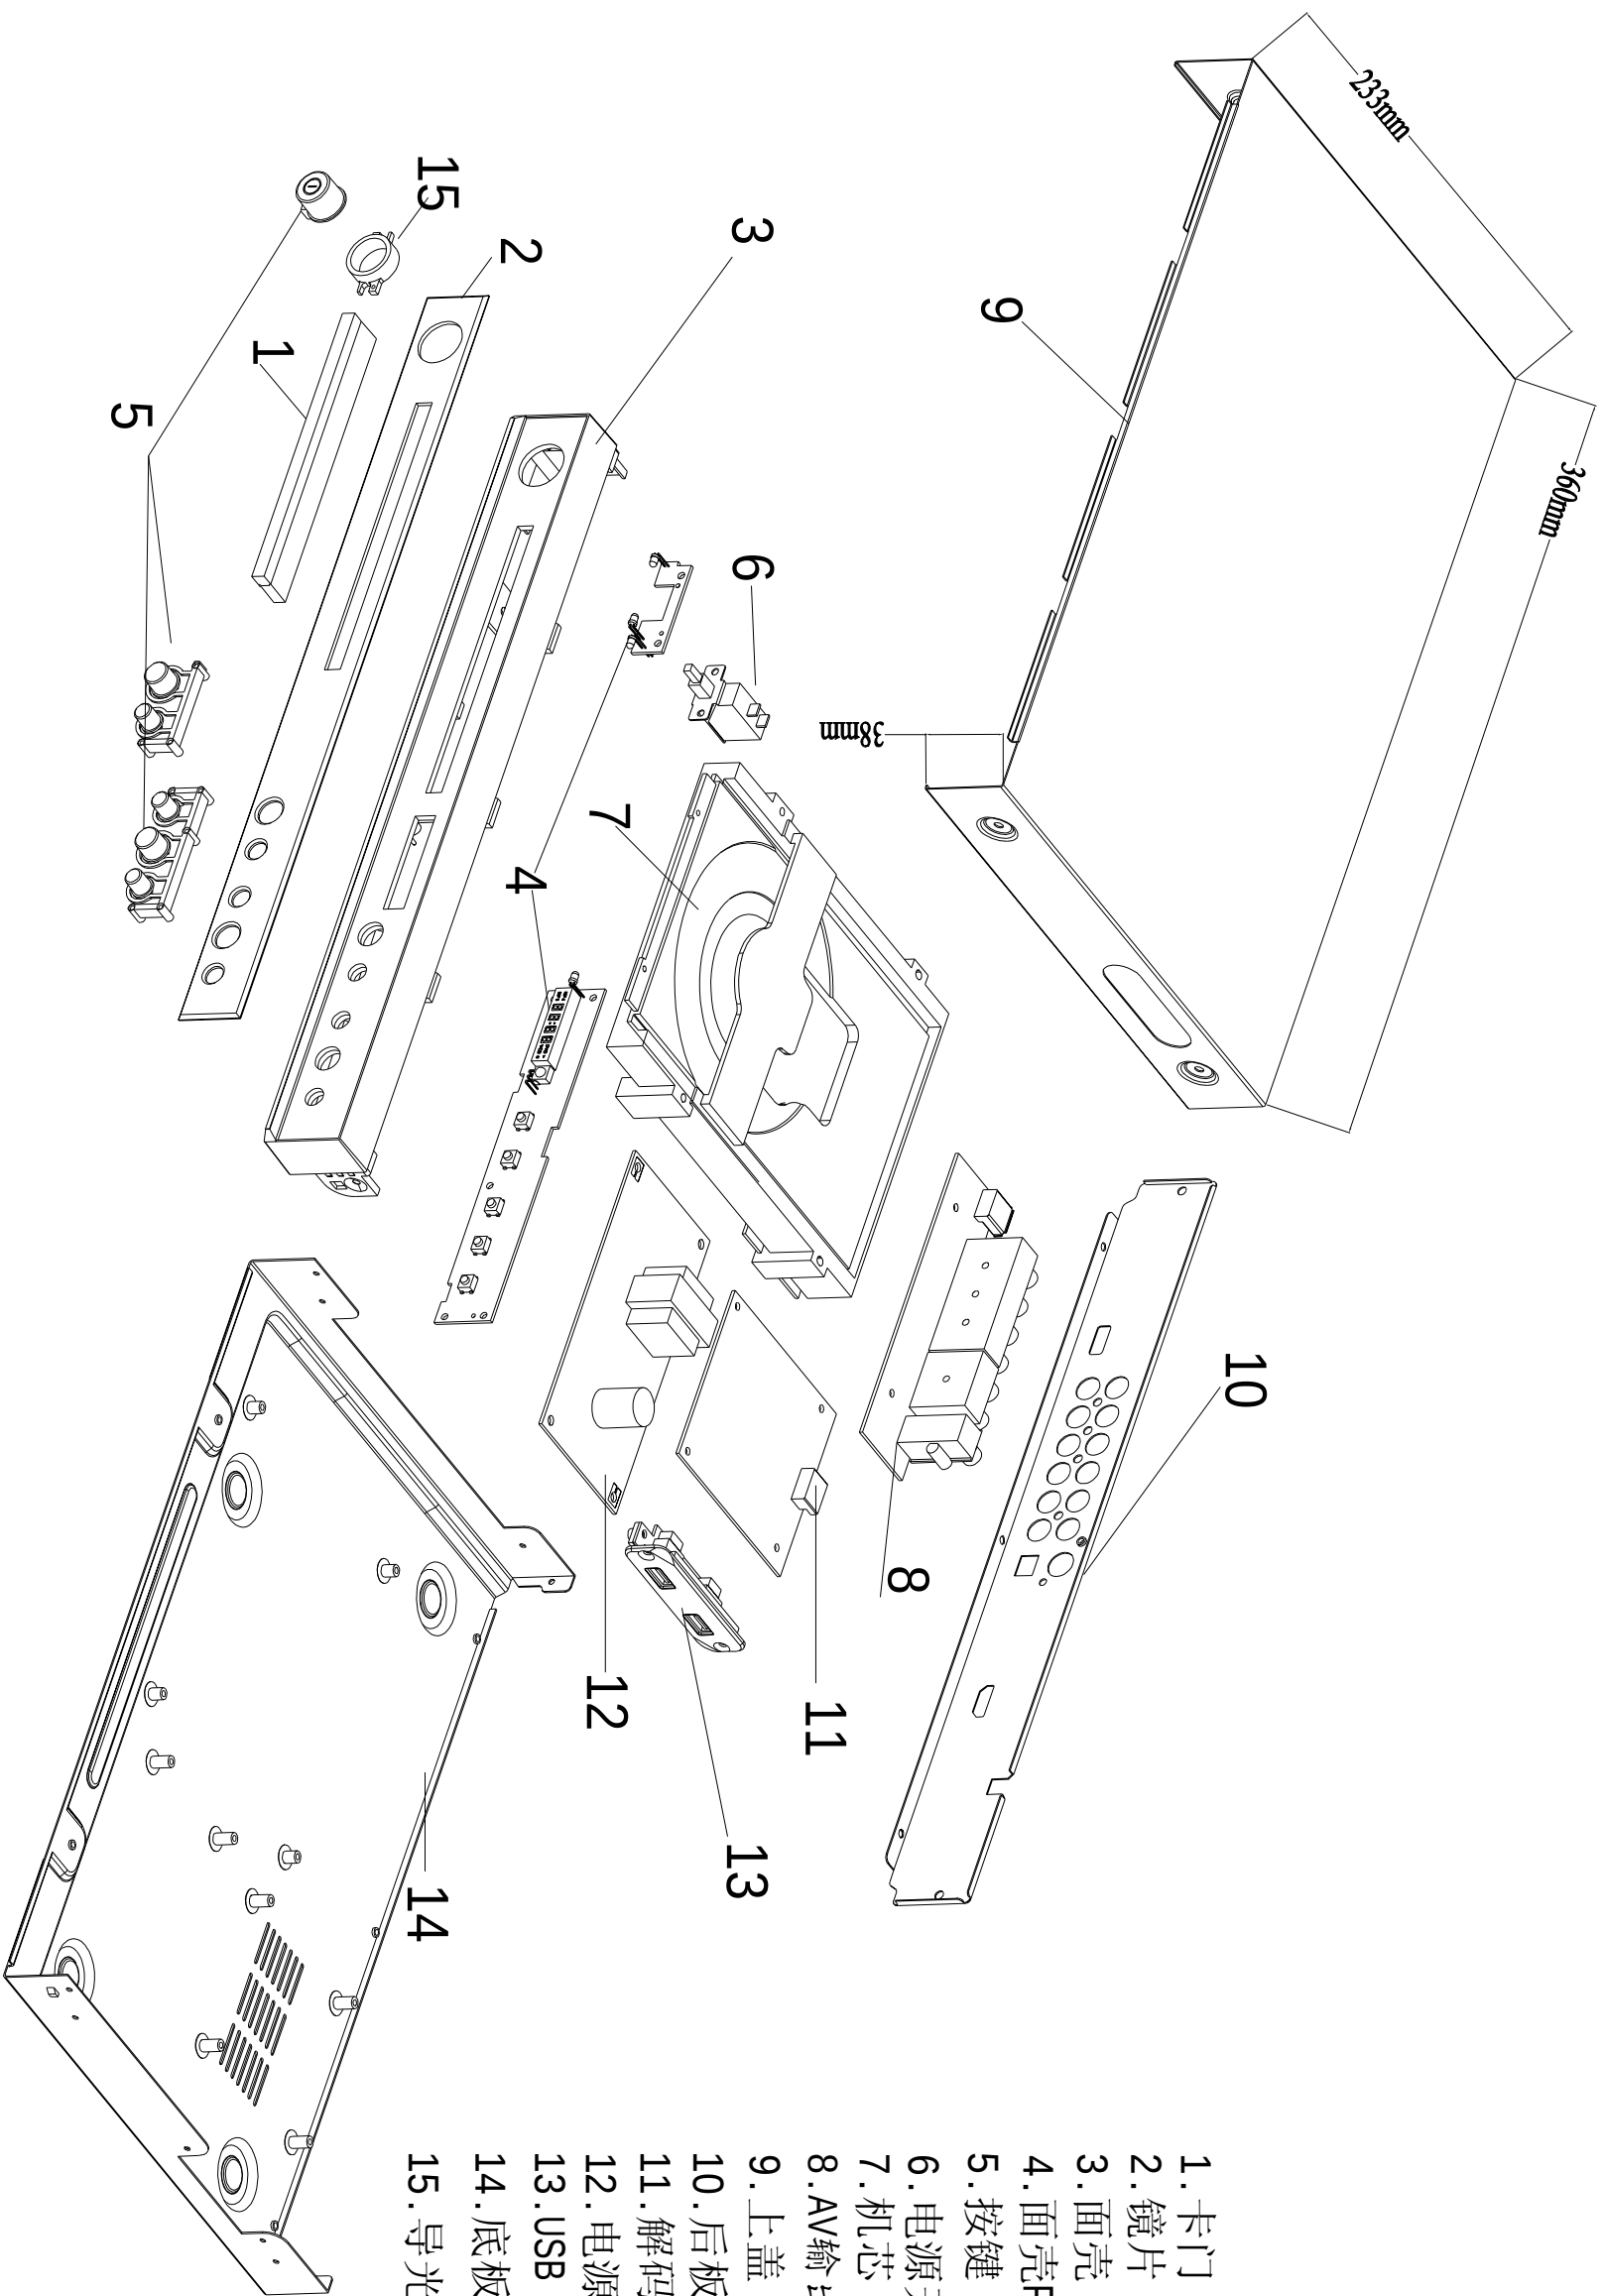

- 1.卡门 :CD DOOR
- 2.镜片 :lens
- 3.面壳 :FRONT PANEL
- 4.面壳PCB :FRONT PANEL-PCB
- 5.按键 :KEY SWITCH
- 6.电源开关:mains [power]switch
- 7.机芯 :LODER
- 8.AV输出板:AV-OUT
- 9.上盖 :TOP COVER
- 10.后板 :REAR PANEL
- 11.解码板 :DECODER
- 12.电源板 :POWER BOARD
- 13.USB
- 14.底板 :BOTTOM CABINET
- 15.导光圈 :aureole

DMP1024HD