

Ref No. MODE	IC1001																			
CD PLAY	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	0	0	0.6	5.5	5.5	2.8	0	0.3	0	1.9	7.2	0	11.3	0	0	0	0.3	0	0.2	5.4
STANDBY	0	0	0.4	0.4	0.2	0	0	0	0	0	0	0	0	0	0	0	0.3	0	0	0.1
Ref No. MODE	IC1001																			
CD PLAY	21	22	23	24																
CD PLAY	6.3	0.7	0	0																
STANDBY	0.3	0.3	0	0																
Ref No. MODE	IC1004																			
CD PLAY	1	2	3	4																
CD PLAY	7.9	0	0	0																
STANDBY	0	0	0	0																
Ref No. MODE	Q1003				Q1004				Q1005				Q1007				Q1017			
CD PLAY	E	C	B		E	C	B		E	C	B		E	C	B		E	C	B	
CD PLAY	0	-0.1	0		0	15.3	0		0	15.3	0		0	0	0		0	11.6	-0.6	
STANDBY	0	0	0		0	0	0		0	0	0		0	0	0		0	0	0	

SA-VK760EE DECK P.C.B.

Ref No. MODE	IC951																			
CD PLAY	1	2	3	4																
CD PLAY	0.7	5	4.2	5.3																
STANDBY	0	0	0	0																
Ref No. MODE	IC971																			
CD PLAY	1	2	3	4																
CD PLAY	0.5	0	3.9	5																
STANDBY	0	0	0	0																

SA-VK760EE DECK MECHANISM P.C.B.

Ref No. MODE	Q6901				Q6902				Q6903											
CD PLAY	E	C	B		E	C	B		E	C	B									
CD PLAY	2.4	4	3		0.1	1.5	0.7		4.5	6.3	5									
STANDBY	2.4	4	3		0.1	1.5	0.7		4.5	6.4	5									

SA-VK760EE MIC P.C.B.