

Ref No.	IC2600																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	5	0	0	0	0.1	0.1	0	2	3.5	1.1	0.7	5.1	-	0	-	5.2	5.2	5.1	1.4	0
STANDBY	5	0	0	0	0.1	0.1	0	2	3.5	1.1	0.7	5.1	-	0	-	5.2	5.2	5.1	1.4	0
Ref No.	IC2600																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
CD PLAY	0	0.2	5	0	0	0	5.1	5.1	5.1	5.1	0	0	0	0	2.7	4.1	4.5	0	0	0
STANDBY	0	0.2	5	0	0	0	5.1	5.1	5.1	5.1	0	0	0	0	2.7	4.1	4.5	0	0	0
Ref No.	IC2600																			
MODE	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
CD PLAY	0	5.2	4.2	0.1	4.9	0	5.2	0	5.2	0	0	0	0	0	0	0	0	0	0	0
STANDBY	0	5.2	4.2	0.1	4.9	0	5.2	0	5.2	0	0	0	0	0	0	0	0	5.1	0	0
Ref No.	IC2600																			
MODE	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
CD PLAY	5.2	5.2	0	0	0.8	0.8	0.5	5.1	5.1	5.1	5.2	5.1	5.1	5.2	5	5	0	3.8	0	0
STANDBY	5.2	5.2	0	0	0.8	0.8	0.5	5.1	5.1	5.1	5.2	5.1	5.1	5.2	5	5	0	3.8	0	0
Ref No.	IC2600																			
MODE	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
CD PLAY	0	0	4.7	5.1	0	0	0	5.1	4.3	0.5	4.7	3.9	4.3	4.3	0.5	0	3.5	5.1	5.2	5
STANDBY	0	0	4.7	5.1	0	0	0	5.1	4.3	0.5	4.7	3.9	4.3	4.3	0.5	0	3.5	5.1	5.2	5
Ref No.	IC2660								IC2720								IC2810			
MODE	1	2	3	4	5	6	7	8		1	2	3	4	5		1	2	3		
CD PLAY	-	5.1	0	0	0	0	0	-		17.1	5.2	0	1	3.2		17.1	0	12		
STANDBY	-	5.1	0	0	0	0	0	-		17.1	5.2	0	1	3.2		17.1	0	12		
Ref No.	Q2000				Q2001				Q2002				Q2110				Q2111			
MODE	E	C	B		E	C	B		E	C	B		E	C	B		E	C	B	
CD PLAY	0	0	4.2		0	12	0		12	0	12		4.7	-	5.2		4.7	-	5.1	
STANDBY	0	3.6	0		0	12	0		12	0	12		4.7	-	5.1		4.7	-	5.1	
Ref No.	Q2200				Q2201				Q2202				Q2340				Q2341			
MODE	E	C	B		E	C	B		E	C	B		E	C	B		E	C	B	
CD PLAY	0	-1.7	0		0	0	-1.7		0	0	-1.7		0	0	-4.7		0	0	-4.7	
STANDBY	1.7	-1.7	0		0	0	0.6		0	0	0.6		0	0	0.6		0	0	0.6	
Ref No.	Q2342				Q2370				Q2371				Q2500				Q2501			
MODE	E	C	B		E	C	B		E	C	B		E	C	B		E	C	B	
CD PLAY	0	-4.7	0		0	0	0.7		1.5	1.5	0		0	0	0.6		1.4	1.4	0	
STANDBY	1.5	1.5	0		0	0	0.1		1.5	1.5	0		0	0	0.6		1.4	1.4	0	
Ref No.	Q2502				Q2503				Q2504				Q2505				Q2600			
MODE	E	C	B		E	C	B		E	C	B		E	C	B		E	C	B	
CD PLAY	0	0	-4.7		0	0	0.7		0	0	0.6		0	0	-4.7		0	5.1	0	
STANDBY	0	0	0.6		0	0	0.7		0	0	0.6		0	0	0.6		0	5.1	0	
Ref No.	Q2700				Q2701				Q2702				Q2710				Q2711			
MODE	E	C	B		E	C	B		E	C	B		E	C	B		E	C	B	
CD PLAY	5.1	5.1	4.4		0	0	4.5		5.1	5.1	4.3		3.2	4.7	3.8		5.2	4.8	5.1	
STANDBY	5.1	5.1	4.4		0	0	4.5		5.1	5.1	4.3		6.2	4.7	3.8		4.8	5.1	4.8	
Ref No.	Q2810				Q2900				Q2902				Q2904				Q2906			
MODE	E	C	B		E	C	B		E	C	B		E	C	B		E	C	B	
CD PLAY	5.6	6.2	9		12	0	12		0	12	0		0	0	0.2		0	5.1	0	
STANDBY	5.6	6.2	9.1		12.1	0	12		0	12	0		0	0	0.2		0	5.1	0	
Ref No.	Q2913				Q2915				Q8030				Q8031							
MODE	E	C	B		E	C	B		E	C	B		E	C	B					
CD PLAY	6.3	0.5	6		0	4.6	-2.1		0	0	0		0	0	-3.5					
STANDBY	6.3	0.9	6.1		0	4.6	-2.1		0	0	0		0	0	0.7					
Ref No.	QR8031																			
MODE	E	C	B																	
CD PLAY	0	-3.5	0																	
STANDBY	1.8	1.8	0																	