


SCHEMATIC DIAGRAM - 10

D TACT SWITCH CIRCUIT


— : +B SIGNAL LINE

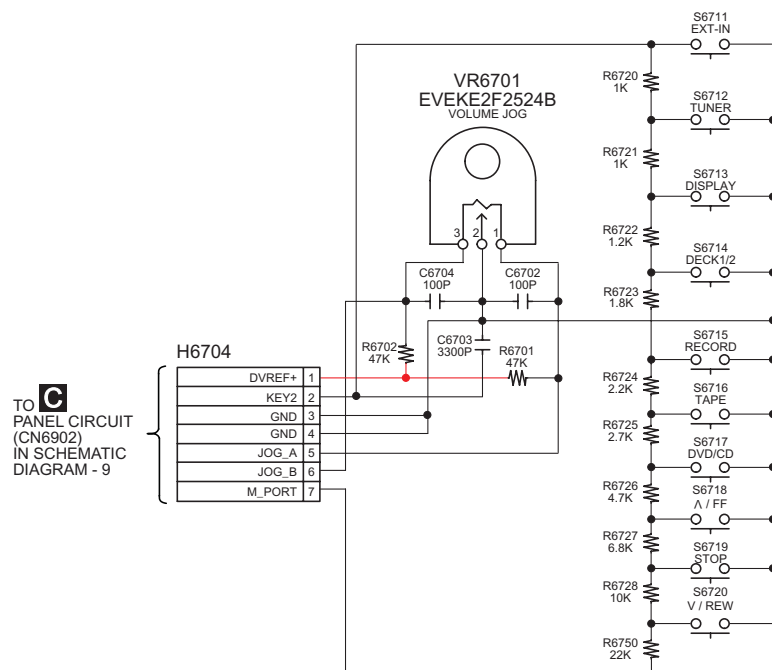

TO **C** PANEL CIRCUIT (CN6902) IN SCHEMATIC DIAGRAM - 9

E MIC CIRCUIT


— : +B SIGNAL LINE : MIC SIGNAL LINE

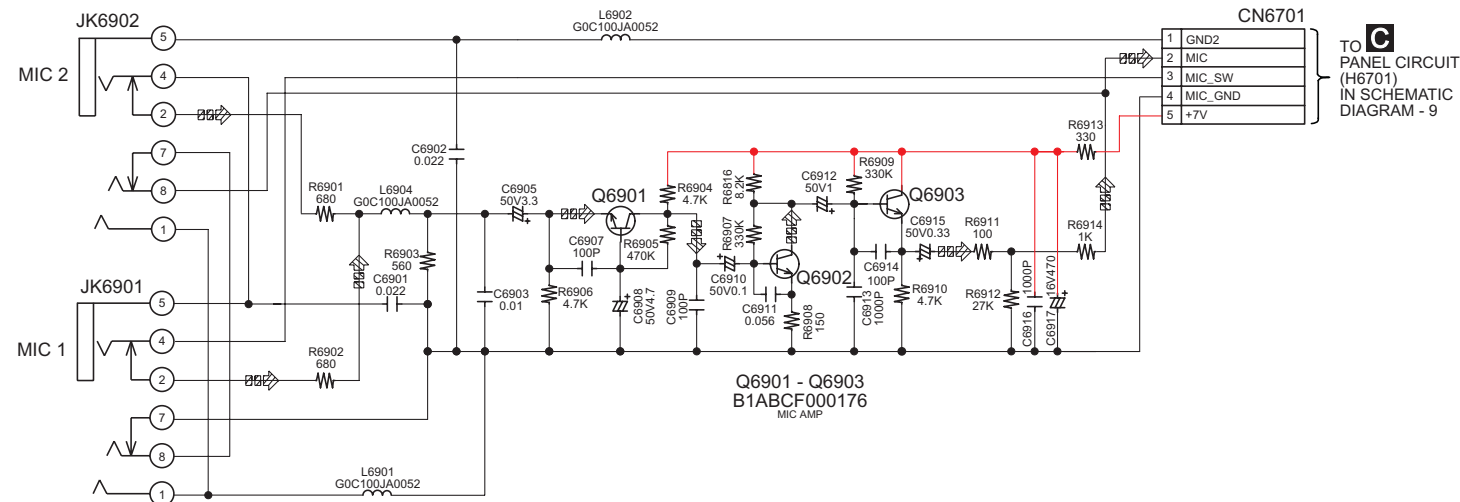

TO **C** PANEL CIRCUIT (H6701) IN SCHEMATIC DIAGRAM - 9


H USB RELAY CIRCUIT

 : USB SIGNAL LINE



I USB CIRCUIT


: USB SIGNAL LINE

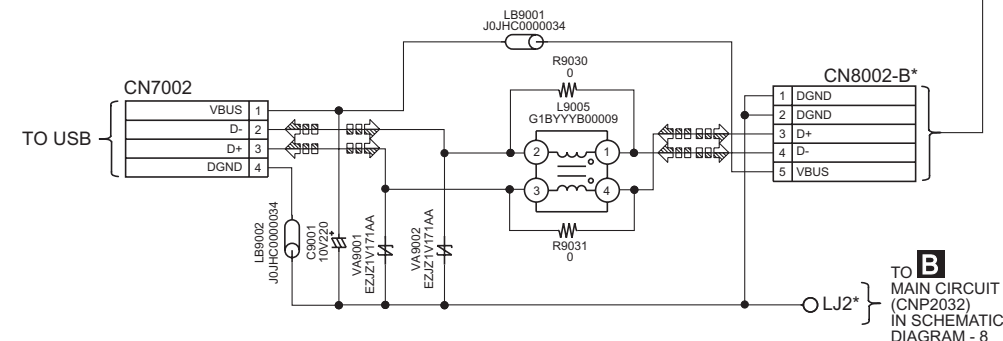

TO **B** MAIN CIRCUIT (CN2032) IN SCHEMATIC DIAGRAM - 8

G DECK MECHANISM CIRCUIT

— : +B SIGNAL LINE

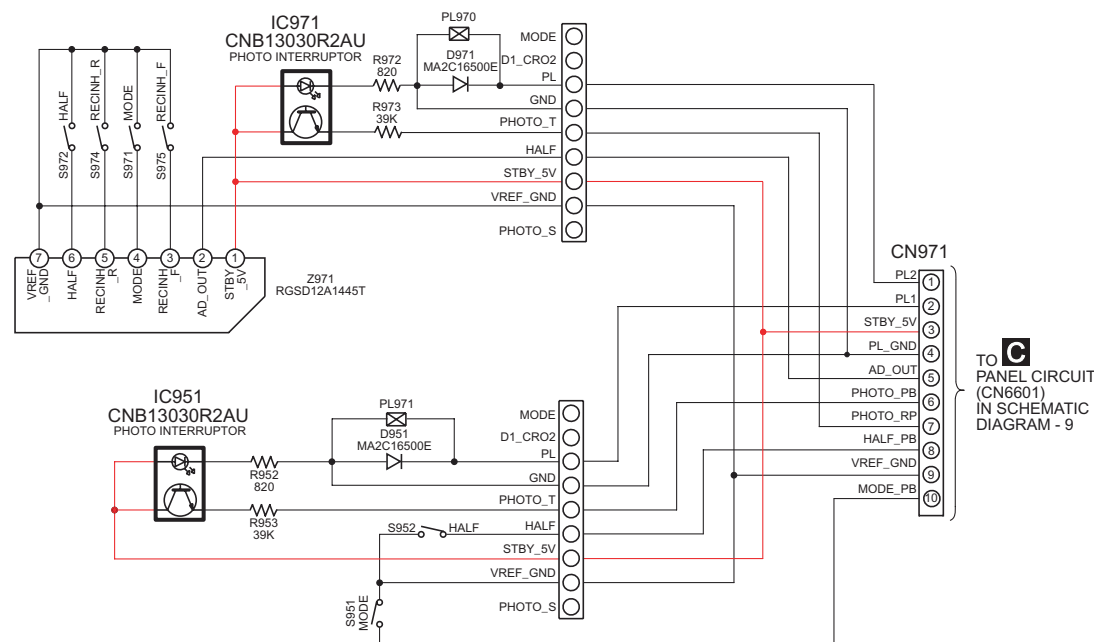

TO **C** PANEL CIRCUIT (CN6601) IN SCHEMATIC DIAGRAM - 9