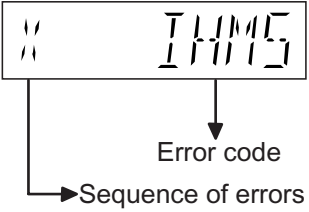
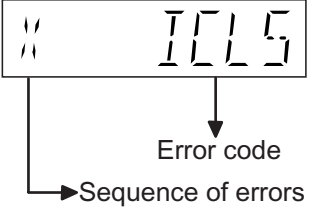
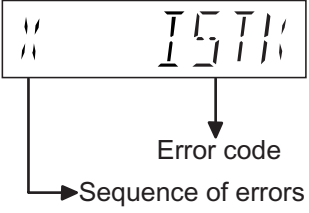
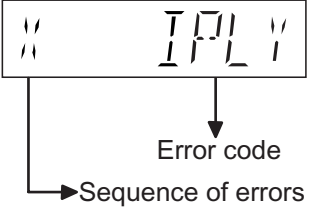
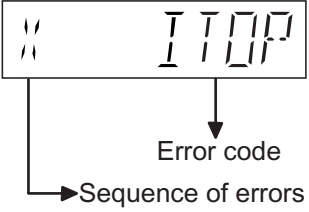
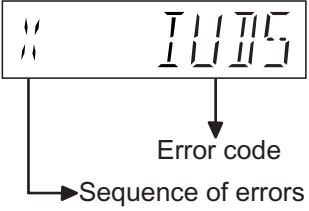
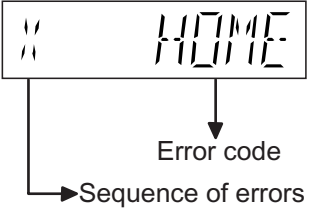
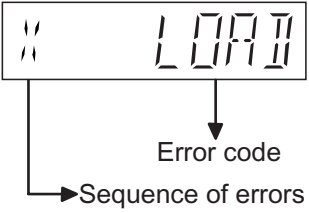


Error Code	Diagnosis Contents	Description of error	Automatic FL Display	Remarks
IHMS	Cam gear abnormality	Cam gear does not rotate to "HOME" position		For CD/DVD changer unit (CRS1D). Press [SINGLE CHANGE] on main unit for next error.
ICSL	Cam gear/gear units abnormal	Cam gear does not rotate to "PLAY" driving position and hence does not drive playing tray to "STOCK" position.		For CD/DVD changer unit (CRS1D). Press [SINGLE CHANGE] on main unit for next error.
ISTK	Drive rack/gear assembly abnormal	The tray drive rack does not move to "STOCK" position. (Tray does not move to "STOCK" position)		For CD/DVD changer unit (CRS1D). Press [SINGLE CHANGE] on main unit for next error.
IPLY	Drive rack/gear assembly abnormal	The tray drive rack does not move to "PLAY" position. (Tray does not move to "PLAY" position)		For CD/DVD changer unit (CRS1D). Press [SINGLE CHANGE] on main unit for next error.
ITOP	UD assembly	UD rack does not move to front position. This lead to UD base not raise to top position		For CD/DVD changer unit (CRS1D). Press [SINGLE CHANGE] on main unit for next error.
IUDS	UD assembly	After TOP SW is detected, UD rack does not move into tray 1 position.		For CD/DVD changer unit (CRS1D). Press [SINGLE CHANGE] on main unit for next error.
HOME	Cam gear/gear assembly abnormal	Cam gear does not move to "HOME" position under the following conditions: 1. After tray is loaded to "PLAY" position. 2. After tray is loaded to "STOCK" position.		For CD/DVD changer unit (CRS1D). Press [SINGLE CHANGE] on main unit for next error.
LOAD	Tray drive assembly abnormal	Tray unit does not move from "STOCK" to "PLAY" position.		For CD/DVD changer unit (CRS1D). Press [SINGLE CHANGE] on main unit for next error.