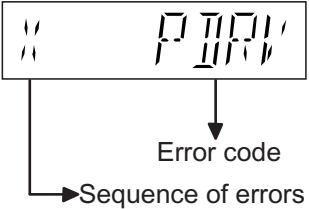
 
 
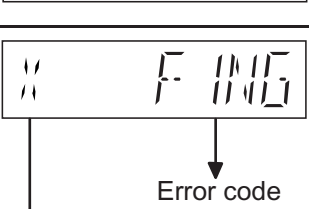
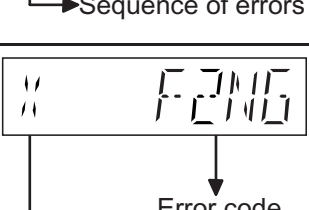
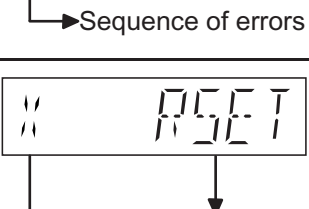


Error Code	Diagnosis Contents	Description of error	Automatic FL Display	Remarks
PDRV	Cam gear/gear assembly abnormal	Cam gear does not move from "HOME" to "PLAY" drive position.		For CD/DVD changer unit (CRS1D). Press [SINGLE CHANGE] on main unit for next error.
UDU	UD base assembly abnormal	UD base assembly does not move upwards from tray 5 to tray 2.		For CD/DVD changer unit (CRS1D). Press [SINGLE CHANGE] on main unit for next error.
UDD	UD base assembly abnormal	UD base assembly does not move downwards from tray 1 to tray 5.		For CD/DVD changer unit (CRS1D). Press [SINGLE CHANGE] on main unit for next error.
UD1	UD base assembly abnormal	UD base assembly does not move to tray 1.		For CD/DVD changer unit (CRS1D). Press [SINGLE CHANGE] on main unit for next error.
F1NG	Fail - safe mode. (For open/close tray unit(s))	When the tray open operation is performed, it fails to open. It will automatically close all trays after the time-out by the microprocessor. During this time when it fails, the error code will appear.		For CD/DVD changer unit (CRS1D). Press [SINGLE CHANGE] on main unit for next error.
F2NG	Fail - safe mode. (For open/close tray unit(s))	When the tray open operation is performed, it fails to close. It will automatically close all trays after the time-out by the microprocessor. During this time when it fails, the error code will appear.		For CD/DVD changer unit (CRS1D). Press [SINGLE CHANGE] on main unit for next error.
RSET	Cam gear jam/close sensor faulty	During tray re-open, the cam gear will rotate in the opposite direction to reset the cam gear position. When it fails, the error code will appear.		For CD/DVD changer unit (CRS1D). Press [SINGLE CHANGE] on main unit for next error.