 
 
 
 
 
 
 
 
 


Error Code	Diagnosis Contents	Description of error	Automatic FL Display	Remarks
H01	Tray loading error	The tray opening and closing is abnormal. CLOSE and OPEN of the tray cannot be carried out properly. Loading motor error, DV5 LSI IC (IC8001) error.		Press [■ STOP] on main unit for next error. (OPEN time: OPEN→CLOSE→OPEN→H01 at CLOSE: CLOSE→OPEN→CLOSE→H01)
H02	Spindle servo error	The spindle servo/motor is abnormal. The FG pulse is abnormal. CLV servo error.		Press [■ STOP] on main unit for next error.
H03	Traverse servo error	The traverse is abnormal. (Traverse servo, DV5 LSI IC (IC8001), TRV motor error.)		Press [■ STOP] on main unit for next error.
H04	Tracking servo error	Tracking coil NG (OPU unit abnormal), DV5 LSI IC (IC8001) error.		Press [■ STOP] on main unit for next error.
H05	Seek time out error	It is not possible to access the disc. TOC cannot read. Abnormal disc etc. Pickup abnormal or disk is dirty. (TRV motor error, DV5 LSI IC (IC8001) error.)		Press [■ STOP] on main unit for next error.
H07	Driver IC thermal shut down	The spindle motor is abnormal. (short between brushes)		Press [■ STOP] on main unit for next error.
H15	Disc tray open detection switch failure	The disc tray cannot be opened & it closes spontaneously.		Press [■ STOP] on main unit for next error.
H16	Disc tray close detection switch failure	The disc tray cannot be closed & it opens spontaneously.		Press [■ STOP] on main unit for next error.
U11	Focus servo error	Focus coil, FE signal error.		Press [■ STOP] on main unit for next error. (Unfinalized DVD-R is likely to become U11.)
U15	Unfinalized DVD-R			
F500	DSC error	DV5 LSI IC (IC8001) stops in the occurrence of servo error (startup, focus error, etc)		Press [■ STOP] on main unit for next error.
F506	Invalid media	Disc is flipped over, TOC unreadable, incompatible disc.		Press [■ STOP] on main unit for next error.
F620	OPU unit abnormality temperature	Laser protection at high temperature.		Press [■ STOP] on main unit for next error.
F621	OPU unit circuitry temperature	Laser protection at circuit failure.		Press [■ STOP] on main unit for next error.