
 


Refer to the numbers in parentheses for page reference. Buttons such as ❶ function the same as the controls on the remote control.

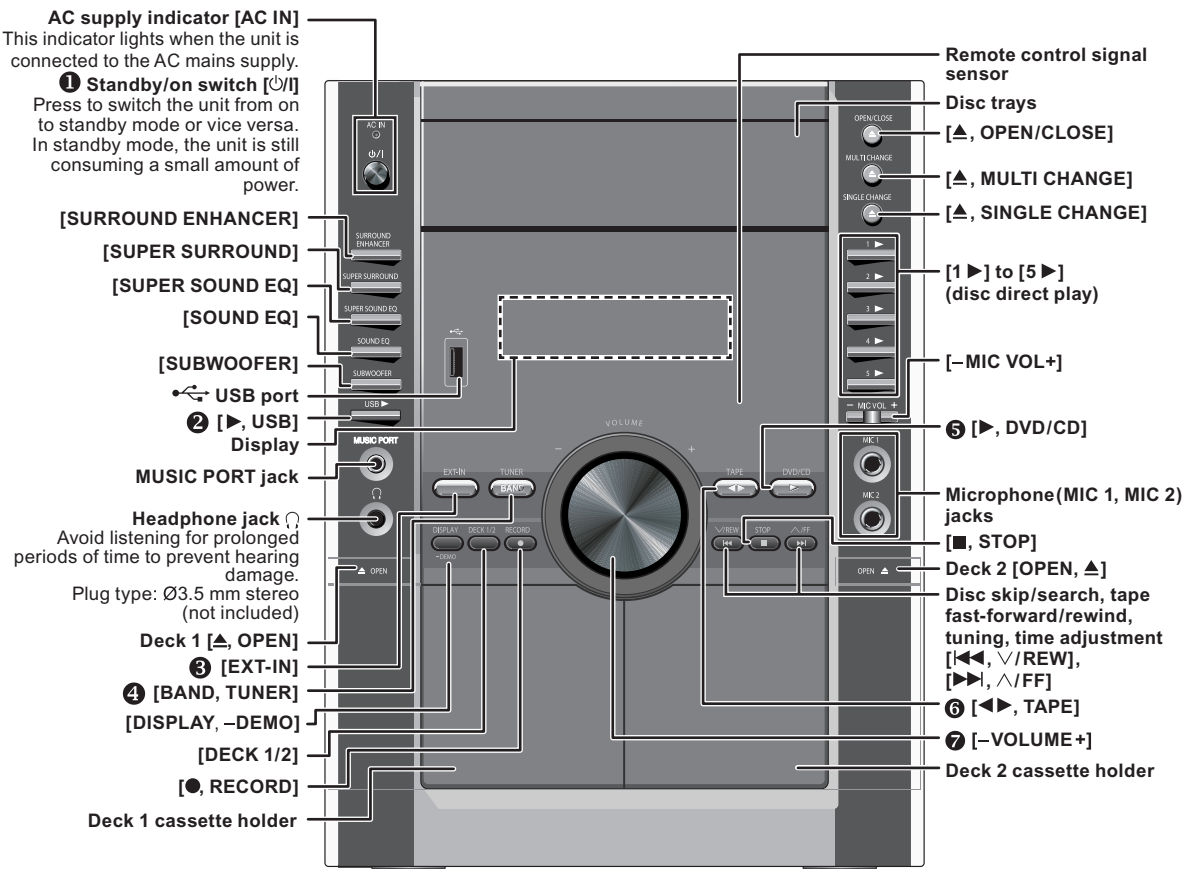

To select the desired display mode

Every time you press the button:



Normal

Indicates strength of the sound in each tonal range.

Peak hold

Peak sound value of each sound range (on display for about one second after it occurs).

Reflection

Indicates the strength of the sound in each tonal range (displayed in the opposite direction of normal mode).