

"NO DISC" is displayed, unit does not play smoothly, etc.

Check the laser drive current.

Method: With no disc in the main unit:

- Press the "FUNCTIONS" button on the remote control unit while pressing the "STOP" button on the main unit. (DVD)
- Press the "3" button on the remote control unit while pressing the "STOP" button on the main unit. (CD)

[Display content (display1/display2)]

LDD / 000 000D (DVD)

Factory setting Present value

LDC / 000 000 (CD)

Factory setting Present value

Value is 23 (DVD),
34 (CD) or less.

Value is more than
23 (DVD), 34 (CD).

Replace the optical pickup.
(Refer to the section "OPTICAL
PICKUP REPLACEMENT
PROCEDURE" in this Guide.)

Replace with a new optical pickup if the present value is more than 23 (DVD), 34 (CD).
Cause: Damage due to static electricity during replacement.

Check the laser drive current
after replacement.

- Write the present value into the unit if it is 23 (DVD), 34 (CD) or less.

Method: With no disc in the main unit:

- Press the "FUNCTIONS" button on the remote control unit while pressing the "STOP" button on the main unit. (DVD)
- Press the "3" button on the remote control unit while pressing the "STOP" button on the main unit. (CD)

Do the optical pickup tilt
adjustment. (Refer to the section
"TILT ADJUSTMENT" in this
Guide.)

Use the tilt adjustment
check function.

Writing method:

- Press the "PAUSE" button on the remote control unit while pressing the "STOP" button on the main unit.

Initialize the main unit.

Note: Press "FL DISPLAY" button on remote control unit for next page display.