 


Item		FL Display	Key Operation
Mode Name	Description		Front Key
Jitter check	Jitter check. Jitter rate is measured and displayed. Measurement is repeatedly done in the cycle of one second. Read error counter starts from zero upon mode setting. When target block data failed to be read out, the counter advances by one increment. When the failure is caused by minor error, it may be corrected when retried to enable successful reading. In this case, the counter advances by one. When the error persists even after retry, the counter may jump by two or more. FL Display sequence: Display 1→2.	(Display 1)  Jitter Check Mode Jitter Rate Jitter rate is shown in decimal notation to one place of decimal. Focus drive value is shown in hexadecimal notation. (Display 2)  Lead Error Counter Focus Drive Value	In STOP (no disc) mode, press [STOP] button on the main unit, and [5] button on the remote control unit. Press [STOP] button to exit. Press [FL Display] on remote control unit for next page (FL Display).
Error code display	Error code check The latest error code stored in the EEPROM IC is displayed. Note: Refer to "Section 9.4 DVD Self Diagnostic Function-Error Code" for more detailed information on the error codes.	 U / H / F Error code (play_err) is expressed in the following convention. Error code = 0 x DAXX is expressed: → DVDnn U12 Error code = 0 x DBXX is expressed: → DVDnn H12 Error code = 0 x DXXX is expressed: → DVDnn F123 Error code = 0 x 0000 is expressed: → DVDnn F--- * "xx" denotes the error code	In STOP (no disc) mode, press [STOP] button on the main unit, and [0] button on the remote control unit. * With pointing of cursor up and down on display. Cancelled automatically 5 seconds later. To exit, press [POWER] button on main unit or remote control.
Initial setting of laser drive current	Initial setting of laser drive current. Initial current value for the DVD laser and CD laser is separately saved in the EEPROM IC. FL Display sequence: Display 1→2.	(Display 1)  Laser Current Measurement Mode The value denotes the current in decimal notation. (Display 2)  CD Laser DVD Laser Identify as LDO mode The above example shows the initial current is XXXmA and YYYmA for CD laser and DVD laser respectively when the laser is switched on.	In STOP (no disc) mode, press [STOP] button on the main unit, and [PAUSE] button on the remote control unit. Cancelled automatically 5 seconds later. Press [FL Display] on remote control unit for next page (FL Display) on values of laser drive current.