 
 


Item		FL Display	Key Operation
Mode Name	Description		Front Key
DVD laser drive current measurement	DVD laser drive current measurement. DVD laser drive current is measured and the result is displayed together with the initial value stored in the EEPROM IC. After the measurement, DVD laser emission is kept on. It is turned off when POWER key is switched off. FL Display sequence: Display 1→2.	(Display 1)  DVD laser current measurement mode The value denotes the current in decimal notation. (Display 2)  DVD Laser Initial Value DVD Laser Value Identify as LDD mode The above example shows the initial current is XXXmA and the measured value is YYYmA.	In STOP (no disc) mode, press [STOP] button on the main unit, and [FUNCTIONS] button on the remote control unit. Cancelled automatically 5 seconds later. Press [FL Display] on remote control unit for next page (FL Display) on values of dvd drive current.
ADSC internal RAM data check	ADSC internal RAM data check. ADSC internal RAM data is read out and displayed.	 Address RAM Data for Specified Address The value is shown in hexadecimal notation. The above example shows the data in ADSC address FBoh is XXXXh.	In STOP (no disc) mode, press [STOP] button on the main unit, and [1] or [2] button on the remote control unit. To exit, press [STOP] button.
CD laser drive current measurement	CD laser drive current measurement. CD laser drive current is measured and the result is displayed together with the initial value stored in the EEPROM IC. After the measurement, CD laser emission is kept on. It is turned off when POWER key is switched off. FL Display sequence: Display 1→2.	(Display 1)  CD Laser Current Measurement Mode The value denotes the current in decimal notation. (Display 2)  CD Laser Initial Value CD Laser Value The above example shows the initial current is XXXmA and the measured value is YYYmA.	In STOP (no disc) mode, press [STOP] button on the main unit, and [3] button on the remote control unit. Cancelled automatically 5 seconds later. Press [FL Display] on remote control unit for next page. (FL Display)