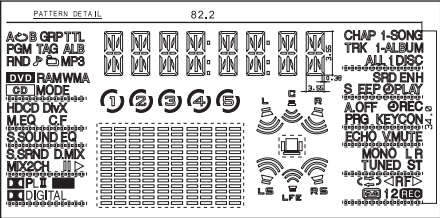
 


Item		FL Display	Key Operation
Mode Name	Description		Front Key
Self-Diagnostic Mode	To enter into self-diagnostic checking for main unit.		In DVD/CD or tape mode (ensure no disc or cassette is inserted into DECK 1/2): Press and hold [STOP] button for two seconds, followed by [^/FF/▶▶] button on the main unit. To exit, press [⏻/I, AC IN] button on main unit or remote control unit.
DVD/CD Changer Reliability Test	To determine the reliability of DVD/CD Changer Mechanism Unit. (For more information, refer to Section 9.3.4. "DVD/CD Changer Unit Ageing Test Mode")	 The counter will increment by one. When reach 99999 will change to 00000	In DVD/CD mode (ensure no disc is inserted): In self-diagnostic mode, press [1] button on remote control. To exit, press [⏻/I, AC IN] button on the main unit or remote control unit. (The tray will return to PLAY position and then power off.)
SRVC_TRV	To unlock the traverse unit for service.	 - All trays are set to "STOCK" position. - Mechanism set to tray 5. - Cam rear set to "HOME" position.	Select DVD/CD mode (ensure no disc is inserted): In self-diagnostic mode, press [SINGLE CHANGE] button on main unit. To exit, power off the main unit
Doctor Mode	To enter into Doctor Mode for checking of items. FL Display sequence: Display 1 -> 2 -> 3 -> 4	(Display 1)  All segments of FL will light up. (Display 2)  (Display 3)  (Display 4) 	In DVD/CD mode, press [STOP] button on the main unit, followed by [4] and [7] button on the remote control unit. To exit, press [ENTER] button on the remote control unit or power off the main unit.