 


Item		FL Display	Key Operation
Mode Name	Description		Front Key
DVD/CD Changer Operation Check	To check the operation of changer unit for disc change. FL Display sequence: Display 1 -> 2 -> 3 -> 4 -> 5	(Display 1)  (Display 2)  (Display 3)  (Display 4)  (Display 5)  OK/NG If the changer is not working, it will show "NG"	In Doctor Mode, press [DISC] button on the remote control unit. To exit, press [ENTER] button on the remote control unit or power off the main unit.