

SAMSUNG

WASHING MACHINE

S621GWL2/YLW

S621GWS2/YLW

S621GWS2/YLP

S821GWG2/YLW


S821GWL2/YLW

S821GWS2/YLW

S821GWS2/YLP

SERVICE Manual

WASHING MACHINE

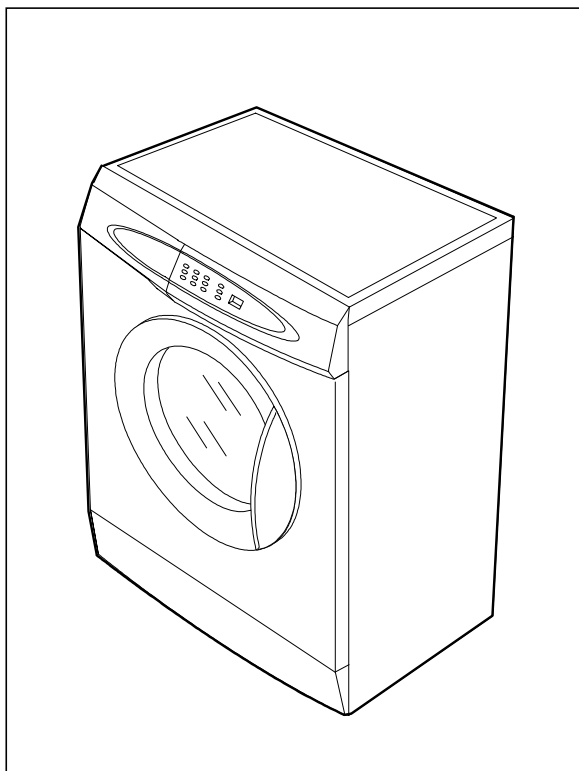

CONTENTS

 Caution for the safety during servicing

1. SPECIFICATIONS
2. SAFETY DEVICES
3. OVERVIEW OF THE WASHING MACHINE
4. OVERVIEW OF THE CONTROL PANEL
5. MAIN FUNCTION
6. TECHNICAL POINT
7. GENERAL ERROR FUNCTION
8. TROUBLE DIAGNOSIS
9. TEST MODE
10. DESIGNATION OF MAIN COMPONENTS
11. PCB SCHEMATIC DIAGRAM
- 11-1. PCB CIRCUIT DIAGRAM
12. SETTING UP A WASH MACHINE
13. ASSEMBLE AND DISASSEMBLE
14. TOOLS FOR DISASSEMBLY AND ASSEMBLY
15. EXPLODED VIEW AND PARTS LIST



Caution for the safety during servicing

1. Do not allow the customer to repair the product.

⚠ The person may be injured or the product life may be shortened.

2. Execute A/S after unplugging the power supply unit.

⚠ Be care of the electric shock.

3. Do not plug several plugs in the same outlet.

⚠ It may cause the fire due to overheat.

4. Check the damage, pressing or burning of the power plug or outlet.

⚠ Replace it promptly if it has problem.((may cause the electric shock or fire)

5. Do not clean the main body with the water.

⚠ It may cause the electric shock and fire and shorten the product life))

6. The wiring of the harness shall be free from the moisture and tightened during serving.

⚠ It shall not be deviated by certain impact.

7. Remove any dust or filth on the housing section,wiring section,connection section during servicing.

⚠ Protect the cause of the fire such as the tracking,and etc.

8. Check any mark of the moisture on the electrical parts, harness section and etc.

⚠ Replace the parts or remove the moisture.

9. Check the assembly status of the parts after servicing.

⚠ Maintain the status before servicing.

10. Pull out the power cord with holding the plug.

⚠ Be care of the electric shock and fire when the cord is damaged.

11. Unplug the power plug from the outlet when the wash machine is not used.

⚠ Be care of the electric shock and fire due to the strike of the lightening.

12. Do not use or store the spray or flammable materials(including gasoline,alcohol and etc.) around the wash machine.

⚠ Be care of the explosion or fire due to the electric spark.

13. Do not put the bowl of water or wet laundry on the wash machine.

⚠ If the water is penetrated to the wash machine, this may cause the electric shock or fire.

14. Do not install the wash machine in the place where the snow or rain falls.

⚠ It may cause the electric shock and fire and shorten the product life.

15. Do not push the control buttons with the awl,pin, or sharp materials.

⚠ It may the electric shock and trouble.

16. Check the wash machine is leveled horizontally and installed properly on the floor.

⚠ The vibration may shorten the product life.

17. Joint the wire by the connector correctly.

⚠ When the wire is jointed by the tape, this may cause the fire due to the tracking.

18. When the wash machine is to be laid for the service, put the pad on the floor and lay the product at side slowly.

⚠ If the wash machine is laid front, the relay may be damaged by the tub.

19. When the wash-heater is replaced, check it is inserted in the bracket-heater and screw the nut.

⚠ If the wash--is not inserted in the bracket-heater properly, this may cause the noise and leakage since it is contacted to the drum.

1. Specifications

WASH TYPE	FRONT LOADING TYPE			
DIMENSION	GROSS	W 680mm X D 478mm X H 892mm		
	NET	W 598mm X D 340mm X H 844mm		
WATER PRESSURE	50 kPa ~ 800 kPa			
WEIGHT	GROSS	58 kg		
	NET	55 kg		
WASH and SPIN CAPACITY	3.5 kg (DRY LAUNDRY)			
POWER CONSUMPTION	WASHING		220 V	110 W
			240 V	110 W
	WASHING and HEATING		220 V	900 W
			240 V	1050 W
	SPIN	MODEL	S821	S621
		220-240V	200 W	170 W
	PUMPING		34 W	
WATER CONSUMPTION	43 ℓ (STANDARD COURSE)			
SPIN REVOLUTION	MODEL	S821	S621	
	rpm	800	600	

2. Safety Devices

※ We adapt 5 safety devices for users to use this wash machine safely.

1) Balancing device (ASSY-Main PCB)

→ When the laundry is out of balance, to prevent the noises and vibrations, the unbalance detecting sensor helps the laundry laid even and continue the dehydrating process.

2) Anti-over water supply device

→ Because water supply valve is broken, once water is supplied to the 2/3 level of the door, the water supplied is drained automatically, Over -flow error is displayed on the panel

3) Temperature-regulating device(thermistor)

→ To prevent over-heating over the temperature setted up, THERMISTOR senses the temperature of the machine continuously and helps the wash machine to work at the temperature given by users.


4 Overheating- controlling system

→ Under the circumstances of THERMISTOR inferiority or abnormal condition, if wash-heater is overheated, automatically, assy -thermal fuse cuts off the power supply to protect the machine to keep it safe.

5) Delicate clothing safeguard function(ASSY-Main PCB)


→ To protect the clothings which is weak to high temperature, the wash machine senses the temperature inside the washing tub. if the temperature rises over 50℃ wool washing course and Delicate washing course display abnormal water temperature on the panel , after draining the water.

3. Overview of the Washing Machine

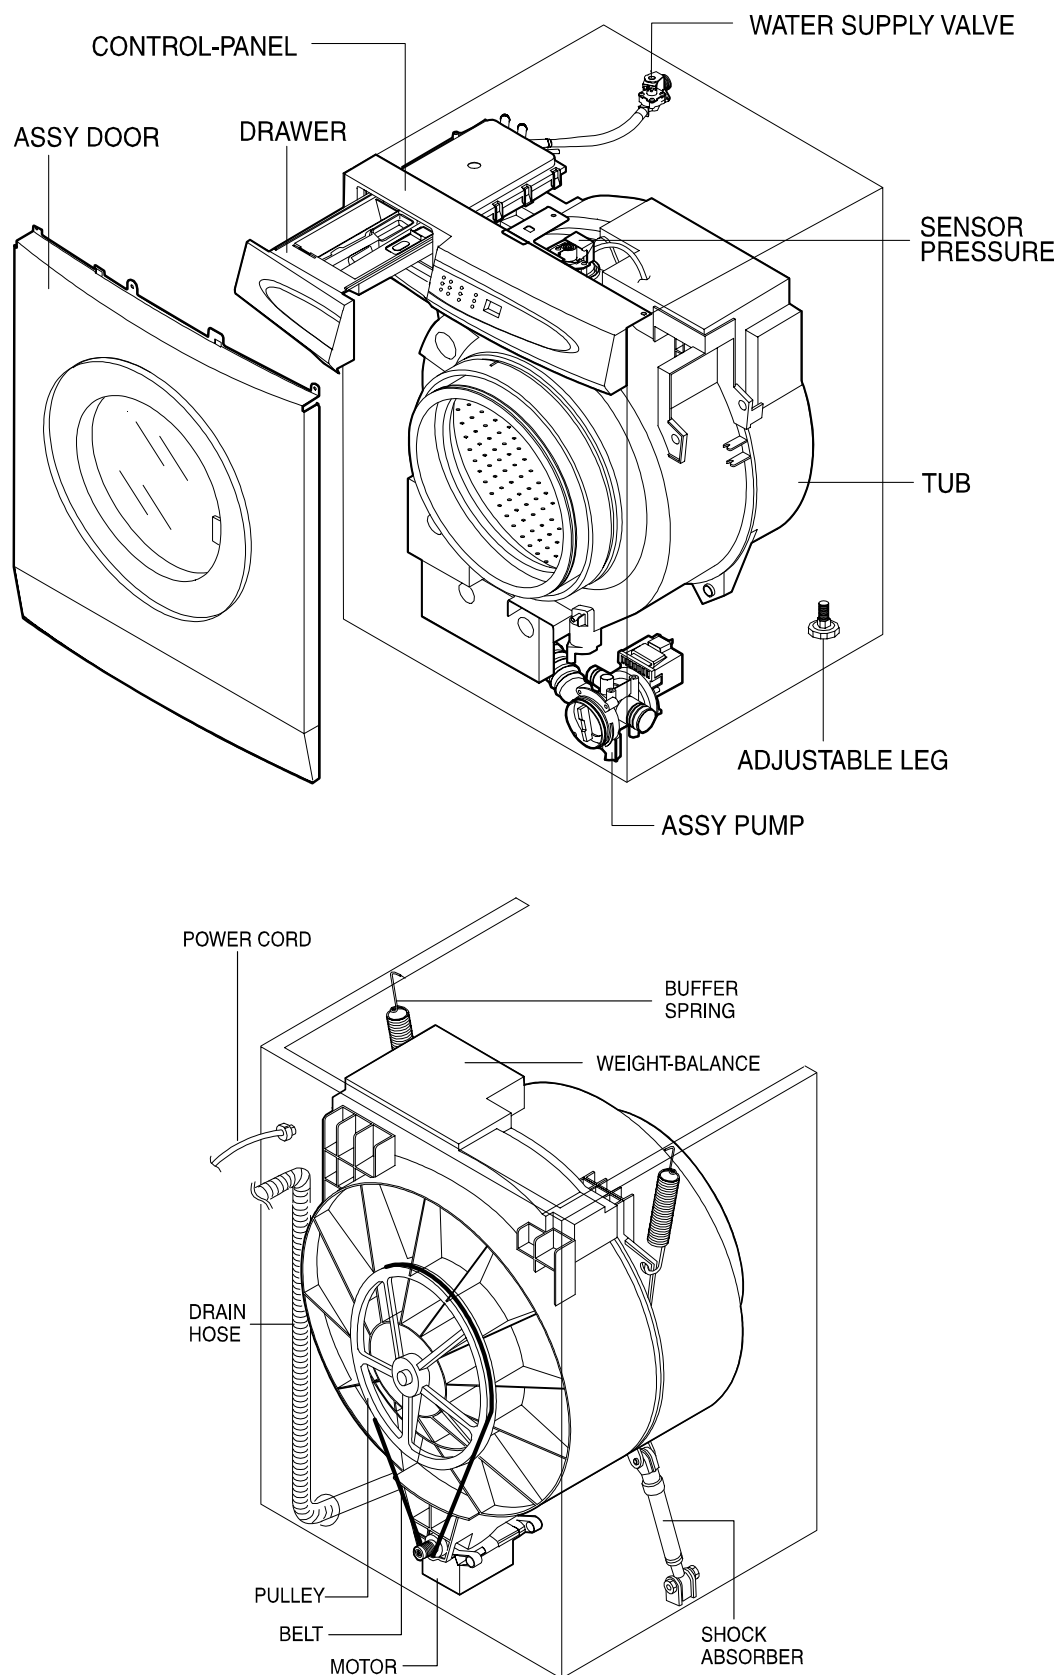


4. Overview of the control panel

S821

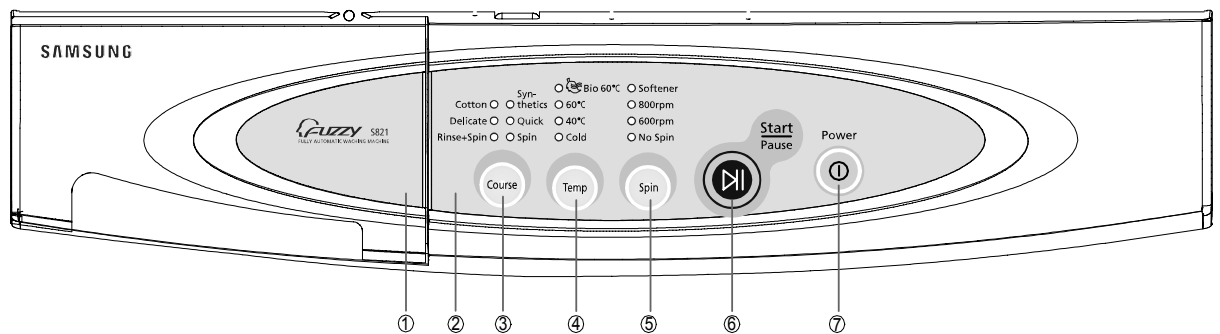

S621

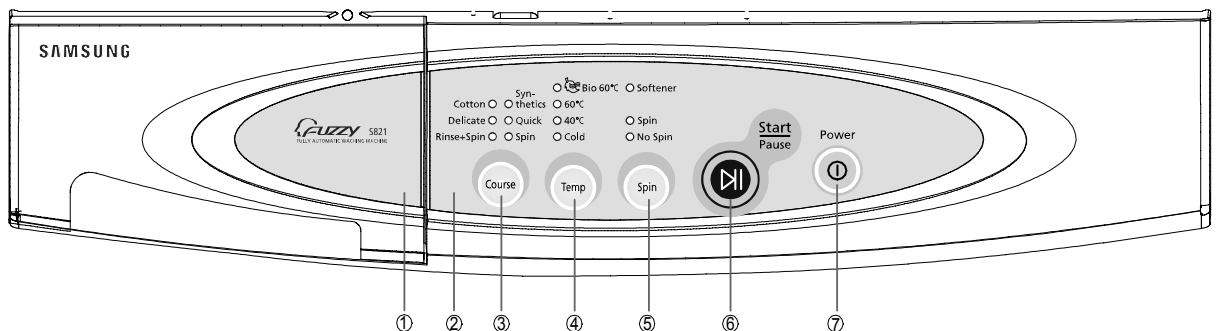

1. Detergent dispenser

2. Display panel

Displays wash cycle and error messages by LED lamps.

3. Course button

Press the button repeatedly to select one of the six available wash program.

{Cotton.Synthetics.Delicates .Quick.Rinse+Spin.Spin.Cotton }.

4. Temperature selection button

Press the button repeatedly to cycle through the available water temperature options

(cold, 40 °C , 60 °C and Bio 60 °C).

* Bio 60°C : To improve the Wash efficiency, heating during 30 min.

5. Spin selection button

Press the button repeatedly to cycle through the available spin speed options.

S821	no spin, 600, 800 rpm
S621	no spin, 600 rpm

6. Start/Pause button

Press to pause and restart programs.

7. ⏻(On/Off) button

Press once to turn the washing machine on, press again to turn the washing machine off.

If the washing machine power is left on for longer than 10 minutes without any buttons being touched, the power automatically turns off.

5. Main function

1) Auto power S/W off function

- After power on, the auto power S/W off function automatically switches power off for you if you do not press selection button for 10 minutes
- After selecting the function, the auto power S/W off function automatically switches power off for you if you do not press start/pause button for 10 minutes
- After finishing the last function, the auto power S/W off function automatically switches power off for you if you do not re-select the course button or manual button

2) Door open function

- If door is open during the operating, all operating is halted, and door error message will be displayed and error melody will coming out
- Door open error can be cleared by colosing the door. the operating keeps going on

3) No spin function


- If no spin function selected, the operating is finished after last rinse

5. Main function

4) Power-out compensation function

- If power is out on selected process, the process before power out is stored to EEPROM, once power is back the process before power out continues.
- When power is back, washing process starts from the process at the point of the power out, rinse/drain process starts from the initial process.

POWER-OUT COMPENSATION FUNCTION PROCESS

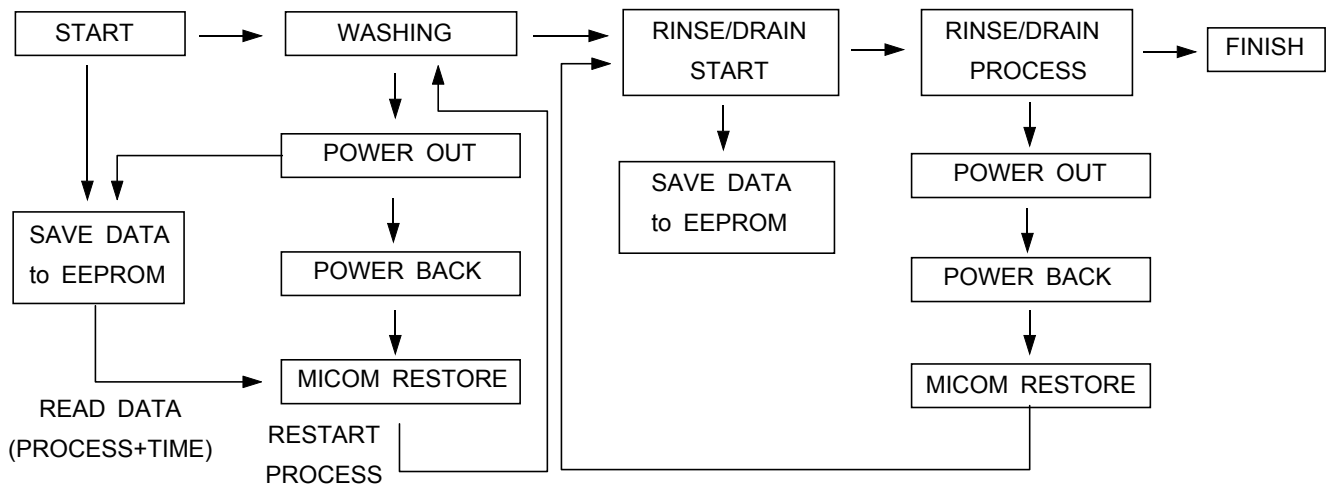

5) Water heater Error function

- ① This function starts working, when the heater works abnormally.
(this function begins sensing the heater 1 minutes later, after the heater operating)
- ② The value of the initial thermistor(A1) is compared with that of the thermistor(A2) in 2 minutes ($Y=A2-A1$)
 - For 10 minutes, the variance of temperature(Y) is less than 2°C "course led 6ea on $40^{\circ}\text{C}/60^{\circ}\text{C}$ led on" message is displayed on the panel.
- ③ The value of the initial thermistor(A1) is compared with that of the thermistor(A2) in 2 minutes ($Y=A2-A1$)
 - For 2 minute the variance of temperature increases more than 4.5°C (0.2148V) "course led 6ea on cold/ 60°C led on" message is displayed on the panel.
- ④ At this time heater, Error "course led 6ea on cold/ 60°C led on" is displayed and all working process off
- ⑤ The heater operating continues during heating hours, if washing hour is left over, the residual washing process keeps going without heating.

5. Main function

6) Fuzzy washing function (weight-sensing)

- After finishing initial water supply, when the fall of the water level needs supplementary water supply, Sensing function perceives the weight with the supplementary water supply numbers and starts to work. Under the course of Cotton, if the supplementary water supply numbers become 3 - 4 times the function is going at default condition (high water level), if 1-2 below that is going at middle level, if 0 below low water level, heating hours and rinse hours depend on the above data.


	Washing hours	Rinse water level
	Cotton	
High	Default	Default
Middle	Default-12 min	22.80KHZ
Low	Default-25 min	23.30KHZ

※After sensing weight, above hours is decreased from above default hours

7) Bubble -detecting function

At the each condition of washing&dehydrating , rinse&dehydrating , hydrating, bubble -detecting function works, this function works 5times normally, if the function detects bubbles at 6 times , the bubble-detecting function stops and go on to the next process.

- The bubble-detecting function during washing & dehydrating to rinse & dehydrating
after 2 times instant dehydrating and before main dehydrating, if the water level is under 25.45KHZ, Bubble
→ Detecting function thinks there are bubbles and add the bubbles-removing rinse, needing hours are above hours and 6 min 40 sec.
- The bubble-detecting function during single hydrating process
after 2 times instant dehydrating and before main dehydrating , if the water level is 25.45KHZ below or during main dehydrating, water level data is 23.80KHZ below Bubble-detecting function thinks there are bubbles and add the bubbles-removing rinse 1 times, needing hours are above hours and 5 min 50 sec.

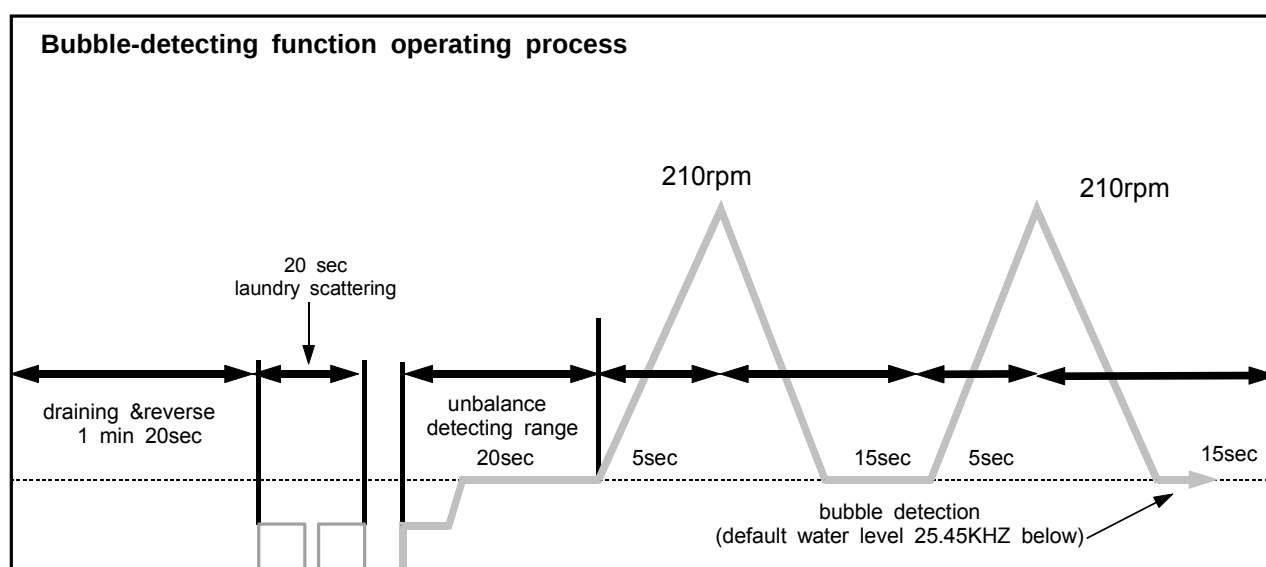

5. Main function

8) Unbalance detecting & laundry balance positioning system

- ① Just before the hydrating process and just after reversal rotation for balancing laundry position, this function is carried out
- ② The initial 6 sec is the period of reversal rotation for balancing laundry position , Drum rotates 50rpm for initial 6 sec
- ③ Next 10 sec, the rotation increases the speed from 50 rpm to 90 rpm slowly
- ④ During the next 18 sec, drum rotates at the speed of 90 rpm, the sensor decides the degree of laundry unbalance with TACHO data which is attached to motor
- ⑤ If the degree of unbalanced laundry is over 6 times to default value, laundry balancing system carries out feed back process 6 times

6. Technical point

1) Motor on/off time at each course

unit:sec

Course	Washing				Rinse				Motor r.p.m
	Cw	Off	Ccw	Off	Cw	Off	Ccw	Off	
Cotton	13	3	13	3	10	5	10	5	50
Synthetics	7	8	7	8	7	8	7	8	40
Delicates	5	10	5	10	5	10	5	10	30
Quick	12	3	12	3	10	5	10	5	45

2) Final dehydrating r.p.m at each course

unit:rpm

Course	Model	S821	S621
Cotton		800	600
Synthetics		800	600
Delicates		600	600
Quick		800	600

※ You can change the r.p.m to the above a table by use spin button under no spin situation.

6. Technical point

3) The water level data at each course

unit:Khz

Water level		Default water level(khz)		Supplemetary water START(Khz)	Supplemetary water end(khz)
Course					
Cotton	Washing	23.50		24.00	23.70
	Rinse	large	22.45	24.00	23.50
		middle	22.80		
		small	23.30		
Synthetics	Washing	23.50		24.00	23.70
	Rinse	22.45		24.00	23.50
Delicates	Washing	22.80		23.55	23.35
	Rinse	22.65		23.55	23.35
Quick	Washing	23.50		24.00	23.70
	Rinse	22.45		24.00	23.50

4) The other water level data

The water data unter each conditon		
1st water supply (only preparation)	24.60	1st water supply level to washing tub
Overflow error	20.50	The water supplied reach 2/3 of door
Bubble detectingatwashing/rinse/dehydrating	25.45	Bubble -detecting water level
Bubble detecting rinse water level	22.00	The water level which can detect bubblesunit:Khz
Water level which can open door	23.80 over	It is possible to open the door
Water level which can drive heater	24.50	Safety water level of wash heater
Water level which can reset the drain	24.50	The water level can be detected after 1st draining

※ If water level is 15KHZ below or 30 KHZ above , sensor-pressur is out of order so needs changing.

7. General Error Function

When an error occurs, this function starts to keep generating error melody sounds and displays error indicators as shown in the followings per corresponding error by blinking in 0.5sec interval until the error status is completely cleared out. In this case, all the driving devices are turned off until the error is cleared out.

○ : Light on
● : Light off

1. WATER SUPPLY ERROR

- Display shows such as fig. 1
- Water Supply Error occurs when water level frequency does not show changes more than 100Hz or water is not supplied up to the water level presetting for 20 min or more at the time of initial water supply.
- The error status can be cleared by turning POWER S/W OFF and resuming the POWER ON initial status.

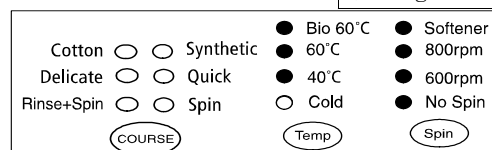


fig. 1

2. WATER DRAIN ERROR

- Display shows such as fig.2
- In case the water level frequency is 24.5KHz or less in the initial phase of UNB-detecting cycle.
- Water Drain error can be cleared by turning POWER S/W OFF and resuming the POWER ON initial status.

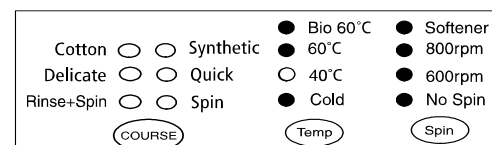


fig. 2

3. OVER-FLOW ERROR

- Display shows such as fig.3
- Over-Flow error occurs when the water level is in abnormal operation. It can be cleared by turning POWER S/W OFF.
- Water is drained prior to POWER S/W OFF and it is forced to be drained for 2 min if a frequency of more than 24.5 KHz is detected.

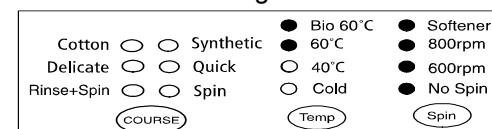


fig. 3

4. UNBALANCE ERROR

- Display shows such as fig.4.
- Laundry load is unbalanced; loosen any tangled laundry.
- If only one item of clothing needs washing, such as a bathrobe or jeans, the final spin result might be unsatisfactory and an error message will be shown in the display panel such as fig 4..
- Unbalance error is cleared by POWER S/W OFF and by resuming the POWER ON initial status.

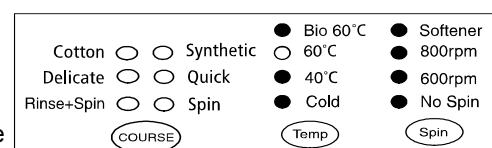


fig. 4

5. WATER HEATER ERROR

- Display shows such as fig.5 or fig.6
- In case the water temperature rises by 7°C or more in 1 min. or by 2°C less in 10 min after heating is started.
- It can be cleared by turning POWER S/W OFF.

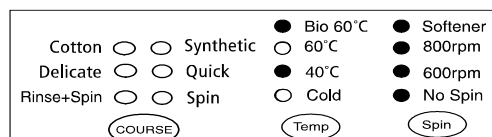


fig. 5

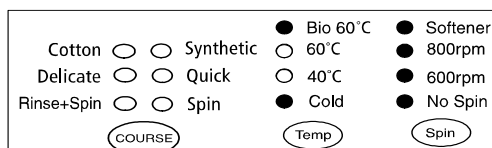


fig. 6

6 DOOR OPEN ERROR

- Display shows such as fig.7
- Door Open error can be cleared by closing the door.

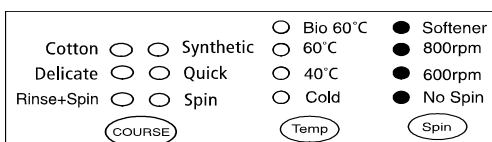


fig. 7

7. ASSÍ Y PRESSURE S/W ERROR

* Generated Frequency Signal of WATER LEVEL(W/L) S/W (KHz)

Level	Low Level	High Level
Abnormal W/L Frequency	30.00 KHz	15.00 KHz

7. General Error Function

- If the same signal as the above table is detected for more than 5 seconds, it is a PRESSURE S/W Error.
- When the error occurs, water drain pump will operate for 3 min. and then turn off the water drain pump.
- Then the display shows fig. 8 indicating a pressure s/w error indicator.

8. ABNORMAL WATER TEMPERATURE ERROR

- In case the water temperature is 50°C or more in Delicate and Wool course.
- At the time of initial water supply, if the water temperature is not appropriate, water starts to be drained and it is forced to be drained for 2 min when the abnormal frequency of 24.5KHz is detected.
- Display shows fig. 9
- This error can be cleared by POWER S/W OFF.

9. WATER LEAKAGE ERROR (E9)

- Water Leakage error occurs when water is drained naturally after washing program starts.

10. Tacho Error

- This error occurs in case motor thaco is out of order or tacho signals inputted are fewer than 2
- Display shows fig. 11
- This error can be cleared by power s/w off

11. Motor Triac short Error

- This error occurs in case over 300 per 1 sec tacho signals are inputted power S/w should be off.
- fig. 12 is displayed.
- This error can be cleared by power s/w off

12. Thermistor error

- This error occurs, when Thermistor circuit is abnormal or the detected electrical volt is 0.2v below or 4.5v over
- fig. 13 is displayed
- This error can be cleared by power s/w off

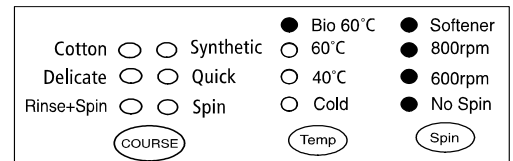


fig. 8

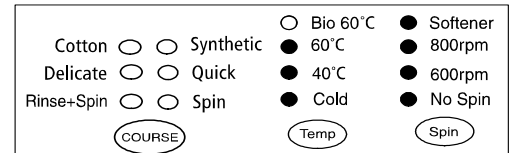


fig. 9

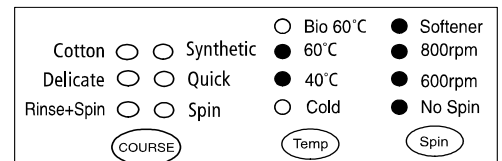


fig. 10

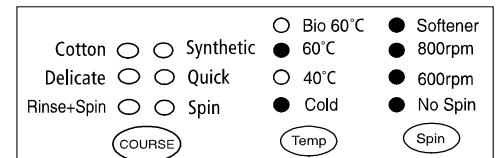


fig. 11

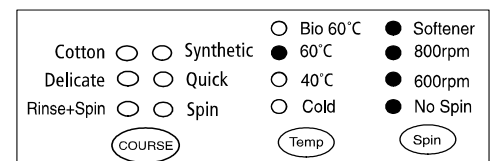


fig. 12

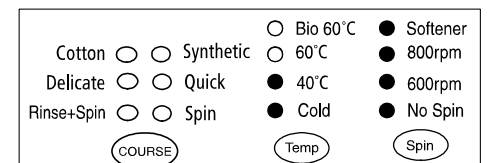


fig. 13


8. Trouble Diagnosis

- As the micom wash machine is configured of the complicate structure, there might be the service call. Below information is prepared for exact trouble diagnosis and suitable repair guide.

Caution for the Repair and Replacement

Please follow below instruction for the trouble diagnosis and parts replacement.

- 1) As some electronic components are damaged by the charged static electricity from the resin part of wash machine or the human body, prepare the human body earth or remove the potential difference of the human body and wash machine by contacting the power supply plug when the work contacting to PCB is executed.

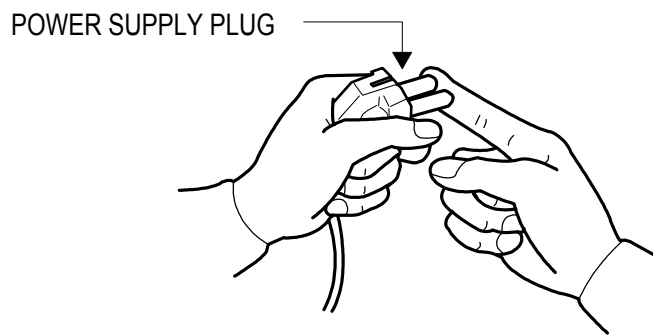


- 2) Since AC220~240V is applied to the triac T1 and T2 on P.C.B, the electric shock may occur by touching and be careful that the strong and weak electricity are mixed.
- 3) As the P.C.B assembly is designed for no trouble, do not replace the P.C.B assembly by the wrong diagnosis and follow the procedure of the trouble diagnosis when the micom is not operated normally.

8-1. Trouble Diagnosis



No	Item	Cause and treatment
1	The power is not supplied	- Is the PCB connector connected well? - Is the voltage normal? - Is the power supply plug connected well? - Is the noise filter connected well? - Is the secondary output of the power supply transformation normal? - Is the fuse disconnected? (option) ĩ If above points are not found, the PCB assembly is out of order. Replace it.
2	The water is not supplied.	- Is the knob open? - Did you push START/PAUSE button after selecting the course? - Is the water supply valve connected well? - Is the winding of the water supply valve continuous? - Is the connection and operation of the pressure switch normal? ĩ If above points are not found, the PCB assembly is out of order. Replace it.
3	The wash does not start though the water supply is stopped.	- Is the connection and operation of the pressure switch normal? - Is the pressure switch hose damaged so that the air is leaked? - Is the pressure switch hose bent? - Check the operation of the water level switch. ĩ If above points are not found, the PCB assembly is out of order. Replace it.
4	The drum does not rotate during washing.	- Is the belt connected well? - Is the winding of the motor continuous? (Rotor winding, stator winding, generator) - Is the motor protector normal? ĩ If above points are not found, the PCB assembly is out of order. Replace it.
5	The drum rotates by one direction during washing. (The drum rotates to one direction for SPIN.)	- The PCB assembly is out of order. Replace it. (Inversion relay open trouble)
6	Drainage problem.	- Is the drainage hose bent? - Is the winding of the drainage pump continuous? - Is the drain filter clogged by the waste? ĩ If above points are not found, the PCB assembly is out of order. Replace it.
7	Dehydration problem.	- The unbalance is detected. - Put in the laundry uniformly and start again.
8	Abnormal noise during SPIN.	- Is the pulley nut loosen? - Is the transport safety device removed? - Is the product installed on the level and stable place? (Little noise may be generated during the high-speed SPIN.)
9	Leak breaker or current/leak breaker is down during washing.	<When the leak breaker and current breaker is installed separately> - When the leak breaker is down, check and make the earth of the outlet. - When the current is down, the current is leaked. <Is the breaker down when the leak/current breaker is combined?> - Check the rated capacity of the current and leak breaker. The current breaker may be down due to the lack of the current when the wash machine and other apparatus are used. In this case, execute the cold water wash to check whether the current capacity is lack.
10	The heating is not executed.	- Is the wash heater terminal unplugged? - Is the wash heater normal? - If above points are not found, the PCB assembly is out of order. Replace it.

8-2 . Problem Checkking And Method Of Pcb



8-2-1 The Part Of Power Source

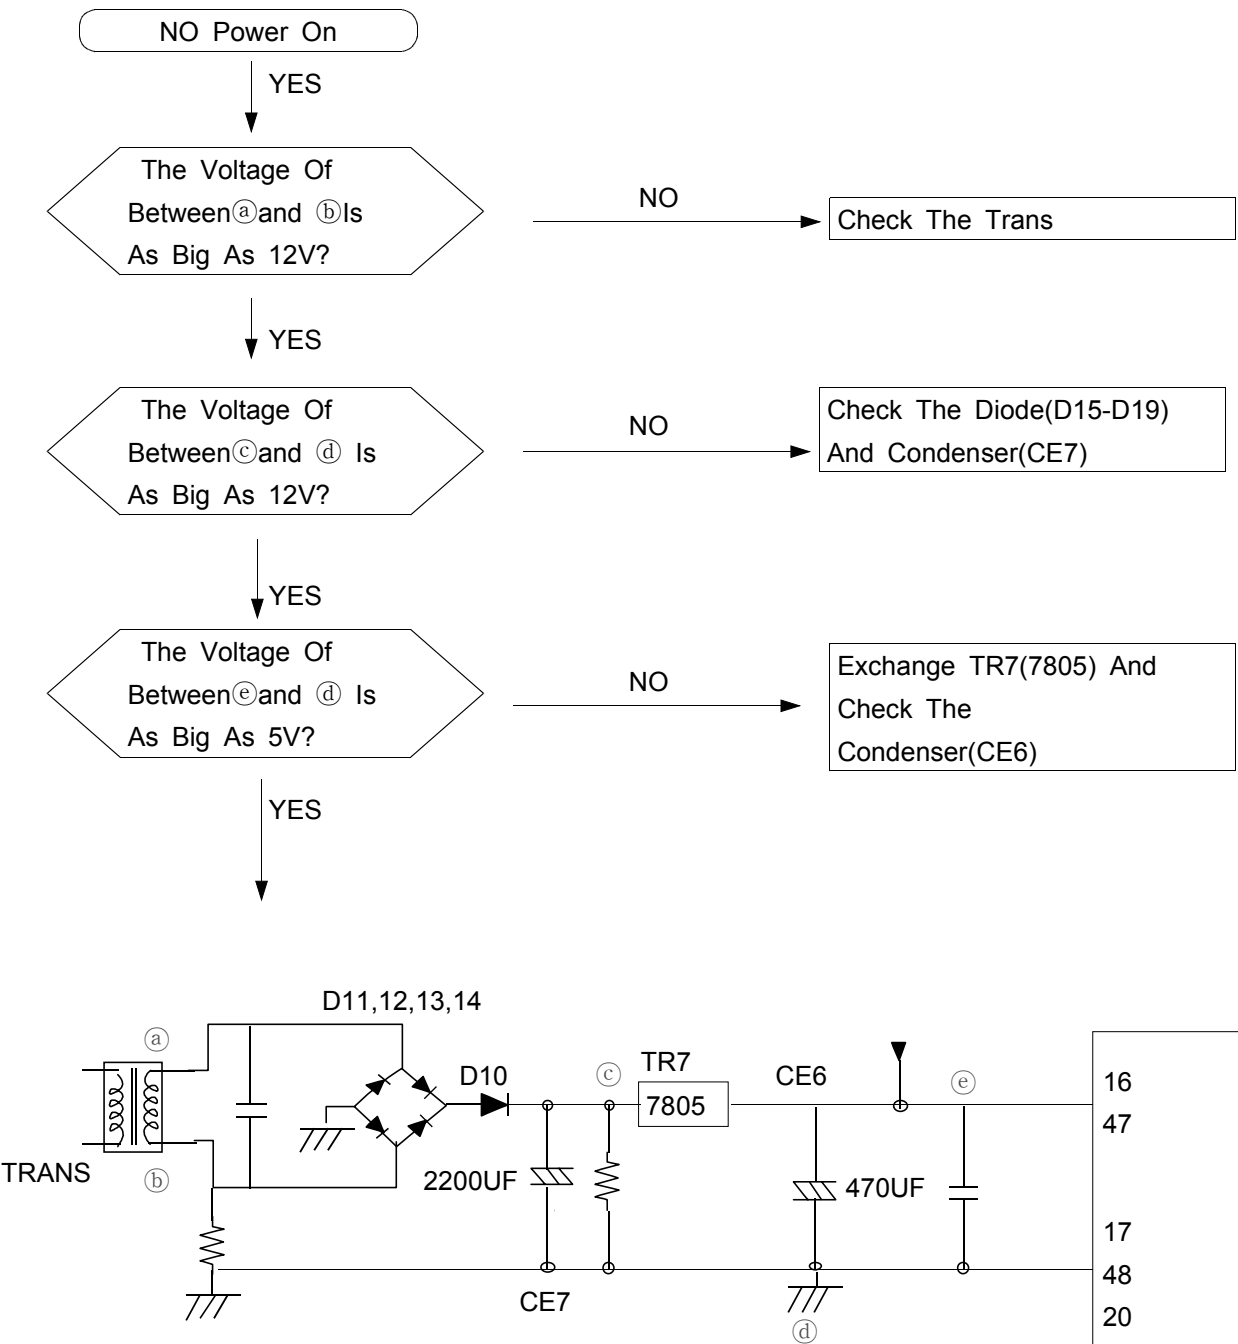



8-2-2. Reset Part

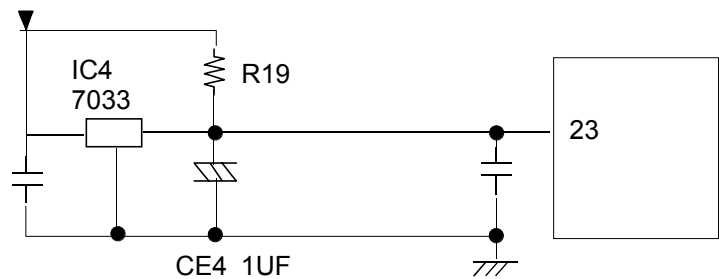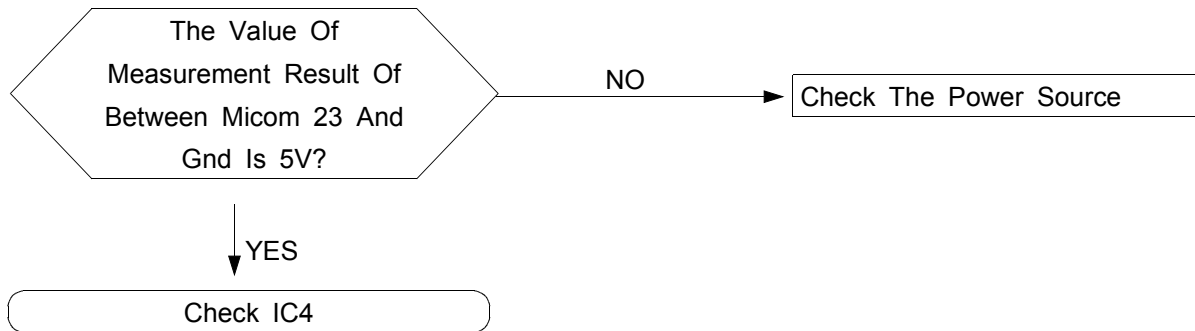

8-2-3. Interrupt Part

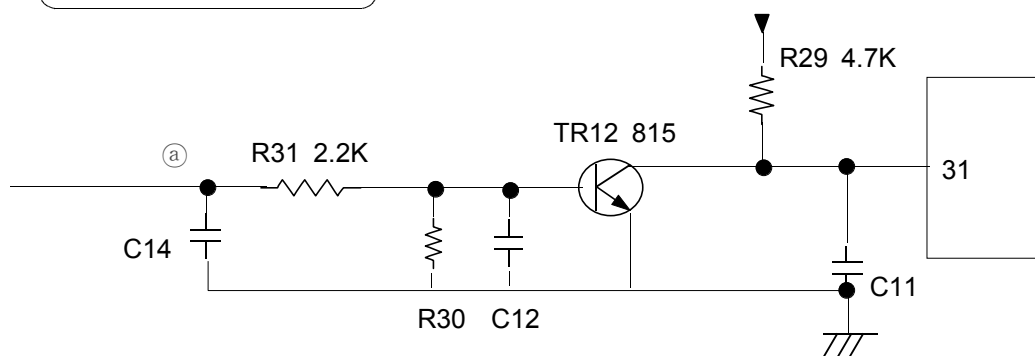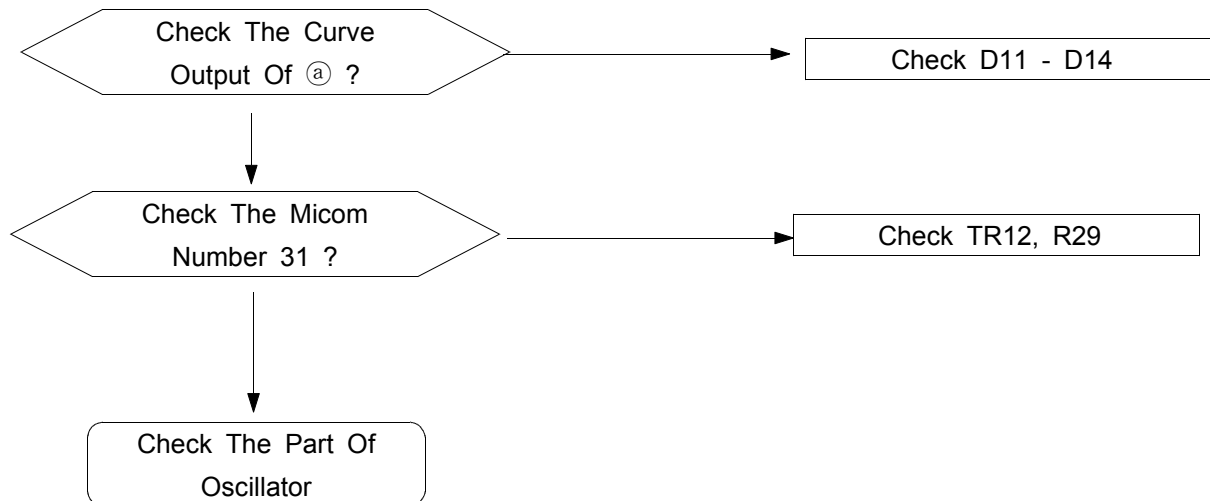



8-2-4. Checking The Part Of An Oscillator

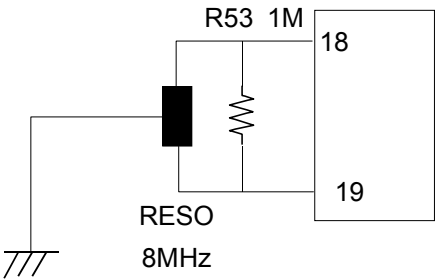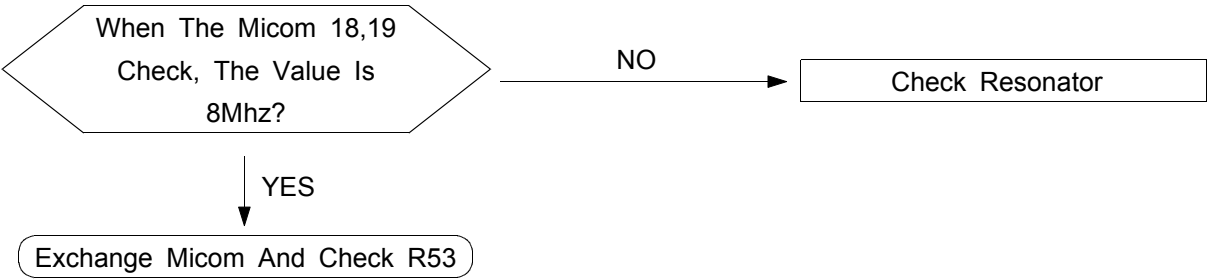

8-2-5. Driving Part Checking



- ◆ Confirm The Output Of DC5V, When The Every Part Of Micom Number Check, According To The Some Problem Condition

ex) When The Drain Is Not Operating But Pump Motor Is Operating, Check The 5Voltage Of Micom

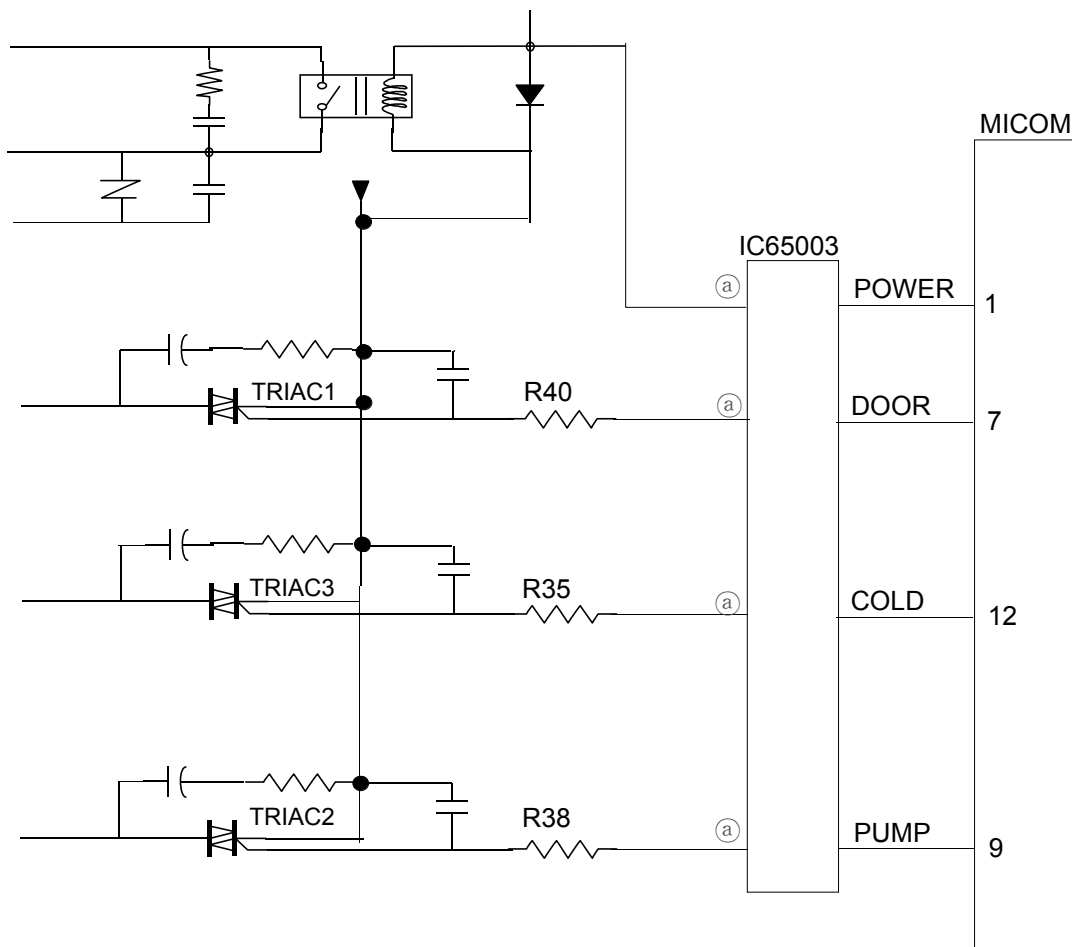
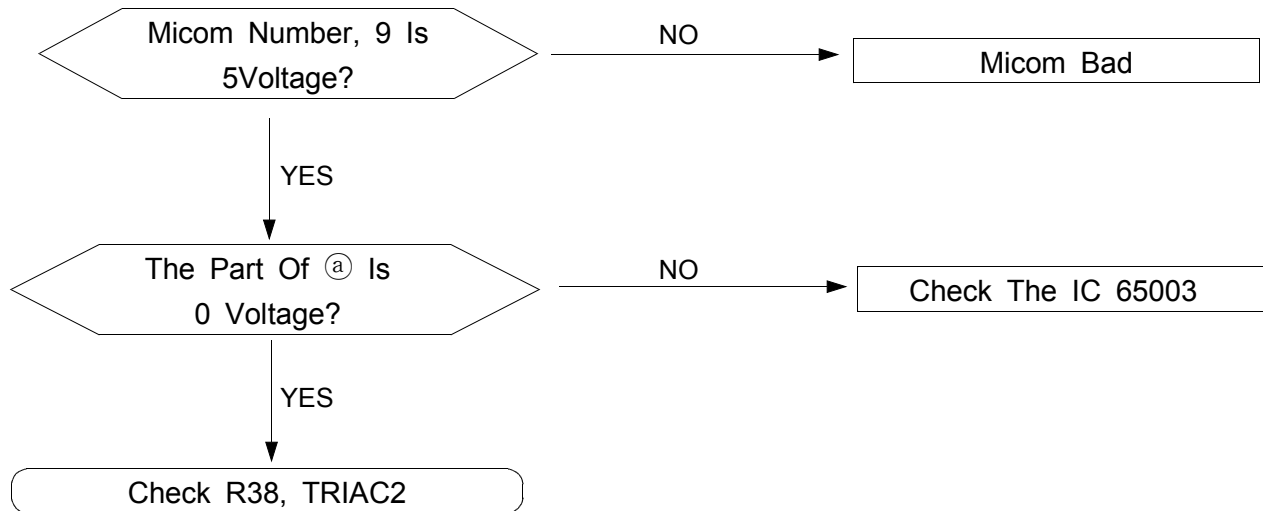


※ Check The Micom 12th In The Above Method When The Cold Water Is Bad


8-2-6. Confirm The Driving Part Of Motor

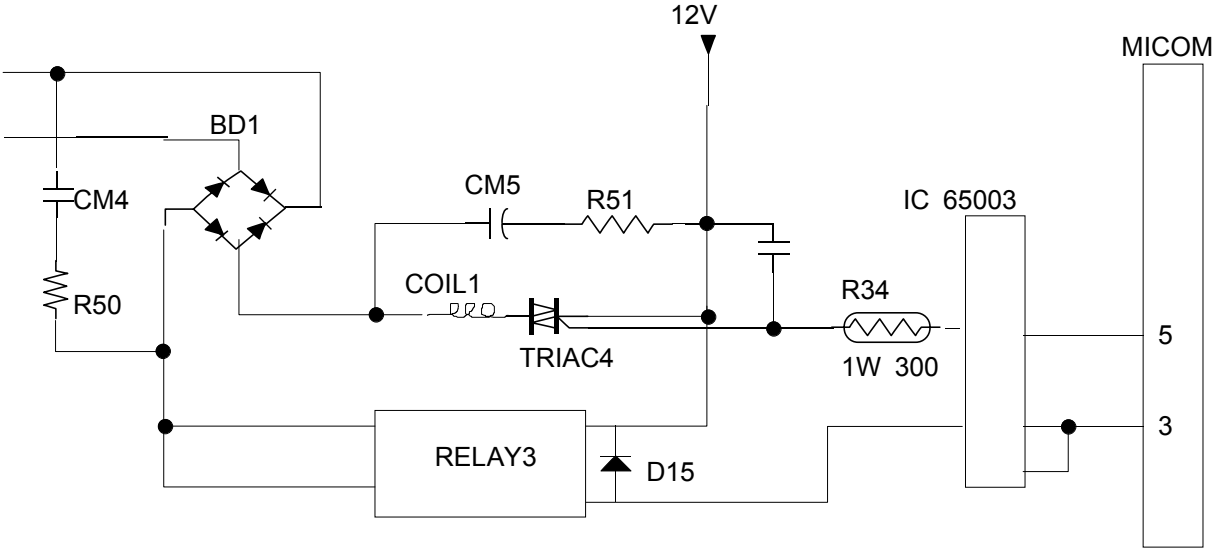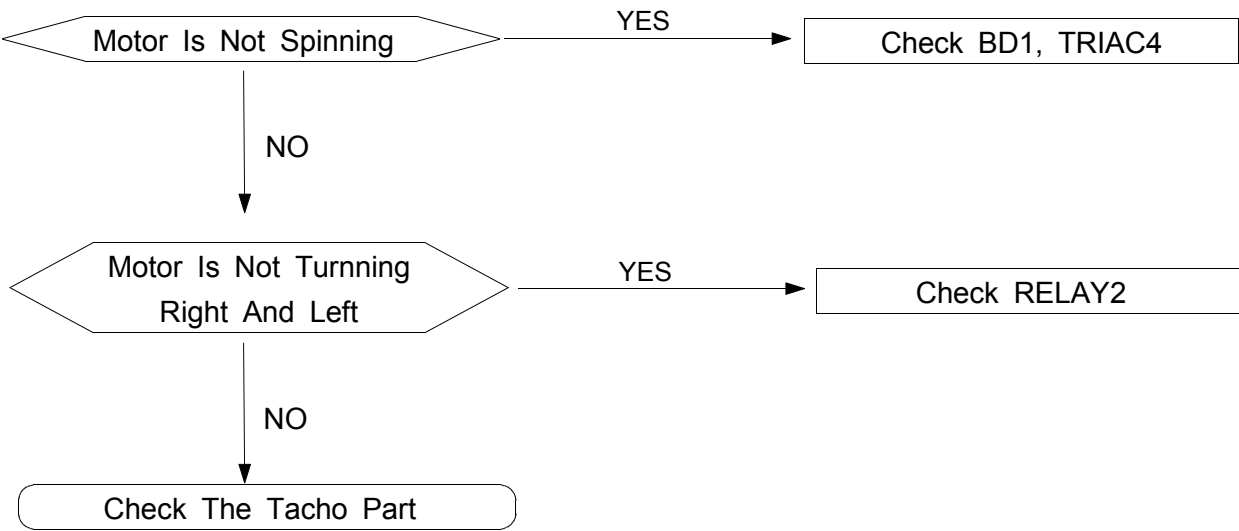

8-2-7. Checking The Tacho Part

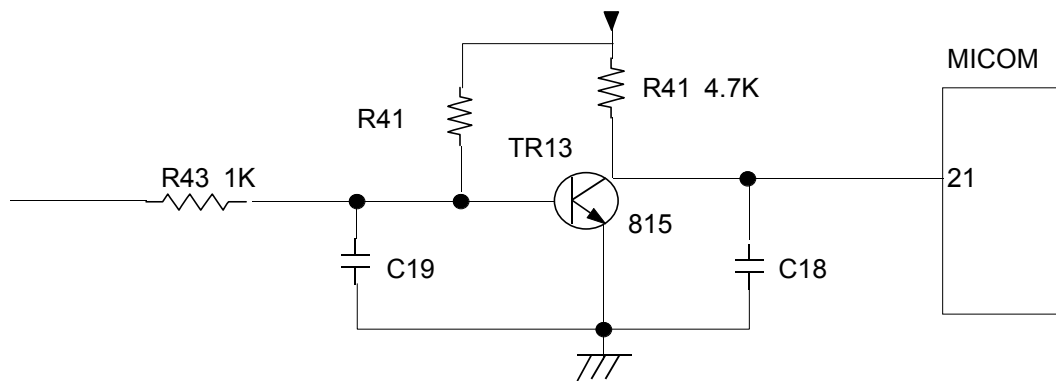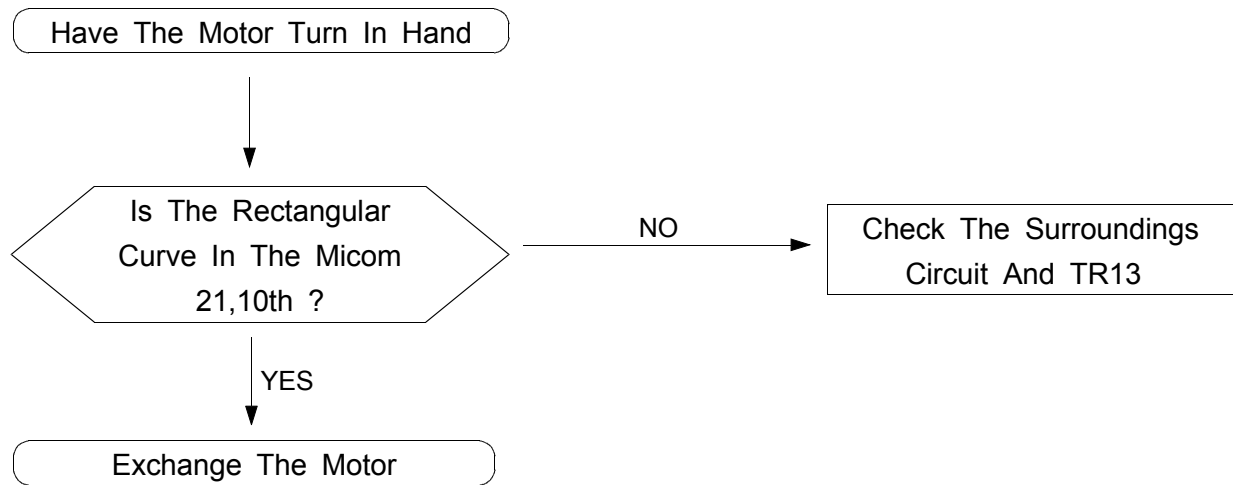

9. Test Mode

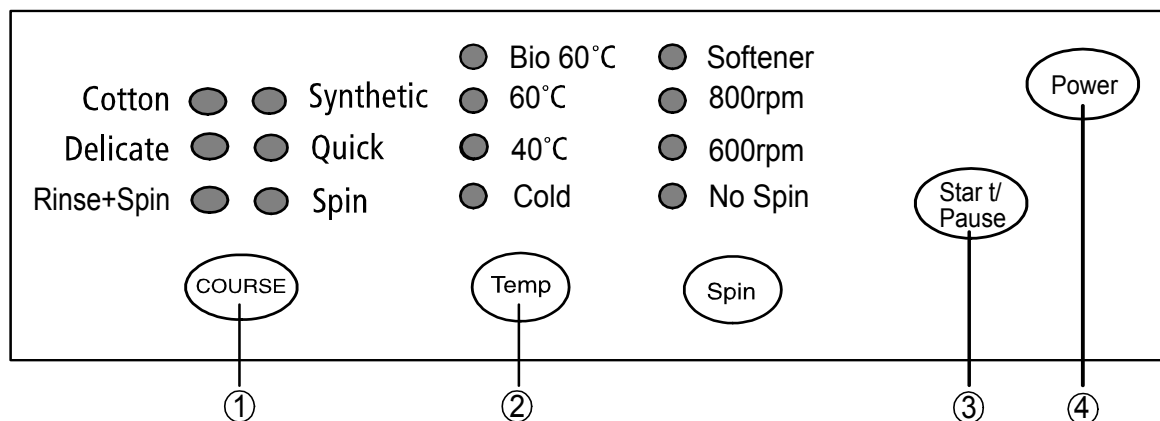

1. Driving Compartment Test Mode


- Hold down **1** and **2** keys simultaneously and then press POWER S/W **4** on.
- The driving compartment can be tested when you press **3** key right after entering into the initial stage of the TEST MODE.

ii Driving Compartment Test

COLD VALVE ON(0.3sec) → [OFF(0.3sec) →
Pump MOTOR ON(0.3sec) → OFF(0.3sec) → MOTOR Left (0.5sec) → OFF(0.5 sec) →
MOTOR Right (0.5sec) → OFF(0.3sec) → HEATER RELAY ON(0.3sec) → OFF(0.3sec) → DOOR OPEN
(Function continues when door is closed)

10. Designation of Main Components

10-1 Normal / Reverse Revolution of Motor and R. P. M. Control

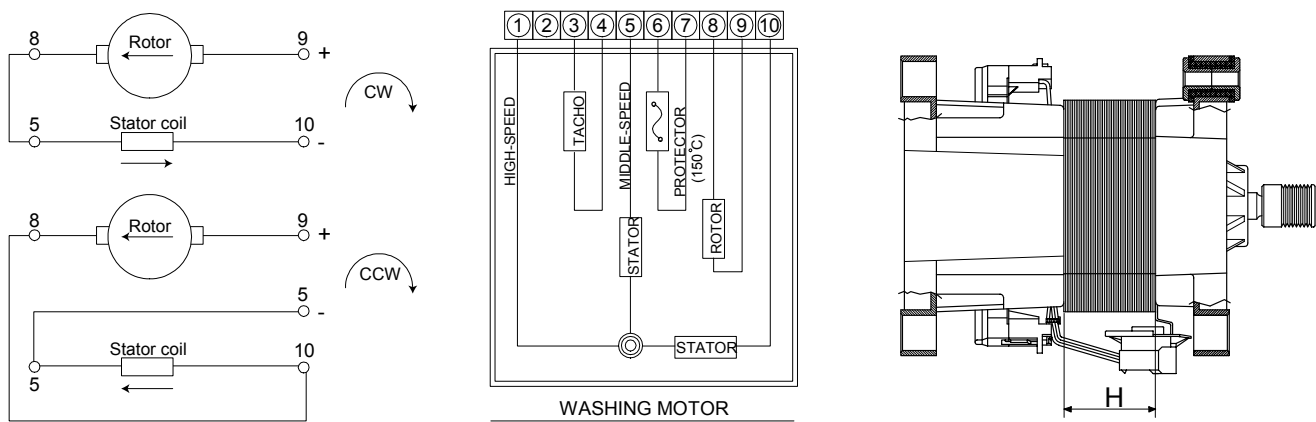


<Figure1>

<Figure2>

<Figure3>


(± 7%)	STATOR(51)	ROTOR(8.9)	TACHO(3.4)	PROTECTOR(6.7)	"H"(mm)	Code-No.	Remark
Resistance value	2.08Ω	1.99Ω	38.8Ω	0	30	DC31-00002H	S821 S621
Rated value	220~240V/50Hz						

10-2 Door safety Device

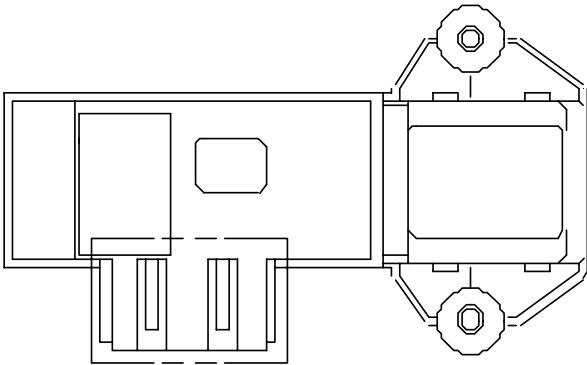

10-3 Heater

- 1) Capacity : AC 230V/800W
- 2) Location : Bottom of TUB
- 3) Function : Raise the water temperature supplied at the wash process.
- 4) Resistance value : 62.63~69.22 Ω
- 5) Thermal Fuse : 128℃

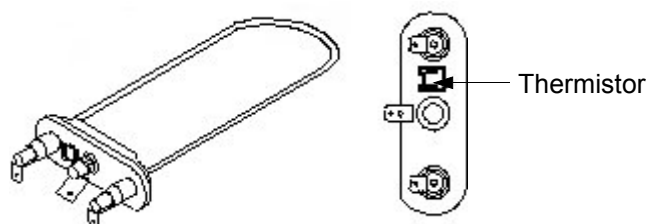

10-4 Detergent tub and water supply value

A Detergent tub is composed of housing and 3 drawers . supplied water flows into the 3 drawer-detergent tub by way of classifier at each washing process.

three open drainage way with detergent and supplied water by way of connector located under the housing flows into washing tub.

the water supply valve is composed of a hot water valve(1 way) and a cold water valve(3way) and water flow per min in the valve is below.

	Hot water valve(1 way)
water flow(L/min)	10L
resistance value	4.3k Ω
power consumption	AC 220v ~ 240V 50/60Hz
usable water pressure	0.5 ~ 8 kg/cm ²


10-5 Shock absorber and buffer spring

This wash machine is equipped with 2 Shock absorbers with same capacity and with 2 buffer springs. 2 Shock absorber are placed under the tub and outside case , 4 buffer springs are placed on the right and left of the upper side of outside case.


Shock absorber function: during wash, dehydration absorb the shock.

buffer spring: buffering the vibration

device	capacity of Shock absorber
Shock absorber	8±2kg

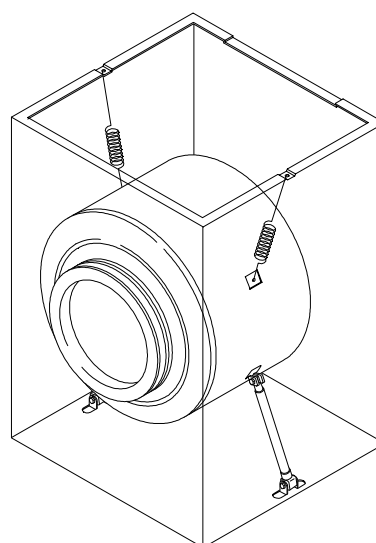


10-6 ASSY-TUB BACK

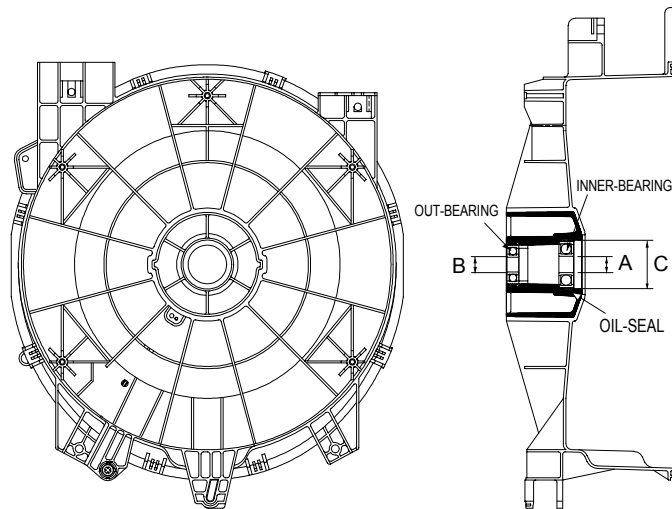

(unit : mm)

TYPE	INNER-BEARING(A)	OUT-BEARING(B)	OIL-SEAL(C)	Assy-Housing Bearing(D)	Assy-Tub Back
I	□20	□17	□24.3	DC97-02133A	DC97-02103A

10-7 ASSY- DRUM

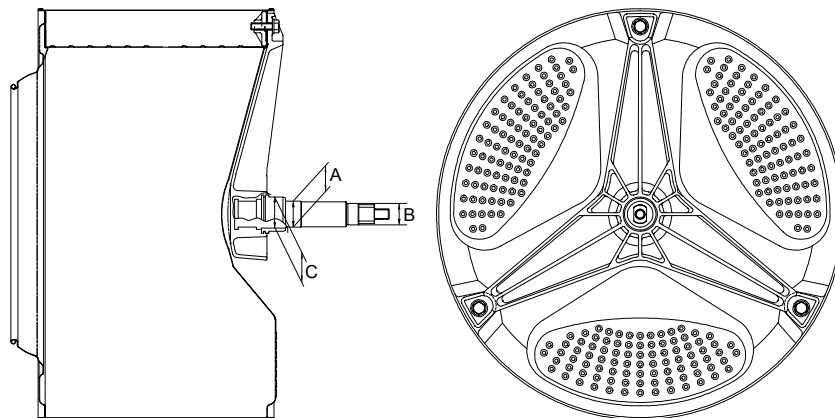


(unit : mm)


TYPE	(A)	(B)	(C)	CODE-NO.	REMARK
I	□20	□17	□25	DC97-02099B	Lifter type S821/S621

10-8 ASSY-PUMP DRAIN


- 1) Capacity : AC 230V 34W
- 2) Location : Front bottom(R)
- 3) Resistance : 15Ω ~ 18Ω

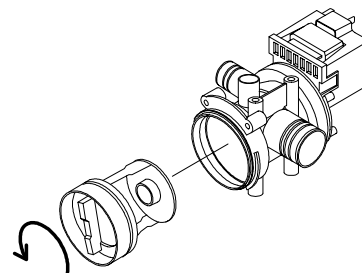

11. PCB Schematic Diagram

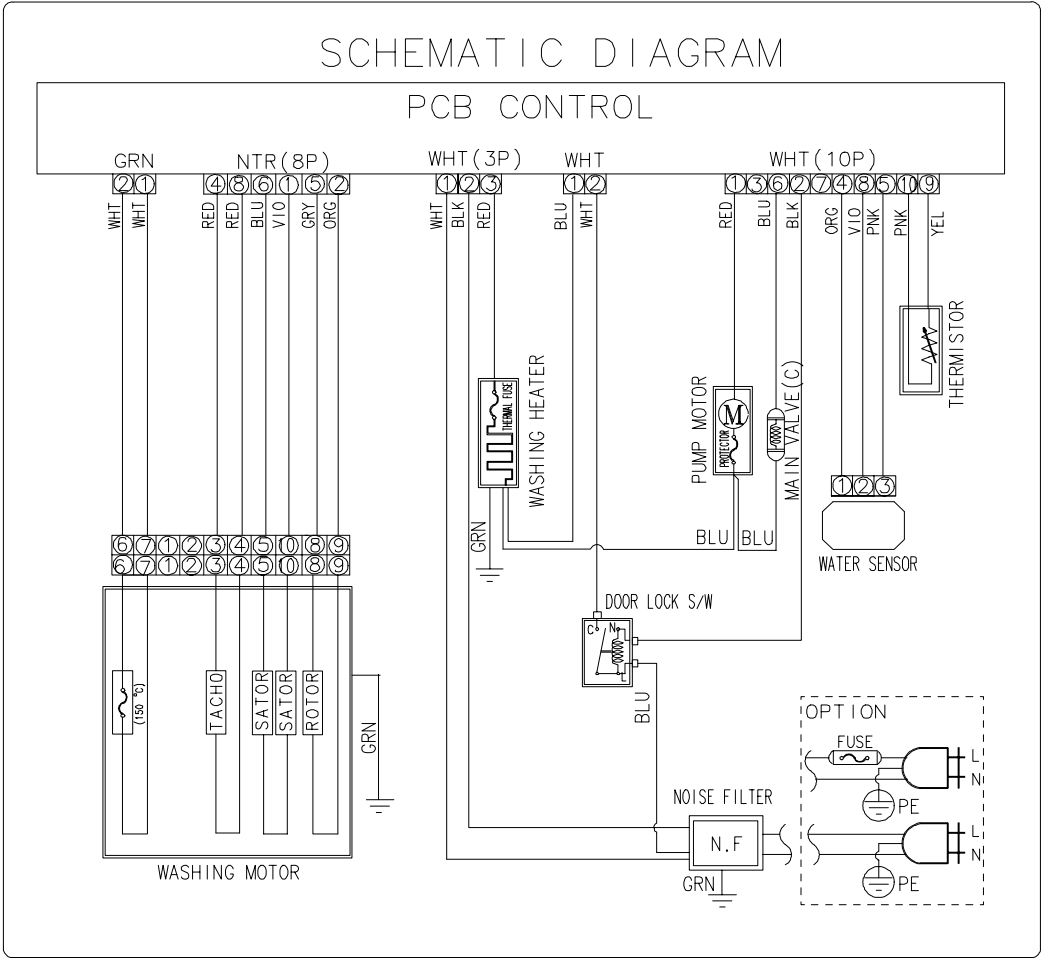

11-1. PCB CIRCUIT DIAGRAM

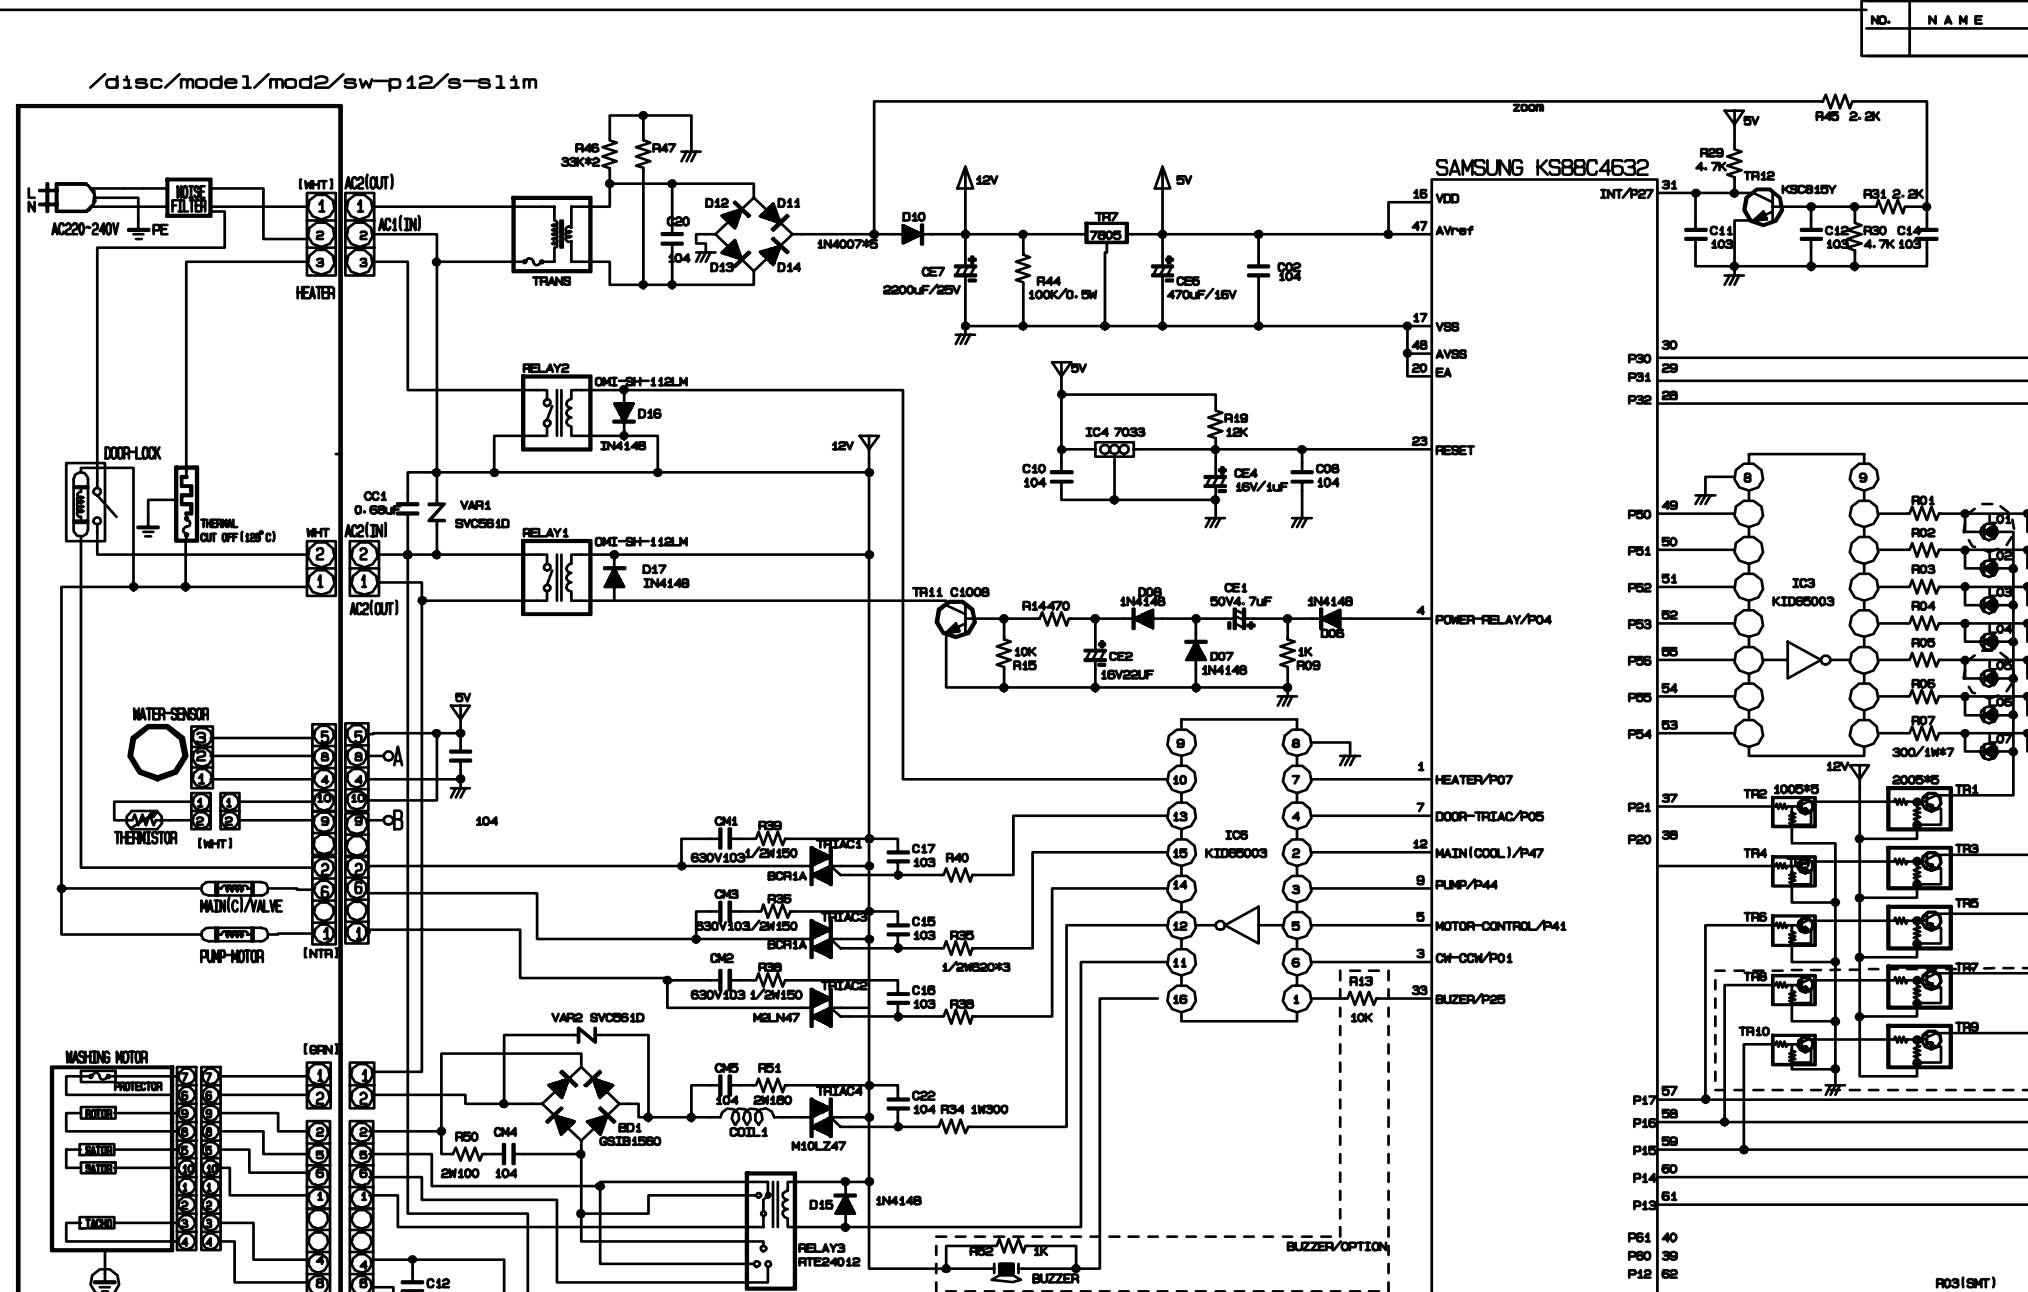

11-1. ASSY-PCB Part List

Code NO	Description	Specifcatio	Q'ty	Remark
0402-001404	DIODE-BRIDGE	GSIB1560,600V,15A,SIP-4,ST	1	B/D
0402-000137	DIODE-RECTIFIER	1N4007,1000V,1A,DO-41,TP	1	D09
0402-000137	DIODE-RECTIFIER	1N4007,1000V,1A,DO-41,TP	1	D10
0402-000137	DIODE-RECTIFIER	1N4007,1000V,1A,DO-41,TP	1	D11
0402-000137	DIODE-RECTIFIER	1N4007,1000V,1A,DO-41,TP	1	D12
0402-000137	DIODE-RECTIFIER	1N4007,1000V,1A,DO-41,TP	1	D13
0402-000137	DIODE-RECTIFIER	1N4007,1000V,1A,DO-41,TP	1	D14
1103-001203	IC-EEPROM	524C20D21,128x8Bit,DIP,8P,300MIL,-,2.5V,-,	1	IC3
DE13-20016A	IC-VOLT REGU	KA7805A,TO-220AB,1A,0/125C,-,-	1	7805
3501-001180	RELAY-MINIATURE	12VDC,400MW,-,2FORMC,7MS,3MS	1	RELAY3
3501-001158	RELAY-POWER	12VDC,0.53W,10000MA,1FORMA,20MS,8MS	1	RELAY1
3501-001158	RELAY-POWER	12VDC,0.53W,10000MA,1FORMA,20MS,8MS	1	RELAY2
2802-000188	RESONATOR-CERAMIC	8MHz,0.5%,TP,10.0x5.0x8.0mm	1	RESO
3404-001022	SWITCH-TACT	15V,20mA,130±40gf,6x6x5mm,SPS	1	SW1
3404-001022	SWITCH-TACT	15V,20mA,130±40gf,6x6x5mm,SPS	1	SW2
3404-001022	SWITCH-TACT	15V,20mA,130±40gf,6x6x5mm,SPS	1	SW3
3404-001022	SWITCH-TACT	15V,20mA,130±40gf,6x6x5mm,SPS	1	SW4
3404-001022	SWITCH-TACT	15V,20mA,130±40gf,6x6x5mm,SPS	1	SW5
1401-001007	THYRISTOR-TRIAC	10A,800V,20uA,300V/uS,TO-220AB	1	TRIAC4
1401-001024	THYRISTOR-TRIAC	2A,800V,20UA,300V/US,TO-220F	1	TRIAC2
1401-001057	THYRISTOR-TRIAC	1A,800V,10UA,-,TO-92	1	TRIAC1
1401-001057	THYRISTOR-TRIAC	1A,800V,10UA,-,TO-92	1	TRIAC3
DC26-10154F	TRANS-FORMER	230V5060HZ,SS-PJT,9PIN,-,-,-,DC12V,	1	TRANS
0504-000159	TR-DIGITAL	KSR2105,PNP,200MW,4.7K/10K,SOT-23,TP	1	TR2
0504-000159	TR-DIGITAL	KSR2105,PNP,200MW,4.7K/10K,SOT-23,TP	1	TR4
0504-000159	TR-DIGITAL	KSR2105,PNP,200MW,4.7K/10K,SOT-23,TP	1	TR6
0504-001080	TR-DIGITAL	KRC246S,NPN,200mW,2.2K/10K,SOT-23,TP	1	TR1
0504-001080	TR-DIGITAL	KRC246S,NPN,200mW,2.2K/10K,SOT-23,TP	1	TR3
0504-001080	TR-DIGITAL	KRC246S,NPN,200mW,2.2K/10K,SOT-23,TP	1	TR5

12. Setting up a wash machine.



12-1 Remove the safety device for carriage

- 1) Remove 3 safety device volts with a enclosed wrench for safety device remove
- 2) Plug the 3 holes with 3 caps after removing the 3 safety device volts.

* Take care of 3 safety device volts and a wrench , you need these when you move wash machine safely.

Caution

You must remove safety device before use , if not, you have much vibration or much load can be impacted on the machine.

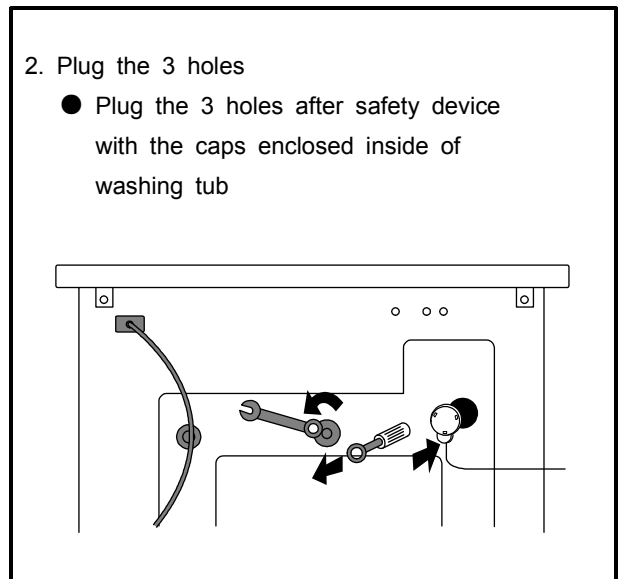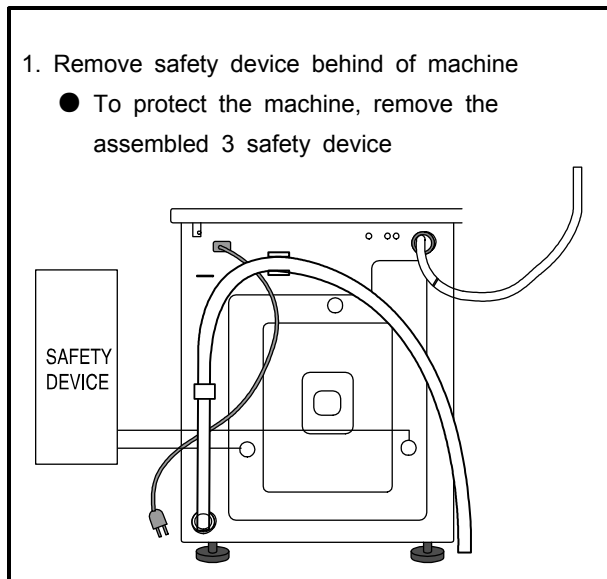

12-2 Install the wash machine on the leveled place.

With the water level adjustment device, adjust the 4 adjustment legs to install the machine leveled on the right, left, front and rear side. machine's install condition and size is following.

12-2-1 Initial assembled condition (ass'y cover top)


- 1) Adjustment legs are stick to the bottom of the machine, when the machine comes out of factory. this condition is ideal for vibration and noise.
- 2) When you install the machine initially or move the machine in use, unscrew the 4 legs to the left and place the machine level and spin the locking nuts and tighten it strongly.



12. Setting up a wash machine.


- 3) Even though adjustment legs came out all the way, if machine is not leveled, prop up the machine with the wood or brick to make it even.

(Do not use fragile material or slippery material such as laminated paper)

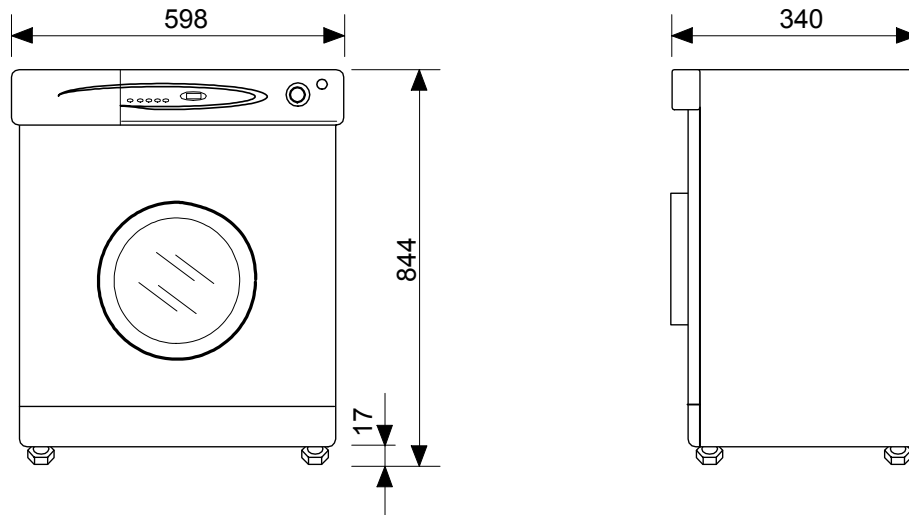


12-2-2 The condition of setting up sink(Disassembled Ass'y- Cover Top)

- 1) Spin the adjustment leg to the left and remove them from the front and rear side of the machine.
- 2) Remove the 4 locking nuts from adjustment legs, and put only adjustment legs back where those were.
- 3) After removing the fixing screws(each on right, left side) from the machine which is behind ass'y- cover top, disassemble the assy-cover top.
- 4) Install the sink.

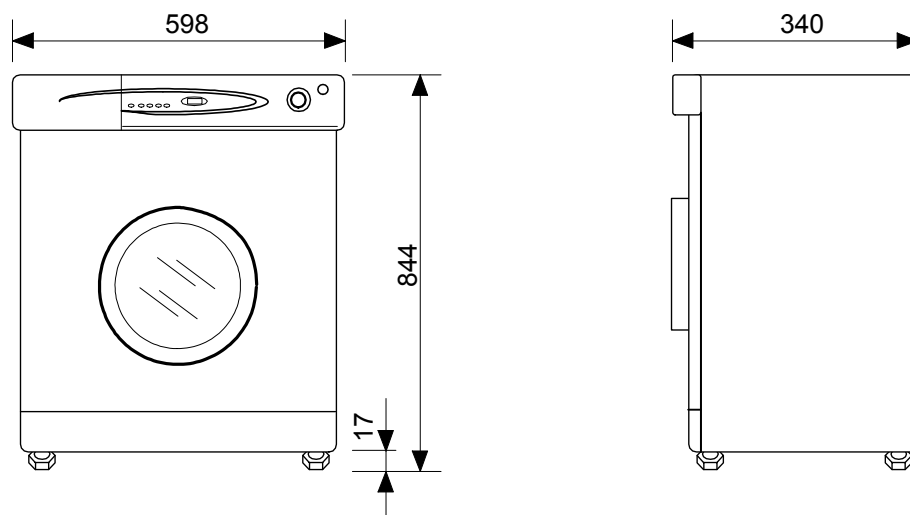


12. Setting up a wash machine.

12-3. Door Opening Dimension(Slim Model)

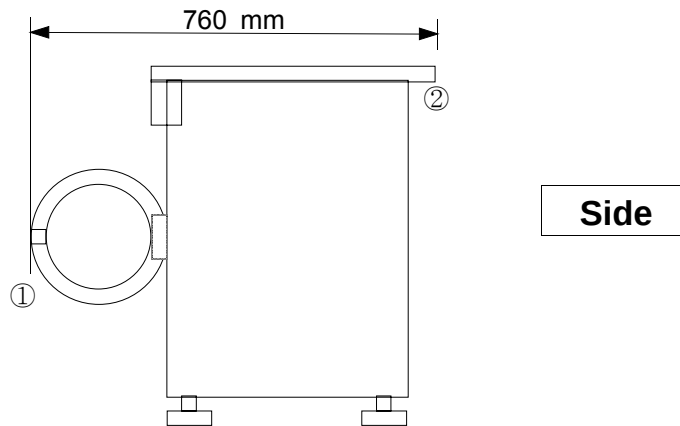

- (When The Door Vertically Open)
The distance between door① and the rear side② is 760mm

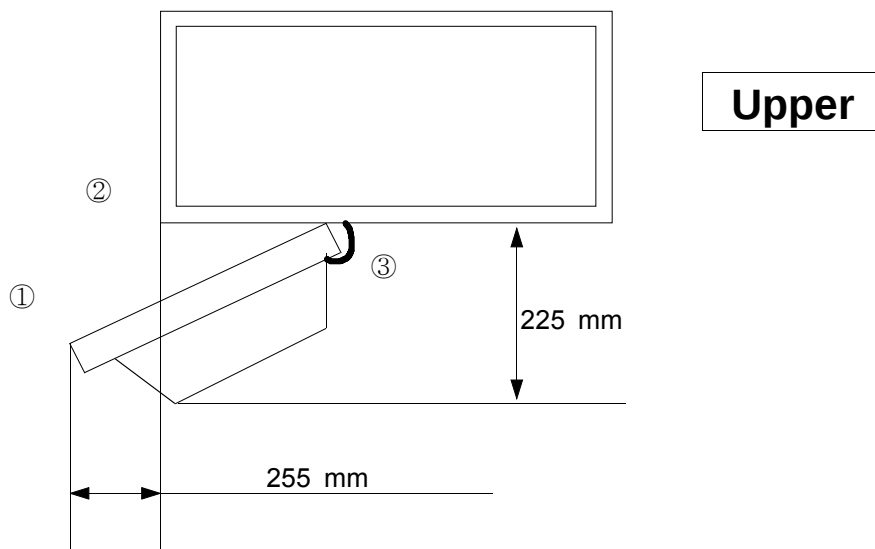


- (When the door extremely open ※)
The distance between the door edge(①) and the left side of washing machine(②) is 255mm

※ Maximum door angle(③) is 170°

13. Assemble and Disassemble



1. ASSÍ Y-COVER TOP

- 1) Remove two screws fixing the top-cover on back side.
- 2) Push the top-cover back about 15mm and pull it up.
- 3) It's possible to exchange and service Assy-Panel (PCB), the pressure-sensor, the noise-filter, the water valve and trans(option).

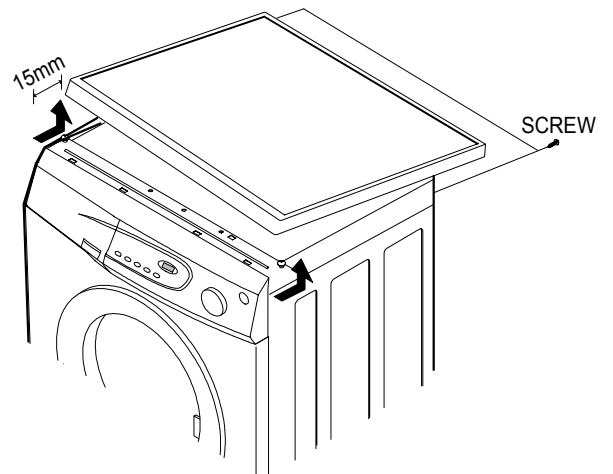

2. FRAME FRONT


- 1) Remove the top-cover and the assí y drawer.
- 2) Remove two screws fixing the control-panel on front side and the screw on right side.
- 3) Remove the cover-front(L) by using the (-)driver.
- 4) Pull the lever and open the assí y-door.
- 5) Part the diaphragm and the wire diaphragm away from the frame-front.
- 6) Remove the eight screws fixing the frame-front.
- 7) It's possible to exchange and service the heater, the pump, the shock-absorber and the door lock s/w.

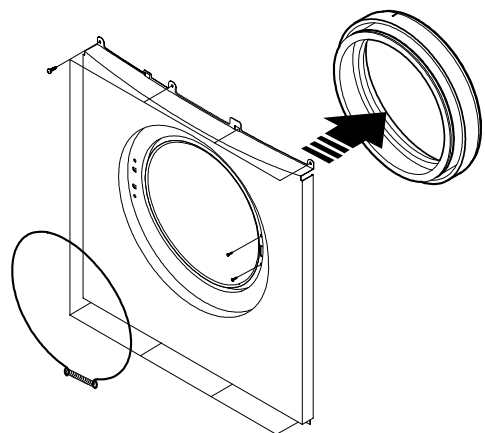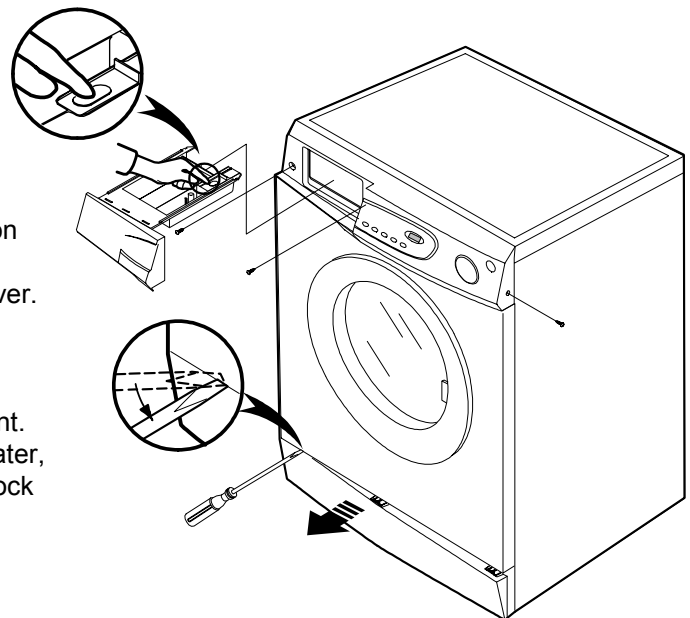

13. Assemble and Disassemble


3. BELT

- 1) Remove the top-cover.
- 2) Disassemble and assemble the belt.
- 3) Check the belt is located at center of the motor-pulley.
<When assemble the belt>
Hook the belt on the motor pulley 1) and place it around the pulley 2).

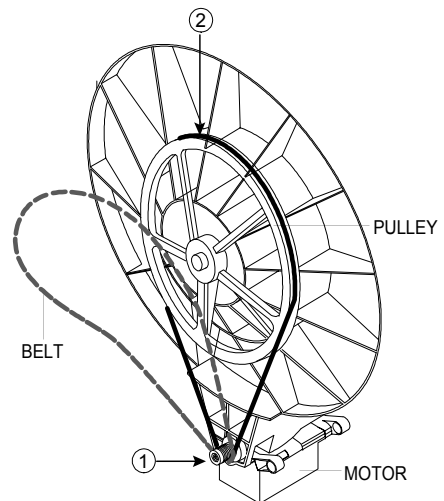


4. MOTOR

- 1) Lay down the washer on left side.
- 2) Remove the wire housing from the motor.
- 3) Remove the bolt fixing the motor with the box drive on back side.
- 4) Remove the motor.

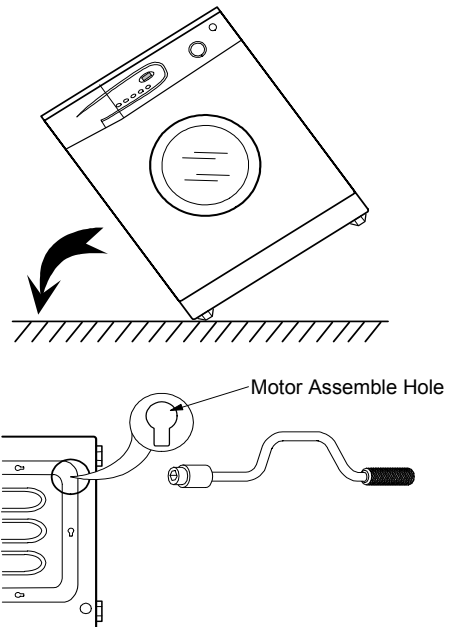


14. Tools for Disassembly and Assembly

NO.	TOOL		
ç	Box driver	10mm 13mm 17mm 19mm	Heater (1) Motor (1), Balance (5) 2 holes of each left and right of the shock absorber 1 Pulley hole
i	Double-ended spanner	10, 13 17,19mm	Replaceable for the box driver. Since the bolt runs idle when the box driver is used, use the box driver 17mm.
↵	Vice pliers		Tool to protect the idle and abrasion of the bolt for the box driver.
√	Other(Driver, Nipper, Long nose)		General tools for the after service.
f	JIG for the Tub		1 (Disassemble and Assemble)

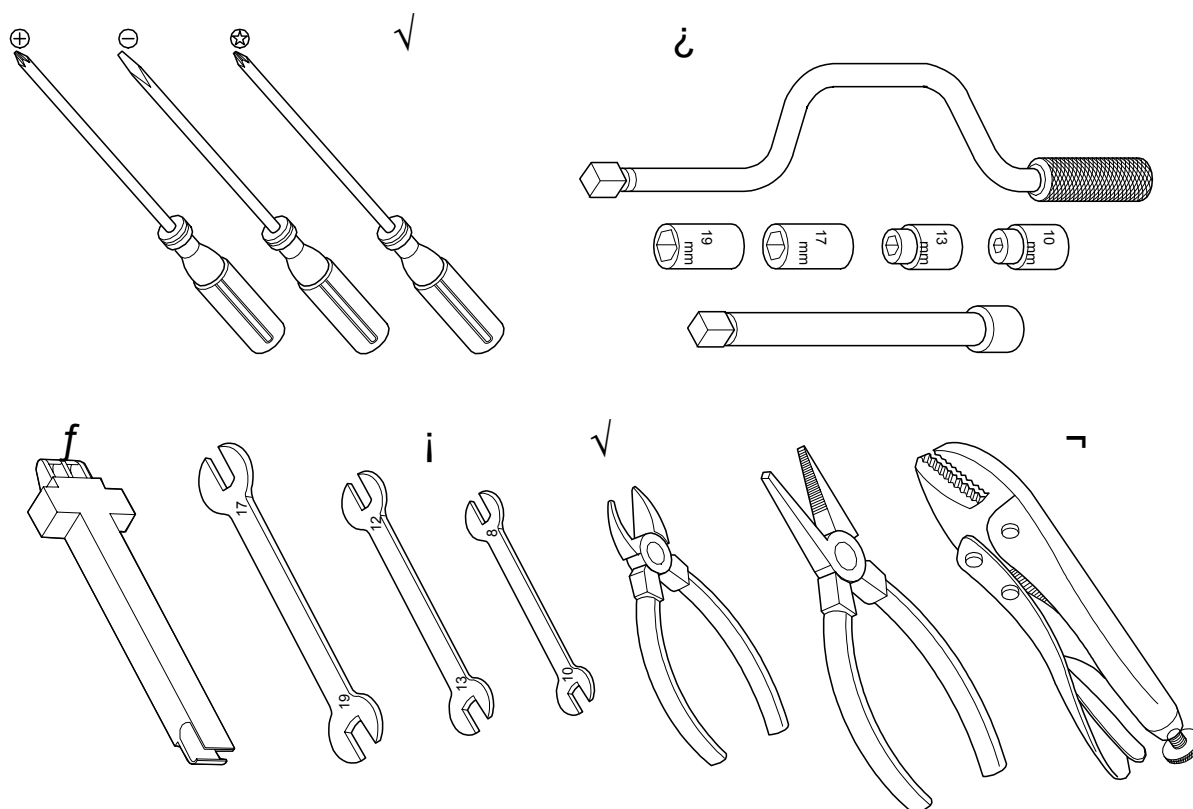


15. TOP(FRONT) - Exploded View

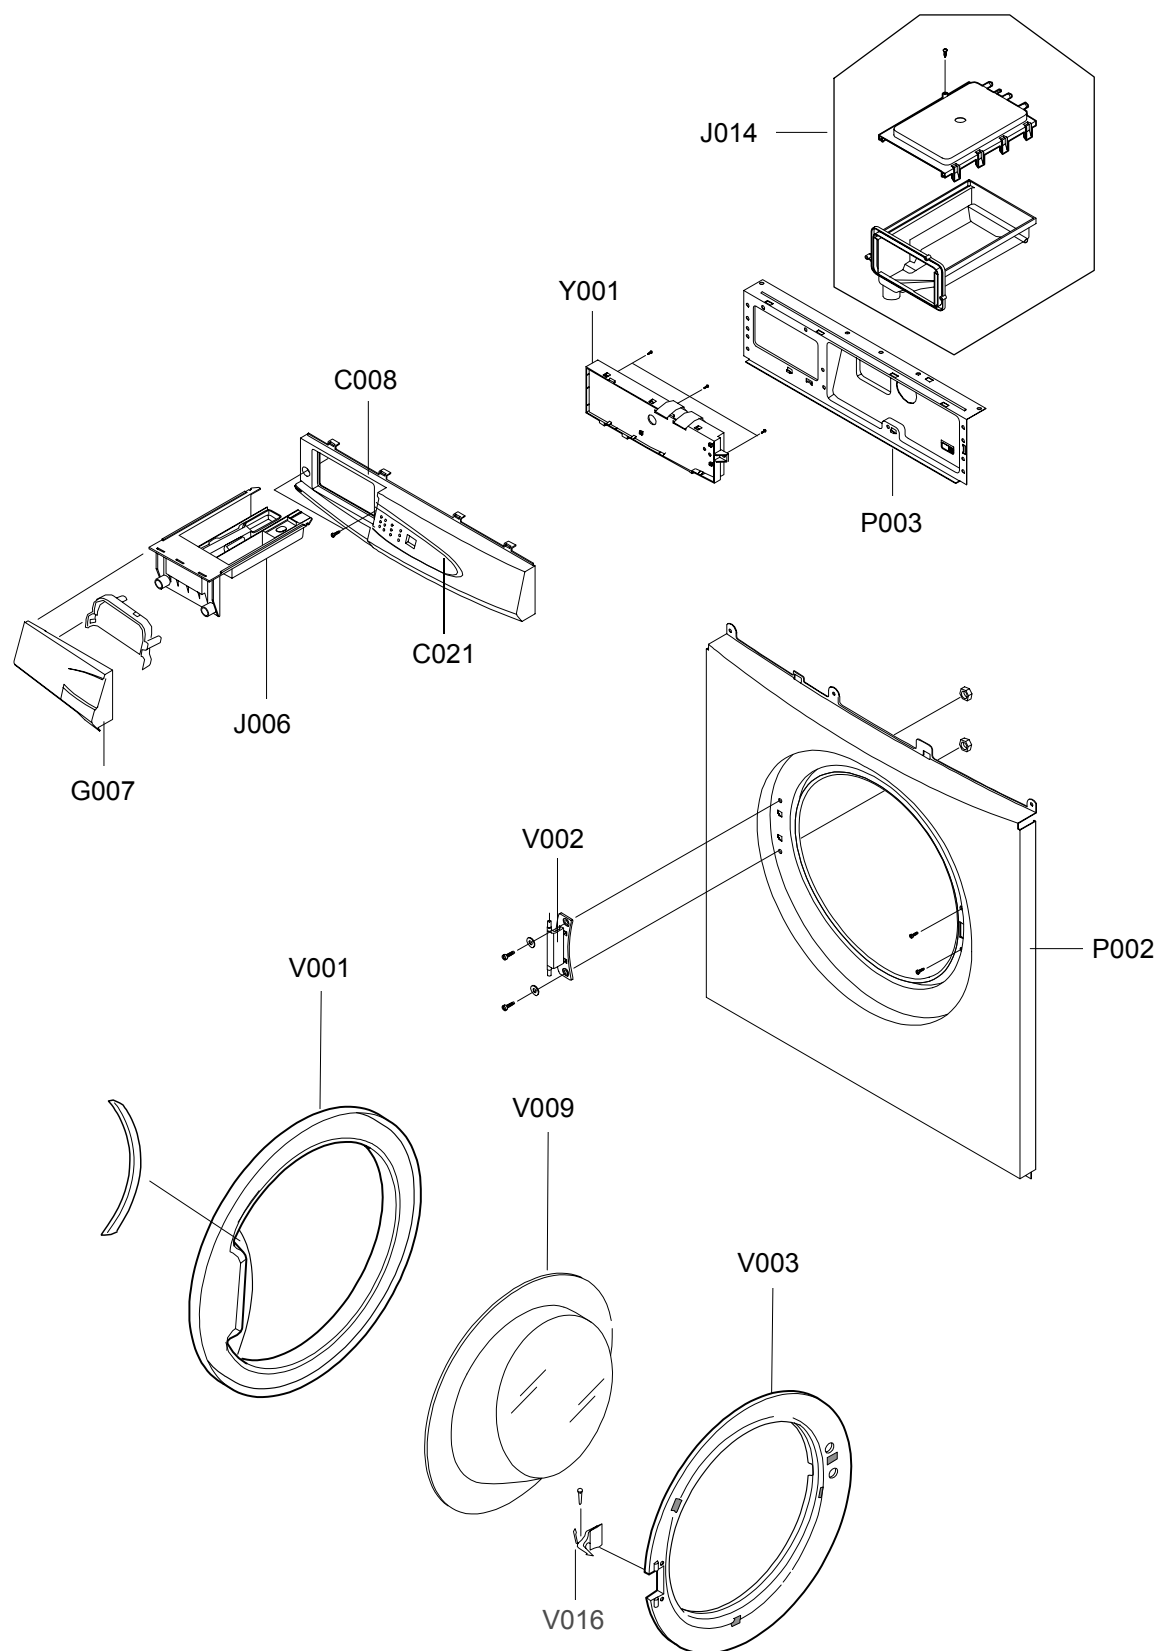

15. Parts List - TOP(FRONT)

LOCATION NO.	CODE NO.	DESCRIPTION	SPECIFICATION	Q'TY	REMARK
C008	DC64-00428A	PANEL-CONTROL	SB-PJT,HIPS,-,-,-,-,SNOW/W	1	
C021	DC64-00429F	INLAY-PANEL	SS-PJT,PC,T0.5,-,-,LILAC,ENG(S621GWL)	1	S621GWL2/YLW
C021	DC64-00429H	INLAY-PANEL	SS-PJT,PC,T0.5,-,-,IMPERIAL-SILVER,	1	S621GWS2/YLW
C021	DC64-00429E	INLAY-PANEL	SS-PJT,PC,T0.5,-,-,SILVER,RUSSIAN	1	S621GWS2/YLP
C021	DC64-00429D	INLAY-PANEL	SS-PJT,PC,T0.5,-,-,GRN,ENG(S821GWG)	1	S821GWG2/YLW
C021	DC64-00429J	INLAY-PANEL	SS-PJT,PC,T0.5,-,-,LILAC,ENG(S821GWL/	1	S821GWL2/YLW
C021	DC64-00429G	INLAY-PANEL	SS-PJT,PC,T0.5,-,-,IMPERIAL-SILVER,ENG	1	S821GWS2/YLW
C021	DC64-00429B	INLAY-PANEL	SS-PJT,PC,T0.5,-,-,SILVER,RUSSIAN(S821G	1	S821GWS2/YLP
G007	DC97-04628L	ASSY-PANEL FRONT	S621/30CM,LILAC/SB-PJT	1	S621GWL2/YLW
G007	DC97-04628K	ASSY-PANEL FRONT	S621/30CM,LSILVER/SB-PJT	1	S621GWS2/YLW(P)
G007	DC97-04628G	ASSY-PANEL FRONT	S821/30CM,GRN/SB-PJT	1	S821GWG2/YLW
G007	DC97-04628J	ASSY-PANEL FRONT	S821/30CM,LILAC/SB-PJT	1	S821GWL2/YLW
G007	DC97-04628H	ASSY-PANEL FRONT	S821/30CM,SILVER/SB-PJT	1	S821GWS2/YLW(P)
J006	DC61-00707A	BODY-DRAWER	SB-PJT,MT3320,-,-,-,-,-	1	
J014	DC97-04748K	ASSY-HOUSING DRAWER	SBP,1WAY(COLD)	1	
J014	DC97-02132D	ASSY-HOUSING DRAWER	SB-PJT/ONE-WAY,SPOON	1	
P002	DC97-00702D	ASSY-FRAME FRONT	SB-PJT/WHT,ROUND-TYPE	1	
P003	DC97-00417B	ASSY-FRAME PLATE(U)	SWF-P12,NO-SPRAY/SB-	1	
V001	DC63-00353A	COVER-DOOR	SB-PJT,HIPS,-,-,-,-,-,ROUND	1	
V002	DC97-00100C	ASSY-HINGE	S1005J,OPEN ANGLE 180DEG	1	
V003	DC61-00057A	HOLDER-GLASS	DWM599W,ABS(HG-0760),-,-,-,	1	
V009	DC64-00430A	DOOR-GLASS	SS-PJT,ABS,-,-,-,-,WHT,-	1	
V016	DC66-00355A	LEVER-DOOR	SD455-PJT,POM,-,-,-,-,WHT,EMZ	1	
Y001	MF-S621-00	ASSY PCB PARTS	MF-S621-00	1	S621GWL(S)2/YLW(P)
Y001	MF-S821-00	ASSY PCB PARTS	MF-S821-00	1	S821GWG(L,S)2/YLW(P)


15. TUB - Exploded View

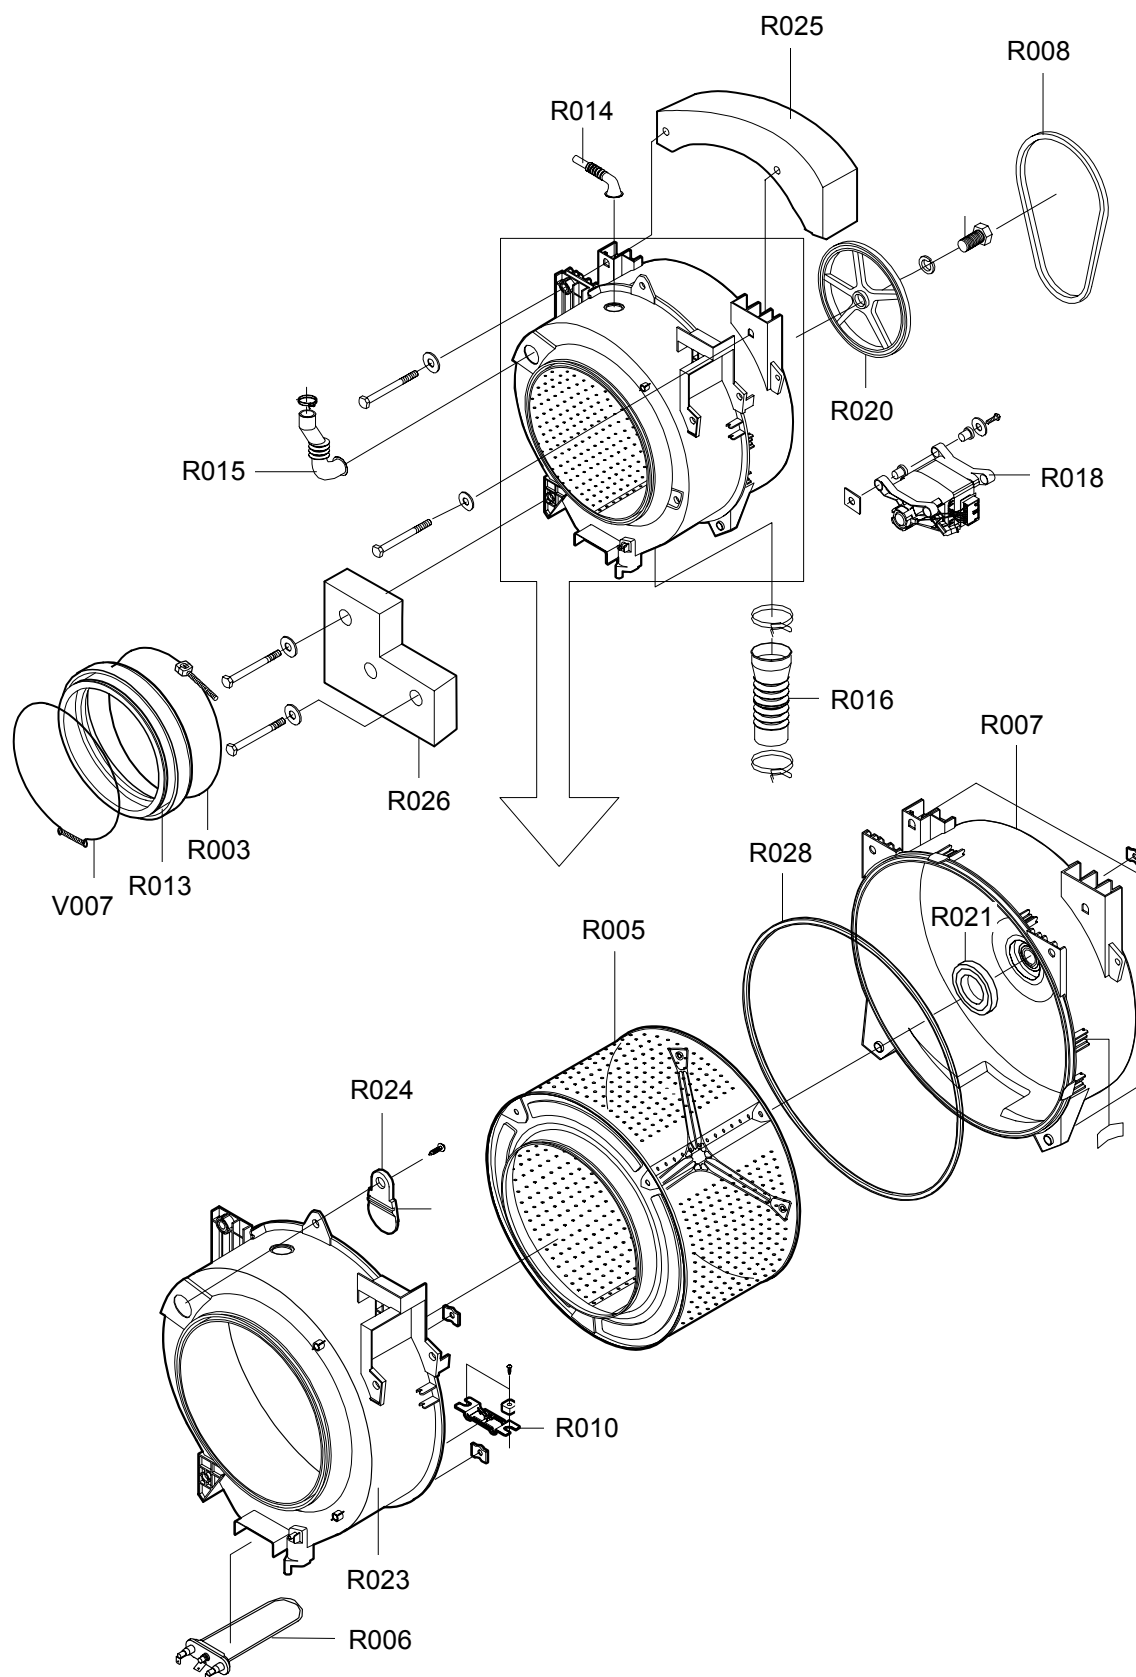

15. Parts List - TUB

LOCATION NO.	CODE NO.	DESCRIPTION	SPECIFICATION	Q'TY	REMARK
R003	DC91-12077A	ASSY-CLAMP DIAPHGRAM	SWF-P12,TUB	1	
R005	DC97-02099B	ASSY-DRUM	SB-PJT,DRUM-F/B(0.4T)	1	
R006	DC47-00006D	HEATER	KAWAI,SS-PJT,SUS316L,-,-,230V,-,-	1	
R007	DC97-02137B	ASSY-TUB BACK	SB-PJT,SAMBAK(10%)	1	
R008	6602-001073	BELT-TIMING GEAR	POLYURETHAN,1270,J3,MEG	1	
R010	DC61-00856A	BRACKET-HEATER	SB-PJT,STS430,-,-,-,-,-	1	
R013	DC61-20219A	DOOR-DIAPHRAGM	EPDM,-,-,-,-,-,GRY,SWF-	1	
R014	DC62-10303B	HOSE-AIR	S821,EPDM,ID24,OD47,-,L130,BLK,	1	
R015	DC62-10305B	HOSE-DRAWER TUB	S821,EPDM,ID35,OD40,-,L1	1	
R016	DC62-00121A	HOSE-FILTER TUB	S1005J,EPDM,ID65,-,-,-,-	1	
R018	DC31-00002H	MOTOR-DRUM	HXGP2I,S803J,-,50HZ,-,-,LOW-R	1	
R020	DC66-10176D	PULLEY	SB-PJT,ALDC,-,-,ID12.5,-,-,CENTER	1	
R021	DC62-00007B	SEAL-OIL	SB-PJT,NBR(SD25),BLK,-,-,-,JINY	1	
R023	DC61-00365B	TUB-FRONT	SL-600,FRPP(GR15%)SAMBAK,-,-,-	1	
R024	DC62-20311C	VANE-CHECK	SB-PJT,EPDM,-,-,BLK,CHINA	1	
R026	DC66-00172A	WEIGHT-BALANCER	SL-600,GC-150,SLIM/LOWER	1	
R025	DC66-00137B	WEIGHT-BALANCER	SB-PJT,CONCREET,-,-,-,-,	1	
R028	DC62-40183A	PACKING-TUB	SWF-P12,EPDM,-,-,-,-,-,BLK,-	1	
V007	DC91-12078A	ASSY-WIRE DIAPHRAGM	SWF-P12,FRAME-FRONT	1	

15. CASE - Exploded View

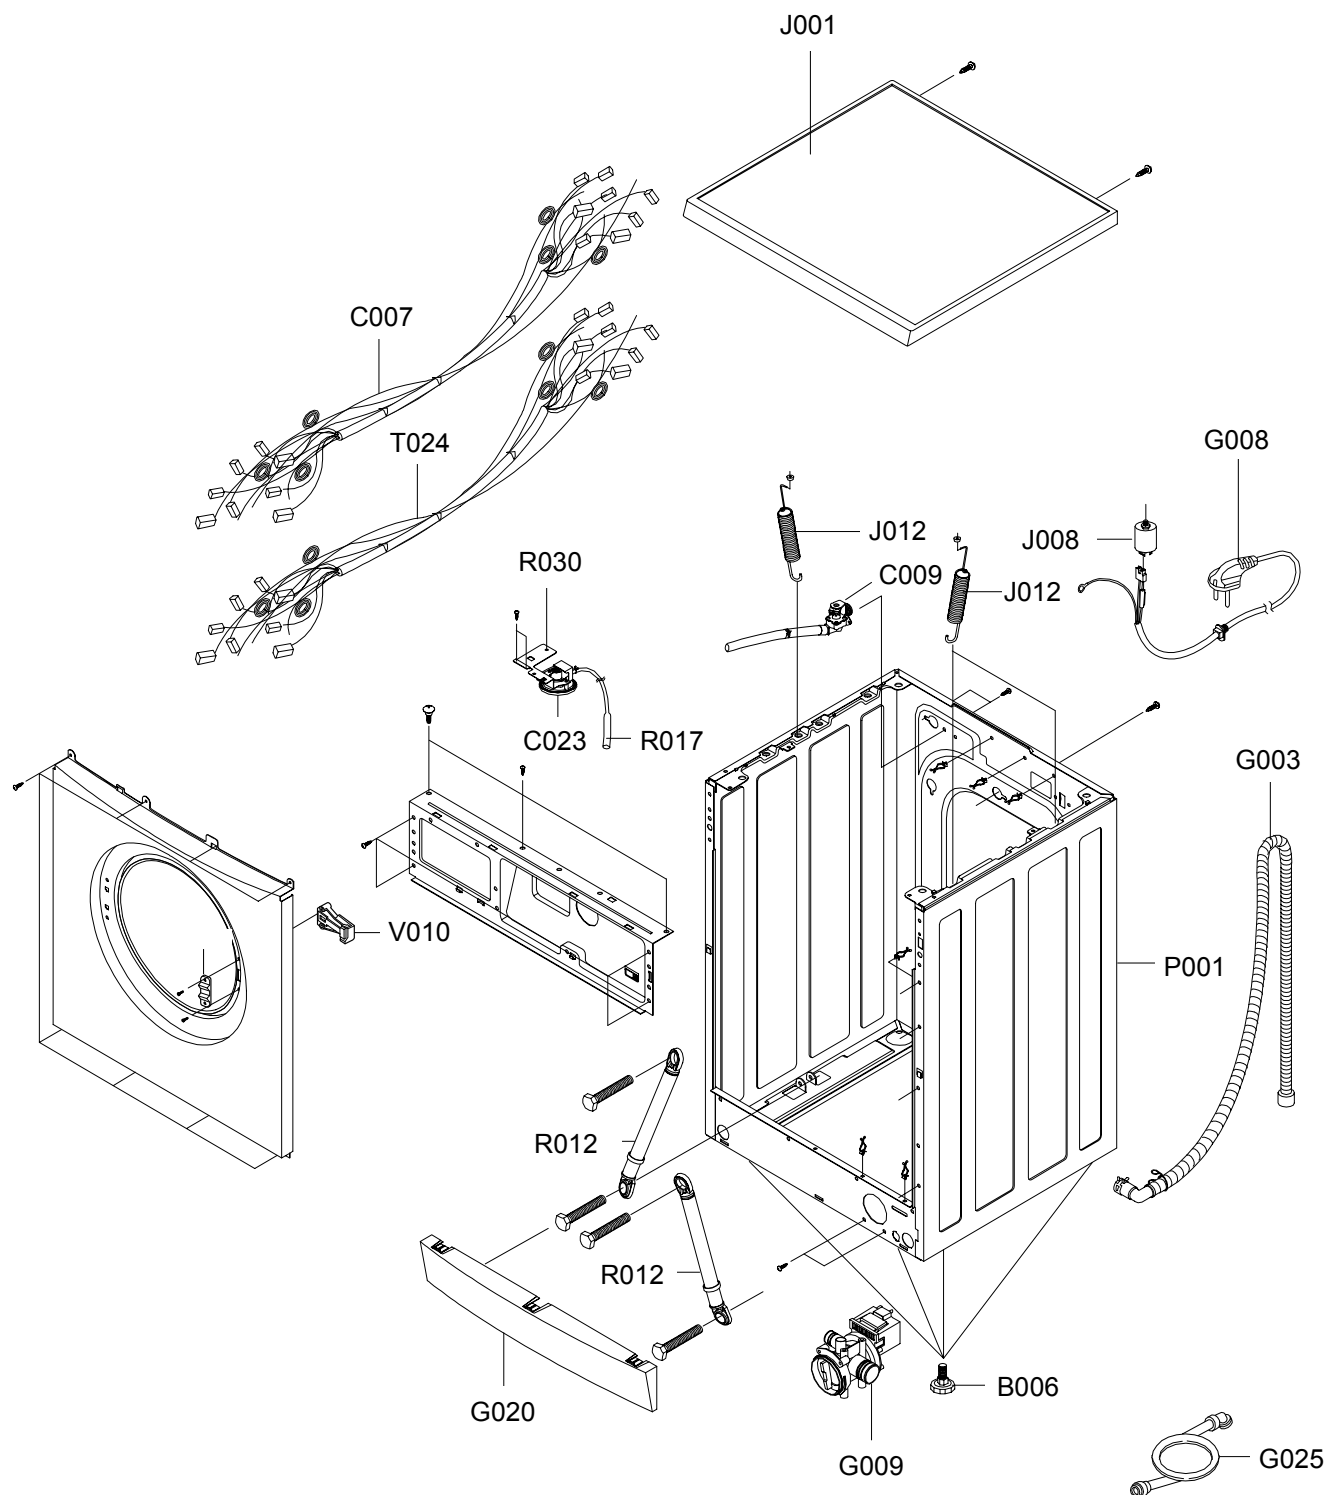

15. Parts List - CASE

LOCATION NO.	CODE NO.	DESCRIPTION	SPECIFICATION	Q'TY	REMARK
B006	DC97-02079C	ASSY-LEG	SB-PJT,SLIM/25MM/CHINA	4	
C007	DC96-00521B	ASSY-M.WIRE HARNESS	S621,ROLD-DOOR	1	
C009	DC62-30314A	VALVE-WATER	SWF-P12,NYLON#6,-,-,-,EATON(	1	
C023	DC32-30006P	SENSOR PRESSURE	DN-S14(P1291),TERMINAL-T	1	
G003	DC97-00139E	ASSY-HOSE DRAIN(O)	SB-PJT,PP/L1770/CHINA	1	
G008	DC96-00541A	ASSY-POWER CORD	S621,0.75MM(UCP2)	1	
G009	DC96-00149A	ASSY-PUMP DRAIN	P8091/P6091,220~240V/50H	1	
G020	DC61-10672A	COVER-FRONT(L)	SWF-P12,PP(BJ-730),-,-,-,	1	
G025	DC62-10289B	HOSE-WATER(C)	WIP4013SRW,PVC+NYLON,ID10.	1	
J001	DC97-04627A	ASSY-COVER TOP	SB-PJT,ABS/WHT	1	
J008	DC29-00006A	FILTER-EMI	DFC-2712R,P/PV/SLIM,250V,12A,	1	
J012	DC61-00441A	SPRING-HANGER	S1005J,HSWR,CD3.0,-,-,L175	2	
P001	DC99-00321A	ASSY-PAINT	SB-PJT,SB/COLD	1	
R012	DC66-00320A	DAMPER-SHOCK	SB-PJT,ABS,-,-,-,-,WHT,AKS-	2	
R017	DC62-10311C	HOSE-PRESSURE	S821,EPDM,ID13.5,OD17.5,-,	1	
R030	DC61-40345A	BRACKET-PRESSURE	GI or GA,SWK-P12,T11.0,-	1	
T024	DC96-00522A	ASSY-WIRE HARNESS	SS-PJT,SUB	1	
V010	DC64-00653A	DOOR-LOCK S/W	DA,PA6-G,-,H82,W50,-,BLK,2	1	

15. Screw/Bolt List

CODE NO.	DESCRIPTION	SPECIFICATION	Q'ty	ASSEMBLY LOCATION
6011-001421	BOLT-FLANGE	M7,L61(29.4),ZPC(YEL),SWRCH18A	1	-
6011-001421	BOLT-FLANGE	M7,L61(29.4),ZPC(YEL),SWRCH18A	1	WEIGHT/L
DC60-40144A	BOLT-HEX	M10,L41,ZPC2(YEL),SM10C/DAMPER	2	DAMPER+FRAME
6011-001452	BOLT-HEX	M10,L20,ZPC(YEL),SWCH10AK,ASSY(WS)	1	PULLEY
DC60-40141A	BOLT-HEX	SM10C/DAMPER,HEX,M8,L66,-,ZPC2(YEL),-, -	2	DAMPER+TUB
DC60-40005A	BOLT-HEX	M4,L60,ZPC2(YEL),SS41C,-,-,-,-	1	-
DC60-50010A	NUT-DIAPHRAGM	EGI,M4,-,-,2.5TX20X8	1	-
DC60-50010B	NUT-DIAPHRAGM	EGI,M4.2,-,-,2.5TX20X8	1	-
DD60-50018A	NUT-FLANGE	-,M5XP0.8,FZY,MSWR10,-	2	HINGE
6001-001773	SCREW-MACHINE	TH,+,M5,L12,	2	HINGE+FRAME
6001-001773	SCREW-MACHINE	TH,+,M5,L12,	2	HINGE+HOLDER
6009-001343	SCREW-SPECIAL	PH,TORX,.,M4,L10,PASS	1	P/CORD
6009-001342	SCREW-SPECIAL	TH,+,.,M5,L11,ZPC(YEL)	2	FRAME(TOP)
6002-000471	SCREW-TAPPING	TH,+,1,M4,L12,PASS,STS304,-	4	COVER-DOOR
6002-001310	SCREW-TAPPING	TH,+,2S,M3.5,L20,PASS	2	S/W-DOOR+FRAME
6002-000213	SCREW-TAPPING	TH,+,1,M4,L12,ZPC(YEL),SWRCH18	1	CLAMP-HOSE+FRAME
6002-000239	SCREW-TAPPING	TH,+,2S,M4,L8,ZPC(YEL),SM20C	7	FRAME+FRAME-FRONT
6002-000239	SCREW-TAPPING	TH,+,2S,M4,L8,ZPC(YEL),SM20C	4	FRAME+PLATE-UPPER
6002-000525	SCREW-TAPPING	FH,+,1,M4,L12,PASS,STS304	1	C-PANEL+FRAME
6002-000554	SCREW-TAPPING	PH,+,2S,M4,L12,ZPC(YEL),SWRCH1	3	PCB+C-PANEL
6002-001006	SCREW-TAPPING	TH,+,2S,M4,L12,-,STS410	2	PUMP+FRAME
6002-001327	SCREW-TAPPING	PWH,+,1,M4,L12,NI PLT	2	Shutter
6002-000630	SCREW-TAPPING	PH,+,2S,M3,L8,ZPC(YEL),SWRCH18	2	-
6002-000444	SCREW-TAPPING	TH,+,2S,M4,L14,NTR,STS304	2	B/K-HEATER
6002-000471	SCREW-TAPPING	TH,+,1,M4,L12,PASS,STS304,-	1	VANE-CHECK
6002-001327	SCREW-TAPPING	PWH,+,1,M4,L12,NI PLT	1	HOSE-PRESSURE
6002-000213	SCREW-TAPPING	TH,+,1,M4,L12,ZPC(YEL),SWRCH18	1	HOUSING-DRAWER
6002-000445	SCREW-TAPPING	TH,+,2S,M4,L18,NTR,STS304	2	PANEL+FRM+HOUSING-D
6002-000554	SCREW-TAPPING	PH,+,2S,M4,L12,ZPC(YEL),SWRCH1	1	HOUSING-DRAWER
6002-001327	SCREW-TAPPING	PWH,+,1,M4,L12,NI PLT	2	C/TOP+FRAME
6002-000630	SCREW-TAPPING	PH,+,2S,M3,L8,ZPC(YEL),SWRCH18	2	B/K+PRE-S/W
6002-000470	SCREW-TAPPING	TH,+,1,M4,L10,ZPC,SCRCH18A	2	B/K-C.T
6002-000213	SCREW-TAPPING	TH,+,1,M4,L12,ZPC(YEL),SWRCH18	1	-
6003-000226	SCREW-TAPTITE	TH,+,S,M4,L8,ZPC(YEL),SWRCH18A	1	E/W(SUB)+FRAME(F)
6003-000226	SCREW-TAPTITE	TH,+,S,M4,L8,ZPC(YEL),SWRCH18A	1	POWER(E)+FRAME
6003-000226	SCREW-TAPTITE	TH,+,S,M4,L8,ZPC(YEL),SWRCH18A	2	W/V+FRAME
DC60-60040A	WASHER-NYLON	-,ID10.5,OD32,T2,-,PBSP-	1	FIXER
DC60-60044B	WASHER-PLAIN	SBC,ID8.4,OD30,T3,-,-,-	1	FIXER
DC60-60044A	WASHER-PLAIN	-,ID10.5,OD30,T3,-,STS304	2	DAMPER+TUB



©Samsung Electronics Co., Ltd. April 2003
Printed in Korea
Code No. : DC68 - 01833A