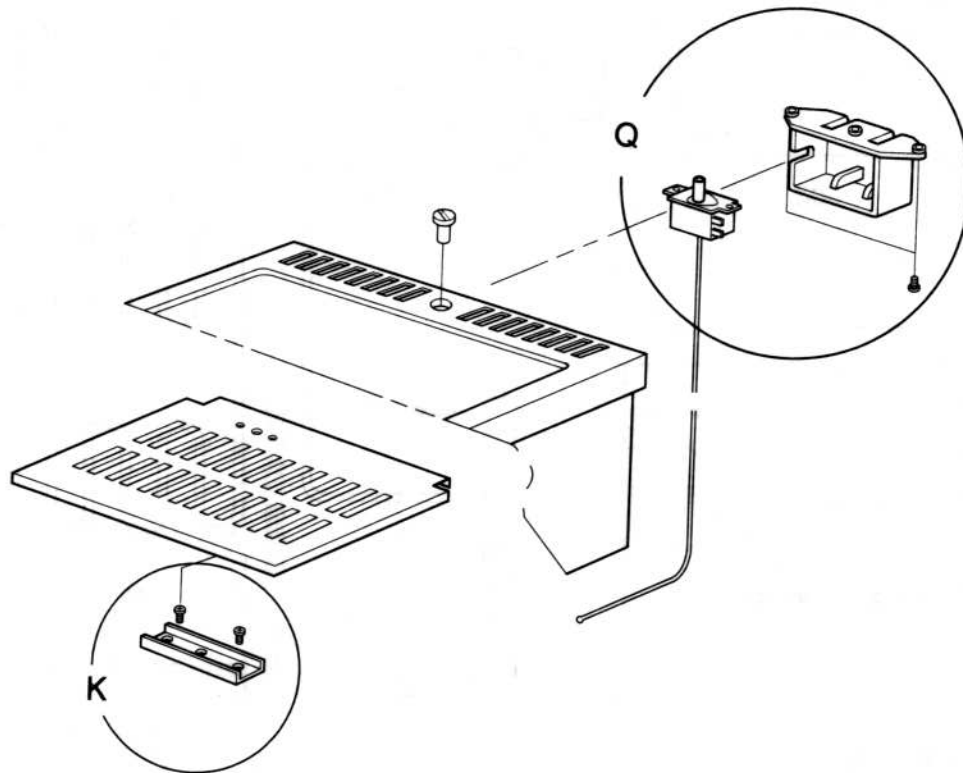
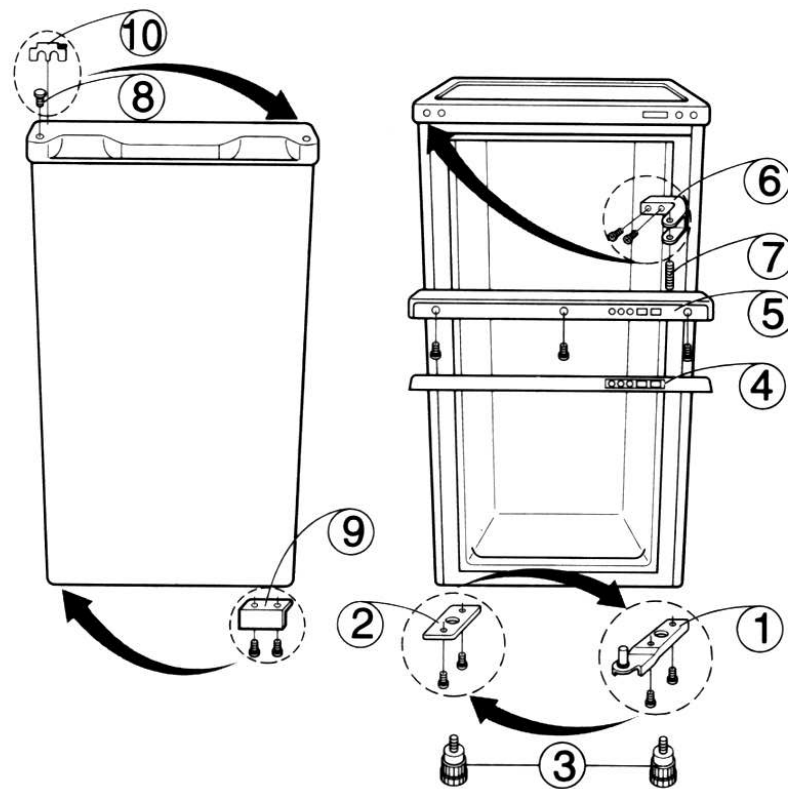

8. How to replace main components

8-1 Thermostat replacement

- (1) Pull the power cord out from the outlet
- (2) Open the door and take out the compartments 1 and 2
- (3) Remove the thermostat sensor ("K" part)
- (4) Remove the thermostat box from the back of freezer
- (5) Remove the wire from the thermostat
- (6) Disassemble the condenser plate and remove the thermostat from the freezer
- (7) Reassemble them in opposite order of disassembly



9. How to change the direction of door open



It enables a user to change the door open direction to right or left according to the location of installation or user's taste. When a consumer buy a freezer, it has installed left.

1

Take out all frozen food and compartments from the freezer

2

Disassemble the door after removing the components (4) (5) (6) (7) in order

- Remove the door by pulling it up
- When removing the component (6), take care of wire

3

Disassemble the components (1) (2) (3) after leaning the freezer backward and removing bolts, and exchange and reassemble them.

4

Disassemble the components (8) (9) (10), and reassemble them on the opposite side.

5

Reassemble the component (7) to the opposite side screw of component (6), and reassemble the door and the component (6) to its opposite side.

- At this time door should be balanced.

6

Reassemble the components (5) and (4) in order