


5. Product structure & Temperature adjustment

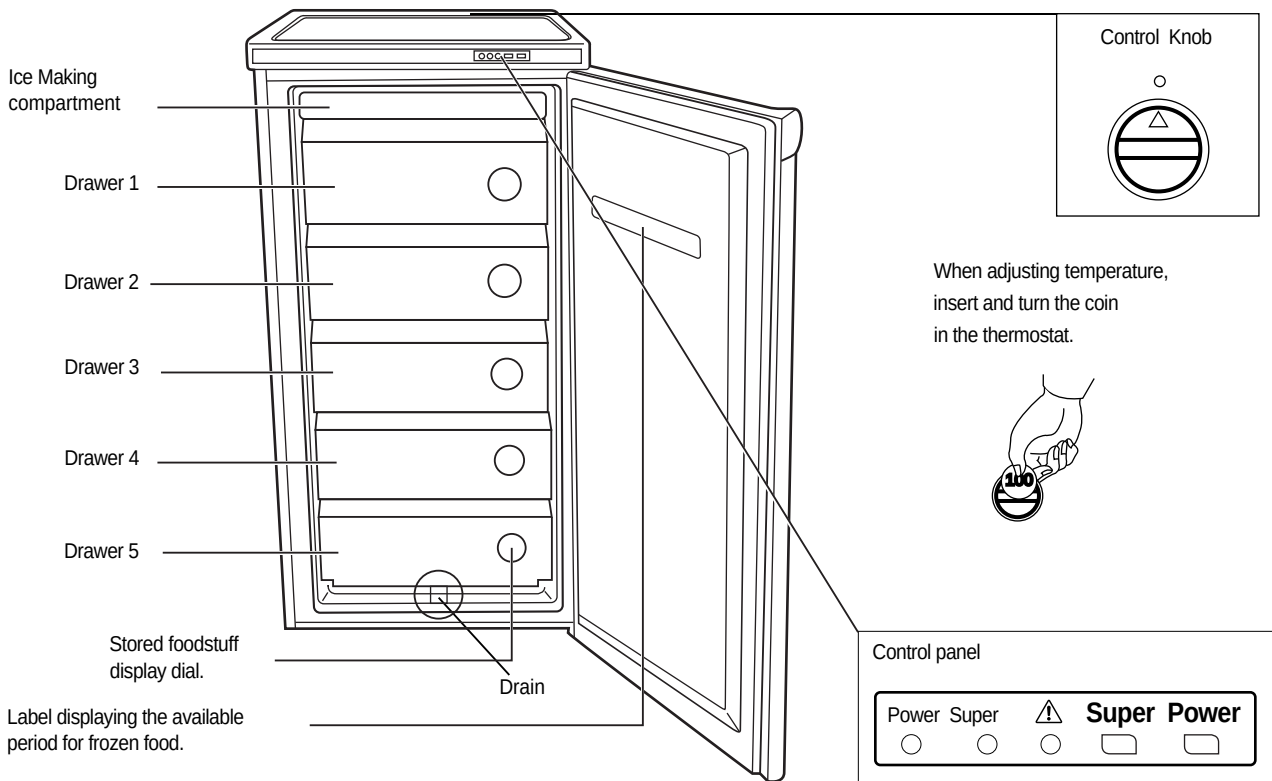

Colder



If the freezer does not cooling well and the amount of frozen food is much

- Turn the thermostat to the end of the right.
- It is recommended to use when the temperature is high like summer. When the room temperature is high, the temperature of freezer is also high.

Normal



It is recommended at normal status

- Adjust the thermostat to the center.

Cold



If the amount of frozen food is small

- Turn the thermostat to the end of the left
- It is recommended when the amount of foodstuff is small like spring, fall and winter.

Stop



It you do not want to use the (this) unit

- Turn the power off by pressing the power button
- All of the front display lamps are out.
- They should be confirmed.
- Turn the power on in more than 5 minutes after power-off (If the power is immediately turned on after power-off, trouble could be caused by operation by force).

Super



If the amount of frozen food is much, quick ice making or quick freezing is required.

- Press the super freezing H button (Yellow display lamp is on)
- Turn it off by pressing the button when the inside of freezer is frozen fully. Power consumption can be reduced.