

TECHNICAL INFORMATION


WASHING MACHINES – TOP LOADER 4-023-0701

PROBLEM WITH STARTING PROGRAM

With washing machines WT 52112 (157185)



There is a problem with first starting. After selecting the program, the program doesn't start, but start to blink LED diodes (which shows status of machine) continuously from the left to the right position.

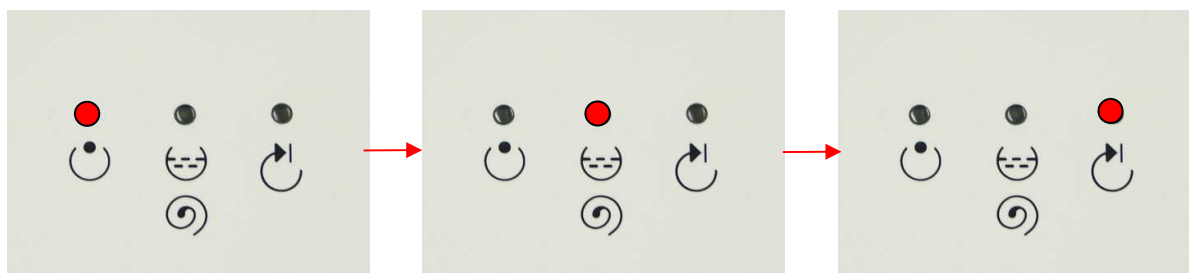

This status shows us that the time delay is switched on, the function which is not present on this machine.

SOLUTION:

Remove the front panel and check the third potentiometer, if it is in right position (see picture below). This potentiometer is used for adjust time delay option on some other models.

For the switching off time delay, the potentiometer has to be turn on extremely left position.

