

2. Disassembly and Reassembly


2-1 Removal of Button-C/Reel and Button-Switch

Detach the BUTTON with a flat head screw driver.

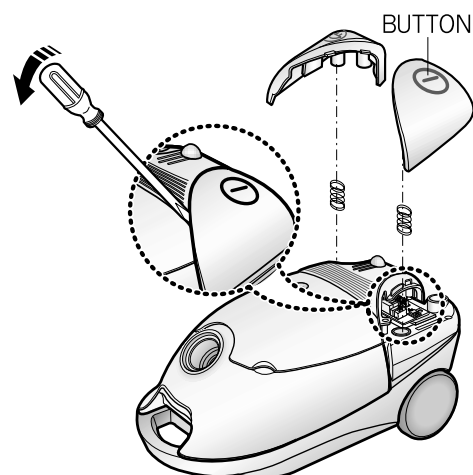


2-2 Removal of Panel

Loosen the three screws and detach PANEL-CONTROL.

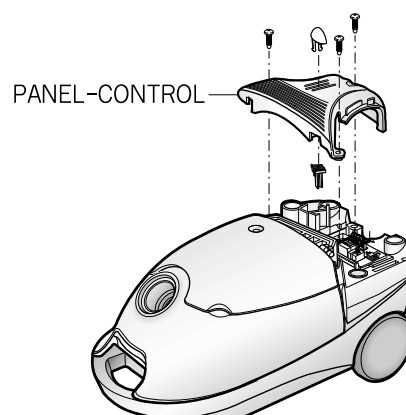


2-3 Disassembly of Cover-Dust ASS'Y

Loosen the two screws and detach the COVER-INDICATOR, INDICATOR ASS'Y, and DAMPER ASS'Y.

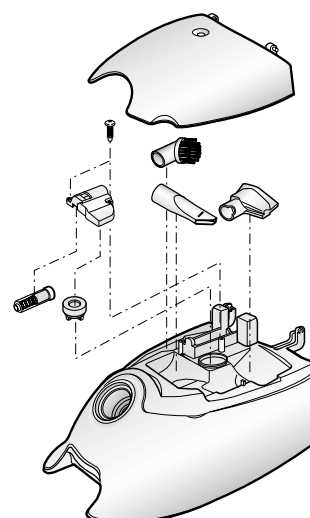


2-4 Disassembly of Main Body-control / Removal of Main PCB Assembly

Loosen the four screws and grasp both sides of the BODY-CONTROL. Lift it upwards, Separate the WIRE ASS'Y from the PCB-MAIN ASS'Y.

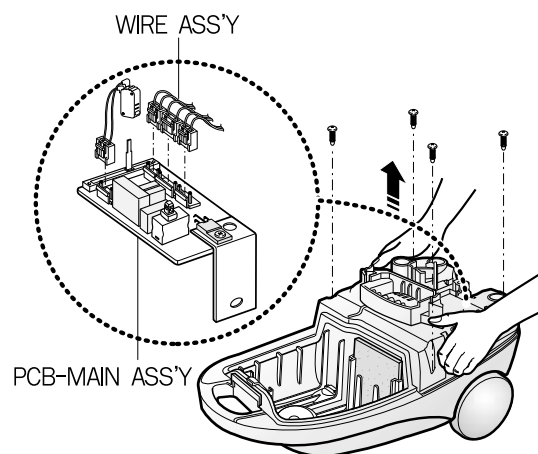


2-5 Motor Replacement

1. Loosen the two screws and separate COVER-MOTOR from the body.
2. Separate MOTOR and WIRE-HARNESS MOTOR.

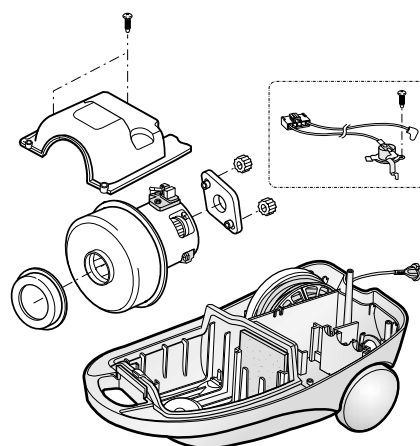


2-6 Cord-Reel Replacement


1. Disassemble the GUARD-CORD with a flat head driver. (Insert it into the gap and push the hook to the opposite side.)

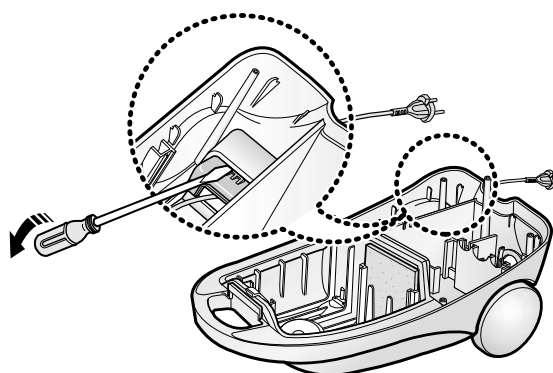

2. Separate the CORD-REEL from the main body.

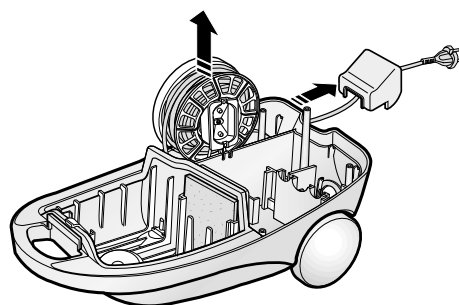

3. Hold the COVER REEL, and wind the power cord to the left 4~5 times.

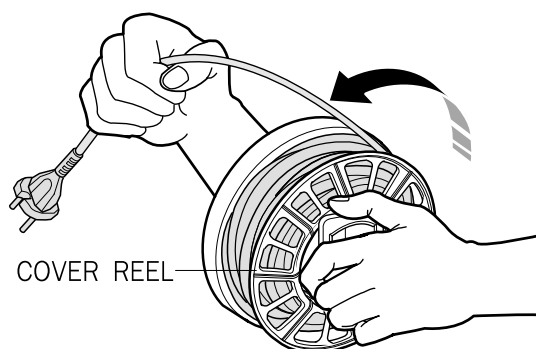

4. After winding, assemble the CORD-REEL to the body.

