



4. Disassembly and Reassembly

4-1. Removal of ASSY COVER-DUST


- 1) Open the ASSY COVER DUST.

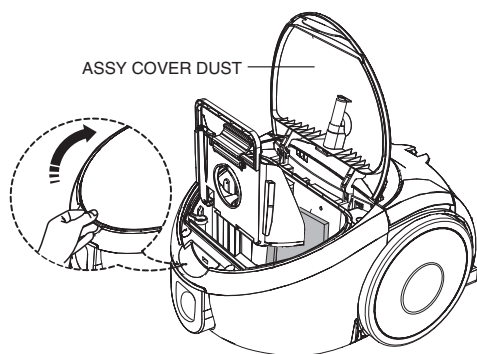

- 2) Separate the PANEL CONTROL from the ASSY BODY DUST by pushing two hooks with a flat head screw driver after loosening a screw.

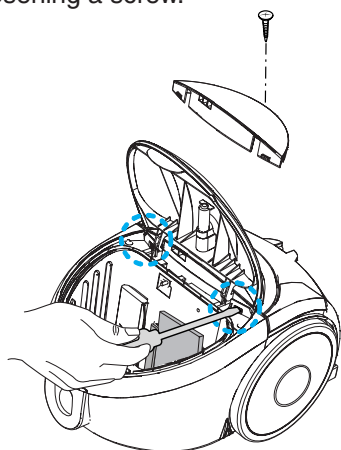


- 3) Detach the COVER DUST from the ASSY BODY DUST.

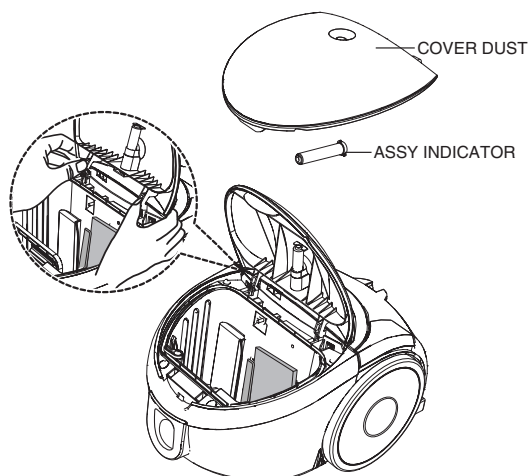


4-2. Removal of ASSY BODY DUST


- 1) Separate the ASSY BODY DUST from the ASSY BODY BASE by pushing two hooks with a flat head screw driver after loosening 4 screws.

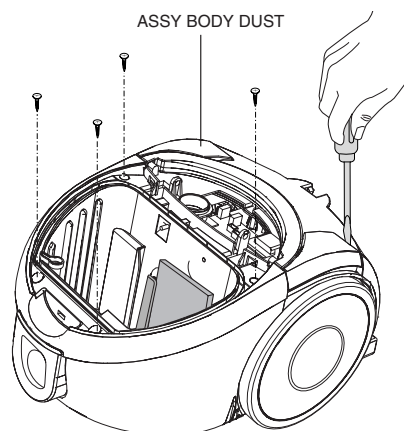

- 2) Separate the ASSY HANDLE, ASSY DAMPER, LEVER SAFETY, and the ASSY COVER FRONT, H from the ASSY BODY DUST.

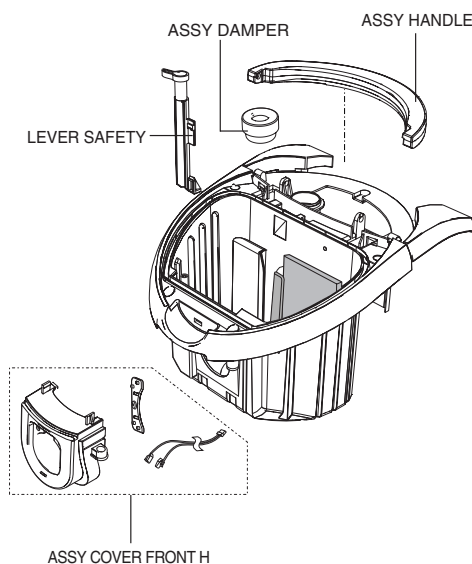


- 3) Detach ASSY LEVER BRAKE from the ASSY BODY CONTROL by pushing the hinge with a flat head screw driver.

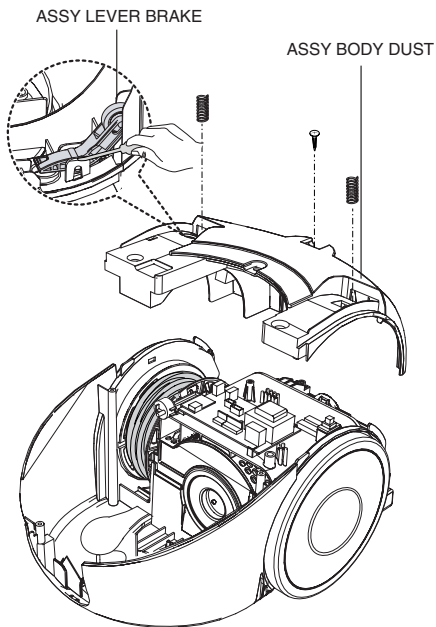



4-3. Removal of PBA-MAIN

- 1) Separate the CONNECTOR HOUSING from the CONNECTOR HEADER of PBA-MAIN and loosen the one screw and detach the PBA-MAIN

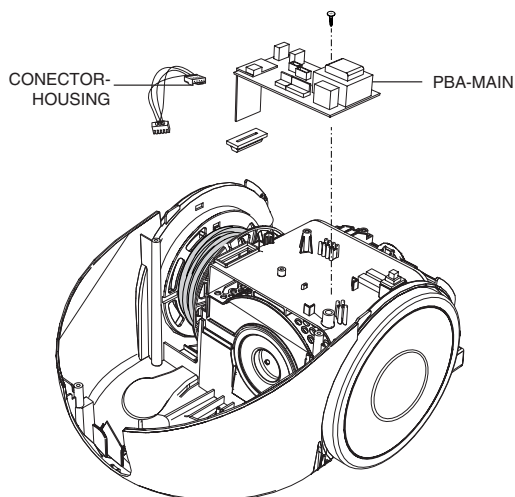


4-4. Removal of ASSY MOTOR

- 1) Loosen a screw from the ASSY BODY BASE and detach the ASSY CASE-MOTOR UP.
2) Separate the ASSY MOTOR from the ASSY BODY BASE.

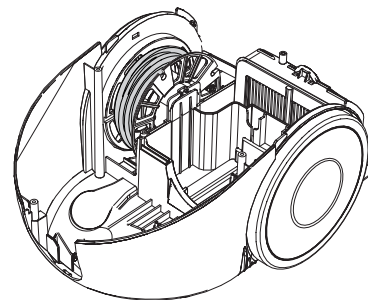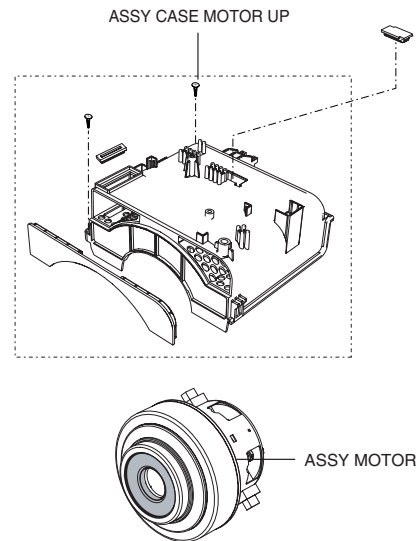


- 3) Separate the CUSHION MOTOR-F, HARNESS MOTOR, ASSY SUPPORT MOTOR from the ASSY MOTOR.

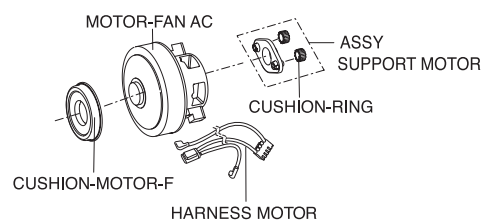


4-5. Removal of ASSY CORD REEL

- 1) Press the hook on the upside of the GUARD CORD with a hand and detach the GUARD CORD.

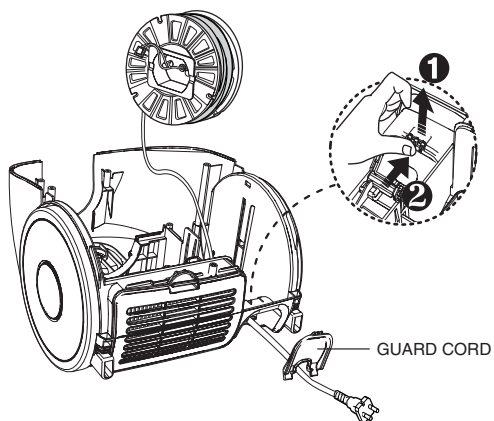

- 2) Separate the ASSY CORD REEL from the ASSY BODY BASE carefully.

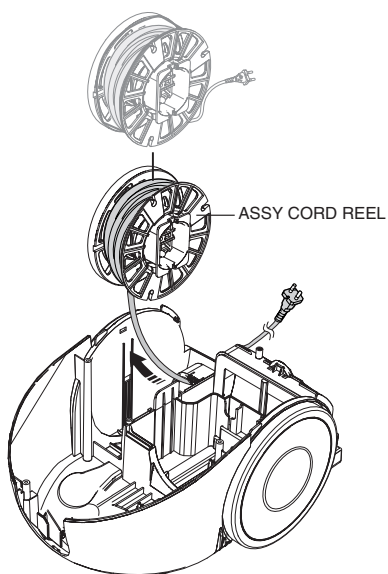

4-6. Assembly of ASSY CORD REEL

- 1) Hold the COVER C/REEL and wind the POWER CORD about 4~5 times.
- 2) When winding is completed, immediately assemble the ASSY CORD REEL to the BODY BASE.

