


3. Operating Instructions

3-1. Assembling The Cleaner

3-1-1. Body Slide V/R Control


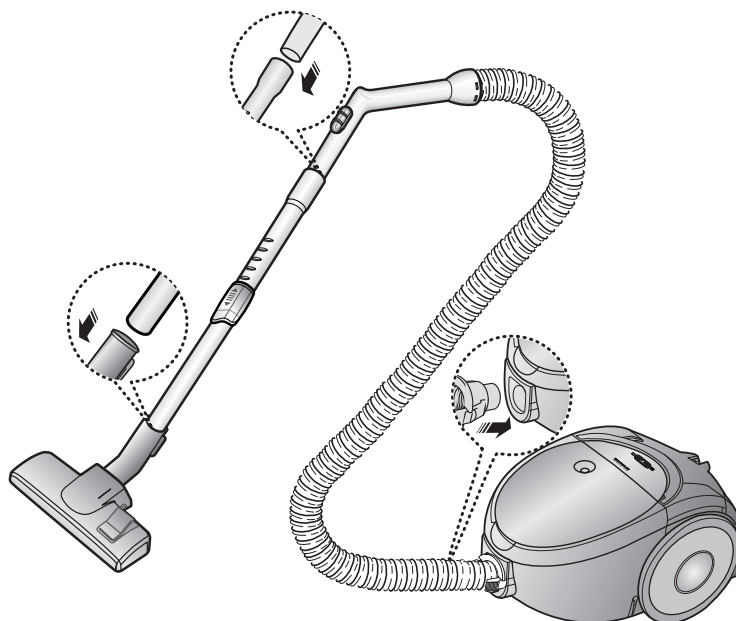


3-1-2. Handle Slide V/R Control

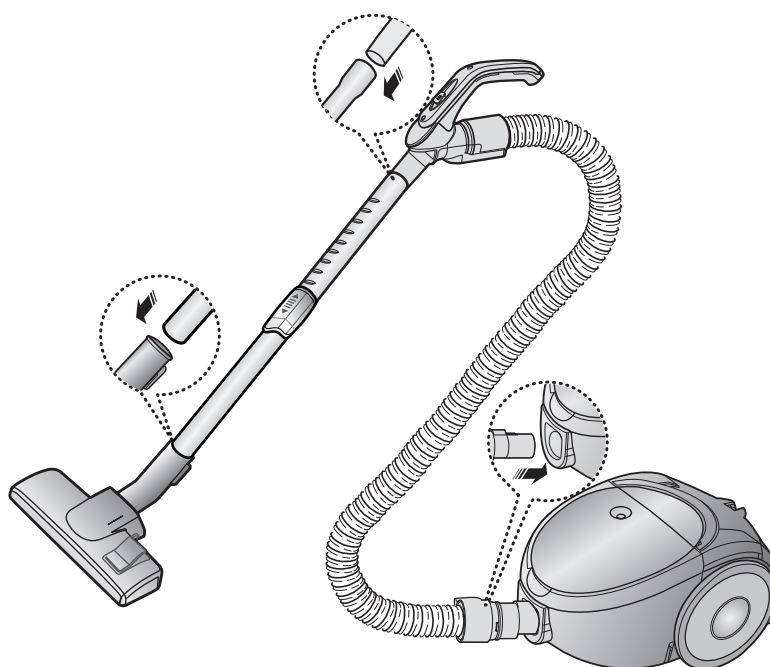


3-2. Operating The Cleaner

3-2-1. POWER CORD

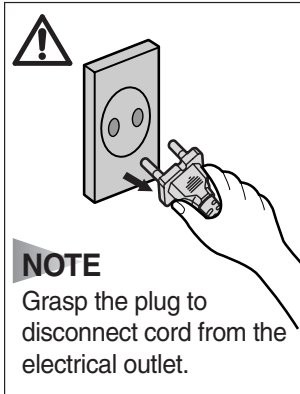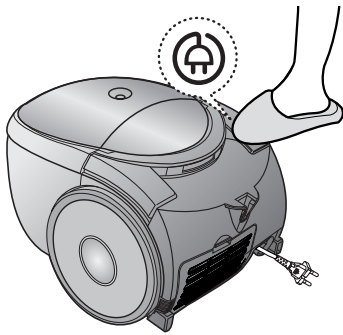


3-2-2. ON/OFF SWITCH (BODY CONTROL TYPE ONLY)

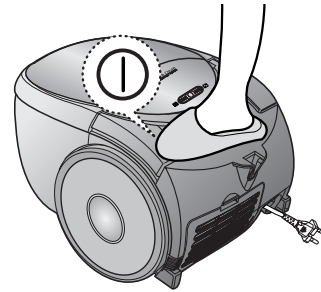

3-2-3. POWER CONTROL

1) HANDLE CONTROL TYPE


- **SLIDE TO THE STOP POSITION**
Vacuum cleaner switches off(stand by mode)
- **SLIDE FORWARD TO MAX**
Suction capacity increase smoothly up to maximum.

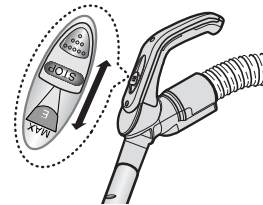

HANDLE CONTROL TYPE ONLY

2) BODY CONTROL TYPE


- MIN** = For delicate surface e.g. net curtains.
MAX = For hard floors and heavily soiled carpets.

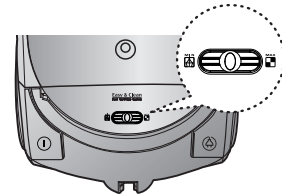

BODY CONTROL TYPE ONLY


3-2-4. AIR CONTROL

To reduce suction for cleaning draperies, small rugs, and other light fabrics, pull the tap air until the hole is open.

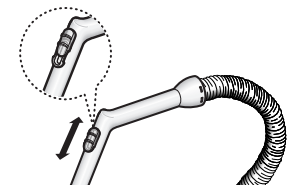


BODY CONTROL TYPE ONLY

3-2-5. Parking Position

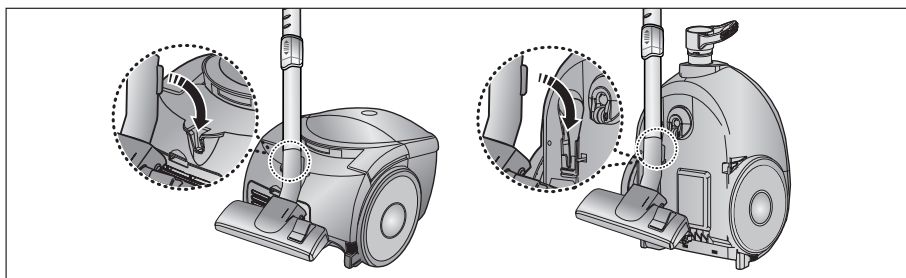

Parking floor nozzle for easier storage.

3-2-6. USING FLOOR TOOLS

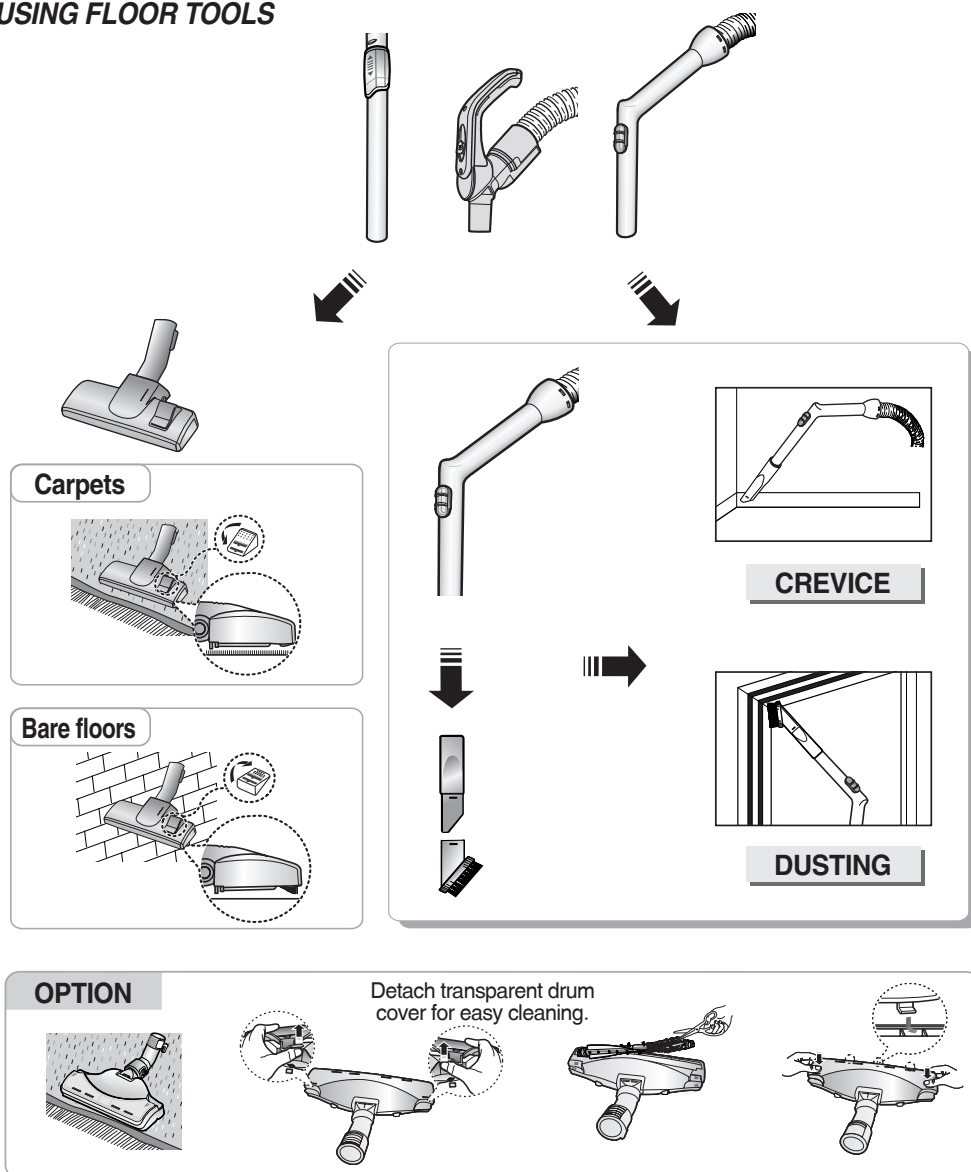


3-3. Dust Full Indicator




If the "Filter Check" indicator turns to red color while you are cleaning, the dust bag requires replacement

NOTE : If the "Filter Check" indicator continues to display red color even after having changed bag into new one, turn the cleaner off and check if there is any clogging in the hose, tube, floor nozzle, or on the inlet/outlet filter.

3-4. Changing The Dust Bag

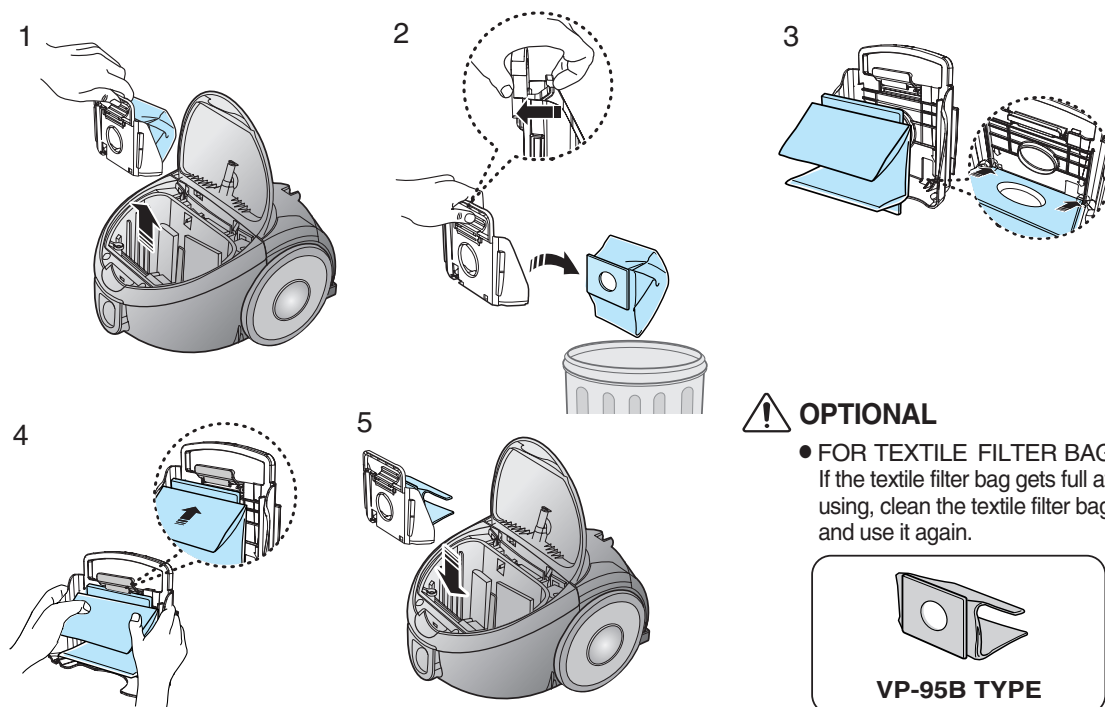

3-5. Cleaning The Inlet Filter

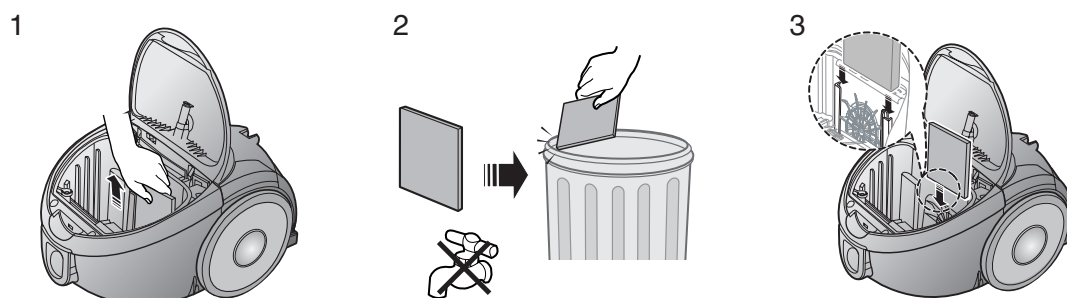

NOTE : Regularly check if the filter gets clogged and if so, remove the dust particles from the filter as filter clogging may cause the damage on the motor or suction decrease.

3-6. Outlet Filter

