



Ceiling Fan Service Manual

MODEL: FC-56A1



CONTENTS

SAFETY INSTRUCTION	4
SPECIFICATION	5
ASSEMBLY INSTRUCTION	6
OPERATING INSTRUCTION	7
NAME OF PARTS.....	8
CIRCUIT DIAGRAM	9

SAFETY INSTRUCTION

Always make sure that the power supply used matches the voltage and frequency of the fan.
Plug in only to a 220V-240V. 50Hz outlet.

Unplug the fan unit when not in use, when the unit is not yet assembled and when moving the fan to another place.

DO NOT insert finger, pencils, or any other object into the grill while the fan is running.

The blades are especially dangerous. Take extra care with children.

Do not spray chemicals such as insect repellent into the fan, as it causes damaged.

Do not place fan near obstacles or unstable grounds.

The fan should be used in a well-ventilated dry place.

DO NOT use fan under the following circumstances.

- High temperature /High humidity area (e.g. Bathroom)
- Near fire source or wet areas
- Near chemicals, oil, dust, (e.g. Factories)

DO NOT allow water or any other liquid into the unit especially the motor housing. (An electric shock or malfunction may result)

Should the supply cord, plugs become damaged, or if the set is found to be replaced or repaired by a qualified service technician.

SPECIFICATION

RATED VOLTAGE	220V ~ 240V
RATED FREQUENCY	50Hz
INPUT POWER	≤ 85W

The data are subject to change without prior notice.

ASSEMBLY INSTRUCTION

1. Put both the upper and lower canopy covers into the suspension pipe.
2. Lead in the electric wires through the pipe and connect to the terminal block according to Fig 2.
3. Insert the pipe into the motor shaft and secure it in place using the bolt, washer, spring washer and nut .Insert the cotter pin and bend it.
4. Wiring
Connection the power cord to the terminal block, then connect the ear thing wire to the ear thing screw.(See Fig.1 and Fig.2).
5. Secure the wire on the pipe by screw with washer.
6. Cover the capacitor with the lower canopy and cover the hanging hook with the upper canopy then tighten the setscrew.
7. Installation of the blades. Mount the blades onto the fan motor and fix them up by screws. The concave surface of the blades must be downward. Set in the fiber washer between the blades and the fan motor, and tighten on the screws, then install the blades one by one.
8. The wiring of the speed regulator .Screw out the screw which are used to connect the regulator's cover' and bottom frame. Take off the cover, connect the regulator on to the circuit of the fan (See Fig.2).

Note: An all-pole disconnection with a separation of 3mm in each pole shall be incorporated in the fixed-wiring.

OPERATING INSTRUCTION

Remote regulator for ceiling fan is supplied for installation, it is turned clockwise from the mark "1" to "FULL" indicating the speed from slow to fast, while turned counter clockwise from "FULL" to "1" indicating from fast to slow.

NAME OF PARTS

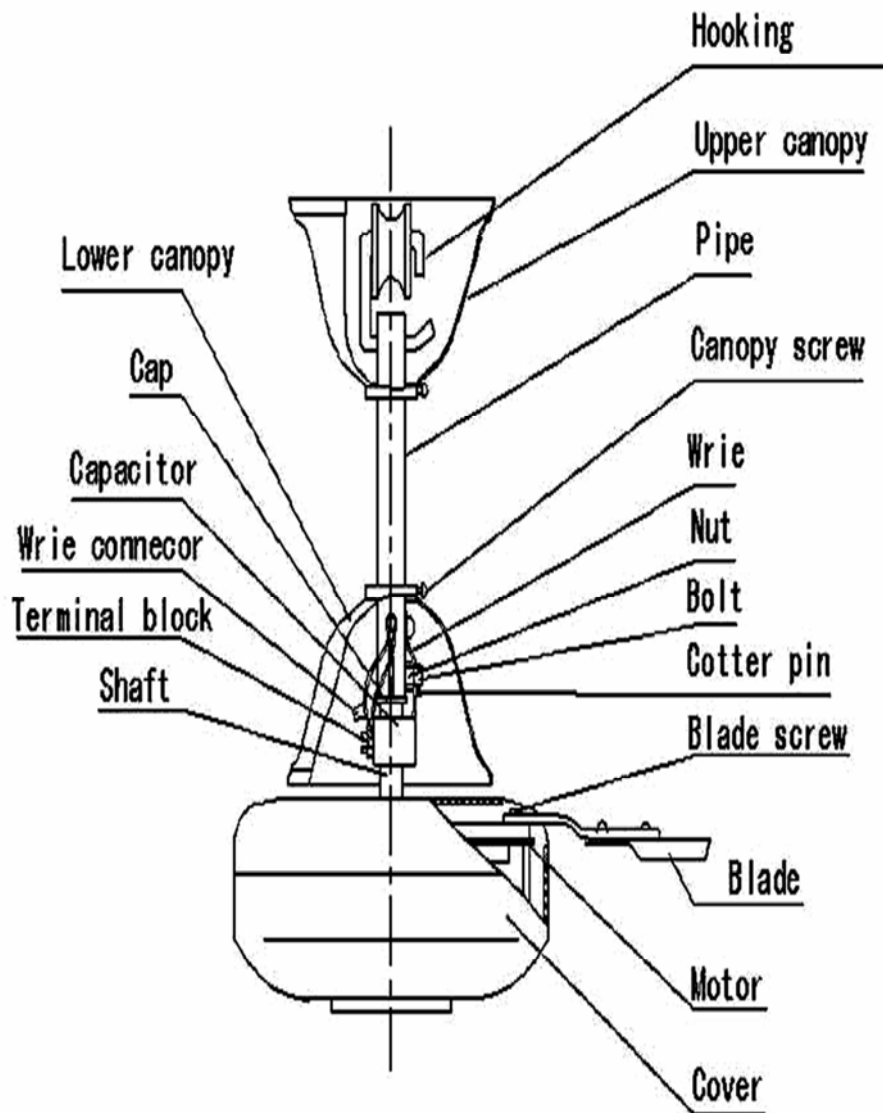


Fig.1

CIRCUIT DIAGRAM

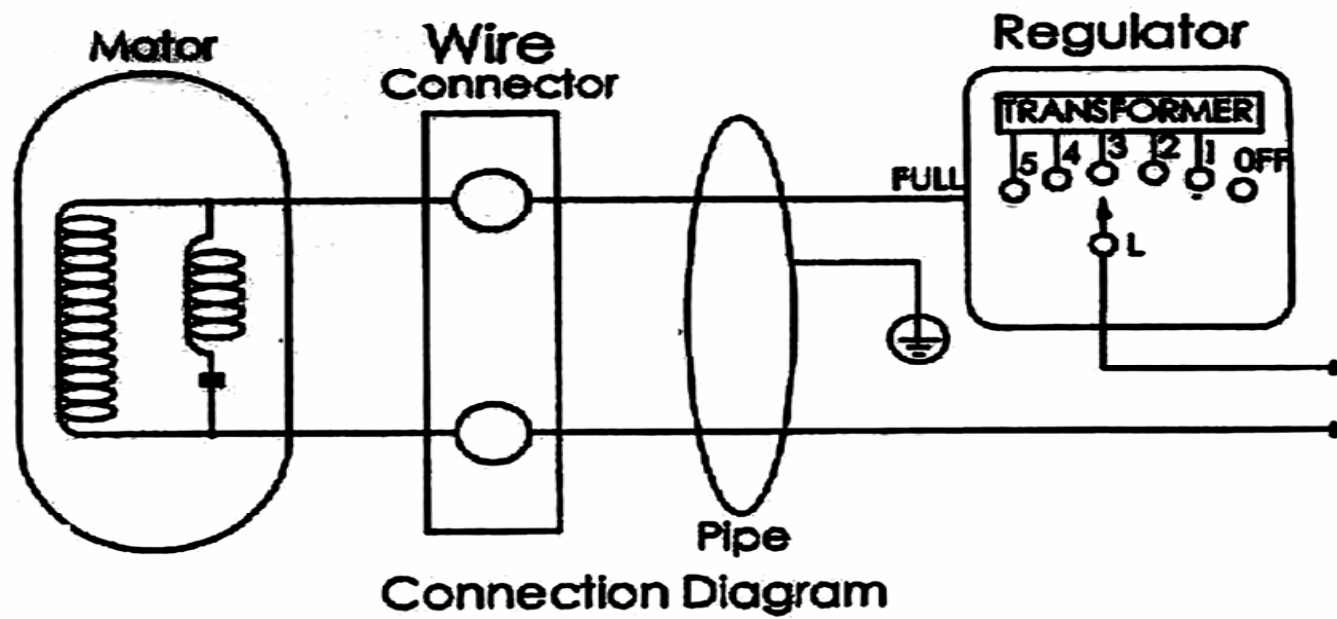


Fig.2

