 


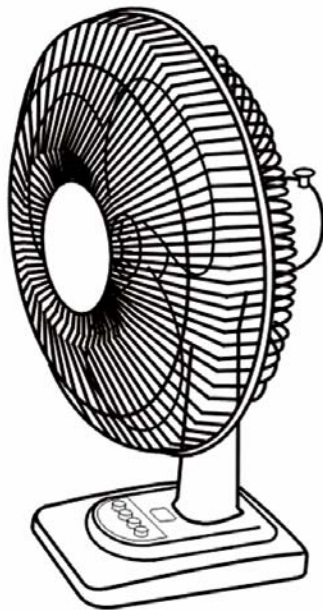

Desk Fan

Service Manual

MODEL: FD-16A4T



CONTENTS

SAFETY INSTRUCTION	4
SPECIFICATION	5
ASSEMBLY INSTRUCTION	6
OPERATING INSTRUCTION	7
NAME OF PARTS.....	8
CIRCUIT DIAGRAM	9
CARE & MAINTENANCE	10

SAFETY INSTRUCTION

Always make sure that the power supply used matches the voltage and frequency of the fan.
Plug in only to a 220V-240V. 50Hz outlet.

Unplug the fan unit when not in use, when the unit is not yet assembled and when moving the fan to another place.

DO NOT insert finger, pencils, or any other object into the grill while the fan is running.

The blades are especially dangerous. Take extra care with children.

Do not spray chemicals such as insect repellent into the fan, as it causes damaged.

Do not place fan near obstacles or unstable grounds.

The fan should be used in a well-ventilated dry place.

DO NOT use fan under the following circumstances.

- High temperature /High humidity area (e.g. Bathroom)
- Near fire source or wet areas
- Near chemicals, oil, dust, (e.g. Factories)

DO NOT allow water or any other liquid into the unit especially the motor housing. (An electric shock or malfunction may result)

Should the supply cord, plugs become damaged, or if the set is found to be replaced or repaired by a qualified service technician.



SPECIFICATION

SPECIFICATION	400mm
RATED VOLTAGE	220V ~ 240V
RATED FREQUENCY	50Hz
INPUT POWER	≤ 40W

The data are subject to change without prior notice.

ASSEMBLY INSTRUCTION

  
1. To fix the base by screwdriver as illustrated in picture1.
2. Unscrew the spinner clockwise and the nut anti-clockwise, and then remove both of them.
3. Set the rear grilles in the proper position with handle up.
4. Screw the plastic nut to attach the grilles rig fly
5. Install the blades onto the shaft until it reaches the retaining pin.
6. Screw the spinner onto the motor shaft anti-clockwise.
7. Insert the net covering ring into front net cover. And match the back net cover. The telescope the front net cover by hand. And press the clip.

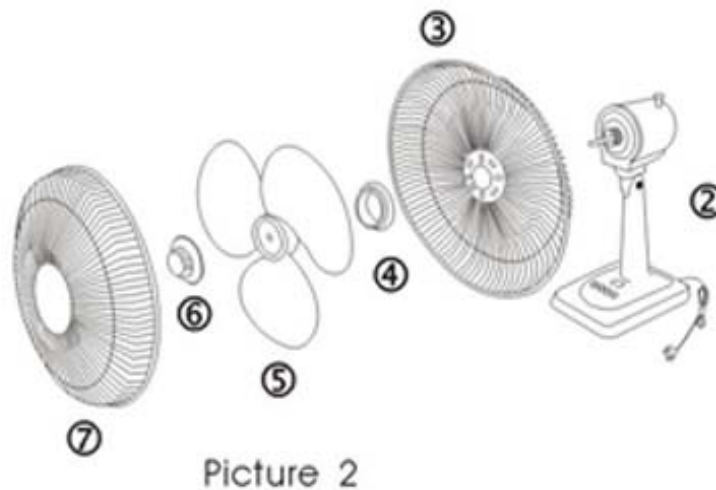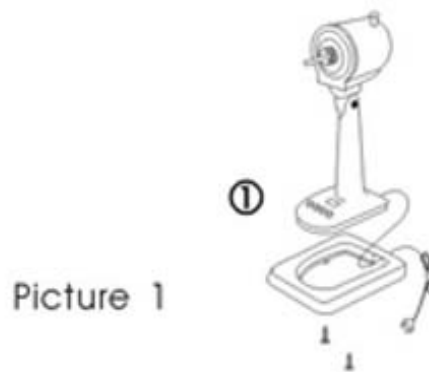

OPERATING INSTRUCTION


1. To make or stop the fan to oscillate. You can pull the clutch knob to up or down.
2. To adjust the air flow upward or downward by simply moving the grilles up or down.
3. Speed is controlled by depressing the piano key.
4. Plug the power supply cord into the wall outlet.

 NAME OF PARTS

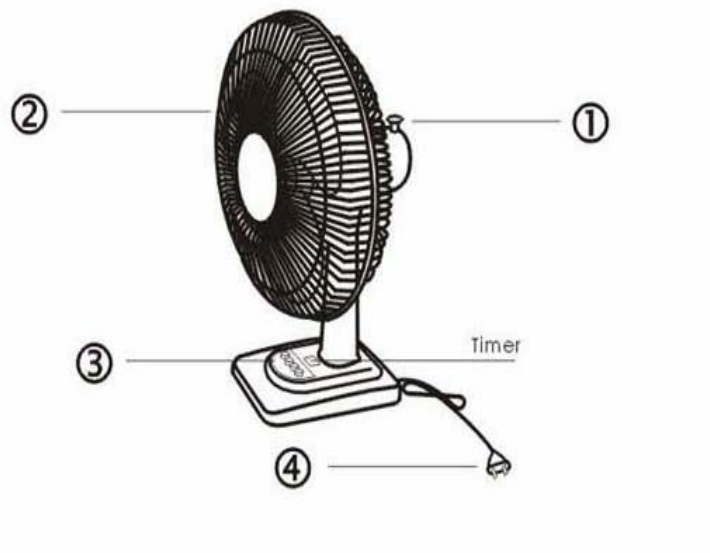

1. Clutch Knob
2. Front Guard
3. Speed Selector
4. Power Cord

 CIRCUIT DIAGRAM

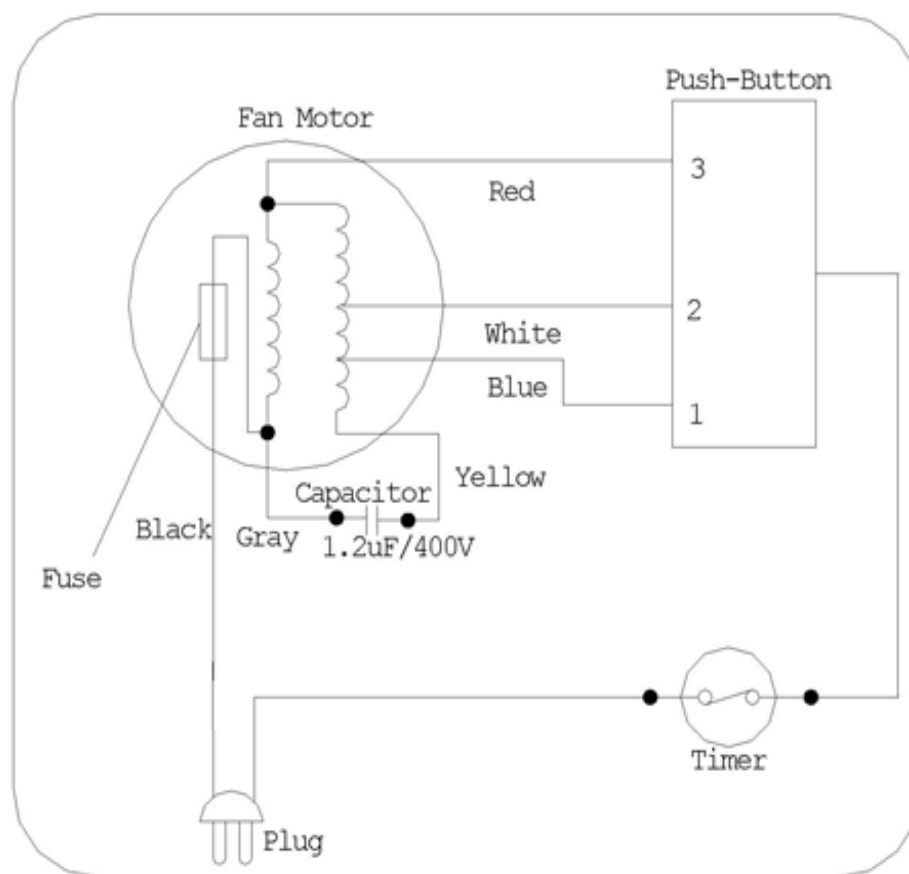

CARE & MAINTENANCE

1. Be sure to unplug the power supply before cleaning.
2. The plastic parts should be cleaned with mild soap and a damp cloth or sponge. To remove soap film with clean water thoroughly.
3. Go by the order of assembly to disassemble each parts.

