



Block Diagram

CDA-9830R

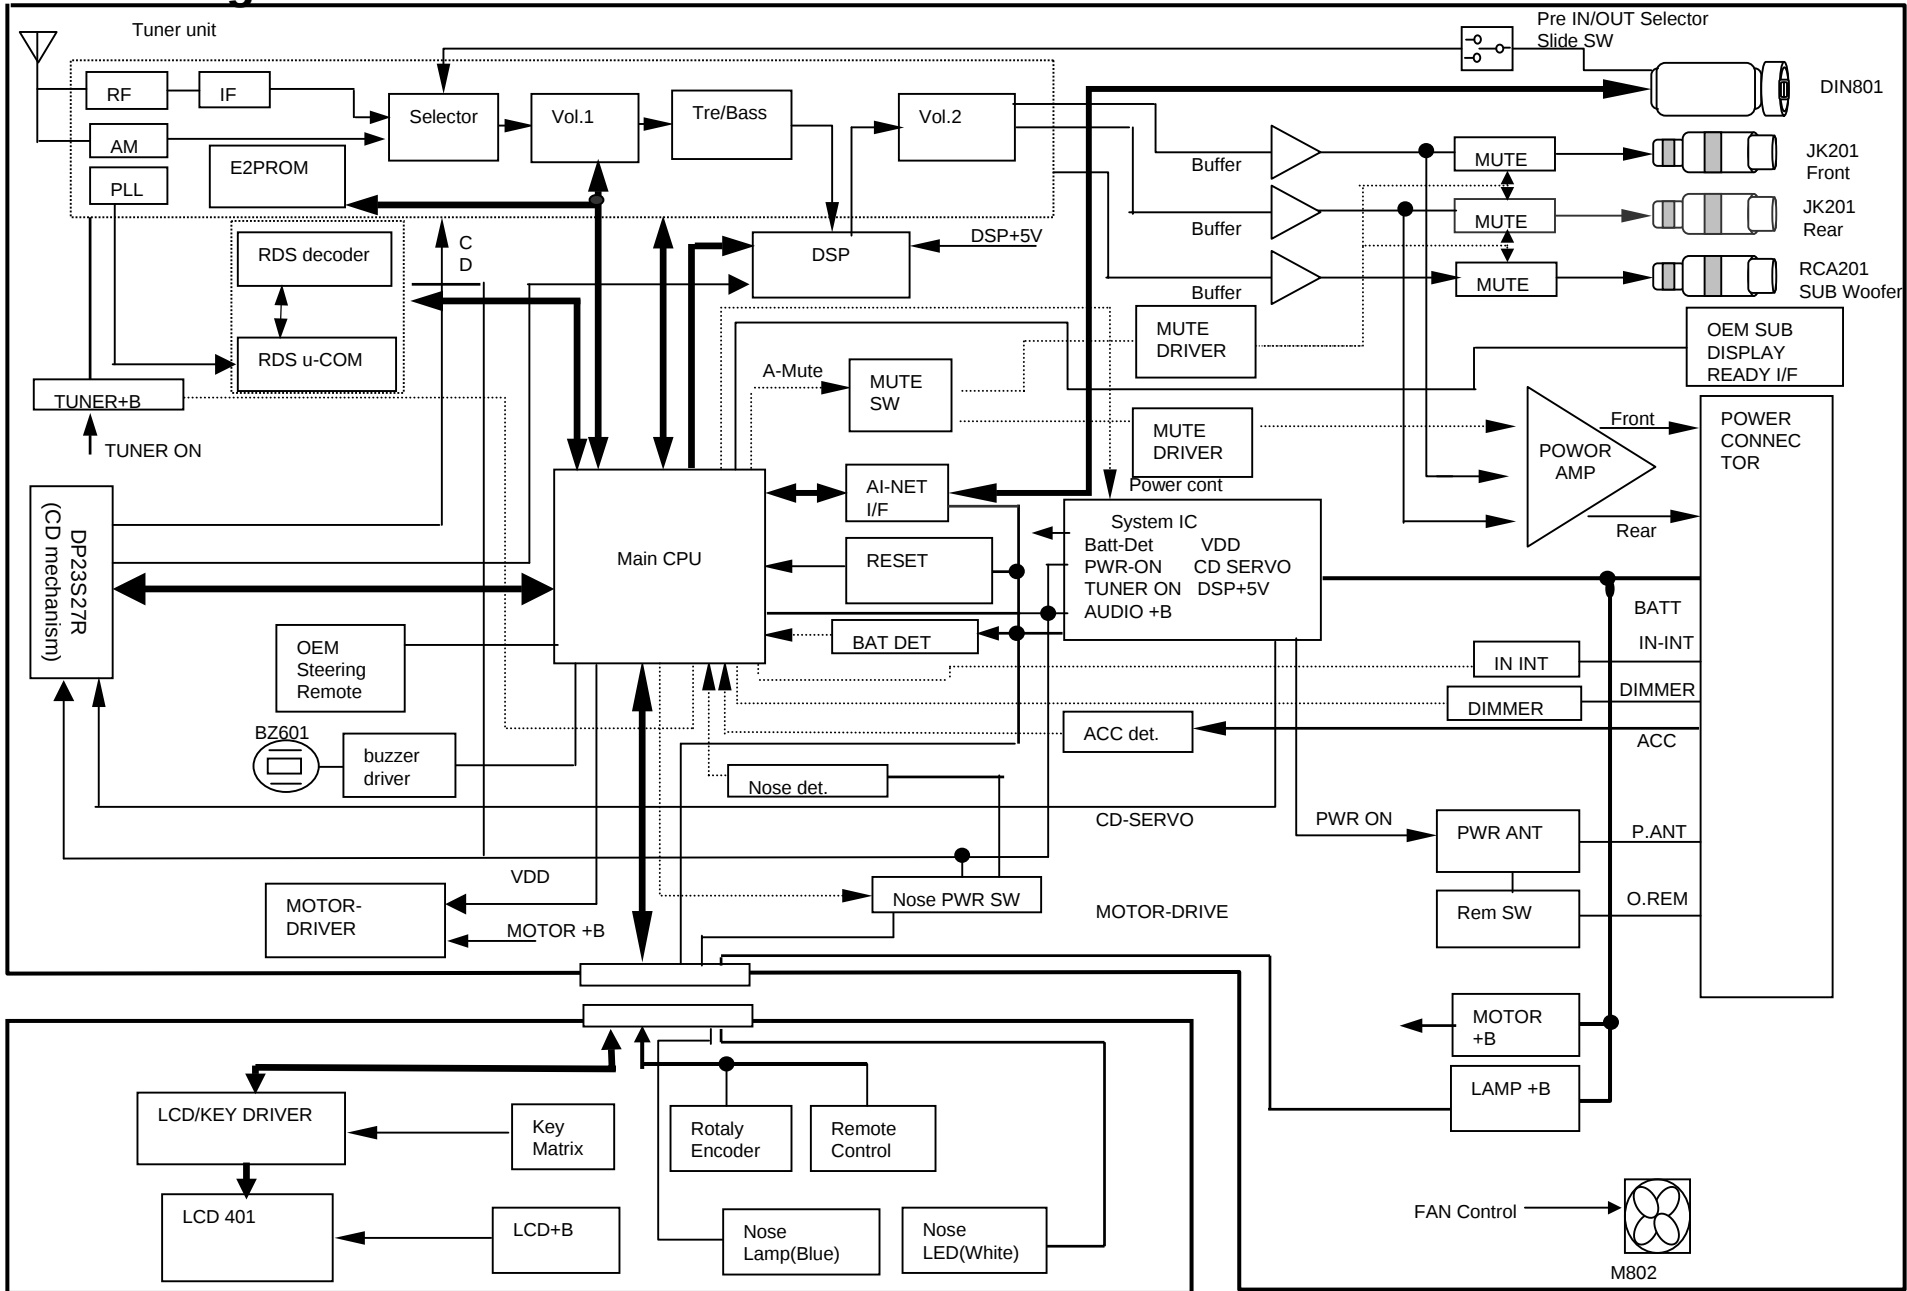


Schematic Diagram(1/9)

CDA-9830R

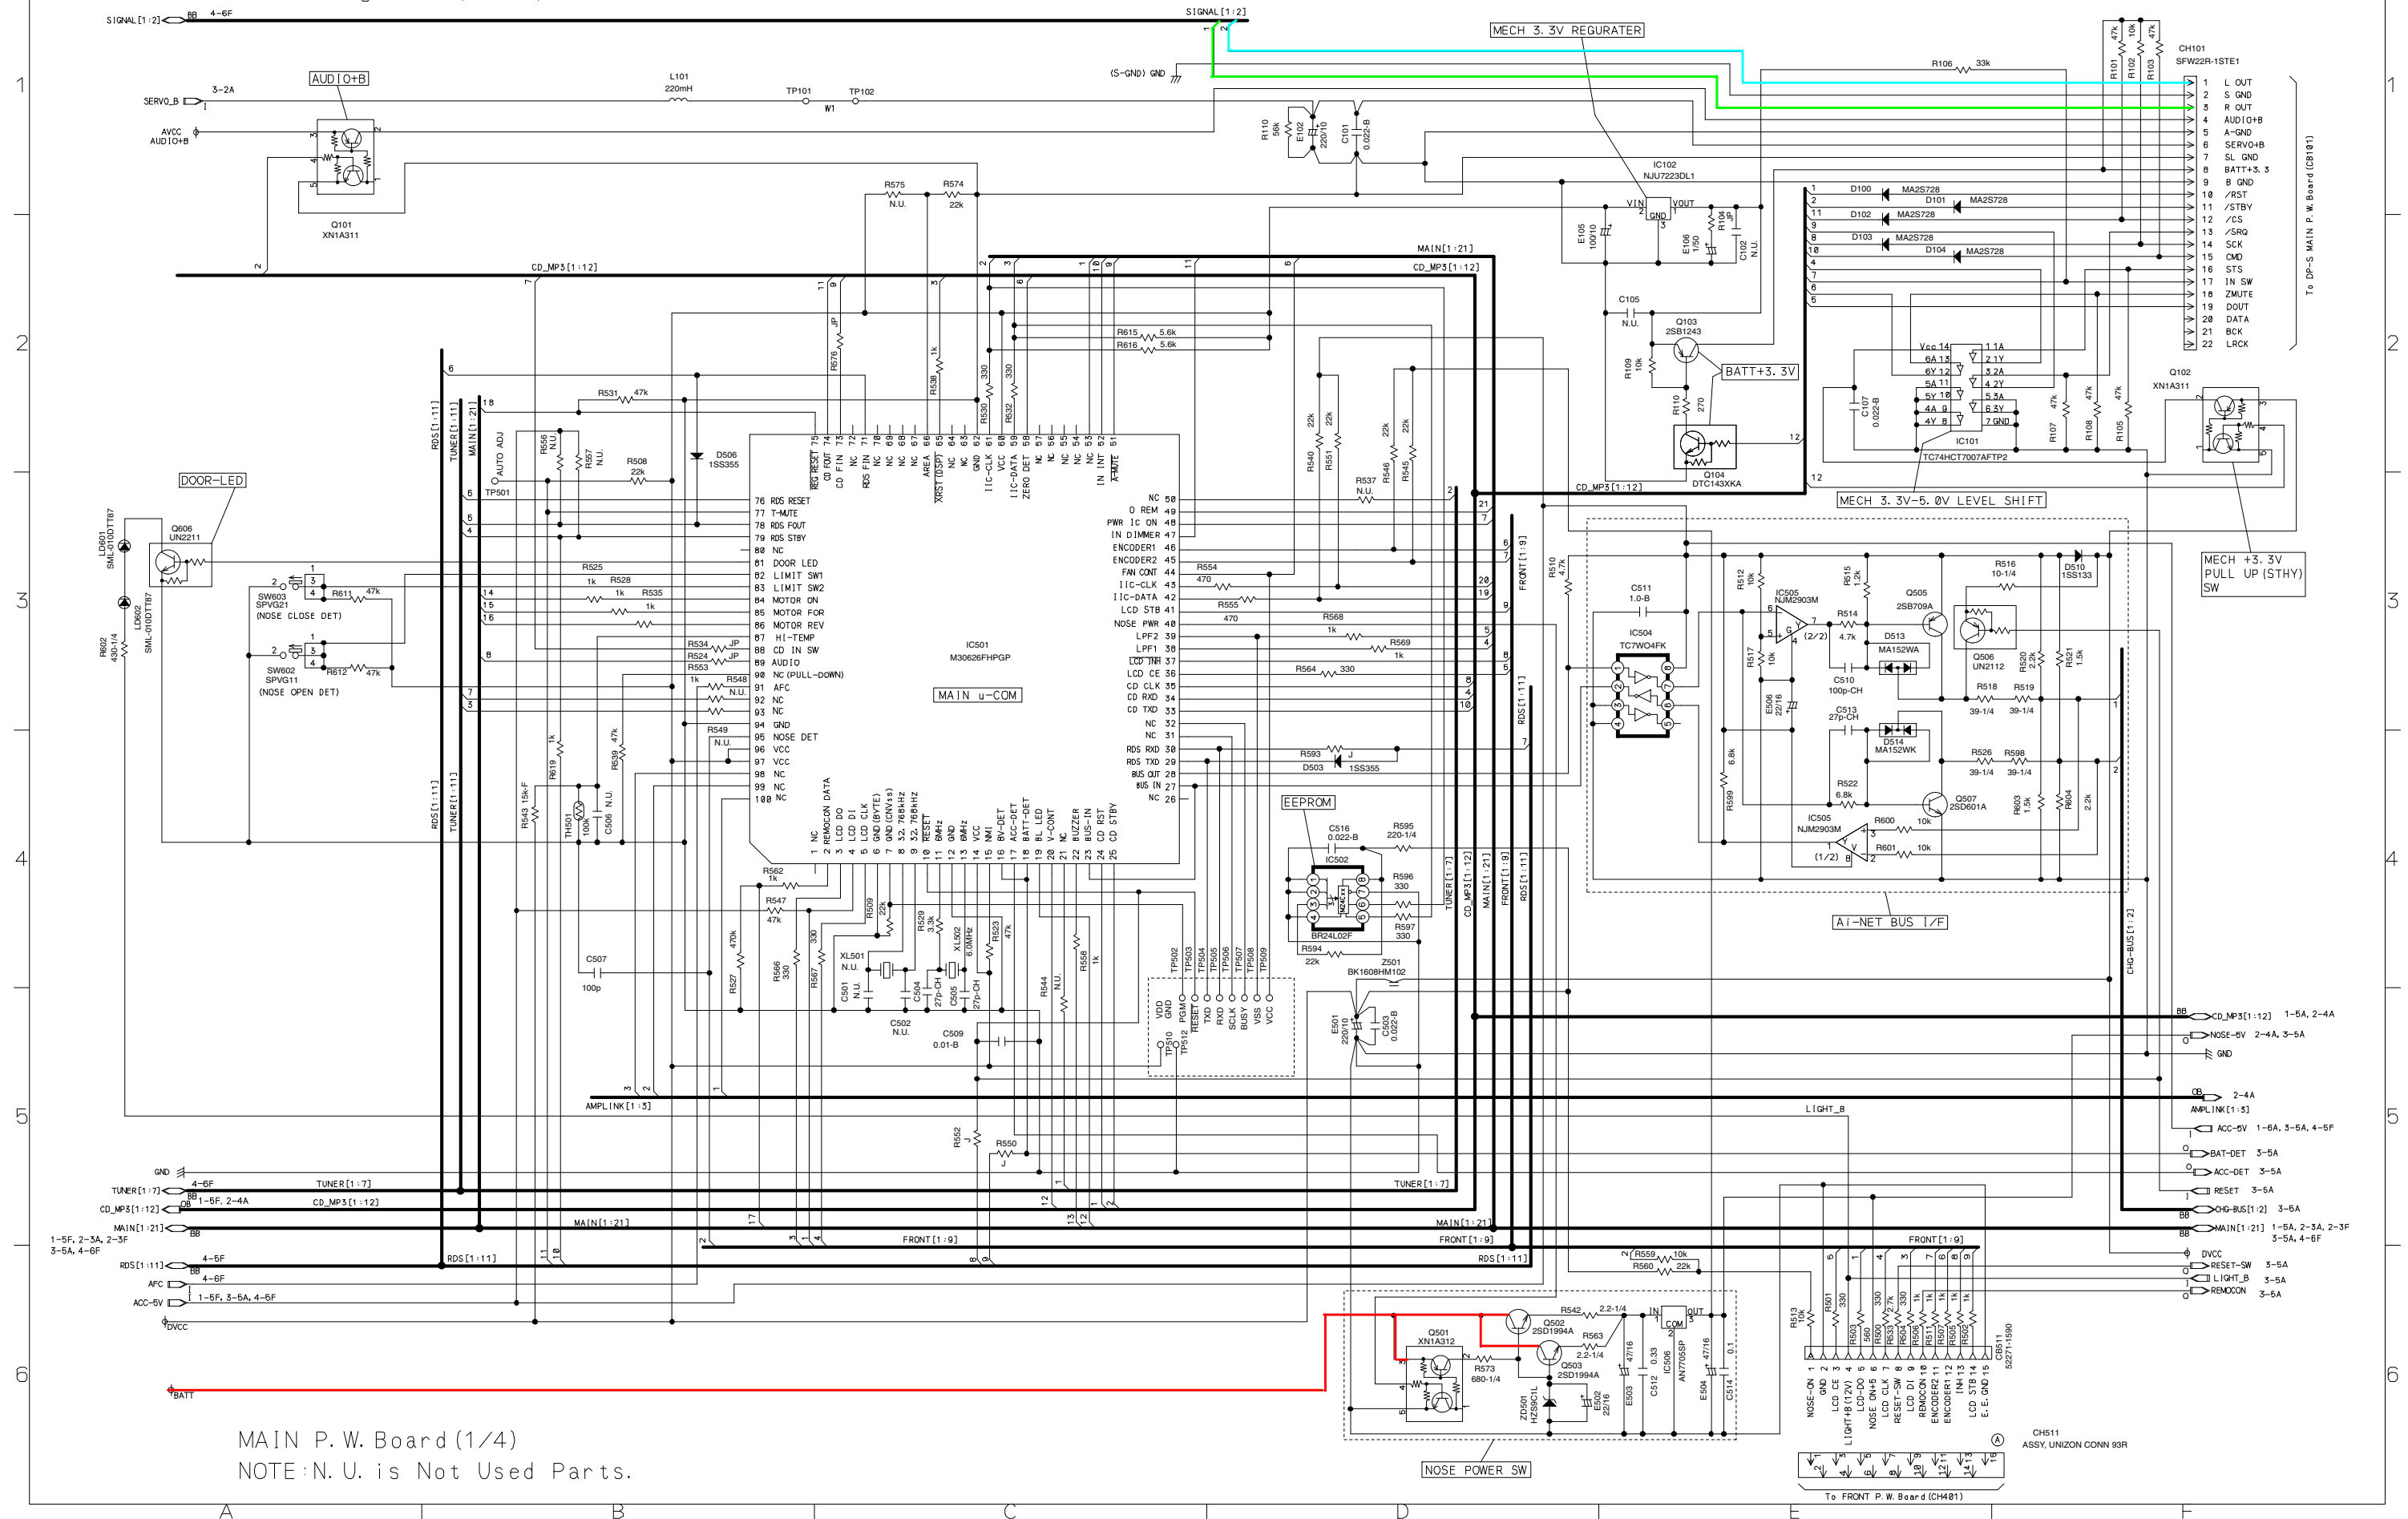

Schematic Diagram (2/9)


CDA-9830R

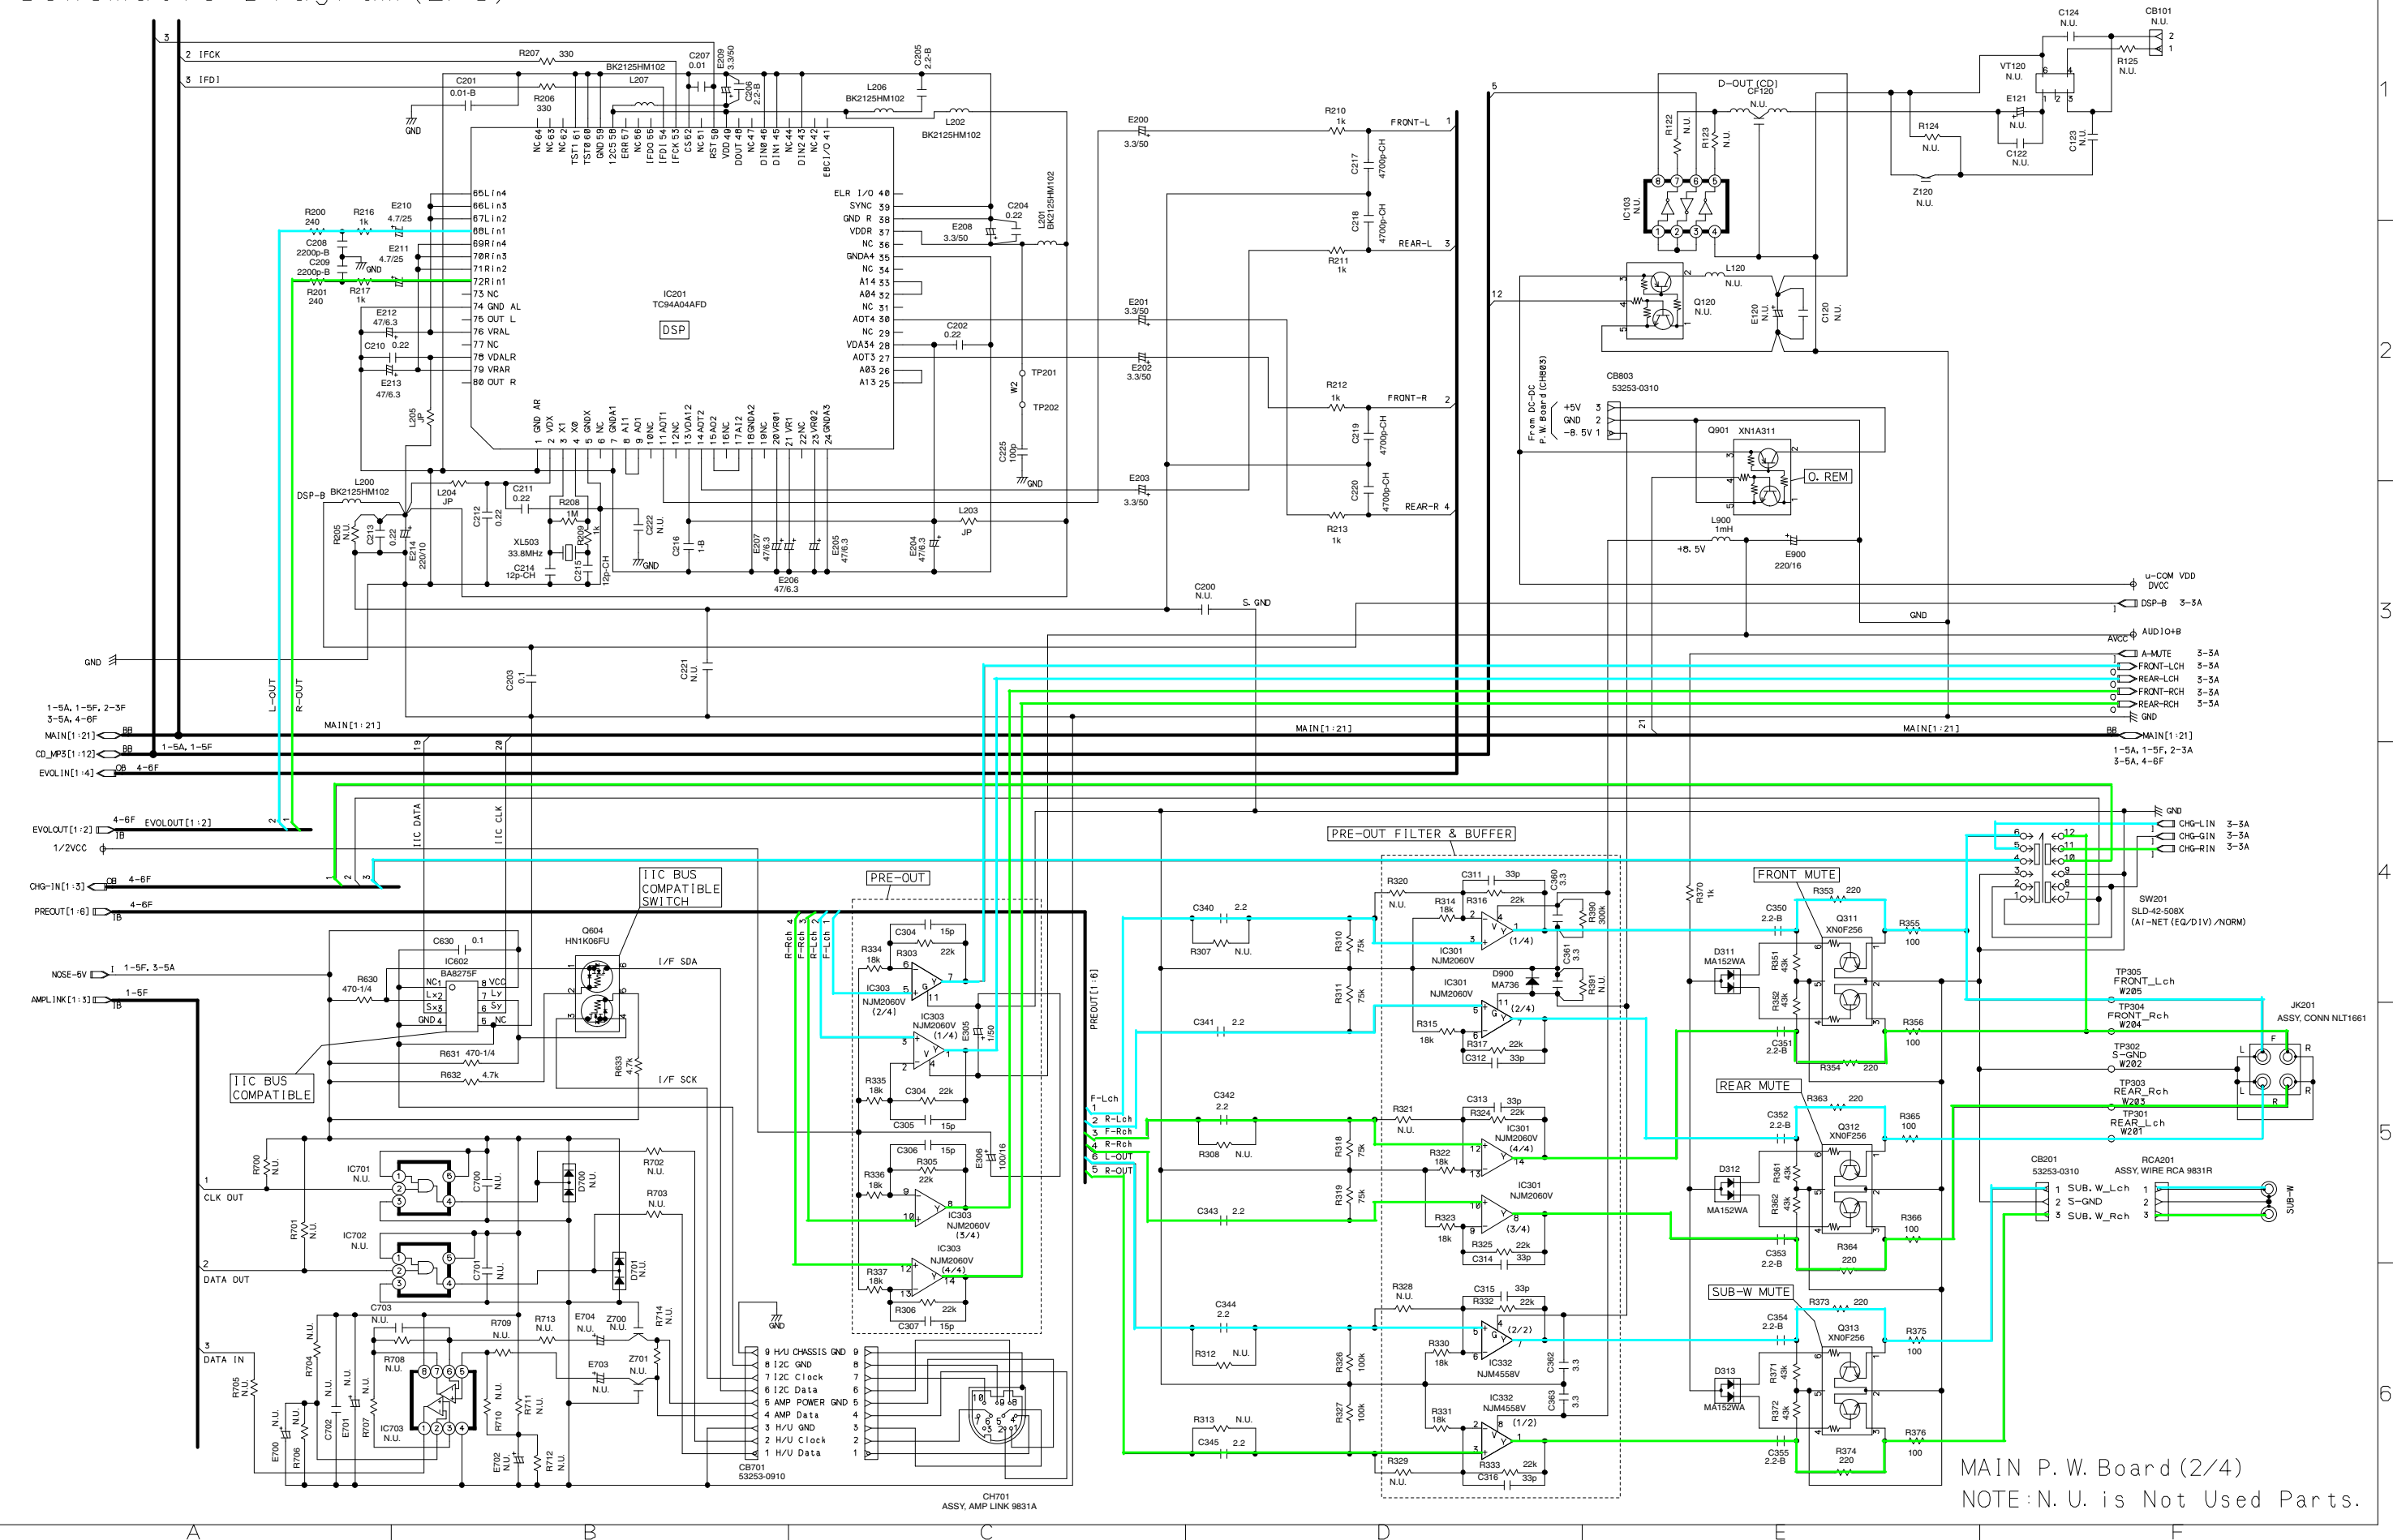

MAIN P.W. Board (2/4)
NOTE: N. U. is Not Used Parts.

Schematic Diagram (3/9)

CDA-9830R

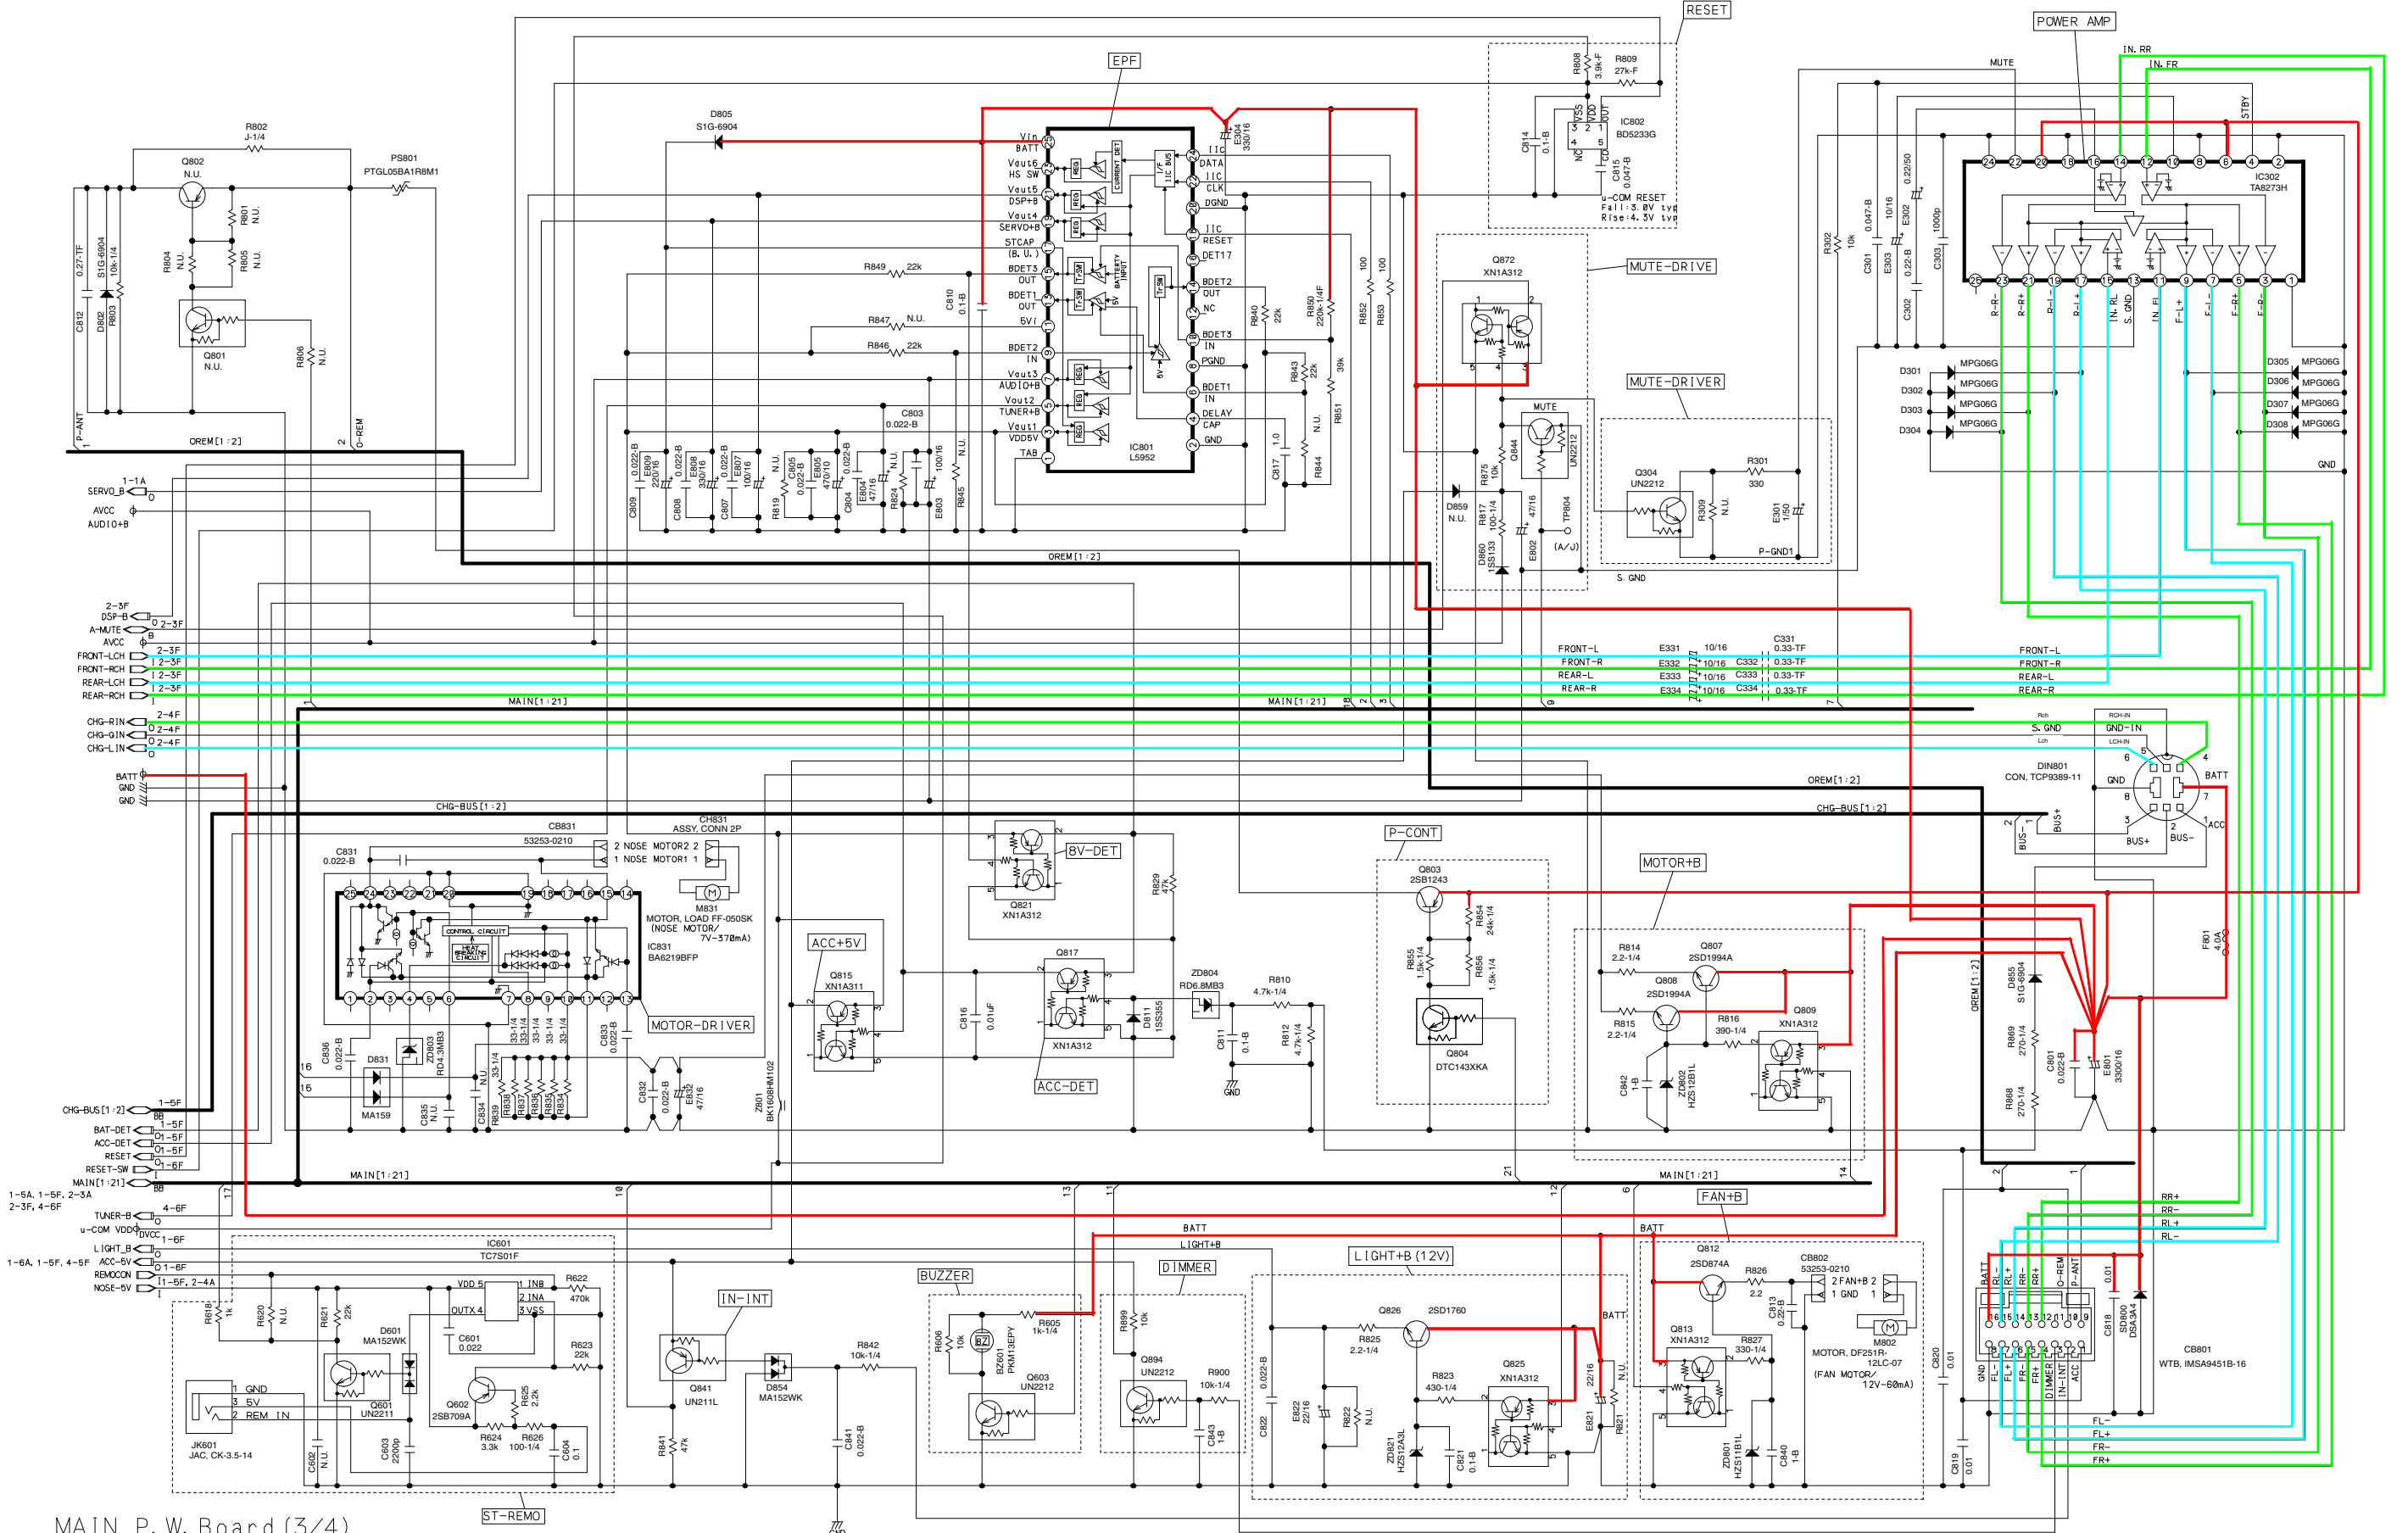


MAIN P.W. Board (3/4)


NOTE: N. U. is Not Used Parts.

Schematic Diagram (4/9)

CDA-9830R

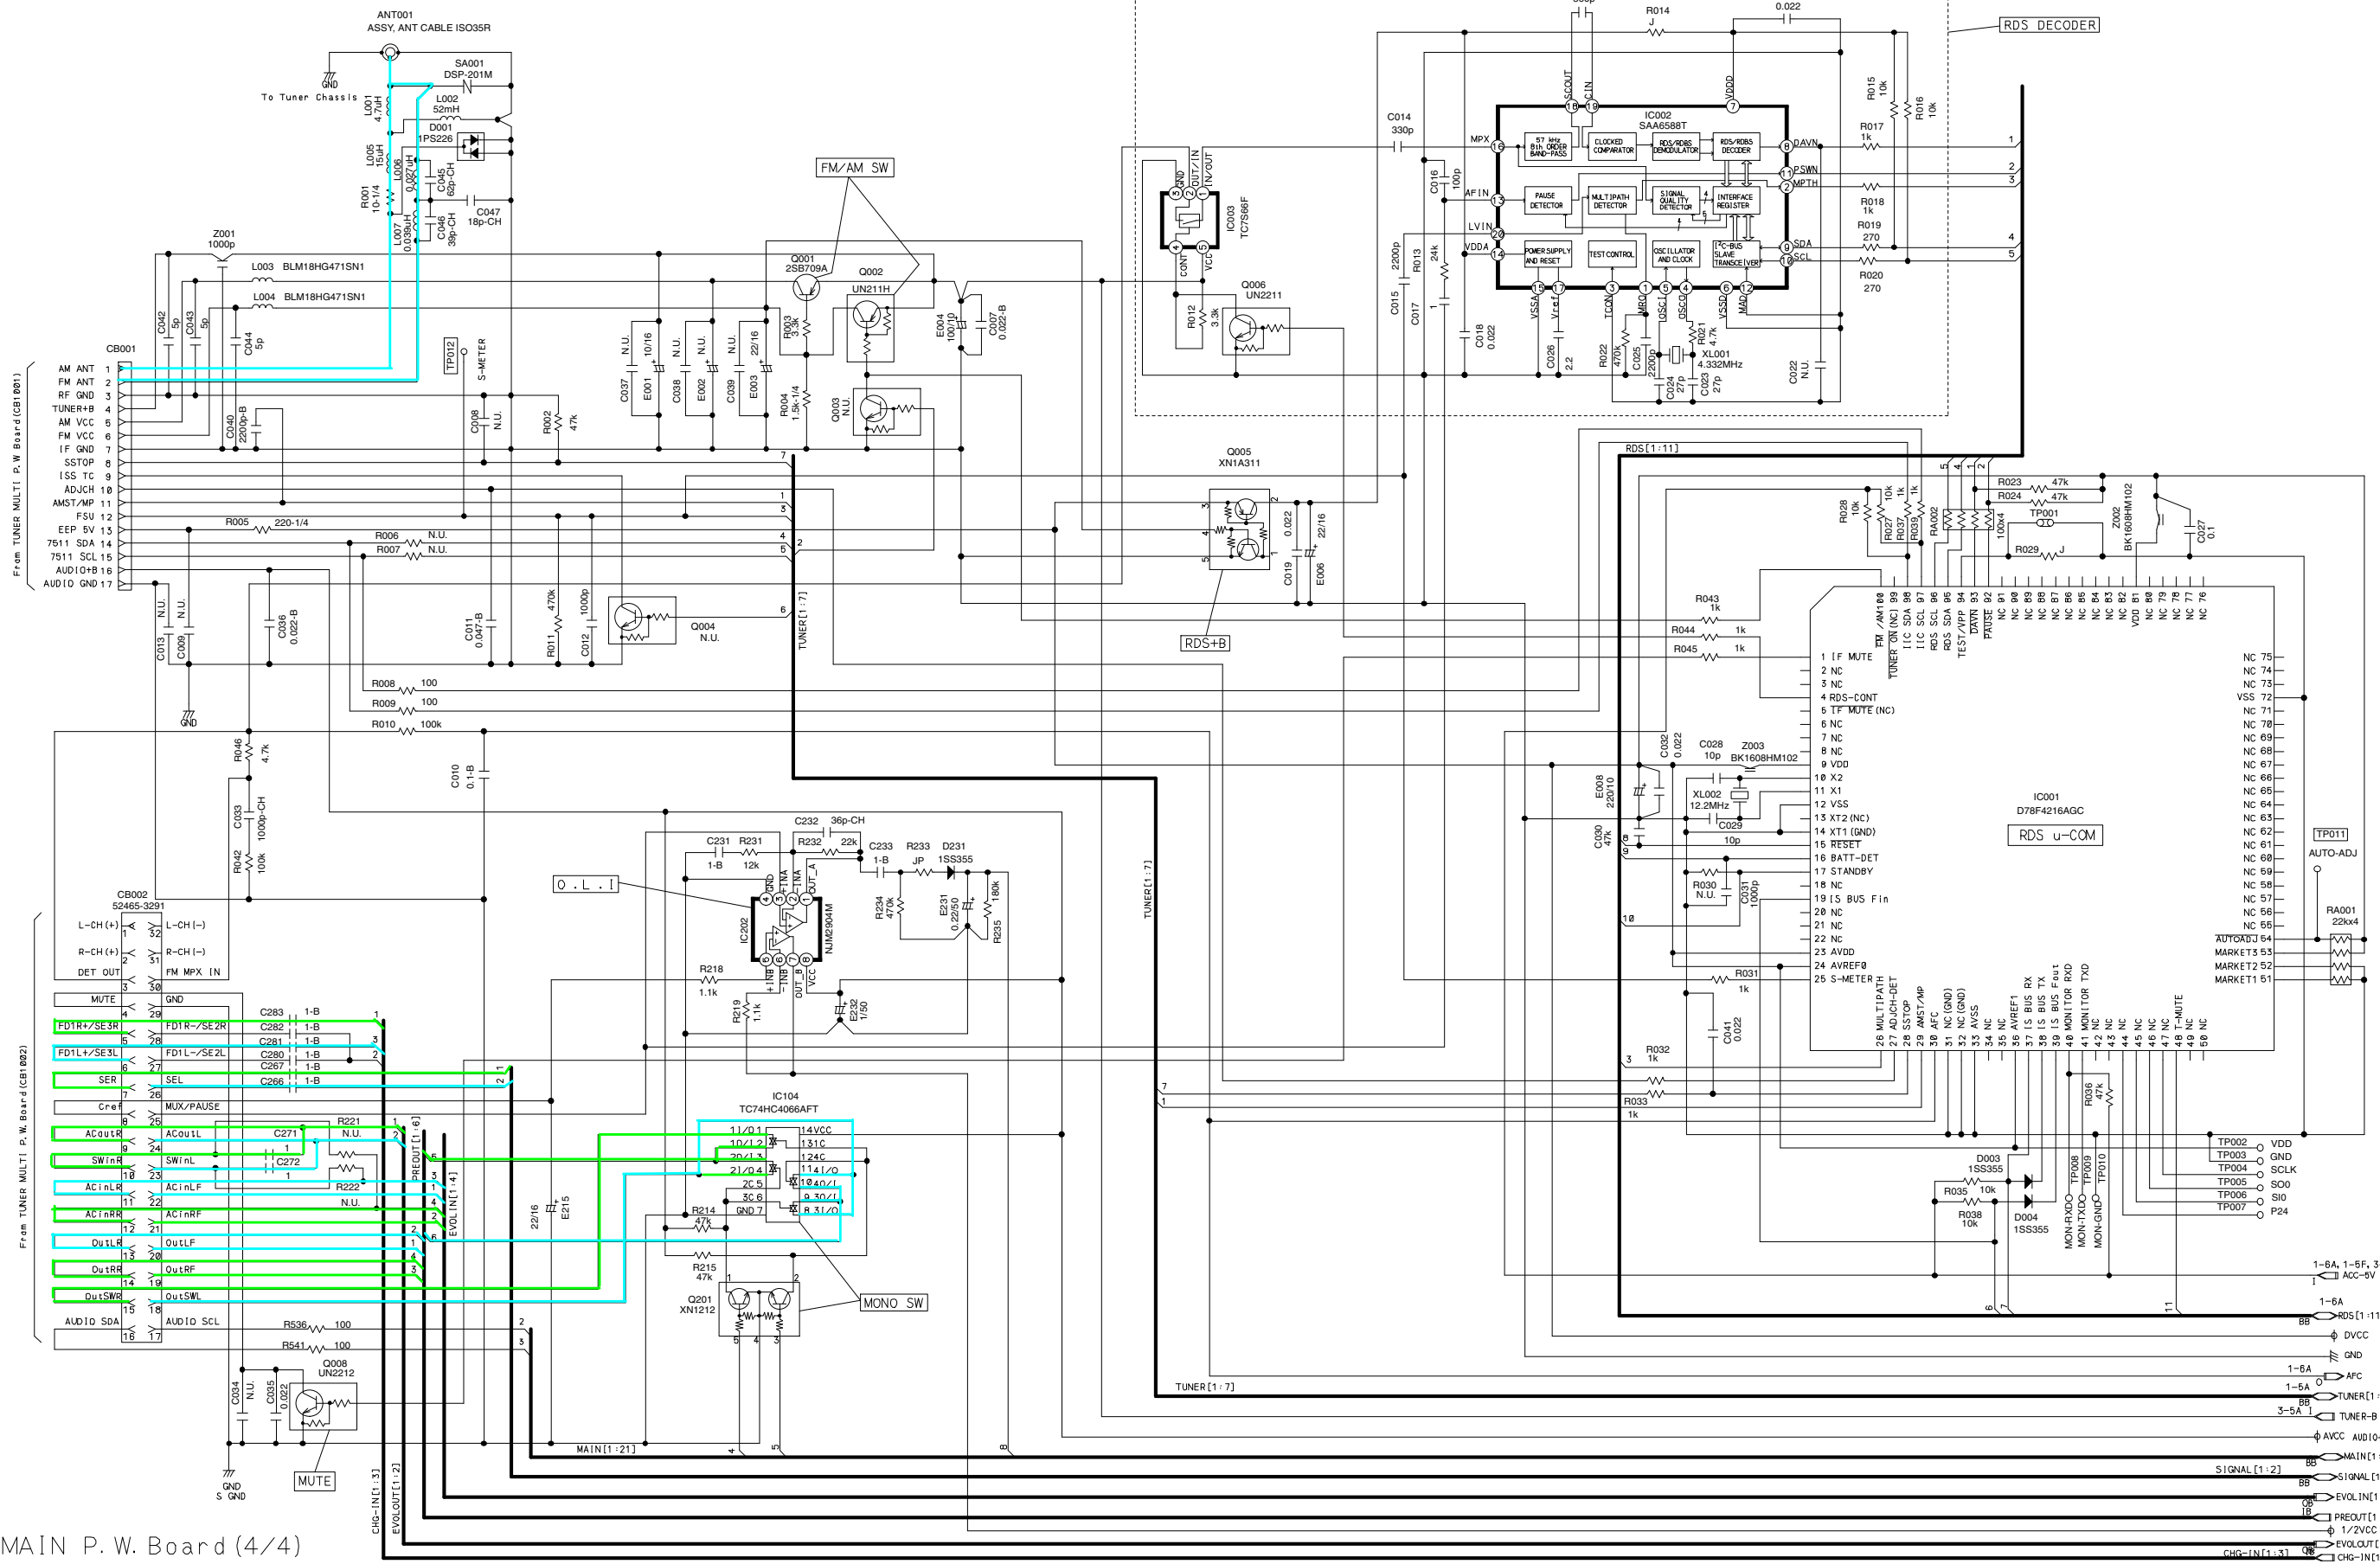


MAIN P.W. Board (4/4)
NOTE: N. U. is Not Used Parts.

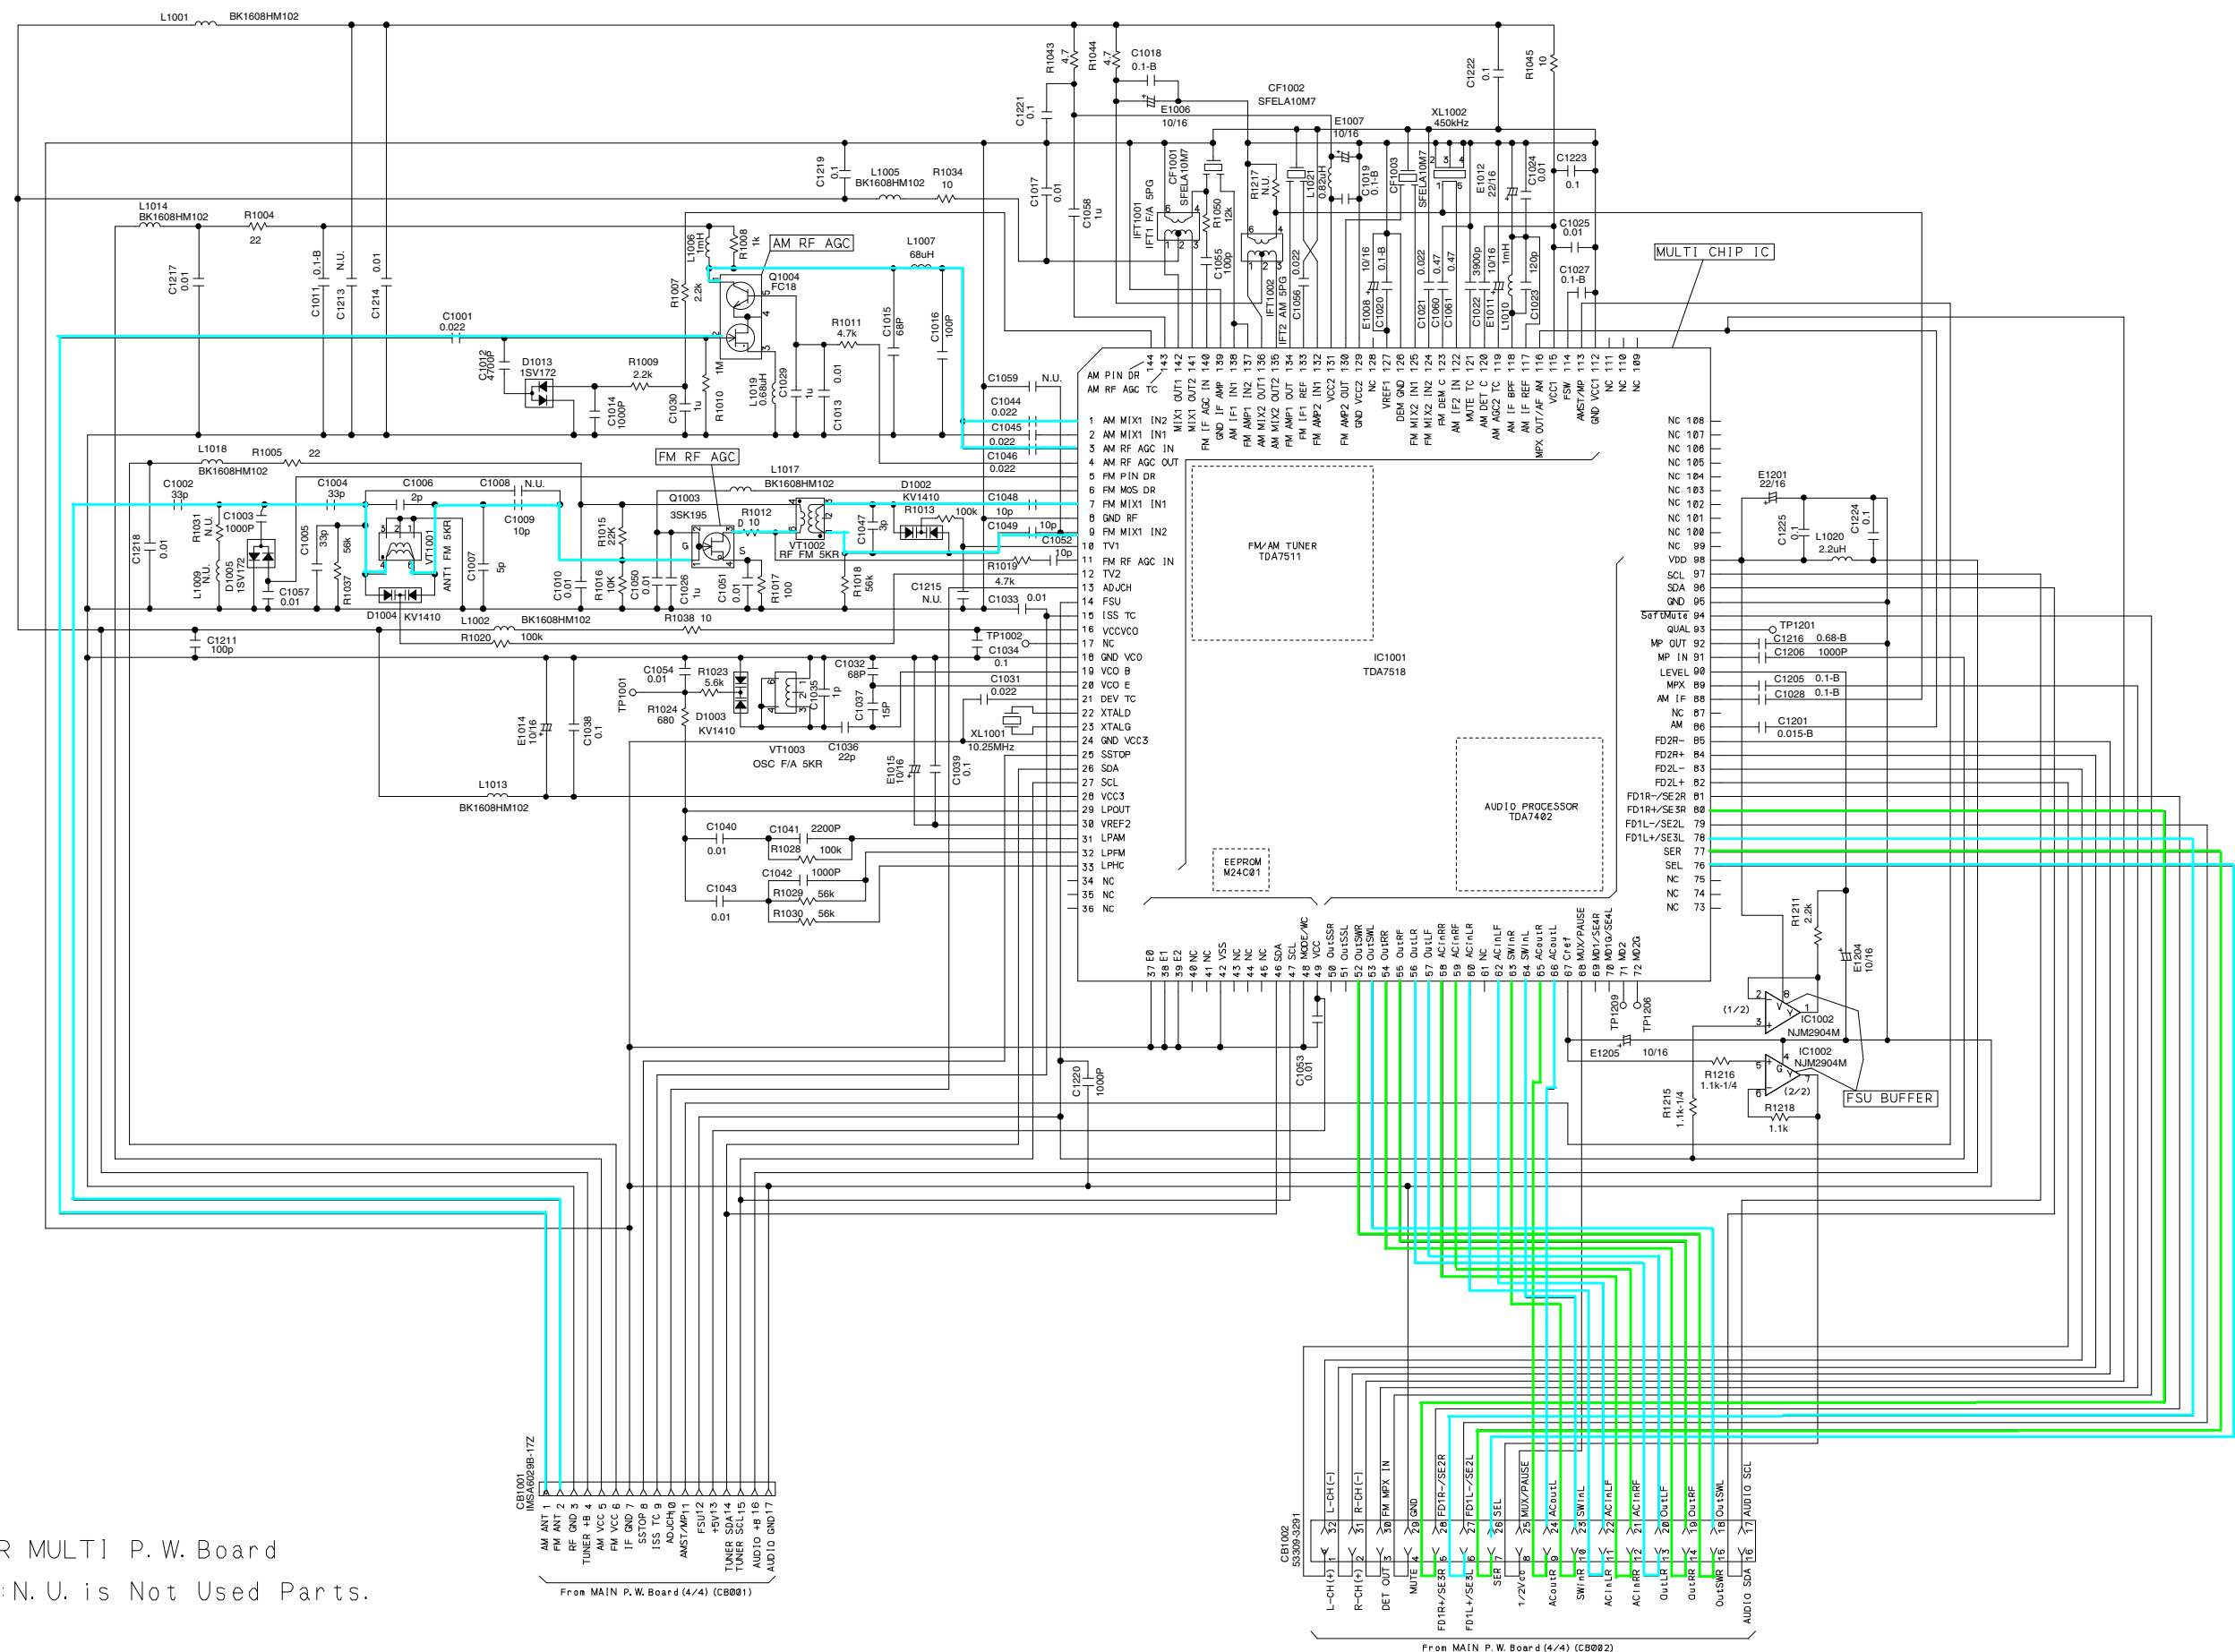

TUNER MULTI P.W. Board
NOTE: N. U. is Not Used Parts.


Schematic Diagram(6/9)

CDA-9830R

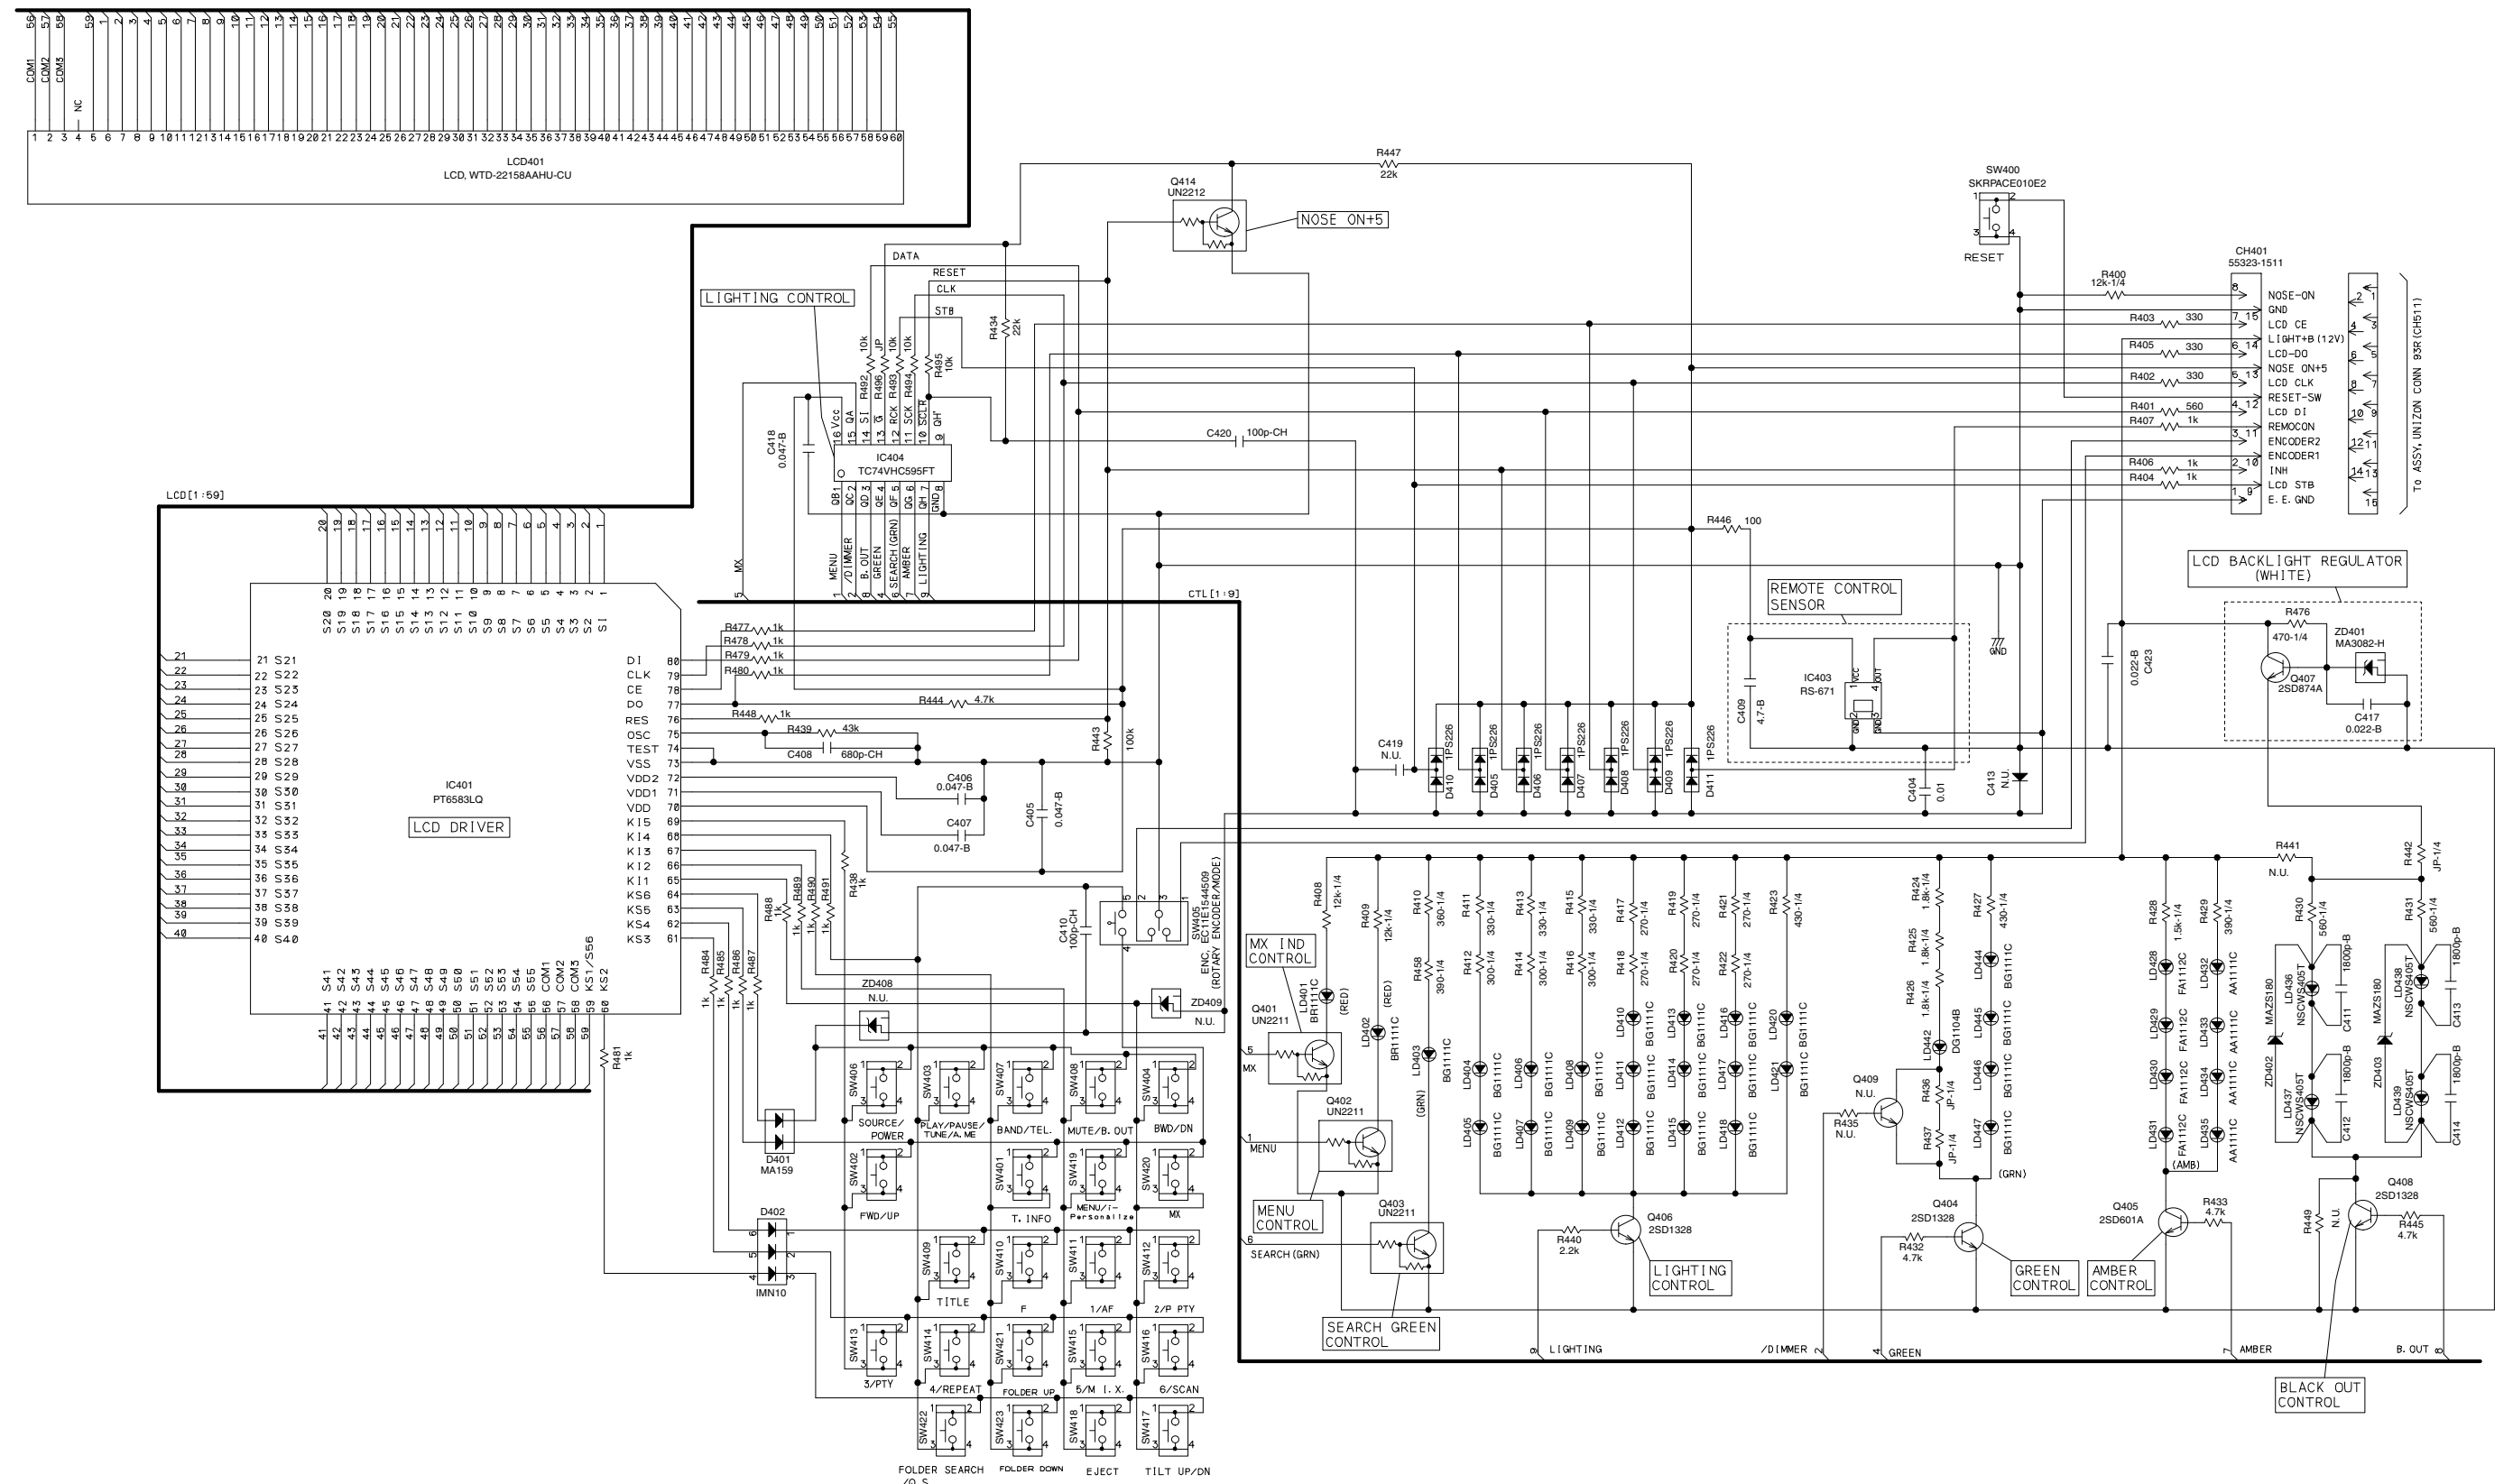


FRONT P.W. Board
NOTE:N.U. is Not Used Parts.

SW401-404, 406-423: SKRSPACE010

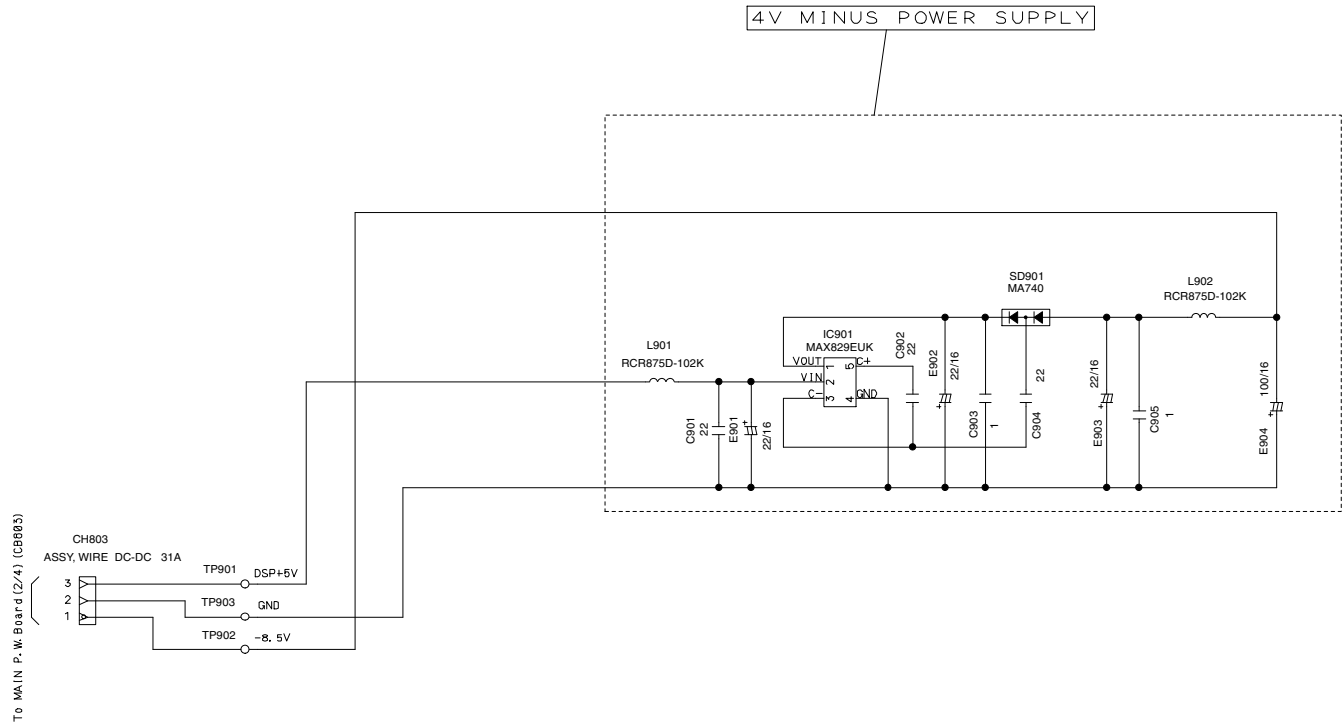

Schematic Diagram(8/9)

CDA-9830R

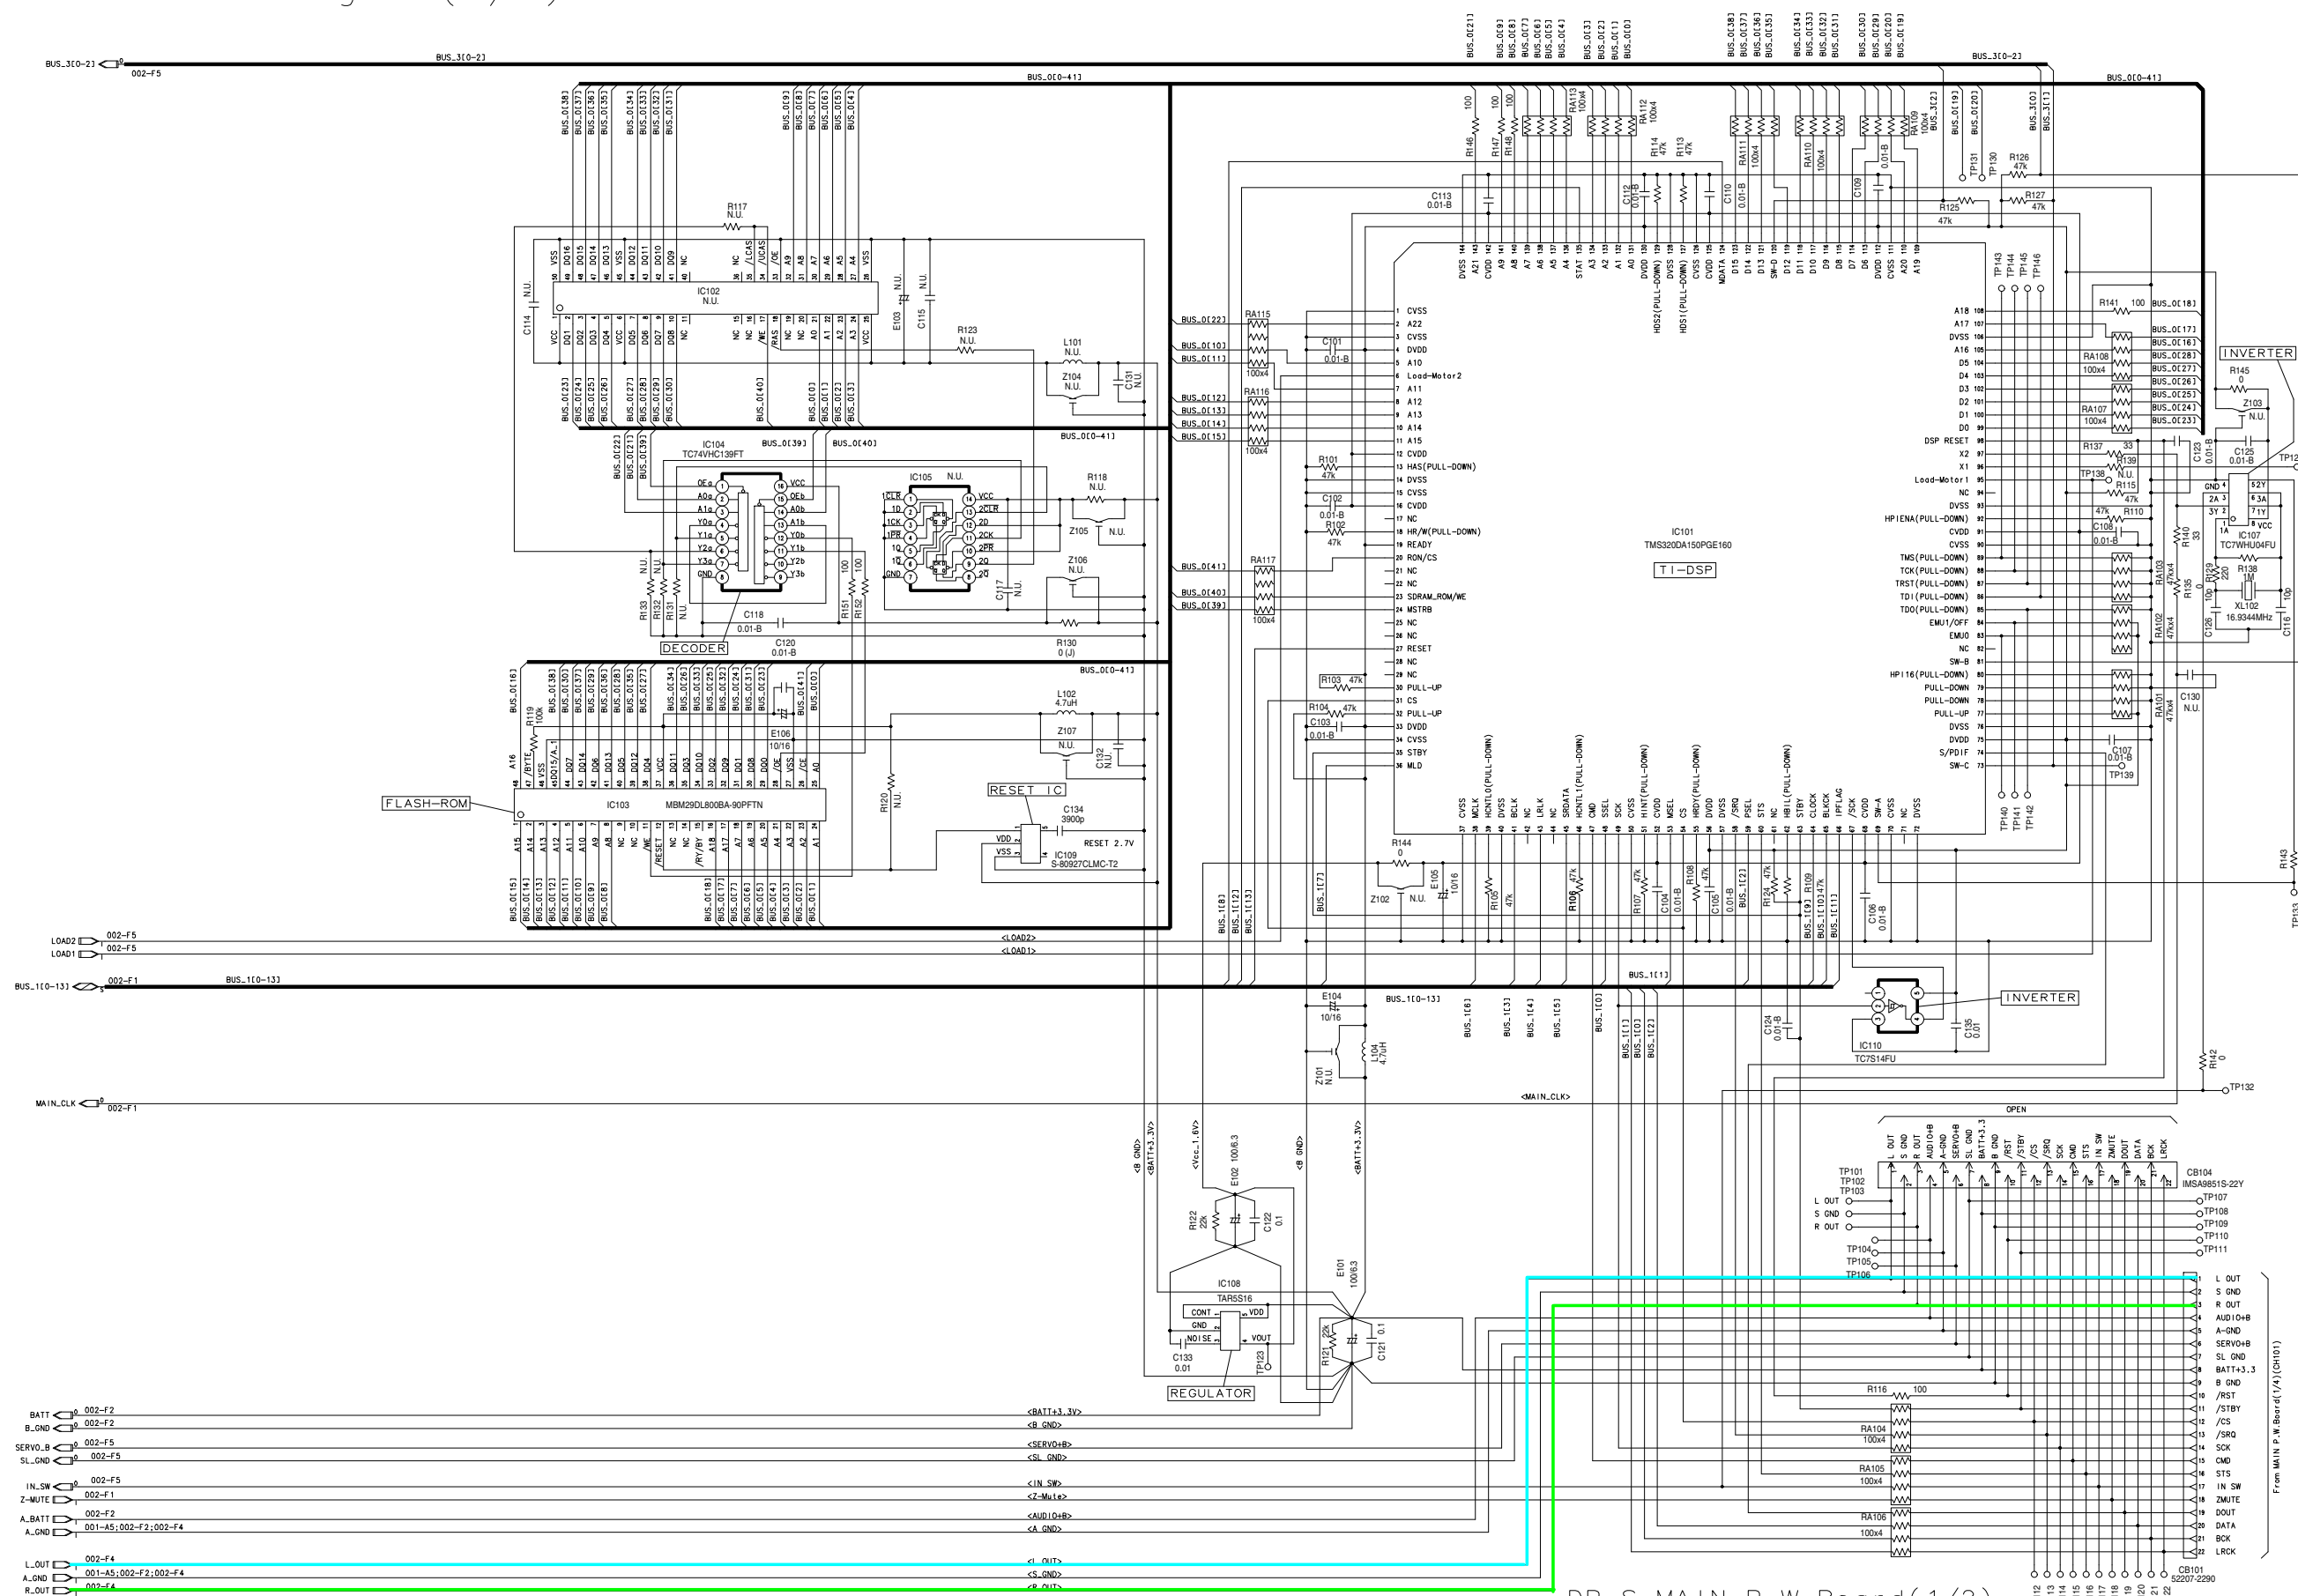


DP-S MAIN P.W.Board(1/2)

NOTE:N.U.is Not Used Parts.

Schematic Diagram(9/9)

CDA-9830R

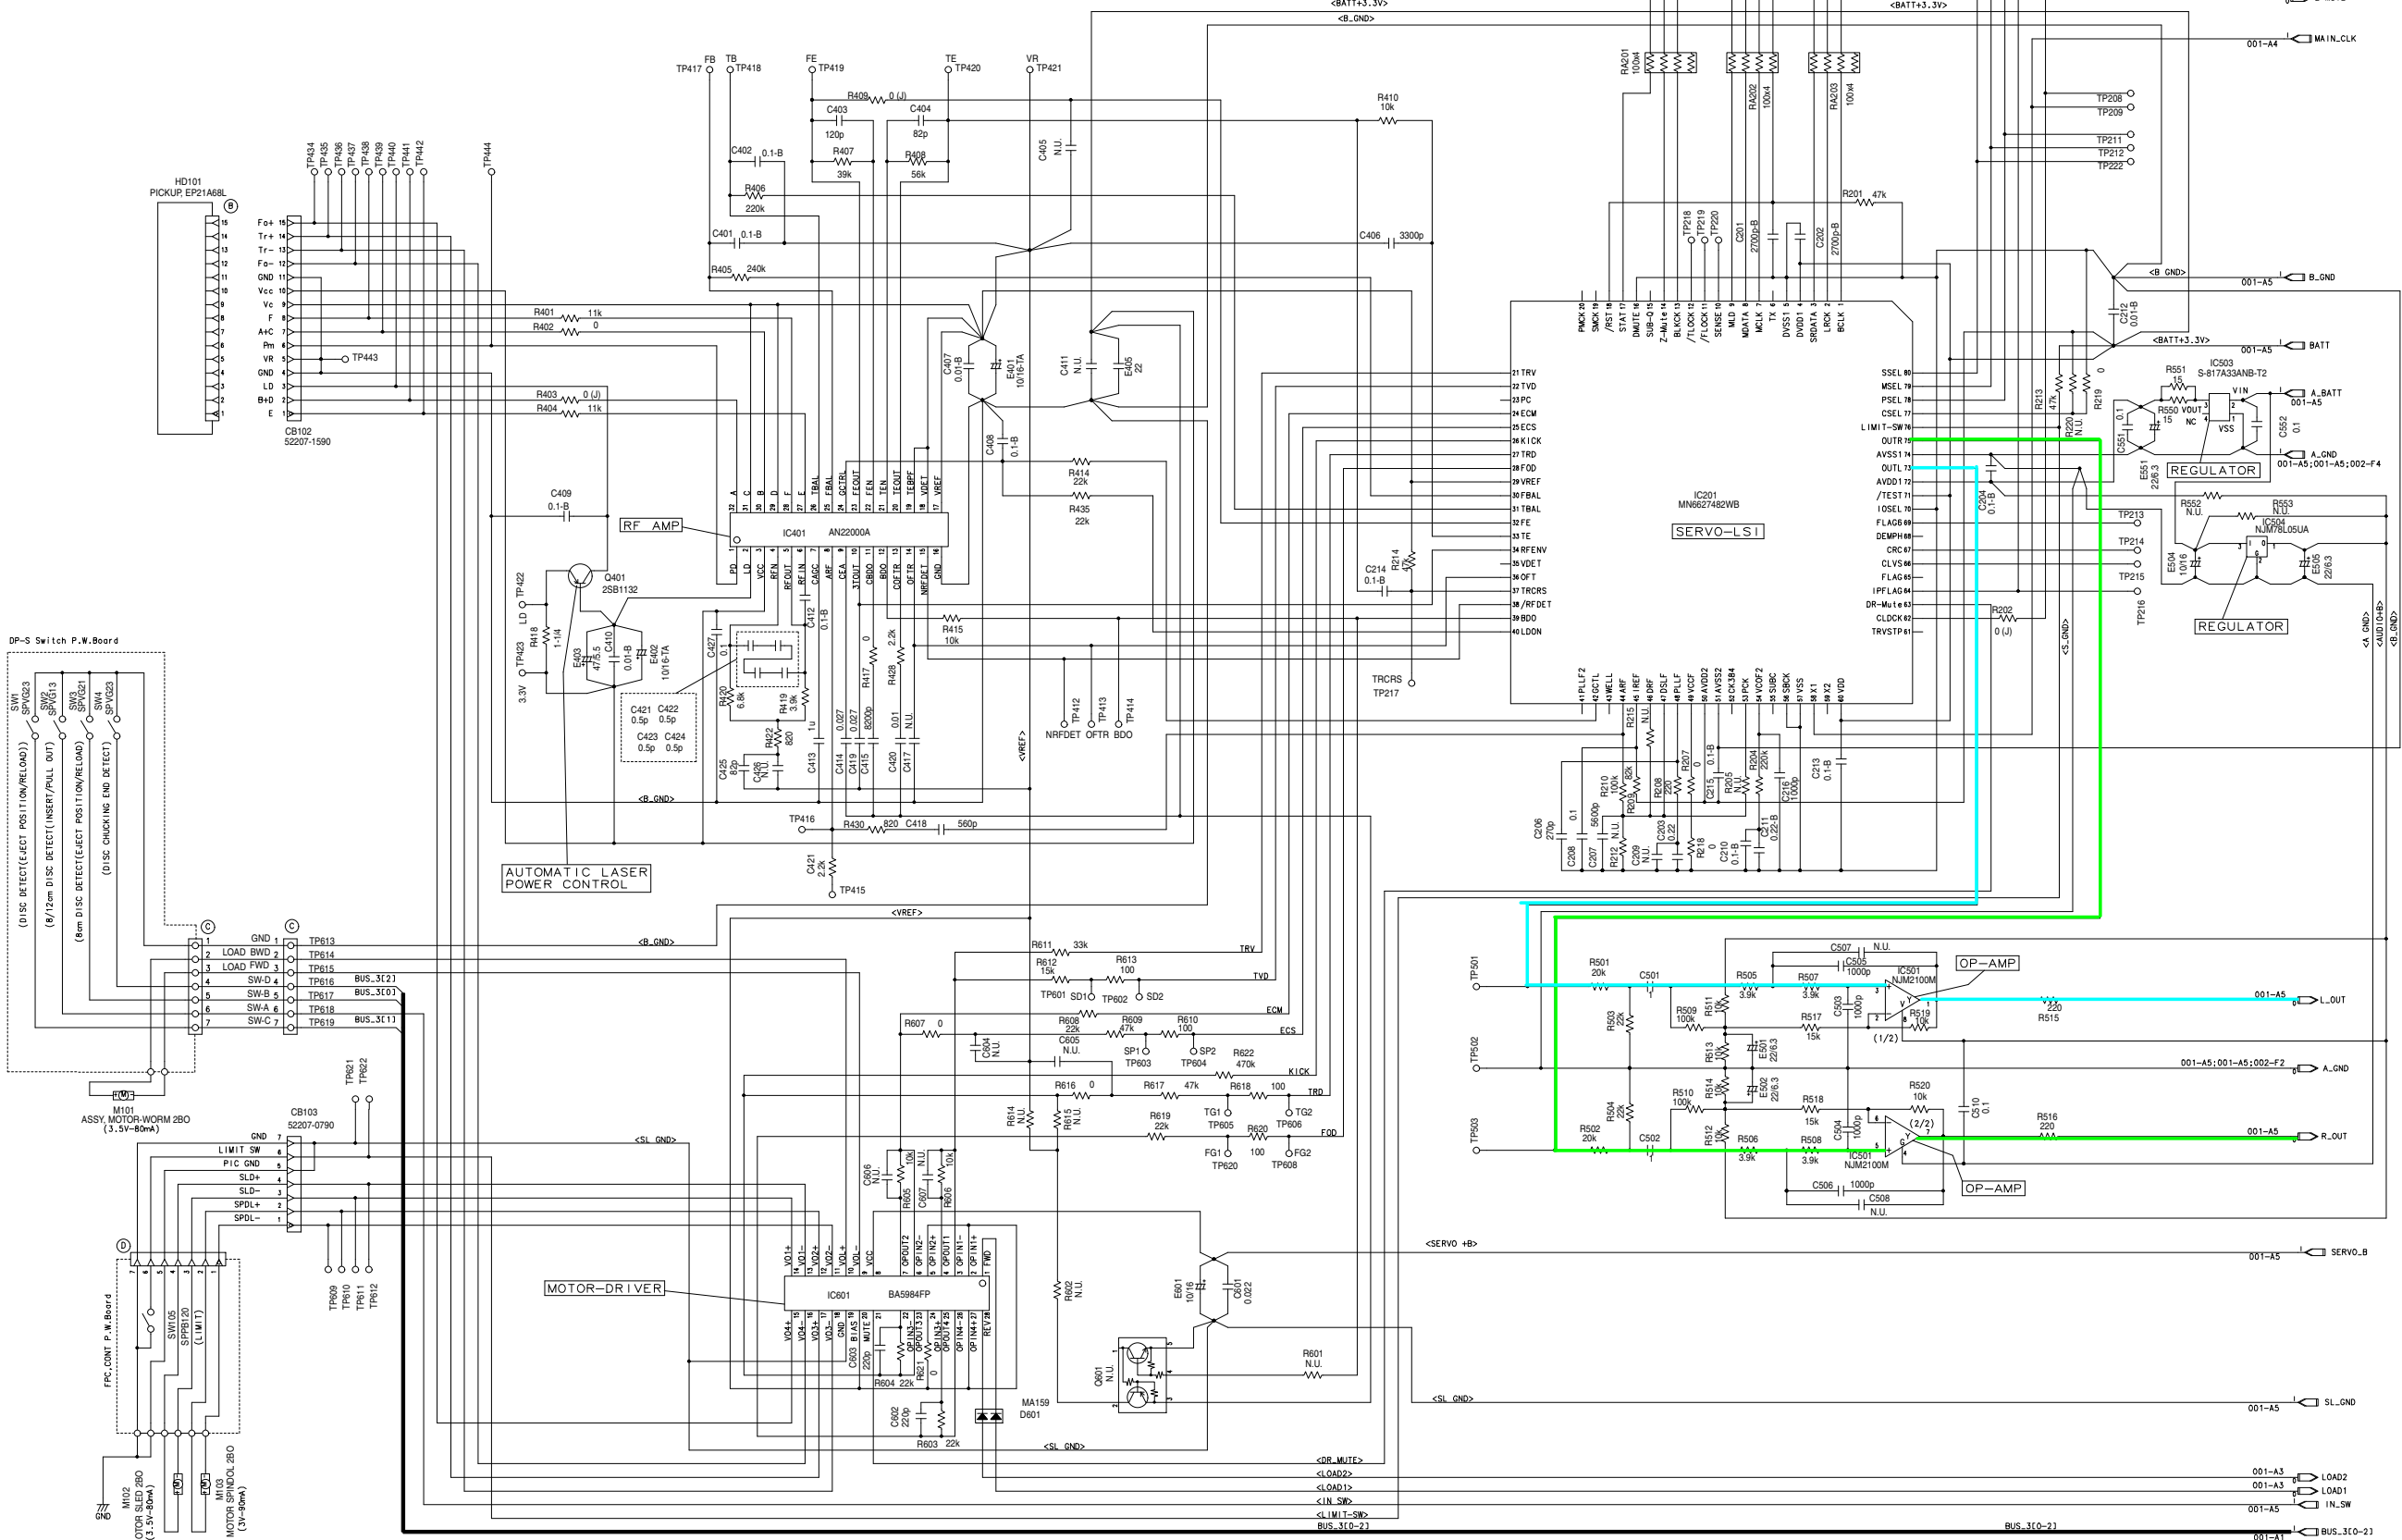

DP-S MAIN P.W.Board(2/2)
NOTE:N.U. is Not Used Parts.