


DELTA® Service Manual

MOBILE VIDEO SYSTEM

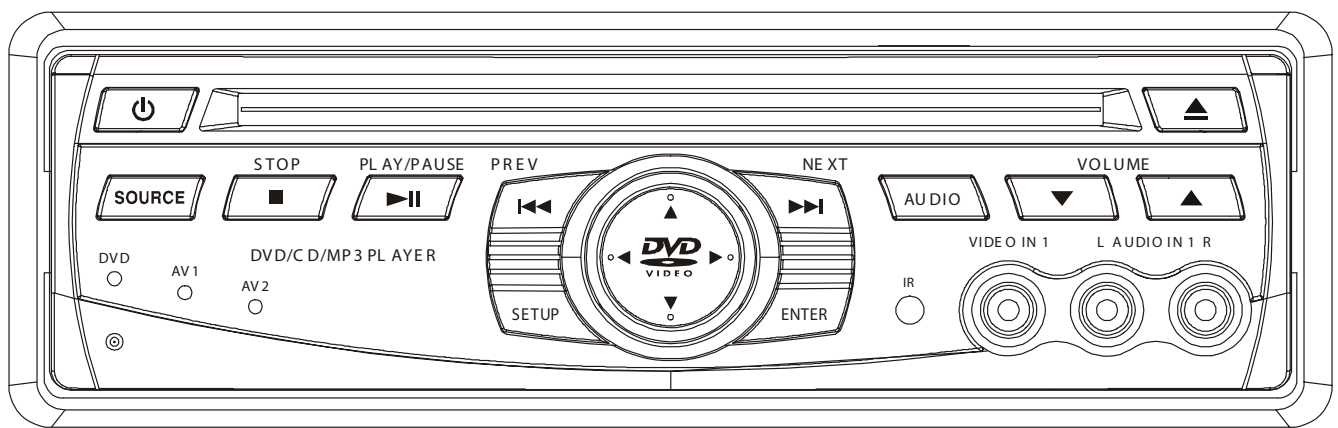

MODEL: MDV-10

Note:

Digital Audio Out-Coaxial

Multi-subtitle Languages Function

Multi-audio Languages Function

Multi-angle Function

Parental Control


CONTENTS

	Page
Disassembly Instructions	3
Disassembly Diagram.....	4
Block Diagram	5
Printed Circuit Board.....	6
Wiring Diagram	12
Exploded View	13
Exploded View Parts List	14
Schematic Diagram	15
Electrical Parts List	19
Specifications	26


DISASSEMBLY INSTRUCTIONS

1. Remove two screws (A) from each side of the top cabinet and remove three screws (B) located on the rear of the top cabinet then remove the Top Cabinet.
2. Remove four screws (C) located on the under the bottom cabinet then remove four Rubber Foot DVD171.
4. Remove two screws (D) located on the under the bottom cabinet and remove two screws (E) from each side of the top panel then remove the Top Panel.
5. Remove two screws (F) from the deck front bracket and remove two screws (G) from the deck rear bracket then remove the Main Board and the Bottom Cabinet.
6. Remove two screws (H) from the deck front bracket then remove the Deck Front Bracket.
7. Remove two screws (I) from the deck rear bracket then remove the Deck and the Deck Rear Bracket.

DISASSEMBLY DIAGRAM

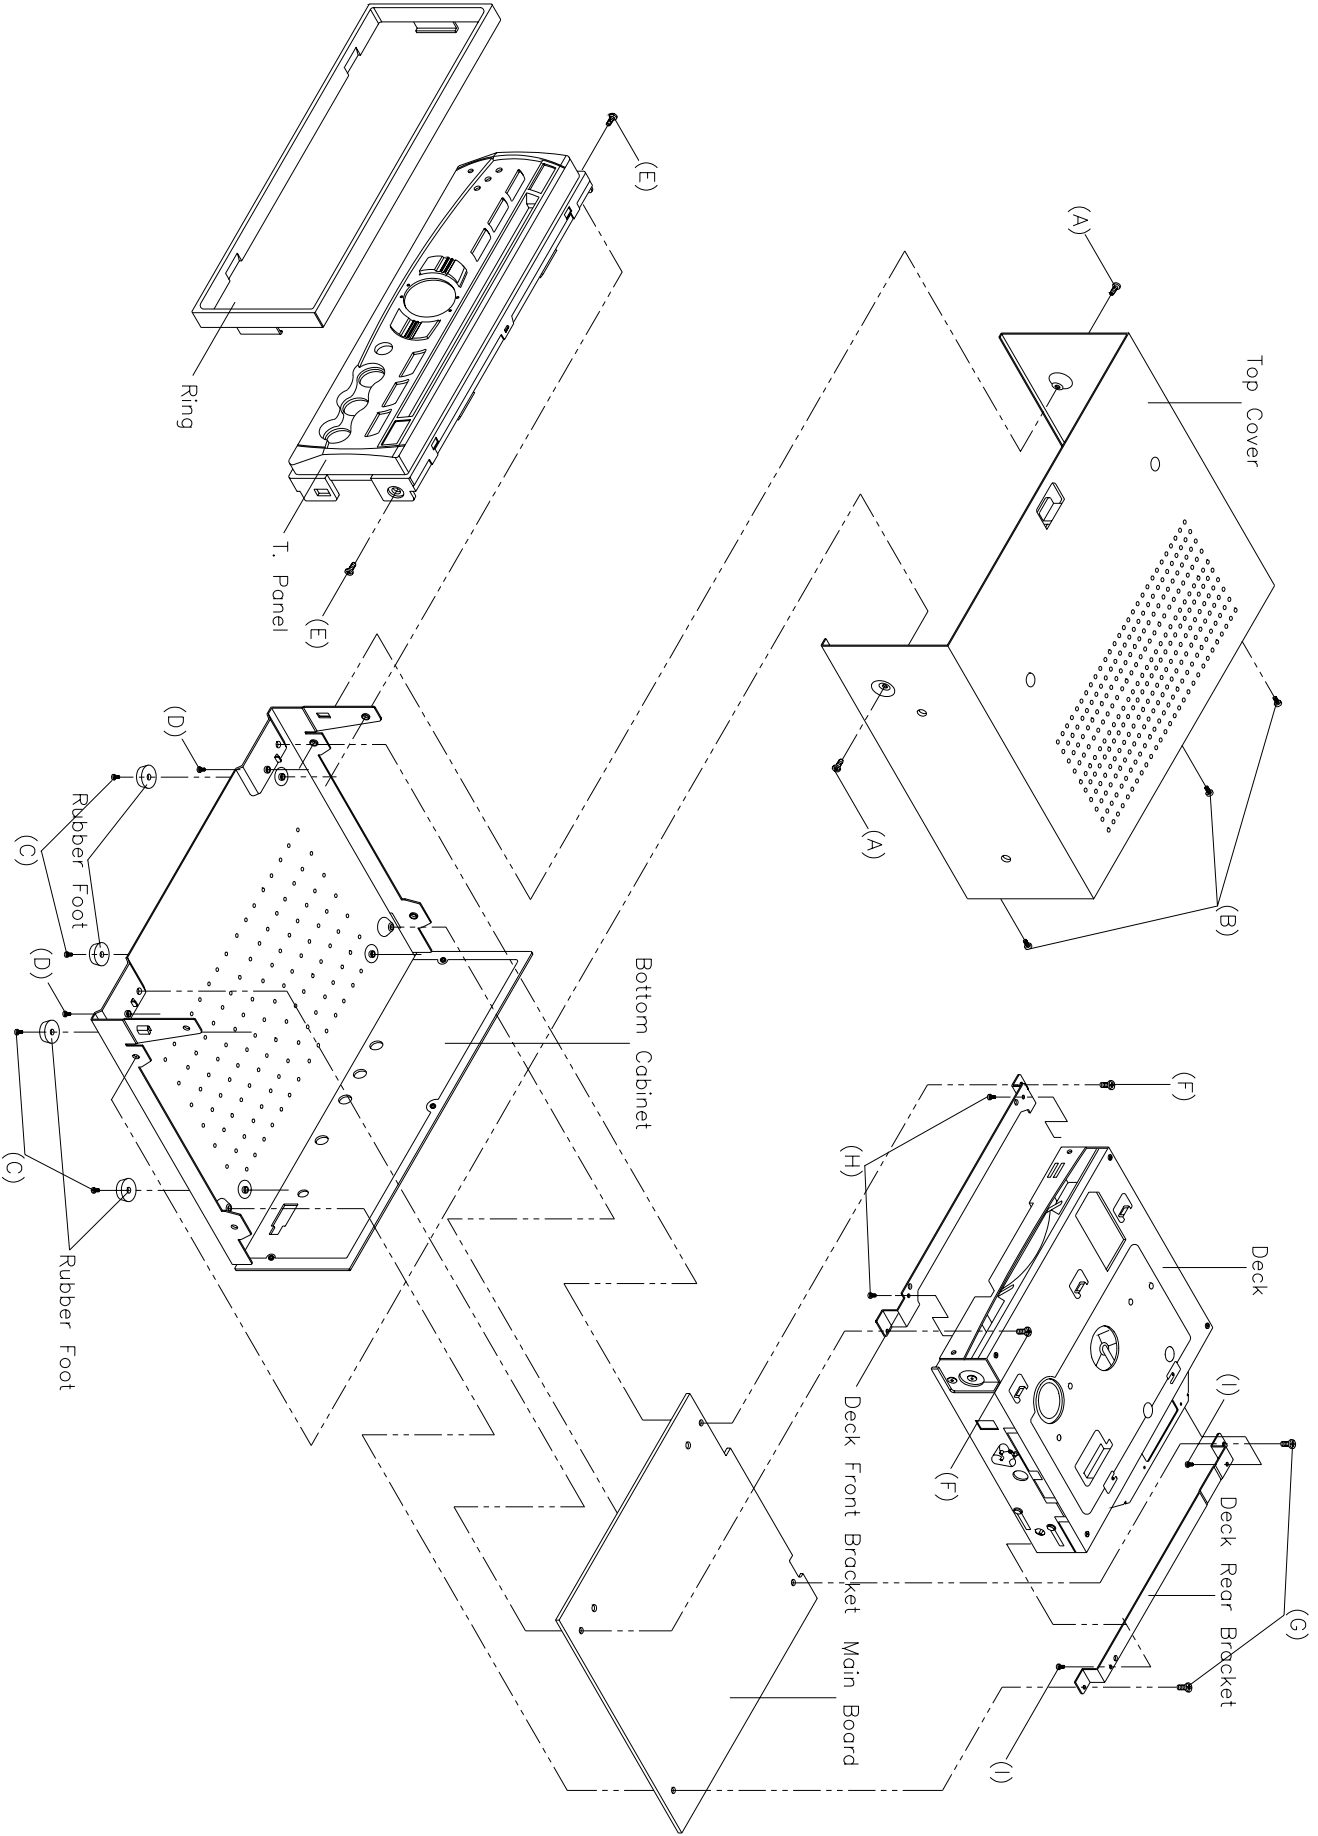


BLOCK DIAGRAM

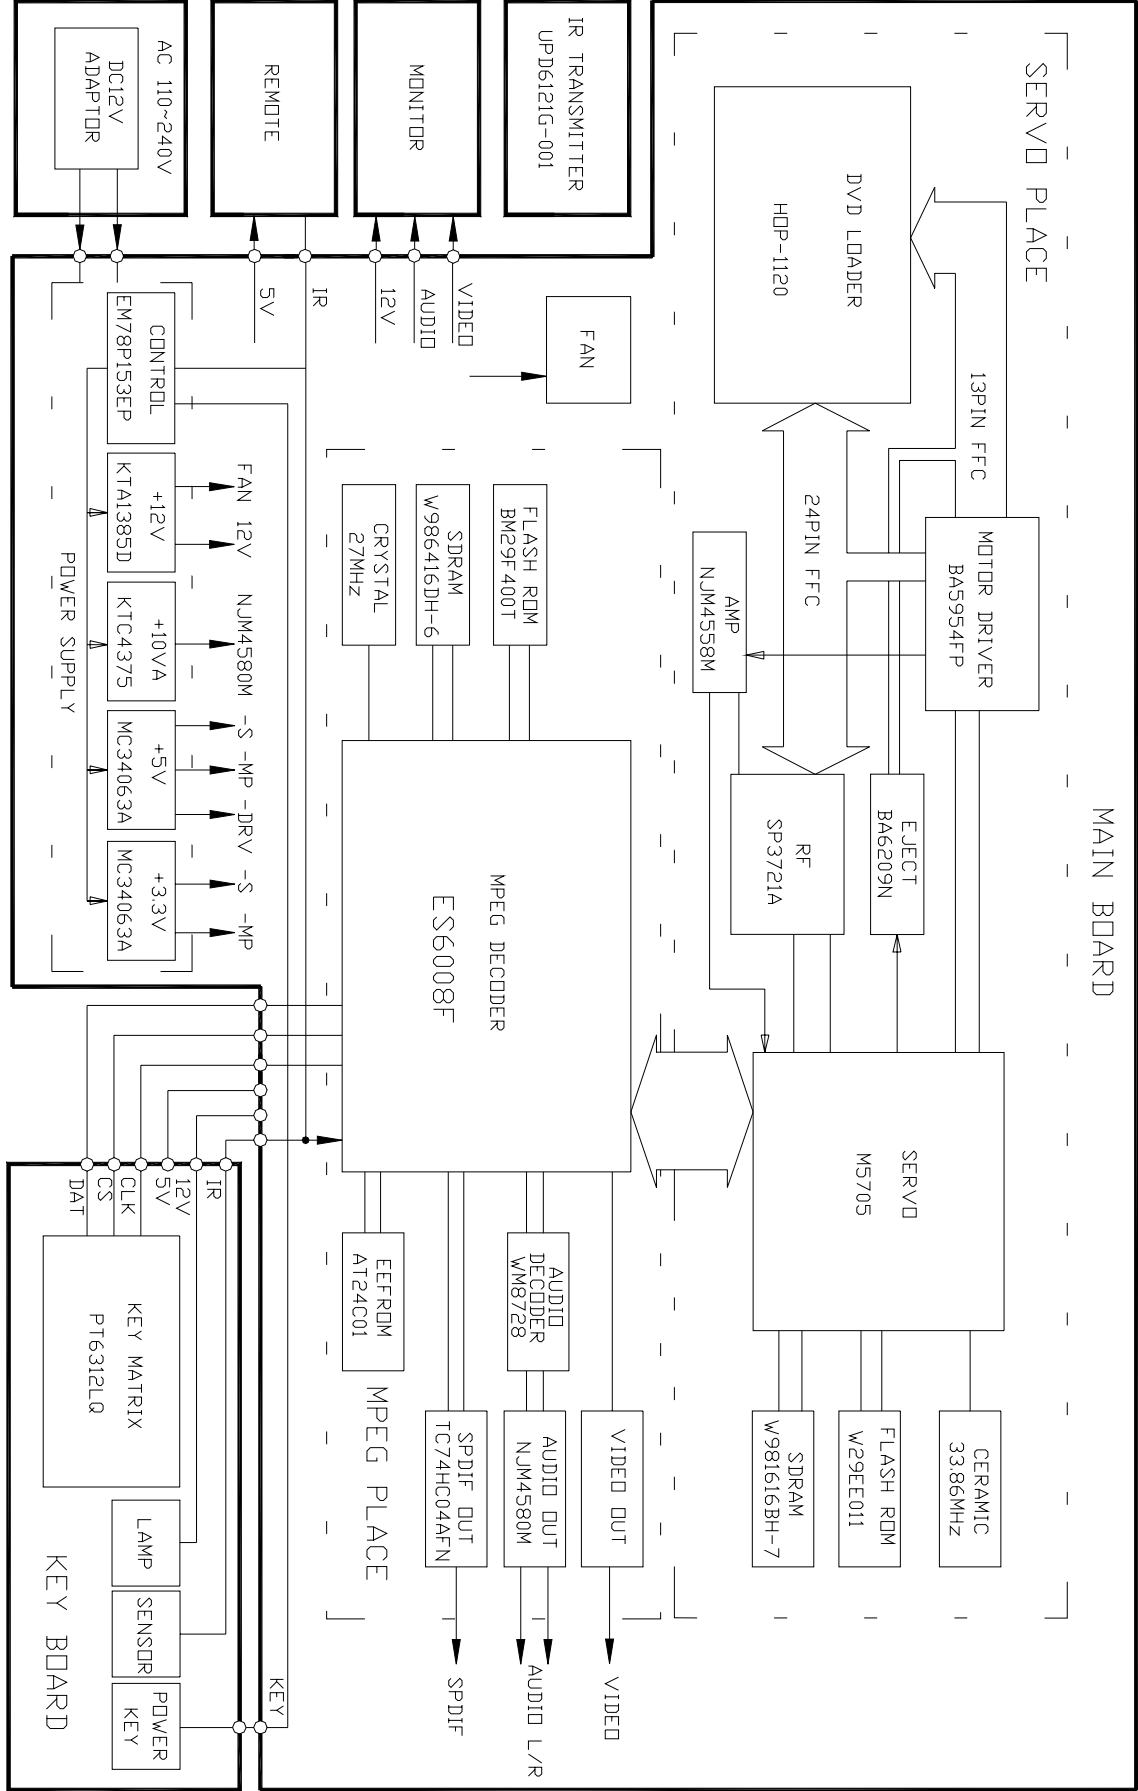


PRINTED CIRCUIT BOARDS

MAIN BOARD

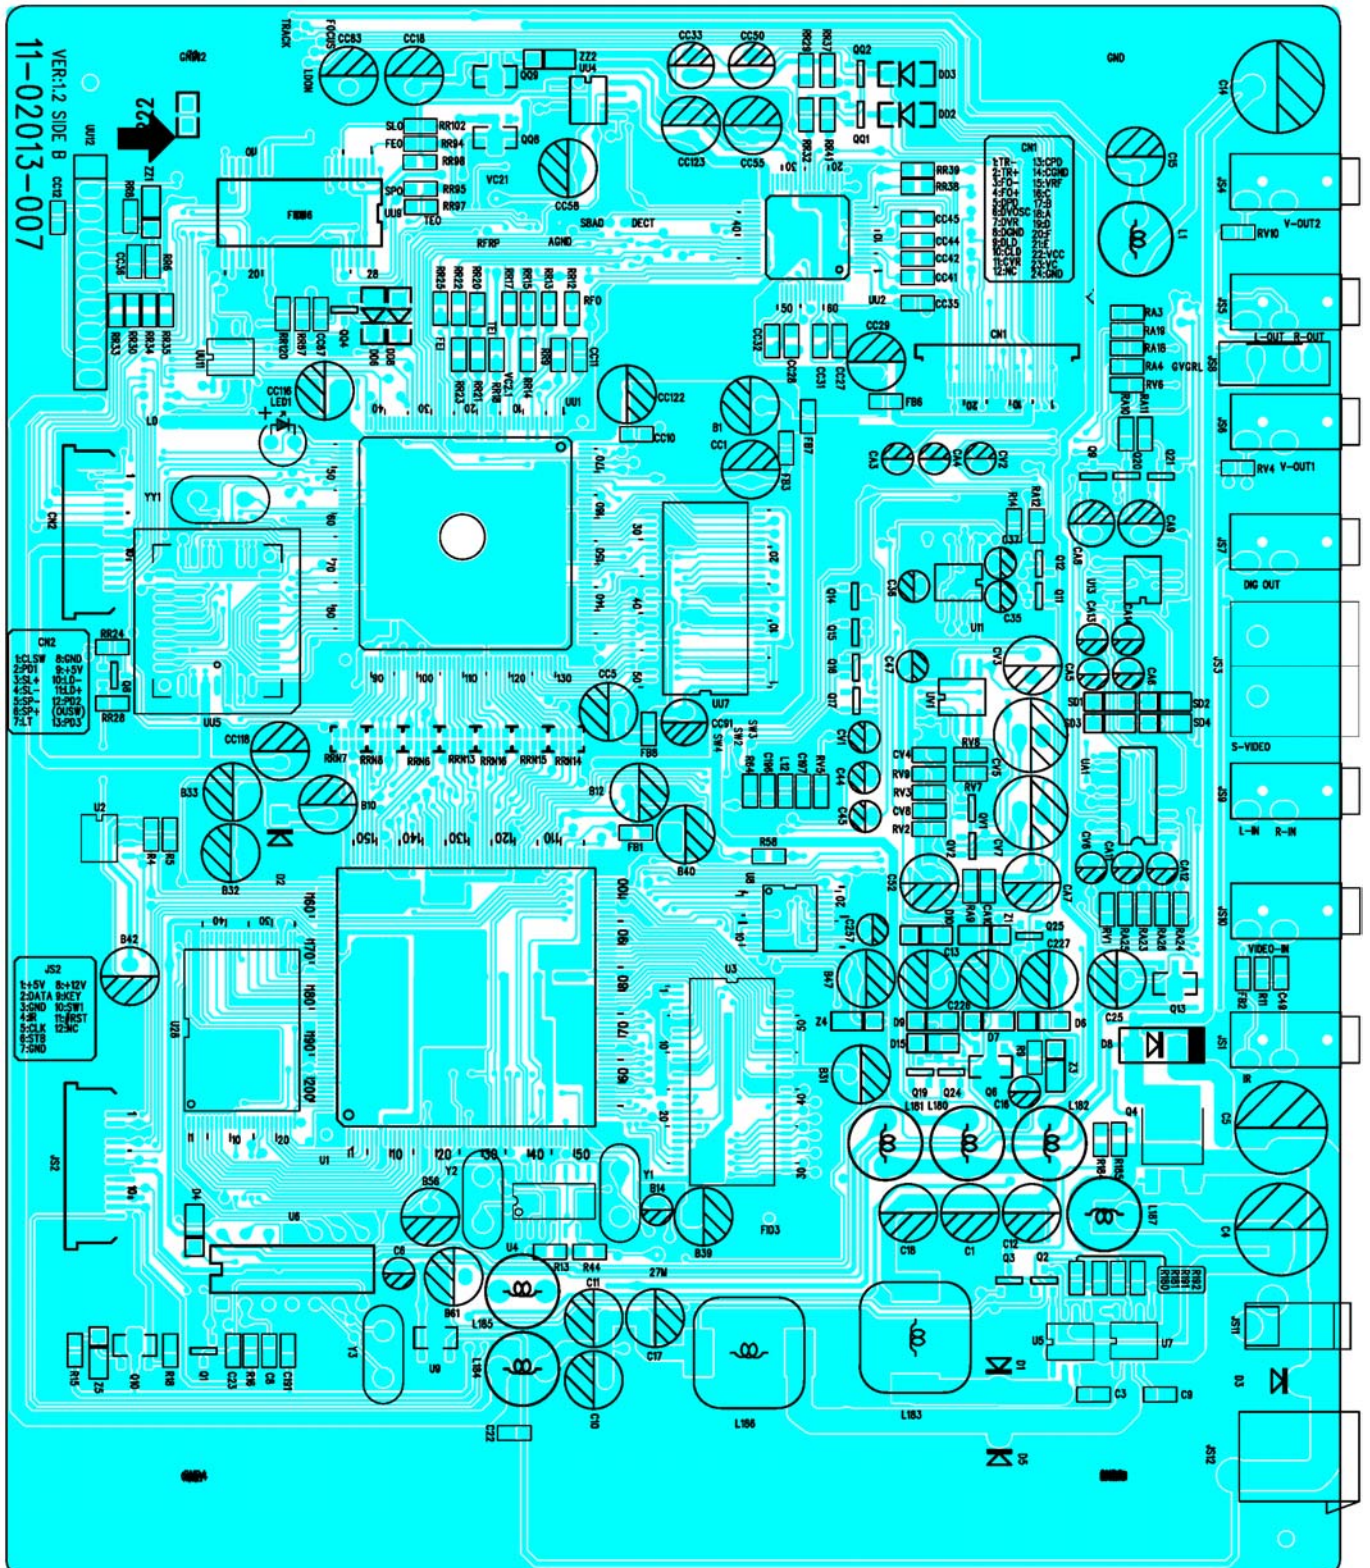


TOP VIEW

MAIN BOARD

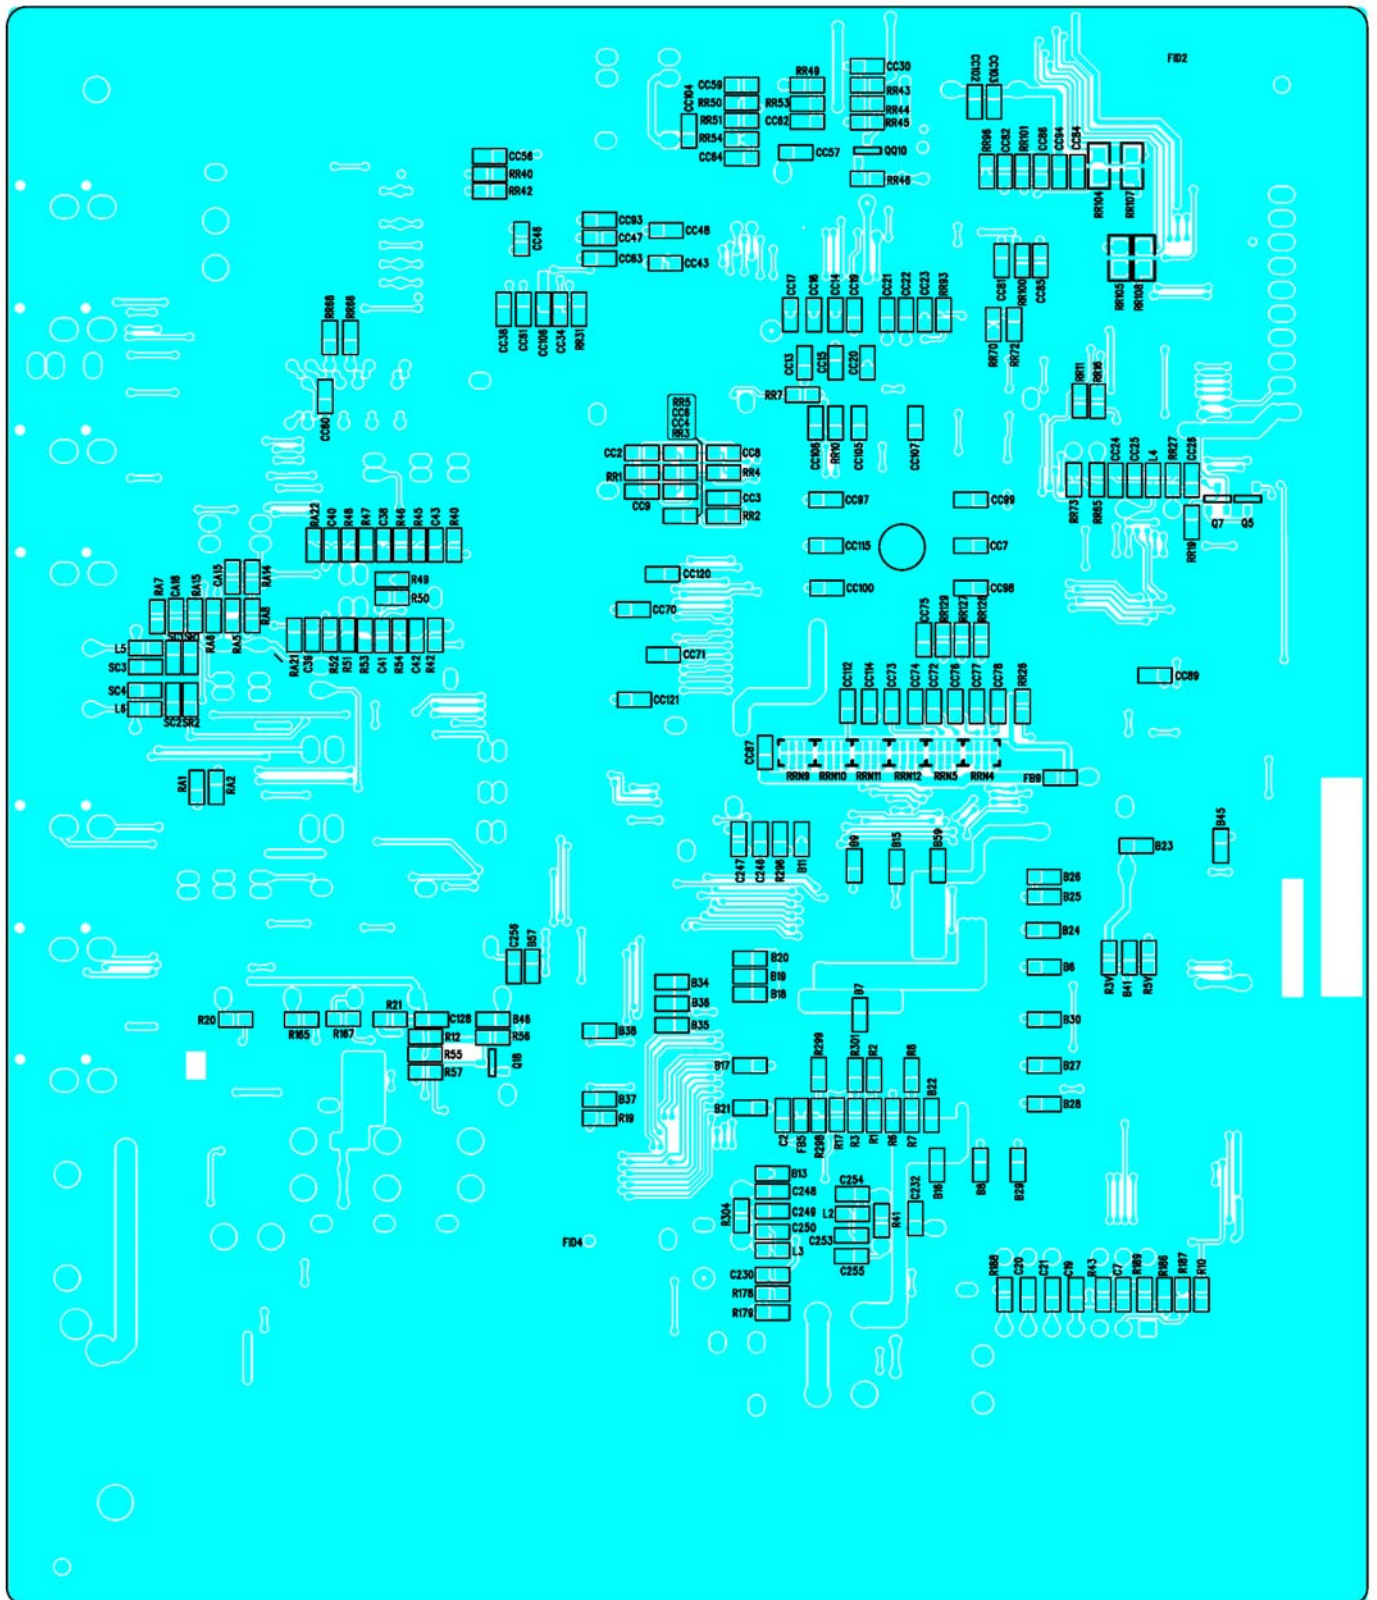


BOTTOM VIEW

KEY BOARD

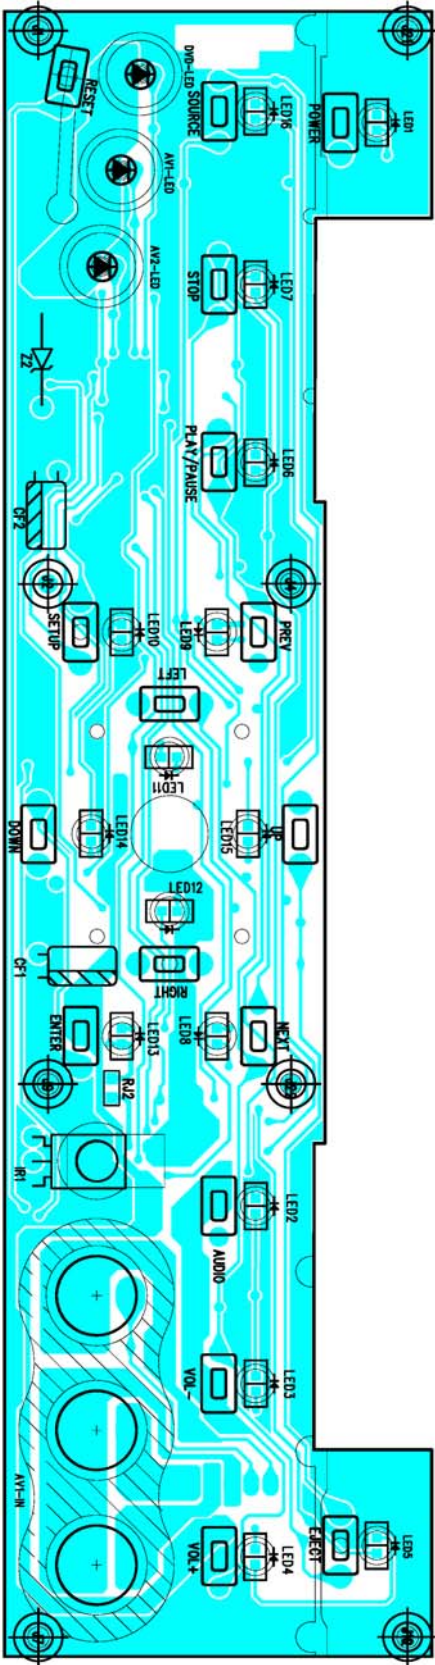


TOP VIEW

KEY BOARD

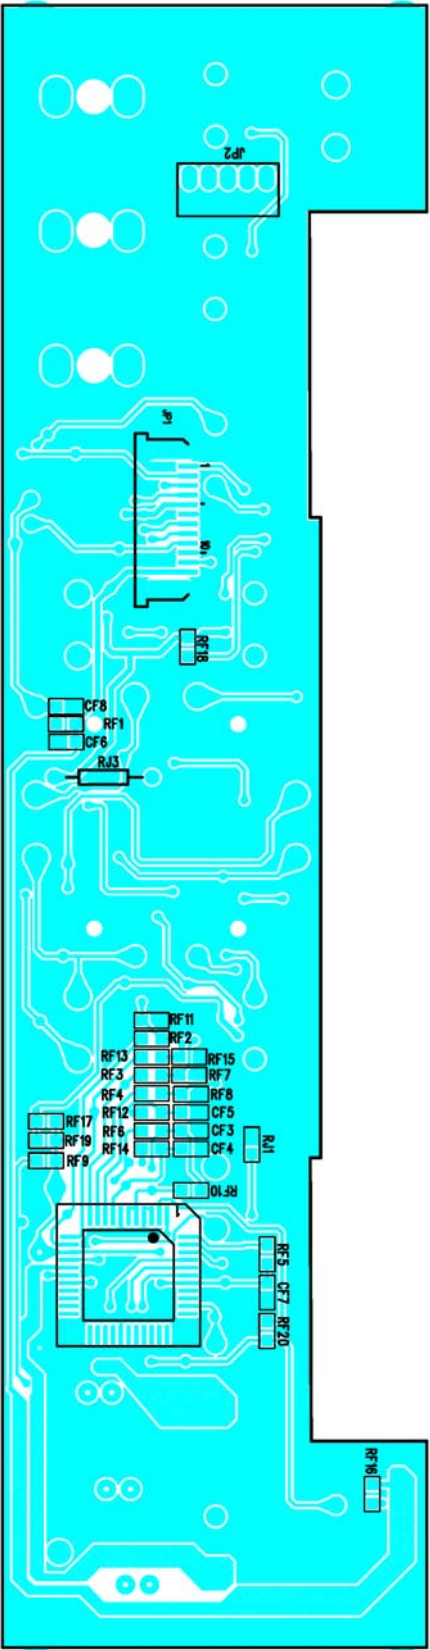


BOTTOM VIEW

REMOTE BOARD

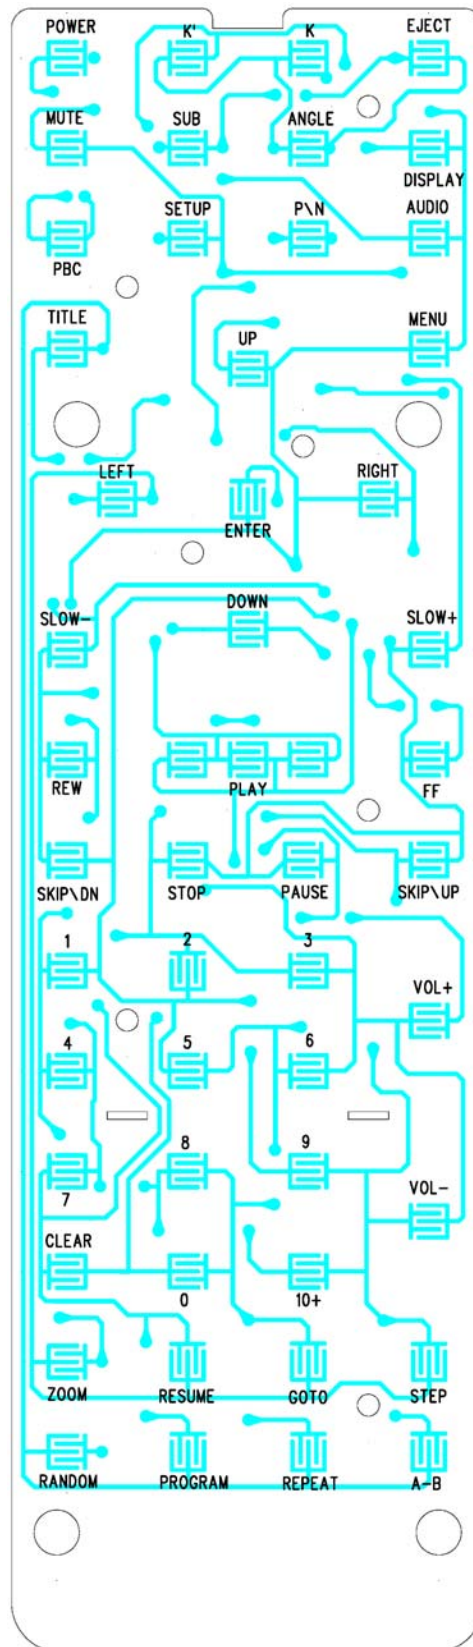

TOP VIEW

REMOTE BOARD

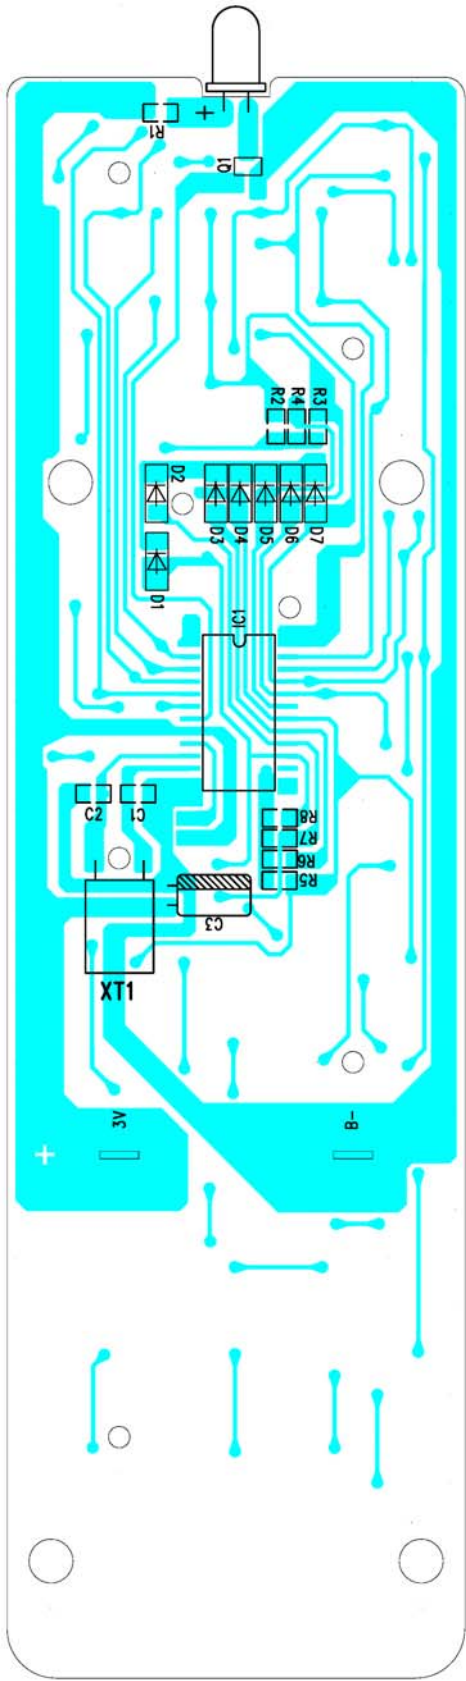

BOTTOM VIEW

WIRING DIAGRAM

