

Simple Troubleshooting Guide

Problem	Cause/Solution
No power.	★Check and make sure whether the fuse is blown,replace with the proper value if necessary.
Some errors occur in the LCD or no function when pressing the button.	★Press the RESET button.
Unable to receive stations.	★Check and make sure whether the antenna is inserted or the antenna is properly connected,if so,insert the antenna or connect it properly.
Poor effect on receiving a station.	★Antenna may not be the proper length.Make sure the antenna is fully extended or broken;if broken,replace the antenna with a new one. ★The antenna is poorly grounded,check and make sure the antenna is properly grounded at its mounting location.
CDs cannot be loaded.	★A CD is loaded in the mechanism.
Sound skips.	★The CD is dirty or damaged.
No images.	★The Video line from main to the TV is not connected properly.
Images skip.	★Improper setting of the color system.Set the color system to PAL or NTSC according to the connections of the TV.