


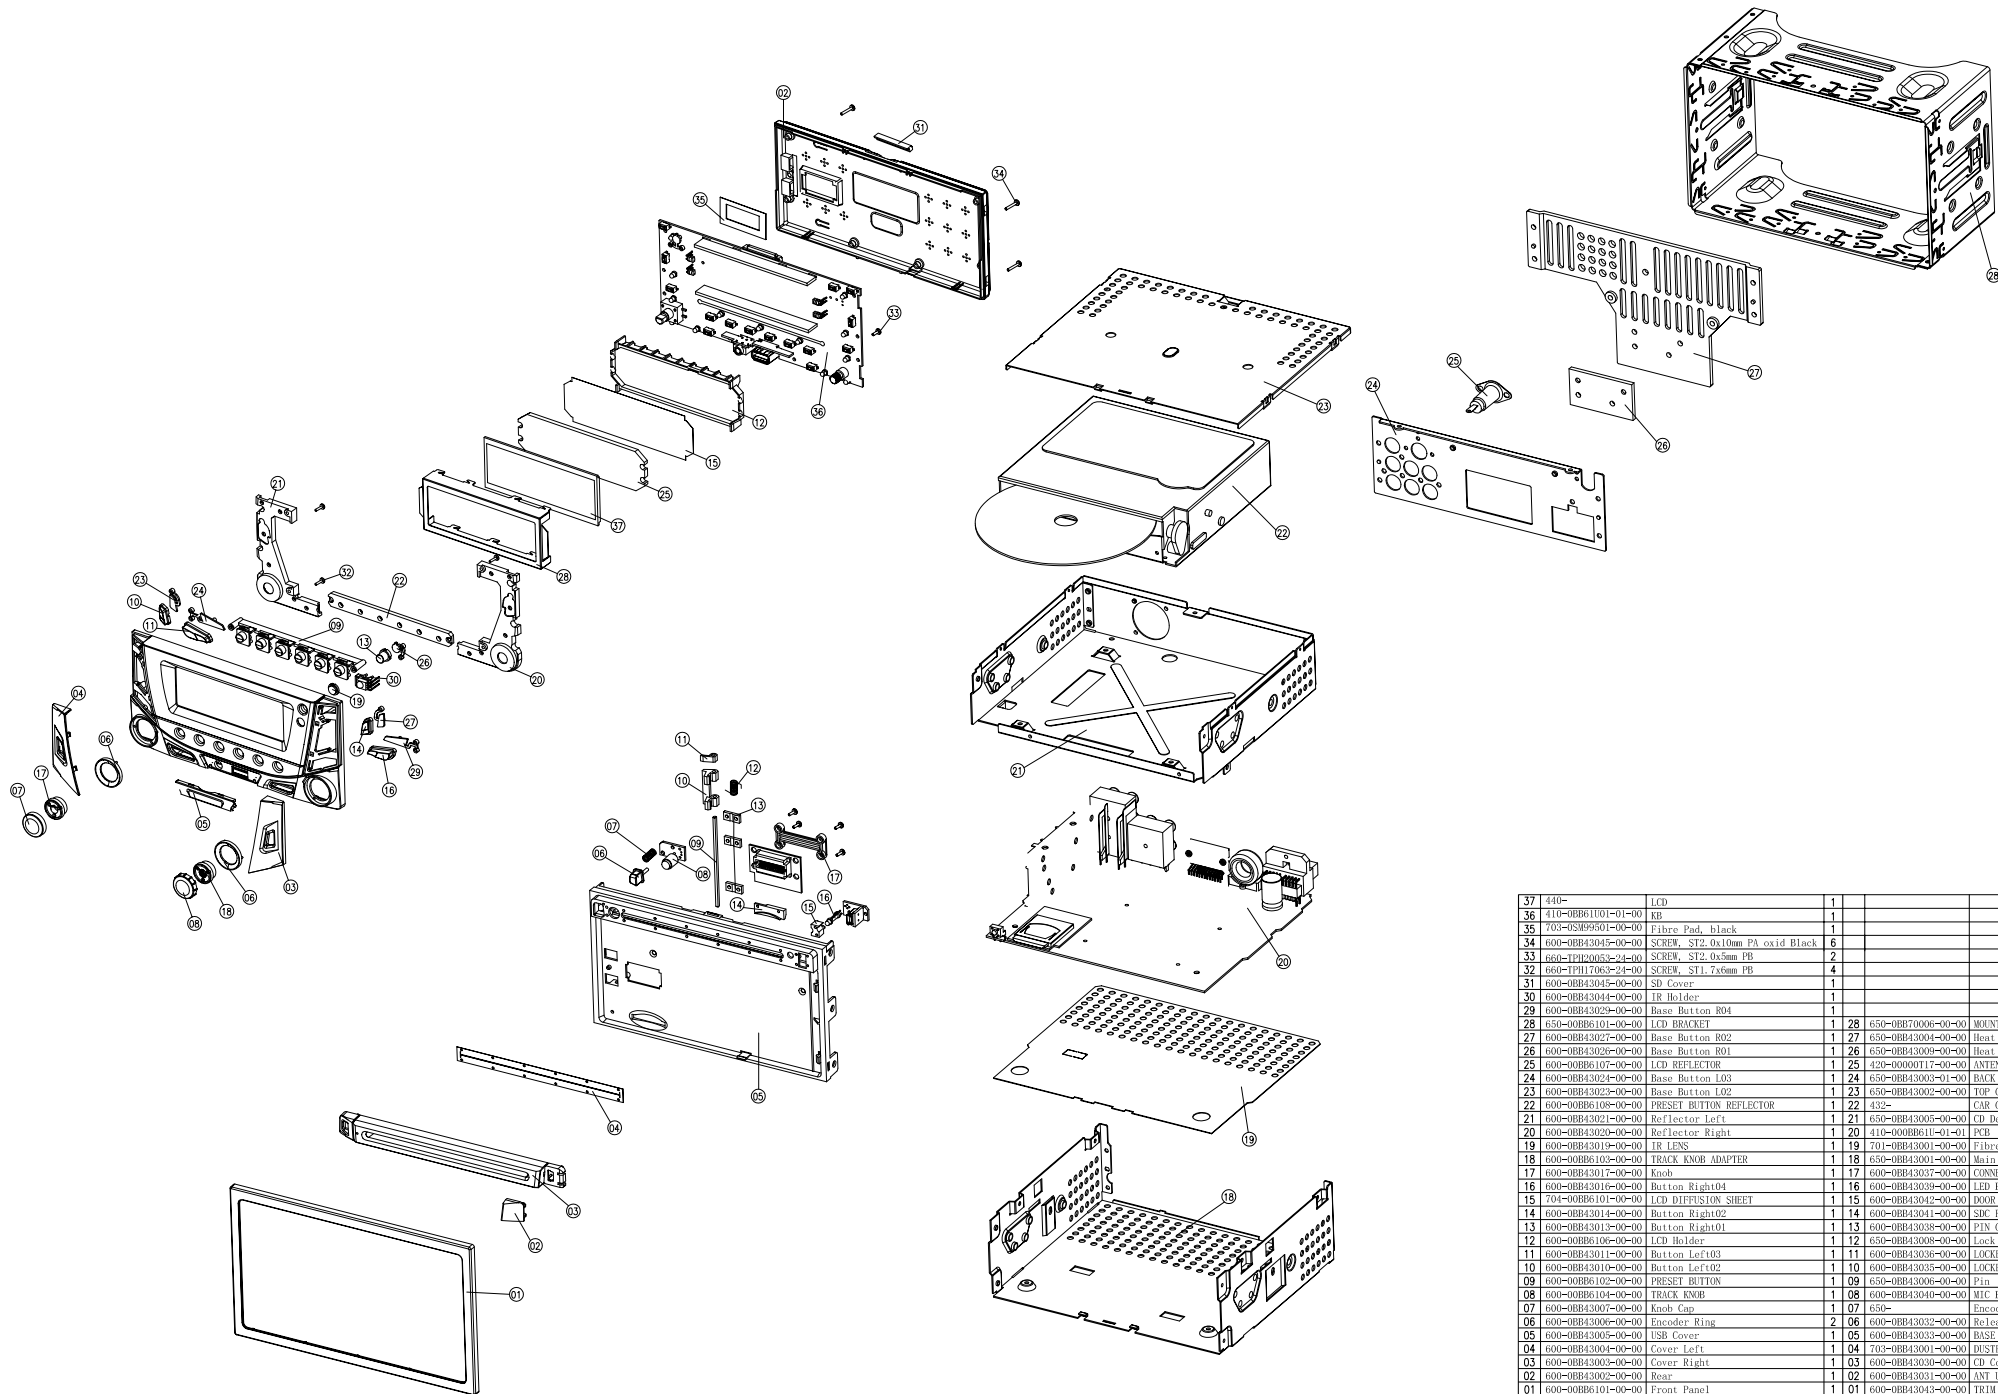

37	440--	LCD	1				
36	410-00B01001-01-00	KB	1				
35	703-03B0501-00-00	Fibre Pad, black	1				
35	600-00B43045-00-00	SCREW, ST2.0x10mm PA oxid Black	6				
34	660-TPH20053-24-00	SCREW, ST2.0x5mm PB	2				
33	660-TPH17063-24-00	SCREW, ST1.7x5mm PB	4				
32	600-00B43045-00-00	SD Cover	1				1
31	600-00B43044-00-00	IR Holder	1				1
30	600-00B43029-00-00	Base Button R04	1				1
29	650-00B43027-00-00	Base Button R02	1	28	650-00B70000-00-00	MOUNTING BRACKET	1
28	600-00B6108-00-00	PRESET BUTTON REFLECTOR	1	27	650-00B43004-00-00	Heat Sink "A"	1
27	600-00B6107-00-00	LCD REFLECTOR	1	26	650-00B43009-00-00	Heat Sink "B"	1
26	600-00B6106-00-00	LCD REFLECTOR	1	25	420-00000T17-00-00	ANTENNA SOCKET T17	1
25	600-00B6105-00-00	LCD REFLECTOR	1	24	650-00B43003-01-00	BACK "B"	1
24	600-00B43023-00-00	Base Button L03	1	23	650-00B43002-00-00	TOP COVER	1
23	600-00B6104-00-00	PRESET BUTTON REFLECTOR	1	22	432-	CAR CD MECHANISM	1
22	600-00B43021-00-00	Reflector Left	1	21	650-00B43005-00-00	CD Deck Bracket	1
21	600-00B43020-00-00	Reflector Right	1	20	410-0000B611-01-01	PCB	1
20	600-00B43019-00-00	IR LENS	1	19	701-00B43001-00-00	Fibre Sheet	1
19	600-00B6103-00-00	TRACK KNOB ADAPTER	1	18	650-00B43001-00-00	Main Chassis	1
18	600-00B43017-00-00	Knob	1	17	600-00B43037-00-00	CONNECTOR COVER	1
17	600-00B43016-00-00	Button Right04	1	16	600-00B43039-00-00	LED BRACKET	1
16	704-00B06101-00-00	LCD DIFFUSION SHEET	1	15	600-00B4304-00-00	DOOR REFLECTOR	1
15	600-00B43014-00-00	Button Right02	1	14	600-00B43041-00-00	SIC REFLECTOR	1
14	600-00B43013-00-00	Button Right01	1	13	600-00B43038-00-00	PIN COVER	3
13	600-00B6106-00-00	LCD Holder	1	12	650-00B43008-00-00	Lock Spring	1
12	600-00B6105-00-00	Button Left03	1	11	600-00B43036-00-00	LOCKER "B"	1
11	600-00B43010-00-00	Button Left02	1	10	600-00B43035-00-00	LOCKER "A"	1
10	600-00B6102-00-00	PRESET BUTTON	1	09	650-00B43006-00-00	Pin	1
09	600-00B6104-00-00	TRACK KNOB	1	08	600-00B43040-00-00	RTC BRACKET	1
08	600-00B43007-00-00	Knob Cap	1	07	650-	Encoder Ring	2
07	600-00B43006-00-00	Release Button	2	06	600-00B43032-00-00	Release Button	1
06	600-00B43005-00-00	USB Cover	1	05	600-00B43033-00-00	BASE "A" (W/SD COARD)	1
05	600-00B43004-00-00	Cover Left	1	04	703-00B43001-00-00	DUSTPROOF FELT	1
04	600-00B43003-00-00	Cover Right	1	03	600-00B43030-00-00	CD Cover	1
03	600-00B43002-00-00	Rear	1	02	600-00B43031-00-00	ANT USB Cover	1
02	600-00B6101-00-00	Front Panel	1	01	600-00B43043-00-00	TRIM PLATE	1
01	600-00B6101-00-00	Front Panel	1				
S/N	Drawing No.	DESCRIPTION	QTY	S/N	Drawing No.	DESCRIPTION	QTY

PANEL

Mainframe