



8. TroubleShooting

8-1 Main

1.Main(Power)

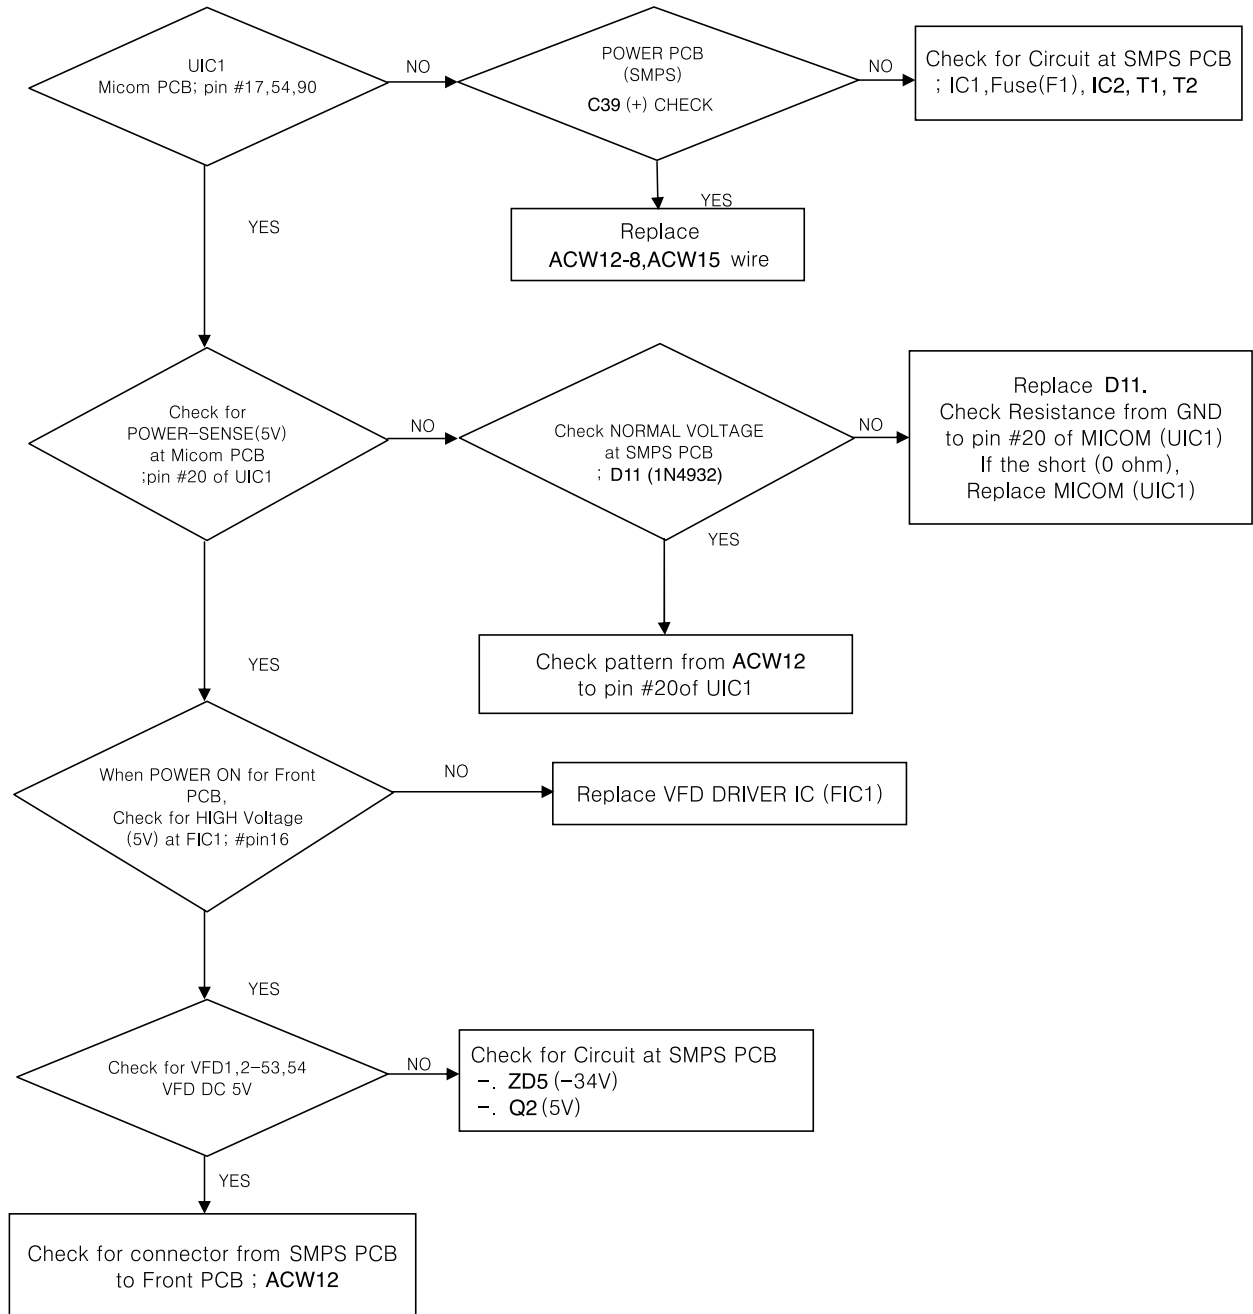


2.Output


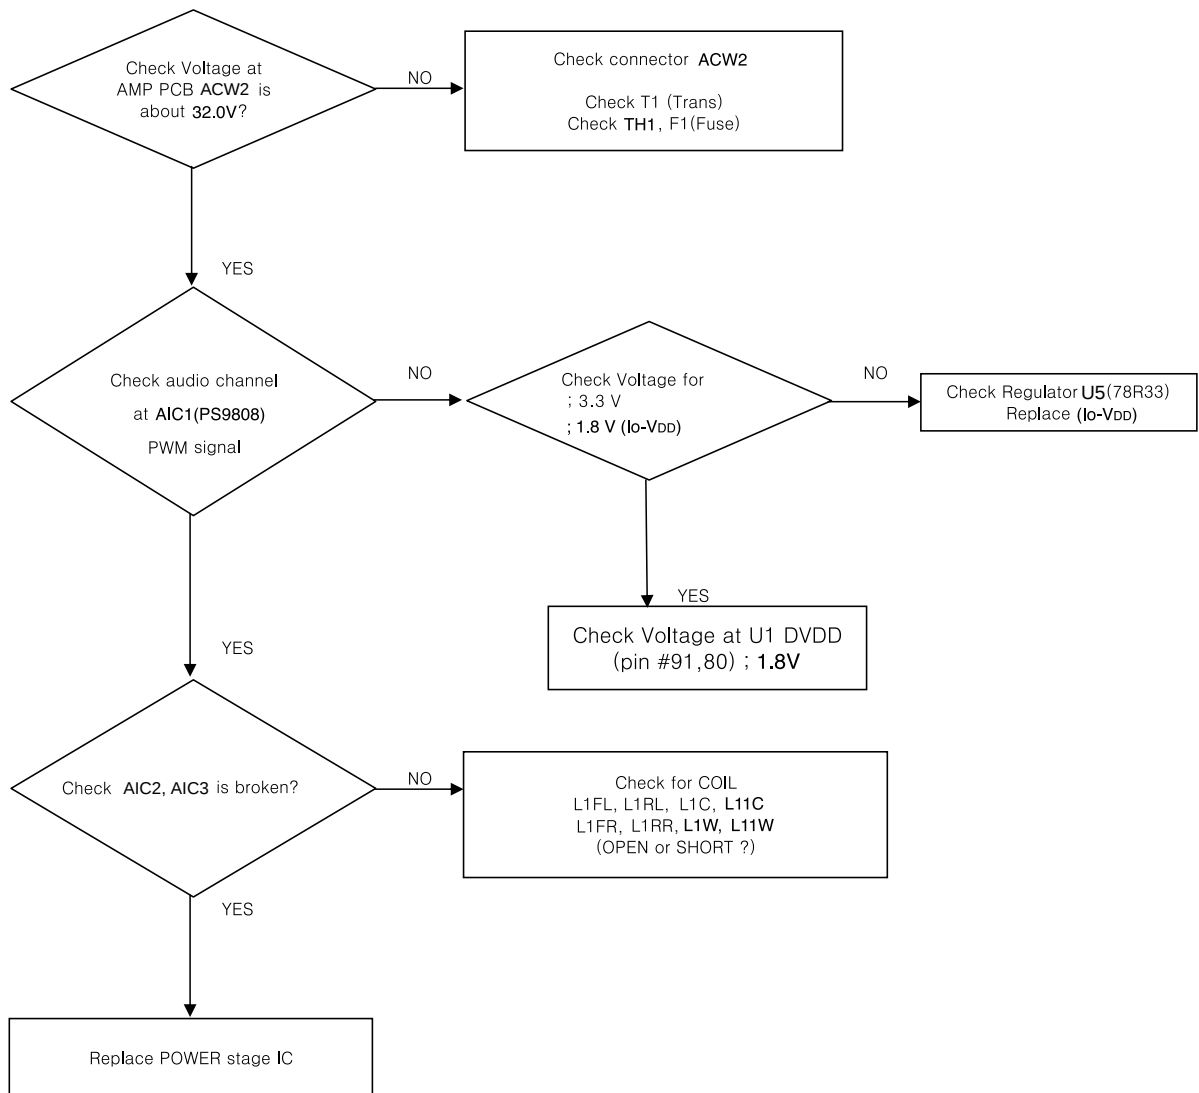


3. PROTECTION


(When Power ON and 'PROTECTION' Mark is displayed)

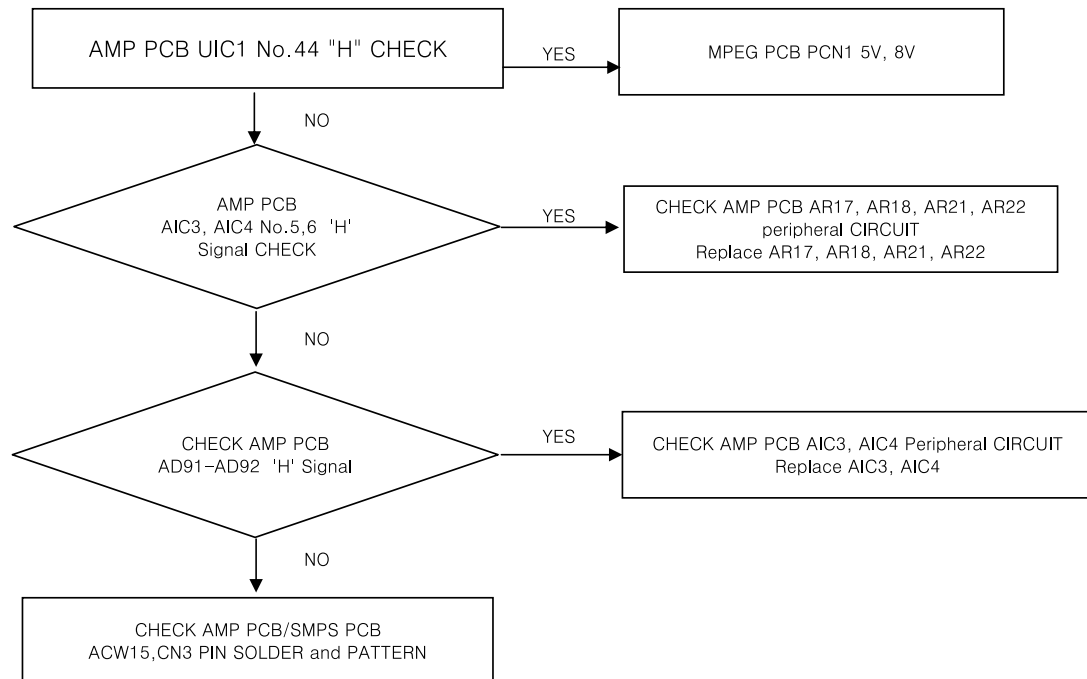

1. Initial operation after power ON

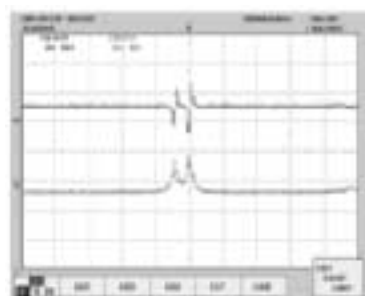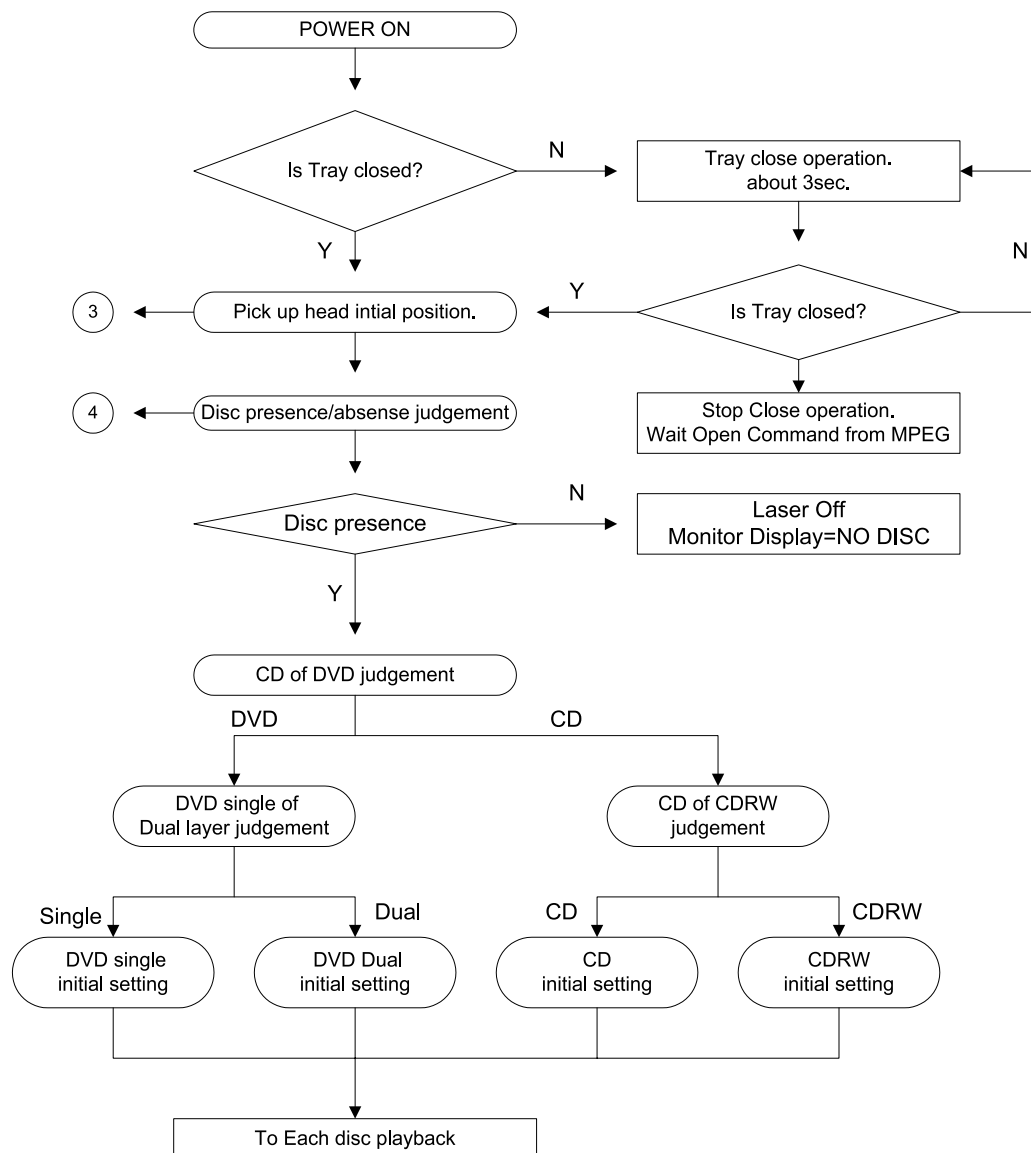


(DVD Dual)

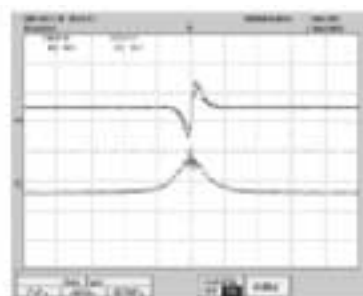

(DVD Single)


2. Play operation

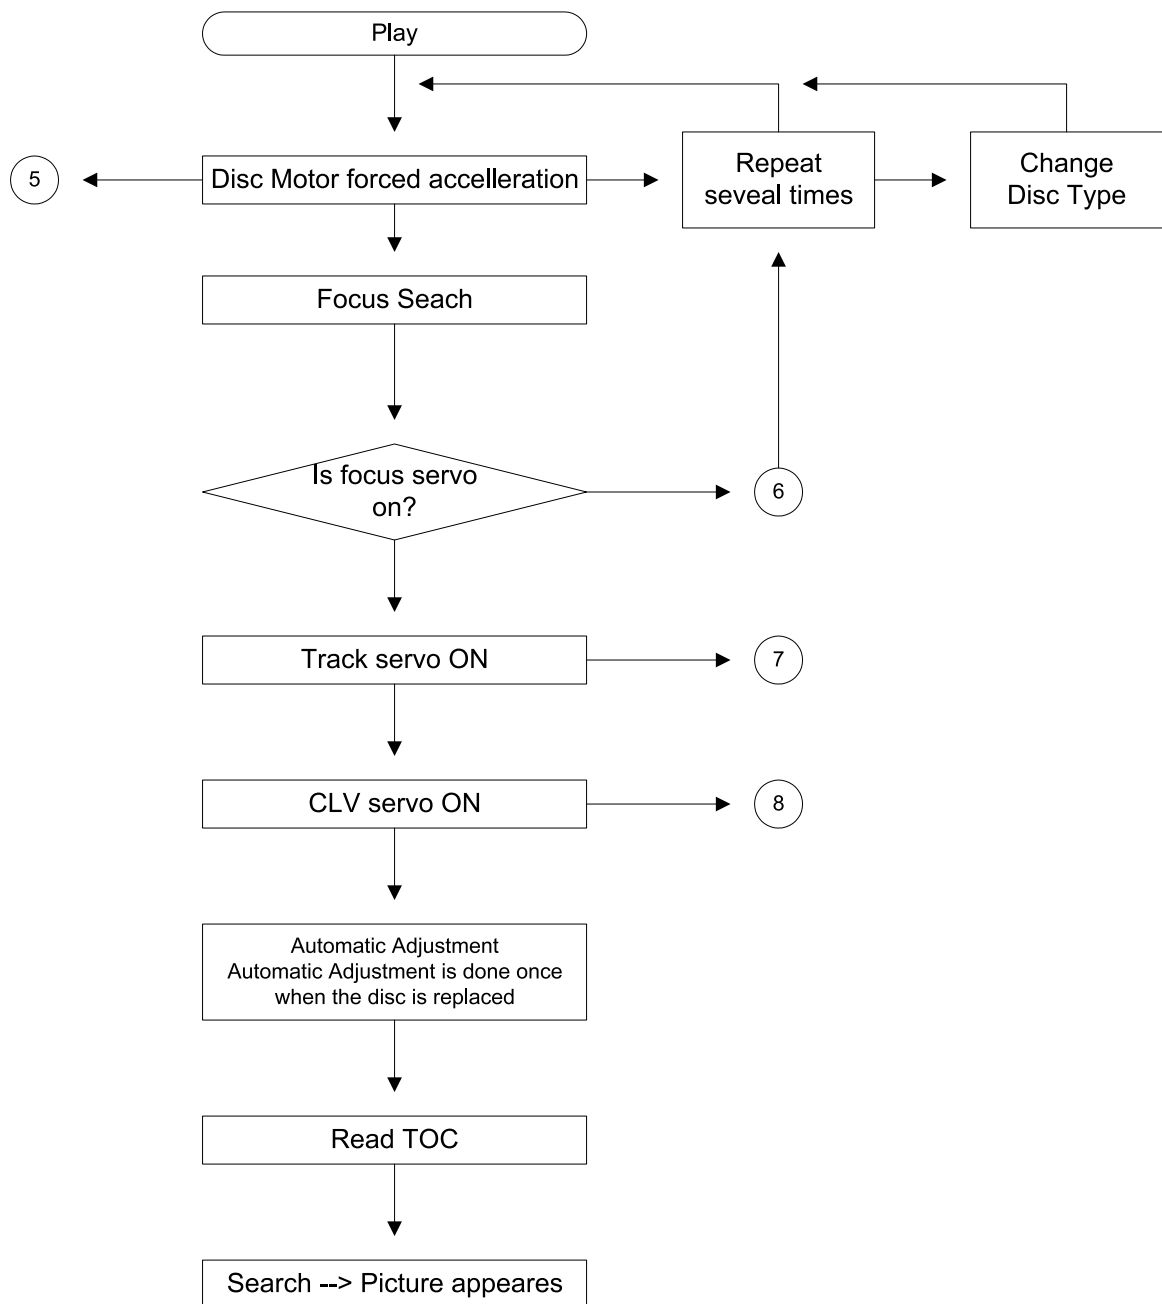


3. PickUp Head Initial Postion

PickUp Head Initial Postion


1. Move Pick Up Head to inner drection until pin4 of CN3="L"
2. If pin4 of CN3="L", then move Pick Up Head to outer drection for a short time.
3. Ture On the Laser of Pick Up Head to judge that disc is presence or not.

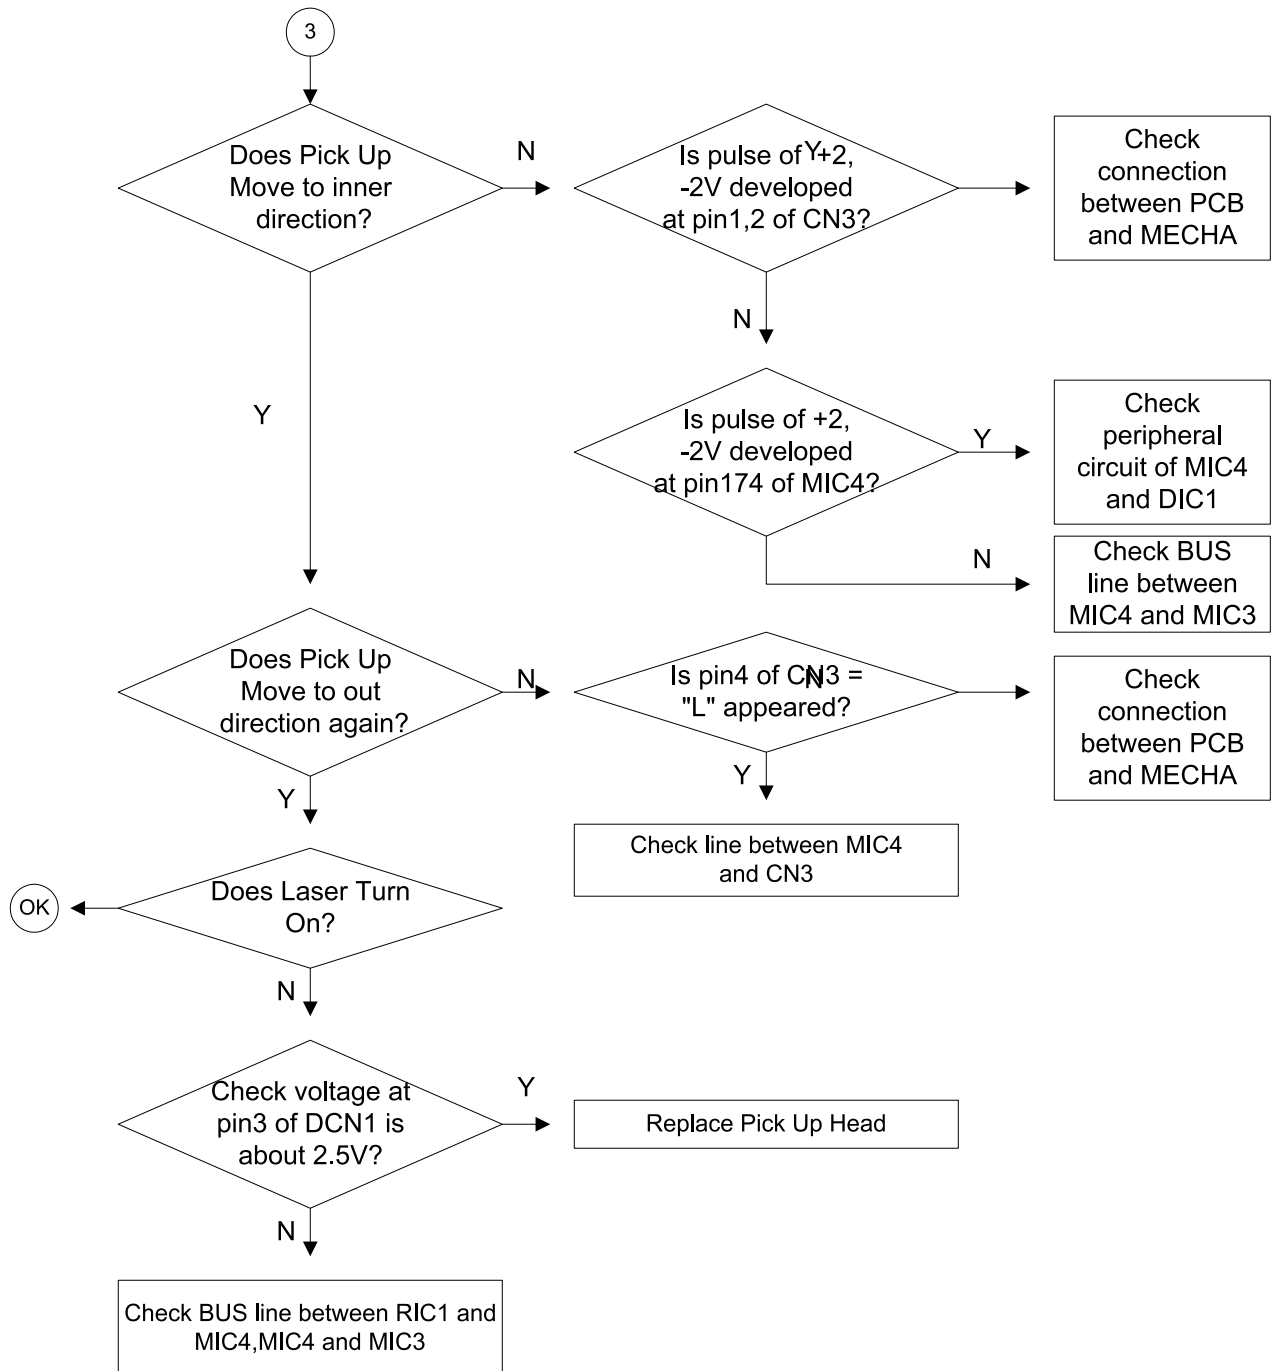


4. Disc Presence/Absence Judgment

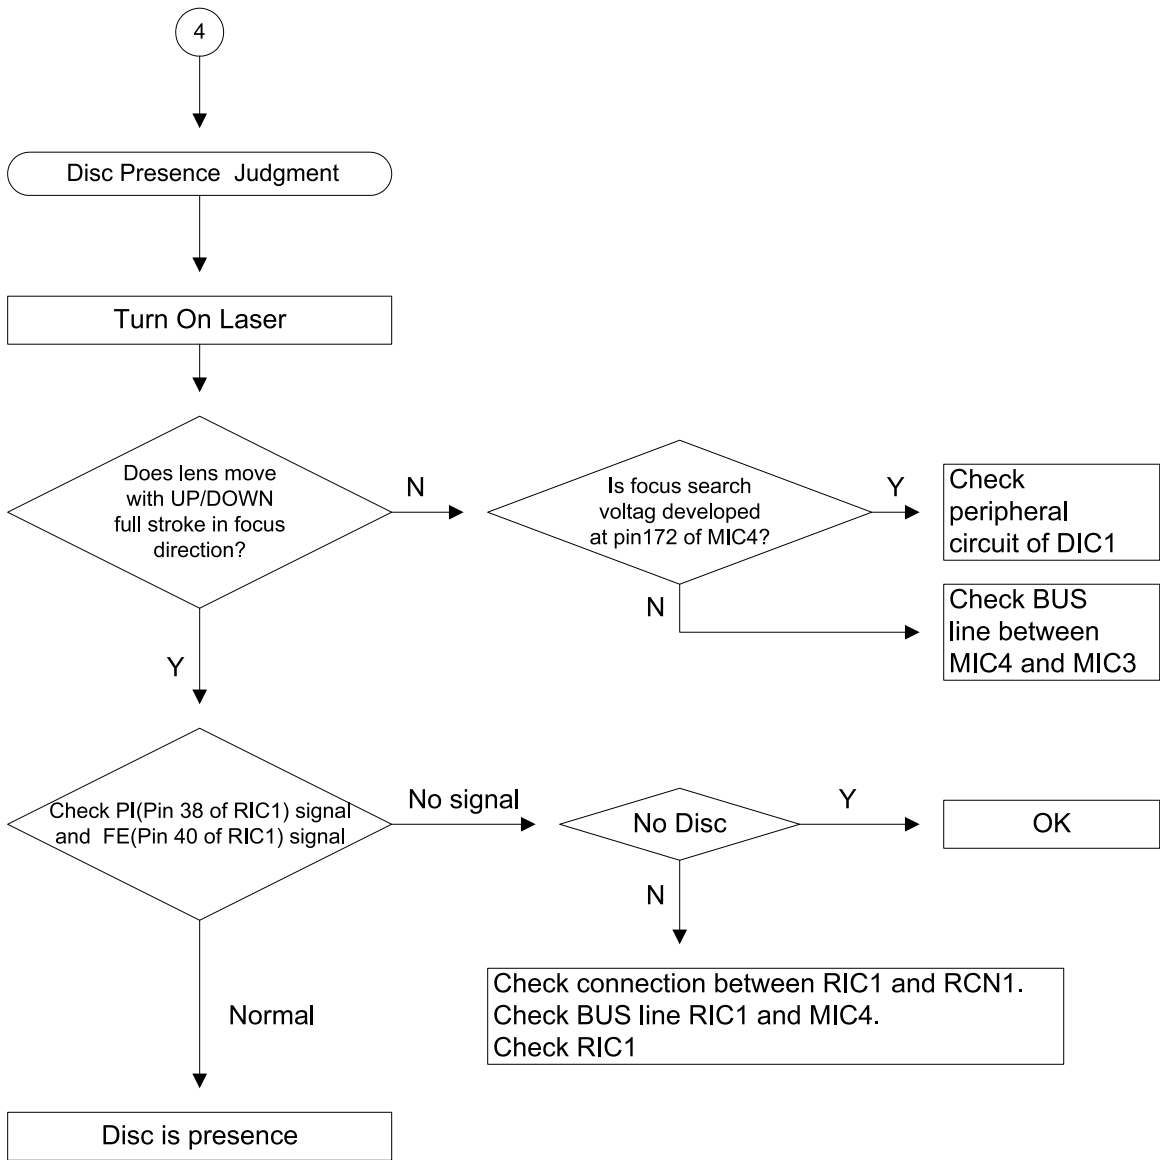



5. Disc Motor Does Not Rotate

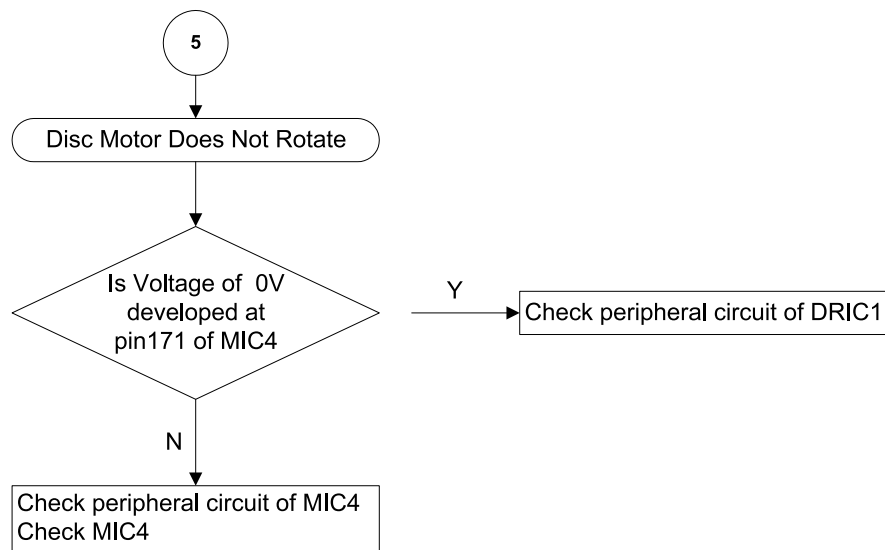


6. Focus Servo does not Work

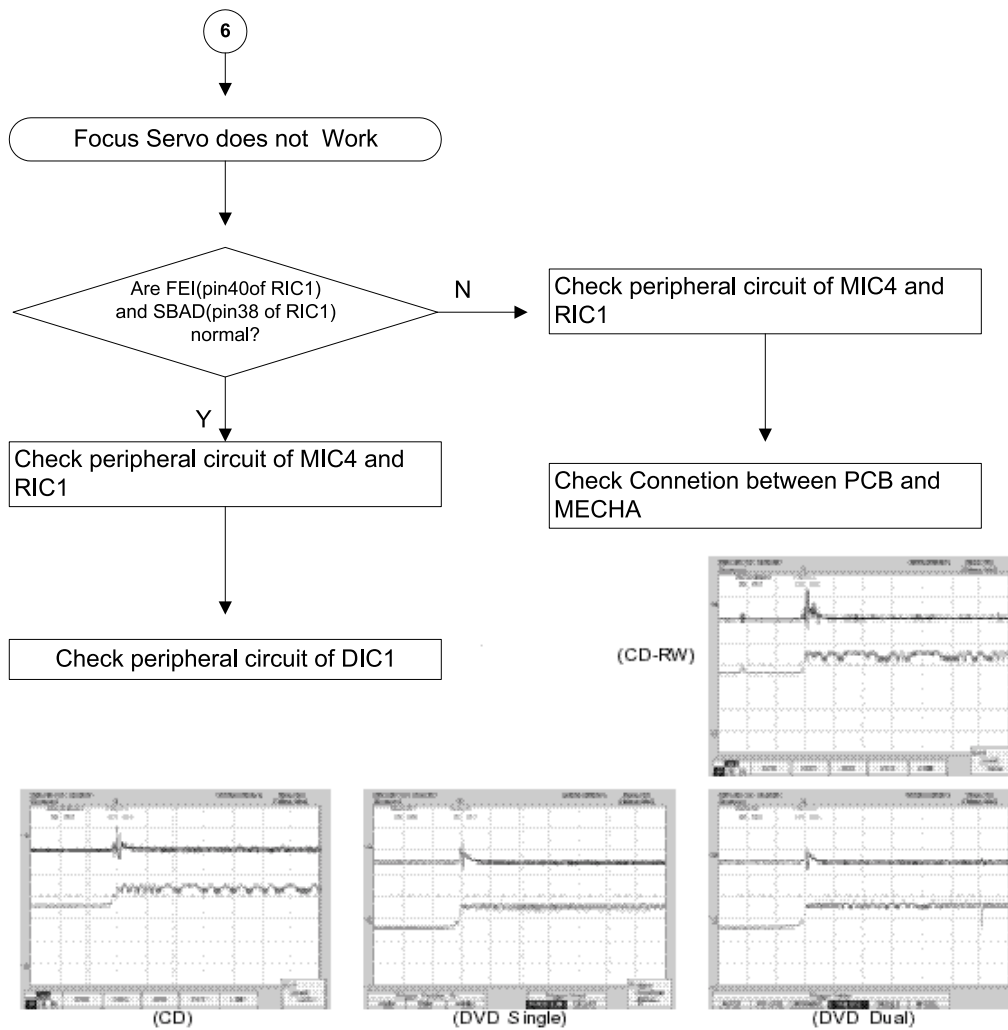


7. Tracking Servo Does Not Work

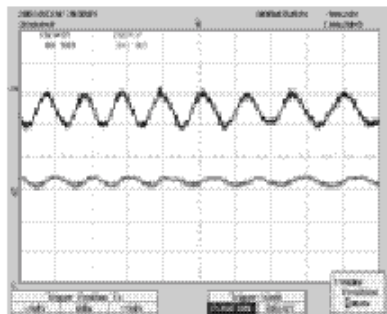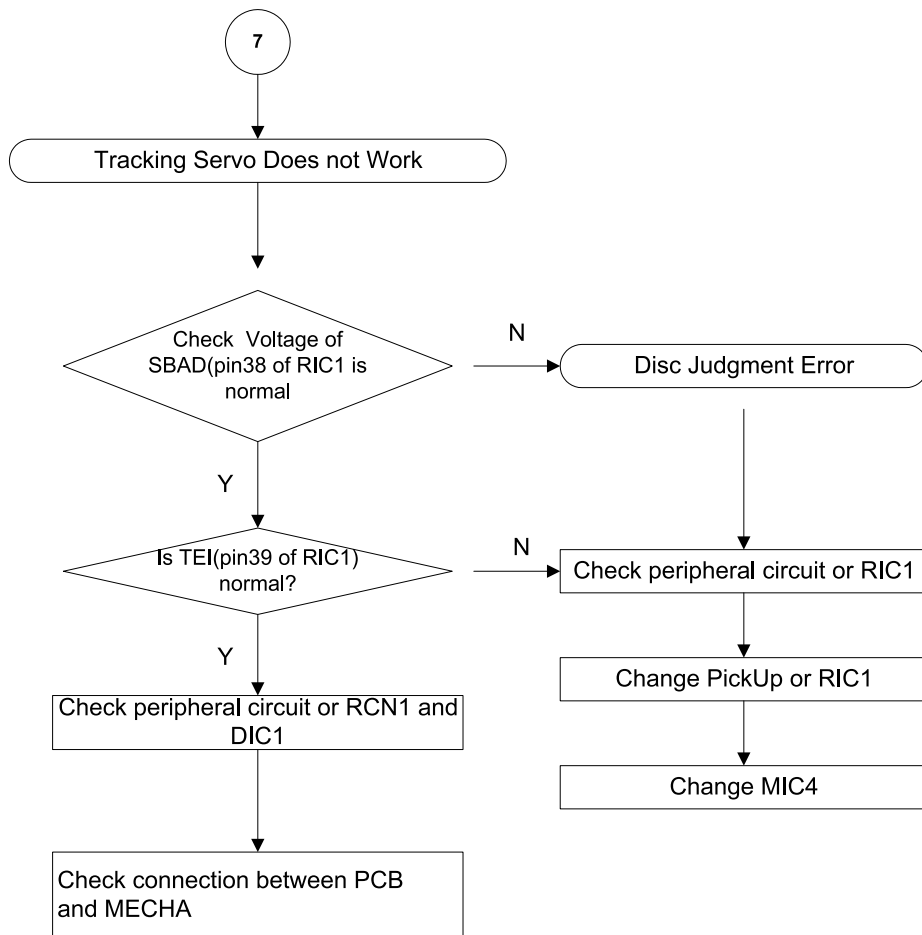


(CD)

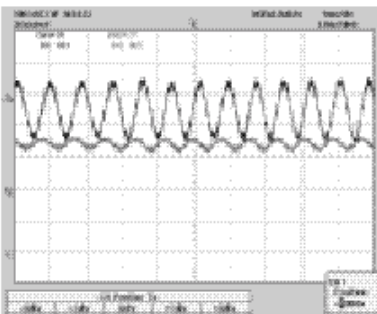

(CD-RW)


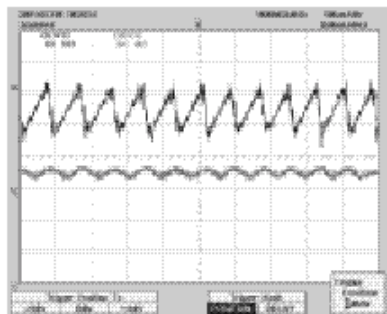


(DVD Single)

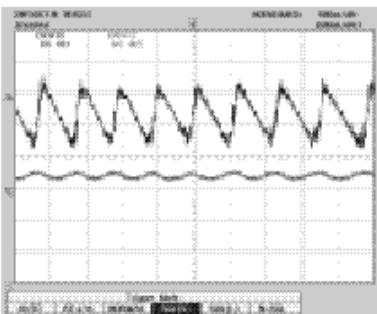


(DVD Dual)

8. CLV Servo Does Not Work

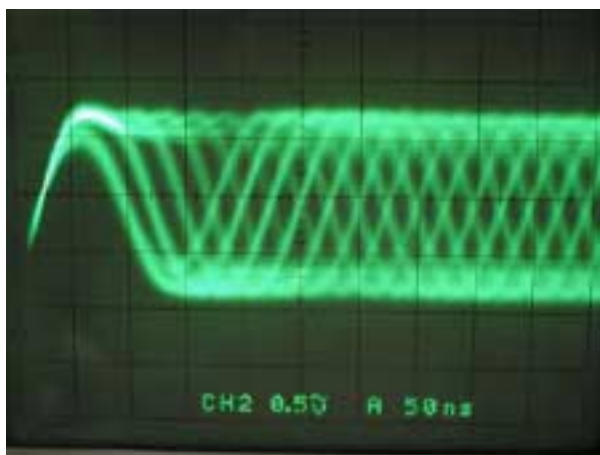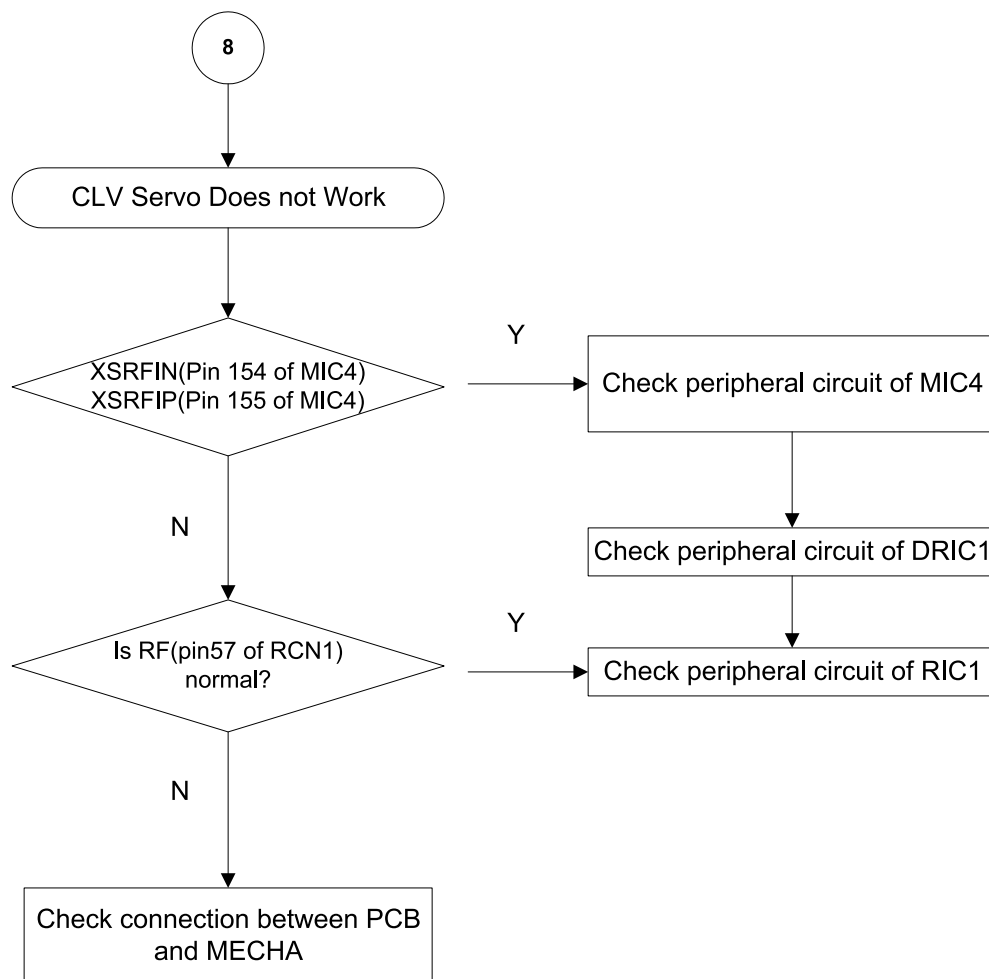


RF Signal

1. Initial operation after NO

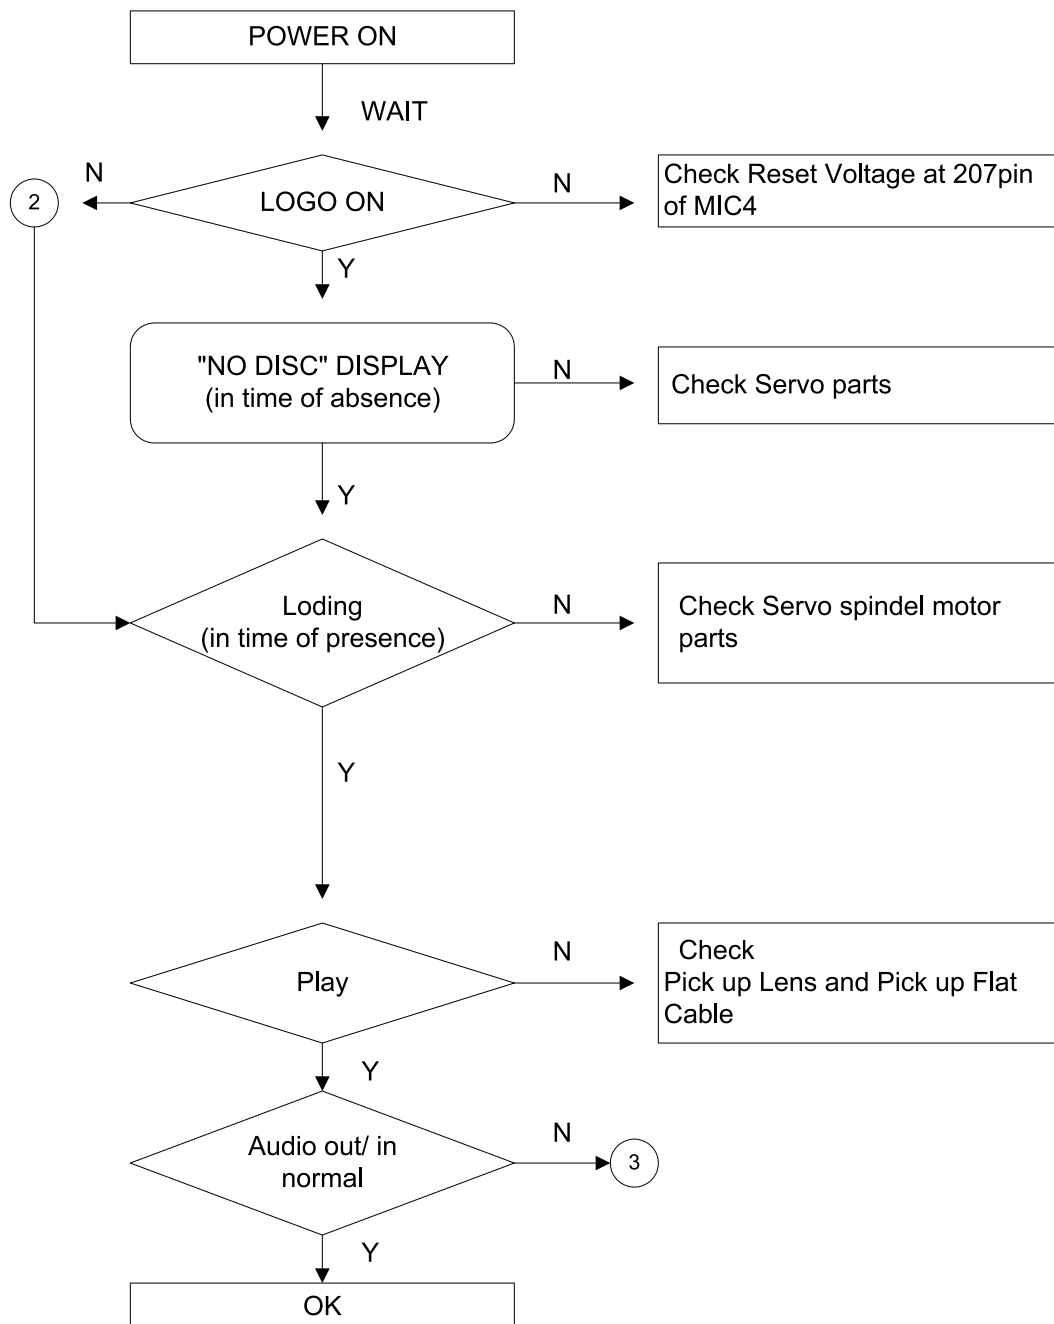

2. Logo operation

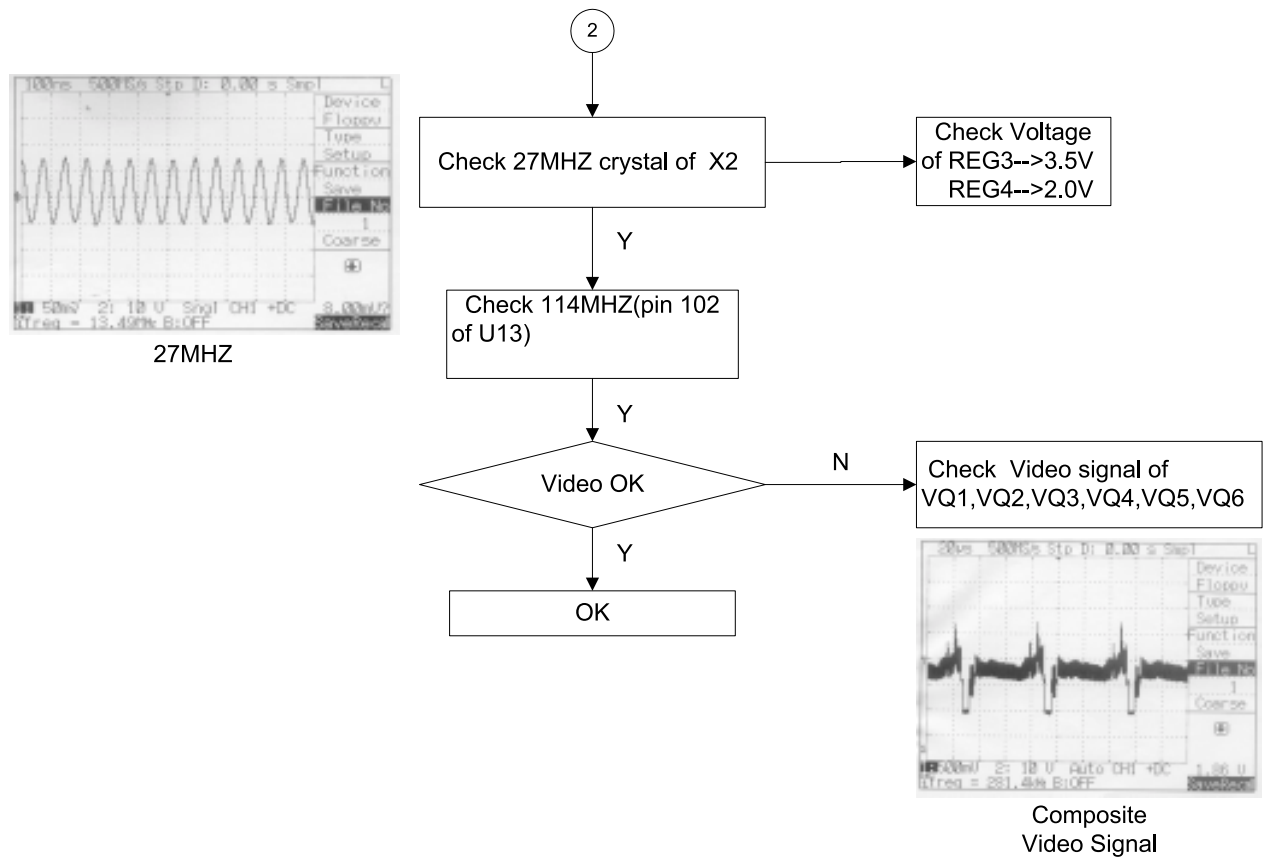

3. Audio operation

