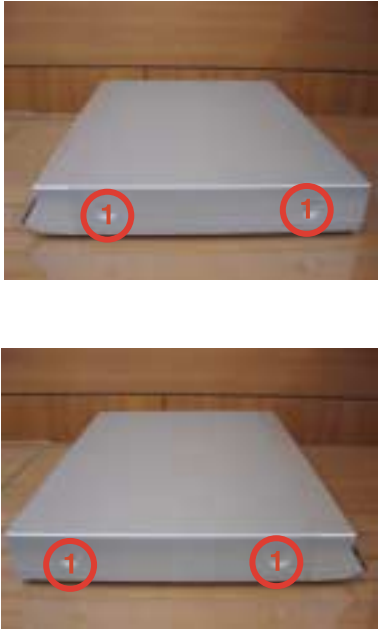
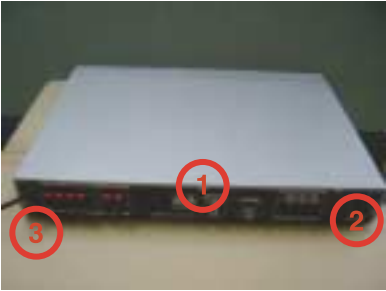
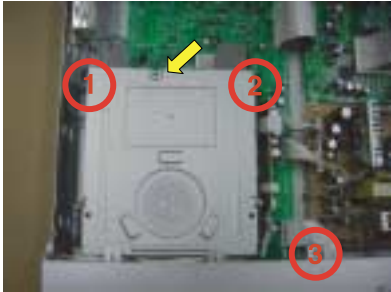


5. How to disassemble

* CAUTIONS

- 1. To avoid damage to the product, follow the disassembly method in the Service Manual.
- 2. As some Semiconductor devices are very sensitive to static, ensure that all procedures are adhered to when handling ESD's.

Order (Description)	Picture
1. Unfasten 4 screw on the side of CABINET TOP. * Screw 1,2 SPEC : BWH 3*8 SILVER	
2. Unfasten 3 screw(1,2,3,4) on the side of CABINET REAR.	
3. Unfasten 4 screw(1,2,3) and lift the back of the MECHA. * Screw 1,2,3,4 SPEC : BH 3*20 YELLOW	

Order (Description)	Picture
4. Separate 1 cable in the circle.	
5. Unfasten 2 screw(1,2) on the Front. * Screw 1,2 SPEC : FH 3*10 BLACK	 
6. Unfasten 2 screw(1,2) on the CABINET-BOTTOM. * Screw 1,2 SPEC : FH 3*10 YELLOW Turn over the hook at 2 places of the bottom and Separate ASSY-FRONT.	