 
 


SERVICE MANUAL



DVD VIDEO PLAYER

SD-220EB
SD-220EE
SD-220EL
SD-120EB
SD-120EE
SD-120EL
SD-222EE



SD-220EB

LASER BEAM CAUTION LABEL



98764189


When the power supply is being turned on, you may not remove this laser cautions label. If it removes, radiation of a laser may be received.

PREPARATION OF SERVICING

Pickup Head consists of a laser diode that is very susceptible to external static electricity.

Although it operates properly after replacement, if it was subject to electrostatic discharge during replacement, its life might be shortened. When replacing, use a conductive mat, soldering iron with ground wire, etc. to protect the laser diode from damage by static electricity.

And also, the LSI and IC are same as above.

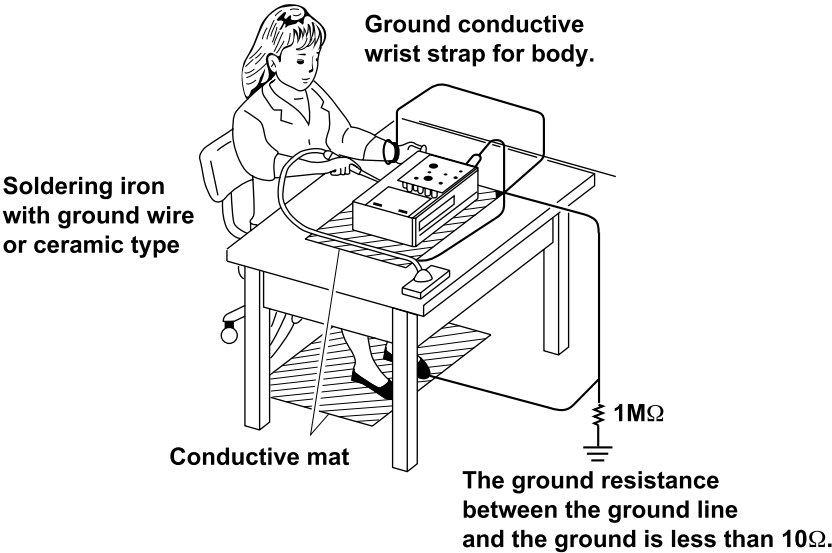

CONTENTS

SECTION 1 GENERAL DESCRIPTIONS

- | | |
|---|--|
| <ul style="list-style-type: none">1. OPERATING INSTRUCTIONS (SD-220EB)<ul style="list-style-type: none">Specifications2. LOCATION OF MAIN PARTS AND MECHANISM PARTS<ul style="list-style-type: none">2-1. Location of Main Parts2-2. Location of Mechanism Parts<ul style="list-style-type: none">2-2-1. Type A2-2-2. Type B | <ul style="list-style-type: none">3. TROUBLESHOOTING<ul style="list-style-type: none">3-1. Main Circuit<ul style="list-style-type: none">3-1-1. Servo System3-1-2. Location Diagram of Servo Test Point |
|---|--|

SECTION 2 PART REPLACEMENT AND ADJUSTMENT PROCEDURES

- | | |
|---|--|
| <ul style="list-style-type: none">1. Replacement of Mechanical Parts (Type A)<ul style="list-style-type: none">1-1. Cabinet Replacement<ul style="list-style-type: none">1-1-1. Top Cover1-1-2. Tray Panel1-1-3. Front Panel1-1-4. Tray1-1-5. Rear Panel1-2. PC Board Replacement<ul style="list-style-type: none">1-2-1. Main PC Board1-2-2. Power PC board1-2-3. Output PC Board1-2-4. Front PC Board (SD-220)1-2-5. Front PC Board (SD-120)1-3. Mechanism Parts<ul style="list-style-type: none">1-3-1. Mechanism Chassis Assembly | <ul style="list-style-type: none">2. Replacement of Mechanical Parts (Type B)<ul style="list-style-type: none">2-1. Cabinet Replacement<ul style="list-style-type: none">2-1-1. Top Cover2-1-2. Clamper Stay2-1-3. Tray Panel2-1-4. Front Panel and Tray2-1-5. Rear Panel2-2. PC Board Replacement<ul style="list-style-type: none">2-2-1. Main PC Board2-2-2. Power PC board2-2-3. Output PC Board2-2-4. Front PC Board (SD-220)2-2-5. Front PC Board (SD-120)2-3. Mechanism Parts<ul style="list-style-type: none">2-3-1. Mechanism Chassis Assembly |
|---|--|

SECTION 3 SERVICING DIAGRAMS

- | | |
|---|---|
| <ul style="list-style-type: none">1. STANDING PC BOARDS FOR SERVICING2. CIRCUIT SYMBOLS AND SUPPLEMENTARY EXPLANATION<ul style="list-style-type: none">2-1. Precautions for Part Replacement2-2. Solid Resistor Indication2-3. Capacitance Indication2-4. Inductor Indication2-5. Waveform and Voltage Measurement2-6. Others3. PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM4. BLOCK DIAGRAMS<ul style="list-style-type: none">4-1. Overall Block Diagram4-2. Power Supply Block Diagram4-3. Front Display, Power Switch Block Diagram4-4. Main Block Diagrams | <ul style="list-style-type: none">5. CIRCUIT DIAGRAMS<ul style="list-style-type: none">5-1. Power Supply Circuit Diagram5-2. Front Display, Power Switch Circuit Diagram5-3. Main Circuit Diagram5-4. Output-RGB Circuit Diagram5-5. Motor System Circuit Diagrams6. PC BOARDS<ul style="list-style-type: none">6-1. Power Supply PC Board6-2. Output-RGB PC Board6-3. Main PC Board6-4. Front Display PC Board |
|---|---|

SECTION 4 PARTS LIST

SAFETY PRECAUTION

NOTICE

ABBREVIATIONS

- 1. Integrated Circuit (IC)
- 2. Capacitor (Cap)
- 3. Resistor (Res)

4. EXPLODED VIEWS

- 4-1. Packing Assembly
- 4-2. Chassis Assembly (SD-220: Type A)
- 4-3. Chassis Assembly (SD-120: Type A)
- 4-4. Mechanism Assembly (Type A)
- 4-5. Chassis Assembly (SD-220: Type B)
- 4-6. Chassis Assembly (SD-120: Type B)
- 4-7. Mechanism Assembly (Type B)

5. PARTS LIST

SECTION 1 GENERAL DESCRIPTIONS

1. OPERATING INSTRUCTIONS (SD-220EB)

SAFETY PRECAUTIONS

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

CAUTION: This Digital Video Disc Player employs a Laser System.
To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location - see service procedure.

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure.
Visible and invisible laser radiation when open and interlocks defeated.
DO NOT STARE INTO BEAM.



In the spaces provided below, record the Model and Serial No. located on the rear panel of your DVD video player.

Model No. _____

Serial No. _____

Retain this information for future reference.

The following information applies only to the model for U.K.

General Information

If the socket outlets in your home are not suitable for the plug supplied with this unit, the plug must be cut off and an appropriate one fitted.

The plug severed from this mains lead must be destroyed as it is hazardous if inserted into a live socket.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL

BROWN: LIVE

As the colours of the wires in the mains lead of this unit may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire that is coloured blue must be connected to the terminal in the plug which is marked with the letter N or coloured black.


The wire that is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

Do not connect either wire to the earth terminal which is marked by the letter E or by the safety earth symbol $\perp$ or coloured green or green-and-yellow.

Use a 5A fuse which is approved by ASTA or BSI to BS1362.
Always replace the fuse cover after changing the fuse.

Location of the required label

The rating plate and the safety caution are on the rear of the unit.

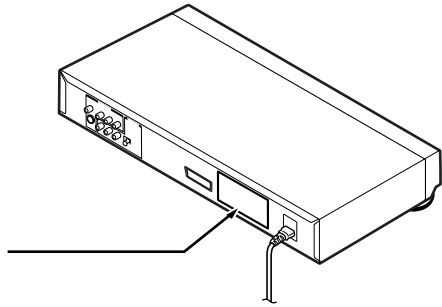


IMPORTANT SAFETY INSTRUCTIONS

CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS GIVEN IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.

1. Read these instructions.

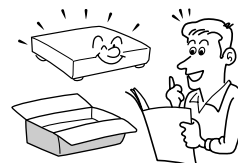


2. Keep these instructions.

3. Heed all warnings.

4. Follow all instructions.


5. Do not use this apparatus near water.

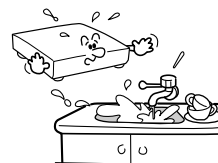


6. Clean only with dry cloth.



7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

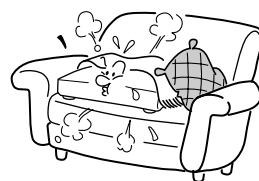

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

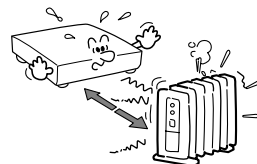

9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.



10. Only use attachments/accessories specified by the manufacturer.

11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.




12. Unplug this apparatus during lightning storms or when unused for long periods of time.



IMPORTANT SAFETY INSTRUCTIONS


13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

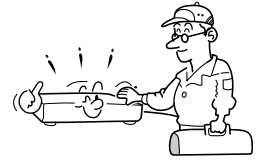

14. When you use headphones, keep the volume at a moderate level. If you use the headphones continuously with high volume sound, it may cause hearing damage.



15. Do not overload wall outlets; extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

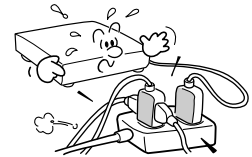


16. Never insert objects of any kind into this apparatus through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the apparatus.



17. Keep your fingers well clear of the disc tray as it is closing. Neglecting to do so may cause serious personal injury.



18. Do not place a heavy object on or step on the apparatus. The object may fall, causing serious personal injury and serious damage to the apparatus.

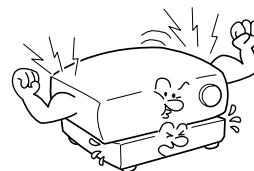

19. Do not use a cracked, deformed, or repaired disc. These discs are easily broken and may cause serious personal injury and apparatus malfunction.



Precautions

Notes on handling

- When shipping the DVD video player, the original shipping carton and packing materials come in handy. For maximum protection, repack the unit as it was originally packed at the factory.
- Do not use volatile liquids, such as insect spray, near the DVD video player. Do not leave rubber or plastic products in contact with the DVD video player for a long time. They will leave marks on the finish.
- The top and rear panels of the DVD video player may become warm after a long period of use. This is not a malfunction.
- When the DVD video player is not in use, be sure to remove the disc and turn off the power.
- If you do not use the DVD video player for a long period, the unit may not function properly in the future. Turn on and use the DVD video player occasionally.

Notes on locating

- Place the DVD video player on a level surface. Do not use it on a shaky or unstable surface such as a wobbling table or inclined stand. The loaded disc may come off the proper position and cause damage to the DVD video player.
- When you place this DVD video player near a TV, radio, or VTR, the playback picture may become poor and the sound may be distorted. In this case, place the DVD video player away from the TV, radio, or VTR.

Notes on cleaning

Use a soft, dry cloth for cleaning.

- For stubborn dirt, soak the cloth in a weak detergent solution, wring well and wipe. Use a dry cloth to wipe it dry.
Do not use any type of solvent, such as thinner and benzene, as they may damage the surface of the DVD video player.
- If you use a chemical saturated cloth to clean the unit, follow that product's instructions.


To obtain a clear picture

The DVD video player is a high technology, precision device. If the optical pick-up lens and disc drive parts are dirty or worn down, the picture quality becomes poor. To obtain a clear picture, we recommend regular inspection and maintenance (cleaning or parts replacement) every 1,000 hours of use depending on the operating environment. For details, contact your nearest dealer.

Notes on moisture condensation


Moisture condensation damages the DVD video player. Please read the following carefully.

Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day. Drops of water form on the outside of the glass. In the same way, moisture may condense on the optical pick-up lens inside this unit, one of the most crucial internal parts of the DVD video player.

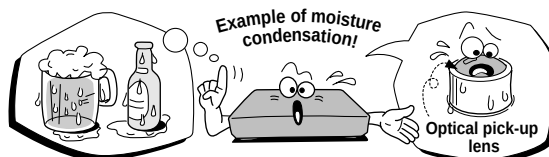


■ **Moisture condensation occurs during the following cases.**

- When you bring the DVD video player directly from a cold place to a warm place.
- When you use the DVD video player in a room where you just turned on the heater, or a place where the cold wind from the air conditioner directly hits the unit.
- In summer, when you use the DVD video player in a hot and humid place just after you move the unit from an air conditioned room.
- When you use the DVD video player in a humid place.

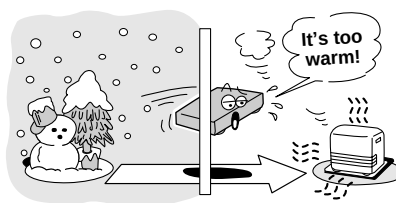


■ **Do not use the DVD video player when moisture condensation may occur.**

If you use the DVD video player in such a situation, it may damage discs and internal parts. Remove the disc, connect the power cord of the DVD video player to the wall outlet, turn on the DVD video player, and leave it for two or three hours. After two or three hours, the DVD video player will have warmed up and evaporated any moisture. Keep the DVD video player connected to the wall outlet and moisture condensation will seldom occur.

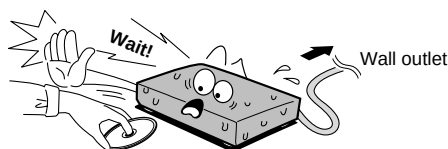

On handling discs

- Do not touch the playback side of the disc.

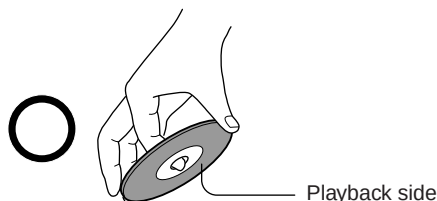


- Do not attach paper or tape to discs.



On cleaning discs

- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the center outwards with a soft cloth. Always keep the disc clean.

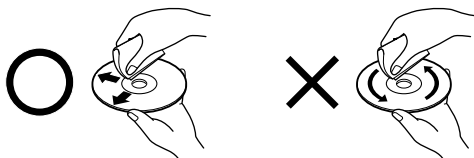

- If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened soft cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray for vinyl LPs. It may damage the disc.


On storing discs

- Do not store discs in a place subject to direct sunlight or near heat sources.
- Do not store discs in places subject to moisture and dust such as a bathroom or near a humidifier.
- Store discs vertically in a case. Stacking or placing objects on discs outside of their case may cause warping.


Structure of disc contents

Normally, DVD video discs are divided into titles, and the titles are sub-divided into chapters. VIDEO CDs and audio CDs are divided into tracks.

DVD video disc

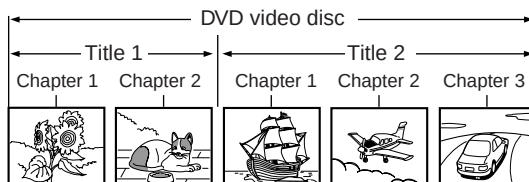

VIDEO CD/audio CD

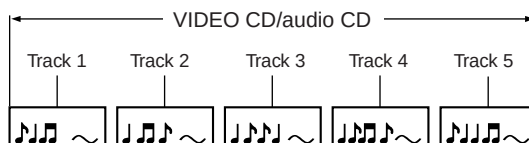

Each title, chapter or track is assigned a number, which is called "title number", "chapter number" or "track number" respectively.

There may be discs that do not have these numbers.

Notes on copyright

It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public, and rent copyrighted material without permission.

DVD video discs are copy protected, and any recordings made from these discs will be distorted.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Notes on Discs (continued)

About this owner's manual

This owner's manual explains the basic instructions of this DVD video player. Some DVD video discs are produced in a manner that allows specific or limited operation during playback. As such, the DVD video player may not respond to all operating commands. This is not a defect in the DVD video player. Refer to instruction notes of discs.

“” may appear on the TV screen during operation. A “” means that the operation is not permitted by the DVD video player or the disc.

Notes on region numbers

The region number of this DVD video player is 2. If region numbers, which stand for their playable area, are printed on your DVD video disc and you do not find  or , disc playback will not be allowed by the player. (In this case, the DVD video player will display a message on-screen.)

On VIDEO CDs

This DVD video player supports VIDEO CDs equipped with the PBC (Version 2.0) function. (PBC is the abbreviation of Playback Control.) You can enjoy two playback variations depending on types of discs.

- **VIDEO CD not equipped with PBC function (Version 1.1)**

Sound and movie can be played on this DVD video player in the same way as an audio CD.

- **VIDEO CD equipped with PBC function (Version 2.0)**

In addition to operation of a VIDEO CD not equipped with the PBC function, you can enjoy playback of interactive software with search function by using the menu displayed on the TV screen (Menu Playback). Some of the functions described in this owner's manual may not work with some discs.

Playable discs

This DVD video player can play the following discs.

	Disc Mark	Contents	Disc Size	Maximum playback time
DVD video discs		Audio + video (moving pictures)	12 cm	Approx. 4 hours (single sided disc)
				Approx. 8 hours (double sided disc)
			8 cm	Approx. 80 minutes (single sided disc)
				Approx. 160 minutes (double sided disc)
VIDEO CDs		Audio + video (moving pictures)	12 cm	Approx. 74 minutes
			8 cm	Approx. 20 minutes
Audio CDs		Audio	12 cm	Approx. 74 minutes
			8 cm (CD single)	Approx. 20 minutes
The following discs are also available. ● DVD-R discs of DVD video format ● CD-R/CD-RW discs of CD-DA or VIDEO CD format Some of these discs may be incompatible.				

- You cannot play discs other than those listed above.
- You cannot play DVD-RAM discs or non-standardized discs, etc., even if they may be labeled as above.
- This DVD video player uses the PAL/NTSC colour system, and cannot play DVD video discs recorded in any other colour system (SECAM, etc.).

Table of Contents

Introduction

● SAFETY PRECAUTIONS	2
● IMPORTANT SAFETY INSTRUCTIONS ...	4
● Precautions	8
● Notes on Discs	9
Notes on region numbers	10
● Table of Contents	11
● Identification of Controls	12
Front panel	12
Rear panel	12
DVD display	13
Remote control	14
Loading batteries	15
Operating with the remote control	15

Connections

● Connecting to a TV	18
Connecting to a TV (Using the SCART socket)	18
Connecting to a TV (Using the component video jacks)	18
Connecting to a TV (Using the phono type jacks)	19
● Connecting to Optional Equipment	20
Connecting to an amplifier equipped with a Dolby Digital decoder	21
Connecting to an amplifier equipped with Dolby Pro Logic Surround	21
Connecting to an amplifier equipped with a DTS decoder	22
Connecting to an amplifier equipped with an MPEG2 audio decoder	22
Connecting to an amplifier equipped with a digital audio input	23

Basic playback

● Playing a Disc	26
Basic playback	26
● Variable Speed Playback	28
Playing in fast reverse or fast forward directions	28
Playing frame by frame	28
Playing in slow-motion	29
Resuming playback from the same location ...	29
● Locating a Desired Section	30
Locating a title using the top menu	30
Locating a desired section by entering the corresponding number	31
Locating a specific chapter or track	31
● Playing an MP3 Encoded CD	32
Playing an MP3 encoded CD	32

Advanced playback

● Accessing a Specific Location Directly ...	34
Entering the time of the desired location	34
● Playing Repeatedly	35
Repeating a title, chapter, or track	35
Repeating a specific segment	35
● Playing in a Favorite Order	36
Setting titles, chapters, or tracks in a favorite order	36
● Playing in Random Order	37
Playing titles, chapters or tracks in random order	37
● Zooming a Picture	38
Zooming a picture	38
● Selecting the Picture Enhancement (E.P.M.)	39
Selecting the picture enhancement	39
● Selecting the Sound Enhancement (E.A.M.)	40
Selecting the sound enhancement	40
● Selecting the Camera Angle	41
Changing the camera angle	41
● Selecting Subtitles	42
Selecting a subtitle language	42
● Selecting a Language	43
Selecting a playback audio setting	43
● Operating in the On-screen Display Mode	44
Operating in the on-screen display mode	44

Function setup

● Customizing the Function Settings	48
Setting procedure	48
Setting details	50
● Table of Languages	57


Others

● Before Calling Service Personnel	60
● Specifications	61


Identification of Controls

See the page in  for details.

Front panel

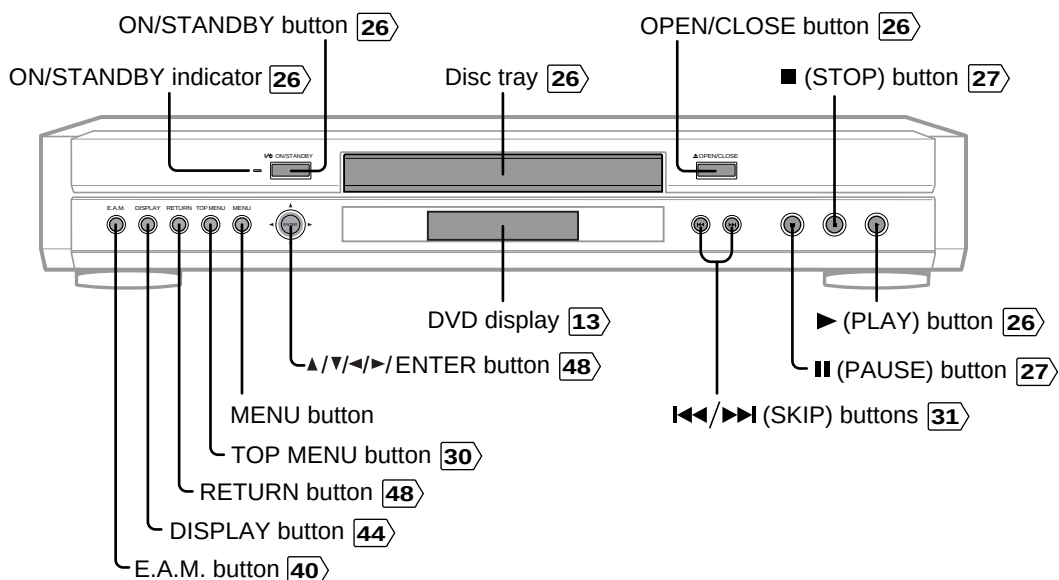

Rear panel

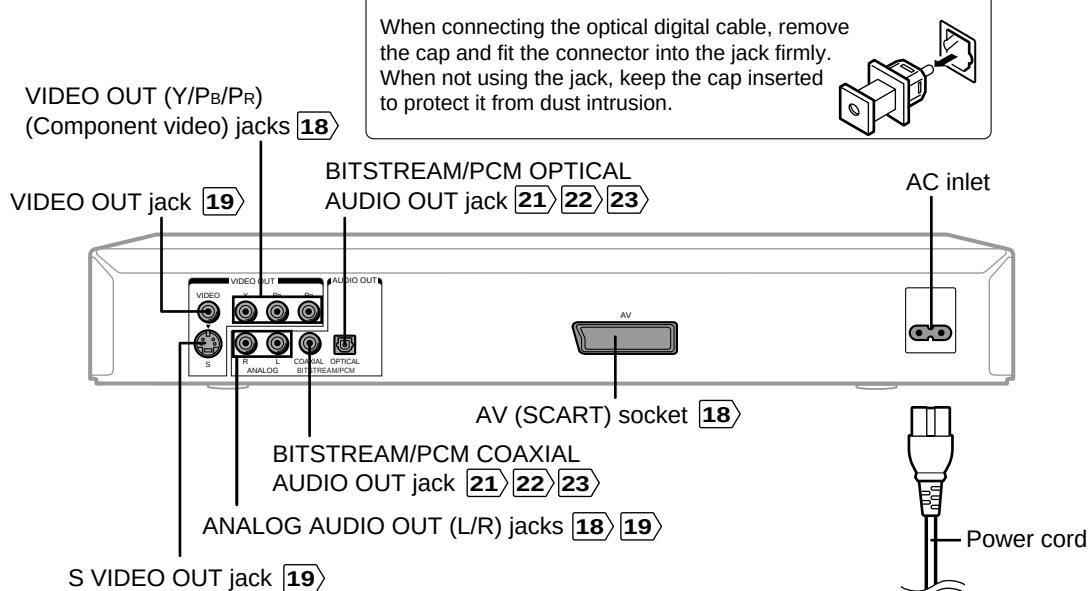


DVD display

- Pressing of the FL DIM button on the remote control changes the brightness of the display.



Normal → Dimmed → Off

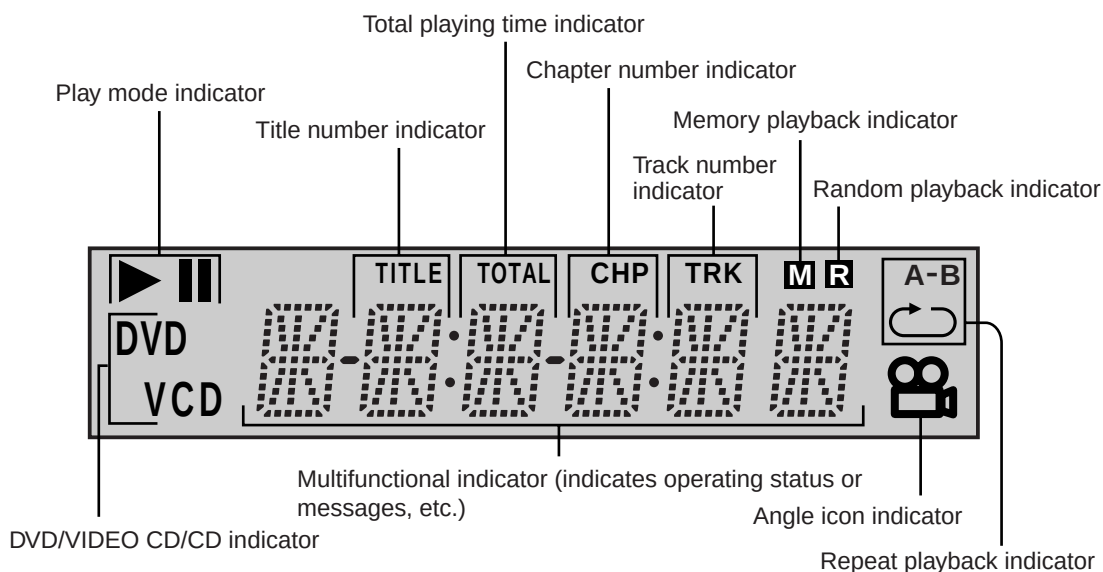


- When you start playback, the elapsed time indicators appear. Pressing the FL SELECT button switches them to the title/chapter/track number indicators. Some discs may not permit this operation.

The indicators vary depending on the kinds of discs you play.

DVD video disc

- During playback:

 Example



Playing chapter 3 of title 2

Some discs may not display chapter numbers or elapsed time.

VIDEO CD

- During playback:

Example



Playing track 6

Some discs may not display track numbers or elapsed time.

Audio CD

- During playback:

Example




Playing track 6

Identification of Controls (continued)

The instructions in this manual describe the functions on the remote control. See the page in  for details.

Remote control

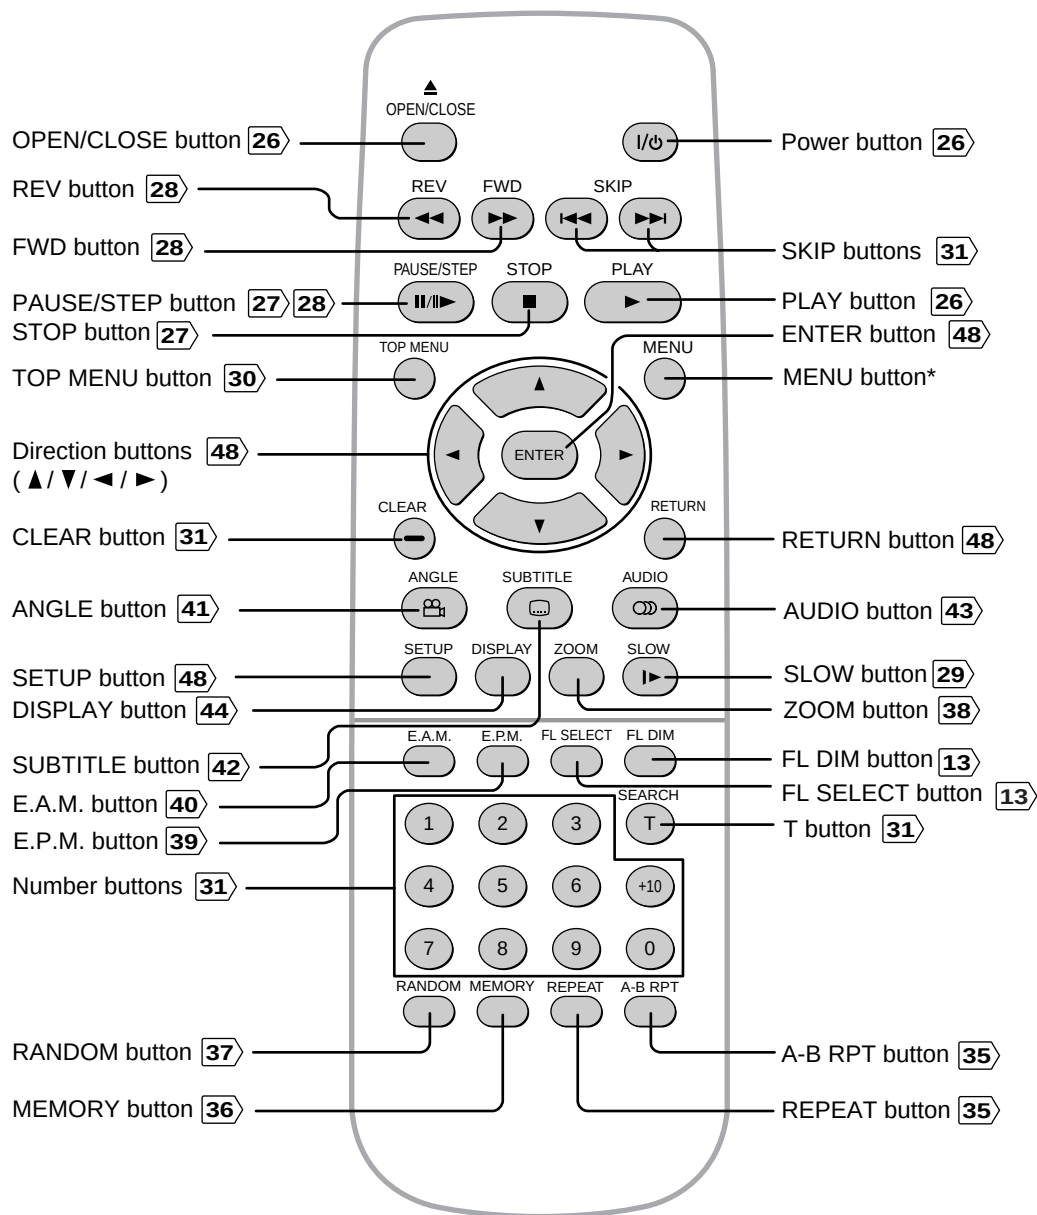

* MENU button

Use the MENU button to display the menu included on many DVD video discs. To operate a menu, follow the instructions in "Locating a title using the top menu."

30


■ About the illustrations of the battery compartment

There are two types of battery compartment in the supplied remote controls. (This does not mean a difference in performance between the two.)


Refer to either illustration depending on the actual remote control.

Loading batteries

1 Open the cover.

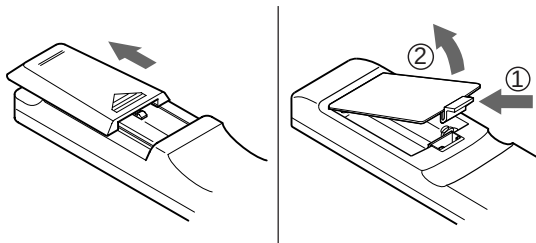

2 Insert batteries (R6 size).

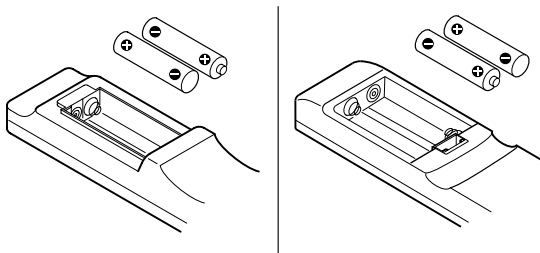

Make sure to match the + and – on the batteries to the marks inside the battery compartment.

3 Close the cover.


Notes on batteries

Improper use of batteries may cause battery leakage and corrosion. To operate the remote control correctly, follow the instructions below.

- Do not insert batteries into the remote control in the wrong direction.
- Do not charge, heat, open, or short-circuit the batteries. Do not throw batteries into a fire.
- Do not leave dead or exhausted batteries in the remote control.
- Do not use different types of batteries together, or mix old and new batteries.
- If you do not use the remote control for a long period of time, remove the batteries to avoid possible damage from battery corrosion.
- If the remote control does not function correctly or if the operating range becomes reduced, replace all batteries with new ones.
- If battery leakage occurs, wipe the battery liquid from the battery compartment, then insert new batteries.

Operating with the remote control

Point the remote control at the remote sensor and press the buttons.

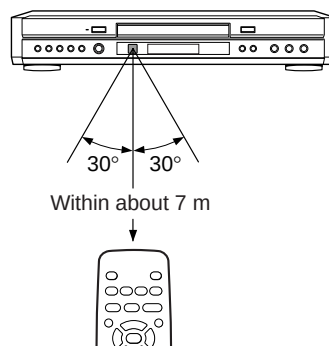

Distance: About 7 m from the front of the remote sensor

Angle: About 30° in each direction of the front of the remote sensor

* Do not expose the remote sensor of the DVD video player to a strong light source such as direct sunlight or other illumination. If you do so, you may not be able to operate the DVD video player via the remote control.

Notes on the remote control

- Direct the remote control at the remote sensor of the DVD video player.
- Do not drop or give the remote control a shock.
- Do not leave the remote control near an extremely hot or humid place.
- Do not spill water or put anything wet on the remote control.
- Do not open the remote control.



Connections

Read this chapter first to make all necessary preparations.

- **Connecting to a TV
(Using the SCART socket)**
- **Connecting to a TV
(Using the component video jacks)**
- **Connecting to a TV
(Using the phono type jacks)**
- **Connecting to an amplifier
equipped with a Dolby Digital
decoder**
- **Connecting to an amplifier
equipped with Dolby Pro Logic
Surround**
- **Connecting to an amplifier
equipped with a DTS decoder**
- **Connecting to an amplifier
equipped with an MPEG2 audio
decoder**
- **Connecting to an amplifier
equipped with a digital audio
input**

Connecting to a TV


Connect the DVD video player to your TV.

For details of output sound, see [43](#).

Connect the DVD video player directly to your TV. If you connect the DVD video player to a VTR, TV/VTR combination or video selector, the playback picture may be distorted as DVD video discs are copy protected.

Connecting to a TV (Using the SCART socket)


- Normal TV
- TV compatible with S video signals
- RGB monitor

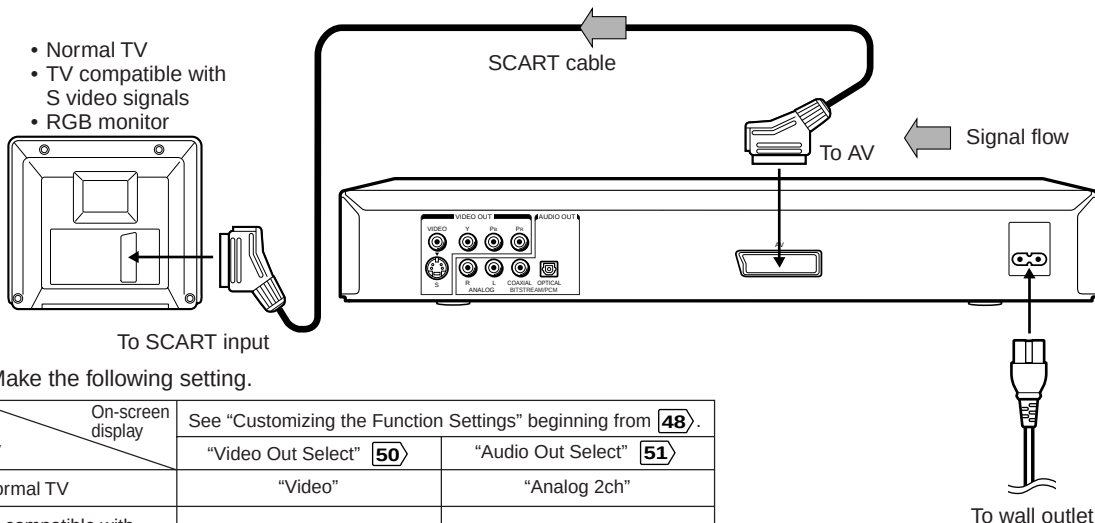

- Make the following setting.

On-screen display	See "Customizing the Function Settings" beginning from 48 .	
TV	"Video Out Select" 50	"Audio Out Select" 51
Normal TV	"Video"	"Analog 2ch"
TV compatible with S video signals	"S Video"	"Analog 2ch"
RGB monitor	"RGB"	"Analog 2ch"

Connecting to a TV (Using the component video jacks)

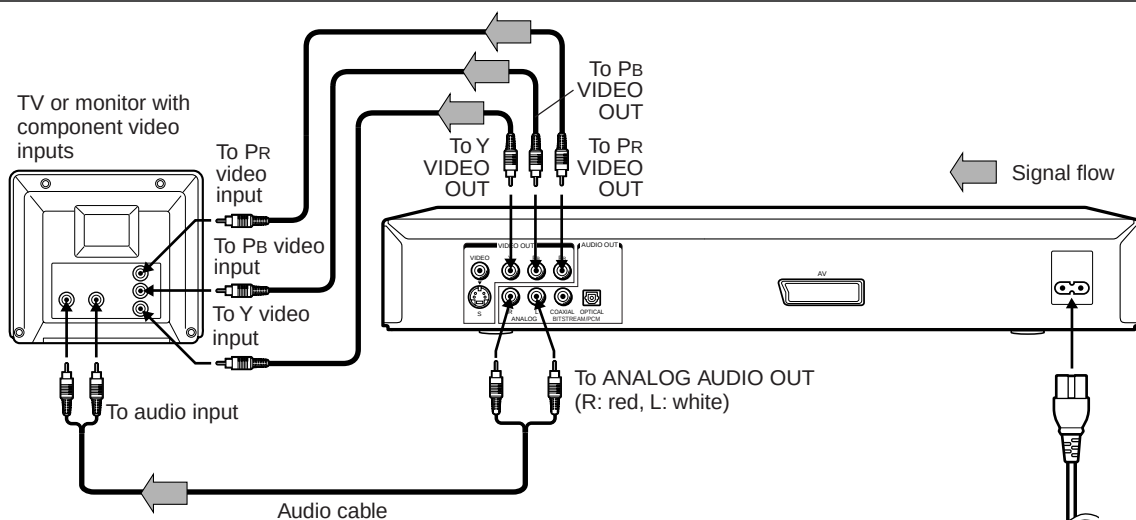

- Make the following setting.



On-screen display	See "Customizing the Function Settings" beginning from 48 .	
TV	"Video Out Select" 50	"Audio Out Select" 51
TV or monitor with component video inputs	"Video" or "S Video"	"Analog 2ch"

Component video outputs/inputs

Some TVs or monitors are equipped with component video inputs. Connecting to these inputs allows you to enjoy higher quality picture playback. Actual labels for component video inputs may vary depending on the TV manufacturer. (ex. Y, R-Y, B-Y or Y, Cb, Cr) In some TVs or monitors, the colour levels of the playback picture may be reduced slightly or the tint may change. In such a case, adjust the TV or monitor for optimum performance.

Connecting to a TV (Using the phono type jacks)

- Select the connection type depending on the TV. (TV equipped with an S video input / Normal TV)

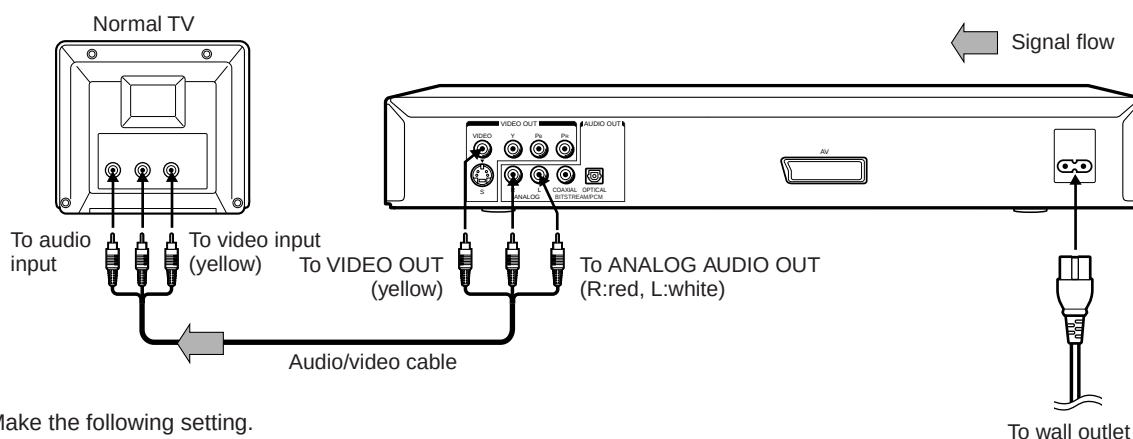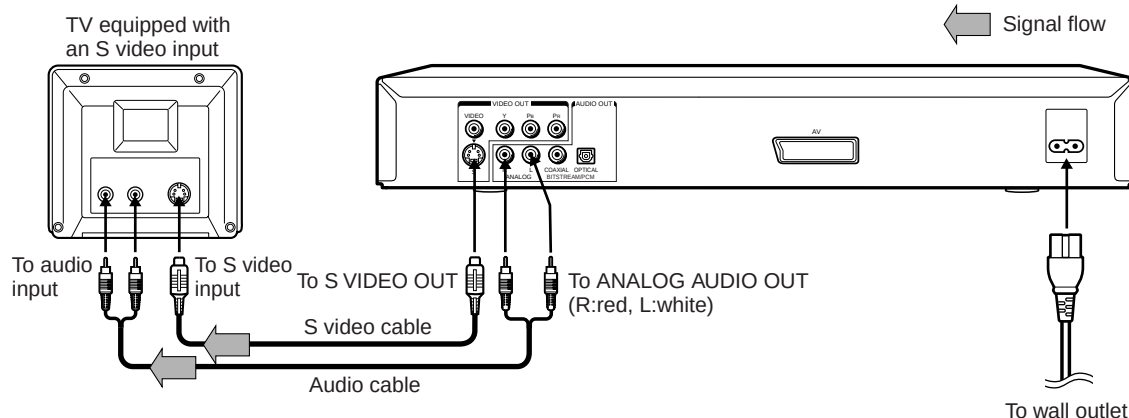

- Make the following setting.

TV	On-screen display	See "Customizing the Function Settings" beginning from 48 .	
		"Video Out Select" 50	"Audio Out Select" 51
TV equipped with an S video input		"S Video"	"Analog 2ch"
Normal TV		No need to set.	"Analog 2ch"

Notes

- Refer to the owner's manual of the connected equipment as well.
- When you connect the DVD video player to other equipment, be sure to turn off the power and unplug all of the equipment from the wall outlet before making any connections.
- If you place the DVD video player near a tuner or radio, the radio broadcast sound might be distorted. In this case, place the DVD video player away from the tuner and radio.
- The output sound of the DVD video player has a wide dynamic range. Be sure to adjust the receiver's volume to a moderate listening level. Otherwise, the speakers may be damaged by a sudden high volume sound.
- Turn off the amplifier before you connect or disconnect the DVD video player's power cord. If you leave the amplifier power on, the speakers may be damaged.
- If your television set has one audio input, connect the DVD video player to a Y cable adapter (not supplied) and then connect to your TV.

Connecting to Optional Equipment

You can enjoy high quality dynamic sounds by connecting the DVD video player to optional audio equipment.

- For connection to your TV, see "Connecting to a TV" **18** **19**.
- For details of output sound, see **43**.
- This section uses the following reference marks.

-  : Front speaker
-  : Rear speaker
-  : Sub woofer
-  : Center speaker
-  : Signal flow

Notes

- DO NOT connect the BITSTREAM/PCM AUDIO OUT jack of the DVD video player to the AC-3 RF input of a Dolby Digital Receiver. This input on your A/V Receiver is reserved for Laserdisc use only and is incompatible with the BITSTREAM/PCM AUDIO OUT jack of the DVD video player.
- Connect the BITSTREAM/PCM AUDIO OUT jack of the DVD video player to the "OPTICAL" or "COAXIAL" input of a Receiver or Processor.
- Refer to the owner's manual of the connected equipment as well.
- When you connect the DVD video player to other equipment, be sure to turn off the power and unplug all of the equipment from the wall outlet before making any connections.
- The output sound of the DVD video player has a wide dynamic range. Be sure to adjust the receiver's volume to a moderate listening level. Otherwise, the speakers may be damaged by a sudden high volume sound.
- Turn off the amplifier before you connect or disconnect the DVD video player's power cord. If you leave the amplifier power on, the speakers may be damaged.


Warning

- When you are connecting (via the BITSTREAM/PCM AUDIO OUT jack) an AV decoder that does not have Dolby Digital, Digital Theater Systems (DTS) or MPEG2 decoding function, be sure to set "Audio Out Select" to "PCM" from the on-screen displays **48** **51**. Otherwise, high volume sound may damage your hearing as well as the speakers.
- When playing DTS-encoded discs (DVD video discs and audio CDs), excessive noise may be output from the analog stereo jacks. To avoid possible damage to the audio system, you should take proper precautions when the ANALOG AUDIO OUT (L/R) jacks of the DVD video player are connected to an amplification system. To enjoy DTS Digital Surround™ playback, an external 5.1 channel DTS Digital Surround™ decoder system must be connected to the BITSTREAM/PCM AUDIO OUT jack of the DVD video player.

Connecting to an amplifier equipped with a Dolby Digital decoder

Dolby Digital

Dolby Digital is the surround sound technology used in theaters showing the latest movies, and is now available to reproduce this realistic effect in the home. You can enjoy motion picture and live concert DVD video discs with this dynamic realistic sound by connecting the DVD video player to a 6 channel amplifier equipped with a Dolby Digital decoder or Dolby Digital processor. If you have a Dolby Pro Logic Surround decoder, you will obtain the full benefit of Pro Logic from the same DVD movies that provide full 5.1-channel Dolby Digital soundtracks, as well as from titles with the Dolby Surround mark.

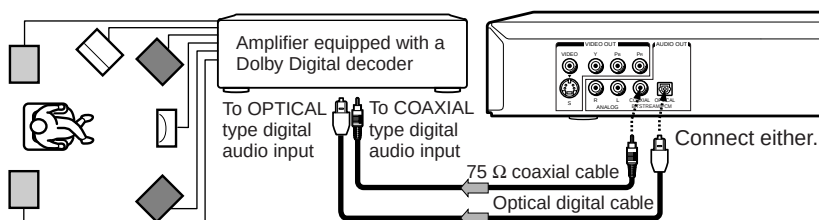

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. ©1992-1997 Dolby Laboratories. All rights reserved.

- Use DVD video discs encoded via the Dolby Digital recording system.
- Make the following setting.

On-screen display	Select:	Page
"Audio Out Select"	"Bitstream"	48 51
Recording system	D	43

Connecting to an amplifier equipped with Dolby Pro Logic Surround

Dolby Pro Logic Surround


You can enjoy the dynamic realistic sound of Dolby Pro Logic Surround by connecting an amplifier and speaker system (right and left front speakers, a center speaker, and one or two rear speakers).

▪ With an amplifier equipped with Dolby Digital

Connect the equipment the same way as described in "Connecting to an amplifier equipped with a Dolby Digital decoder." Refer to that amplifier's owner's manual and set the amplifier so you can enjoy Dolby Pro Logic Surround sound.

▪ With an amplifier not equipped with Dolby Digital

Connect the equipment as follows.

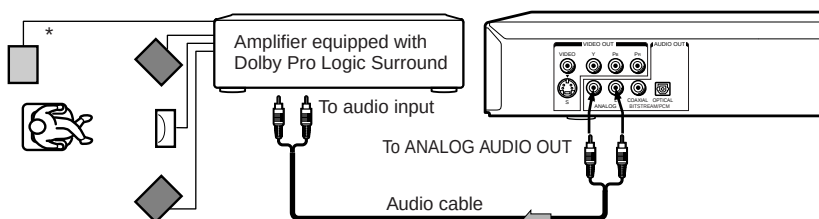

- Make the following setting.

On-screen display	Select:	Page
"Audio Out Select"	"Analog 2ch"	48 51

Be sure to set "Audio Out Select" to "Analog 2ch" when you enjoy sounds of Dolby Pro Logic Surround using this connection.

* Connect one or two rear speakers. The output sound from the rear speakers will be monaural even if you connect two rear speakers.


Connecting to Optional Equipment (continued)

Connecting to an amplifier equipped with a DTS decoder

Digital Theater Systems (DTS)

DTS is a high quality surround technology used in theaters and now available for home use, on DVD video discs or audio CDs.

If you have a DTS decoder or processor, you can obtain the full benefit of 5.1 channel DTS encoded sound tracks on DVD video discs or audio CDs.

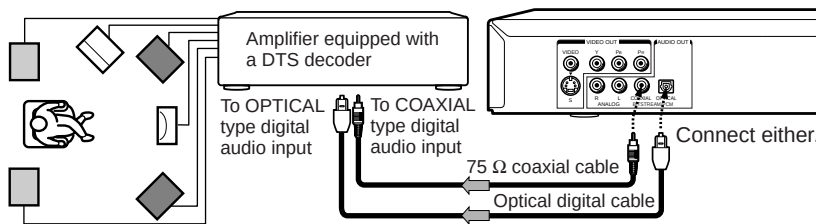

"DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.


- Use DVD video discs or audio CDs encoded via the DTS recording system.
- Make the following setting.

On-screen display	Select:	Page
"Audio Out Select"	"Bitstream"	48
Recording system	DTS	43

Connecting to an amplifier equipped with an MPEG2 audio decoder

MPEG2 sound

You can enjoy motion picture and live concert DVD video discs with dynamic realistic sound by connecting an amplifier equipped with an MPEG2 audio decoder or MPEG2 audio processor.

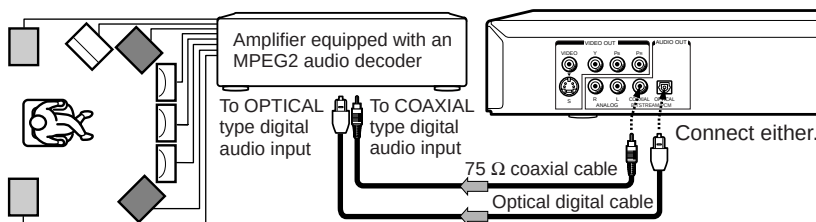

- Use DVD video discs encoded via the MPEG2 recording system.
- Make the following setting.

On-screen display	Select:	Page
"Audio Out Select"	"Bitstream"	48
Recording system	MPEG	43


Connecting to an amplifier equipped with a digital audio input

2 channel digital stereo

You can enjoy the dynamic sound of 2 channel digital stereo by connecting an amplifier equipped with a digital audio input and speaker system (right and left front speakers).

- Make the following setting.

On-screen display	Select:	Page
"Audio Out Select"	"PCM"	48
		51

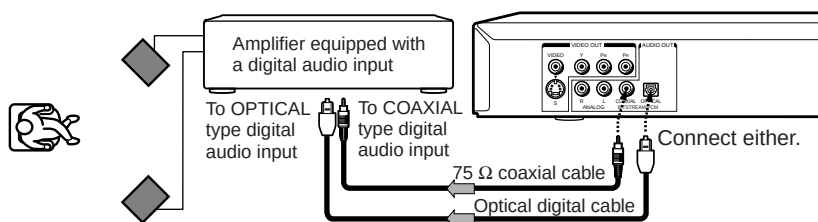



Basic playback

Begin your operation.


- **Playing a Disc**
- **Variable Speed Playback**
- **Locating a Desired Section**
- **Playing an MP3 Encoded CD**

Playing a Disc

This section shows you the basics on how to play a disc.

CAUTION

Keep your fingers well clear of the disc tray as it is closing. Neglecting to do so may cause serious personal injury.

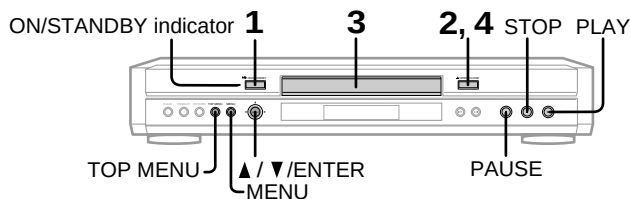

Basic playback

Preparations

- When you want to view a disc, turn on the TV and select the video input connected to the DVD video player.
- When you want to enjoy the sound of discs from the audio system, turn on the audio system and select the input connected to the DVD video player.

 
1 Press the power button (ON/STANDBY).



The DVD video player turns on and the colour of the ON/STANDBY indicator changes from red (standby) to green (on).


When the DVD video player is turned on for the first time, a message appears. Press ENTER, and make the proper settings before proceeding to step 2. [56](#)

2 Press OPEN/CLOSE.



The disc tray opens.

3 Place the disc on the disc tray.

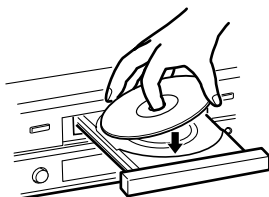

With the playback side down

- There are two different disc sizes. Place the disc in the correct guide on the disc tray. If the disc is out of the guide, it may damage the disc and cause the DVD video player to malfunction.
- Do not place a disc which is unplayable in this DVD video player.

4 Press OPEN/CLOSE to close the disc tray.



Playback starts.

If you insert a DVD video disc that contains a top menu, a menu may appear. See "Locating a title using the top menu." [30](#)

- You may need to press the TOP MENU or MENU button to display disc menu (depending on the actual DVD video disc.)


Note

If the disc tray contains a disc you have already played, playback will begin from the location where you last stopped playback. [29](#)

■ To start playback in the stop mode

Press **PLAY**.



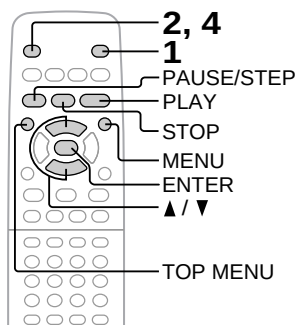

■ To obtain a higher quality picture

Occasionally, some picture noise not usually visible during a normal broadcast may appear on the TV screen while playing a DVD video disc because the high resolution pictures on these discs include a lot of information. While the amount of noise depends on the TV you use with this DVD video player, you should generally reduce the sharpness adjustment on your TV when viewing DVD video discs.

■ About

The icons on the heading bar show the playable discs for the function described under that heading.

: You can use this function with DVD video discs.

: You can use this function with VIDEO CDs.

: You can use this function with audio CDs.

■ To pause playback (still mode)

Press **PAUSE/STEP** during playback.



To resume normal playback, press the **PLAY** button.

- Sound is muted during still mode.

 
■ To stop playback

Press **STOP**.




■ To remove the disc

Press **OPEN/CLOSE**.



Remove the disc after the disc tray opens completely.

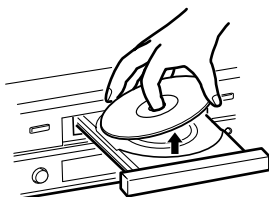

Be sure to press the **OPEN/CLOSE** button to close the disc tray after you remove the disc.

■ About the screen saver

If you pause a picture of a DVD video disc and leave it still for a long while, the screen saver of the DVD video player automatically appears (when "Screen Saver" is set to "On" **[53]**). To turn off the screen saver, press the **PLAY** button.

■ Automatic Power Off function

If the DVD video player is stopped, or the screen saver is engaged for approximately 20 minutes, the DVD video player will automatically turn itself off.


Notes

- Do not move the DVD video player during playback. Doing so may damage the disc.
- Use the **OPEN/CLOSE** button to open and close the disc tray. Do not push the disc tray while it is moving. Doing so may cause the DVD video player to malfunction.
- Do not push up on the disc tray or put any objects other than discs on the disc tray. Doing so may cause the DVD video player to malfunction.
- In many instances, a menu screen will appear after playback of a movie is completed. Prolonged display of an on-screen menu may damage your television set, permanently etching that image onto its screen. To avoid this, be sure to press the **STOP** button on your remote control once the movie is completed.



Variable Speed Playback

You can play discs at various speeds, and resume playback from the location where you stopped playback.

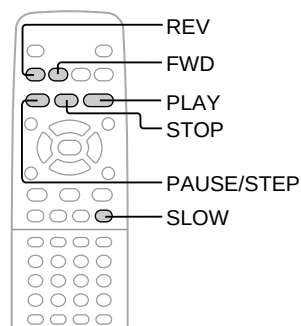

Playing in fast reverse or fast forward directions

Press REV or FWD during playback.



REV: Fast reverse playback
FWD: Fast forward playback

Each time you press the REV or FWD button, the playback speed changes.

■ To resume normal playback

Press **PLAY**.



Notes

- The DVD video player mutes sound and omits subtitles during reverse and forward scan of DVD video discs. However, the DVD video player plays sound during fast forward or fast reverse play of audio CDs.
- The playback speed may differ depending on the disc.



Playing frame by frame

Press PAUSE/STEP during still playback.

PAUSE/STEP



Each time you press the PAUSE/STEP button, the picture advances one frame.

■ To resume normal playback

Press **PLAY**.



Note

The sound is muted during frame by frame playback.

Playing in slow-motion

Press SLOW during playback.



Each time you press the SLOW button, the slow-motion speed changes.

■ To resume normal playback

Press **PLAY**.



Notes

- The sound is muted during slow-motion playback.
- The playback speed may differ depending on the disc.

Resuming playback from the same location

1 Press STOP at the location where you want to interrupt playback.



The DVD video player memorizes the location where playback is stopped.

2 Press PLAY.



The DVD video player resumes playback from the location where you stopped playback.

■ To start playback from the beginning regardless of the location where you stopped playback

- 1 Press **STOP** twice.



The DVD video player's memory is cleared.

- 2 Press **PLAY**.



 Playback starts from the beginning of the current title.


 Playback starts from the beginning of the disc.

- If you want to return to the beginning of a DVD video disc, open and close the disc tray once with the OPEN/CLOSE button before pressing the PLAY button.



Notes

- The DVD video player's memory is also cleared when:
 - you change the parental lock setting **[54]** or select a disc menu language **[52]**.
 - you play a PBC-featured VIDEO CD while "PBC" **[55]** is set to "On".
 - you open the disc tray.
- There may be a difference in the location where playback resumes depending on the disc.
- Settings you changed using the on-screen displays while the DVD video player keeps a location in the memory may function only after the memory is cleared.

Locating a Desired Section

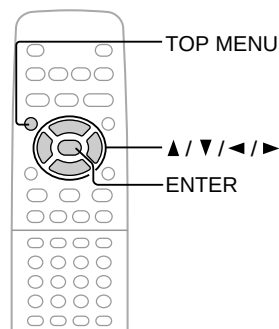

Normally, DVD video discs are divided into titles, and the titles are sub-divided into chapters. VIDEO CDs and audio CDs are divided into tracks. You can quickly locate any specific title, chapter, or track.

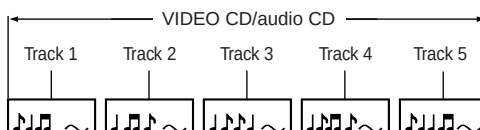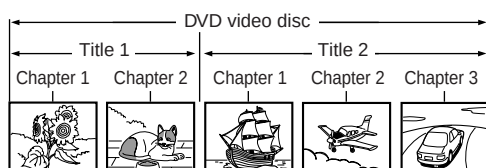

Locating a title using the top menu


1 Press TOP MENU.

TOP MENU




The top menu appears on the TV screen.

e.g.

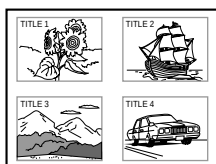


2 Press ▲/▼/◀/▶ to select the title you want.

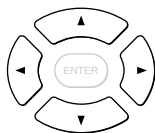

If the titles in the top menu are assigned a number, you can directly locate a specific title by pressing its designated number with the number buttons.

3 Press ENTER.

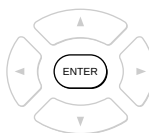

Playback starts from chapter 1 of the selected title.


Notes

- The instructions above describe basic procedures which may vary depending on the contents of the DVD video disc. If different instructions appear on the TV screen, follow those instructions.
- If you display the top menu during playback and press the TOP MENU button again without selecting any title, the DVD video player may resume playback from the point where you first pressed the TOP MENU button (depending on the actual DVD video disc.)
- This method of locating a title is available only on a disc that contains a top menu.
- Instruction notes of discs may refer to the button that displays the top menu as TITLE button.



Playing an MP3 Encoded CD

You can play MP3 files on this DVD video player.

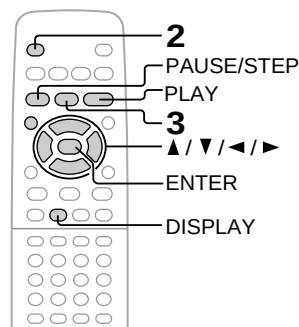


Playing an MP3 encoded CD

MP3 disc compatible with this player is limited as follows:

- Playable discs: CD-ROM, CD-R (650MB / 74 min. only)
* CD-RW is not recommendable.
- Sampling Frequency: 44.1 kHz only
- Bit rate: 32 kbps-320 kbps
- CD physical format: Mode 1, Mode 2 XA Form 1
- File system: ISO9660 Level 1
- File names are limited to eight characters or less and must incorporate "MP3" extension.
e.g. "*****.MP3"
- File names cannot contain special characters such as "?!><+*}{[@]:\ /.," etc.
- Total number of files on the disc should not exceed 254.

1 Place a CD that contains MP3 files on the disc tray.

 2 Press OPEN/CLOSE to load the disc.



3 To stop playback, press STOP.



Notes

- Some discs may not permit this operation.
- If you stop playback by pressing the STOP button, and then press the PLAY button, playback will start from the beginning of the track.
- The SKIP [31], REPEAT [35] and RANDOM [37] functions are also available.

■ To pause playback

Press **PAUSE/STEP** during playback.



To resume normal playback, press the **PLAY** button.

■ Selecting a track (file) in the disc

- 1 Press the **DISPLAY** button.
- 2 Select the MP3 icon using the **◀/▶** buttons then press the **ENTER** button.
A list of tracks appears.
- 3 Press the **▲/▼/◀/▶** buttons to select a track you want to play.
The current track being played is highlighted in green.
- 4 Press the **ENTER** button to begin playback of the selected track.

This DVD video player requires discs/recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 files). Given the fact that technology in this area is still maturing, Toshiba cannot guarantee that all genre of recordable discs will produce optimal playback quality. The technical criteria set out in this owner's manual are meant as a guide only.

Customers should also note that permission is required in order to download MP3 files and music from the internet. Toshiba has no right to grant such permission. Permission should always be sought from the copyright owner.




Advanced playback

Customizing the performance of your DVD video player.

- **Accessing a Specific Location Directly**
- **Playing Repeatedly**
- **Playing in a Favorite Order**
- **Playing in Random Order**
- **Zooming a Picture**
- **Selecting the Picture Enhancement (E.P.M.)**
- **Selecting the Sound Enhancement (E.A.M.)**
- **Selecting the Camera Angle**
- **Selecting Subtitles**
- **Selecting a Language**
- **Operating in the On-screen Display Mode**

Accessing a Specific Location Directly

You can access a specific location by entering its corresponding time (hours, minutes, seconds).

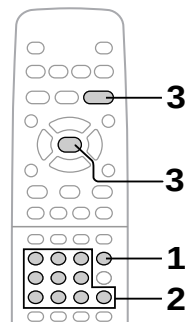


Entering the time of the desired location

1 Press T several times.




You may have to press further depending on the disc. Press the button repeatedly until the clock icon is highlighted.

 e.g.




2 Press the number buttons to enter the time.

 e.g.



3 Press PLAY or ENTER.

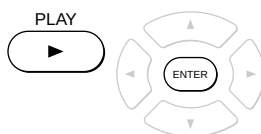



Playback starts from the desired location.

Notes

- Some discs may not respond to this process.
- Some scenes may not be located precisely as you specified.
- This method for accessing specific locations is available only within the current title of the DVD video disc or within the current track of the VIDEO CD/audio CD.

Playing Repeatedly

You can play a specific title, chapter, track, or segment repeatedly.
(Title repeat, chapter/track repeat, A-B repeat)

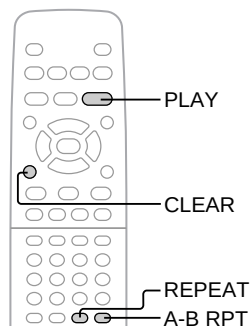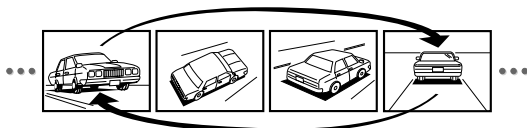


Repeating a title, chapter, or track

1 Press REPEAT.



Each time you press the REPEAT button, the repeat mode changes as follows.

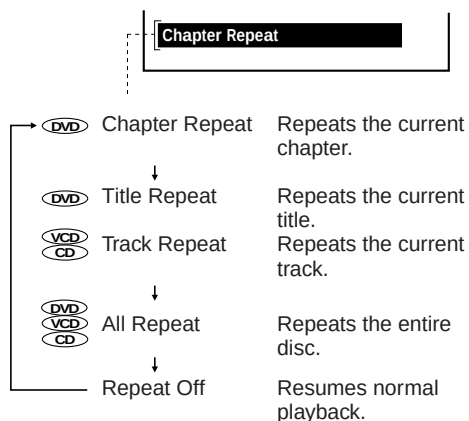

2 Press PLAY.



The DVD video player starts repeat playback.
Press the PLAY button within about 5 seconds after you press the REPEAT button.

■ To resume normal playback

Press **CLEAR**.



Note

Some discs may not permit repeat operation.

Repeating a specific segment

1 Press A-B RPT at the beginning of the segment (point A) you want to play repeatedly.



2 Press A-B RPT again at the end of the segment (point B).



The DVD video player automatically returns to point A and starts repeat playback of the selected segment (A-B).



■ To resume normal playback

Press **CLEAR**.




Notes

- Some discs may not permit A-B repeat operation.
- You cannot set the A-B repeat function for a segment that includes multiple camera angles **[41]**.
- You can specify a segment only within the current title or track (VIDEO CD).
- There may be a slight difference between point A and the location where playback actually resumes depending on the disc.

Playing in a Favorite Order

You can combine your favorite titles, chapters, or tracks and play them in the order you determine. You can program up to 30 selections into the memory. (Memory playback)

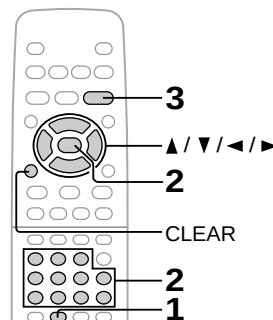

Setting titles, chapters, or tracks in a favorite order

1 Insert a disc and press MEMORY during stop.



The following display appears.

e.g.

1 T:-- CT:--
2 T:-- CT:--
3 T:-- CT:--
4 T:-- CT:--
5 T:-- CT:--
6 T:-- CT:--
7 T:-- CT:--

T: Title number
CT: Chapter number
or track number

2 Select the items in the order you want by pressing the number buttons, then ENTER for each item.

Each time you press the ◀/▶ button, the spaces of "T" and "CT" are highlighted in turn. Highlight where you want to enter, then press the corresponding number buttons.

To select another chapter in the same title, you do not need to select the title number.

To select tracks from a VIDEO CD/audio CD in order, press the **number buttons** for the track, then press the **ENTER** button for each selection you want.

Note

The space of "T (Title)" may be showing a number. Neglect this number when using a VIDEO CD/audio CD.

3 Press PLAY while the display appears on the TV screen.



The DVD video player starts memory playback.

■ To change the programmed selections

- 1 While the display appears on the TV screen, press ▲/▼/◀/▶ to move the highlighted bar to the item you want to change.
- 2 Change the selection following the instructions in step 2.

■ To cancel the programmed selections

- 1 While the display appears on the TV screen, press ▲/▼ to move the highlighted bar to the item you want to cancel.
- 2 Press **CLEAR**.

■ To resume normal playback from memory playback

Press **CLEAR**.



The memory playback indicator disappears.

■ To program during playback

If you press the **MEMORY** button during playback, a programming display appears. Follow steps 2 and 3.


Notes

- Some discs may not permit memory playback operation.
- If you press the REPEAT button during memory playback, the DVD video player repeats the current memory playback.
- If you press the MEMORY or RETURN button while the display appears on the TV screen, the display disappears.
- The programmed selections will be cleared when you turn off the DVD video player.



Playing in Random Order

You can play titles, chapters within a title, or tracks in random order.
(Random playback)

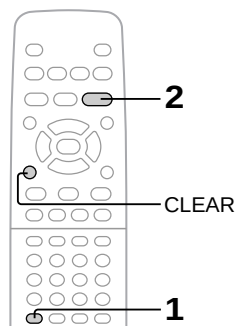


Playing titles, chapters or tracks in random order

1 Press RANDOM.



Each time you press the RANDOM button, the random playback mode changes as follows.

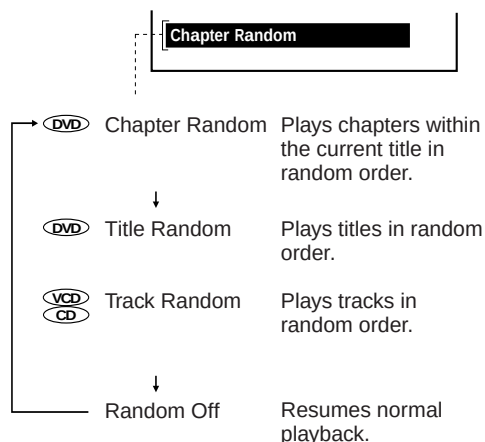

If you press the RANDOM button during playback, the DVD video player automatically starts random playback after finishing the current title, chapter or track.

2 Press PLAY.



The DVD video player starts random playback.
Press the PLAY button within about 5 seconds after you press the RANDOM button.

■ To resume normal playback

Press **CLEAR**.

CLEAR


 


Notes

- Some discs may not permit random playback operation.
- You cannot use the random playback function in conjunction with the memory playback function.

Zooming a Picture

You can magnify areas within a picture.

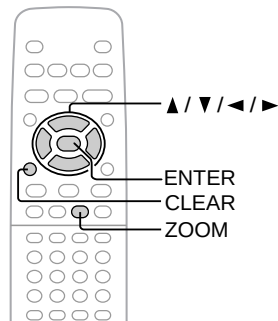


DVD Zooming a picture

Press ZOOM during normal, slow or still playback.



The DVD video player enters the zoom playback mode and displays the icon.


e.g.

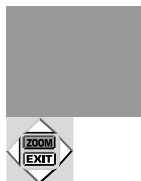

ZOOM : As you repeatedly press the ENTER (or ZOOM) button while "ZOOM" is selected, the magnification level changes. Variation of the levels includes reducing.

EXIT : If you press the ENTER button while "EXIT" is selected, you can turn off the icon, keeping the current magnification level.

You can shift the highlight within the icon by the ▲/▼/◀/▶ buttons.

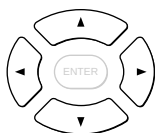

If you press and hold the ▲/▼/◀/▶ buttons, the zoom point shifts.

CLEAR



Pressing the CLEAR button restores the zoom point to the center of the picture.

■ To resume normal playback

While "ZOOM" is selected, press **ZOOM** repeatedly to turn off the icon.

Picture restores the size when the icon disappears.



- The ENTER button cannot cancel zoom playback if you have turned off the icon by selecting "EXIT." To restore normal picture size, press the ZOOM button to display the icon, then further press the ZOOM button until the icon turns off.

Notes


- Some discs may not respond to zoom feature.
- During some scenes, the buttons may not work as described.
- Zooming does not work on subtitles or menus included on DVD video discs.
- While the icon is displayed, the ▲/▼/◀/▶ buttons cannot work on menus included on DVD video discs. If you want to view the menus, turn off the icon.
- The magnification level varies depending on the picture size you select. **50**



Selecting the Picture Enhancement (E.P.M.*)

You can easily switch the picture enhancement to your preference.

*E.P.M.: Enhanced Picture Mode

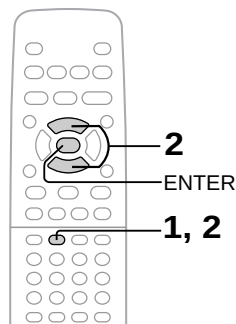

Selecting the picture enhancement


1 Press E.P.M.



The picture enhancement selection appears.



■ To turn off the picture enhancement selection Press ENTER.

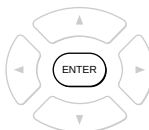

Alternatively leave the DVD video player unoperated for about 5 seconds after having made the selection.

Note

Actual effects to pictures may vary depending on the TV. Make the selection to your preference.

2 Select the picture enhancement by pressing E.P.M. or ▲ / ▼.

Each time you press the button, the picture enhancement changes.



Light:
Brighter than in "Normal".



Normal:
Standard black level.



Movie1:
To raise brightness to clarify details.



Movie2:
To deepen colours.




Animation:
To raise contrast enhancing colours.

Selecting the Sound Enhancement (E.A.M.*)

You can easily switch the sound enhancement to your preference.

*E.A.M.: Enhanced Audio Mode

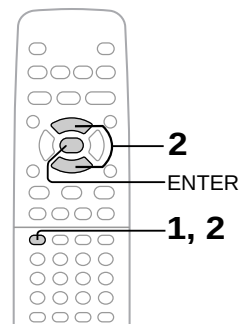

Selecting the sound enhancement

1 Press E.A.M.



The sound enhancement selection appears.



2 Select the sound enhancement by pressing E.A.M. or ▲ / ▼.

Each time you press the button, the sound enhancement changes.



Normal:
Normal sound.




3D:
To obtain expansive virtual surround sound effects from just two speakers.



Dialogue:
To control dynamic range to make dialogues easier to hear (only when playing a DVD video disc recorded on the Dolby Digital recording system).

- To use this enhancement on sounds output from the BITSTREAM/PCM AUDIO OUT jack, be sure to set "Audio Out Select" to "PCM". **[51]**

■ To turn off the audio enhancement selection Press ENTER.

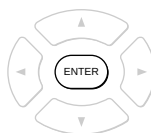

Alternatively leave the DVD video player unoperated for about 5 seconds after having made the selection.

Notes


 
- Actual effects to sounds may vary depending on the speakers. Make the selection to your preference.
- Actual effects to sounds may vary depending on the disc.
- When the DVD video player is connected to an amplifier equipped with Dolby Pro Logic Surround, select "Normal". Otherwise, Dolby Pro Logic Surround may function differently than usual.
- Selecting "Dialogue" disables "Dynamic Range Control" function **[51]**.

Spatializer® 3-Dimensional Sound Processing provided by Desper Products, Inc.

Certain audio features of this product manufactured under a license from Desper Products, Inc., Spatializer® and the circle-in-square device are trademarks owned by Desper Products, Inc.

Selecting the Camera Angle

If the scene was recorded from multiple angles, you can easily change the camera angle of the scene you are watching.

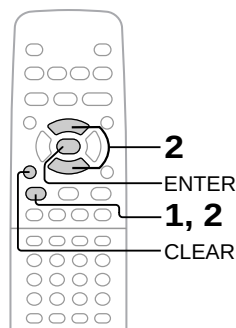

Changing the camera angle

1 Press **ANGLE** while playing a scene recorded with multiple angles.

ANGLE



While playing a scene recorded with multiple angles, the angle icon () flashes in the DVD display. Press the ANGLE button while the angle icon is flashing.




2 Press **ANGLE** or **▲ / ▼** while the angle number is displayed on the TV screen.

ANGLE



Each time you press the ANGLE button, the camera angle changes.

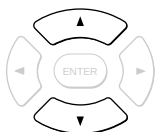

You can change the camera angle directly by pressing the number buttons corresponding to its angle number instead of using the **▲ / ▼** buttons.


To turn off the display, press the **CLEAR** or **ENTER** button.

Notes

- You can change the camera angle during still playback. The camera angle changes to the new setting when you resume normal playback.
- If you pause a picture immediately after changing a camera angle, the resumed playback picture may not display the new camera angle.

Selecting Subtitles

You can display subtitles on the TV screen and select a subtitle language from those included on the DVD video disc.

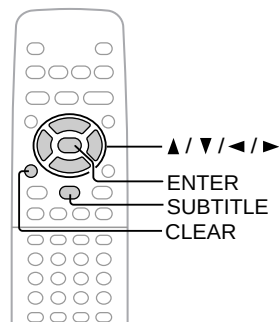

DVD Selecting a subtitle language

1 Press SUBTITLE during playback.



The current subtitle setting is displayed.

e.g.




The abbreviation of the language appears instead of the language name. Refer to the list of languages and their abbreviations. [57](#)

2 Press SUBTITLE or ▲/▼ while the subtitle setting is displayed on the TV screen.



Each time you press the SUBTITLE button, the subtitle languages included on the DVD video disc change.

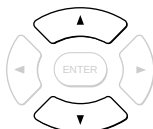


To turn off the subtitle setting display, press the CLEAR or ENTER button.

■ To turn subtitles on or off

- 1 Press **SUBTITLE** during playback.



- 2 Press **◀/▶** while the subtitle setting is displayed on the TV screen, to select "On" or "Off."

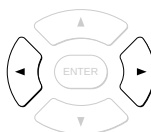

Notes


 
- Some DVD video discs are set to display subtitles automatically, and you cannot turn them off even if you set the subtitle function to off.
- During some scenes, the subtitles may not appear immediately after you select "On."
- Some DVD video discs will allow you to make subtitle selections and turn subtitles on or off only via the disc menu.

Notes

- When you turn on the DVD video player or replace a disc, the player returns to the initial default setting [52](#). When you select a subtitle language which is not included on the disc, the DVD video player plays a prior language programmed on the disc.
- During some scenes, the subtitles may not appear immediately after you change the subtitle language.

Selecting a Language

You can select a preferred language and sound recording system from those included on the DVD video disc.

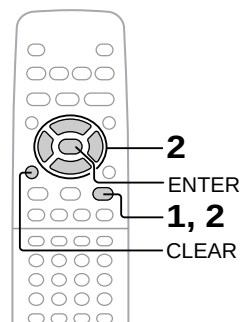

DVD VCD Selecting a playback audio setting

1 Press AUDIO during playback.



The current audio setting is displayed.

e.g.




The abbreviation of the language appears instead of the language name. Refer to the list of languages and their abbreviations. **[57]**

2 Press AUDIO or ▲ / ▼ while the audio setting is displayed on the TV screen.



Each time you press the AUDIO button, the audio settings included on the DVD video disc change.

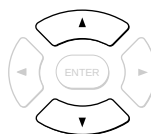

If you press the ◀ / ▶ buttons, you can select output sound format. **[51]**

To turn off the audio setting display, press the CLEAR or ENTER button.

■ Selecting sound channels of VIDEO CDs

You can switch left and right channels by pressing the **AUDIO** button repeatedly during playback.



Notes

- When you turn on the DVD video player or replace a disc, player returns to the initial default setting **[52]**.
If you select a sound track which is not included on the disc, the DVD video player plays a prior sound track programmed on the disc.
- Some discs allow you to change audio selections only via the disc menu. If this is the case, press the MENU button and choose the appropriate language from the selections on the disc menu.


■ Output sound conversion table (sampling frequency/quantization bit)

Discs	Recording system	Audio selection from the menu [48] [51] and output jacks on the rear panel					
		"Bitstream"		"Analog 2ch"		"PCM"	
		BITSTREAM/PCM jack	ANALOG AUDIO OUT jacks	BITSTREAM/PCM jack	ANALOG AUDIO OUT jacks	BITSTREAM/PCM jack	ANALOG AUDIO OUT jacks
DVD video discs	Dolby Digital		Bitstream	48 kHz/20 bit	Bitstream	48 kHz/20 bit	48 kHz/20 bit
	Linear PCM	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit
		48 kHz/20 bit	48 kHz/20 bit	48 kHz/20 bit	48 kHz/20 bit	48 kHz/20 bit	48 kHz/20 bit
		48 kHz/24 bit	48 kHz/24 bit	48 kHz/24 bit	48 kHz/24 bit	48 kHz/24 bit	48 kHz/24 bit
		96 kHz/16 bit	48 kHz/16 bit	—	96 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit
		96 kHz/20 bit	48 kHz/20 bit	—	96 kHz/20 bit	48 kHz/20 bit	48 kHz/20 bit
		96 kHz/24 bit	48 kHz/24 bit	—	96 kHz/24 bit	48 kHz/24 bit	48 kHz/24 bit
	DTS		Bitstream	—	Bitstream	—	—
	MPEG1, MPEG2		Bitstream	48 kHz/16 bit	Bitstream	48 kHz/16 bit	48 kHz/16 bit
	MPEG1		44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit
VIDEO CDs	Linear PCM 44.1 kHz/16 bit		44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit
Audio CDs	DTS		Bitstream	(Noise)	Bitstream	(Noise)	(Noise)

: 3D sound enhancement can function.

Operating in the On-screen Display Mode

When you turn on the on-screen display, you can view information on operational status and access the features and settings on-screen.

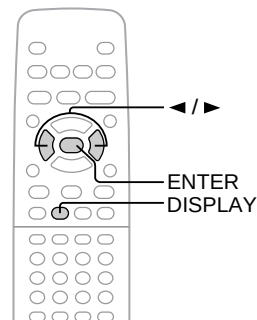

Operating in the on-screen display mode

Press DISPLAY.

DISPLAY



The following display appears.

Each time you press the DISPLAY button, the on-screen display changes as follows.

If you press the ◀/▶ buttons to select an icon, then press the ENTER button, you can access the feature.

When you select an icon (★), no need to press the ENTER button.


See the pages in □ for details on the features.

e.g. When playing a DVD video disc




- T** ★ : Title number (Track number)
To locate a title or track using the number. **[31]**
- C** ★ : Chapter number
To locate a chapter using the number. **[31]**
-  ★ : Elapsed time of the current title
To enter the time to locate a desired location. **[34]**
-  : Audio setting **[43]**
-  : Subtitle setting **[42]**
-  : Angle setting **[41]**
-  : To turn off the display.

Press DISPLAY again.

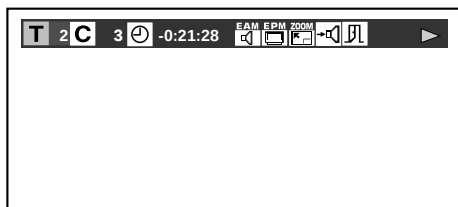


- T** ★ : Title number (Track number)
To locate a title or track using the number. **[31]**
- C** ★ : Chapter number
To locate a chapter using the number. **[31]**
-  ★ : Remaining time of the current title
To enter the time to locate a desired location. **[34]**
-  : E.A.M. (Enhanced Audio Mode) setting **[40]**
-  : E.P.M. (Enhanced Picture Mode) setting **[39]**
-  : To zoom a picture. **[38]**
-  : "Audio Out Select" setting **[51]**
BST: Bitstream 2CH: Analog 2ch PCM: PCM
-  : To turn off the display.

Press DISPLAY again.

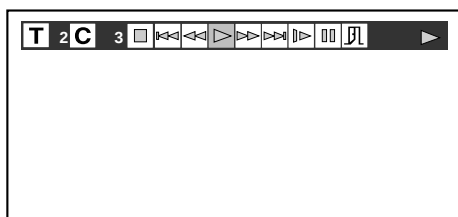

Press DISPLAY again.

 

OFF

To turn off the on-screen display, press DISPLAY again.

- T** * : Title number (Track number)
To locate a title or track using the number. **[31]**
- C** * : Chapter number
To locate a chapter using the number. **[31]**
- : To stop playback. **[27]**
- : Playback starts from the beginning of the current chapter or track. **[31]**
- : Fast reverse playback **[28]**
- : To start playback. **[26]**
- : Fast forward playback **[28]**
- : To locate succeeding chapters or tracks. **[31]**
- : To slow motion playback. **[29]**
- : To pause playback. **[27]**
- : To turn off the display.

The on-screen display will vary depending on the disc.

- : Data transfer rate (Mbit/s)
= Amount of picture, sound and subtitle data in the DVD video disc transferred per second.
The larger the value is, the more data processed, but this does not necessarily insure better picture quality.
- : CD-Text
Displays CD-Text data if included on the audio CDs. (Some letters may not be displayed properly depending on the disc.)
- : The on-screen display turns off.


Function Setup

You can change the default settings to customize performance to your preference.

- Customizing the Function Settings
- Table of Languages

Customizing the Function Settings

You can change the default settings to customize performance to your preference.

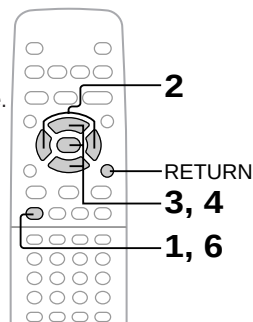


Setting procedure

1 Press SETUP during stop.




The following on-screen display appears.

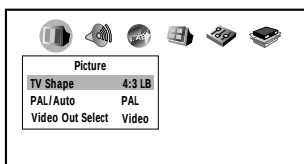

2 Press ◀/▶ to select a symbol for the setting you want to change.

(See the next page.)

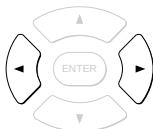

Picture performance settings



Output sound settings



Language settings



Display settings




Operational settings




Initial settings

3 Press ▲/▼ to select the setting you want to change, then press ENTER.

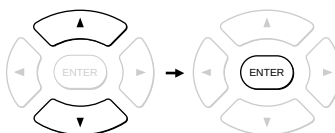

4 Change the selection by ▲/▼ or other buttons, by referring to the corresponding pages (50 -), then press ENTER.

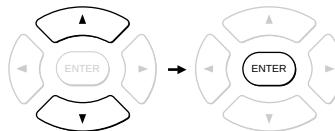

5 Repeat steps 3 and 4 to change other settings.

To select another operation, go back to step 2.

6 Press SETUP.



The on-screen display disappears.

■ To return to the previous display

Press RETURN.





Notes

- The on-screen display disappears when you press the SETUP button.
- The SETUP button can function even during normal playback, however some operations may be inaccessible, and a message will appear. In this case, try again after playback is stopped.

Setting		Details	Page
	TV Shape	 To select a picture size according to the aspect ratio of your TV.	50
	PAL/Auto	  To select the video system of a disc.	50
	Video Out Select	  To select the video output type corresponding to your TV system	50
	Audio Out Select	   To select an output sound format corresponding to your system connection.	51
	Dynamic Range Control	 To turn on or off a function that makes faint sounds easier to hear even if you lower the volume during late hours playback.	51
	Karaoke Vocal	 To turn on or off the vocal output during DVD KARAOKE disc playback.	51
	On-Screen Language	   To select a preferred language for on-screen displays.	52
	Disc Menu Language	 To select a preferred language for disc menus.	52
	Audio Language	 To select a preferred language for the sound track.	52
	Subtitle Language	 To select a preferred language for subtitles.	52
	On-Screen Displays	   To turn on or de-activate the operational status display on the TV screen.	53
	Background	   To select the background colour or background picture.	53
	Screen Saver	 To turn the screen saver on or off.	53
	Pause/Still	 To select the resolution of still pictures. (Field/Frame)	54
	Parental Lock	 To turn the parental lock function on or off.	54
	Title Stop	 To turn on or off a feature that automatically stops playback after a title has been viewed.	55
	PBC	 To use the menu screen when playing a PBC-controllable VIDEO CD.	55
	On-screen Language TV Shape Audio Out Select	   To install the initial system setting.	56

Customizing the Function Settings (continued)

Setting details

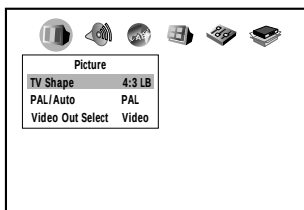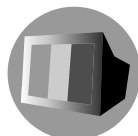

TV Shape DVD

4:3 Letterbox: Select when a standard 4:3 TV is connected.
Displays theatrical images with masking bars above and below the picture.



4:3 Normal: Select when a standard 4:3 TV is connected.
Displays pictures cropped to fill your TV screen. Either or both sides of the picture are cut off.



16:9 Widescreen: Select when a 16:9 wide TV is connected.

Notes

- The displayable picture size is preset on the DVD video disc. Therefore, the playback picture of some DVD video discs may not conform to the picture size you select.
- When you play DVD video discs recorded in the 4:3 picture size only, the playback picture always appears in the 4:3 picture size regardless of the TV shape setting.
- If you select "16:9 Widescreen" and you own a 4:3 TV set, the DVD playback picture will be horizontally distorted during playback. Images will appear to be horizontally compressed. Always be sure that your TV shape conforms to the actual TV in use.

PAL/Auto DVD VCD

PAL: To play a PAL disc. Connect a PAL TV to view a picture.

Auto: The DVD video player automatically identifies PAL or NTSC video system of a disc. Connect a multisystem TV (PAL/NTSC compatible) to view a picture.

A playback picture may be distorted when detected a signal change between PAL and NTSC on the disc.

Video Out Select DVD VCD


Video: Select when connected to a normal TV. **18**

S Video: Select when connected to a TV compatible with S video signals. **18** **19**

RGB: Select when connected to an RGB monitor. **18**

Notes

- When you connect a TV equipped with the component video inputs, select "Video" or "S Video". **18**
- If the on-screen display disappears immediately after you select "RGB", you can restore it by connecting the DVD player using the VIDEO OUT (yellow) jack.

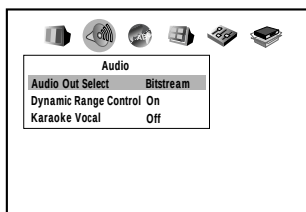

Audio Out Select DVD VCD CD

Select the output sound format corresponding to your system connection.

For details of sound recording systems, see [43](#).

Bitstream: Select when connected to an amplifier equipped with a Dolby Digital, DTS, MPEG1 or MPEG2 decoder. [21](#) [22](#)
The DVD video player outputs digital audio information in the bitstream format when you play a DVD video disc recorded on the Dolby Digital, DTS, MPEG1 or MPEG2 recording system.

Analog 2ch: Select when connected to a TV, or Dolby Pro Logic or stereo system via the analog audio jacks. [18](#) [19](#) [21](#)

PCM: Select when connected to a 2 channel digital stereo amplifier. [23](#)
The DVD video player outputs sounds in the PCM 2ch format when you play a DVD video disc recorded on the Dolby Digital, MPEG1 or MPEG2 recording system.

Dynamic Range Control DVD

Off: Full dynamic range is maintained.

On: Dynamic range is reduced.

Notes

- This function works only during playback of Dolby Digital recorded discs.
- The level of Dynamic Range Reduction may differ depending on the DVD video disc.

Karaoke Vocal DVD

Off: The primary vocal is not output.


On: The primary vocal is output when it is recorded on the disc.

Notes

- The vocal output feature is used during playback of Dolby Digital (multi-channel) recorded DVD KARAOKE discs. This feature allows you to turn off vocal audio tracks, or restore them for background accompaniment.
- When playing KARAOKE, connect appropriate audio equipment such as an amplifier to the DVD video player.

Customizing the Function Settings (continued)

Setting details

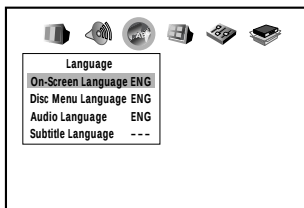

On-Screen Language (DVD VCD CD)


English: To view on-screen displays in English.
 Français: To view on-screen displays in French.
 Deutsch: To view on-screen displays in German.
 Español: To view on-screen displays in Spanish.
 Italiano: To view on-screen displays in Italian.

Disc Menu Language (DVD)

English: To display disc menus in English.
 French: To display disc menus in French.
 German: To display disc menus in German.
 Spanish: To display disc menus in Spanish.
 Italian: To display disc menus in Italian.
 Others: To make a further choice.

After pressing the ENTER button, follow steps 1) - 4) below.

- 1) Obtain the abbreviation of the preferred language from the list **57**.
- 2) Select the first character by pressing the ▲ / ▼ buttons.
- 3) Press the ◀ / ▶ buttons to shift and select the second character by pressing the ▲ / ▼ buttons.

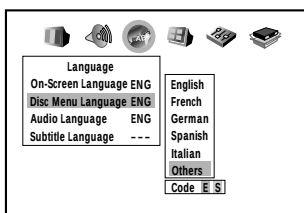

- 4) Press the ENTER button.

Note


Some DVD video discs may not include your pre-selected language. In this case, the DVD video player automatically displays disc menus consistent with the disc's initial language setting.

Audio Language (DVD)

English: To play sound tracks in English.
 French: To play sound tracks in French.
 German: To play sound tracks in German.
 Spanish: To play sound tracks in Spanish.
 Italian: To play sound tracks in Italian.
 Others: To make a further choice.

After pressing the ENTER button, follow steps 1) - 4) below.

- 1) Obtain the abbreviation of the preferred language from the list **57**.
- 2) Select the first character by pressing the ▲ / ▼ buttons.
- 3) Press the ◀ / ▶ buttons to shift and select the second character by pressing the ▲ / ▼ buttons.

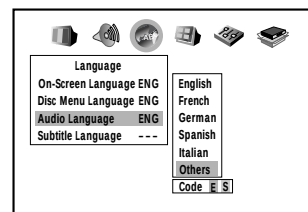

- 4) Press the ENTER button.

Note

Some DVD video discs may be played in a different language than you selected. A prior language may be programmed on the disc.


Subtitle Language (DVD)

English: To display subtitles in English.
 French: To display subtitles in French.
 German: To display subtitles in German.
 Spanish: To display subtitles in Spanish.
 Italian: To display subtitles in Italian.
 No Subtitle: To disable subtitles.
 Others: To make a further choice.

After pressing the ENTER button, follow steps 1) - 4) below.

- 1) Obtain the abbreviation of the preferred language from the list **57**.
- 2) Select the first character by pressing the ▲ / ▼ buttons.


- 3) Press the ◀/▶ buttons to shift and select the second character by pressing the ▲/▼ buttons.

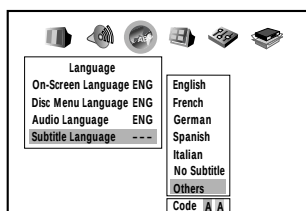

- 4) Press the ENTER button.

Notes

- Some DVD video discs may be set to display subtitles in a different language than you selected. A prior subtitle language may be programmed on the disc.
- Some DVD video discs allow you to change subtitle selections only via the disc menu. If this is the case, press the MENU button and choose the appropriate subtitle language from the selection on the disc menu.

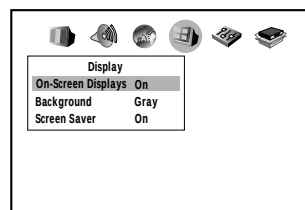

On-Screen Displays DVD VCD CD

Off: Operational modes (e.g. "□□", "▶▶") are not displayed.

On: Operational modes (e.g. "□□", "▶▶") are displayed on-screen.

Background DVD VCD CD

Blue: Blue background.

Gray: Gray background.

Picture: To use the picture which appears when you turn on the DVD video player as a background.

Jacket: To use the jacket picture included on some discs as a background. If it is not included, a gray background will be substituted.



Screen Saver DVD

Off: The screen saver is disengaged.

On: The screen saver operates.

Customizing the Function Settings (continued)

Setting details

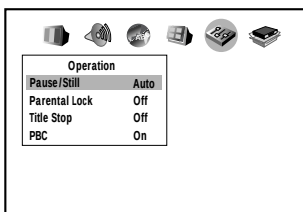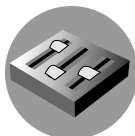

Pause/Still

Auto: For normal use. Still and fast motion images can be paused.

Frame: The resolution of still pictures is improved, so that you can make a motionless picture more clearer when you pause it.


Parental Lock

DVD video discs equipped with the parental lock function are rated according to their content. The contents allowed by a parental lock level and the way a DVD video disc can be controlled may vary from disc to disc. For example, if the disc allowed you could edit out violent scenes unsuitable for children and replace them with more suitable scenes, or lock out playback of the disc altogether.

- DVD video discs may or may not respond to the parental lock settings. This is not a defect in the DVD video player. Make sure this function works with your DVD video discs.

Off: The parental lock feature does not function. After pressing the ENTER button, follow step 1) below.

On: To activate the parental lock feature or change the settings. After pressing the ENTER button, follow steps 1) - 3) below.

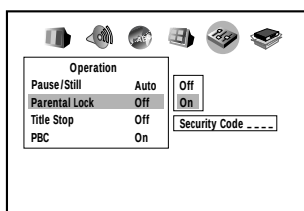

- 1) Press the number buttons to create a personal 4-digit security code, then press the ENTER button.


If you make a mistake before pressing the ENTER button, press the CLEAR button and enter your 4-digit security code again.

- 2) Enter the code of a country/area whose standards were used to rate the DVD video disc, referring to the list below.

Country/Area	Code
AUSTRALIA	AU
BELGIUM	BE
CANADA	CA
CHINA	CN
CHINA HONG KONG	HK
DENMARK	DK
FINLAND	FI
FRANCE	FR
GERMANY	DE
INDONESIA	ID
ITALY	IT
JAPAN	JP
MALAYSIA	MY
NETHERLANDS	NL
NORWAY	NO
PHILIPPINES	PH
RUSSIAN FEDERATION	RU
SINGAPORE	SG
SPAIN	ES
SWEDEN	SE
SWITZERLAND	CH
TAIWAN	TW
THAILAND	TH
UNITED KINGDOM	GB
UNITED STATES	US

- a) Select the first character by pressing the ▲ / ▼ buttons.
- b) Press the ◀ / ▶ buttons to shift and select the second character by pressing the ▲ / ▼ buttons.
- c) Press the ENTER button.

- 3) Press the ▲ / ▼ buttons to select the parental lock level, then press the ENTER button.

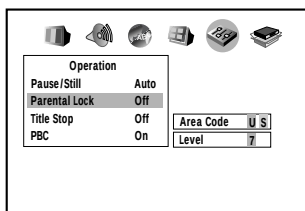

You cannot play DVD video discs rated higher than the level you selected unless you cancel the parental lock function.

For example, when you select level 7, discs rated higher than level 7 are locked out and cannot be played.

The parental lock level is equivalent to the following USA movie ratings.

- Level 7: NC-17
- Level 6: R
- Level 4: PG 13
- Level 3: PG
- Level 1: G

 
The parental lock levels for other countries/areas than U.S. are included for future use. Check the appropriate parental lock level when you buy a DVD video disc equipped with the parental lock feature in the future.

■ To change the parental lock level

Follow steps 1) - 3).

■ To change your 4-digit security code

- 1) After selecting "On" or "Off," press the STOP button four times, then press the ENTER button.



The 4-digit security code is cleared.

- 2) Press the number buttons to create a new 4-digit security code.
3) Press the ENTER button.

Title Stop

Off: The DVD video player continues after playback of a title is completed.

On: The DVD video player stops after playback of a title is completed.


PBC

Off: When playing a VIDEO CD without using the menu.

On: To use the menu when playing a PBC-featured VIDEO CD.


Customizing the Function Settings (continued)

Setting details

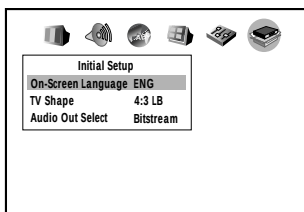


Initial Setup DVD VCD CD

- 1) Press the **▲** / **▼** buttons to select "On-Screen Language," and press the **ENTER** button.

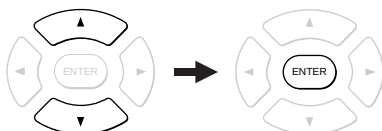

- 2) Select a language pressing the **▲** / **▼** buttons, and press the **ENTER** button.

See page **52**, "On-Screen Language."

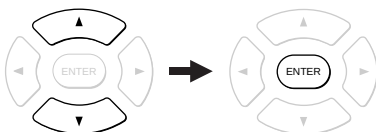

- 3) Make your selection in the same manner as step 1) then step 2).

See page **50**, "TV Shape."

See page **51**, "Audio Out Select."

Table of Languages

Table of languages and their abbreviations

Abbreviation	Language	Abbreviation	Language	Abbreviation	Language
---	No alternate language	GN	Guarani	PT	Portuguese
CHI (ZH)	Chinese	GU	Gujarati	QU	Quechua
DUT (NL)	Dutch	HA	Hausa	RM	Rhaeto-Romance
ENG (EN)	English	HI	Hindi	RN	Kirundi
FRE (FR)	French	HR	Croatian	RO	Rumanian
GER (DE)	German	HU	Hungarian	RU	Russian
ITA (IT)	Italian	HY	Armenian	RW	Kinyarwanda
JPN (JA)	Japanese	IA	Interlingua	SA	Sanskrit
KOR (KO)	Korean	IE	Interlingue	SD	Sindhi
MAY (MS)	Malay	IK	Inupiak	SG	Sango
SPA (ES)	Spanish	IN	Indonesian	SH	Serbo-Croatian
AA	Afar	IS	Icelandic	SI	Singhalese
AB	Abkhazian	IW	Hebrew	SK	Slovak
AF	Afrikaans	JI	Yiddish	SL	Slovenian
AM	Amharic	JW	Javanese	SM	Samoan
AR	Arabic	KA	Georgian	SN	Shona
AS	Assamese	KK	Kazakh	SO	Somali
AY	Aymara	KL	Greenlandic	SQ	Albanian
AZ	Azerbaijani	KM	Cambodian	SR	Serbian
BA	Bashkir	KN	Kannada	SS	Siswati
BE	Belorussian	KS	Kashmiri	ST	Sesotho
BG	Bulgarian	KU	Kurdish	SU	Sundanese
BH	Bihari	KY	Kirghiz	SV	Swedish
BI	Bislama	LA	Latin	SW	Swahili
BN	Bengali, Bangla	LN	Lingala	TA	Tamil
BO	Tibetan	LO	Laotian	TE	Telugu
BR	Breton	LT	Lithuanian	TG	Tajik
CA	Catalan	LV	Latvian, Lettish	TH	Thai
CO	Corsican	MG	Malagasy	TI	Tigrinya
CS	Czech	MI	Maori	TK	Turkmen
CY	Welsh	MK	Macedonian	TL	Tagalog
DA	Danish	ML	Malayalam	TN	Setswana
DZ	Bhutani	MN	Mongolian	TO	Tongan
EL	Greek	MO	Moldavian	TR	Turkish
EO	Esperanto	MR	Marathi	TS	Tsonga
ET	Estonian	MT	Maltese	TT	Tatar
EU	Basque	MY	Burmese	TW	Twi
FA	Persian	NA	Nauru	UK	Ukrainian
FI	Finnish	NE	Nepali	UR	Urdu
FJ	Fiji	NO	Norwegian	UZ	Uzbek
FO	Faroese	OC	Occitan	VI	Vietnamese
FY	Frisian	OM	(Afan) Oromo	VO	Volapük
GA	Irish	OR	Oriya	WO	Wolof
GD	Scottish Gaelic	PA	Panjabi	XH	Xhosa
GL	Galician	PL	Polish	YO	Yoruba
		PS	Pashto, Pushto	ZU	Zulu

Others

- Before Calling Service Personnel
- Specifications

Before Calling Service Personnel

Check the following guide for the possible cause of a problem before contacting service.

Symptoms and correction

Symptom	Cause	Correction	Page
No power.	The power plug is disconnected.	Connect the power plug securely into the wall outlet.	18
The DVD video player turned off by itself.	The automatic power off function turned the unit off.	Press the PLAY button.	27
No picture.	The TV is not set to receive DVD signal output.	Select the appropriate video input mode on the TV so the picture from the DVD video player appears on the TV screen.	26
	The video cable is not connected securely.	Connect the video cable securely into the appropriate jacks.	18, 19
No sound.	The equipment connected with the audio cable is not set to receive DVD signal output.	Select the correct input mode of the audio receiver so you can listen to the sound from the DVD video player.	26
	The audio cable is not connected securely.	Connect the audio cable securely into the appropriate jacks.	18 – 23
	The audio receiver or TV is turned off.	Turn on the equipment connected with the audio cable.	26
	The setting of output sound format is incorrect.	Select the proper audio setting.	43, 48 51
The playback picture has occasional distortion.	The disc is dirty.	Eject the disc and clean it.	9
	It is in fast forward or fast reverse playback.	Sometimes a small amount of picture distortion may appear. This is not a malfunction.	–
Brightness is unstable or noises are present in the playback pictures.	The effect of copy protection.	Connect the DVD video player directly to the TV. Avoid connecting the DVD video player to a VCR or TV/VCR combination.	18
The DVD video player does not start playback.	No disc is inserted.	Insert a disc.	26
	An unplayable disc is inserted.	Insert a playable disc. (Check the disc type and colour system.)	10
	The disc is placed upside down.	Place the disc with the playback side down.	26
	The disc is not placed within the guide.	Place the disc correctly inside the guide on the disc tray.	26
	The disc is dirty.	Clean the disc.	9
	The parental lock function is set.	Cancel the parental lock function or change the parental lock level.	48, 54
Playback does not follow the course of the disc's program.	It is in the mode of repeat playback, memory playback, etc.	These operations may prevent a proper progress of the contents.	–
Buttons do not work.	Power supply fluctuations or other abnormalities such as static electricity may interrupt correct operations.	Press and hold the ON/STANDBY button on the front panel for more than about 3 seconds. The DVD video player turns off. Press the button again to turn it on. If the buttons still do not work, disconnect the power plug and insert it into the wall outlet again.	–
The remote control does not work properly.	The remote control is not pointed at the remote sensor of the DVD video player.	Point the remote control at the remote sensor of the DVD video player.	15
	The remote control is too far from the DVD video player.	Operate the remote control within about 7 m.	15
	The batteries in the remote control are exhausted.	Replace the batteries with new ones.	15

DVD video player / outputs / supplied accessories

DVD Video Player

Power supply	100-240 V AC, 50/60 Hz
Power consumption	17 W
Mass	2.4 kg
External dimensions	430 × 69 × 222 mm (W/H/D)
Signal system	PAL/3.58 NTSC
Laser	Semiconductor laser, wavelength 650/780 nm
Frequency range	DVD linear sound : 48 kHz sampling 4 Hz to 22 kHz 96 kHz sampling 4 Hz to 44 kHz
Signal-to-noise ratio	More than 112 dB
Audio dynamic range	More than 108 dB
Harmonic distortion	Less than 0.002 %
Wow and flutter	Below measurable level (less than ±0.001 % (W.PEAK))
Operating conditions	Temperature: 5 °C to 35 °C, Operation status: Horizontal

Outputs

Video output (SCART)	1.0 V (p-p), 75 Ω, SCART socket × 1
Video output (phono type)	1.0 V (p-p), 75 Ω, negative sync., pin jack × 1
S video output	(Y) 1.0 V (p-p), 75 Ω, negative sync., Mini DIN 4-pin × 1 (C) 0.3 V (p-p), 75 Ω
Component video output	(Y) 1.0 V (p-p), 75 Ω, negative sync., pin jack × 1 (P _B)/(P _R) 0.7 V (p-p), 75 Ω, pin jack × 2
Audio output (SCART)	2.0V (rms), 680 Ω, SCART socket × 1
Audio output (BITSTREAM/PCM OPTICAL)	Optical connector × 1
Audio output (BITSTREAM/PCM COAXIAL)	0.5V (p-p), 75 Ω, pin jack × 1
Audio output (ANALOG AUDIO OUT)	2.0 V (rms), 680 Ω, pin jacks (L, R) × 1

Supplied Accessories

Audio/video cable	1
Remote control (SE-R0049)	1
Batteries (R6)	2
Power cord	1

- Designs and specifications are subject to change without notice.

2. LOCATION OF MAIN PARTS AND MECHANISM PARTS

2-1. Location of Main Parts

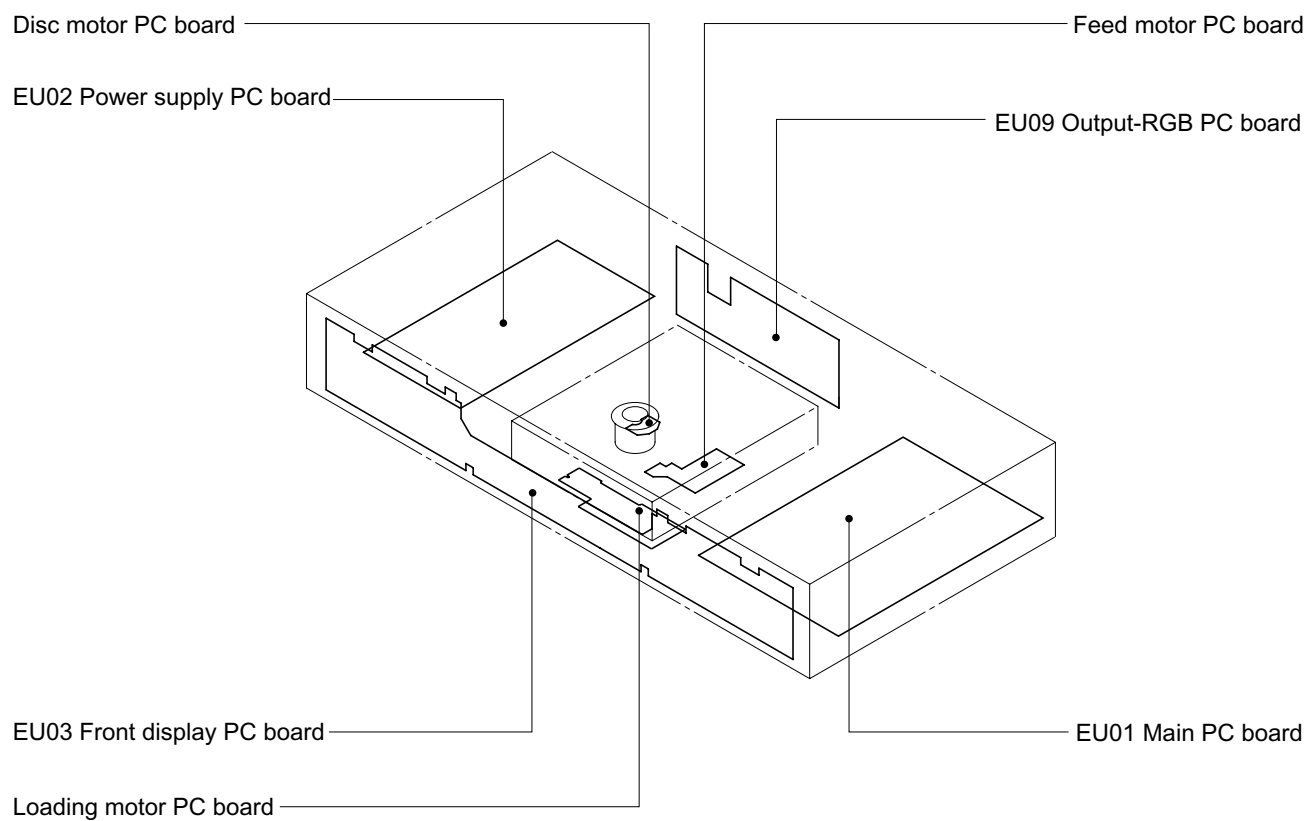


Fig. 1-2-1

2-2. Location of Mechanism Parts

2-2-1. Type A

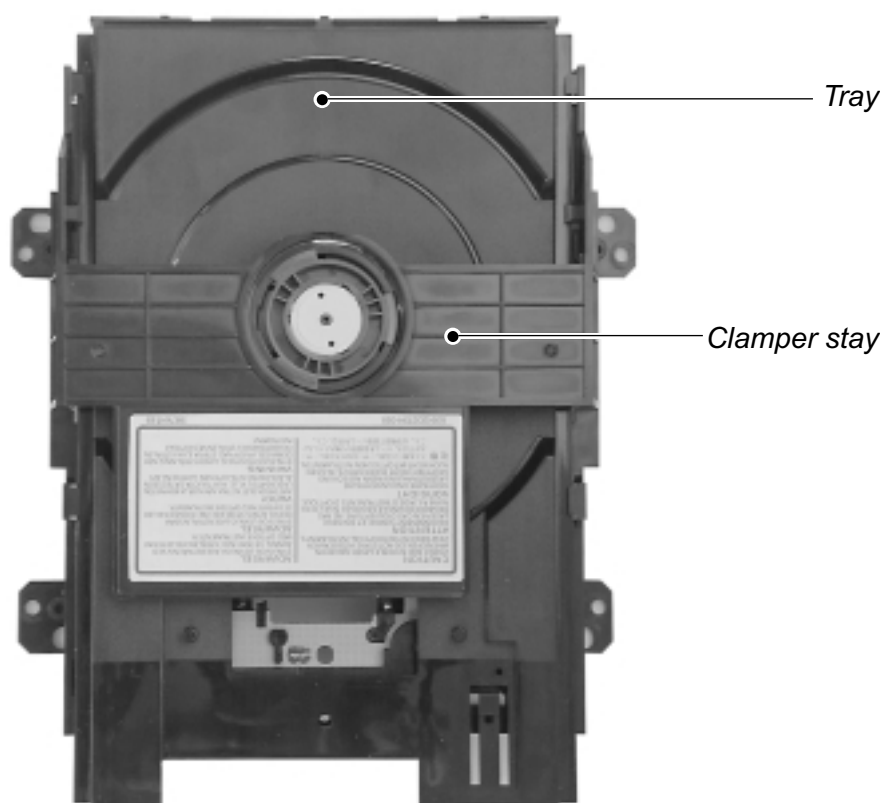


Fig. 1-2-2 Mechanism chassis assembly (Top side)

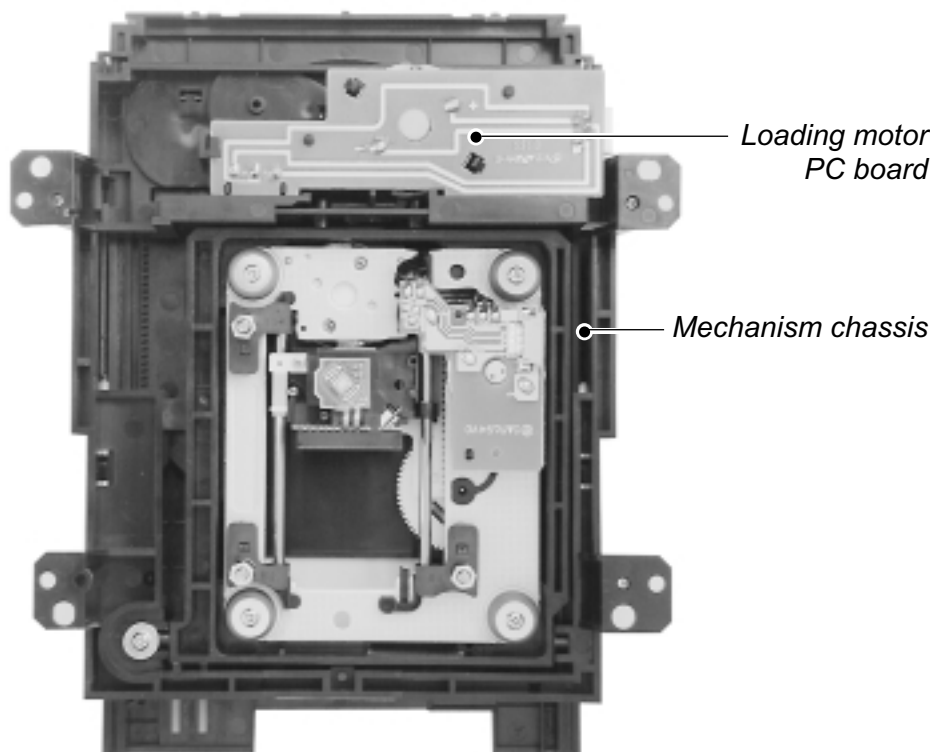


Fig. 1-2-3 Mechanism chassis assembly (Bottom side)

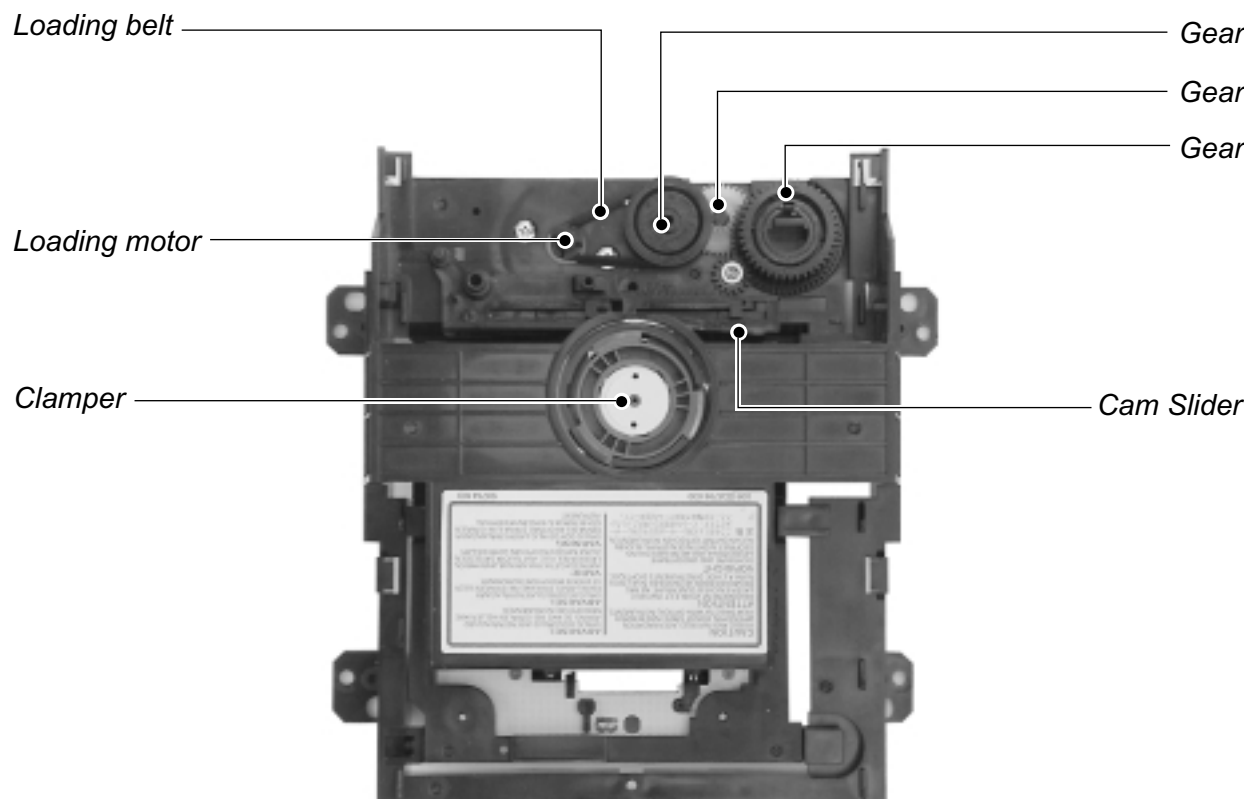


Fig. 1-2-4 Mechanism chassis assembly (Internal side)

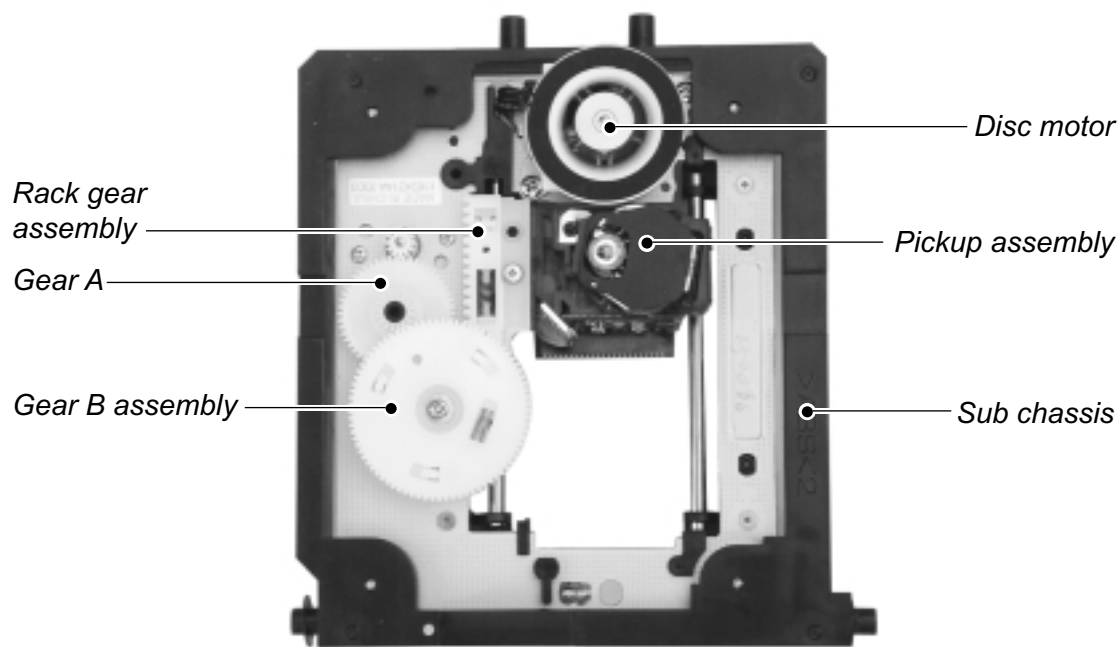


Fig. 1-2-5 Pickup mechanism chassis assembly (Top side)

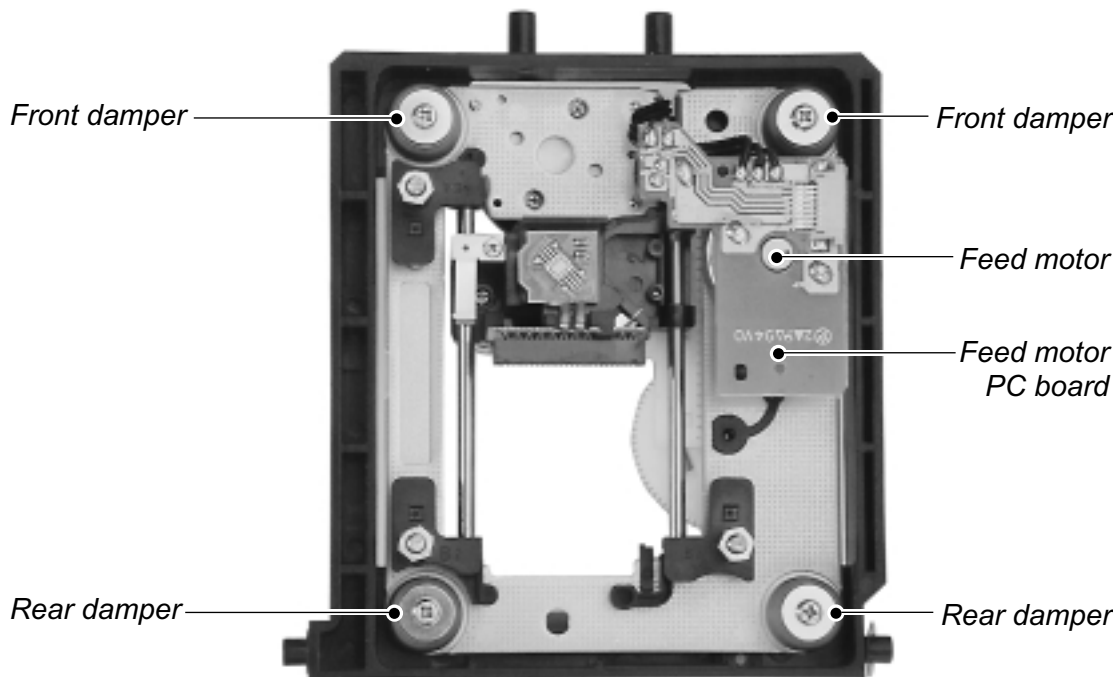


Fig. 1-2-6 Pickup mechanism chassis assembly (Bottom side)

2-2-2. Type B

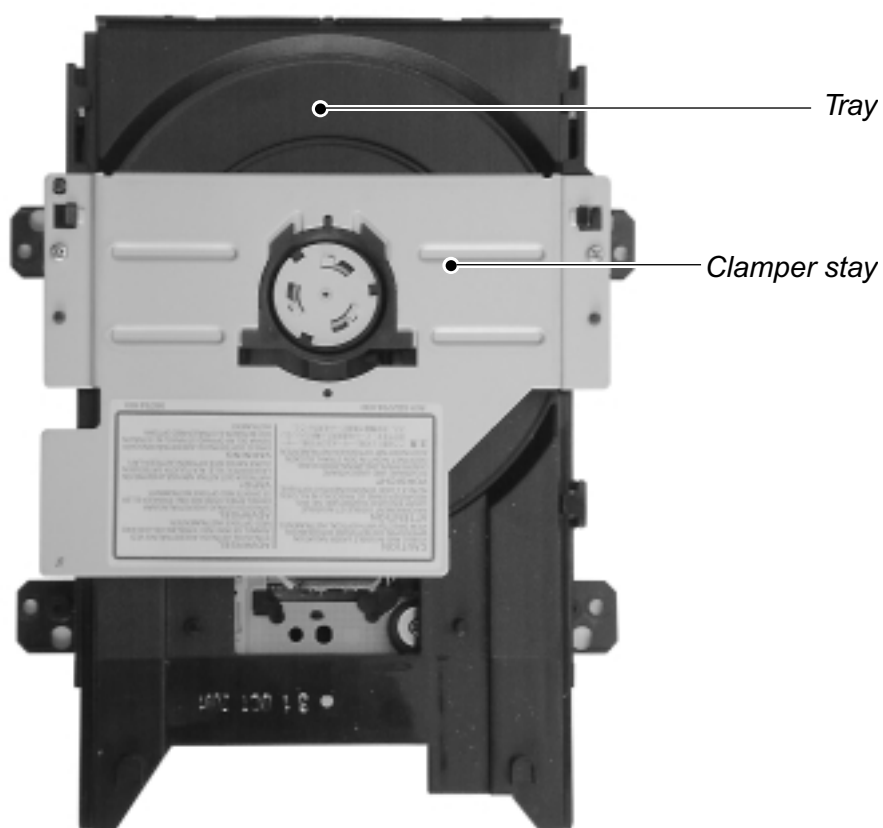


Fig. 1-2-7 Mechanism chassis assembly (Top side)

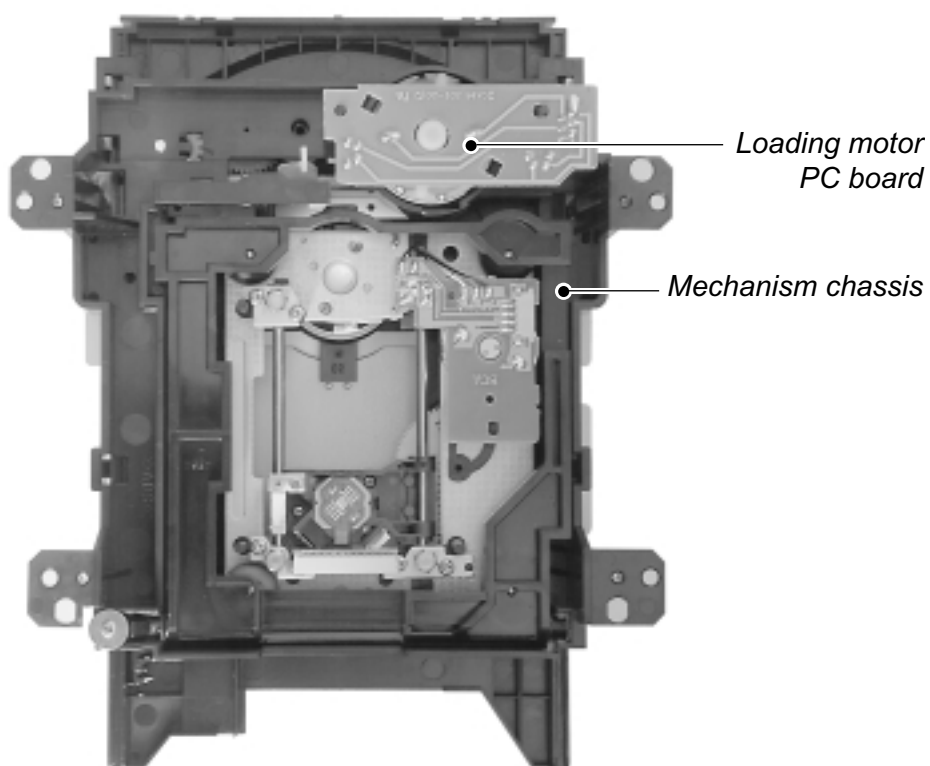


Fig. 1-2-8 Mechanism chassis assembly (Bottom side)

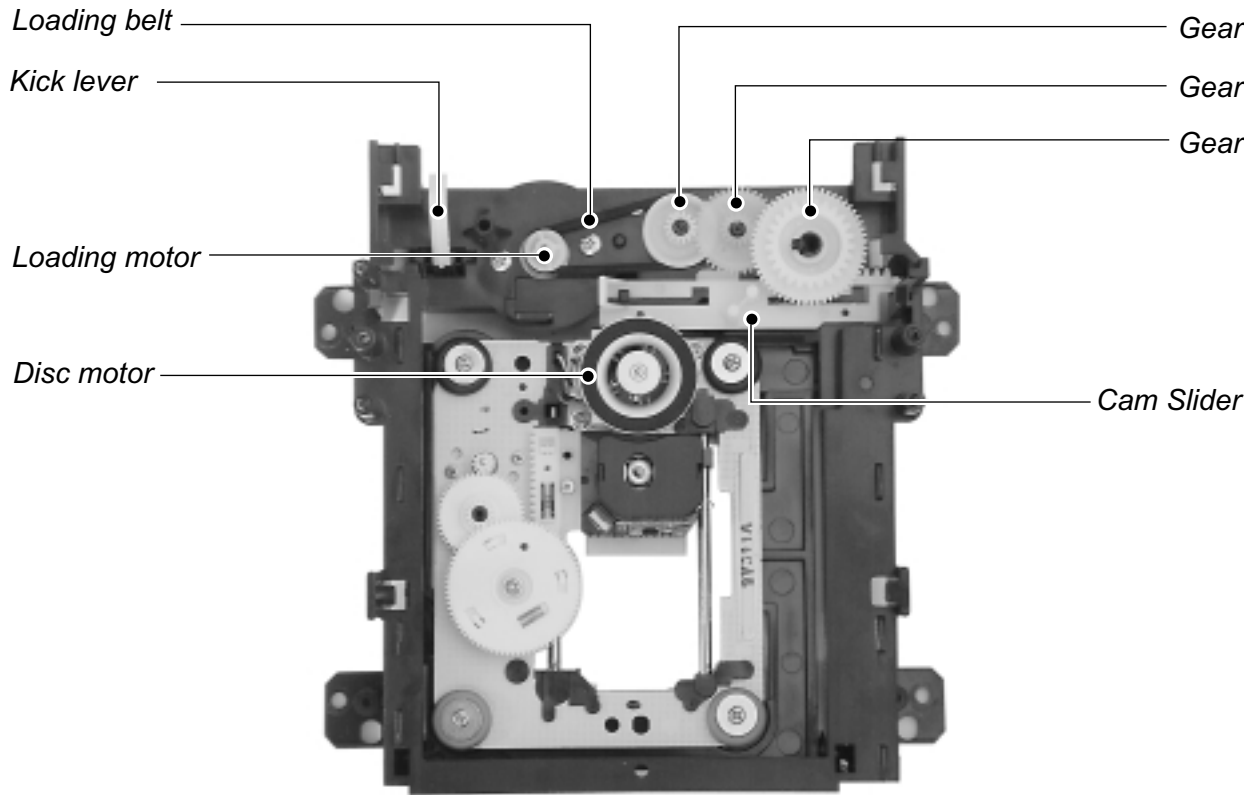


Fig. 1-2-9 Mechanism chassis assembly (Internal side)

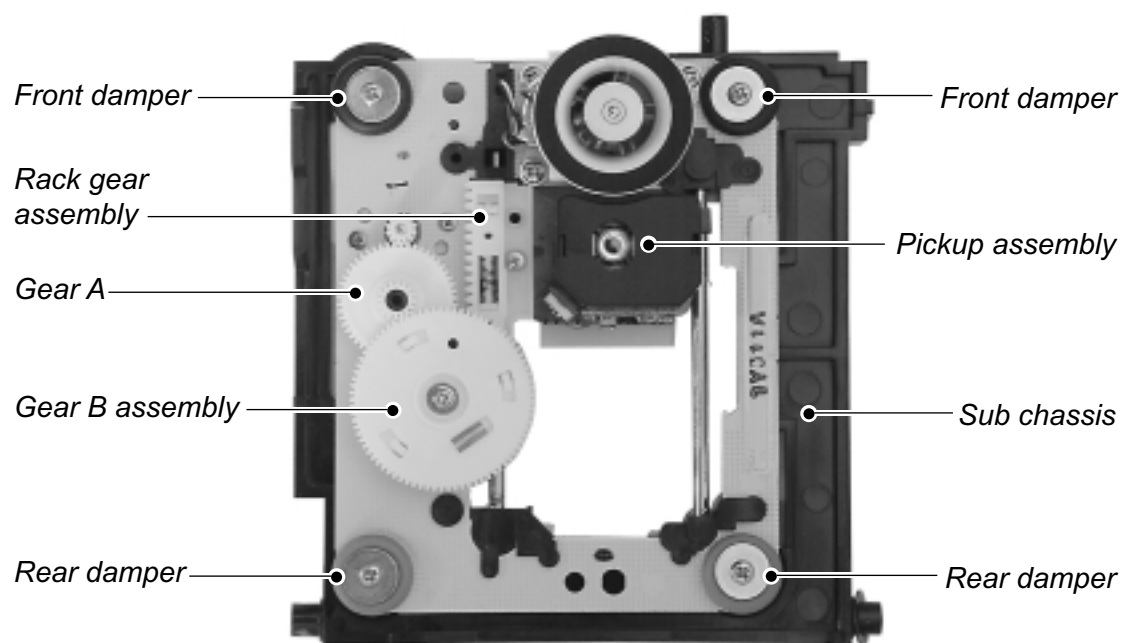


Fig. 1-2-10 Pickup mechanism chassis assembly (Top side)

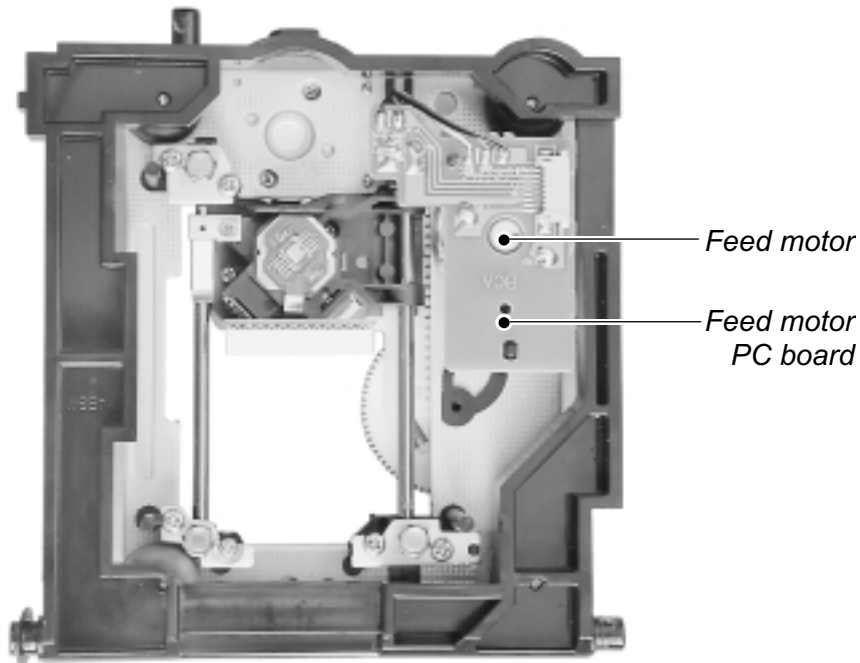


Fig. 1-2-11 Pickup mechanism chassis assembly (Bottom side)

3. TROUBLESHOOTING

3-1. Main Circuit

3-1-1. Servo System

(1) Initial Operation after Power ON

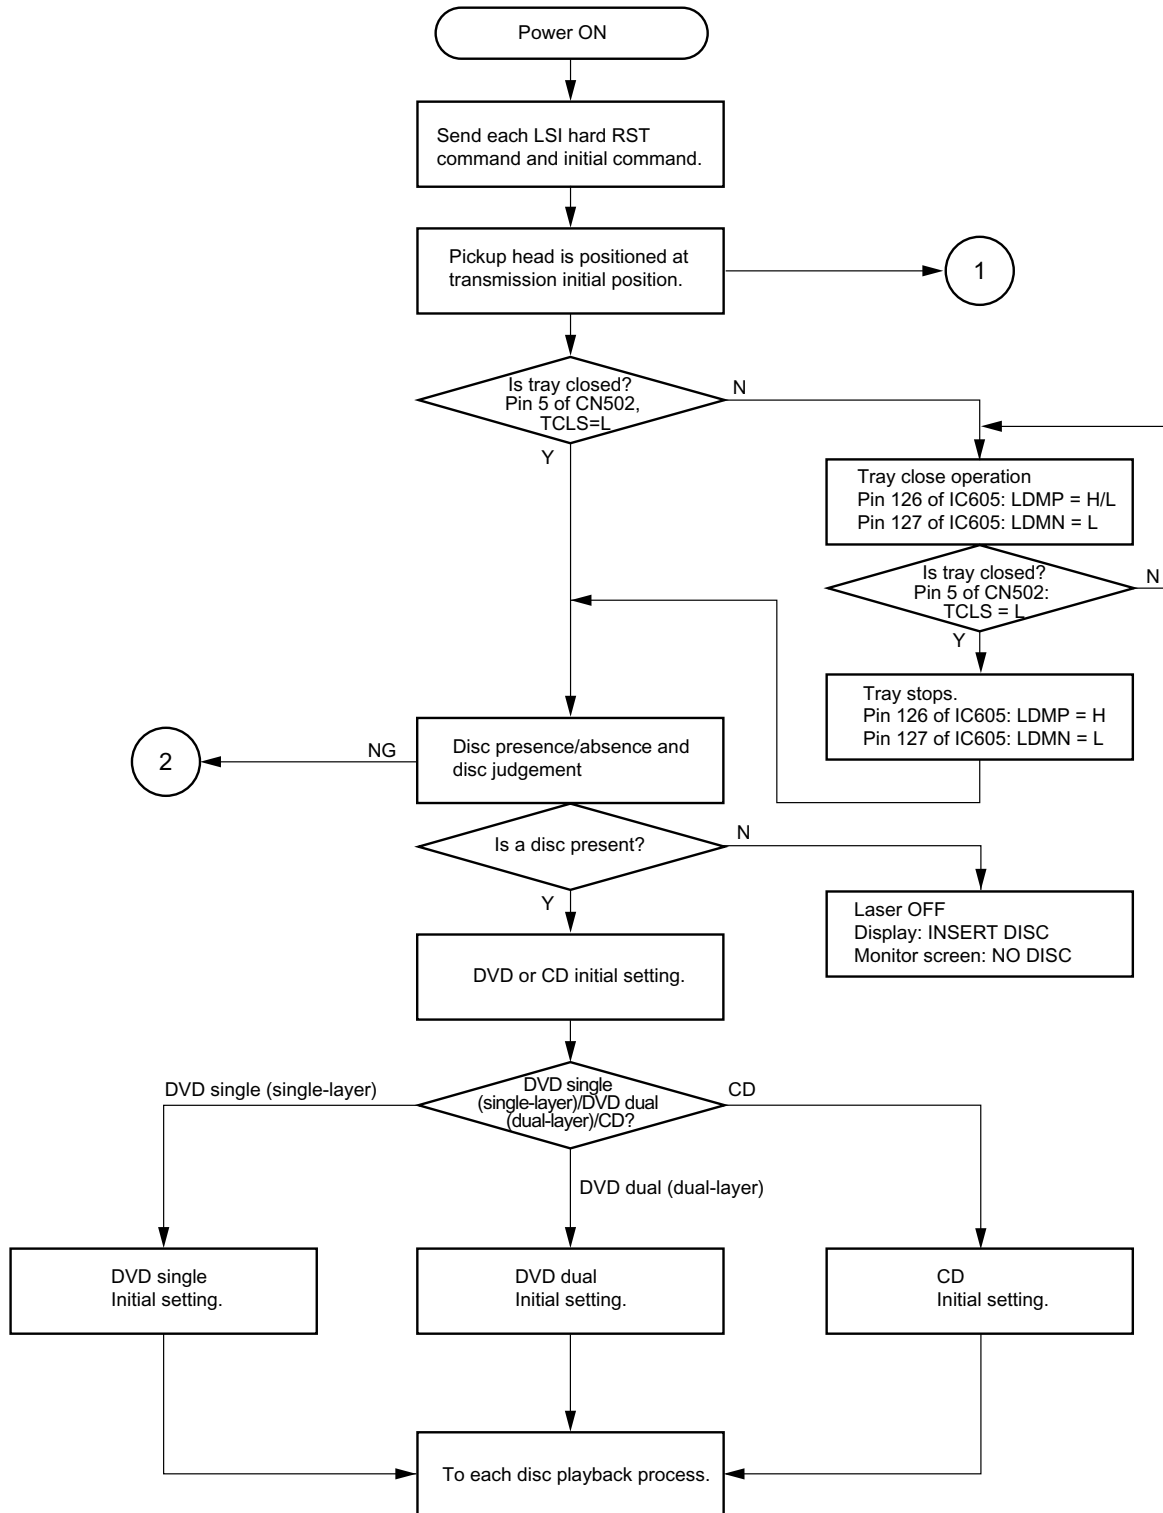


Fig. 1-3-1

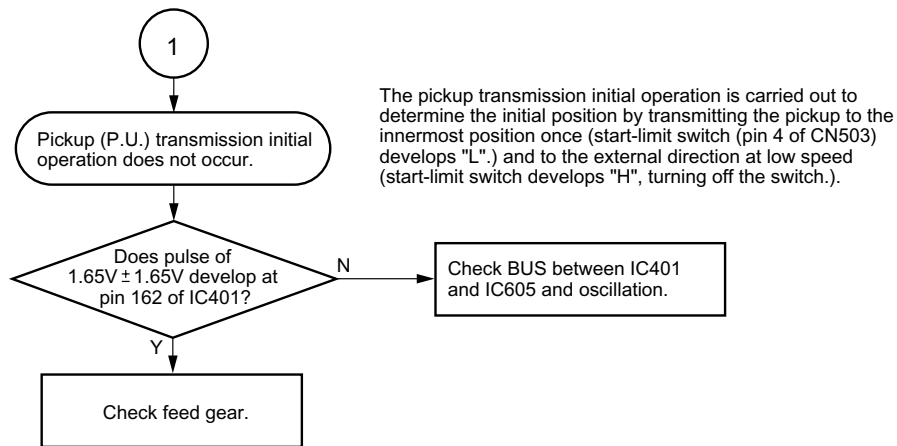


Fig. 1-3-2

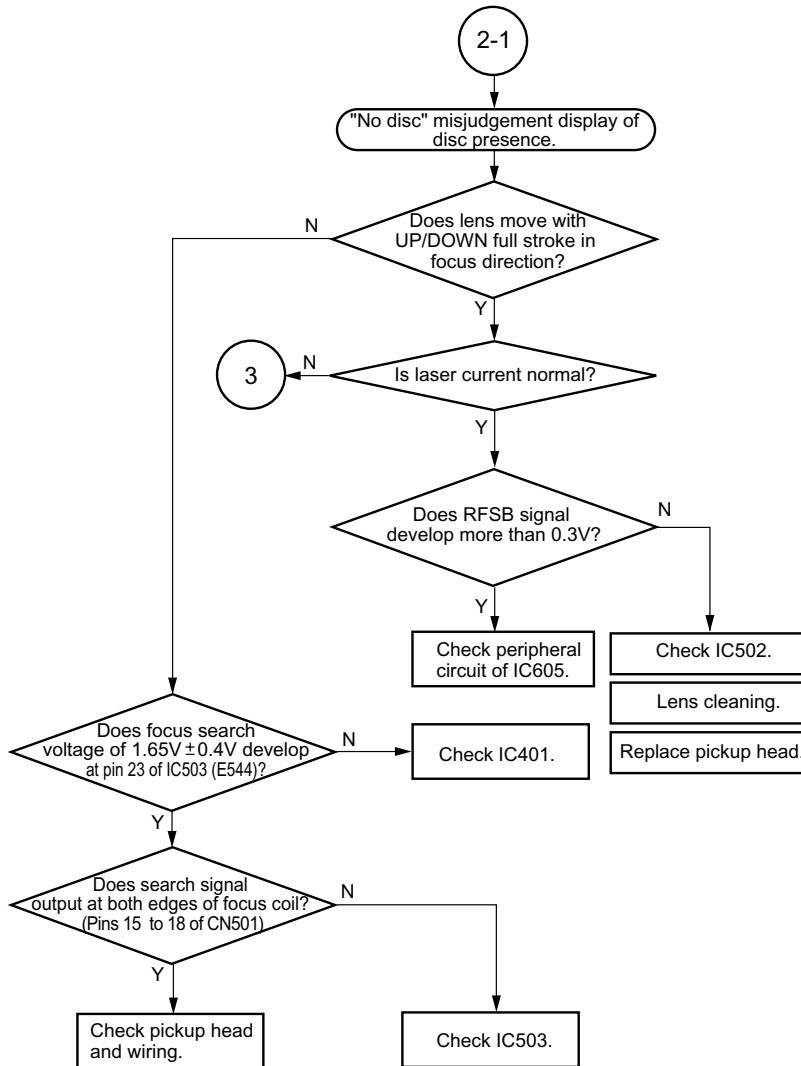


Fig. 1-3-3


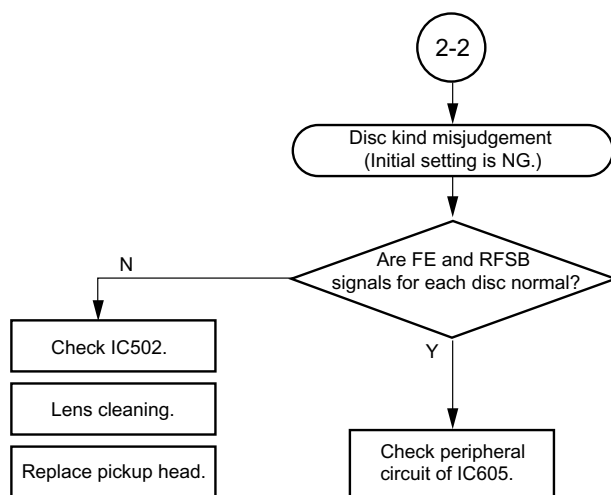


Fig. 1-3-4

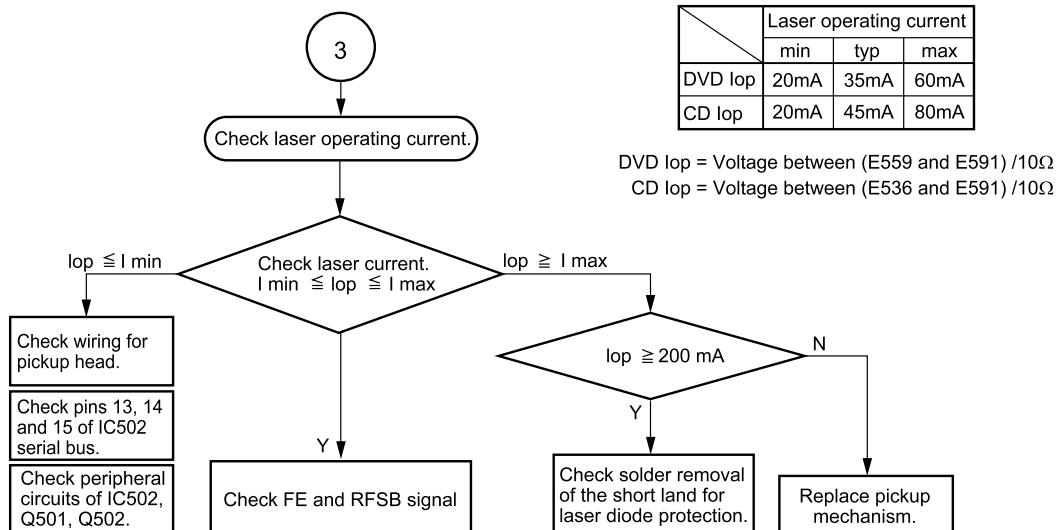

To turn on each laser diode forcibly, press the following buttons on the remote controller.

DVD LD: ZOOM, 0, 3, 0, ZOOM

CD LD: ZOOM, 0, 3, 1, ZOOM

After checked the laser current, press POWER or OPEN/CLOSE button to turn it off.

CAUTION

- The laser ray emitting out from the pickup head is very harmful to your eyes. Keep your eyes from the objective lens at least 300mm distance during the pickup head operating.
- When you perform solder removal work, please turn OFF a set power supply and perform the ground of human body and a tool.

Fig. 1-3-5

DVD single (single-layer) disc
detection waveform

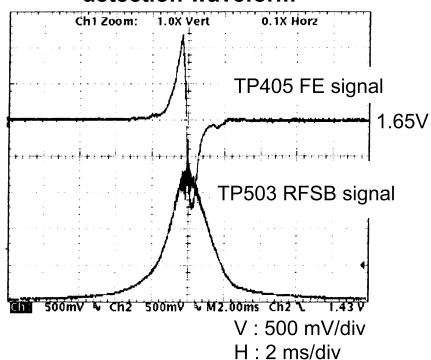


Fig. 1-3-6

DVD dual (dual-layer) disc
detection waveform

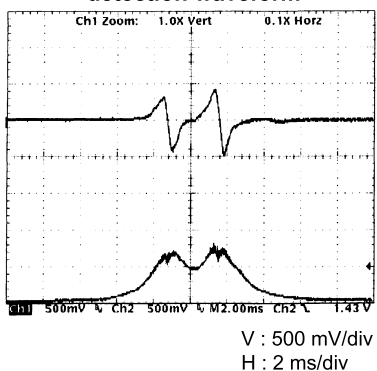


Fig. 1-3-7

CD disc
detection waveform

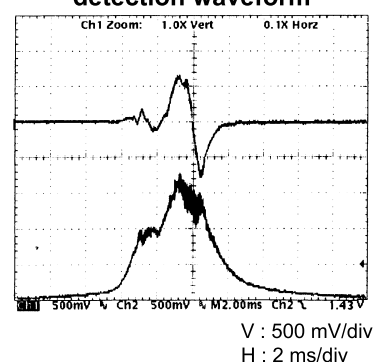


Fig. 1-3-8

(2) Picture appears (PLAY)

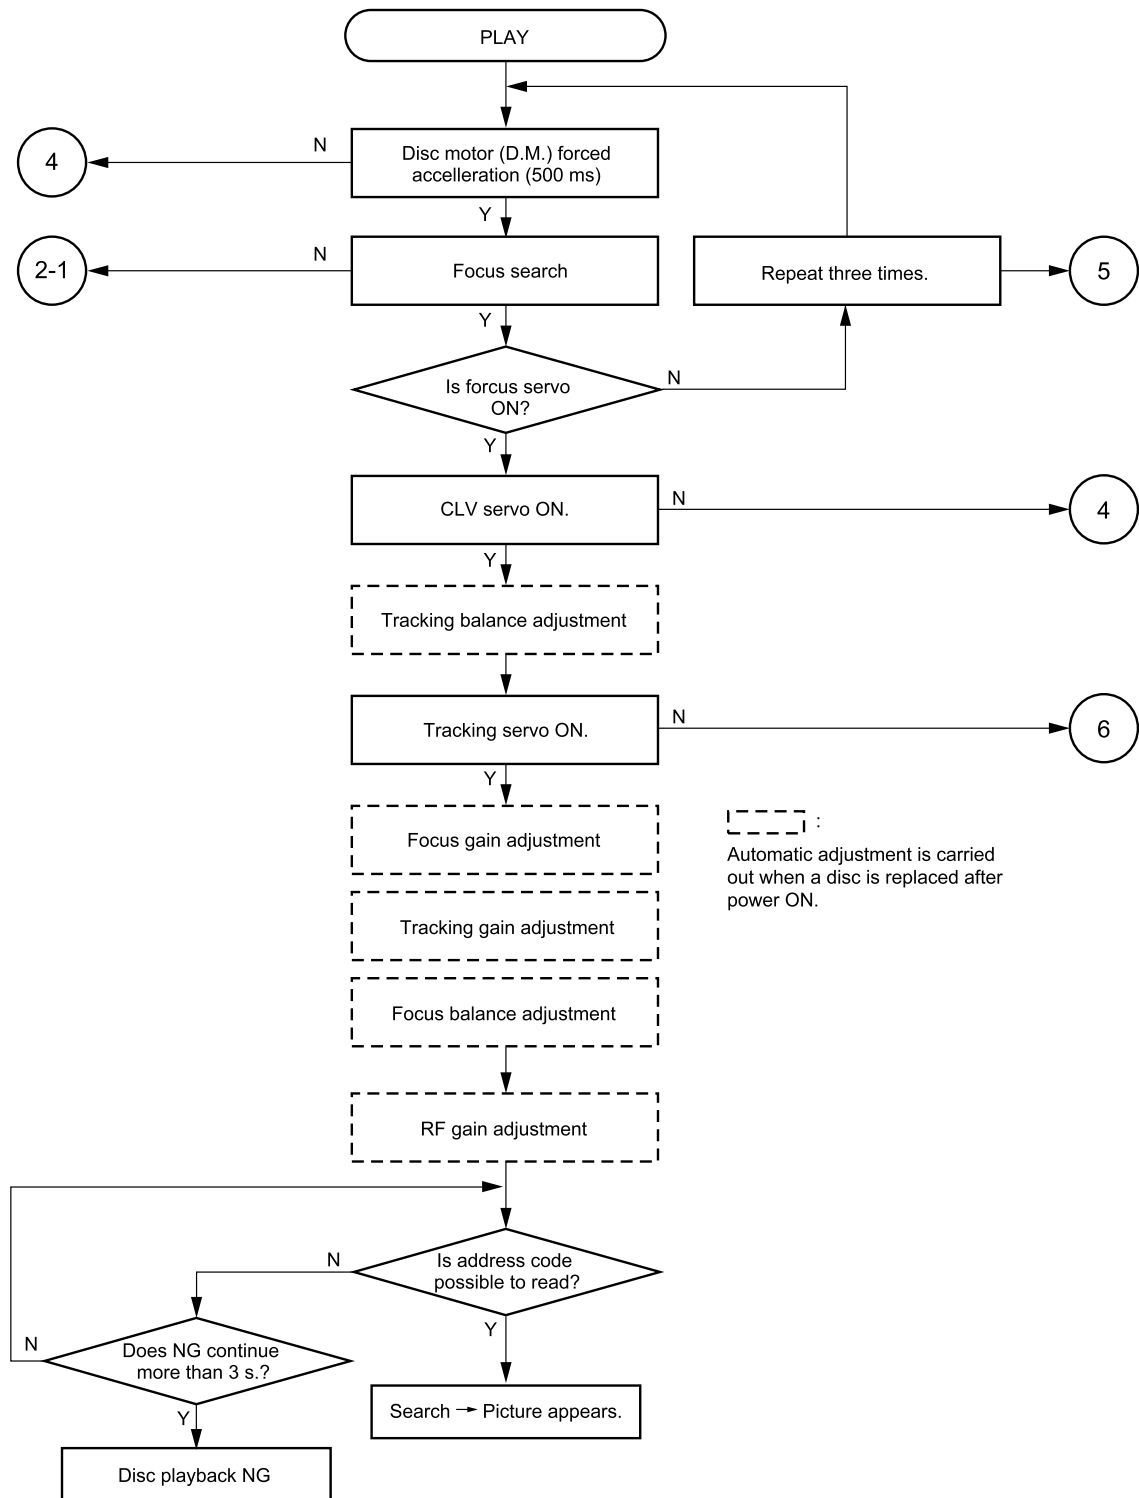


Fig. 1-3-9

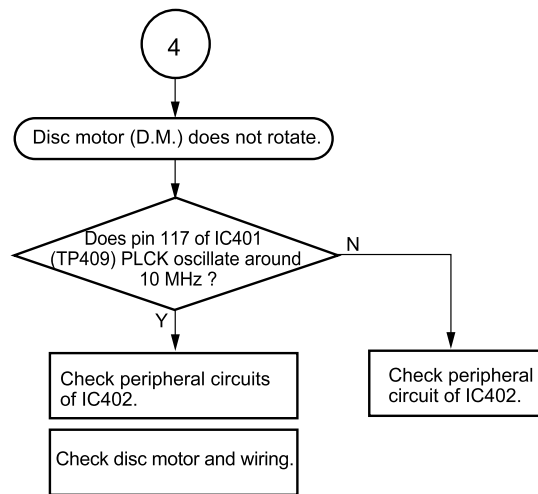


Fig. 1-3-10

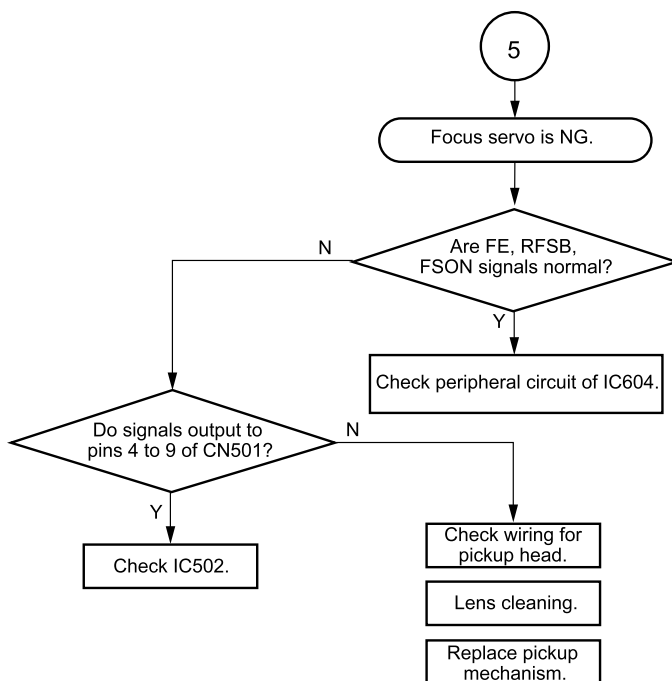


Fig. 1-3-11

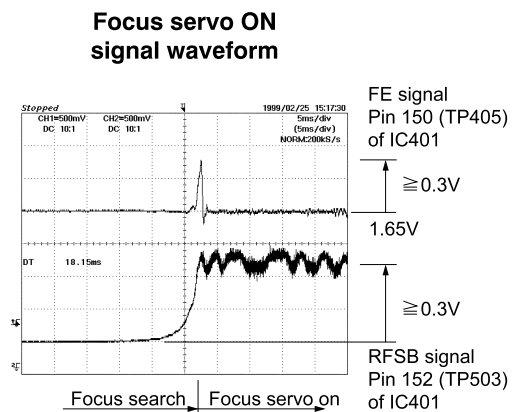


Fig. 1-3-12

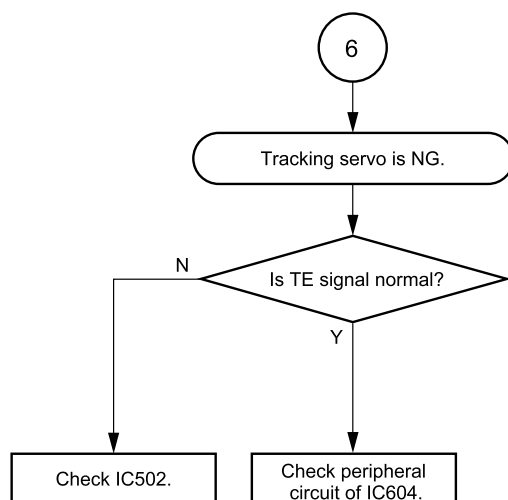


Fig. 1-3-13

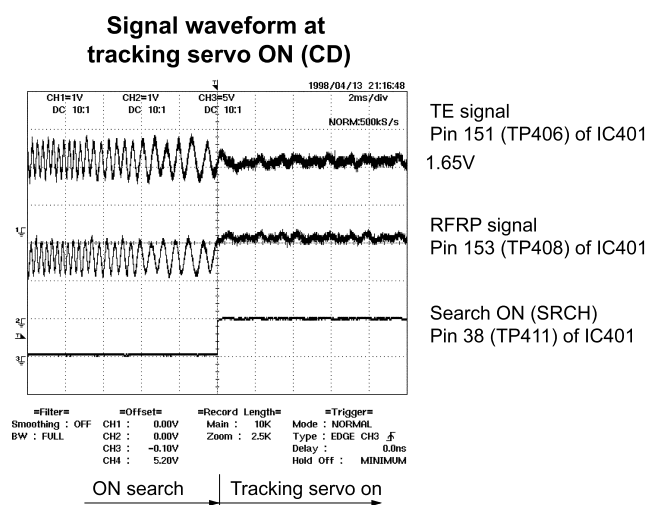


Fig. 1-3-14

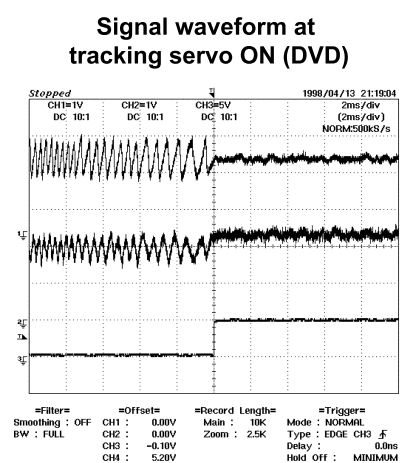


Fig. 1-3-15

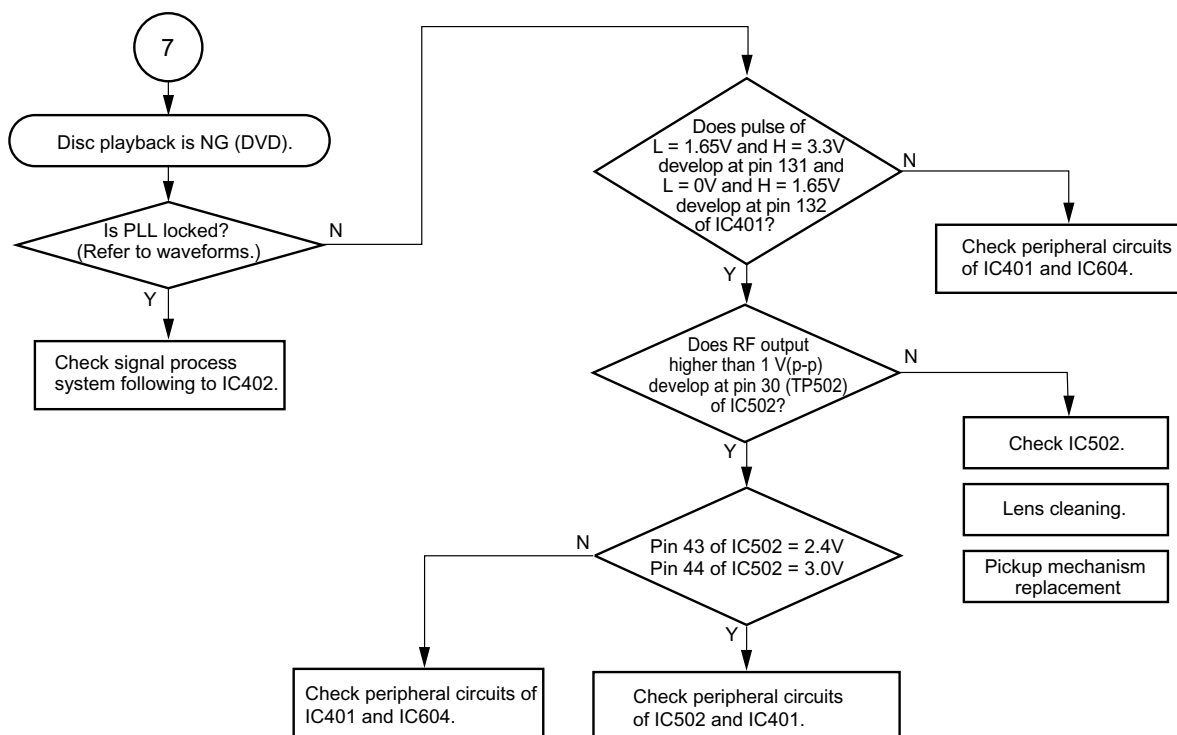


Fig. 1-3-16

PLL works as a servo loop to generate a clock signal for reading RF signal binary data. With the PLL locked, the eye pattern is identified clearly when triggered with the read clock PLCK.

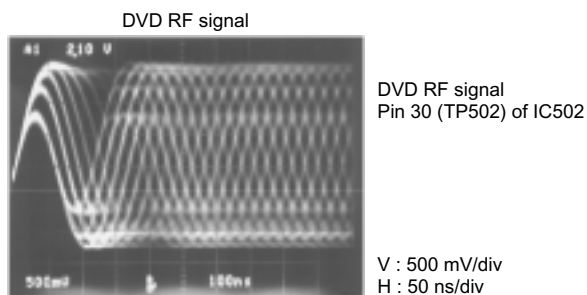


Fig. 1-3-17

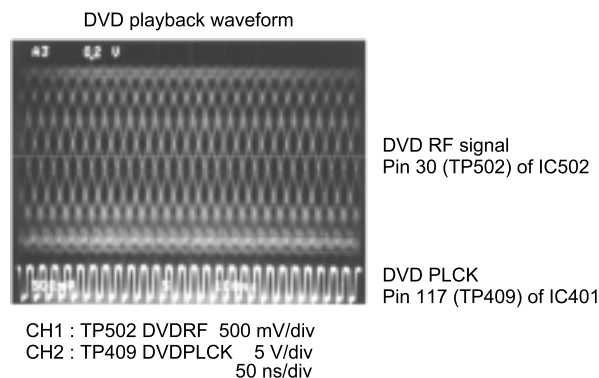


Fig. 1-3-19

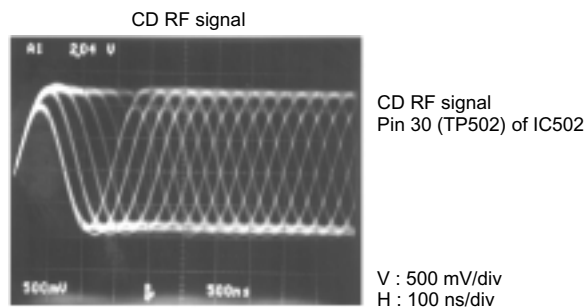


Fig. 1-3-18

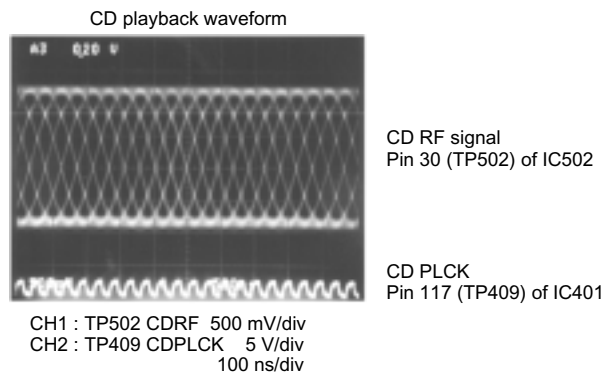


Fig. 1-3-20

3-1-2. Location Diagram of Servo Test Point

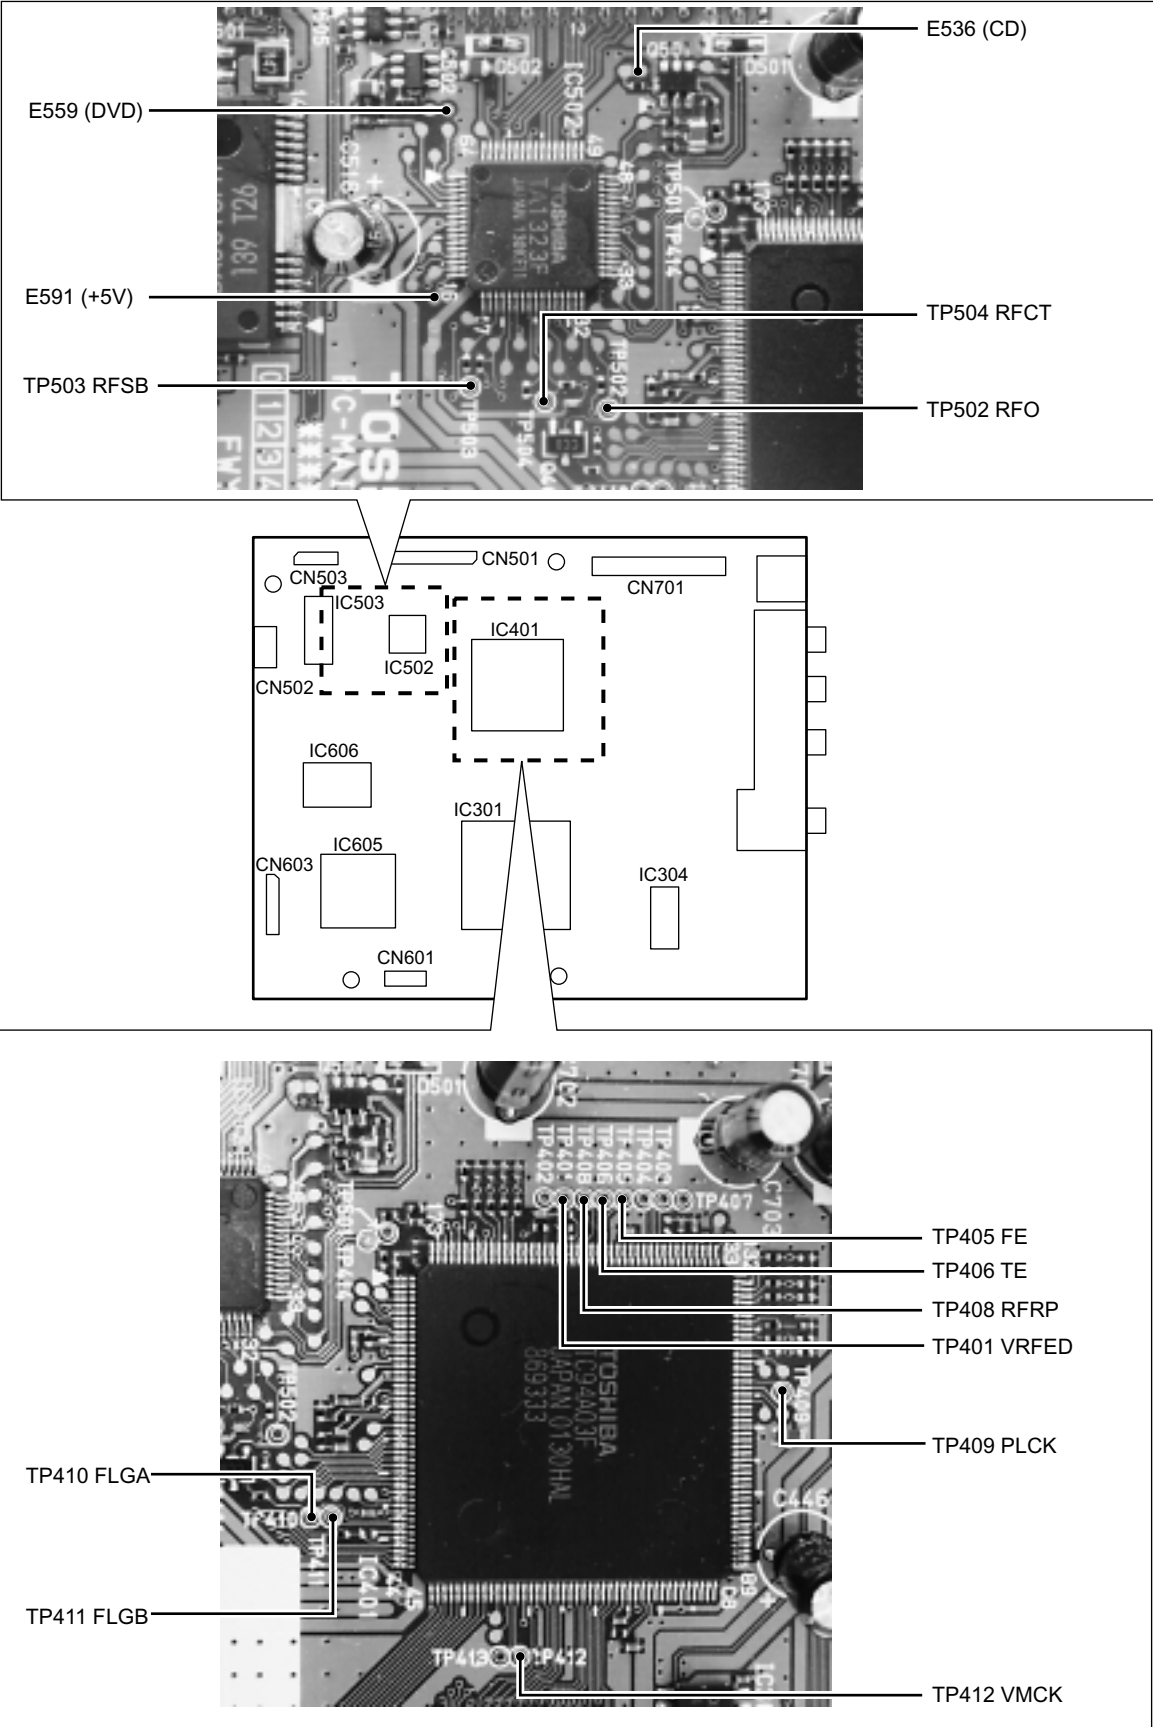


Fig. 1-3-21

SECTION 2

PART REPLACEMENT AND ADJUSTMENT PROCEDURES

CAUTIONS BEFORE STARTING SERVICING

Electronic parts are susceptible to static electricity and may easily be damaged, so do not forget to take a proper grounding treatment as required.

Many screws are used inside the unit. To prevent missing, dropping, etc. of the screws, always use a magnetized screwdriver in servicing. Several kinds of screws are used and some of them need special cautions. That is, take care of the tapping screws securing molded parts and fine pitch screws used to secure metal parts. If they are used improperly, the screw holes will be easily damaged and the parts can not be fixed.

1. REPLACEMENT OF MECHANICAL PARTS (TYPE A)

1-1. Cabinet Replacement

1-1-1. Top Cover

1. Remove five screws (1), then remove the top cover (2).

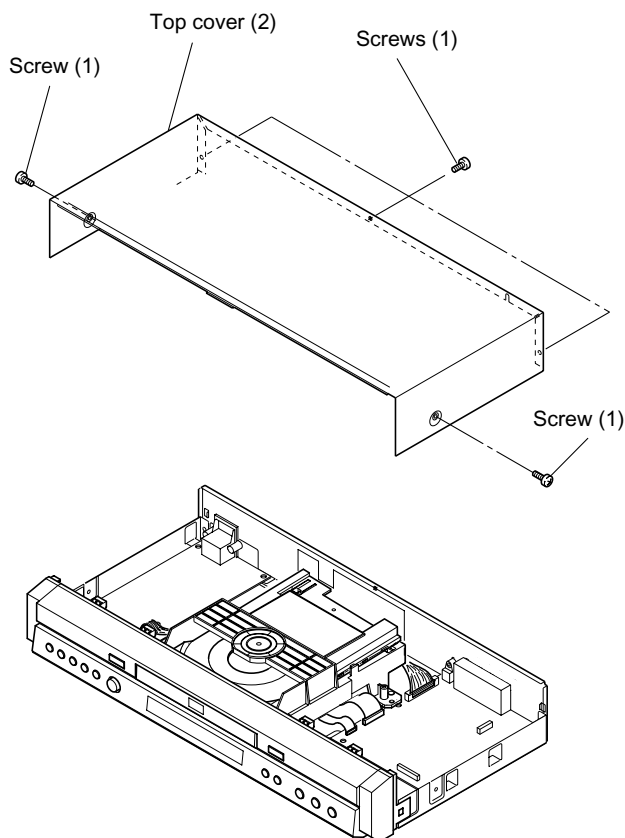


Fig. 2-1-1

1-1-2. Tray Panel

<Tray Ejection>

1. Insert a paper clip, etc. into the hole A to eject the tray (1).

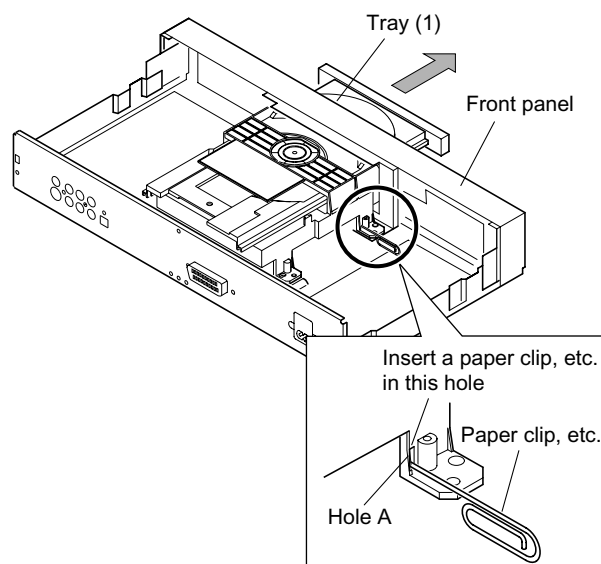


Fig. 2-1-2

<Tray Panel Removal>

1. Eject the tray (1). (Refer to item 1-1-2.)
2. Twist the tray panel (2) a little in the arrow A direction with the tray (1) hold by hand to release two claws and lift up the tray panel (2) in the arrow B direction, then the tray panel (2) is removed.
3. When mounting the tray panel (2), insert the tray panel (2) along the grooves of the both sides of the tray (1) until clicking.

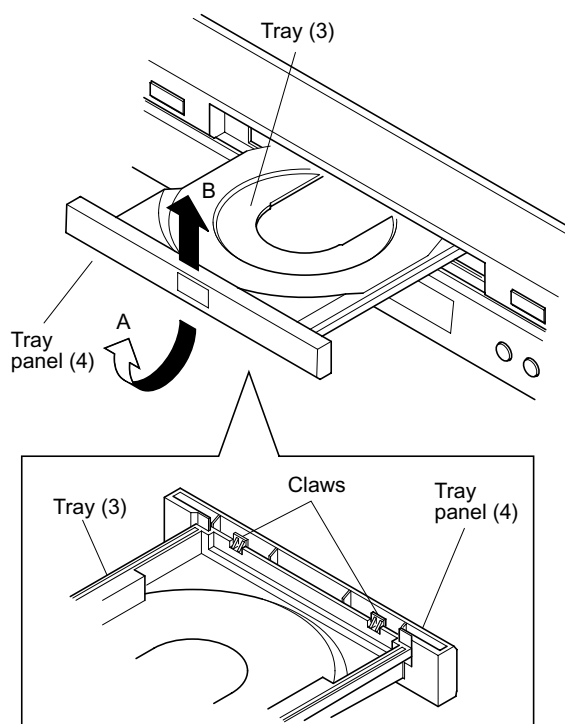


Fig. 2-1-3

1-1-3. Front Panel

1. Remove one flexible cable (1).
2. Remove one screw (2), then remove the GND lead (3).
3. Release four claws, then remove the front panel (4).

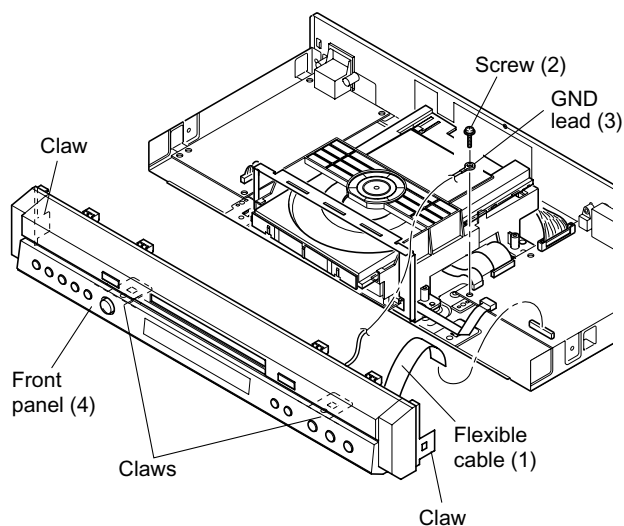


Fig. 2-1-4

1-1-4. Tray

1. Pull out the tray (1) towards you until it stops.
2. Lift up claw A with a minus screwdriver, and pull out the tray (1) towards you, then remove the tray (1).

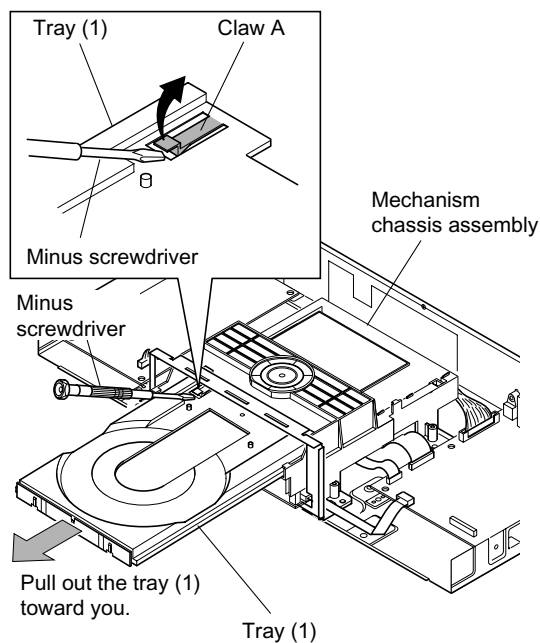


Fig. 2-1-5

1-1-5. Rear Panel

1. Remove eight screws (1), then remove the rear panel (2). (In case of SD-120, remove seven screws (1), then remove the rear panel (2).)

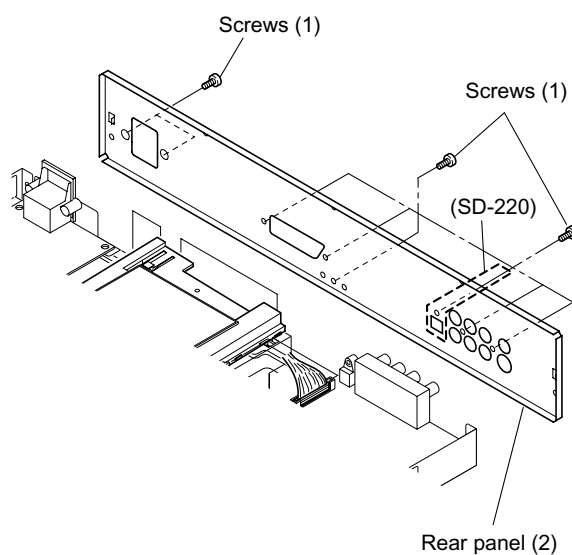


Fig. 2-1-6

1-2. PC Board Replacement

1-2-1. Main PC Board

Note:

- Before removing the main PC board (5), be sure to short-circuit the laser diode output land.
- After replacing, open the land as it was after inserting the flexible cables (1).
1. Remove the top cover. (Refer to item 1-1-1.)
 2. Eject the tray. (Refer to item 1-1-4.)
 3. Remove five flexible cables (1) and remove one connector (2).
 4. Remove three screws (3). (In case of SD-120, remove two screws (3).)
 5. Remove four screws (4), then remove the main PC board (5).

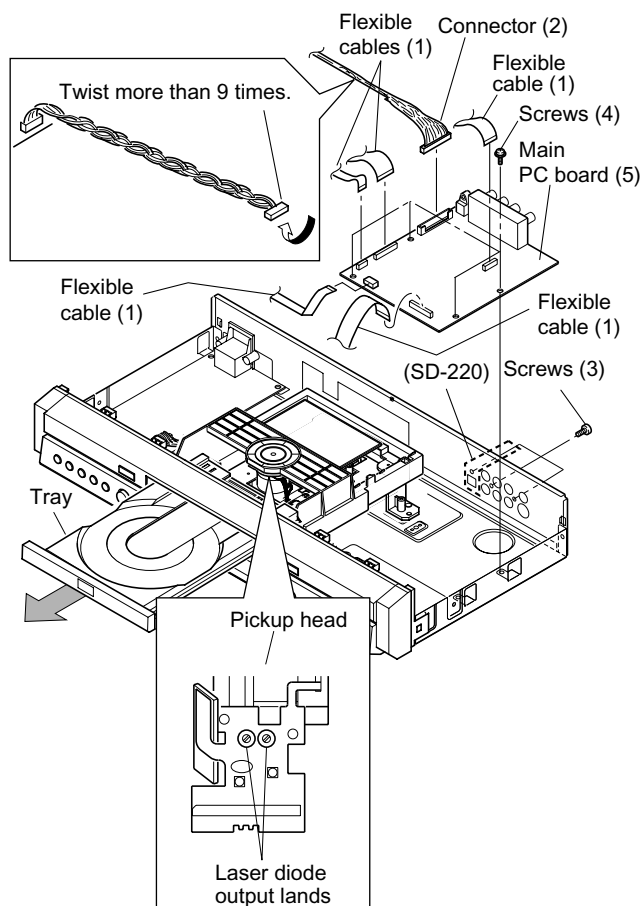


Fig. 2-1-7

1-2-2. Power PC board

1. Peel off two tapes (1) and remove the connector (2).
2. Remove four screws (3), then remove the power supply PC board (4).

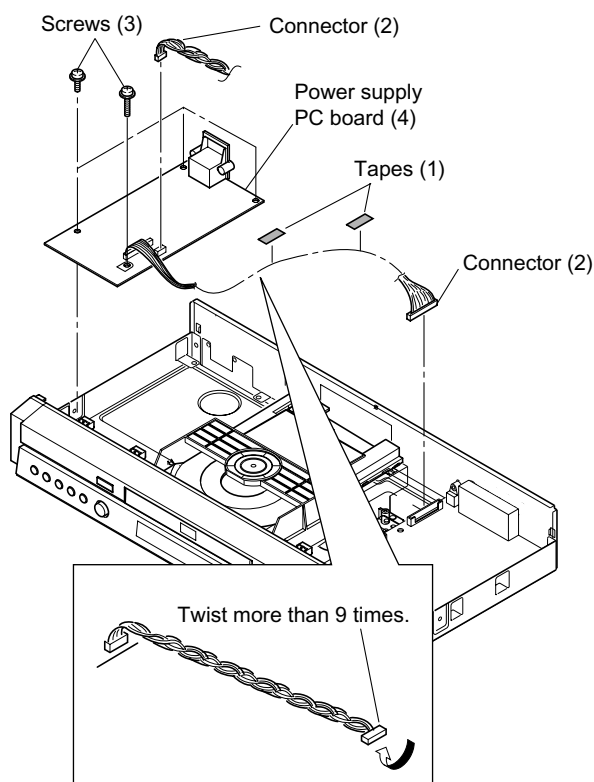


Fig. 2-1-8

1-2-3. Output PC Board

1. Eject the tray slightly.
2. Peel off the tape (1).
3. Remove the connector (2) and the flexible cable (3).
4. Remove two screws (4), then remove the output-RGB PC board (5).

Note:

- Wind the wire around the connector (6) several times when mounting the connector (2).

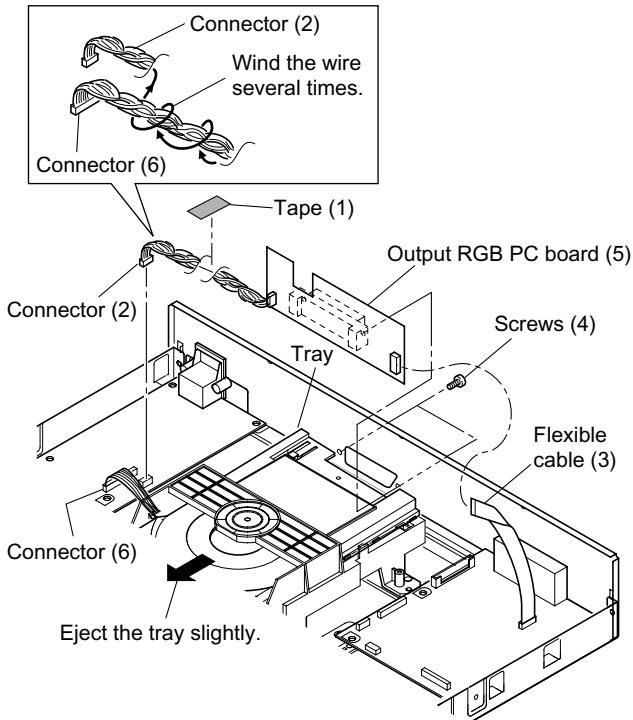


Fig. 2-1-9

1-2-4. Front PC Board (SD-220)

1. Remove the front panel. (Refer to item 1-1-3.)
2. Remove eight screws (1), then remove the front display PC board (2).
3. Remove the flexible cable (3).
4. Remove three screws (4), then remove the ENTER switch (5).

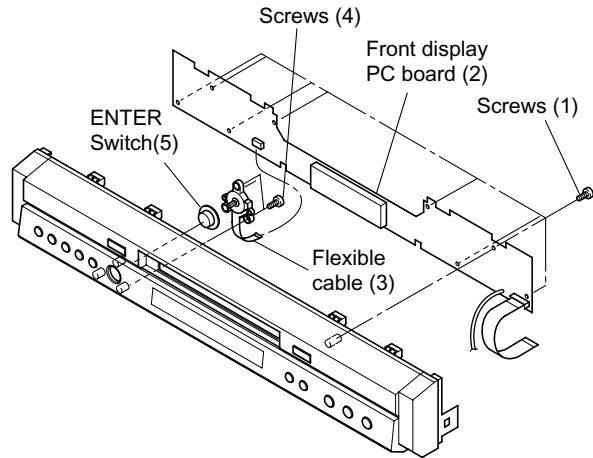


Fig. 2-1-10

1-2-5. Front PC Board (SD-120)

1. Remove the front panel. (Refer to item 1-1-3.)
2. Remove eight screws (1), then remove the front display PC board (2).

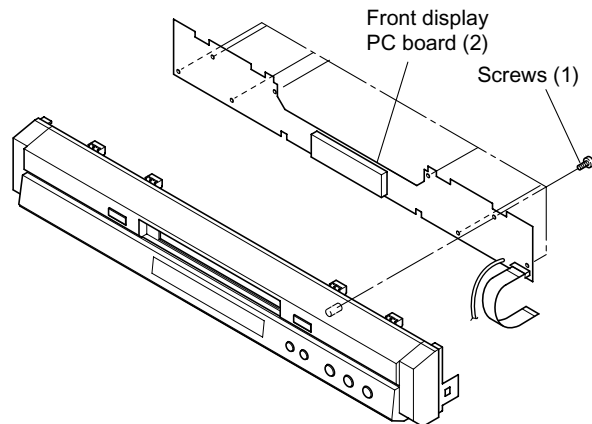


Fig. 2-1-11

1-3. Mechanism Parts

1-3-1. Mechanism Chassis Assembly

Note:

- When removing the mechanism chassis assembly (3), be sure to short-circuit the laser diode output land before removing the connector and the flexible cables.

After replacing, open the land as it was after inserting the connector and flexible cables.

1. Remove the front panel. (Refer to item 1-1-3.)
2. Remove three flexible cables (1).
3. Remove four screws (2), then remove the mechanism chassis assembly (3).

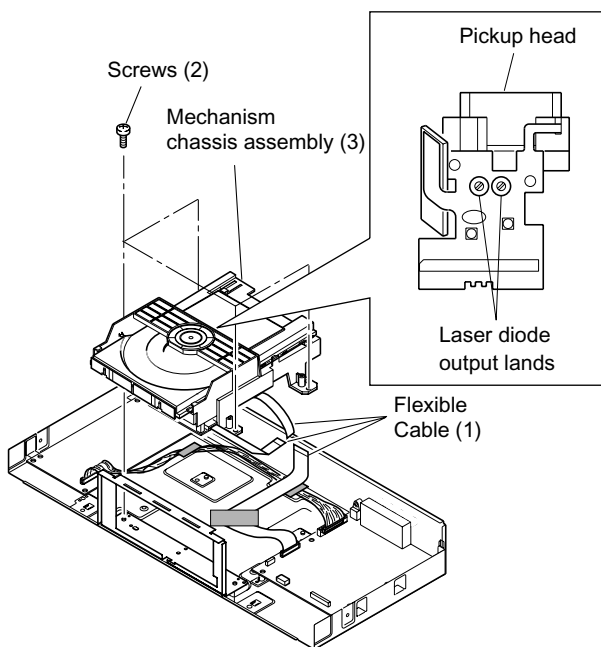


Fig. 2-1-12

2. REPLACEMENT OF MECHANICAL PARTS (TYPE B)

2-1. Cabinet Replacement

2-1-1. Top Cover

1. Remove five screws (1), then remove the top cover (2).

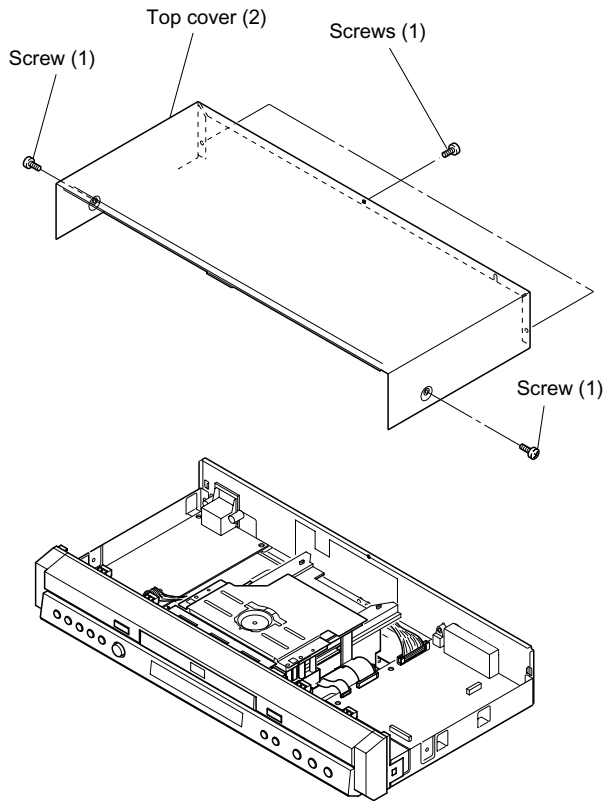


Fig. 2-1-13

2-1-2. Clamper Stay

<Removal>

1. Remove two screws (1).
2. Release two claws and remove the clamper stay (2).

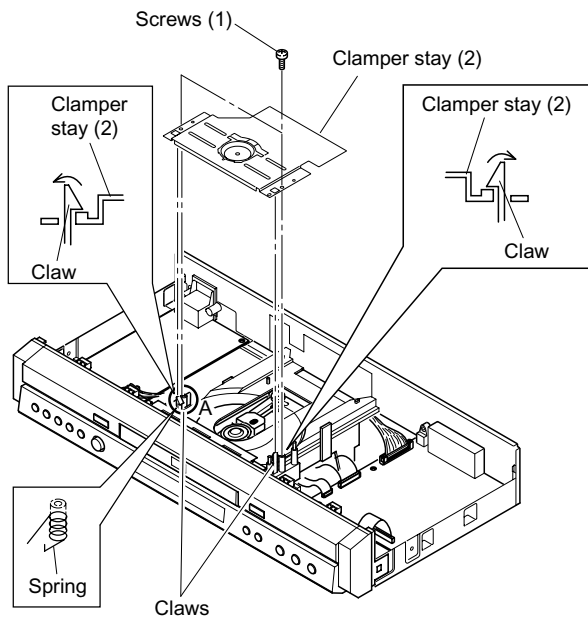


Fig. 2-1-14

<Mounting>

1. The spring for tray side pressure is inserted into the portion "A". (Refer to Fig. 2-1-14.)
2. By referring to Fig. 2-1-15, insert the spring normally and mount the clamper stay.

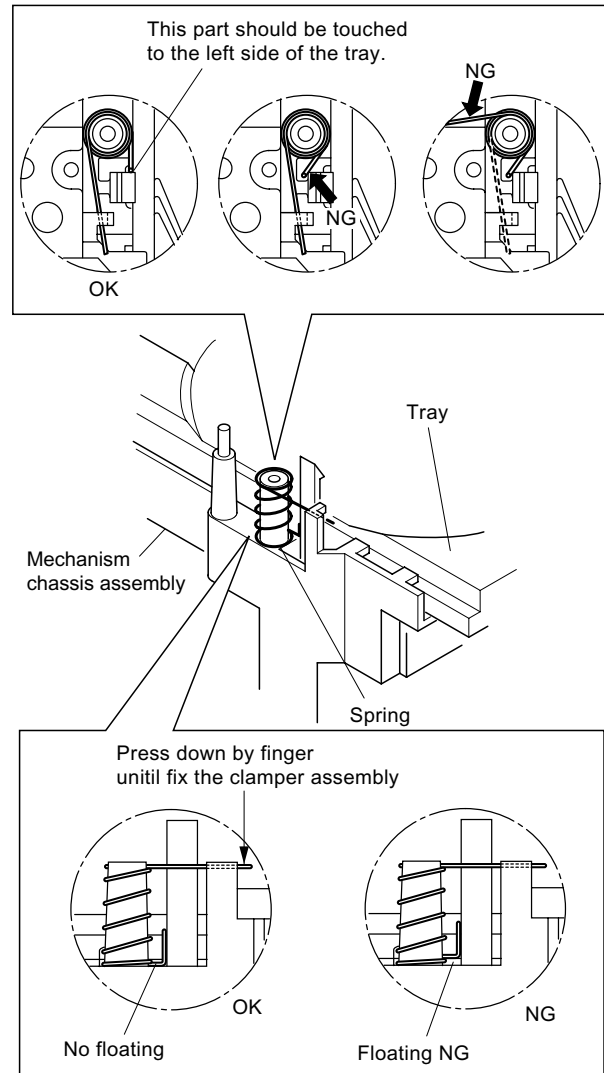


Fig. 2-1-15

2-1-3. Tray Panel

<Tray Ejection>

1. Slide the slider (2) of the mechanism chassis assembly (1) with a screwdriver, etc. in the arrow direction, so that the tray (3) is ejected.

Note:

- Take care not to damage the pickup and other parts.

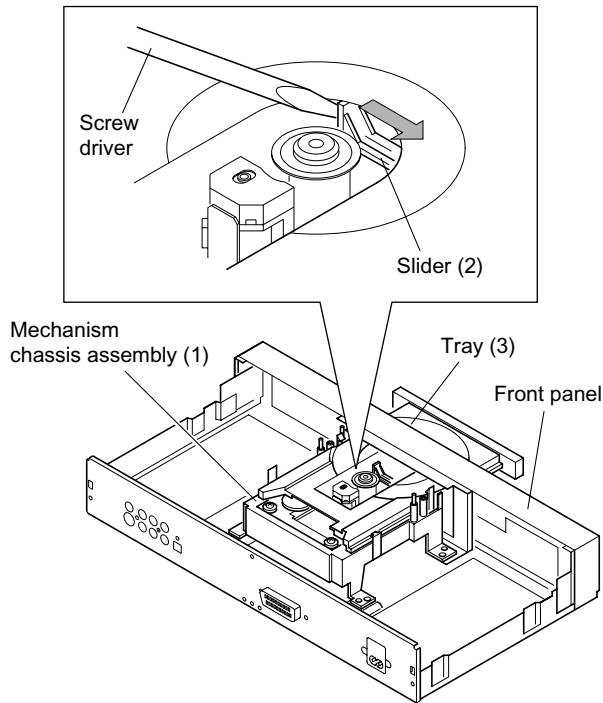


Fig. 2-1-16

<Tray Panel Removal>

1. Eject the tray (3).
2. Twist the tray panel (4) a little in the arrow A direction with the tray (3) hold by hand to release two claws and lift up the tray panel (4) in the arrow B direction, then the tray panel (4) is removed. (Refer to Fig. 2-1-17.)
3. When mounting the tray panel (4), insert the tray panel (4) along the grooves of the both sides of the tray (3) until clicking.

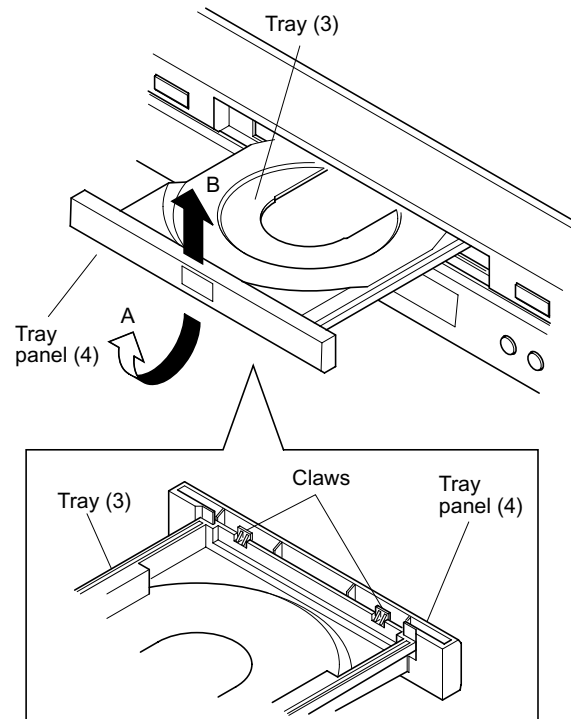


Fig. 2-1-17

2-1-4. Front Panel and Tray

1. Remove the flexible cable (1).
2. Remove one screw (2) and GND lead (3).
3. Release four claws and remove the front panel (4).
4. Pull out the tray (5) towards you.

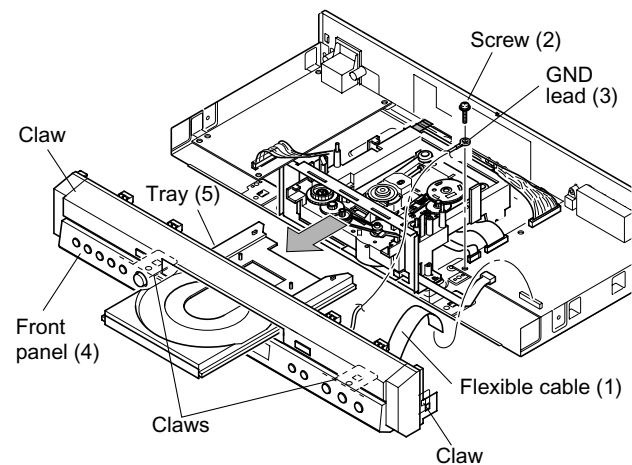


Fig. 2-1-18

Note:

- Insert the tray (3) with the front side of the pickup mechanism assembly descended. (The slider positions to the left side.)
- The gears are required to match their phases each other. After setting the gear (4) as shown in the figure "A", insert the tray (3). When inserting a tray (3), push the rack gear side shown by the arrow.

- Confirm that the mark of the gear matches with the triangle mark on the reverse side of the tray in the tray close status. (The gear is rotated with the slider locks.) (Refer to Fig. B.)

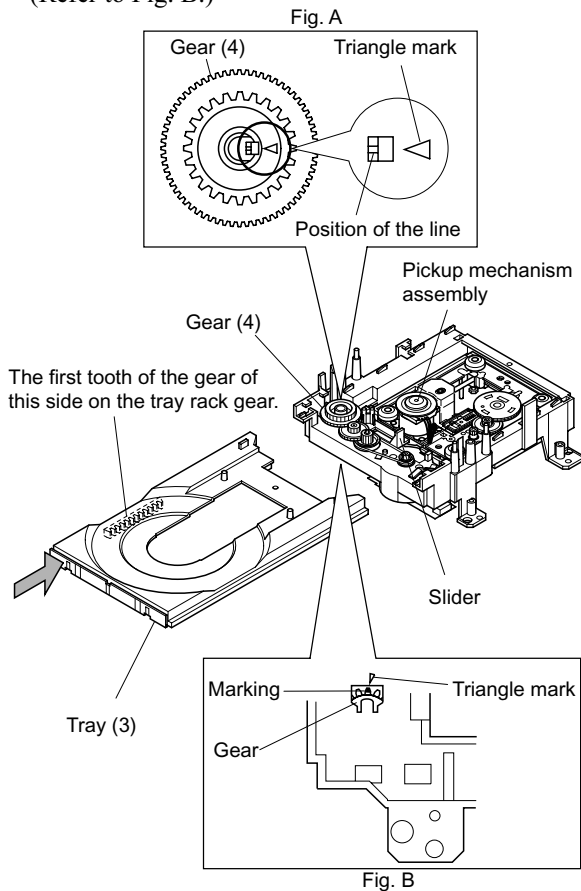


Fig. 2-1-19

2-1-5. Rear Panel

1. Remove eight screws (1), then remove the rear panel (2). (In case of SD-120, remove seven screws (1), then remove the rear panel (2).)

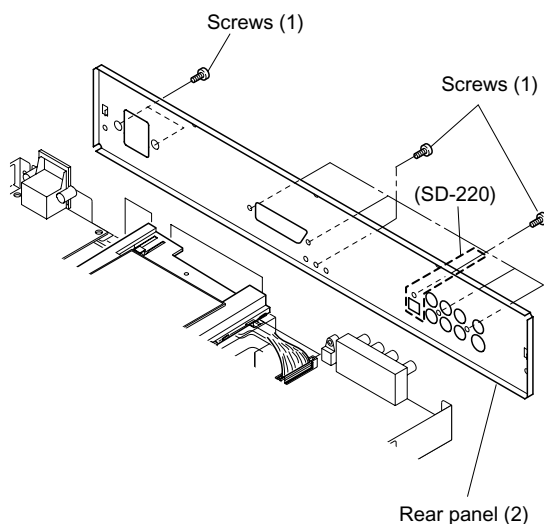


Fig. 2-1-20

2-2. PC Board Replacement

2-2-1. Main PC Board

Note:

- Before removing the main PC board (5), be sure to short-circuit the laser diode output land.
- After replacing, open the land as it was after inserting the flexible cables (1).
1. Remove the top cover. (Refer to item 2-1-1.)
 2. Eject the tray. (Refer to item 2-1-4.)
 3. Remove five flexible cables (1) and remove one connector (2).
 4. Remove three screws (3). (In case of SD-120, remove two screws (3).)
 5. Remove four screws (4), then the main PC board (5).

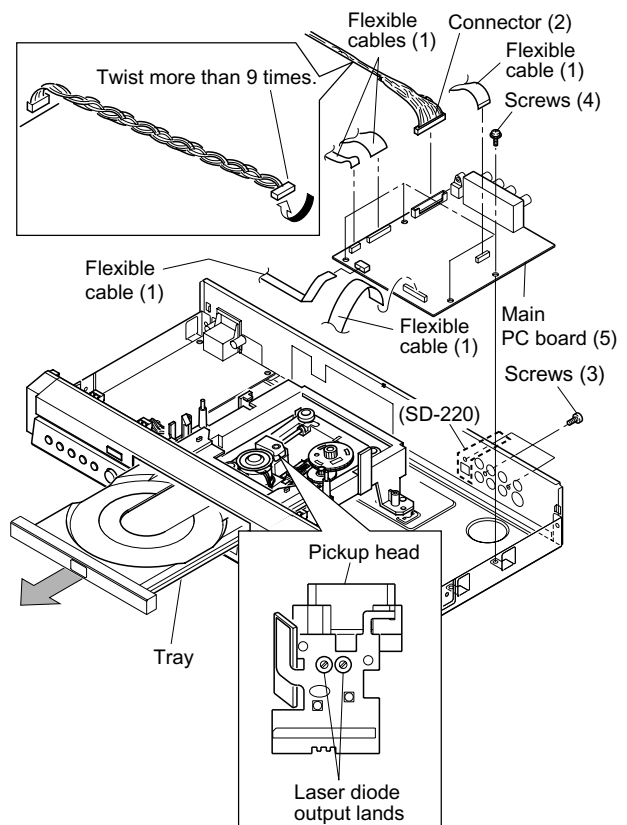


Fig. 2-1-21

2-2-2. Power PC board

1. Peel off two tapes (1) and remove the connector (2).
2. Remove four screws (3), then remove the power supply PC board (4).

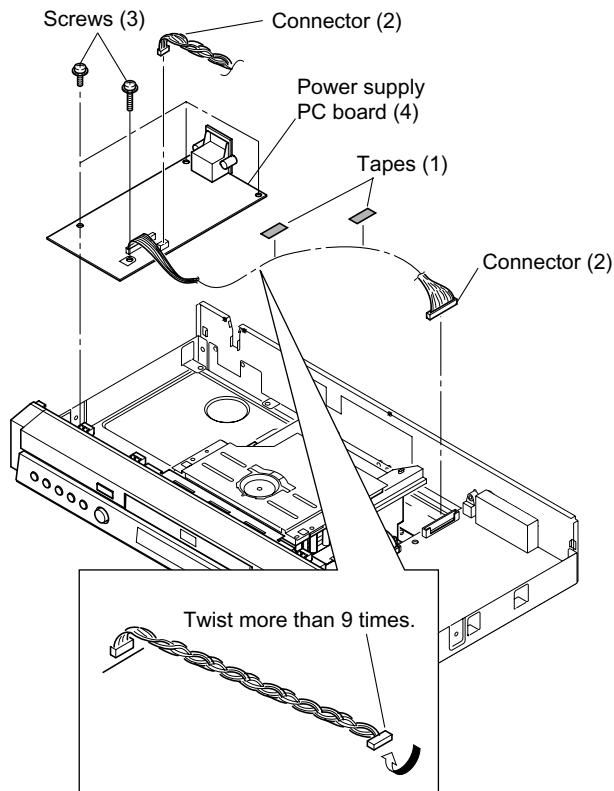


Fig. 2-1-22

2-2-3. Output PC Board

1. Eject the tray slightly.
2. Peel off a tape (1).
3. Remove the connector (2) and the flexible cable (3).
4. Remove two screws (4), then remove the output-RGB PC board (5).

Note:

- Wind the wire around the connector (6) several times when mounting the connector (2).

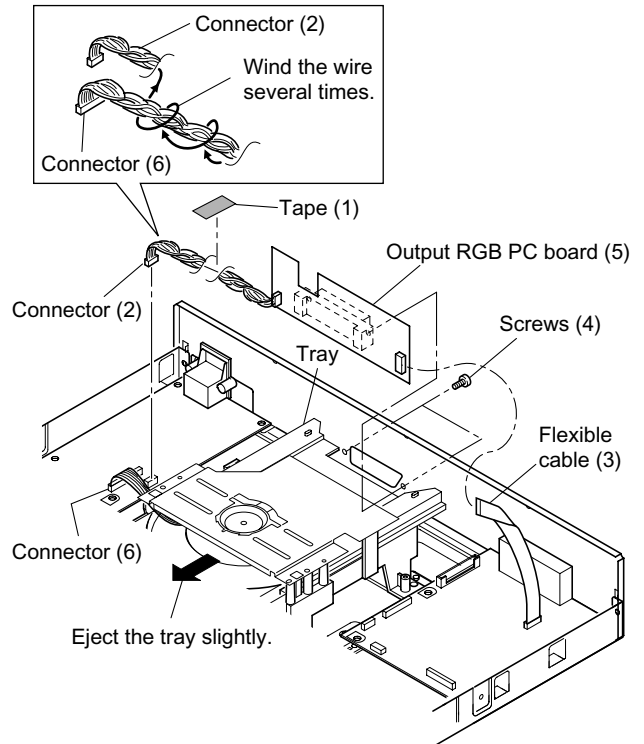


Fig. 2-1-23

2-2-4. Front PC Board (SD-220)

1. Remove the front panel. (Refer to item 1-1-3.)
2. Remove seven screws (1), then remove the front display PC board (2).
3. Remove the flexible cable (3).
4. Remove three screws (4), then remove the ENTER switch (5).

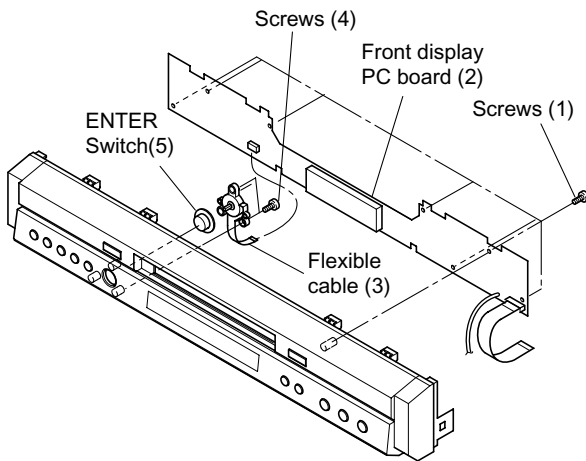


Fig. 2-1-24

2-2-5. Front PC Board (SD-120)

1. Remove the front panel. (Refer to item 1-1-3.)
2. Remove eight screws (1), then remove the front display PC board (2).

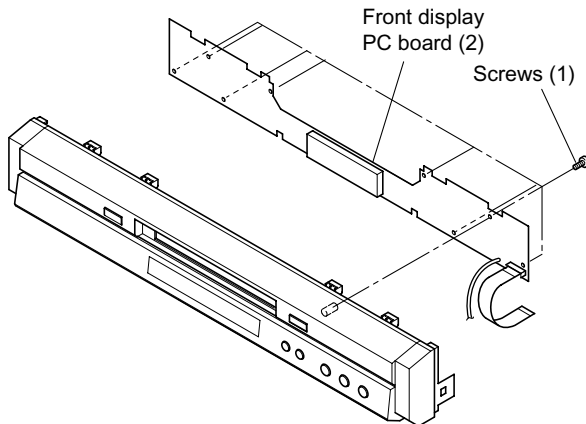


Fig. 2-1-25

2-3. Mechanism Parts

2-3-1. Mechanism Chassis Assembly

Note:

- When removing the mechanism chassis assembly (3), be sure to short-circuit the laser diode output land before removing the connector and the flexible cables.

After replacing, open the land as it was after inserting the connector and flexible cables.

1. Remove the tray. (Refer to items 2-1-3 and 2-1-4.)
2. Remove three flexible cables (1).
3. Remove four screws (2), then remove the mechanism chassis assembly (3).

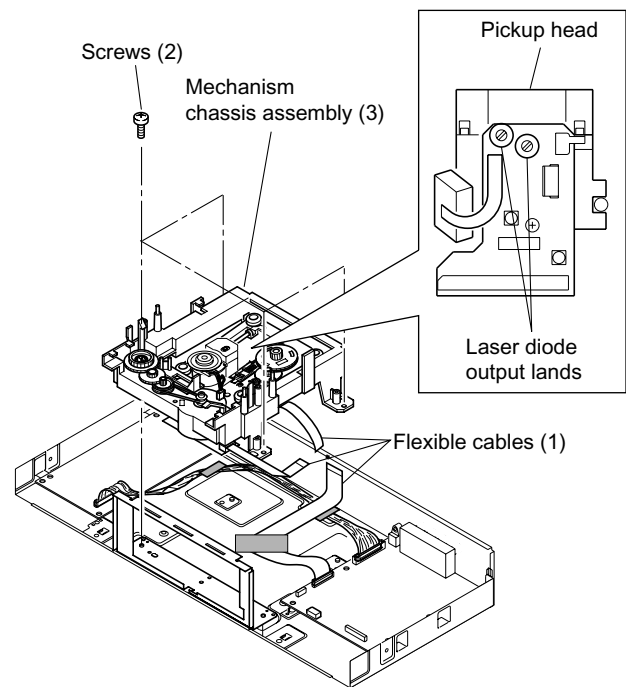


Fig. 2-1-26

SECTION 3

SERVICING DIAGRAMS

1. STANDING PC BOARDS FOR SERVICING

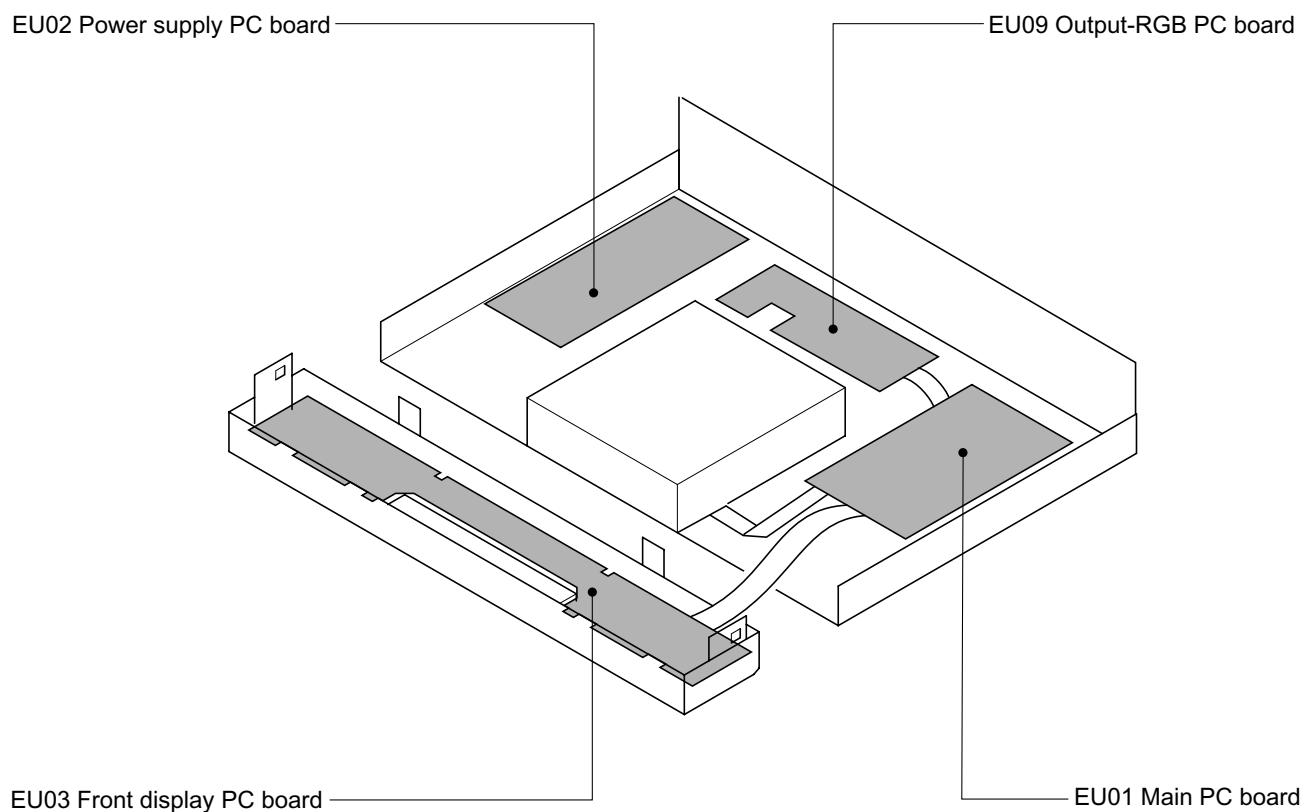


Fig. 3-1-1

2. CIRCUIT SYMBOLS AND SUPPLEMENTARY EXPLANATION

2-1. Precautions for Part Replacement

- In the schematic diagram, parts marked $\triangle$ (ex. $\triangle$ F801) are critical part to meet the safety regulations, so always use the parts bearing specified part codes (SN) when replacing them.
- Using the parts other than those specified shall violate the regulations, and may cause troubles such as operation failures, fire etc.

2-2. Solid Resistor Indication

Unit	None Ω K $k\Omega$ M $M\Omega$
Tolerance	None $\pm 5\%$ B $\pm 0.1\%$ C $\pm 0.25\%$ D $\pm 0.5\%$ F $\pm 1\%$ G $\pm 2\%$ K $\pm 10\%$ M $\pm 20\%$
Rated Wattage	(1) Chip Parts None 1/16W (2) Other Parts None 1/6W Other than above, described in the Circuit Diagram.
Type	None Carbon film S Solid R Oxide metal film W Metal film W Cement FR Fusible

Eg. 1

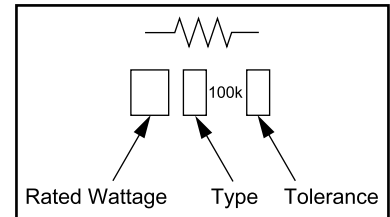


Fig. 3-2-1

2-3. Capacitance Indication

Symbol	$\begin{array}{l} \text{---} \text{ } \text{---} \text{+} \\ \text{---} \text{ } \text{---} \text{NP} \\ \text{---} \text{ } \text{---} \\ \text{---} \text{ } \text{---} \text{M} \\ \text{---} \text{ } \text{---} \end{array}$ Electrolytic, Special electrolytic Non polarity electrolytic Ceramic, plastic Film Trimmer
Unit	None F μ μF p pF
Rated voltage	None 50V For other than 50V and electrolytic capacitors, described in the Circuit Diagram.
Tolerance	(1) Ceramic, plastic, and film capacitors of which capacitance are more than 10 pF. None $\pm 5\%$ or more B $\pm 0.1\%$ C $\pm 0.25\%$ D $\pm 0.5\%$ F $\pm 1\%$ G $\pm 2\%$ (2) Ceramic, plastic, and film capacitors of which capacitance are 10 pF or less. None more than $\pm 5\%$ pF B ± 0.1 pF C ± 0.25 pF (3) Electrolytic, Trimmer Tolerance is not described.
Temperature characteristic (Ceramic capacitor)	None SL For others, temperature characteristics are described. (For capacitors of 0.01 μF and no indications are described as F.)
Static electricity capacity (Ceramic capacitor)	Sometimes described with abbreviated letters as shown in Eg. 3.

Eg. 2

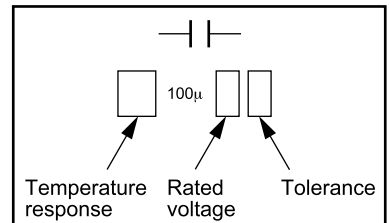


Fig. 3-2-2

Eg. 3

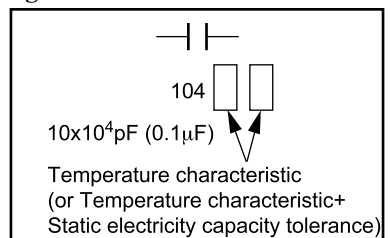


Fig. 3-2-3

2-4. Inductor Indication

Unit	None	 H
	μ	 μH
	m	 mH
Tolerance	None	 ±5%
	B	 ±0.1%
	C	 ±0.25%
	D	 ±0.5%
	F	 ±1%
	G	 ±2%
	K	 ±10%
	M	 ±20%

Eg. 4

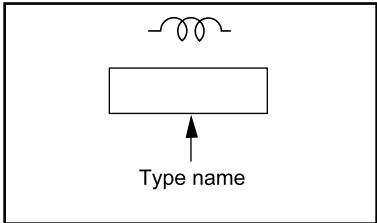


Fig. 3-2-4

2-5. Waveform and Voltage Measurement

- The waveforms for CD/DVD and RF shown in the circuit diagrams are obtained when a test disc is played back.
- All voltage values except the waveforms are expressed in DC and measured by a digital voltmeter.

2-6. Others

- The parts indicated with "NC" or "KETU" etc. are not used in the circuits of this model.

Eg. 5

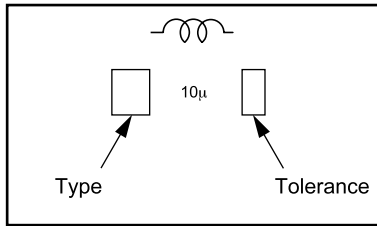


Fig. 3-2-5

3. PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM

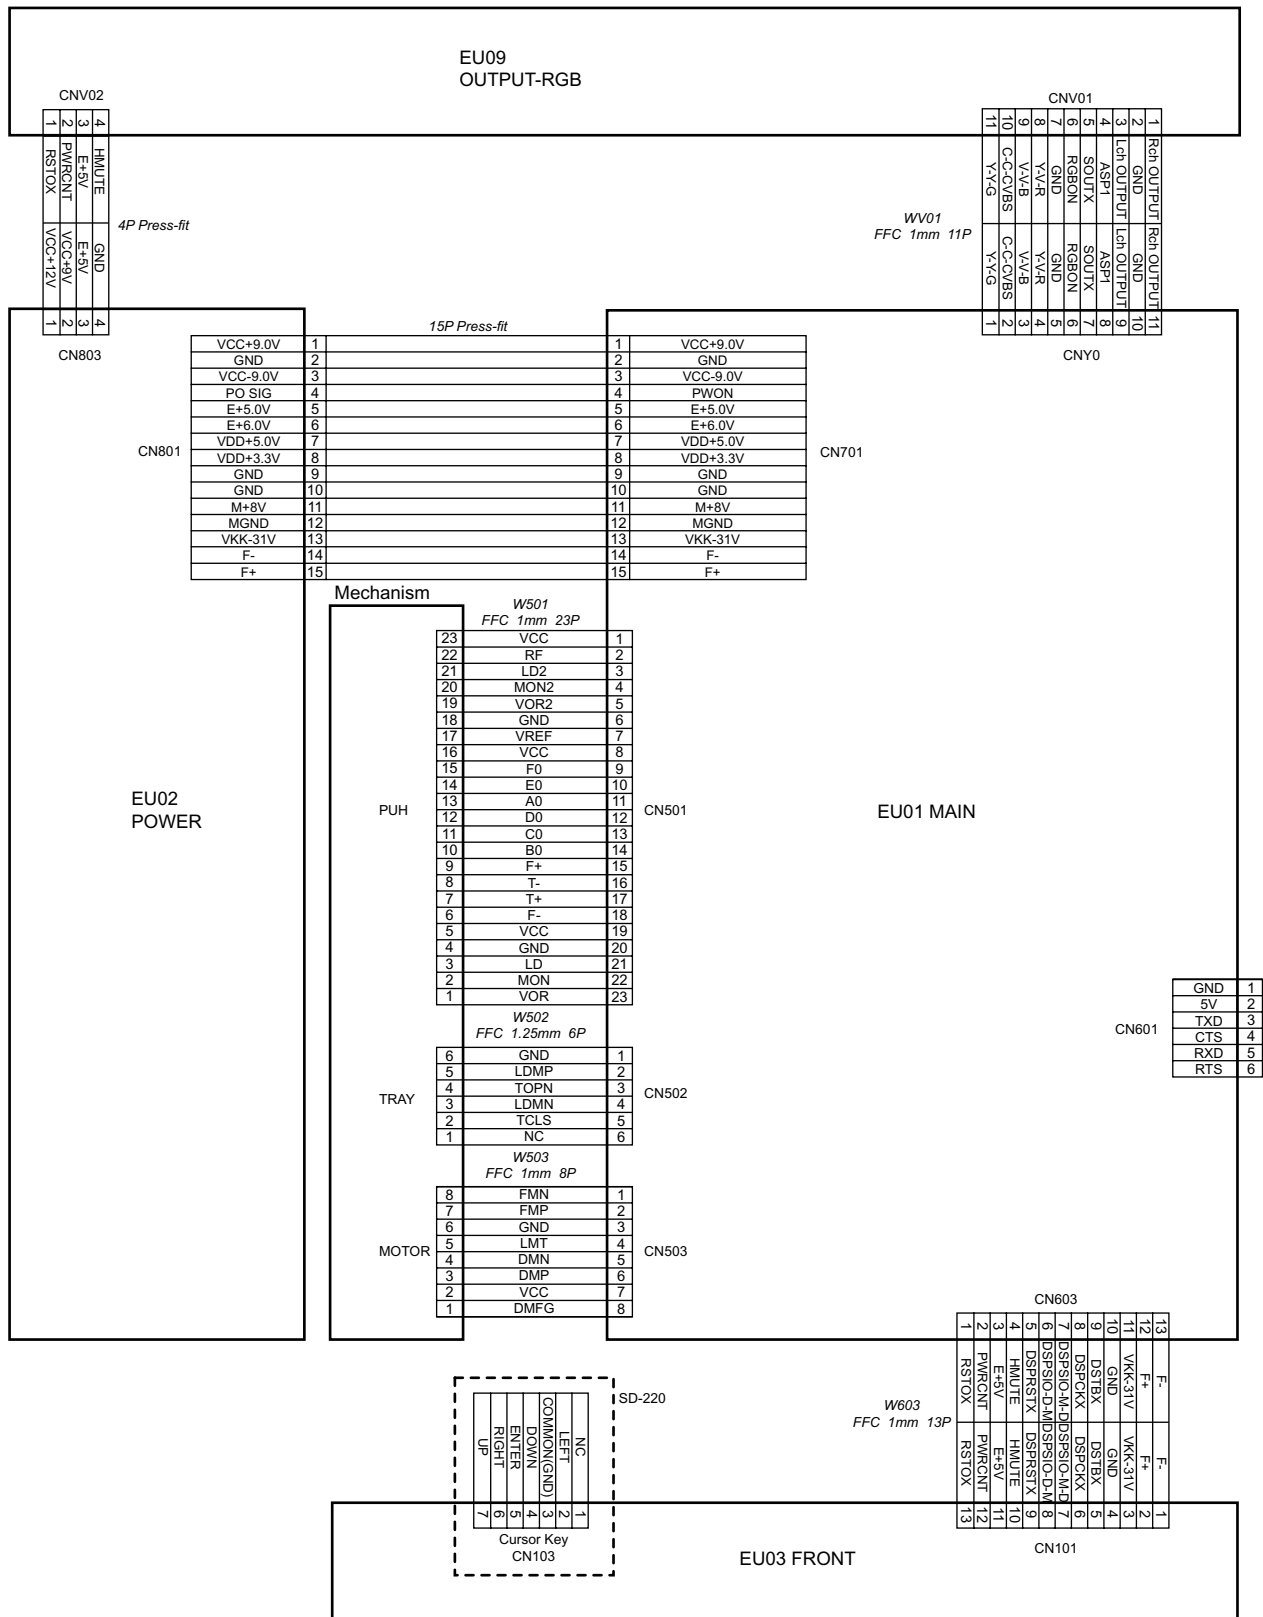


Fig. 3-3-1

SECTION 4 PARTS LIST

SAFETY PRECAUTION

The parts identified by ! ($\triangle$) mark are critical for safety. Replace only with part number specified.

The mounting position of replacement is to be identical with originals.

The substitute replacement parts which do not have the same safety characteristics as specified in the parts list may create shock, fire or other hazards.

NOTICE

The part number must be used when ordering parts in order to assist in processing, be sure to include the model number and description.

The parts marked with * are used for SD-220 only.

ABBREVIATIONS

1. Integrated Circuit (IC)

2. Capacitor (Cap)

- Capacitance Tolerance (for Nominal Capacitance more than 10pF)

Table 4-2-1

Symbol	B	C	D	F	G	J	K	M	N
Tolerance %	± 0.1	± 0.25	± 0.5	± 1	± 2	± 5	± 10	± 20	± 30

Symbol	P	Q	T	U	V	W	X	Y	Z
Tolerance %	+ 100 0	+ 30 - 10	+ 50 - 10	+ 75 - 10	+ 20 - 10	+ 100 - 10	+ 40 - 20	+ 150 - 10	+ 80 - 20

Ex. 10MF J = 10 μ F $\pm 5\%$

- Capacitance Tolerance (for Nominal Capacitance 10pF or less)

Table 4-2-2

Symbol	B	C	D	F	G
Tolerance pF	± 0.1	± 0.25	± 0.5	± 1	± 2

Ex. 10pF G = 10pF ± 2 pF

3. Resistor (Res)

- Resistance tolerance

Table 4-3-1

Symbol	B	C	D	F	G	J	K	M
Tolerance %	± 0.1	± 0.25	± 0.5	± 1	± 2	± 5	± 10	± 20

Ex. 470ohmJ = 470ohm $\pm 5\%$

4. EXPLODED VIEWS

4-1. Packing Assembly

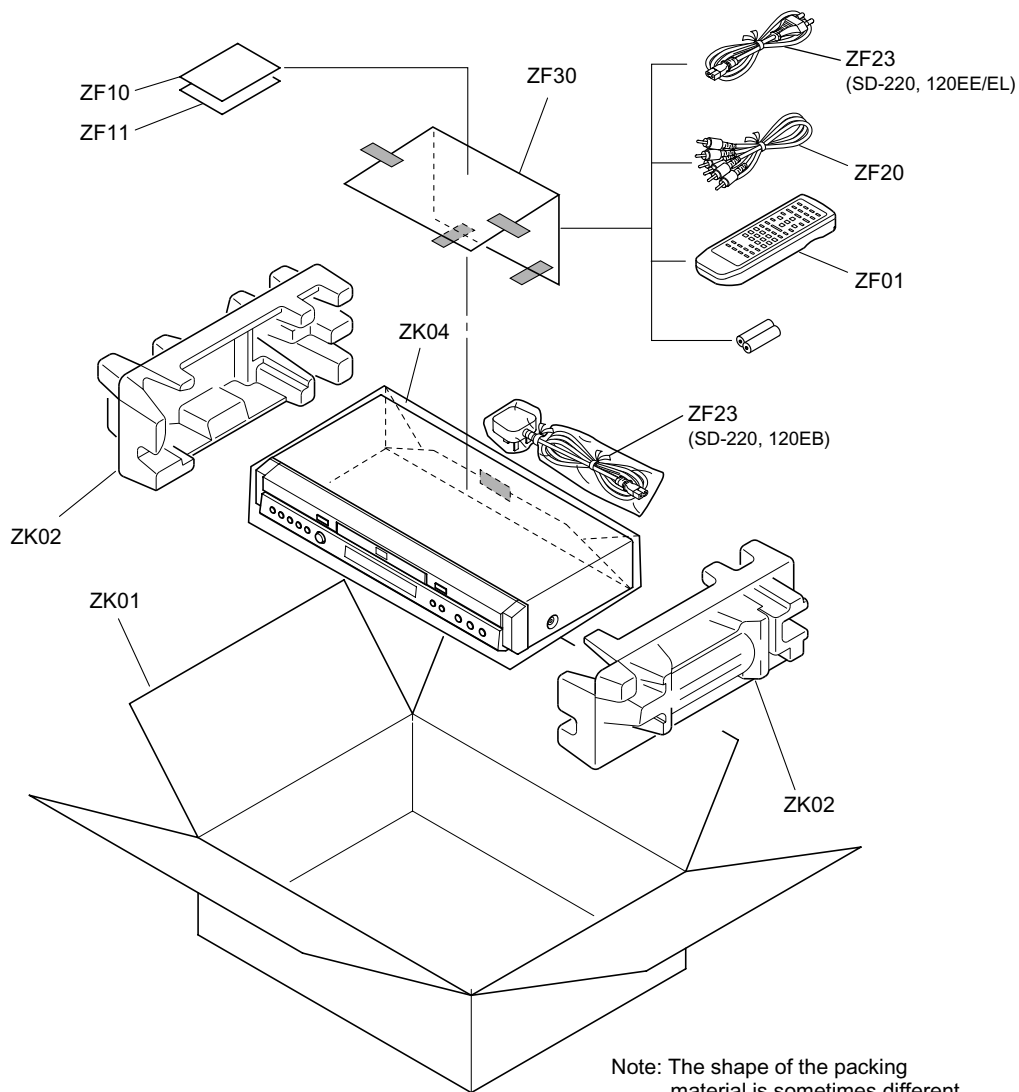


Fig. 4-4-1

4-2. Chassis Assembly (SD-220: Type A)

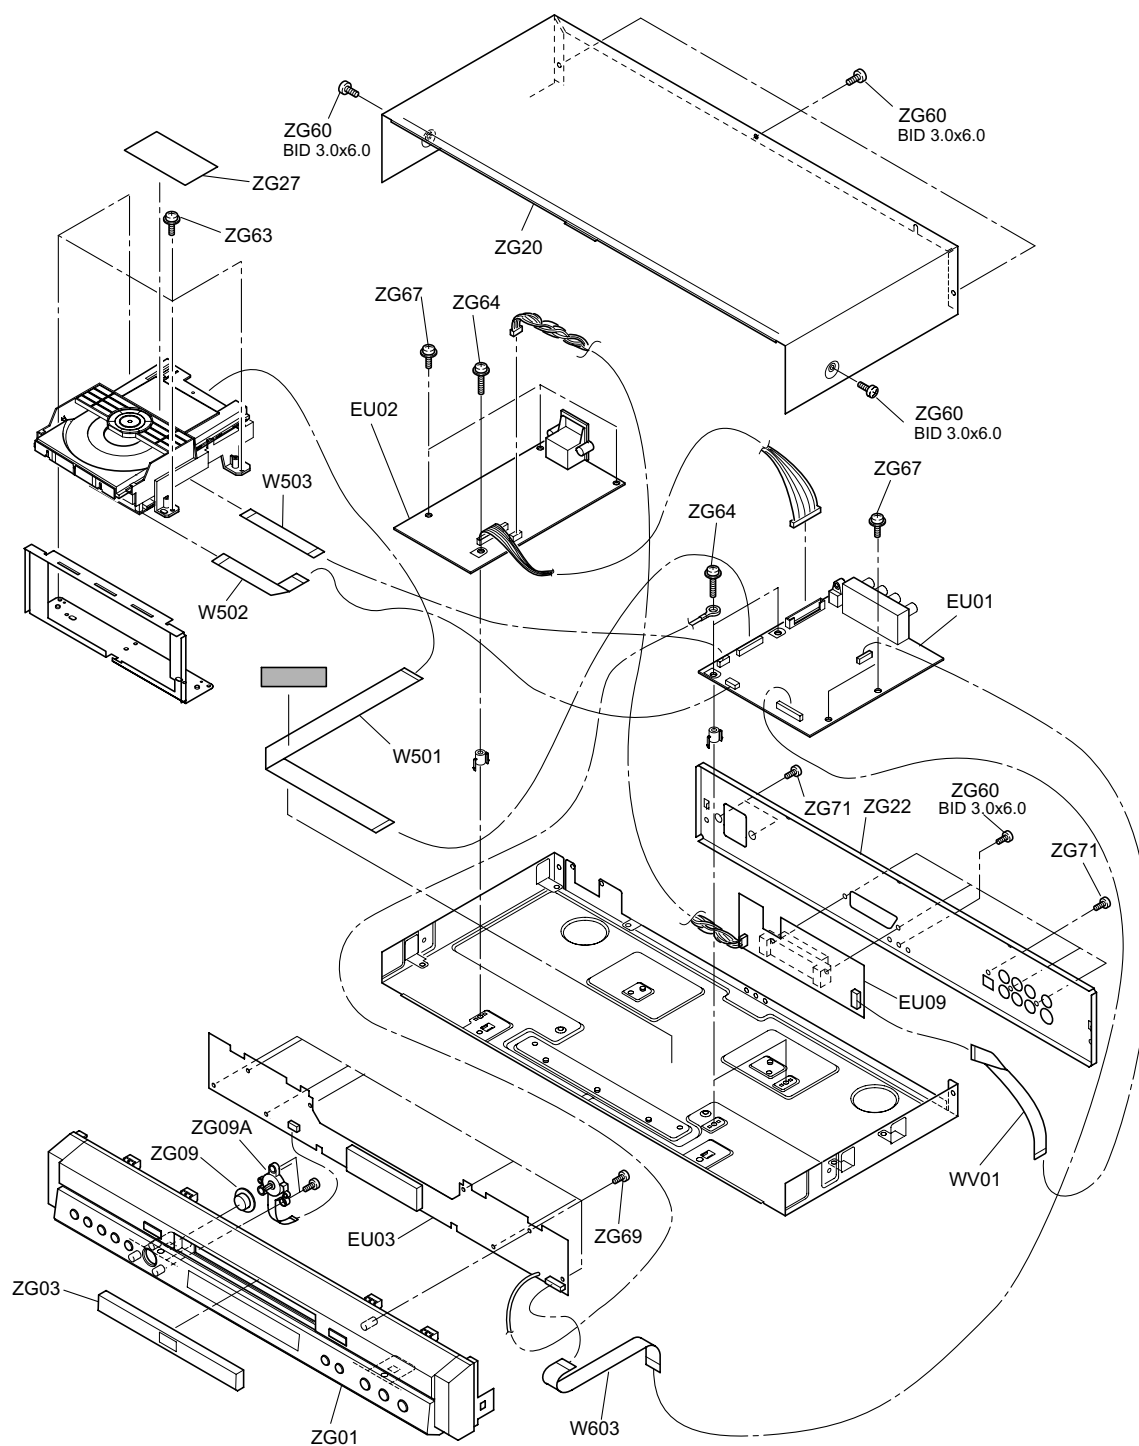


Fig. 4-4-2

4-3. Chassis Assembly (SD-120: Type A)

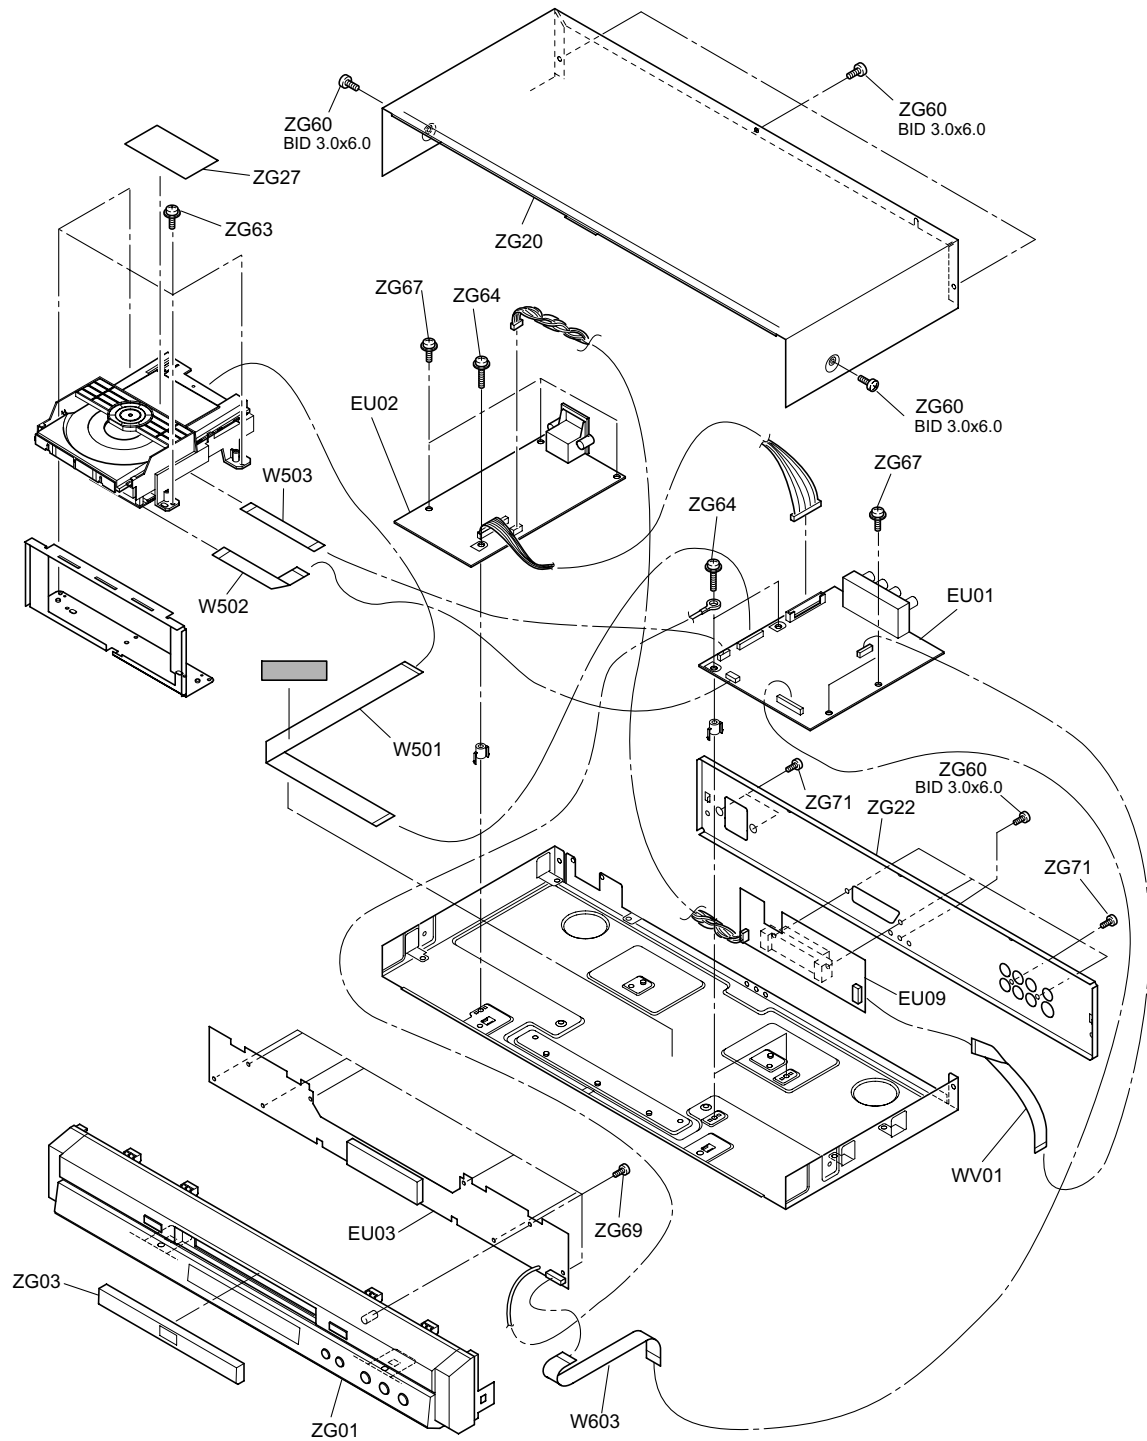


Fig. 4-4-3

4-4. Mechanism Assembly (Type A)

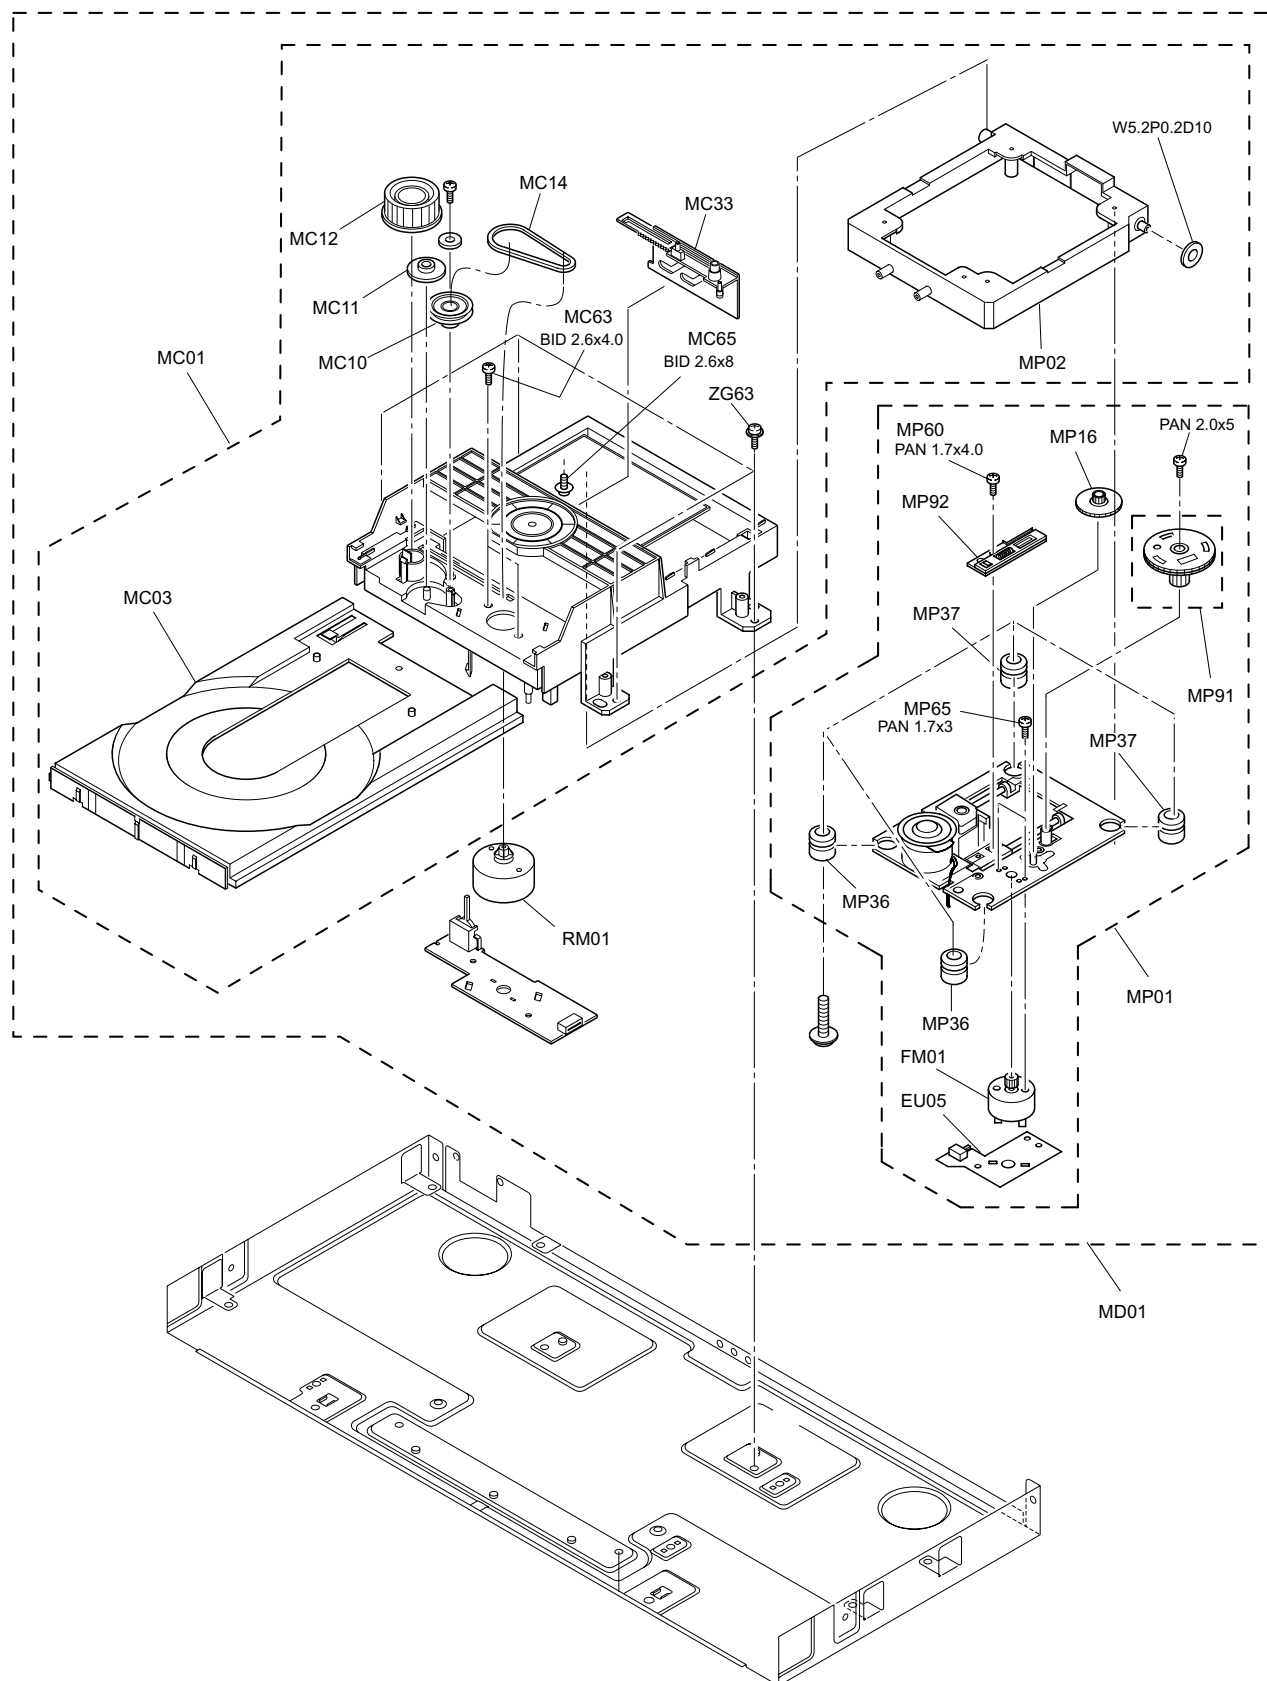


Fig. 4-4-4

4-5. Chassis Assembly (SD-220: Type B)

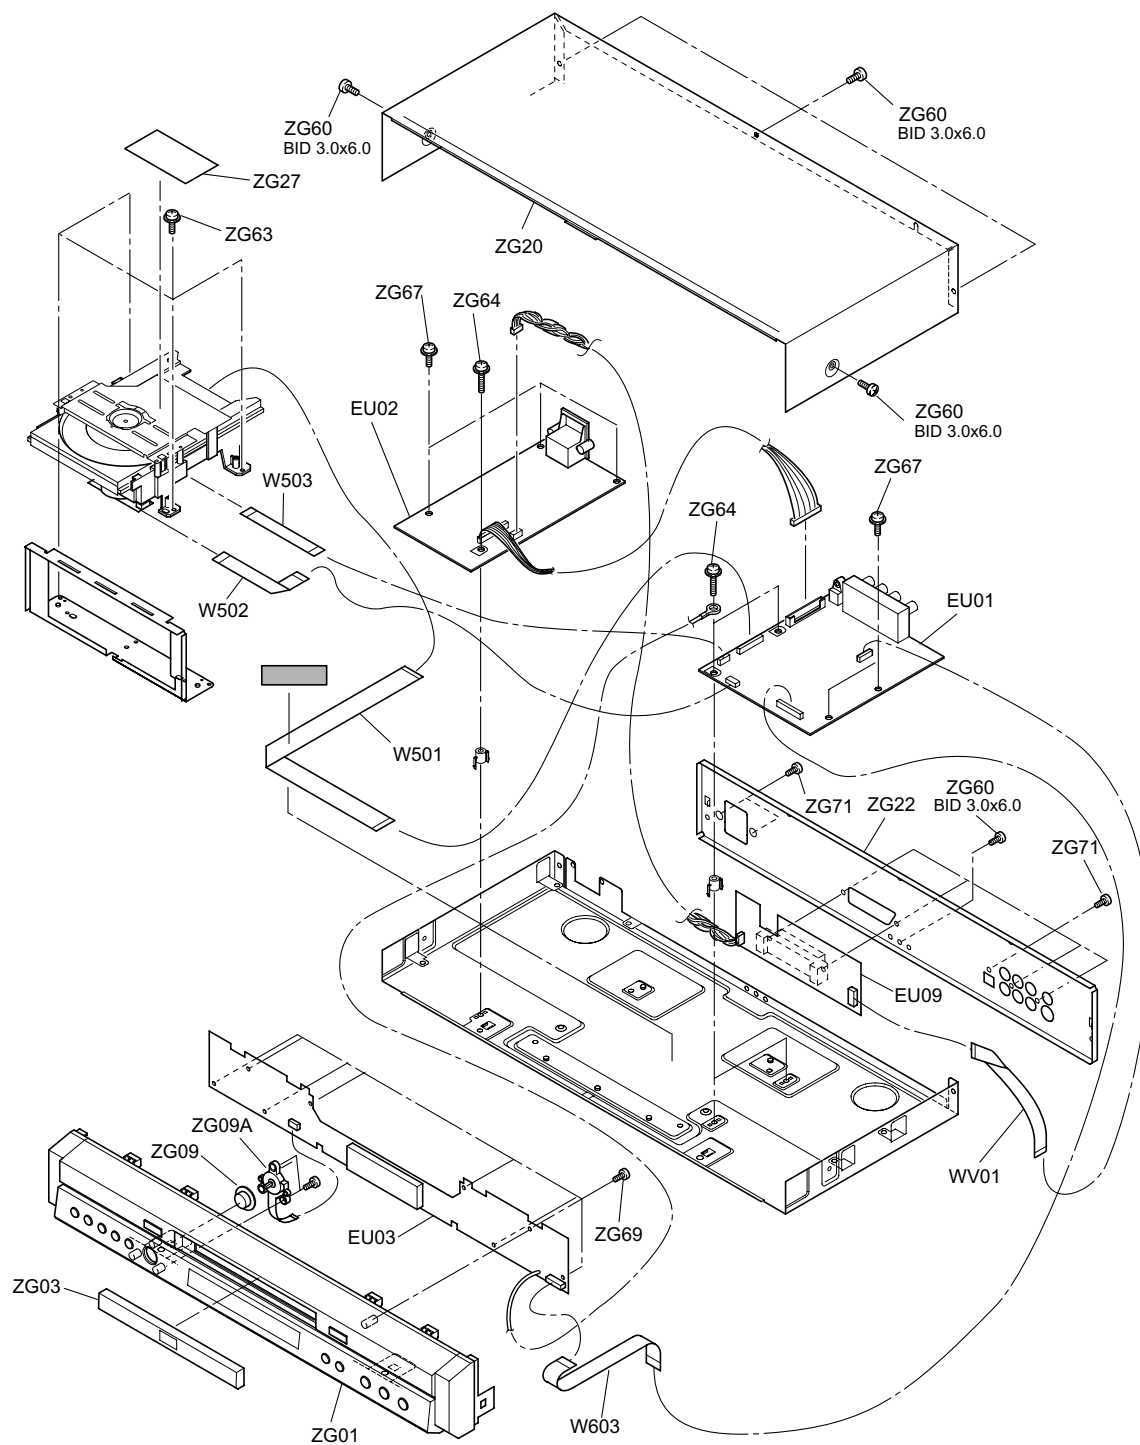


Fig. 4-4-5

4-6. Chassis Assembly (SD-120: Type B)

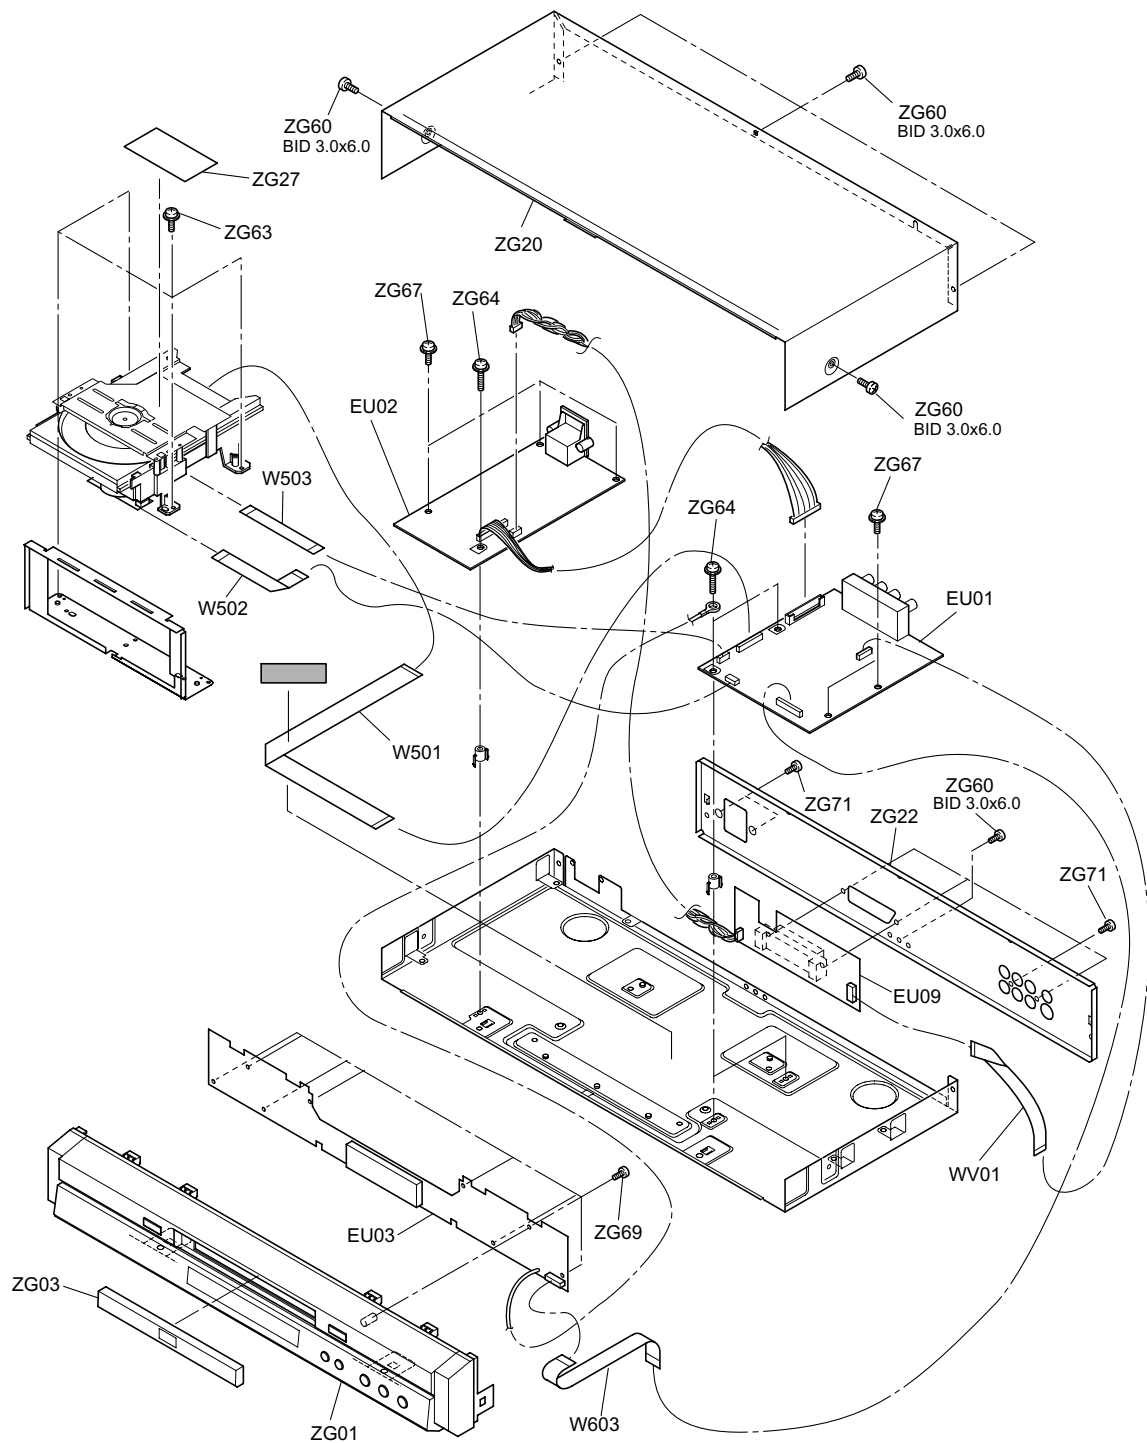


Fig. 4-4-6

4-7. Mechanism Assembly (Type B)

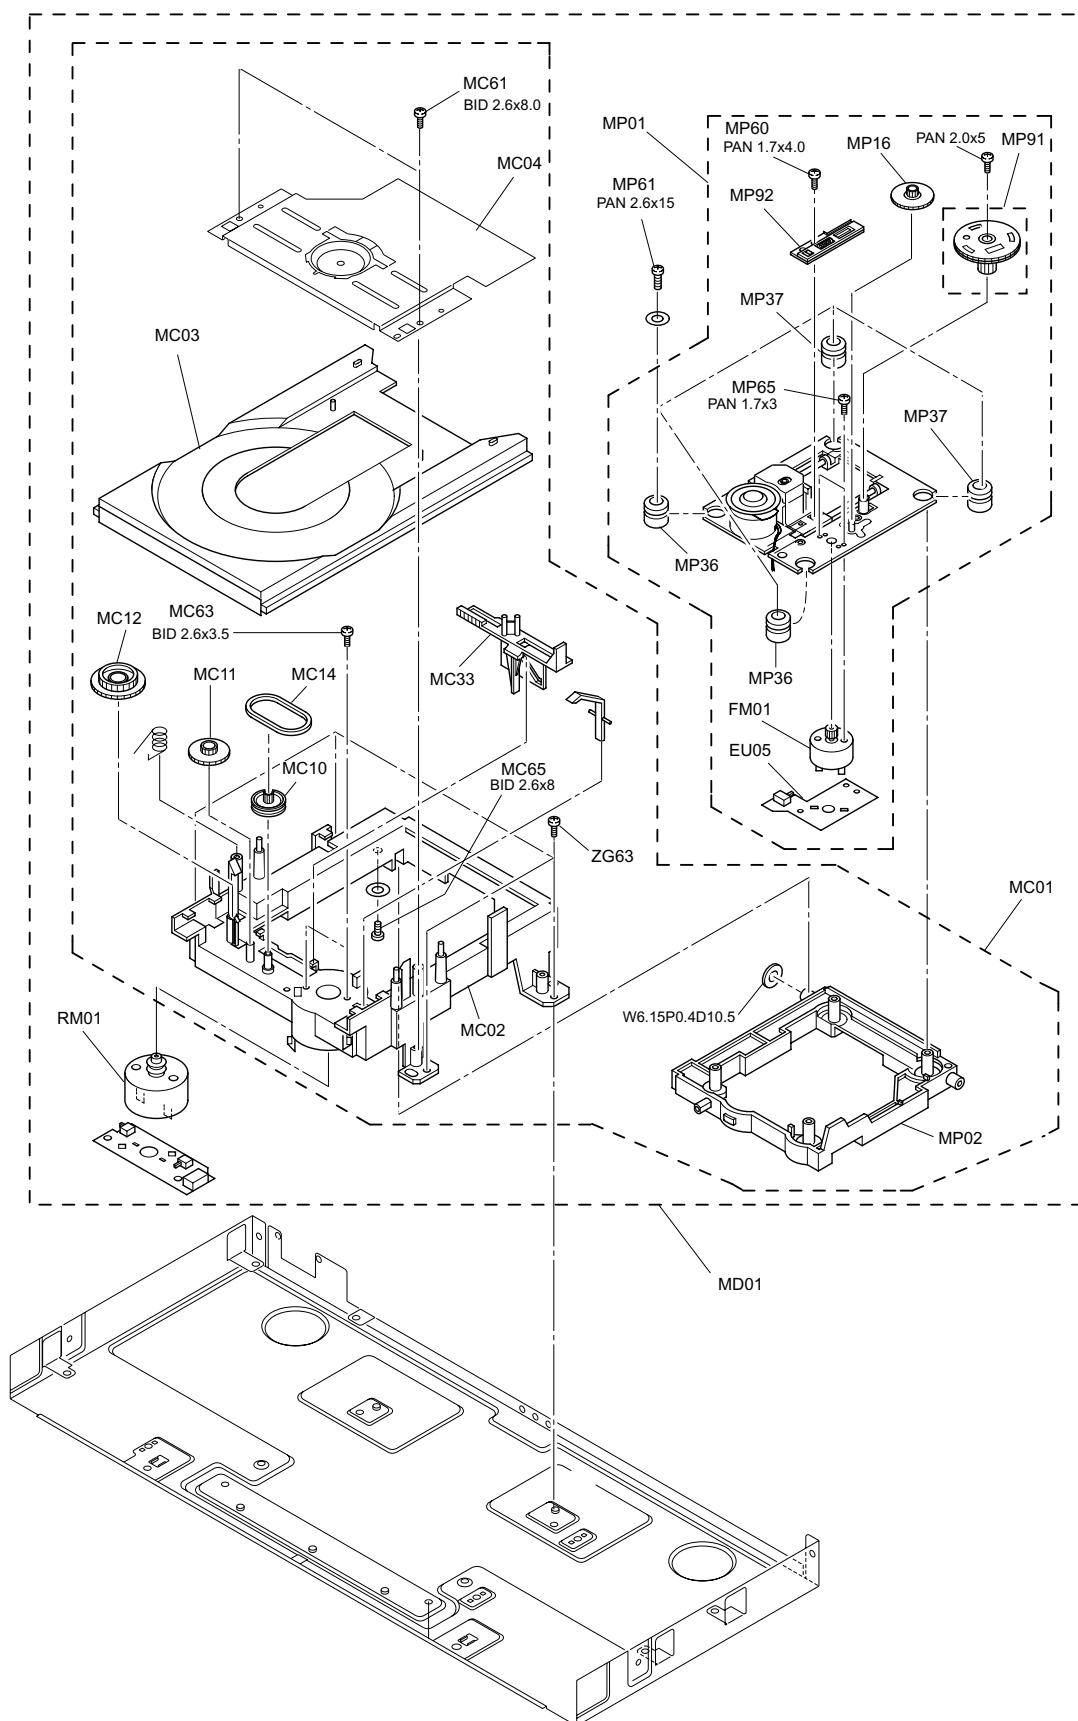


Fig. 4-4-7

5. PARTS LIST

LOCATION PART

NUMBER NUMBER DESCRIPTION

- MECHANICAL PARTS -

! MD01	79070499	DVD Mechanism	Single/CD-R
W501	79080273	Cable,Flexible	FFC, 23P, L297
W502	79080192	Cable,Flexible	FFC, 6P, L110
W503	79080193	Cable,Flexible	FFC, 8P, L85
W603	79080190	Cable,Flexible	FFC, 13P, L150
WV01	79080291	Cable,Flexible	FFC, 11P, L160
ZF01	79078069	Remote Control Unit, SE-R0049	
! ZF10	79077173	Owners Manual	German/French, SD-220/222EE
! ZF10	79077174	Owners Manual	Spanish/Italian, SD-220EL
! ZF10	79077176	Owners Manual	English, SD-220EB
! ZF10	79077177	Owners Manual	German/French, SD-120EE
! ZF10	79077178	Owners Manual	Spanish/Italian, SD-120EL
! ZF10	79077180	Owners Manual	English, SD-120EB
! ZF11	79077175	Owners Manual	English, SD-220EE/EL, 222EE
! ZF11	79077179	Owners Manual	English, SD-120EE/EL
ZF20	79070037	Cable, AV	
! ZF23	79088009	Power Cord	SD-220, 120EB
! ZF23	79088010	Power Cord	SD-220, 120EE/EL
ZG01	79071248	Front Panel(Silver), SD-220EE/EB/EL, 222EE	
ZG01	79071249	Front Panel(Black), SD-220EE	
ZG01	79071250	Front Panel(Silver), SD-120EE/EB/EL	
ZG01	79071251	Front Panel(Black), SD-120EE	
ZG03	79071252	Panel, Tray(Silver), SD-220, 120/EE/EB/EL, 222EE	
ZG03	79071253	Panel, Tray(Black), SD-220, 120EE	
ZG09	79071254	Kye, Cursor(Silver), SD-220EE/EB/EL, 222EE	
ZG09	79071255	Kye, Cursor(Black), SD-220EE	
ZG09A	79089157	Switch, Tact	RDSY0010
ZG20	79073095	Cover, Top(Black)	SD-220, 120EE
ZG20	79073096	Cover, Top(Silver)	SD-220, 120EE/EB/EL, 222EE
! ZG27	79070469	Label, Caution	
ZZ03	79080074	Kit, Data Update	

LOCATION NUMBER	PART NUMBER	DESCRIPTION		LOCATION NUMBER	PART NUMBER	DESCRIPTION	
		- ELECTRICAL PARTS -					
EU01	79083116	PC Board Assy	Main,SD-220	Q829	79050040	Transistor	2SA1048-Y
EU01	79083117	PC Board Assy	Main,SD-120	Q830	79050008	Transistor	RN1201
		- INTEGRATED CIRCUITS -				- DIODES -	
IC301	79040326	IC	ZR36732	! D803	79060087	Diode	S1WB(A)60
IC302	79040362	IC	MM1561KFBE	! D805	79060009	Diode	RU-1P
IC304	79040363	IC	MM1567AJBE	D806	79060013	Diode	AG01
IC305	79040163	IC	MT48LC1M16A1TG	D807	79060080	Diode	AK06
IC306	79040163	IC	MT48LC1M16A1TG	D808	79060029	Diode,Zener	6.8V
IC401	79040282	IC	TC94A03F	D821	79060071	Diode	HER152G
IC402	79040323	IC	M11B11664A-30T	D822	79060017	Diode	RU4Z
IC502	79040296	IC	TA1323F	D823	79060089	Diode	HT16G
IC503	79040324	IC	BA5813FM-E2	D824	79060013	Diode	AG01
IC530	79040014	IC	TA75S01F	D825	79060013	Diode	AG01
IC601	79040226	IC	S-24C01BFJ-TB-0	D826	79060012	Diode	ERA15-02
IC602	79040007	IC	TC7S08F	D827	79060012	Diode	ERA15-02
IC603	79040323	IC	M11B11664A-30T	D828	79060012	Diode	ERA15-02
IC604	79040364	IC	PST3545NR	D829	79060012	Diode	ERA15-02
IC605	79040322	IC	TMP94C251AF	D830	79060015	Diode	1SS133
IC606	79040153	IC	MBM29F800BA55TN	D831	79060007	Diode,Zener	UZ3.0BSB
IC608	79040007	IC	TC7S08F	D832	79060034	Diode,Zener	MTZJT-77-10B
IC611	79040007	IC	TC7S08F	D833	79060034	Diode,Zener	MTZJT-77-10B
IC901	79040106	IC	TC7SU04F	D834	79060068	Diode,Zener	MTZJT-77-8.2B
IC902	79040107	IC	TC7WU04F	D835	79060004	Diode,Zener	UZ5.1BSB
IC903	79040249	IC	TC7SH08FU	D836	79060005	Diode,Zener	UZ11BSB
IC912	79040044	IC	NJM4580E	D837	79060005	Diode,Zener	UZ11BSB
* IC914	79089024	Terminal,Optical	TOTX178	D838	79060012	Diode	ERA15-02
IC915	79040365	IC	AD1958YRS	D839	79060012	Diode	ERA15-02
		- TRANSISTORS -				- CAPACITORS -	
Q301	79050019	Transistor,Chip	2SA1182	! C801	79020196	Cap,Film	0.22MF M 275V
Q302	79050018	Transistor,Chip	2SA1162	! C802	79020198	Cap,Film	10000pF M 275V
Q303	79050018	Transistor,Chip	2SA1162	! C803	79020028	Cap,Ceramic	470pF Z 250V
Q304	79050016	Transistor,Chip	2SC2712	! C804	79020028	Cap,Ceramic	470pF Z 250V
Q306	79050018	Transistor,Chip	2SA1162	! C811	79020193	Cap,Ceramic	220pF K 250V
Q307	79050018	Transistor,Chip	2SA1162			- RESISTORS -	
Q401	79050085	Transistor,Chip	2SC3326-B	R801	79030055	Res,Oxide Metal	1Mohm J 1/2W
Q501	79050015	Transistor,Chip	HN1B01F			- MISCELLANEOUS -	
Q502	79050015	Transistor,Chip	HN1B01F	! F801	79087012	Fuse	1.6A,250V
Q503	79050079	Transistor,Chip	2SA1213-Y	! P802	79089029	Jack	AC Inlet
Q504	79050043	Transistor,Chip	RN1402	! RF835	79030015	Res,Fusible	2.2ohm J 1/4W
Q505	79050014	Transistor,Chip	HN1C03F	! T801	79080006	Line Filter	253YOR7
Q530	79050085	Transistor,Chip	2SC3326-B	! T802	79010026	Power Transformer	SRW3020ED5-210
Q601	79050031	Transistor,Chip	DTA114EKA				
Q602	79050031	Transistor,Chip	DTA114EKA	EU03	-----	PC Board Assy	Front
Q603	79050001	Transistor,Chip	RN2402			- INTEGRATED CIRCUITS -	
Q604	79050043	Transistor,Chip	RN1402	IC101	79040366	IC	TMP86CK74AFG-3KBE
Q901	79050001	Transistor,Chip	RN2402			- TRANSISTORS -	
Q902	79050043	Transistor,Chip	RN1402	Q181	79050086	Transistor,Chip	RN2202
Q903	79050001	Transistor,Chip	RN2402	Q182	79050086	Transistor,Chip	RN2202
Q904	79050001	Transistor,Chip	RN2402			- DIODES -	
Q906	79050001	Transistor,Chip	RN2402	D181	79060033	Diode,LED	
Q909	79050016	Transistor,Chip	2SC2712			- MISCELLANEOUS -	
Q910	79050014	Transistor,Chip	HN1C03F	A101	79089167	Display,FL	8-BT-230GNK
Q913	79050018	Transistor,Chip	2SA1162	MT101	79089146	Module,RMT	GP1U261XK
Q914	79050043	Transistor,Chip	RN1402	S103	79089020	Switch	Push
QY01	79050043	Transistor,Chip	RN1402	S104	79089020	Switch	Push
		- DIODES -		S105	79089020	Switch	Push
D501	79060022	Diode,Chip	1SS368	S106	79089020	Switch	Push
D502	79060022	Diode,Chip	1SS368	S107	79089020	Switch	Push
D901	79060022	Diode,Chip	1SS368	S108	79089020	Switch	Push
		- MISCELLANEOUS -		* S110	79089020	Switch	Push
J301	79089094	Plate,Jack		* S111	79089020	Switch	Push
X601	79089022	Oscillator,Ceramic	9.00MHZ	* S112	79089020	Switch	Push
X901	79089166	Oscillator,Crystal	27MHZ	* S117	79089020	Switch	Push
				* S120	79089020	Switch	Push
! EU02	79085098	PC Board Assy	Power	S181	79089020	Switch	Push
		- INTEGRATED CIRCUITS -		X101	79089095	Oscillator,Ceramic	8MHZ
! Q802	79040327	IC	TA1319AP	EU09	-----	PC Board Assy	Output-RGB
Q821	79040146	IC	TA76431S			- INTEGRATED CIRCUITS -	
		- TRANSISTORS -		ICV01	79040363	IC	MM1567AJBE
! Q801	79050095	Transistor	FS5KM-16A	ICV02	79040029	IC	TC74HC4053AF
! Q803	79050044	Photo Coupler	TLP621			- TRANSISTORS -	
! Q804	79050044	Photo Coupler	TLP621	QV01	79050018	Transistor,Chip	2SA1162
Q823	79050076	Transistor	2SA1585STP-Q	QV03	79050078	Transistor,Chip	DTC114EKA-T
Q824	79050077	Transistor	2SC1740STP-Q	QV05	79050031	Transistor,Chip	DTA114EKA
Q825	79050005	Transistor	2SC2236-Y	QV06	79050078	Transistor,Chip	DTC114EKA-T
Q826	79050005	Transistor	2SC2236-Y	QV07	79050016	Transistor,Chip	2SC2712
Q827	79050077	Transistor	2SC1740STP-Q	QV08	79050016	Transistor,Chip	2SC2712
Q828	79050076	Transistor	2SA1585STP-Q	QV09	79050016	Transistor,Chip	2SC2712
				QV10	79050031	Transistor,Chip	DTA114EKA
						- MISCELLANEOUS -	
				JV01	79089145	Jack,Scart	

TOSHIBA CORPORATION

 
 
1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN

SERVICE MANUAL



DVD VIDEO PLAYER

SD-220EB
SD-220EE
SD-220EL
SD-120EB
SD-120EE
SD-120EL
SD-222EE



SD-220EB

4. BLOCK DIAGRAMS

4-1. Overall Block Diagram

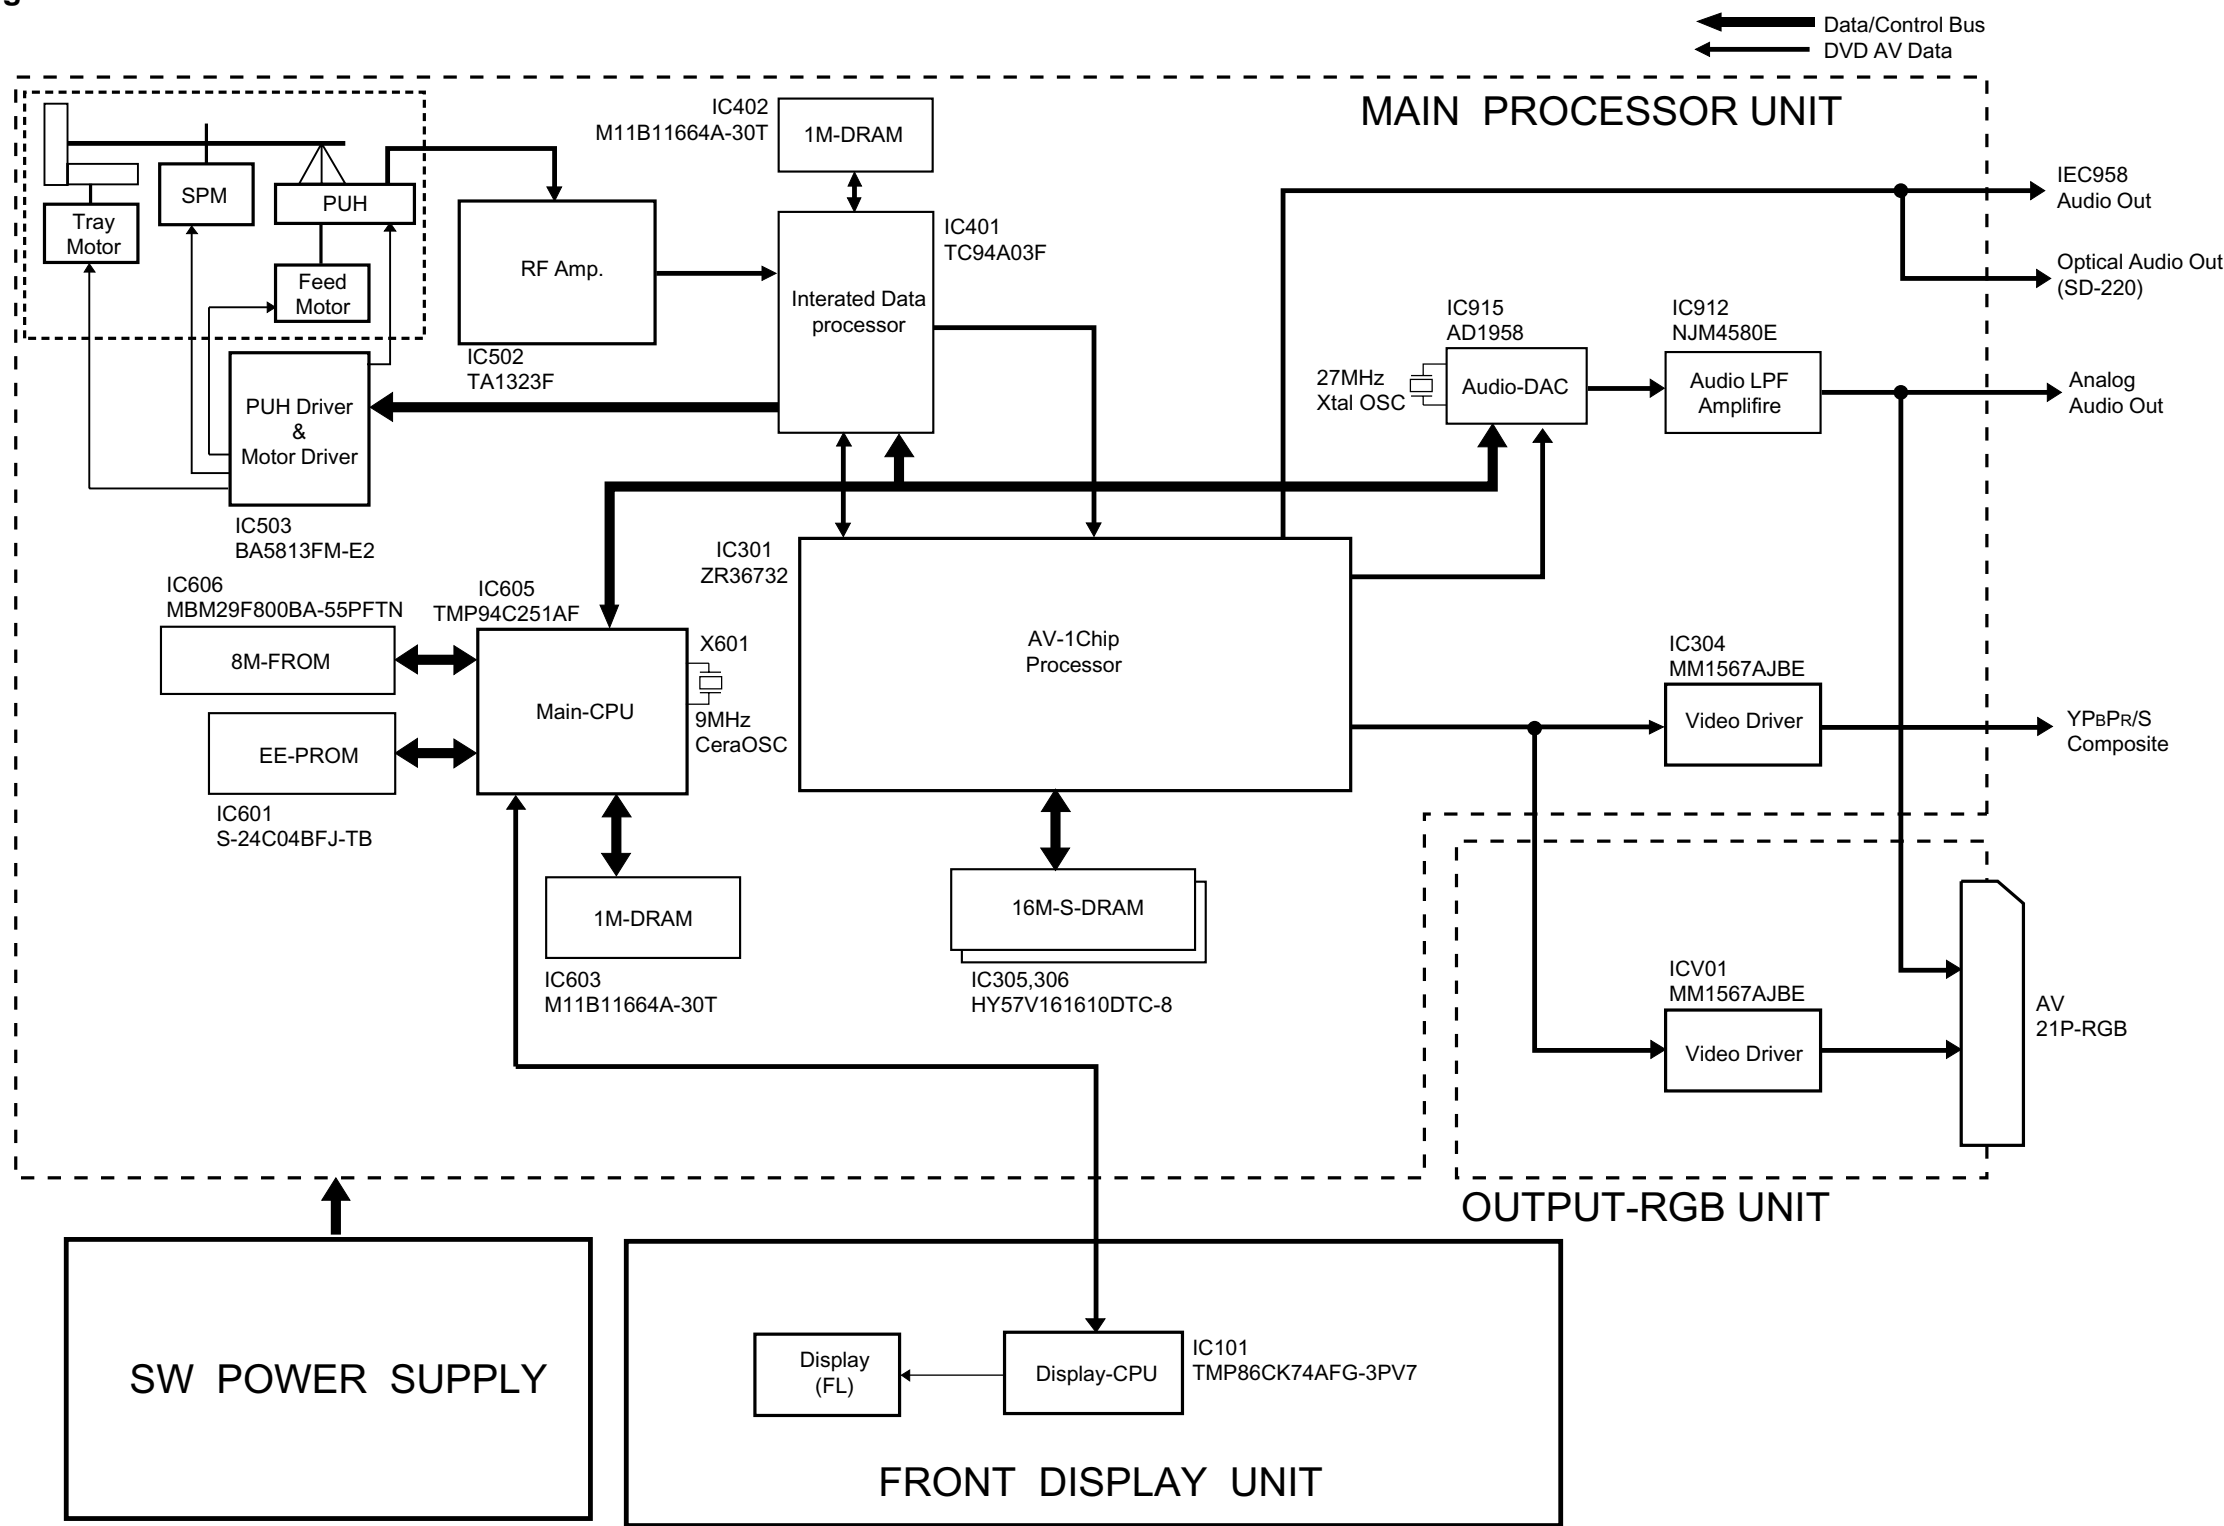


Fig. 3-4-1

4-2. Power Supply Block Diagram

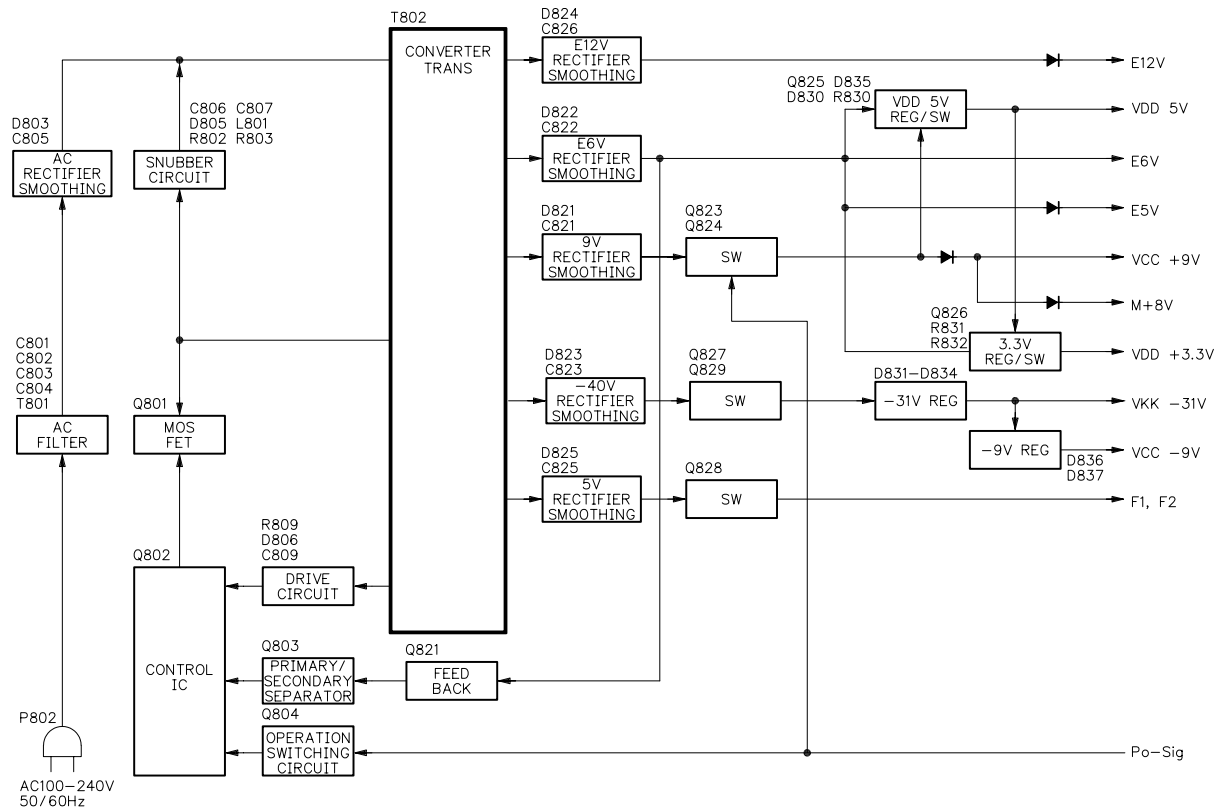


Fig. 3-4-2

4-3. Front Display, Power Switch Block Diagram

4-3-1. Front Display

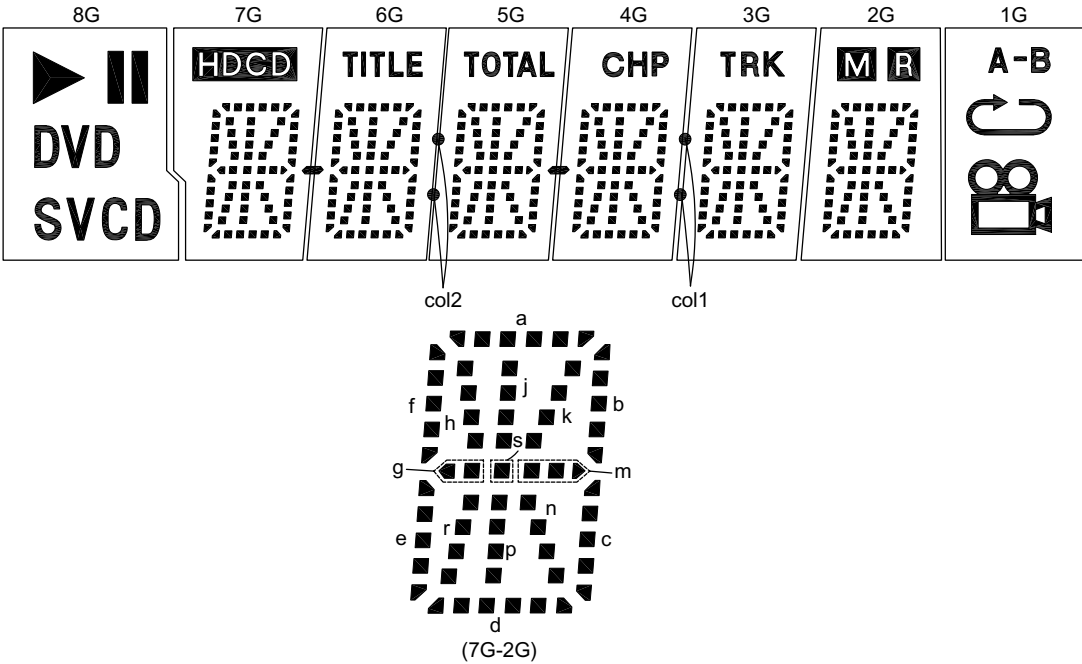



Fig. 3-4-3

4-3-2. Front Display Pattern

	8G	7G	6G	5G	4G	3G	2G	1G
P1	▶	a	a	a	a	a	a	A
P2	⏸	f	f	f	f	f	f	-B
P3	DVD	h	h	h	h	h	h	↻
P4	S	j	j	j	j	j	j	📷
P5	V	k	k	k	k	k	k	—
P6	CD	b	b	b	b	b	b	—
P7	—	g	g	g	g	g	g	—
P8	—	s	s	s	s	s	s	—
P9	—	m	m	m	m	m	m	—
P10	—	e	e	e	e	e	e	—
P11	—	r	r	r	r	r	r	—
P12	—	p	p	p	p	p	p	—
P13	—	n	n	n	n	n	n	—
P14	—	c	c	c	c	c	c	—
P15	—	d	d	d	d	d	d	—
P16	—	—	col2		col1		M	—
P17	—	▶		▶		—	R	—
P18	—	HDCD	TITLE	TOTAL	CHP	TRK	—	—

Fig. 3-4-4

4-3-3. Front Display, Power Switch Block Diagram

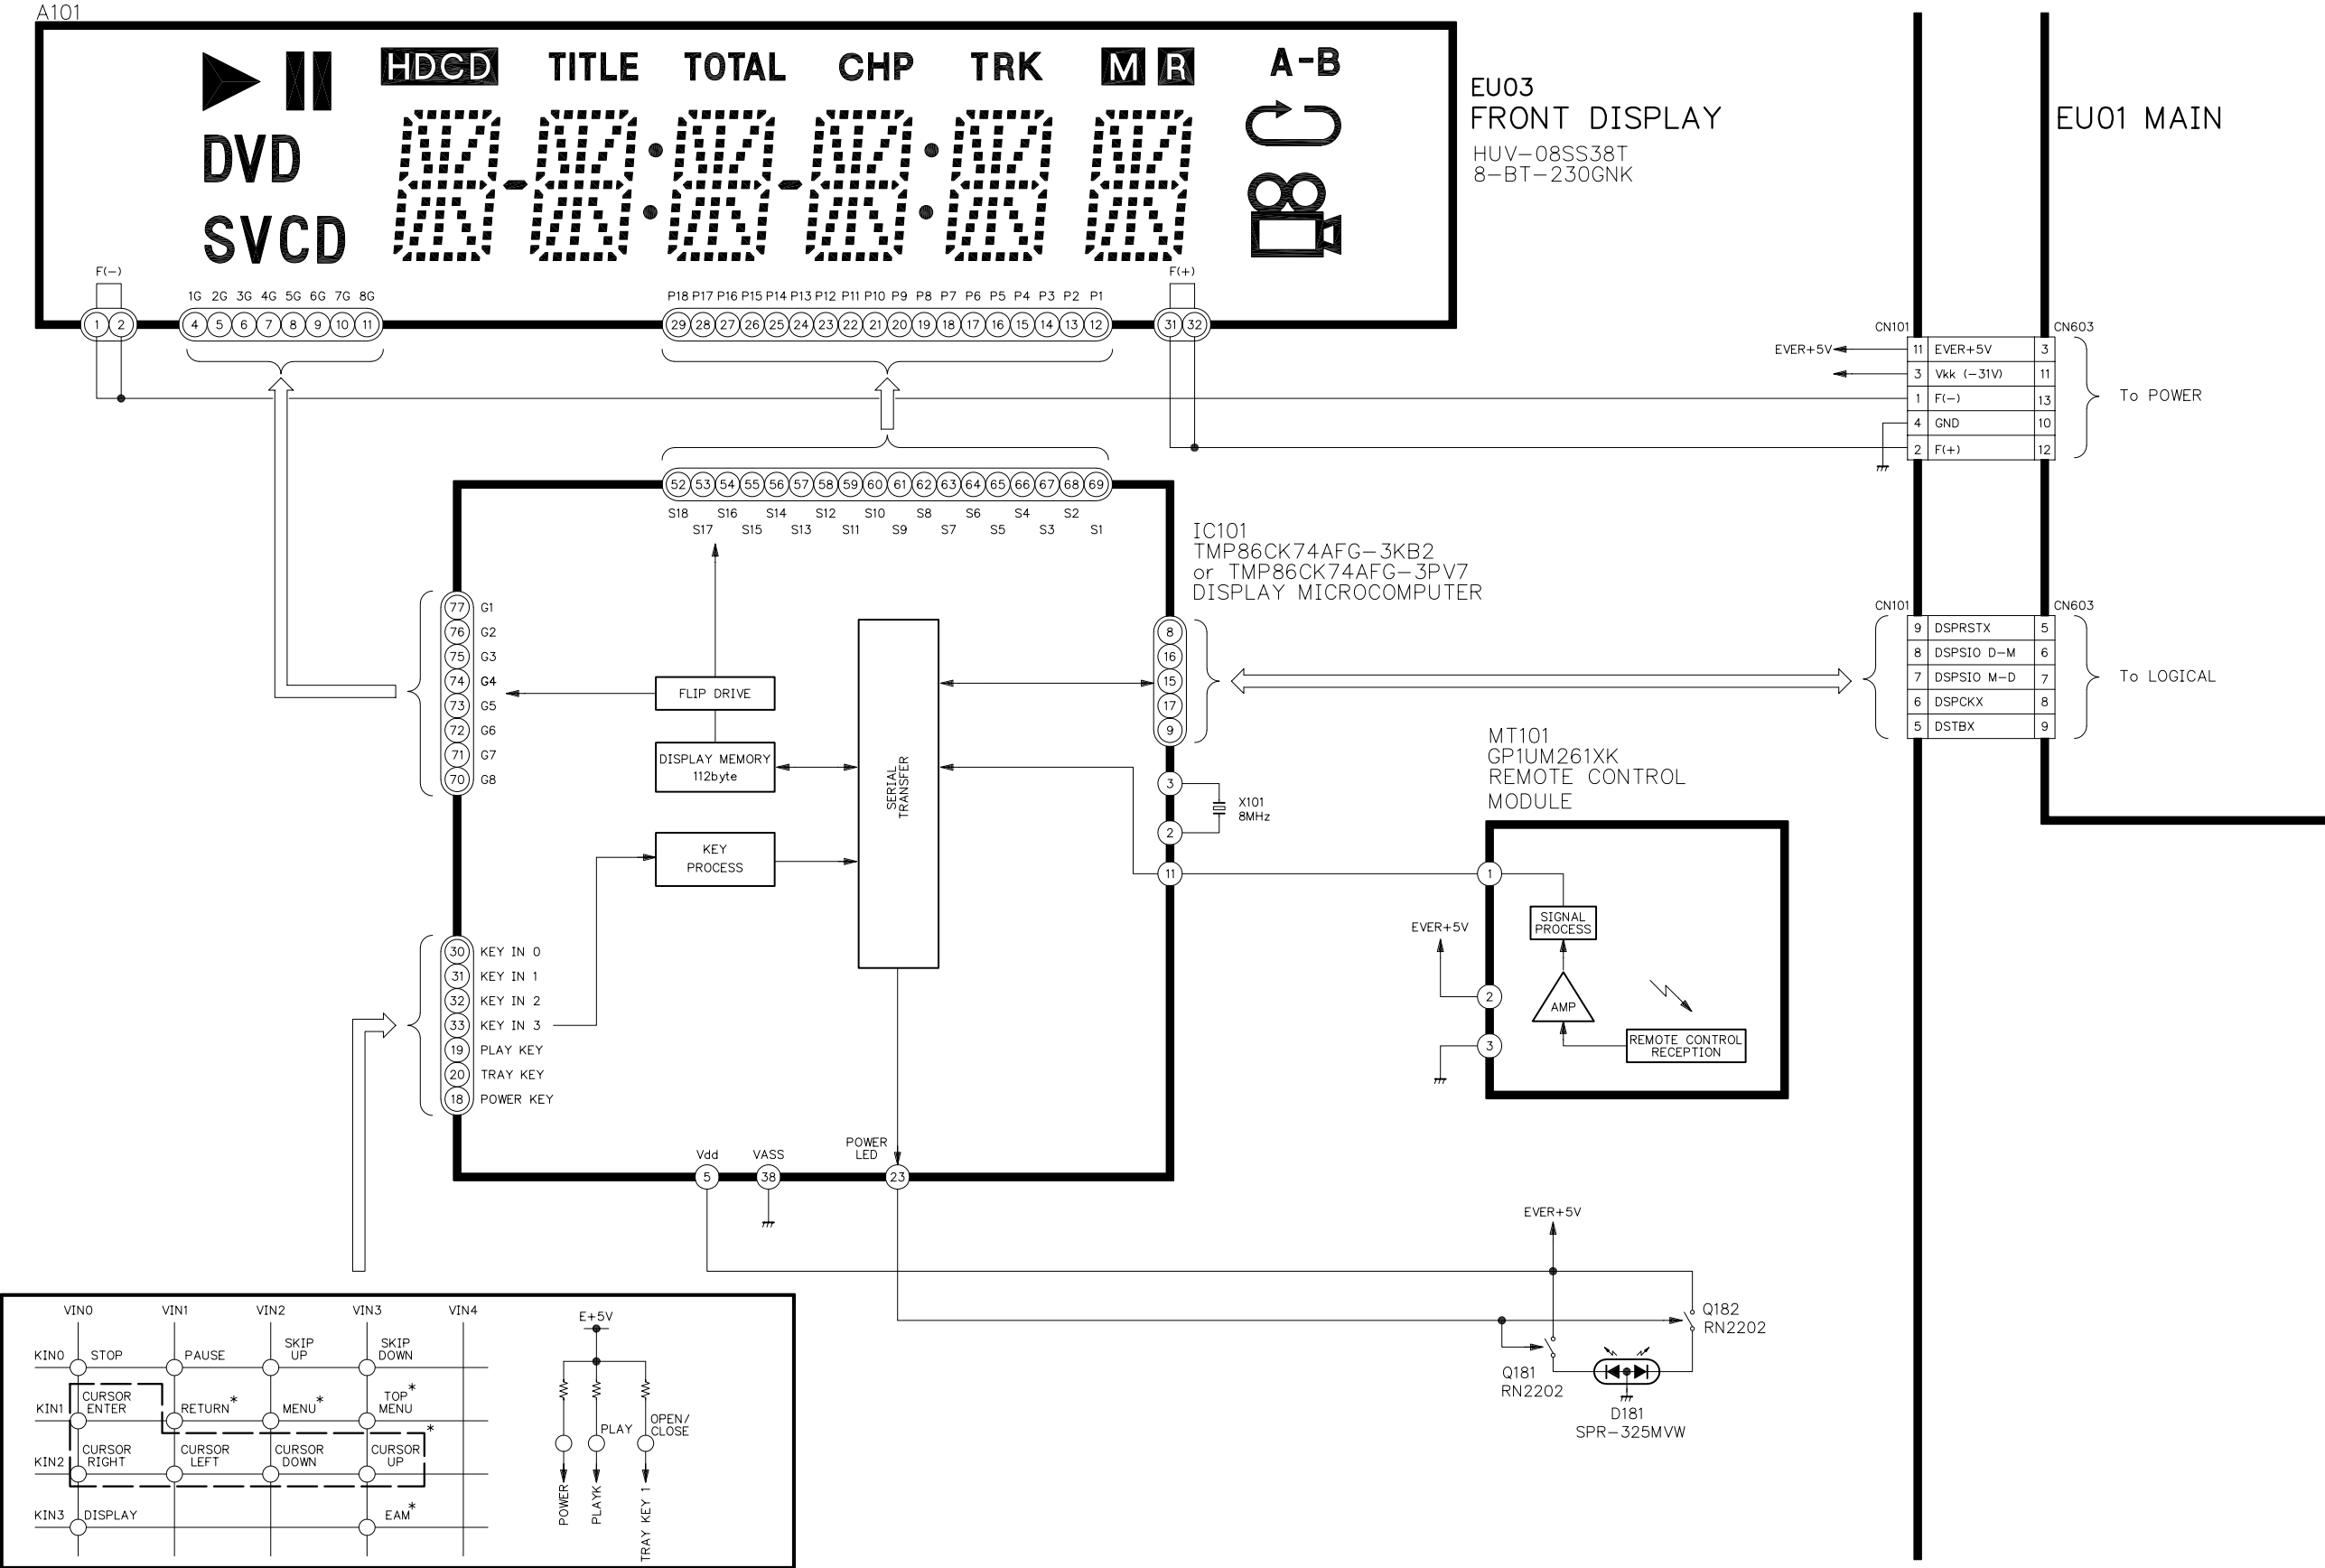

* : SD-220

Fig. 3-4-5

4-4. Main Block Diagrams

4-4-1. Servo System Block Diagram

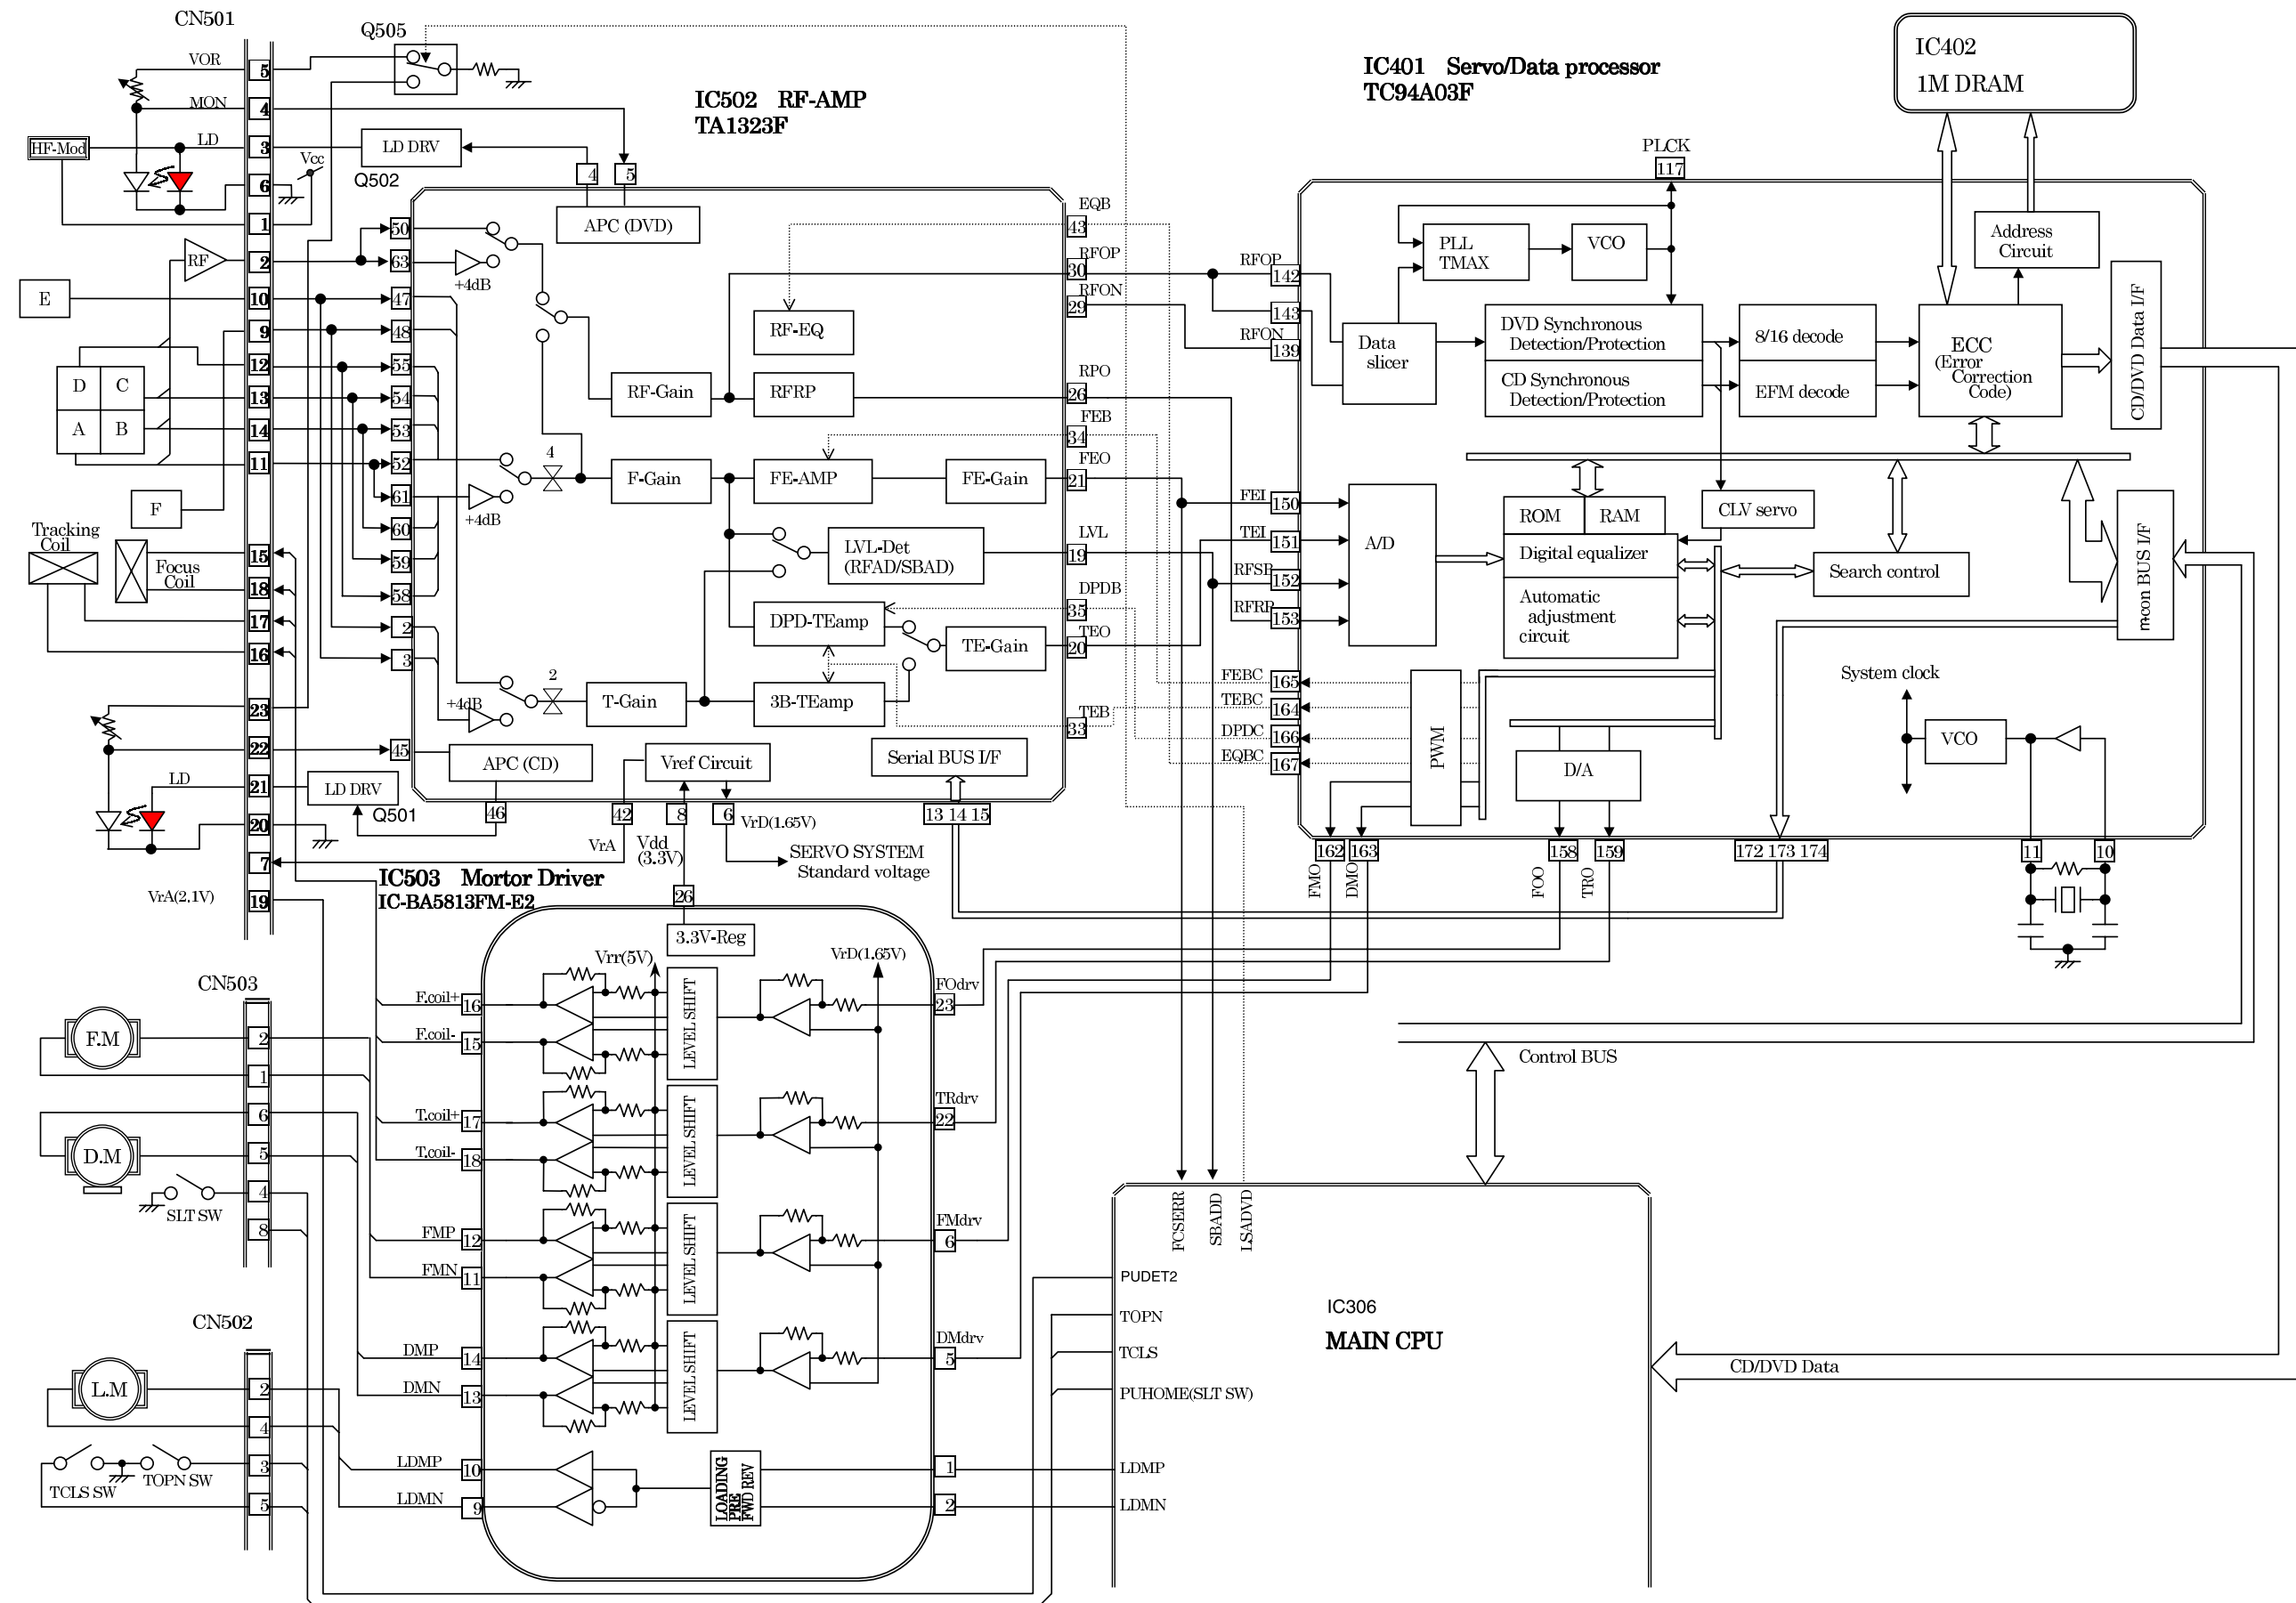


Fig. 3-4-6

4-4-2. Logical System Block Diagram

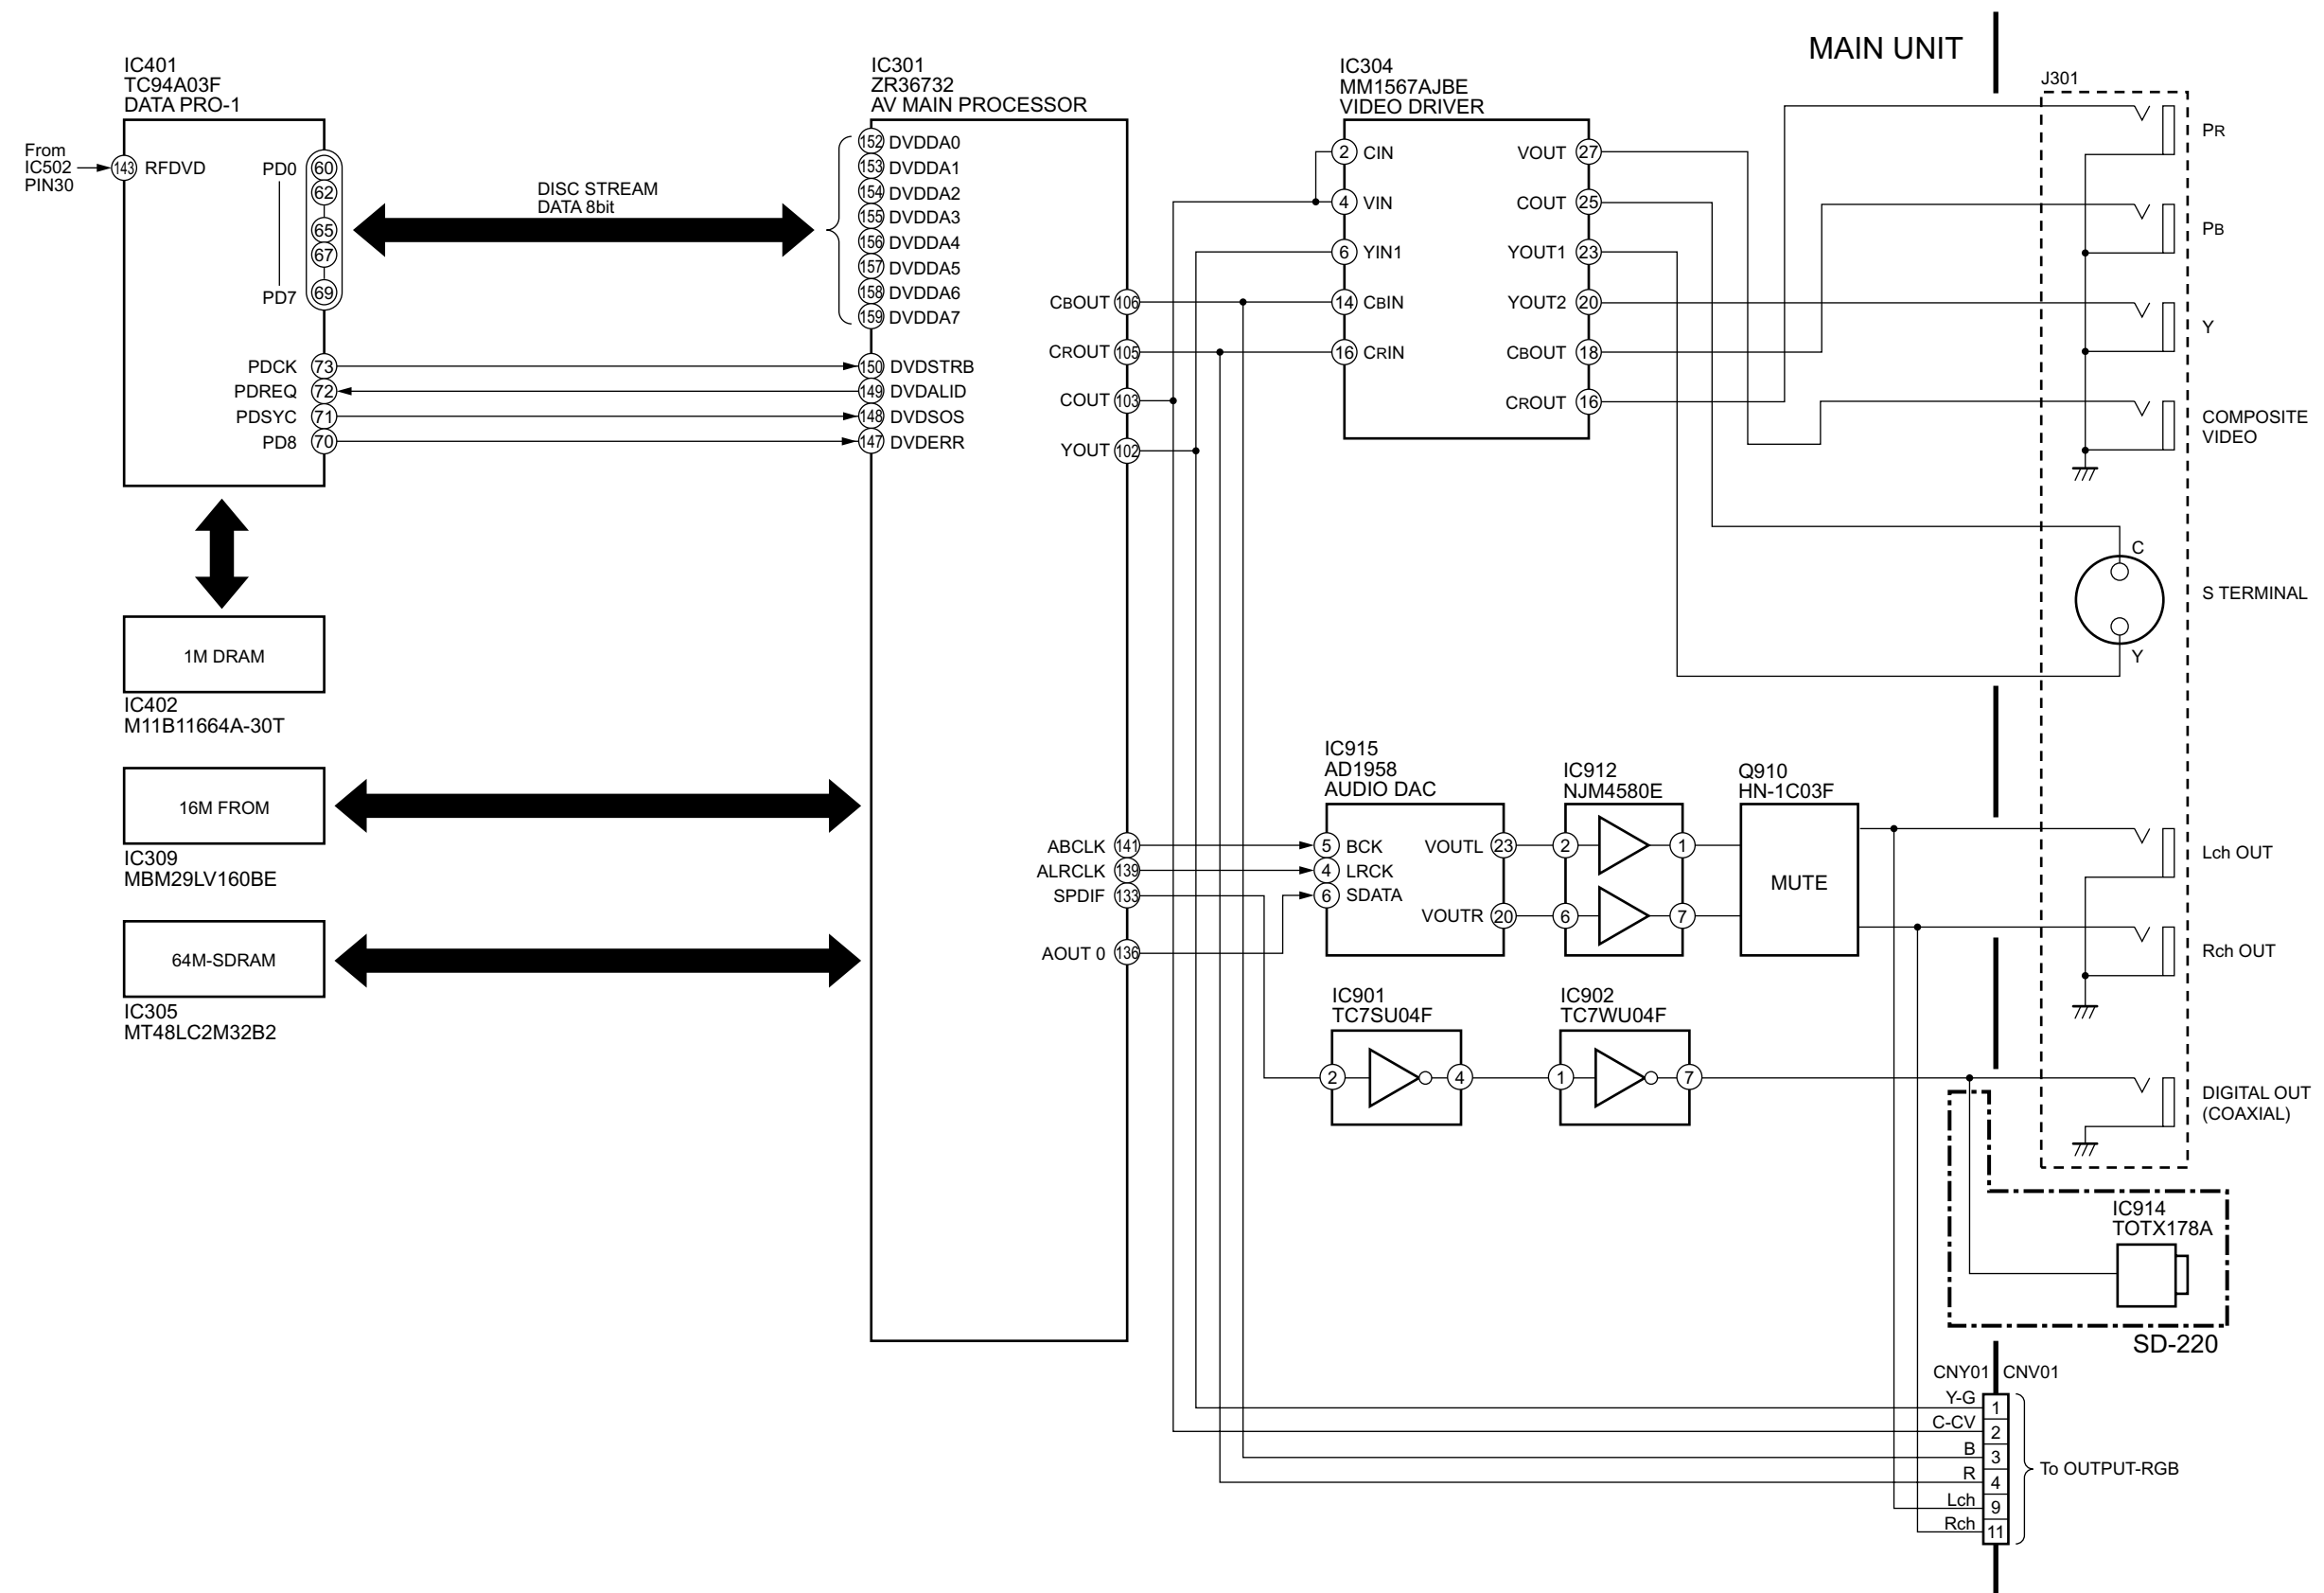


Fig. 3-4-7

4-4-3. Output-RGB Block Diagram

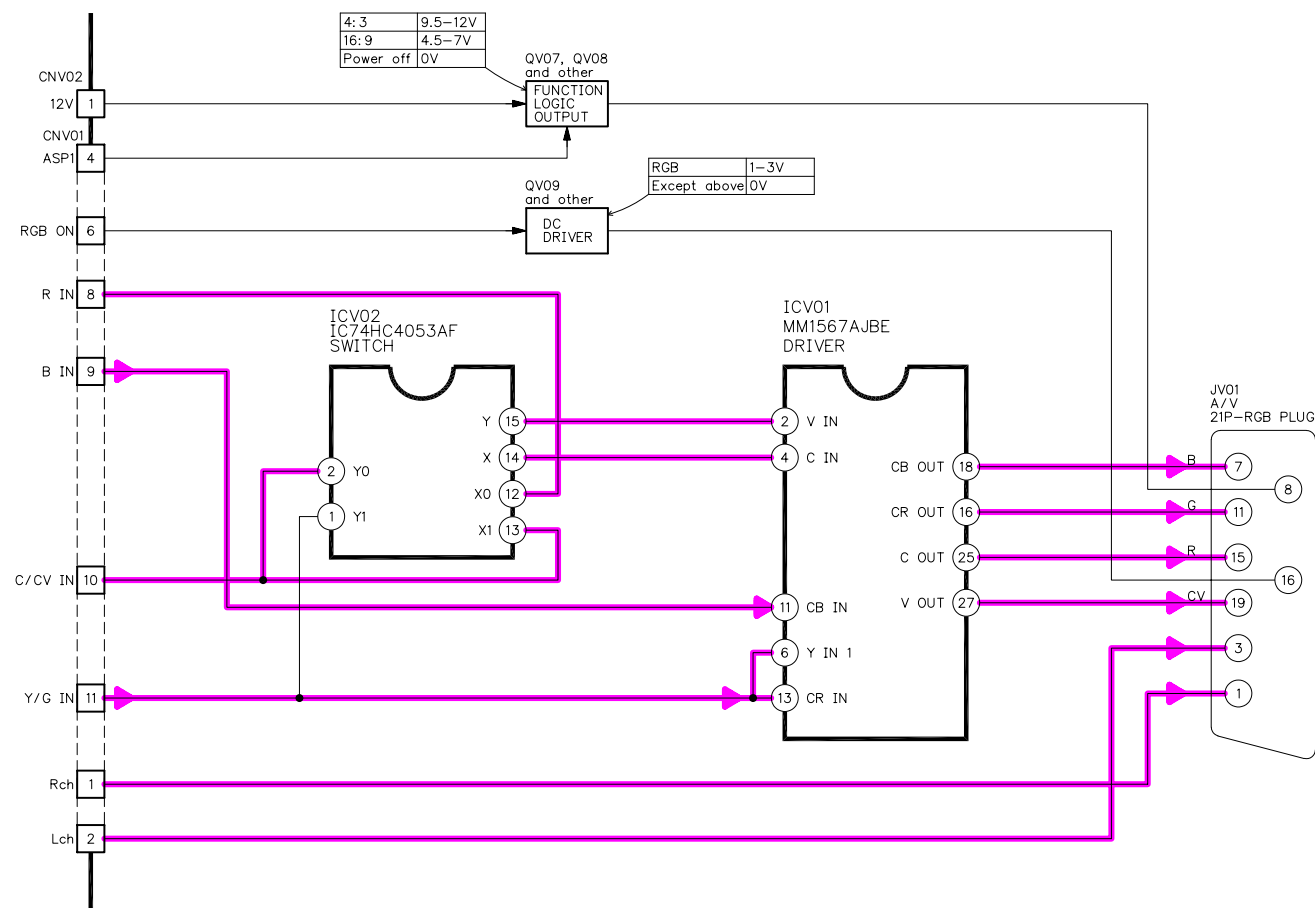


Fig. 3-4-8

Power Supply Circuit Diagram

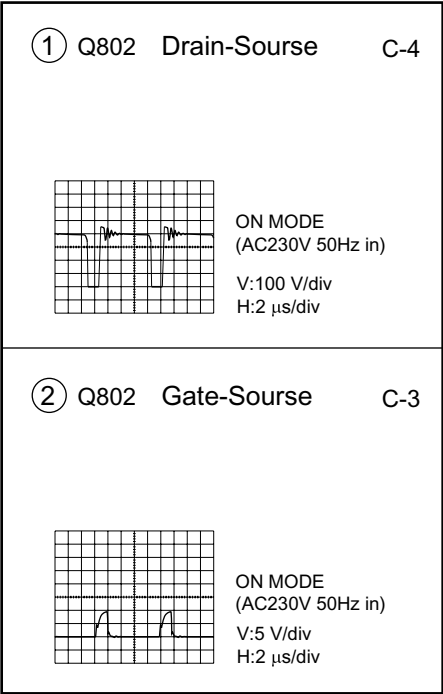


Fig. 3-5-2

A



Fig. 3-5-3

Front Display, Power Switch Circuit Diagram


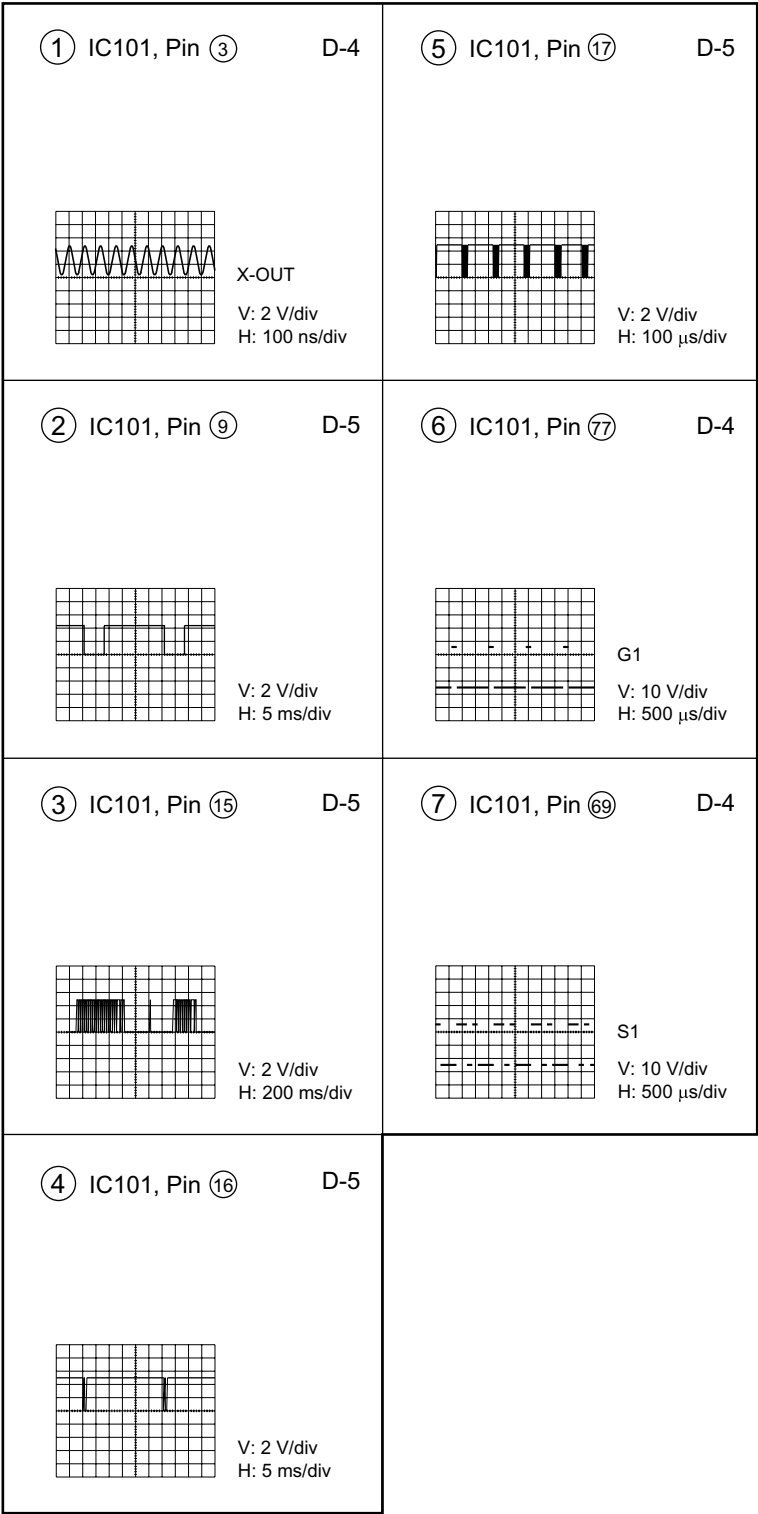


Fig. 3-5-4


5-3. Main Circuit Diagram

5-3-1. New Main ICs Information


ZR36732

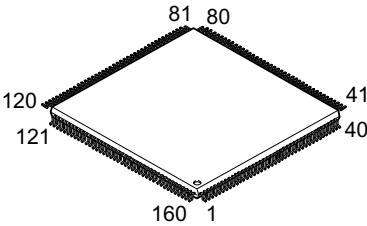


AD1958

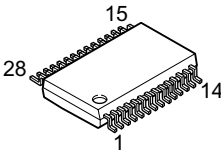


TMP94C251AF(Z)

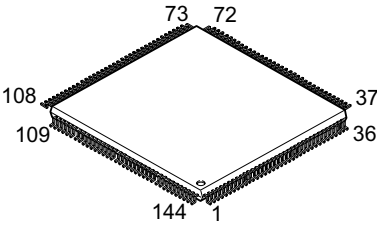


TA1319P/TA1319AP

 


TMP86CK74AFG

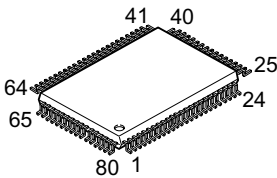


MM1561KFBE

 


MM1567AJBE

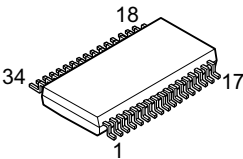


PST3545NR

 

BA5813FM-E2

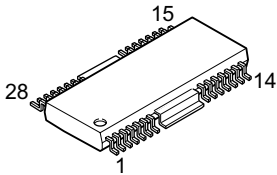

HC49US27000B

 

5-3-2. Main Circuit Diagram

SYMBOL DIFFERENCE LIST

MODEL	NORTH AMERICA MODEL	JAPAN MODEL	ASIA MODEL	EUROPE MODEL
NC	USE	NC	NC	NC
NC	NC	NC	NC	USE


POWER SUPPLY


Fig. 3-5-5



Fig. 3-5-5

5-3-2. Main Circuit Diagram

 This is a detailed main circuit diagram for a VCR. It features several integrated circuits (ICs) including IC501 (52806-2391), IC502 (TA1323F), IC503 (BA5813F), IC504 (25C3326B), IC505 (52808-0891), and IC506 (TC7S08B). The diagram shows a complex network of resistors (R501-R540), capacitors (C501-C510), and transistors (Q501-Q504). Key signals are labeled: LASER DRIVE SIGNAL, PICKUP ERROR SIGNAL, TRACKING SERVO SIGNAL, FOCUS SERVO SIGNAL, and TRAY CONTROL SIGNAL. Power supply rails for +5V, +3V, and AGND are shown. Connectors for PU-HEAD-I/F, TRY-I/F, DISC-MOTER-I/F, and FMN/FMP/GND/LMT/DMP/VCC/DMFG are included. The diagram is densely packed with components and their interconnections, with various reference designators and values provided for each part.

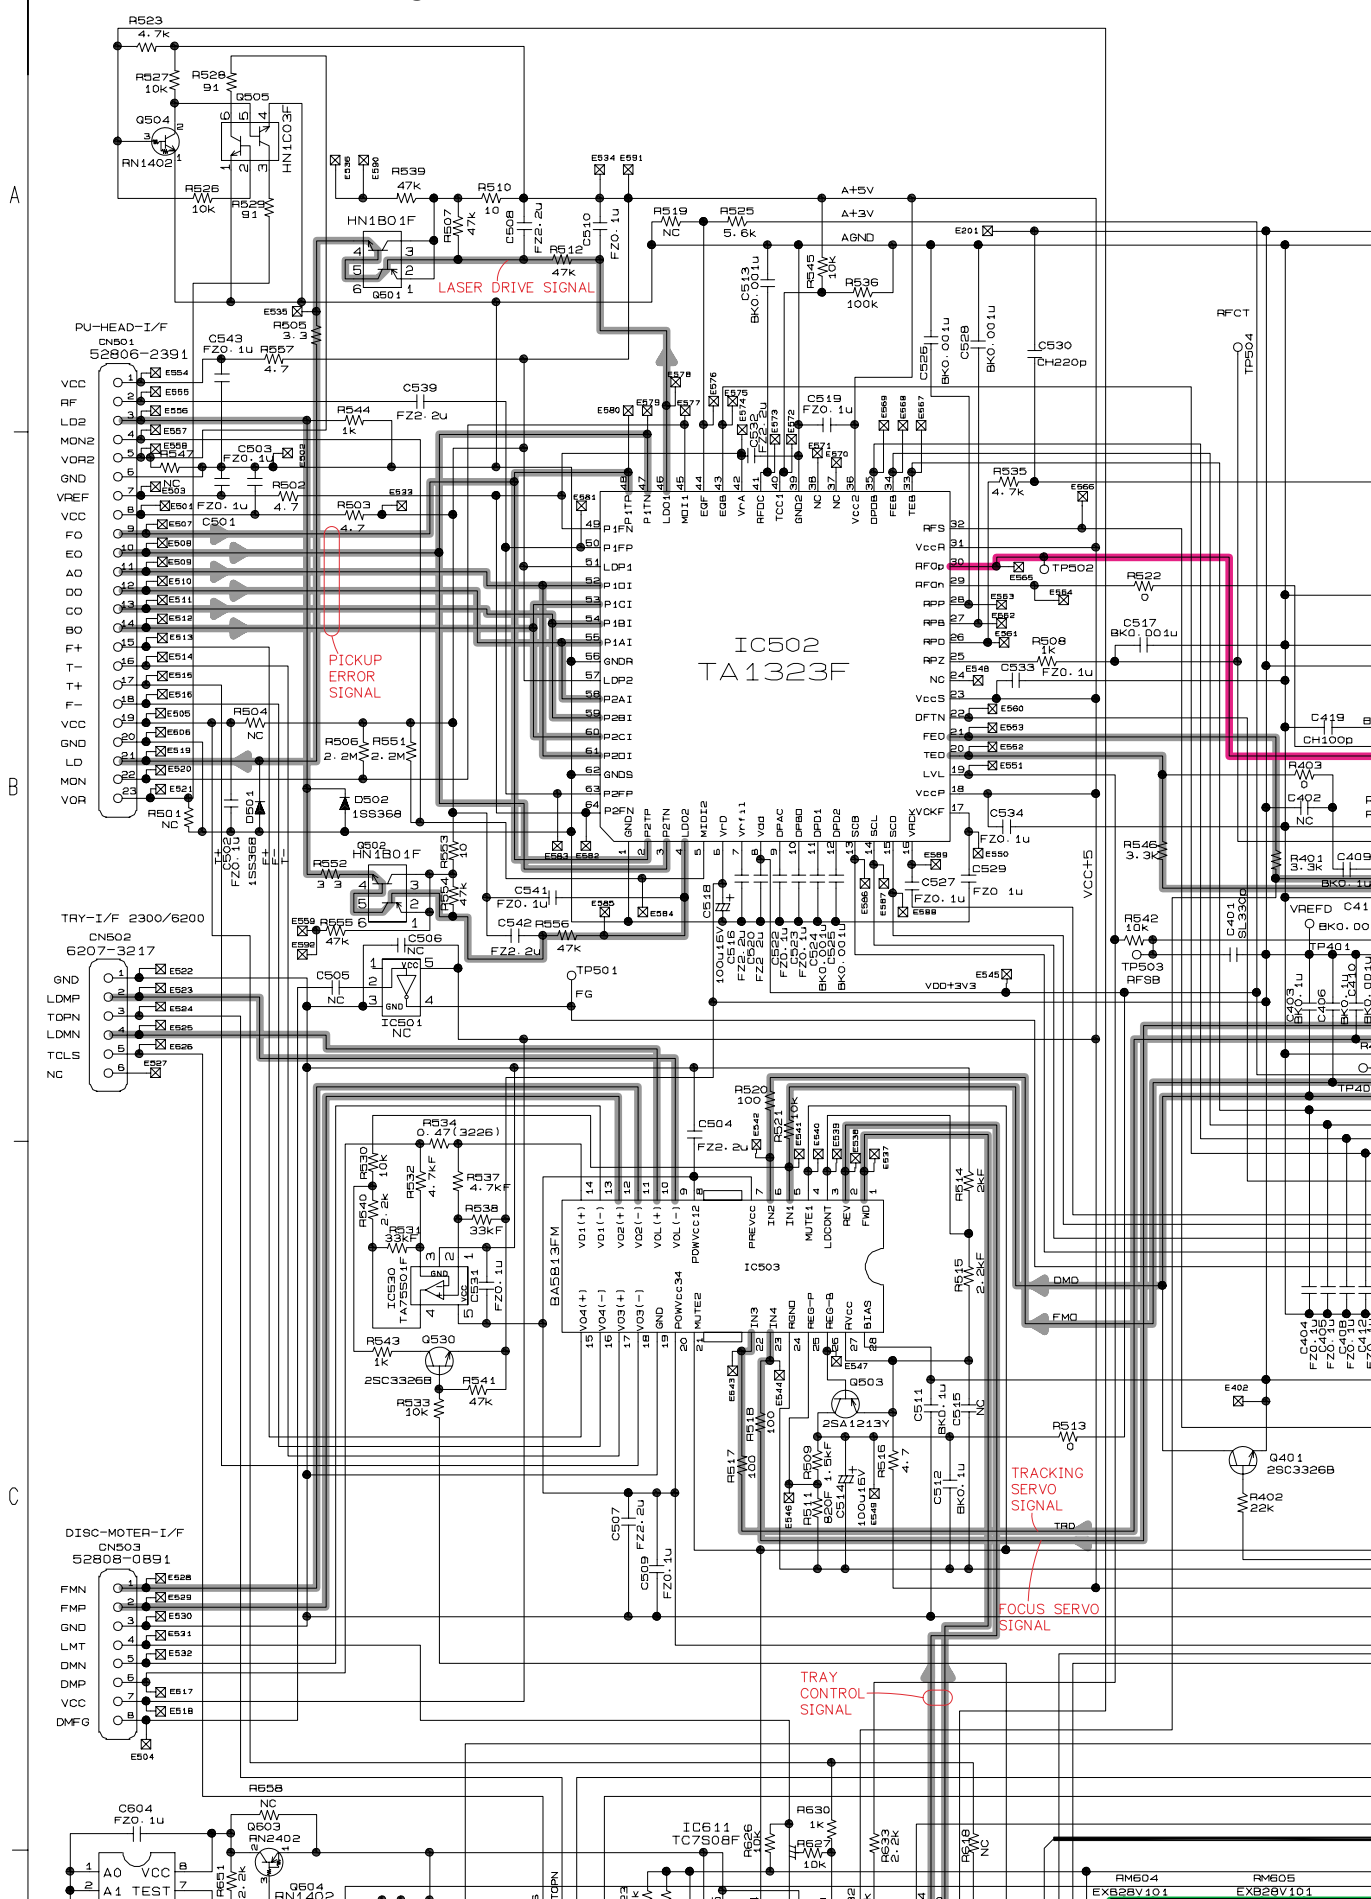

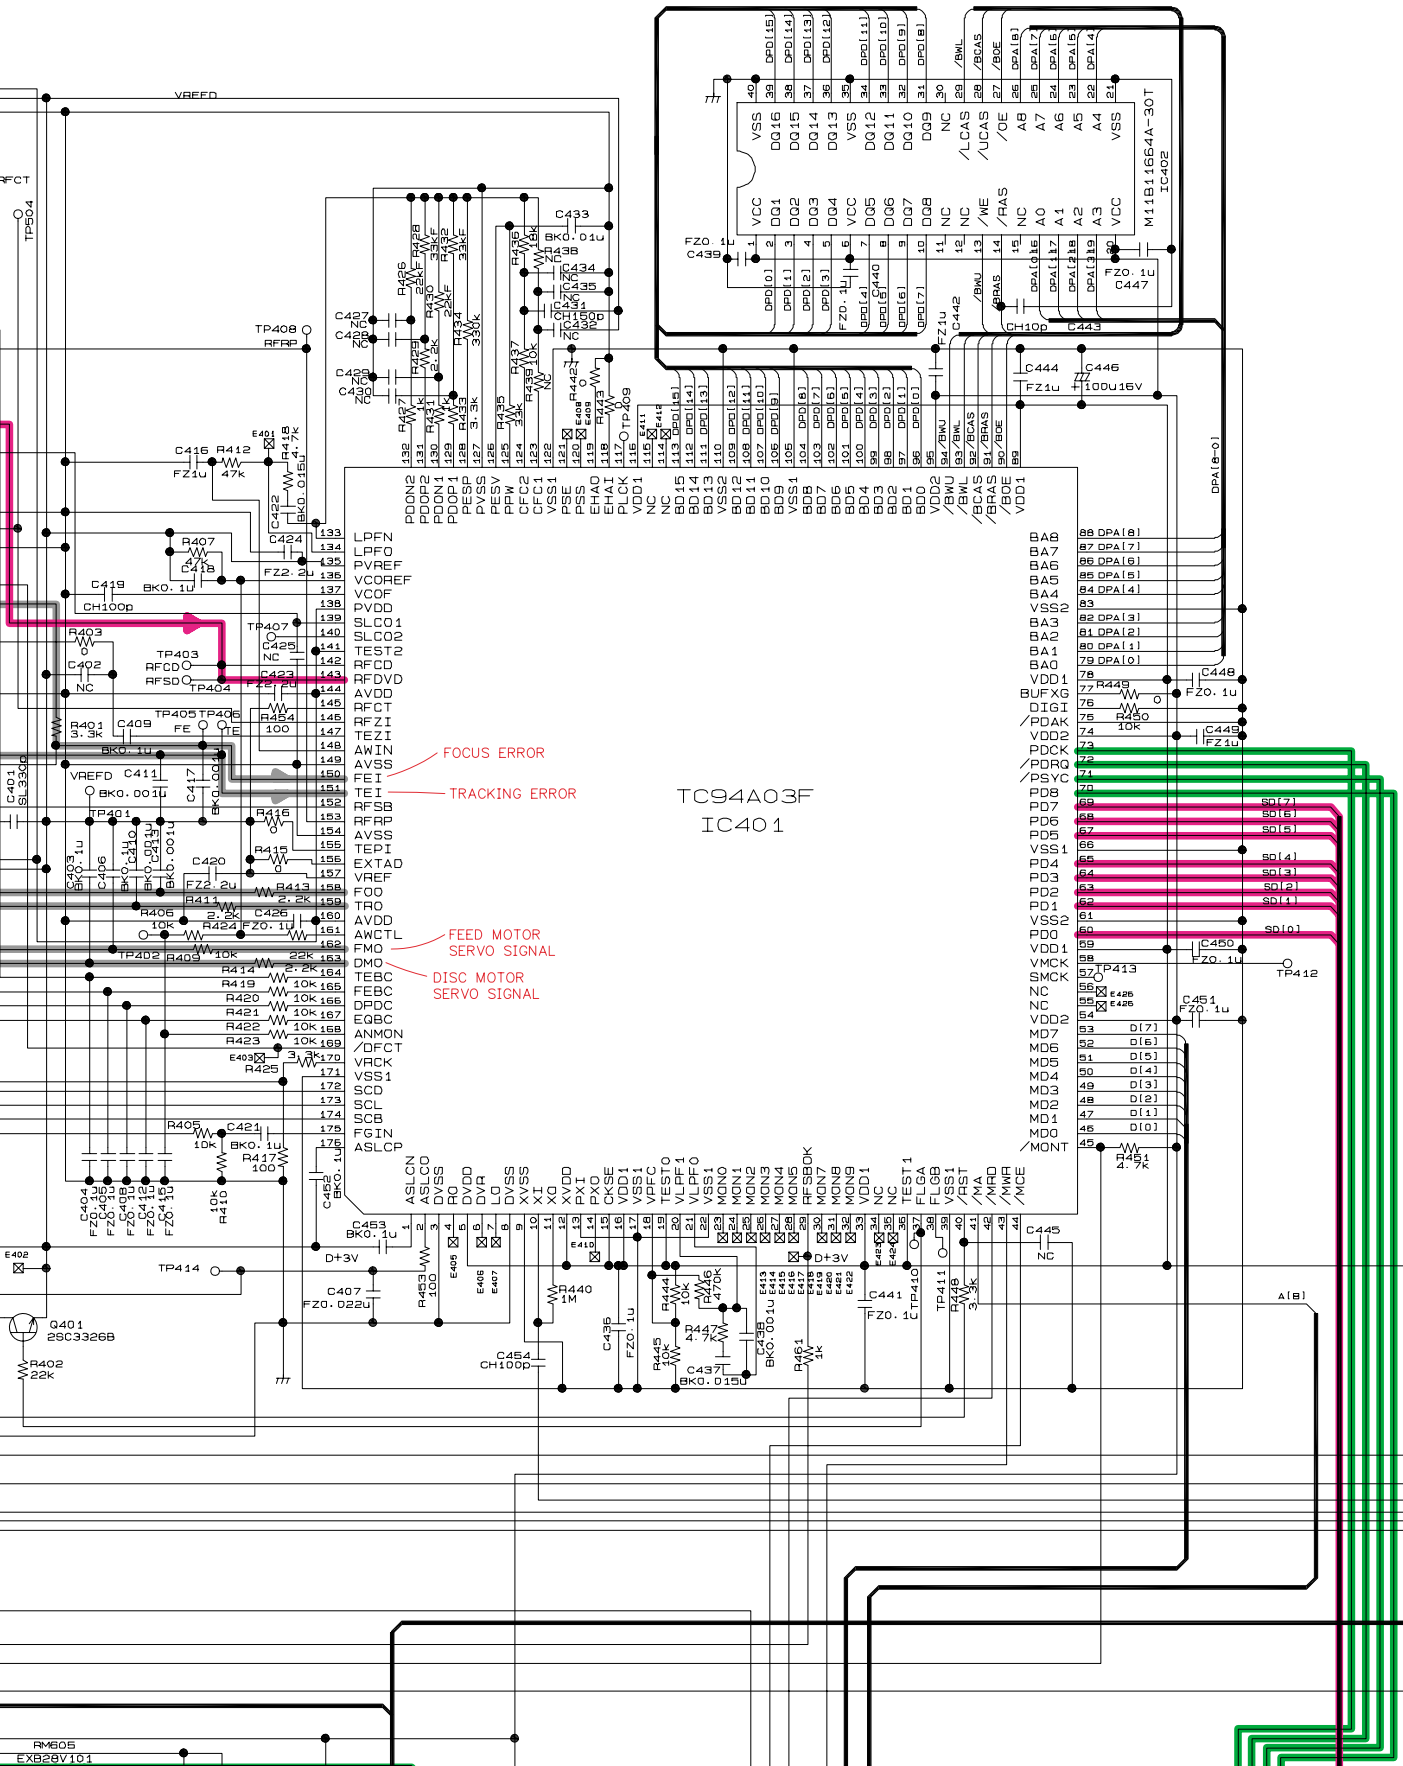


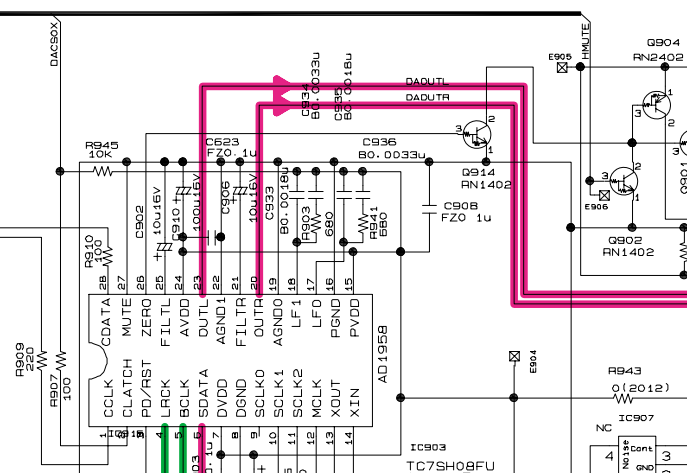




MODEL	NO
SYMBOL	
X	
JPN MODEL ONLY	
Y	
EUROPE MODEL ONLY	


SYMBOL DIFFERENCE LIST

MODEL SYMBOL	NORTH AMERICA MODEL	JAPAN MODEL	ASIA MODEL	EUROPE MODEL
*X**				
JPN MODEL ONLY	NC	USE	NC	NC
*Y**				
EUROPE MODEL ONLY	NC	NC	NC	USE

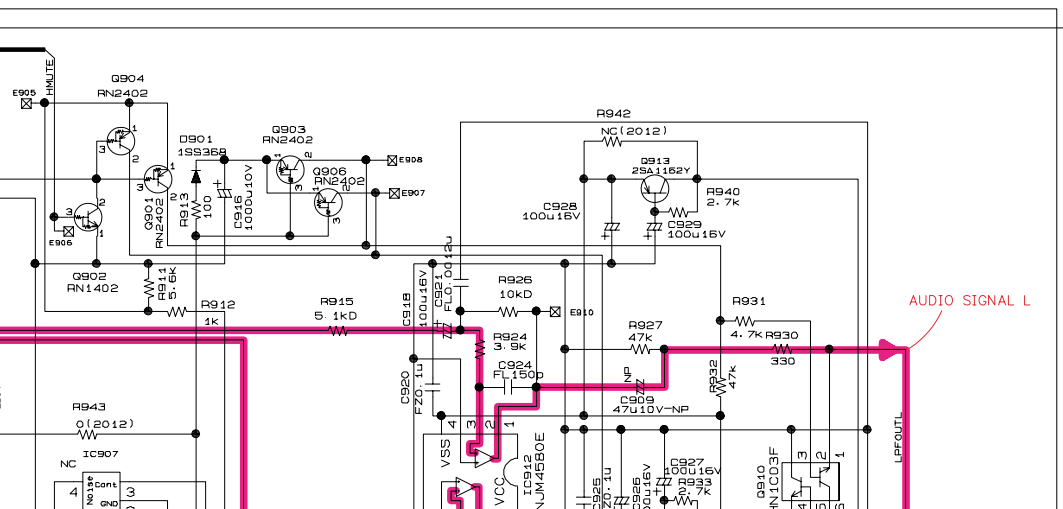


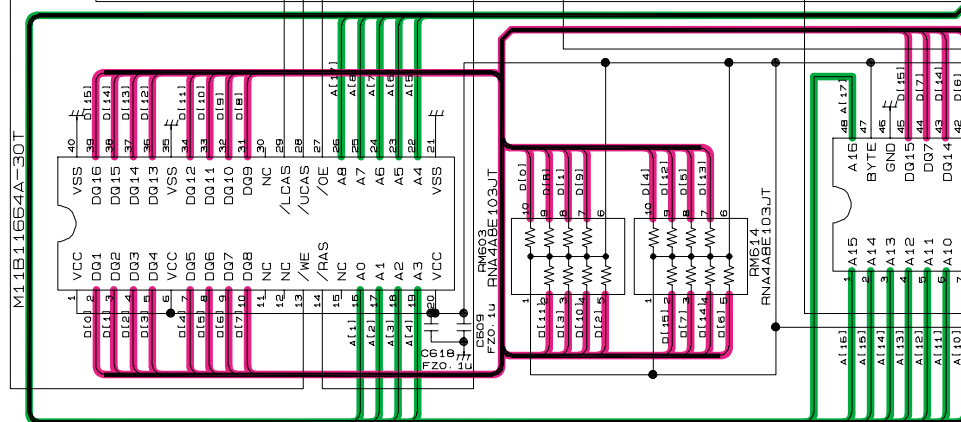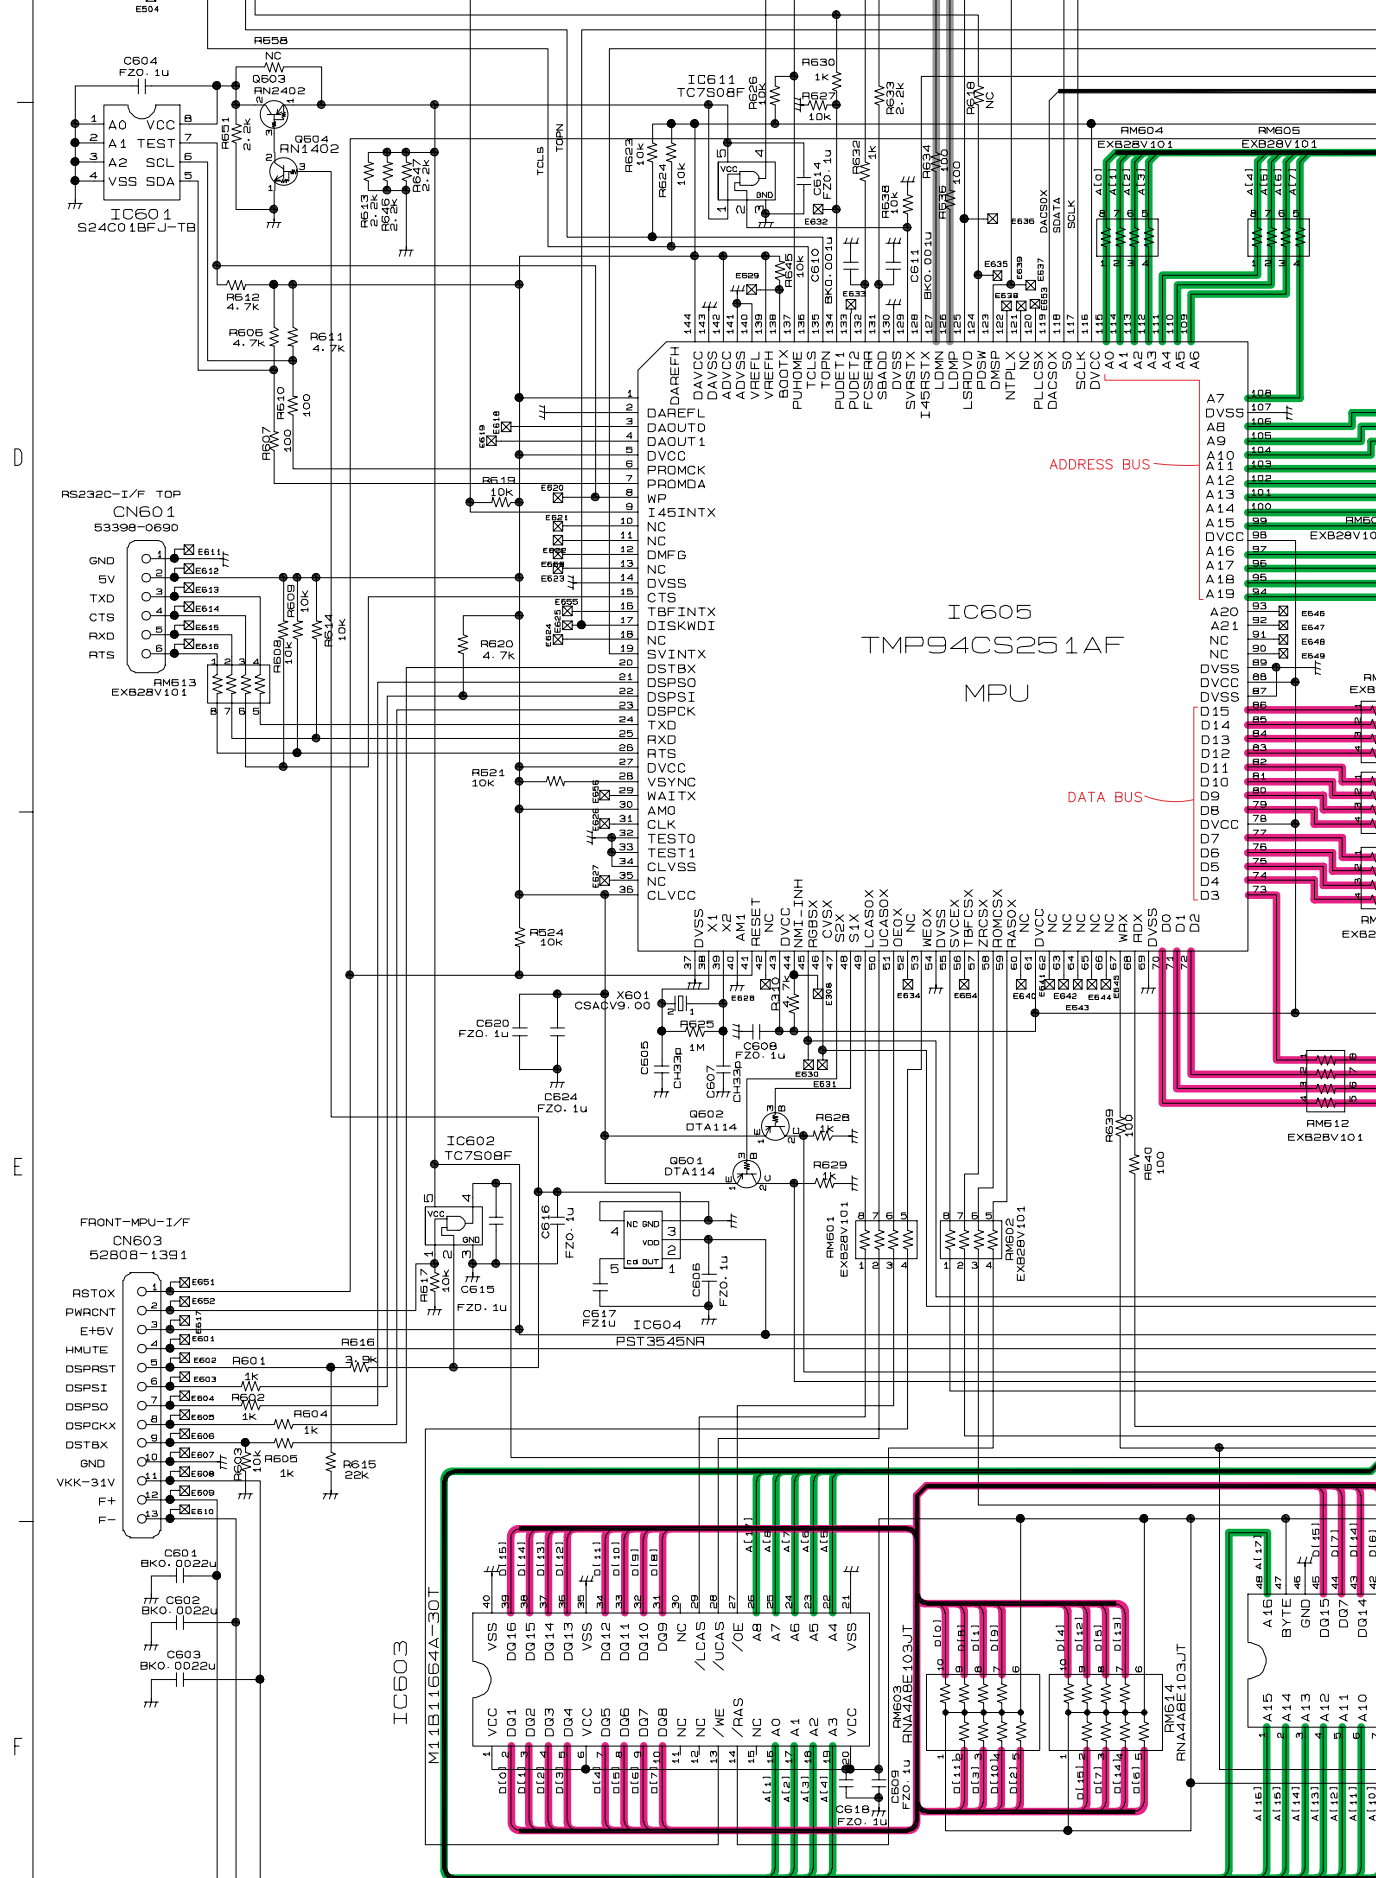

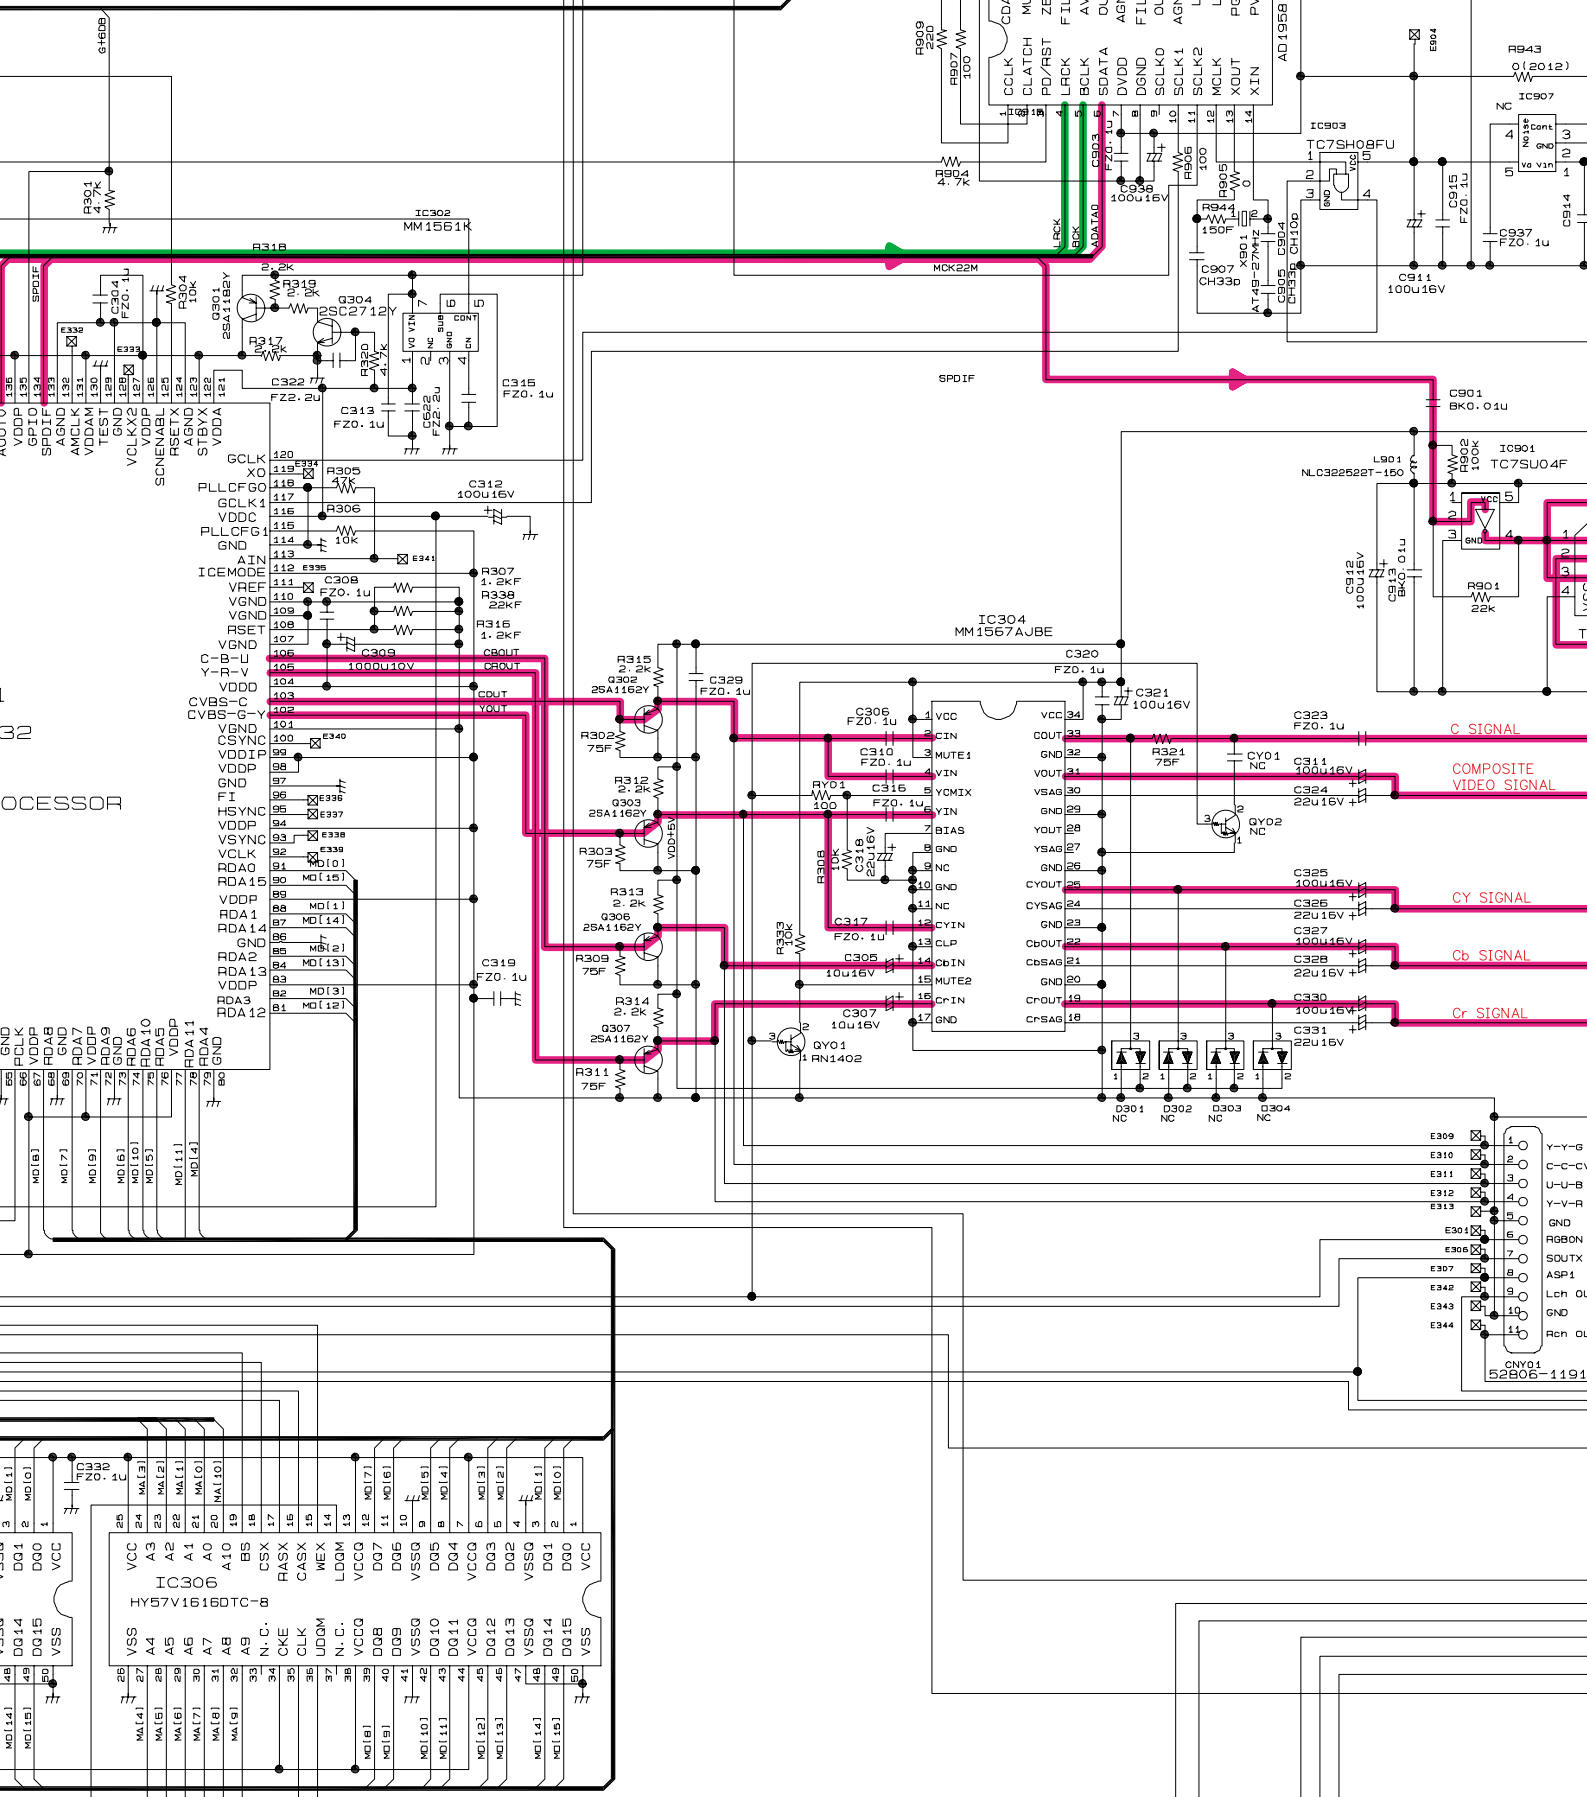

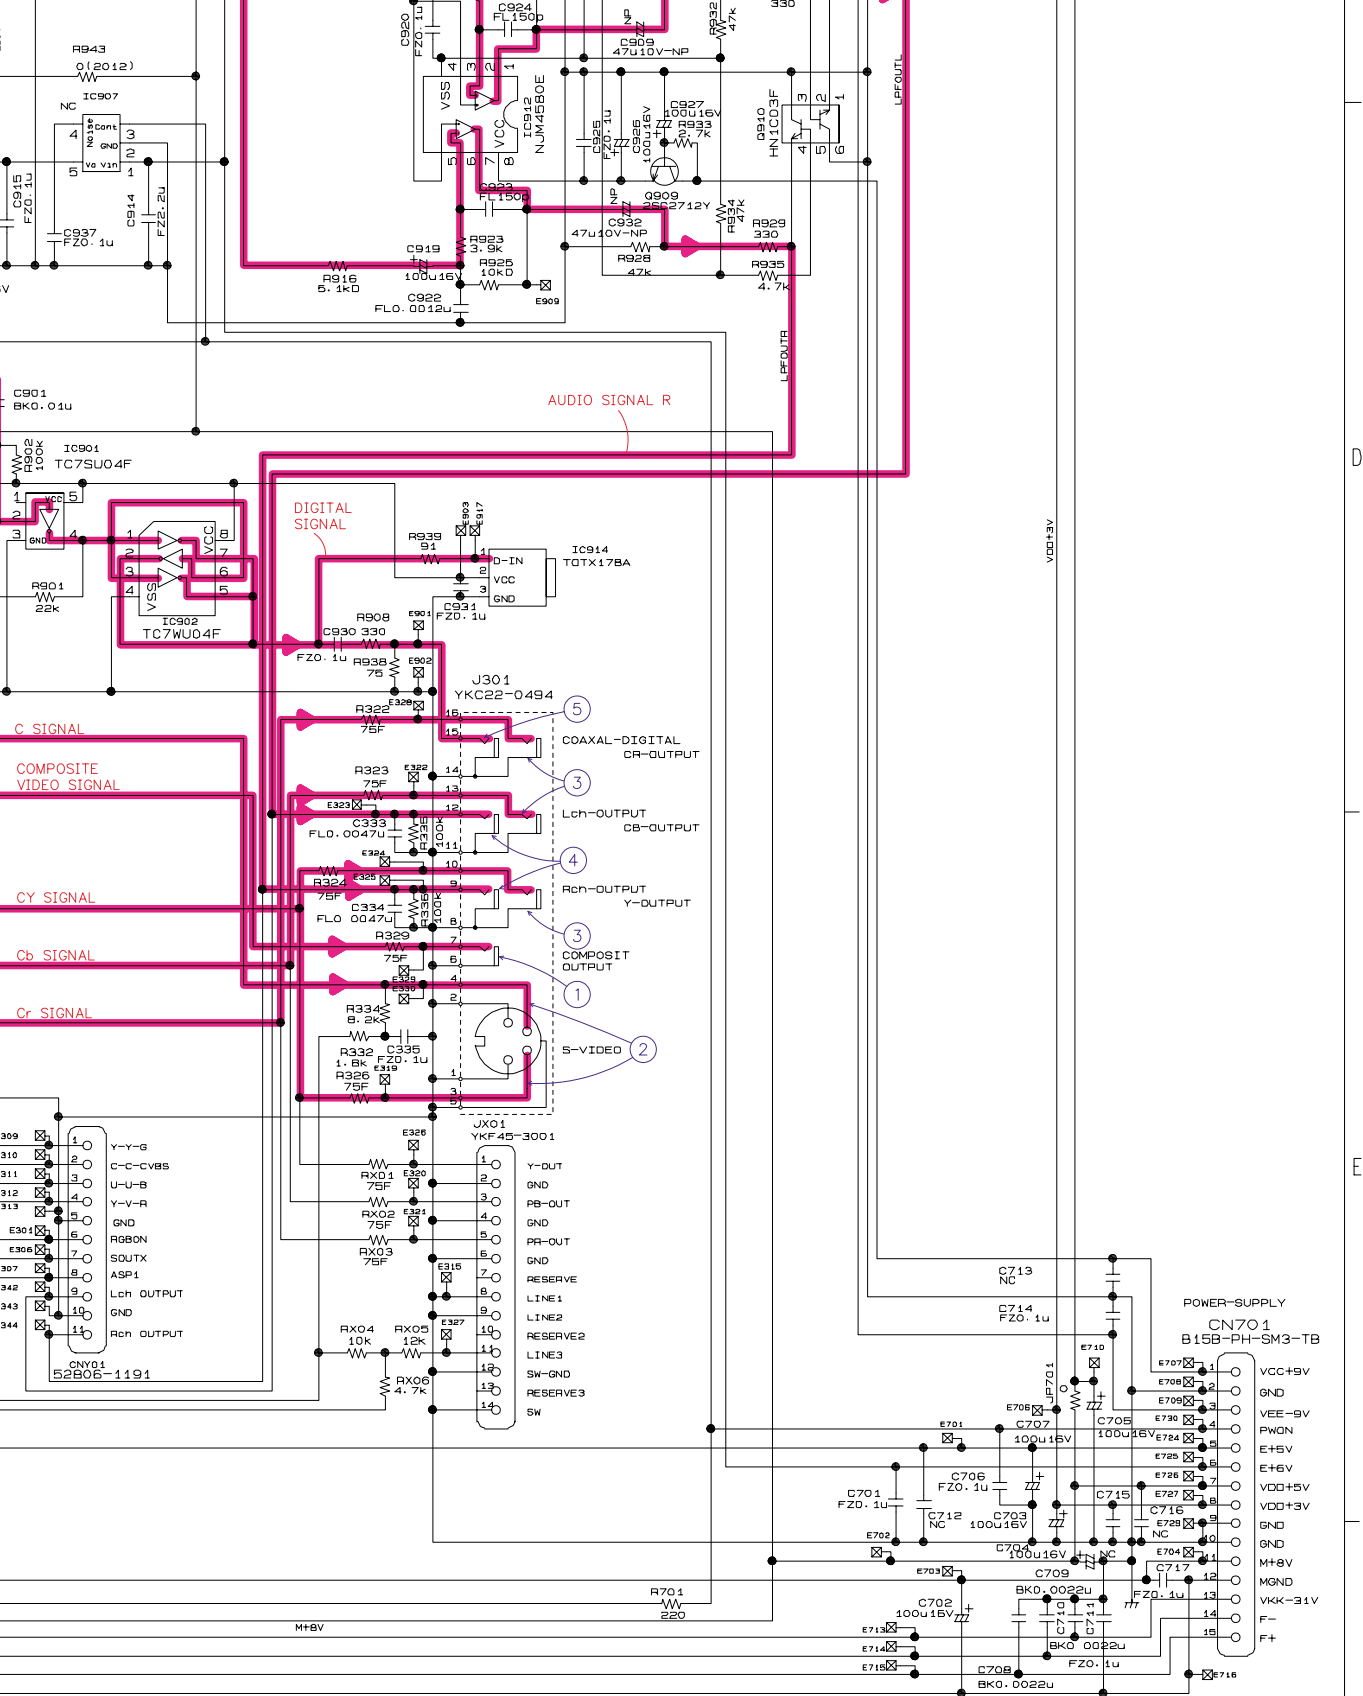

Main Circuit Diagram

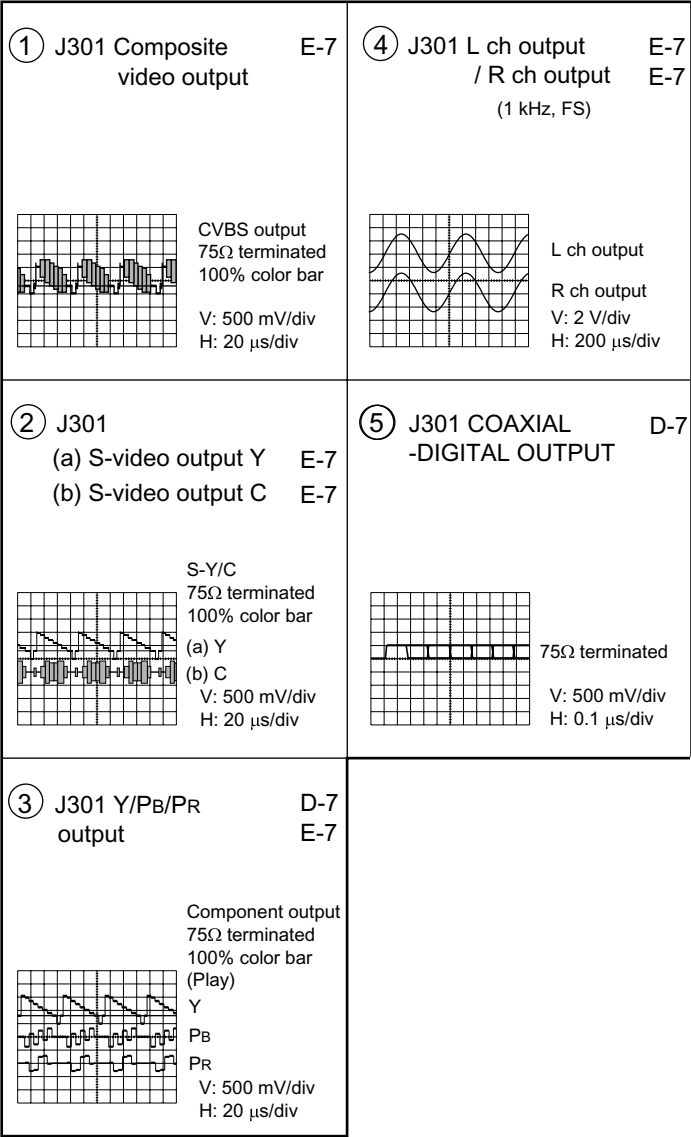

Output-RGB Circuit Diagram

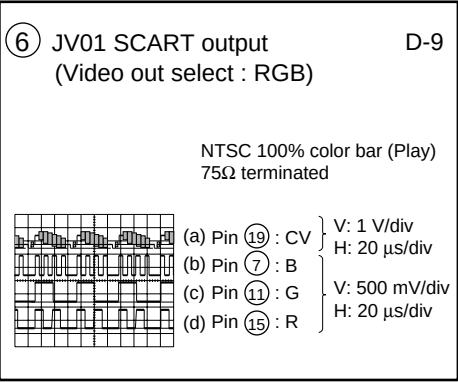


Fig. 3-5-6

Fig. 3-5-7


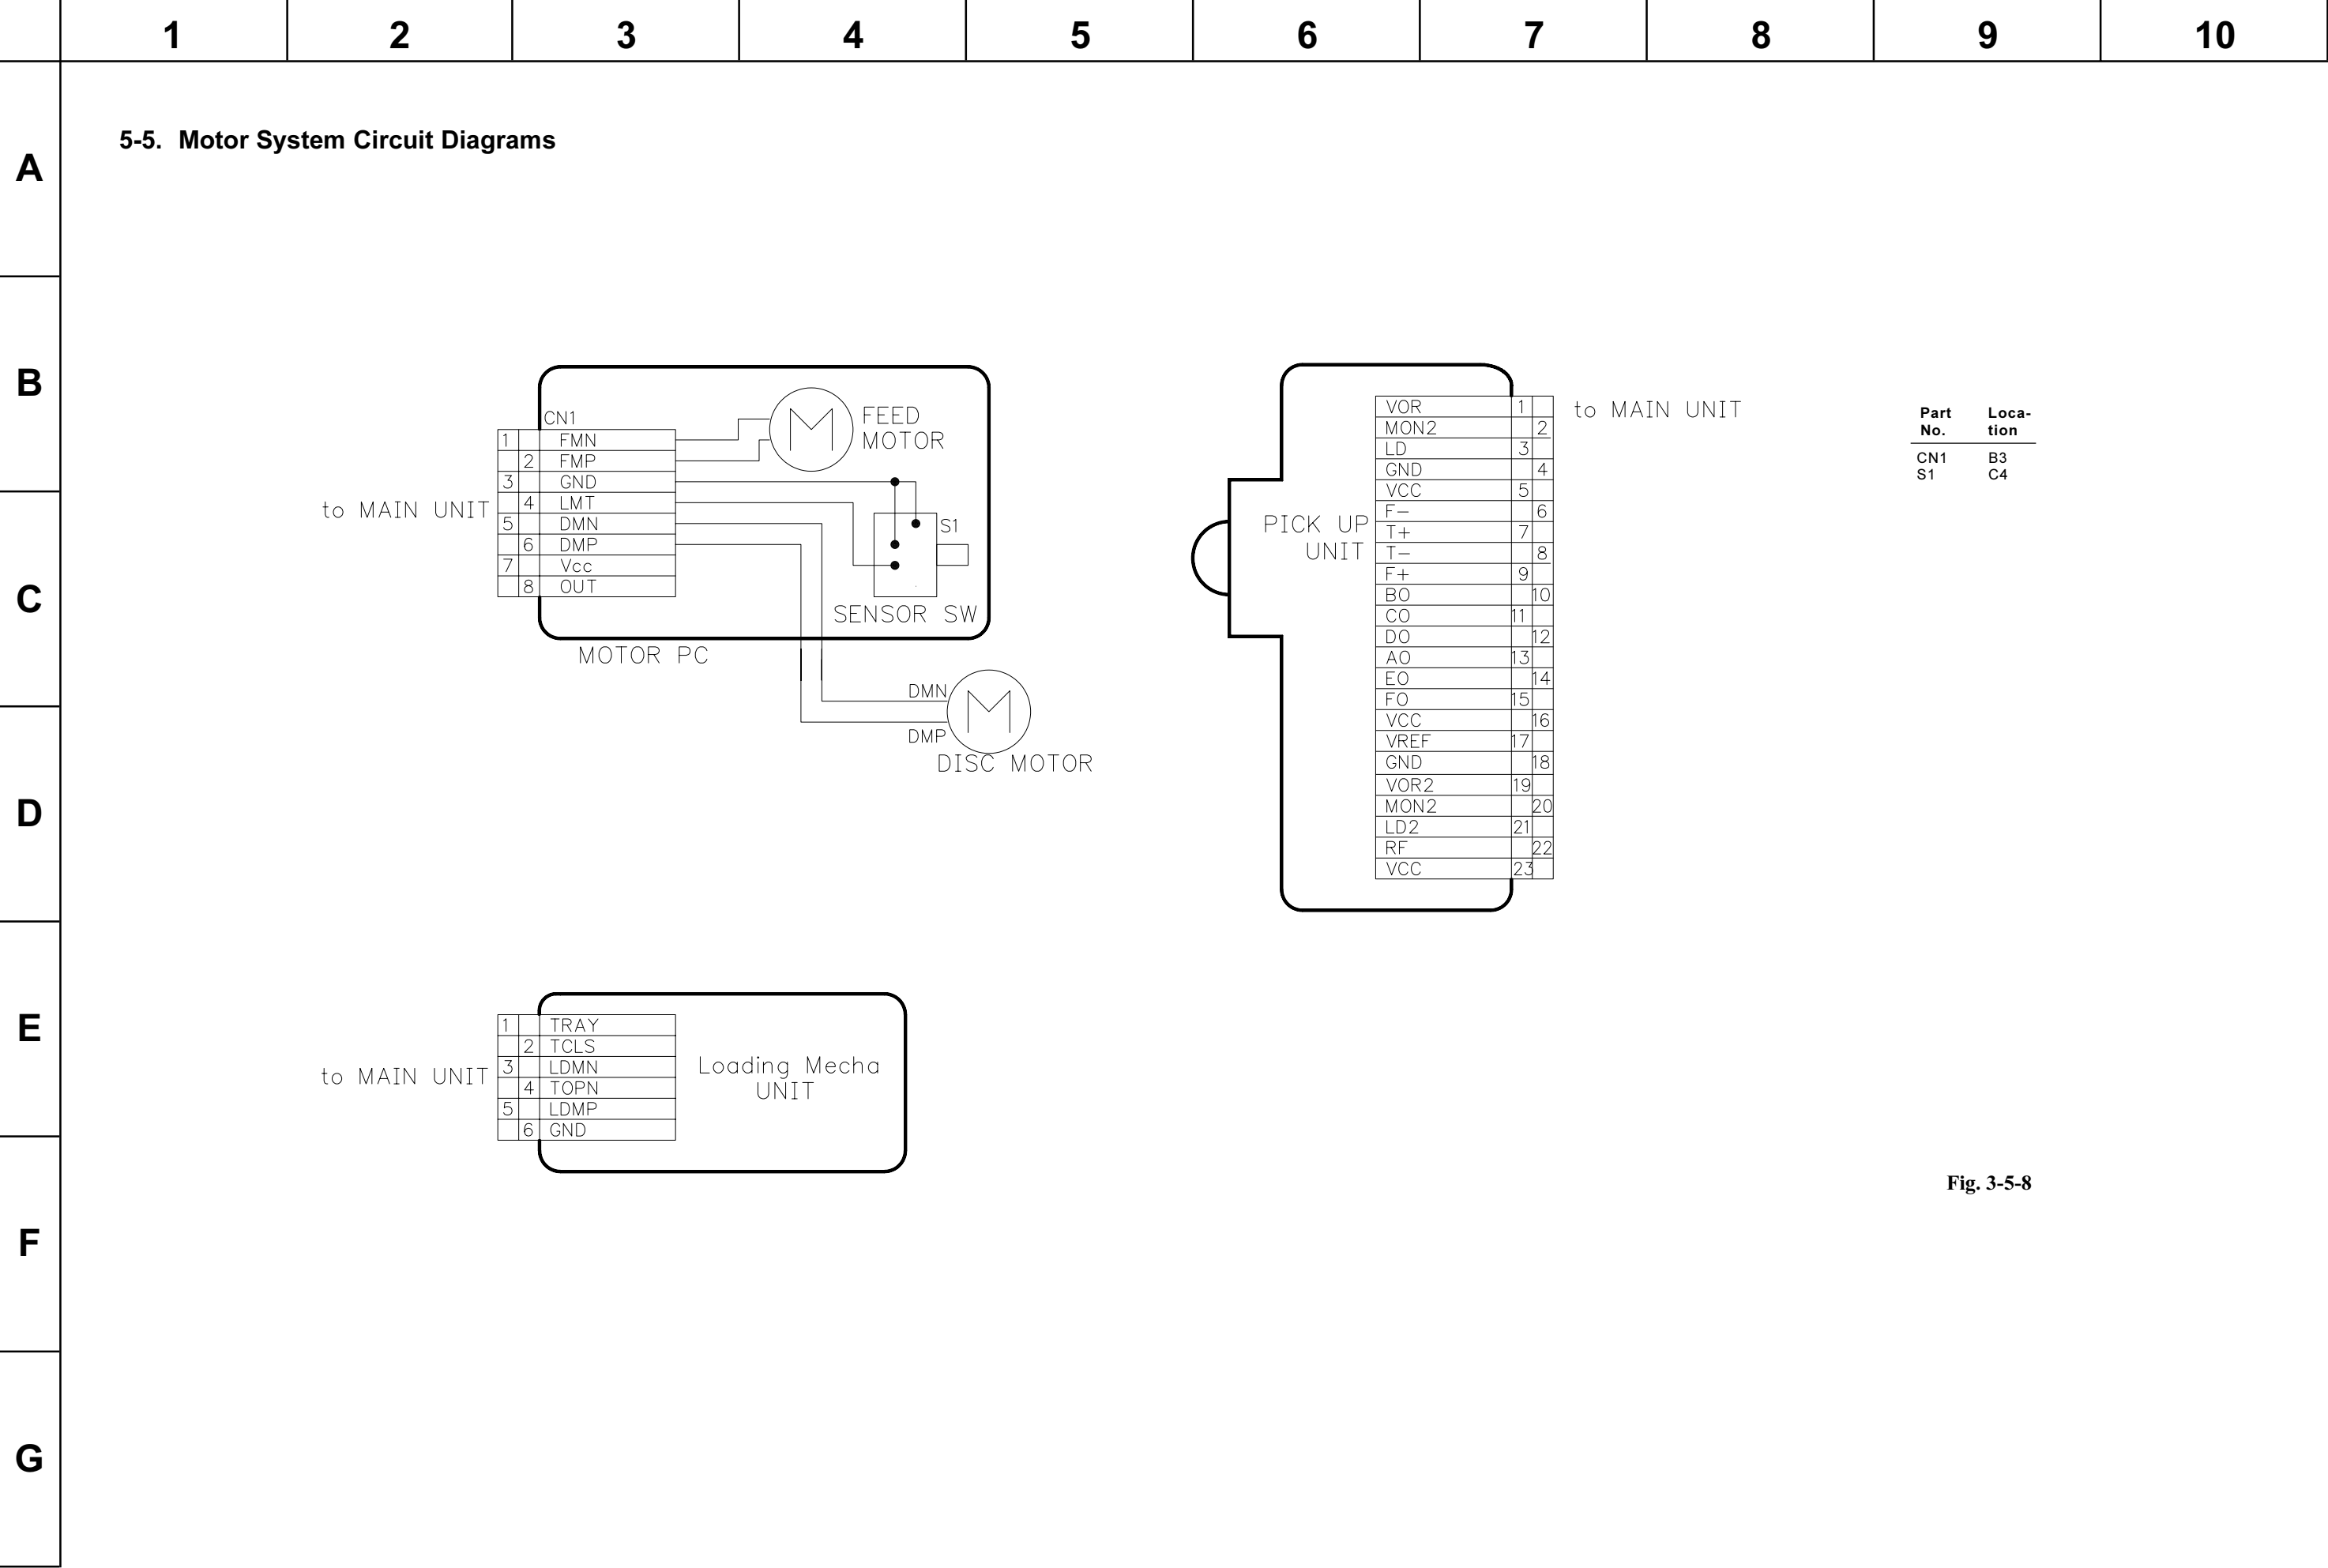


Fig. 3-5-8

6. PC BOARDS

6-1. Power Supply PC Board

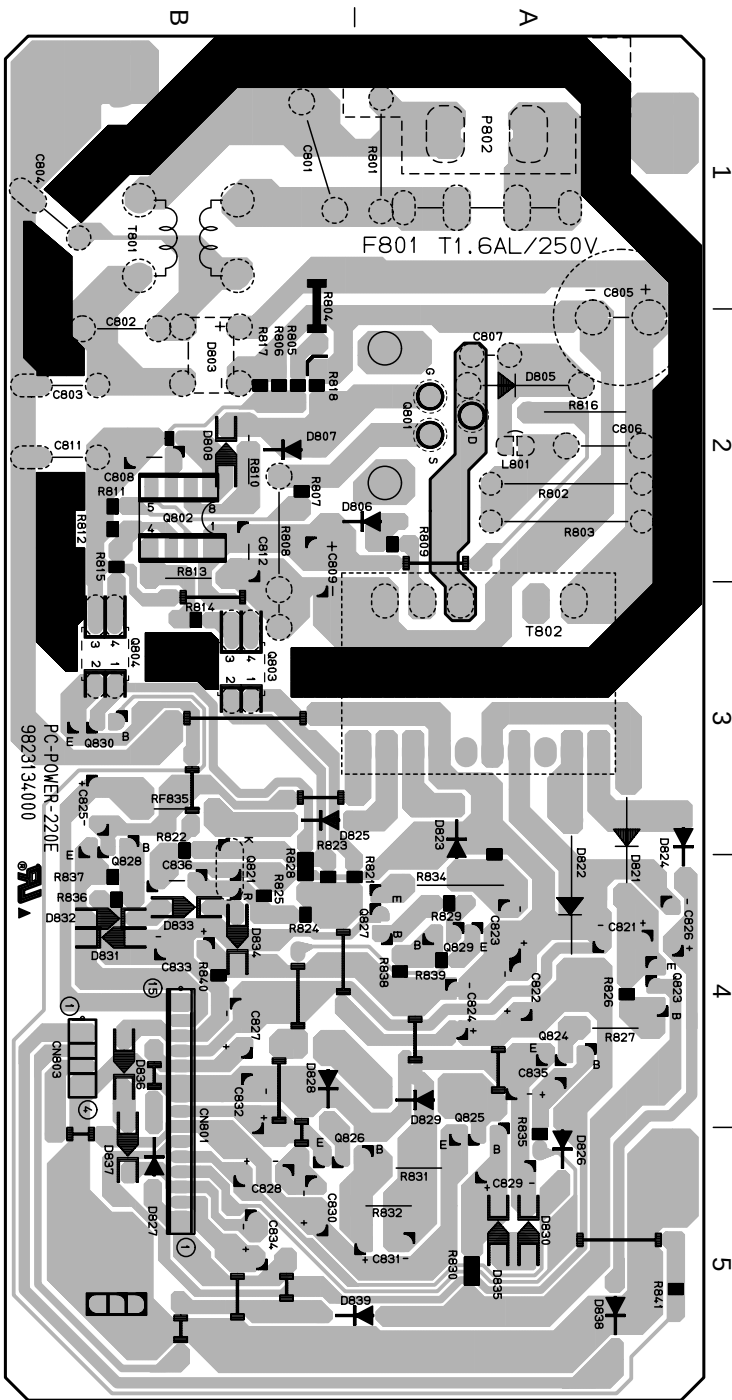

Part No.	Loca- tion	Part No.	Loca- tion
C801	B1	Q801	A2
C802	B2	Q802	B2
C803	B2	Q803	B3
C804	B1	Q804	B3
C805	A2	Q821	B4
C806	A2	Q823	A4
C807	A2	Q824	A4
C808	B2	Q825	A5
C809	B3	Q826	B5
C811	B2	Q827	A4
C812	B2	Q828	B3
C821	A4	Q829	A4
C822	A4	Q830	B3
C823	A4	R801	A1
C824	A4	R802	A2
C825	B3	R803	A2
C826	A4	R804	B2
C827	B4	R805	B2
C828	B5	R806	B2
C829	A5	R807	B2
C830	B5	R808	B2
C831	A5	R809	A2
C832	B4	R810	B2
C833	B4	R811	B2
C834	B5	R812	B2
C835	A4	R813	B2
C836	B4	R814	B3
CN801	B4	R815	B2
CN803	B4	R816	A2
D803	B2	R817	B2
D805	A2	R818	B2
D806	B2	R821	A4
D807	B2	R822	B3
D808	B2	R823	B4
D821	A4	R824	B4
D822	A4	R825	B4
D823	A3	R826	A4
D824	A4	R827	A4
D825	B3	R828	B3
D826	A5	R829	A4
D827	B4	R830	A5
D828	B4	R831	A5
D829	A4	R832	B5
D830	A5	R833	A3
D831	B4	R834	A4
D832	B4	R835	A4
D833	B4	R836	B4
D834	B4	R837	B4
D835	A5	R838	A4
D836	B4	R839	A4
D837	B5	R840	B4
D838	A5	R841	A5
D839	B5	RF835	B3
F801	A1	T801	B1
L801	A2	T802	A3
P802	A1		

Fig. 3-6-1 EU02 Power Supply PC Board (Bottom side)

6-2. Output-RGB PC Board

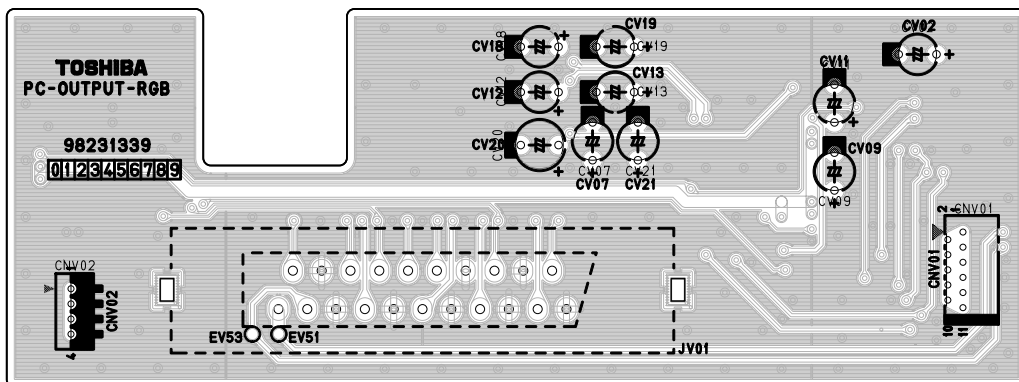


Fig. 3-6-2 EU09 Output-RGB PC Board (Top side)

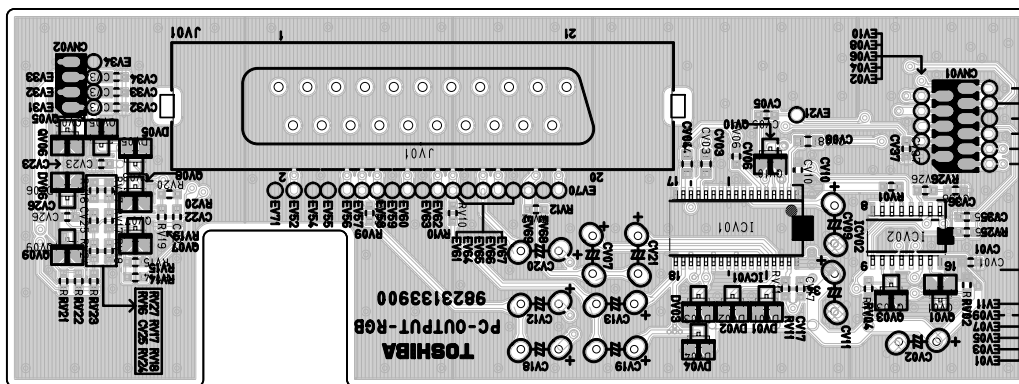


Fig. 3-6-3 EU09 Output-RGB PC Board (Bottom side)

Part No.	Location	Part No.	Location	Part No.	Location	Part No.	Location
CNV01	B5/C5	CV35	- /D5	EV52	- /D2	QV07	- /D2
CNV02	B2/C1	CV36	- /D5	EV53	B2/ -	QV08	- /D2
CV01	- /D5	CV37	- /D4	EV54	- /D2	QV09	- /D1
CV02	A4 /D4	DV01	- /D4	EV55	- /D2	QV10	- /D4
CV03	- /D4	DV02	- /D4	EV56	- /D2	RV01	- /D4
CV04	- /D4	DV03	- /D4	EV57	- /D3	RV02	- /D5
CV06	- /D4	DV04	- /D4	EV58	- /D3	RV04	- /D4
CV07	B3/D3	DV05	- /D2	EV59	- /D3	RV09	- /D3
CV08	- /D4	DV06	- /D1	EV60	- /D3	RV10	- /D3
CV09	B4/D4	EV01	- /D5	EV61	- /D3	RV11	- /D4
CV10	- /D4	EV02	- /C4	EV62	- /D3	RV12	- /D3
CV11	A4/D4	EV03	- /D5	EV63	- /D3	RV14	- /D2
CV12	B3/D3	EV04	- /C4	EV64	- /D3	RV15	- /D2
CV13	A4/D3	EV05	- /D5	EV65	- /D3	RV16	- /D2
CV17	- /D4	EV06	- /C4	EV66	- /D3	RV17	- /D2
CV18	A3/D3	EV07	- /D5	EV67	- /D3	RV18	- /D2
CV19	A4/D3	EV08	- /C4	EV68	- /D3	RV19	- /D2
CV20	B3/D3	EV09	- /D5	EV69	- /D3	RV20	- /D2
CV21	B4/D4	EV10	- /C4	EV70	- /D3	RV21	- /D1
CV22	- /D2	EV11	- /D5	EV71	- /D2	RV22	- /D2
CV23	- /D1	EV21	- /C4	ICV01	- /D4	RV23	- /D2
CV25	- /D2	EV31	- /C1	ICV02	- /D4	RV24	- /D2
CV26	- /D1	EV32	- /C1	JV01	B4/C2	RV25	- /D5
CV32	- /C2	EV33	- /C1	QV01	- /D5	RV26	- /D5
CV33	- /C2	EV34	- /C2	QV03	- /D4	RV27	- /D2
CV34	- /C2	EV51	B2/ -	QV06	- /D1	VC05	- /C4

6-3. Main PC Board

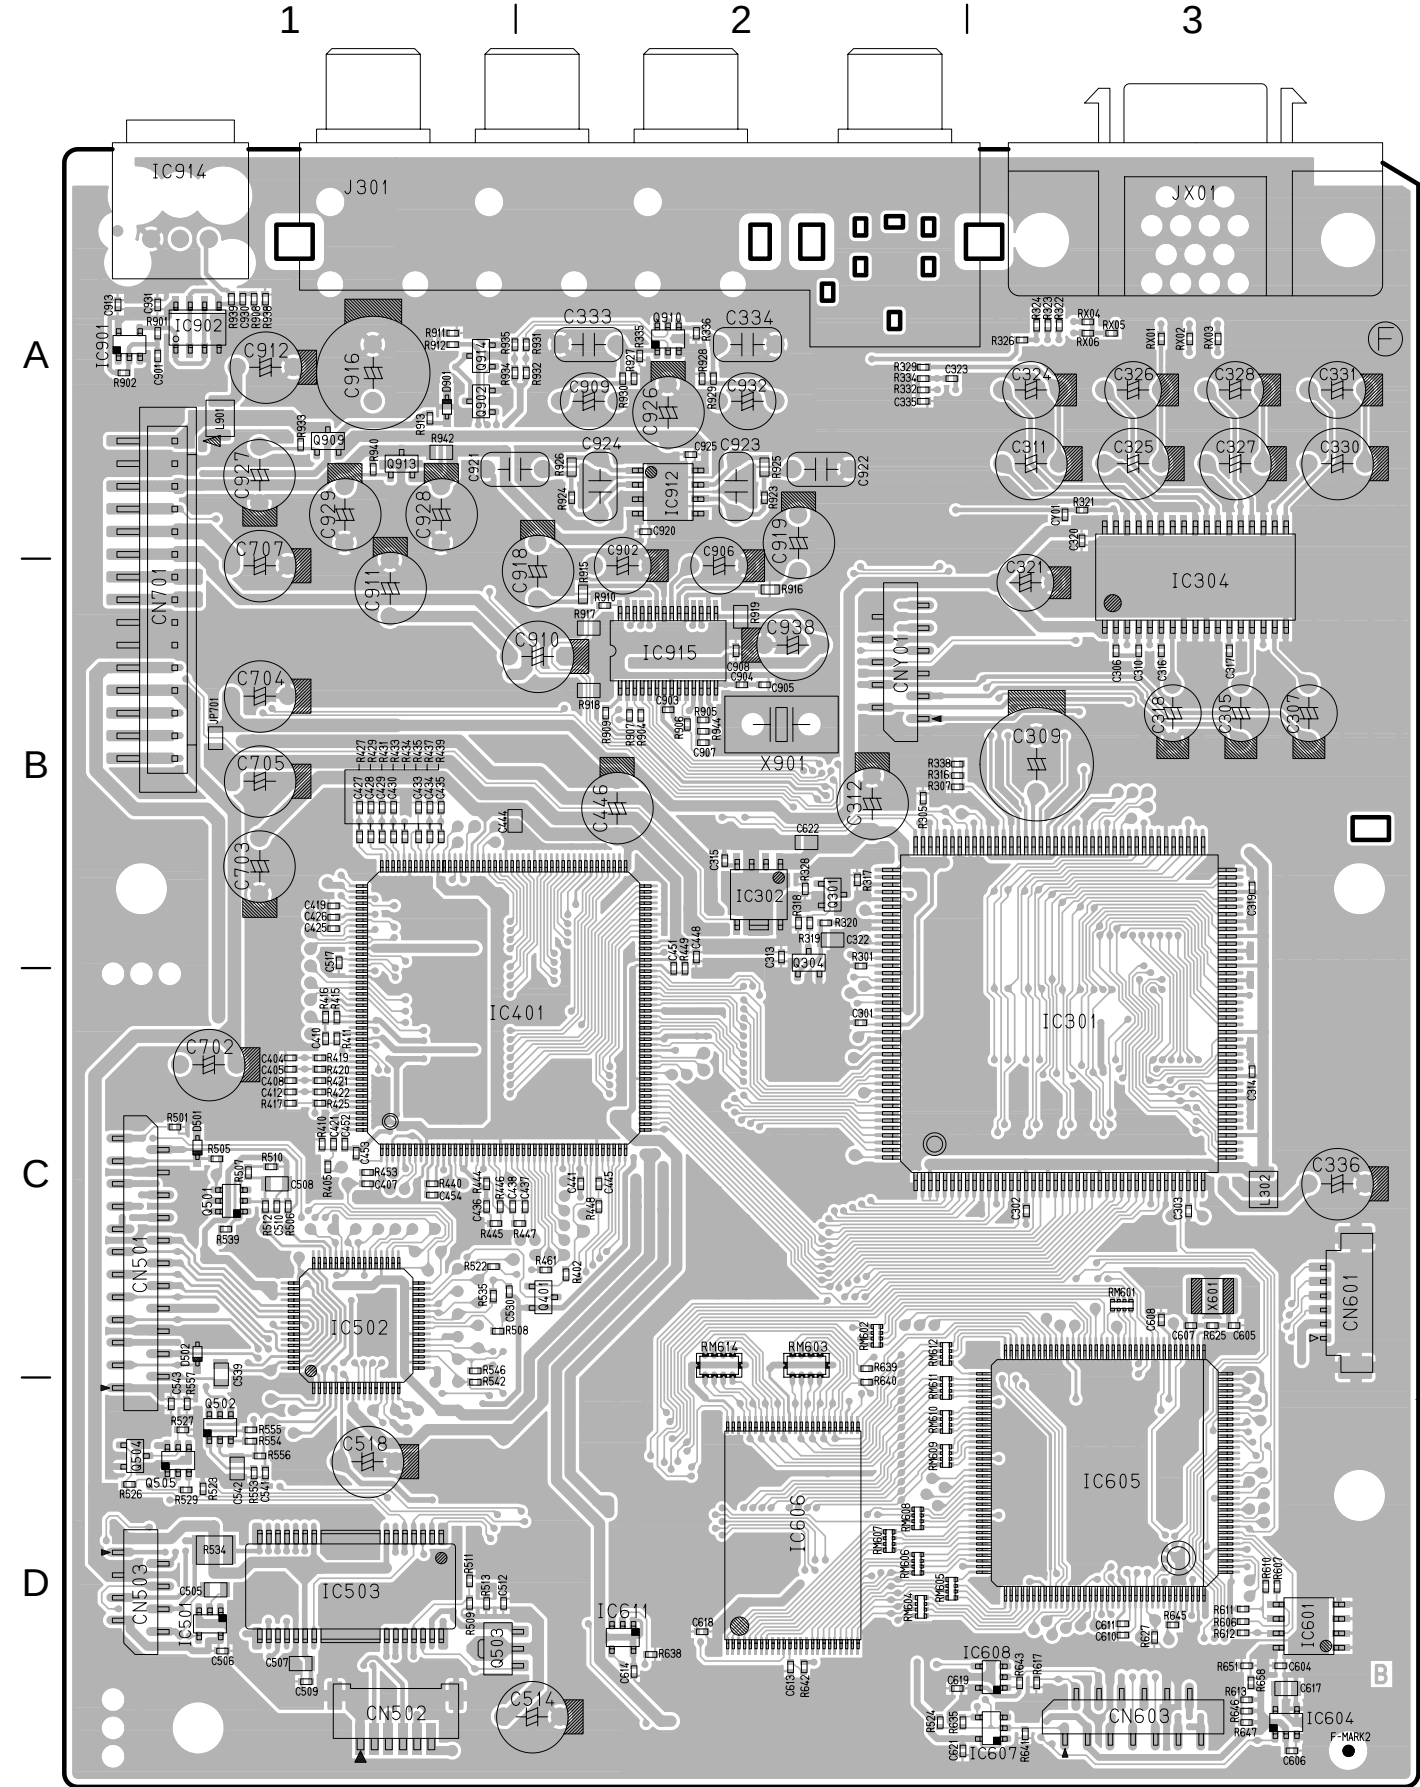


Fig. 3-6-4 EU01 Main PC Board (Top pattern and Top parts location diagram)

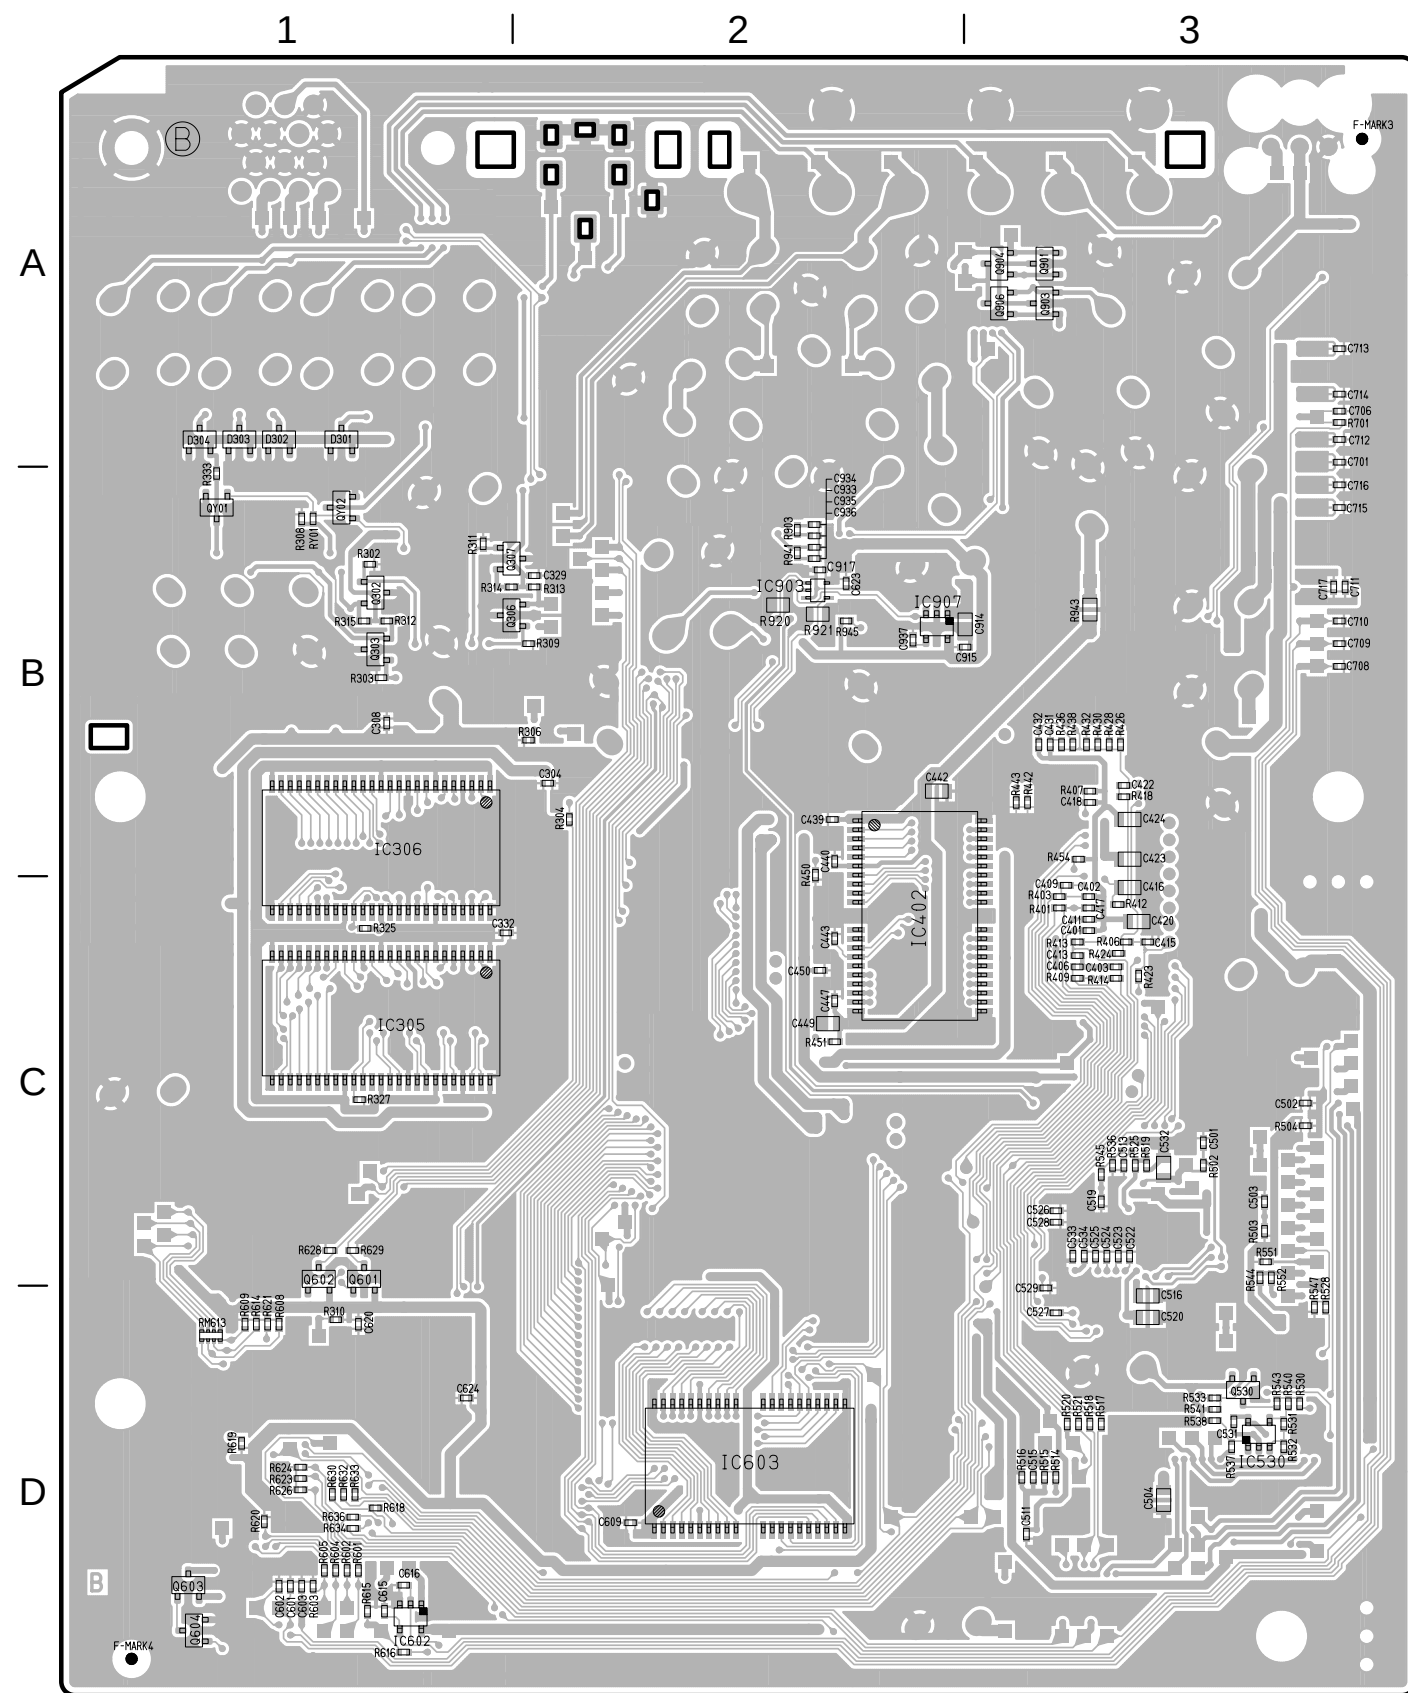


Fig. 3-6-5 EU01 Main PC Board (Bottom pattern and bottom parts location diagram)

Main PC Board (Top Side)

Part No.	Location	Part No.	Location	Part No.	Location	Part No.	Location
C301	C2	C611	D3	Q401	C2	R554	D1
C302	C3	C613	D2	Q501	C1	R555	D1
C303	C3	C614	D2	Q502	D1	R556	D1
C305	B3	C617	D3	Q503	D1	R557	D1
C306	B3	C618	D2	Q504	D1	R606	D3
C307	B3	C619	D2	Q505	D1	R607	D3
C309	B3	C621	D2	Q902	A1	R610	D3
C310	B3	C622	B2	Q909	A1	R611	D3
C311	A3	C702	C1	Q910	A2	R612	D3
C312	B2	C703	B1	Q913	A1	R613	D3
C313	B2	C704	B1	Q914	A1	R617	D3
C314	C3	C705	B1	R301	B2	R625	C3
C315	B2	C707	B1	R305	B2	R627	D3
C316	B3	C901	A1	R307	B2	R635	D2
C317	B3	C902	B2	R316	B2	R638	D2
C318	B3	C903	B2	R317	B2	R639	C2
C319	B3	C904	B2	R318	B2	R640	D2
C320	A3	C905	B2	R319	B2	R641	D3
C321	B3	C906	B2	R320	B2	R642	D2
C322	B2	C907	B2	R321	A3	R643	D3
C323	A2	C908	B2	R322	A3	R645	D3
C324	A3	C909	A2	R323	A3	R646	D3
C325	A3	C910	B2	R324	A3	R647	D3
C326	A3	C911	B1	R326	A3	R651	D3
C327	A3	C912	A1	R328	B2	R658	D3
C328	A3	C913	A1	R329	A2	R901	A1
C330	A3	C916	A1	R332	A2	R902	A1
C331	A3	C918	B2	R334	A2	R904	B2
C333	A2	C919	A2	R335	A2	R905	B2
C334	A2	C920	A2	R336	A2	R906	B2
C335	A2	C921	A1	R338	B2	R907	B2
C336	C3	C922	A2	R402	C2	R908	A1
C404	C1	C923	A2	R405	C1	R909	B2
C405	C1	C924	A2	R410	C1	R910	B2
C407	C1	C925	A2	R411	C1	R911	A1
C408	C1	C926	A2	R415	C1	R912	A1
C410	C1	C927	A1	R416	C1	R913	A1
C412	C1	C928	A1	R417	C1	R915	B2
C419	B1	C929	A1	R419	C1	R916	B2
C421	C1	C930	A1	R420	C1	R917	B2
C425	B1	C931	A1	R421	C1	R918	B2
C426	B1	C932	A2	R422	C1	R919	B2
C427	B1	C938	B2	R425	C1	R923	A2
C428	B1	CN501	C1	R427	B1	R924	A2
C429	B1	CN502	D1	R429	B1	R925	A2
C430	B1	CN503	D1	R431	B1	R926	A2
C433	B1	CN601	C3	R433	B1	R927	A2
C434	B1	CN603	D3	R434	B1	R928	A2
C435	B1	CN701	B1	R435	B1	R929	A2
C436	C1	CNY01	B2	R437	B1	R930	A2
C437	C2	CY01	A3	R439	B1	R931	A2
C438	C1	D501	C1	R440	C1	R932	A2
C441	C2	D502	C1	R444	C1	R933	A1
C444	B1	D901	A1	R445	C1	R934	A1
C445	C2	F-MARK1	A1	R446	C1	R935	A1
C446	B2	F-MARK2	D3	R447	C2	R938	A1
C448	B2	IC301	C3	R448	C2	R939	A1
C451	B2	IC302	B2	R449	B2	R940	A1
C452	C1	IC304	B3	R453	C1	R942	A1
C453	C1	IC401	C1	R461	C2	R944	B2
C454	C1	IC501	D1	R501	C1	RM601	C3
C505	D1	IC502	C1	R505	C1	RM602	C2
C506	D1	IC503	D1	R506	C1	RM603	C2
C507	D1	IC601	D3	R507	C1	RM604	D2
C508	C1	IC604	D3	R508	C1	RM605	D2
C509	D1	IC605	D3	R509	D1	RM606	D2
C510	C1	IC606	D2	R510	C1	RM607	D2
C512	D1	IC607	D3	R511	D1	RM608	D2
C514	D2	IC608	D3	R512	C1	RM609	D2
C517	B1	IC611	D2	R513	D1	RM610	D2
C518	D1	IC901	A1	R522	C1	RM611	D2
C530	C1	IC902	A1	R523	D1	RM612	C2
C539	C1	IC912	A2	R524	D2	RM614	C2
C541	D1	IC914	A1	R526	D1	RX01	A3
C542	D1	IC915	B2	R527	D1	RX02	A3
C543	D1	J301	A1	R529	D1	RX03	A3
C604	D3	JP701	B1	R534	D1	RX04	A3
C605	C3	JX01	A3	R535	C1	RX05	A3
C606	D3	L302	C3	R539	C1	RX06	A3
C607	C3	L901	A1	R542	D1	X601	C3
C608	C3	Q301	B2	R546	C1	X901	B2
C610	D3	Q304	B2	R553	D1		

Main PC Board (Bottom Side)

Part No.	Location	Part No.	Location	Part No.	Location
C304	B2	C716	B3	R436	B3
C308	B1	C717	B3	R438	B3
C329	B2	C914	B3	R442	B3
C332	C1	C915	B3	R443	B3
C401	C3	C917	B2	R450	B2
C402	C3	C933	B2	R451	C2
C403	C3	C934	B2	R454	B3
C406	C3	C935	B2	R502	C3
C409	C3	C936	B2	R503	C3
C411	C3	C937	B2	R504	C3
C413	C3	D301	A1	R514	D3
C415	C3	D302	A1	R515	D3
C416	C3	D303	A1	R516	D3
C417	C3	D304	A1	R517	D3
C418	B3	F-MARK3	A3	R518	D3
C420	C3	F-MARK4	D1	R519	C3
C422	B3	IC305	C1	R520	D3
C423	B3	IC306	B1	R521	D3
C424	B3	IC402	C2	R525	C3
C431	B3	IC530	D3	R528	D3
C432	B3	IC602	D1	R530	D3
C439	B2	IC603	D2	R531	D3
C440	B2	IC903	B2	R532	D3
C442	B2	IC907	B2	R533	D3
C443	C2	Q302	B1	R536	C3
C447	C2	Q303	B1	R537	D3
C449	C2	Q306	B1	R538	D3
C450	C2	Q307	B1	R540	D3
C501	C3	Q530	D3	R541	D3
C502	C3	Q601	C1	R543	D3
C503	C3	Q602	C1	R544	C3
C504	D3	Q603	D1	R545	C3
C511	D3	Q604	D1	R547	D3
C513	C3	Q901	A3	R551	C3
C515	D3	Q903	A3	R552	C3
C516	D3	Q904	A3	R601	D1
C519	C3	Q906	A3	R602	D1
C520	D3	QY01	B1	R603	D1
C522	C3	QY02	B1	R604	D1
C523	C3	R302	B1	R605	D1
C524	C3	R303	B1	R608	D1
C525	C3	R304	B2	R609	D1
C526	C3	R306	B2	R614	D1
C527	D3	R308	B1	R615	D1
C528	C3	R309	B2	R616	D1
C529	D3	R310	D1	R618	D1
C531	D3	R311	B1	R619	D1
C532	C3	R312	B1	R620	D1
C533	C3	R313	B2	R621	D1
C534	C3	R314	B1	R623	D1
C601	D1	R315	B1	R624	D1
C602	D1	R325	C1	R626	D1
C603	D1	R327	C1	R628	C1
C609	D2	R333	B1	R629	C1
C615	D1	R401	C3	R630	D1
C616	D1	R403	C3	R632	D1
C620	D1	R406	C3	R633	D1
C623	B2	R407	B3	R634	D1
C624	D1	R409	C3	R636	D1
C701	A3	R412	C3	R701	A3
C706	A3	R413	C3	R903	B2
C708	B3	R414	C3	R920	B2
C709	B3	R418	B3	R921	B2
C710	B3	R423	C3	R941	B2
C711	B3	R424	C3	R943	B3
C712	A3	R426	B3	R945	B2
C713	A3	R428	B3	RM613	D1
C714	A3	R430	B3	RY01	B1
C715	B3	R432	B3		

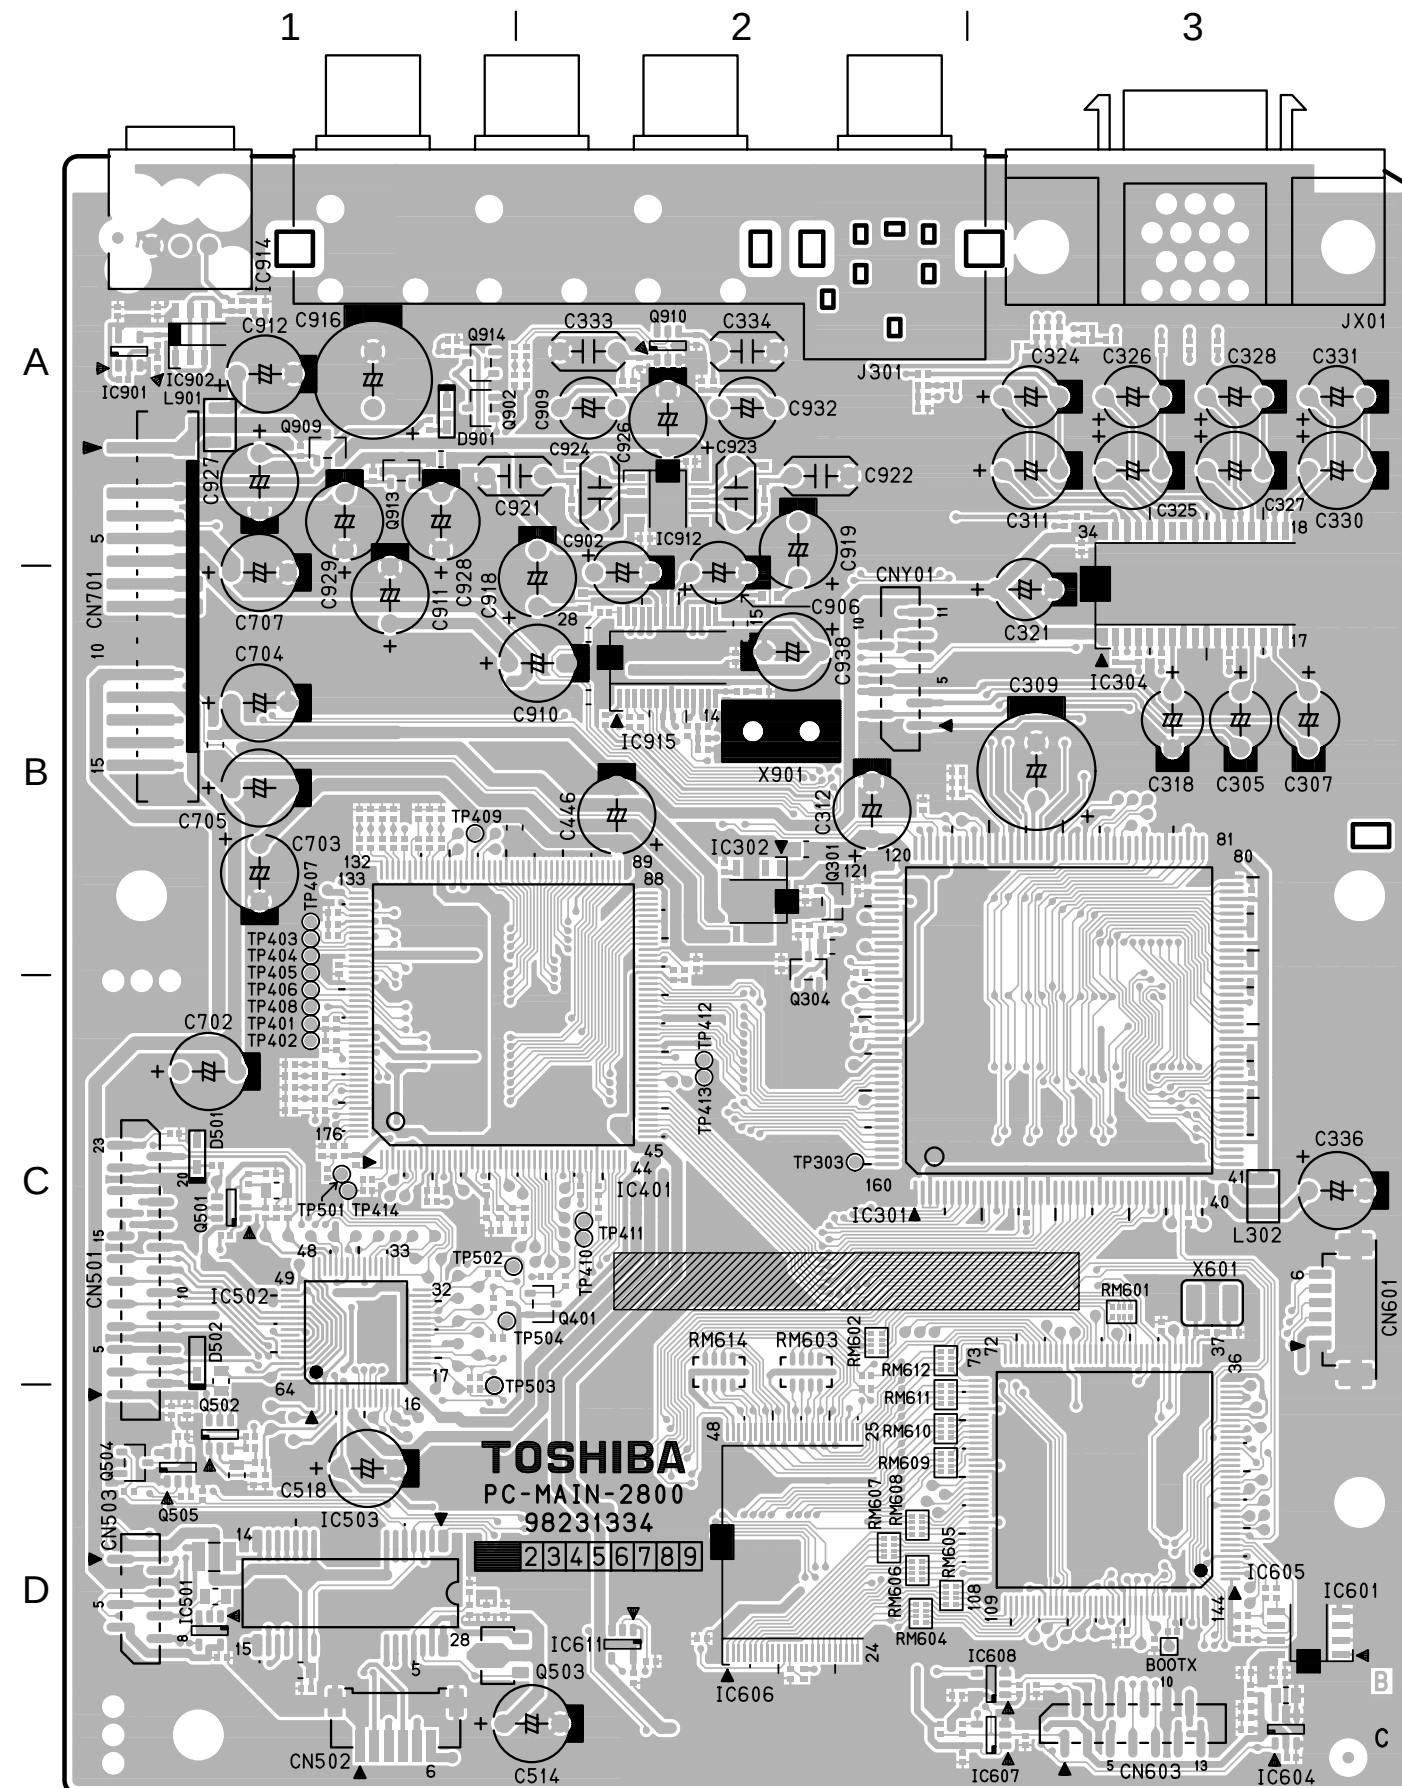


Fig. 3-6-6 EU01 Main PC Board (Top pattern, character/symbol)

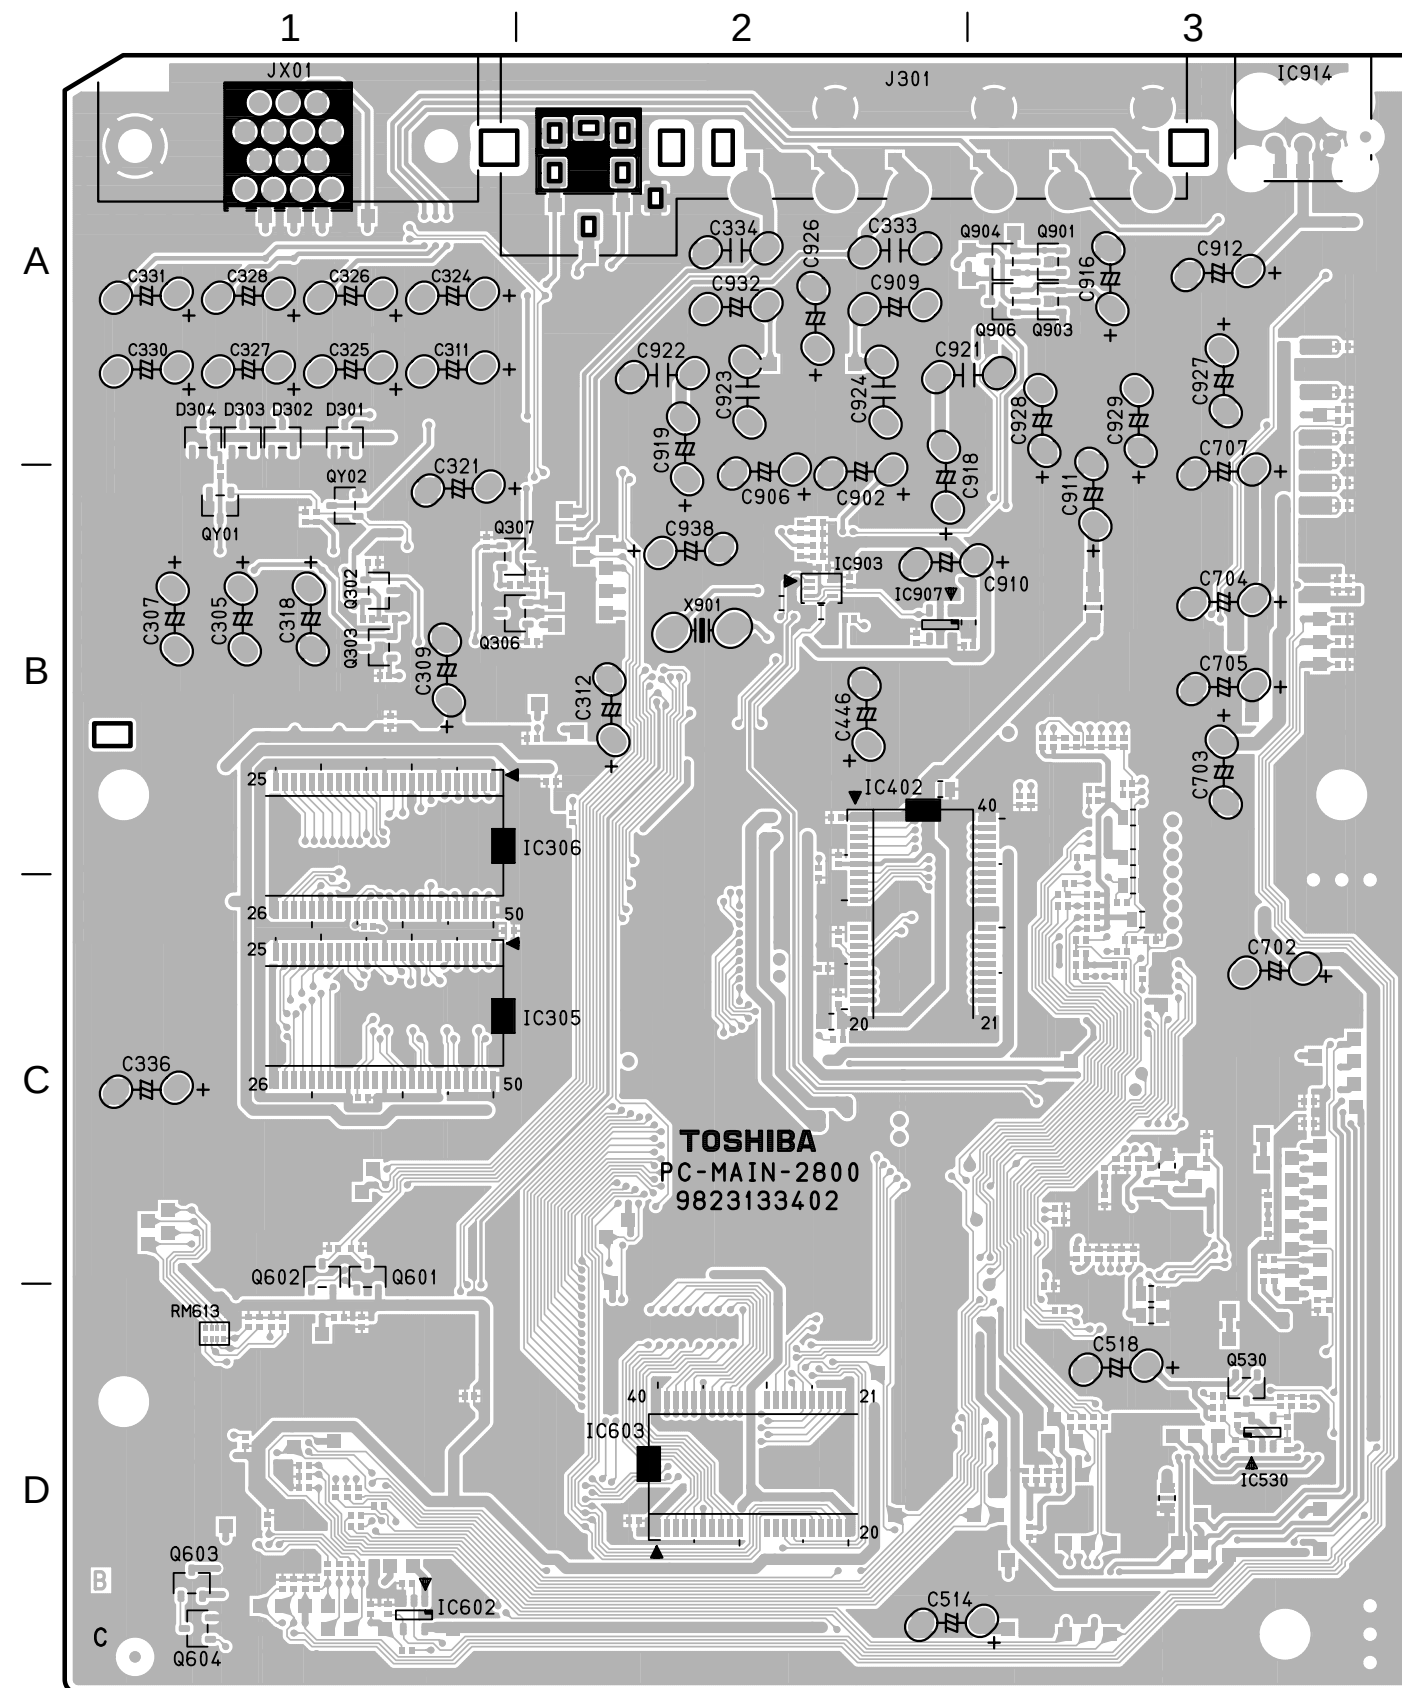


Fig. 3-6-7 EU01 Main PC Board (Bottom pattern, character/symbol)

1

2

3

4

5

6

7

8

9

10

6-4. Front Display PC Board

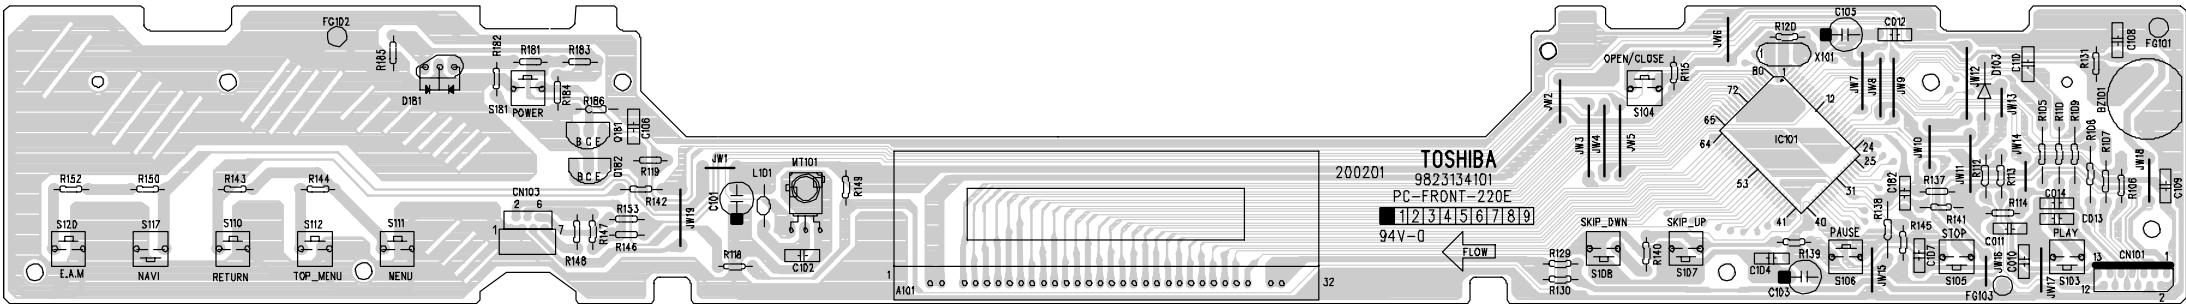


Fig. 3-6-8 EU03 Front Display PC Board (Top Side)

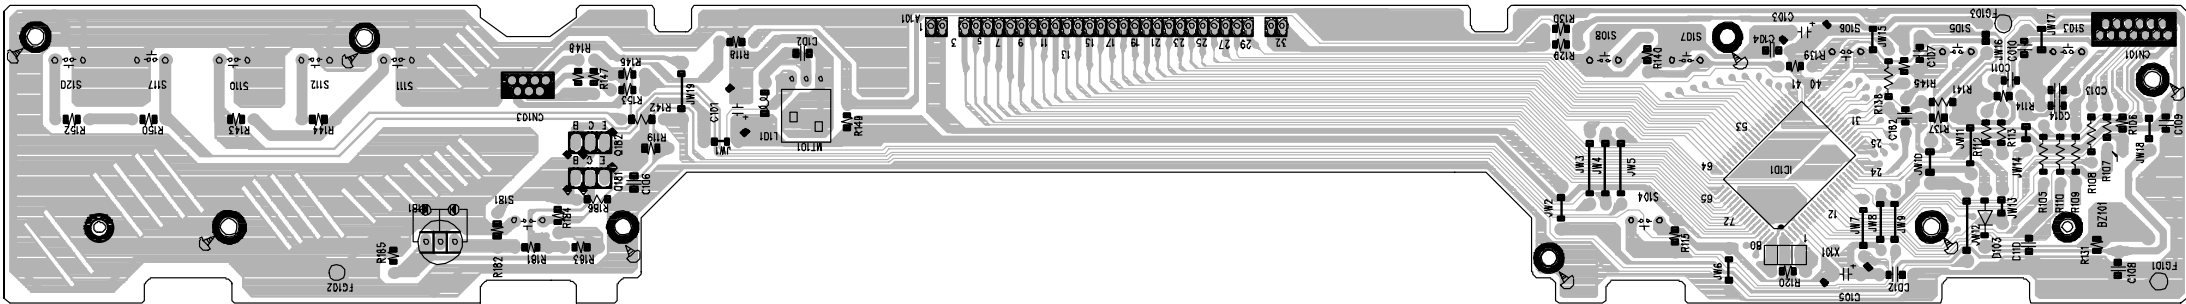


Fig. 3-6-9 EU03 Front Display PC Board (Bottom Side)

The parts location list shows ex.
A1/B1= top side/bottom side.

Part No.	Location	Part No.	Location
A101	B4/D4	R106	B8/E8
BZ101	B8/E8	R107	B8/E8
C010	B8/E8	R108	B8/E8
C011	B8/E8	R109	B8/E8
C012	A8/E8	R110	B8/E8
C013	B8/E8	R112	B8/E8
C014	B8/E8	R113	B8/E8
C101	B4/E4	R114	B8/E8
C102	B4/E4	R115	B7/E7
C103	B7/D7	R118	B4/E4
C104	B7/E7	R119	B3/E3
C105	A7/E7	R120	A7/E7
C106	B3/E3	R129	B6/E6
C107	B8/E8	R130	B6/D6
C108	A8/E8	R131	B8/E8
C109	B9/E9	R137	B8/E8
C110	B8/E8	R138	B8/E8
C182	B8/E8	R139	B7/E7
CN101	B8/E8	R140	B7/E7
CN103	B3/E3	R141	B8/E8
D103	B8/E8	R142	B3/E3
D181	B2/E2	R143	B2/E2
FG101	A9/E9	R144	B2/E2
FG102	A2/E2	R145	B8/E8
FG103	B8/D8	R146	B3/E3
IC101	B7/E7	R147	B3/E3
JW1	B4/E4	R148	B3/E3
JW2	B6/E6	R149	B4/E4
JW3	B7/E7	R150	B2/E2
JW4	B7/E7	R152	B1/E1
JW5	B7/E7	R153	B3/E3
JW6	A7/E7	R181	B3/E3
JW7	B7/E7	R182	A3/E3
JW8	B8/E8	R183	B3/E3
JW9	B8/E8	R184	B3/E3
JW10	B8/E8	R185	B2/E2
JW11	B8/E8	R186	B3/E3
JW12	B8/E8	S103	B8/D8
JW13	B8/E8	S104	B7/E7
JW14	B8/E8	S105	B8/D8
JW15	B8/E8	S106	B7/D7
JW16	B8/E8	S107	B7/E7
JW17	B8/D8	S108	B7/E7
JW18	B8/E8	S110	B2/E2
JW19	B3/E3	S111	B2/E2
L101	B4/E4	S112	B2/E2
MT101	B4/E4	S117	B2/E2
Q181	B3/E3	S120	B1/E1
Q182	B3/E3	S181	B3/E3
R105	B8/E8	X101	B7/E7

TOSHIBA CORPORATION

1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN