


# **IBBK**

## DVP155SI(RU)

### service manual

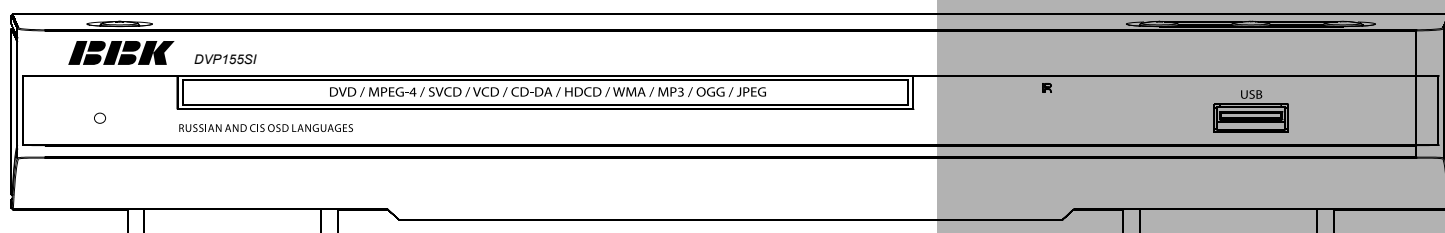

Ver SI11.13

Ver SI11.13.A

# Catalog

|                                                                 |   |
|-----------------------------------------------------------------|---|
| Chapter One About Maintenance .....                             | 1 |
| 1.1 Safety precautions .....                                    | 1 |
| 1.1.1 Power supply .....                                        | 1 |
| 1.1.2 Precautions for antistatic .....                          | 1 |
| 1.1.3 Precautions for laser head .....                          | 1 |
| 1.1.4 A out placement position .....                            | 2 |
| 1.2 Maintenance method .....                                    | 2 |
| 1.2.1 Visualized method .....                                   | 2 |
| 1.2.2 Electric resistance method .....                          | 2 |
| 1.2.3 Voltage method .....                                      | 2 |
| 1.2.4 Current method .....                                      | 2 |
| 1.2.5 Cutting method .....                                      | 2 |
| 1.2.6 Element substitution method .....                         | 3 |
| 1.2.7 Comparison method .....                                   | 3 |
| 1.3 Required device for maintenance .....                       | 3 |
| Chapter Two Functions and Operation Instructions .....          | 4 |
| 2.1 Features .....                                              | 4 |
| 2.2 Controls and functions .....                                | 5 |
| 2.2.1 Front and side panels control .....                       | 5 |
| 2.2.2 Rear Panel general view .....                             | 5 |
| 2.2.3 LED display general view (NO DISPLAY FOR DVP155 SI) ..... | 6 |
| 2.2.4 Remote Control general view .....                         | 6 |
| 2.3 Set list .....                                              | 7 |
| 2.4 FUNCTION SETTINGS .....                                     | 7 |
| 2.4.1 Function selection and change .....                       | 7 |
| 2.4.2 Language settings .....                                   | 7 |
| 2.4.3 Image settings menu .....                                 | 8 |
| 2.4.4 Sound settings menu .....                                 | 8 |
| 2.4.5 Playback settings .....                                   | 9 |

|                                                      |    |
|------------------------------------------------------|----|
| 2.4.6 Karaoke settings menu .....                    | 10 |
| 2.4.7 Preference settings .....                      | 10 |
| 2.4.8 Parental Control .....                         | 10 |
| 2.4.9 Initial setup menu .....                       | 10 |
| 2.4.10 Reset to defaults .....                       | 10 |
| 2.4.11 Exit setting menu .....                       | 11 |
| 2.4.12 Channel delay set-up .....                    | 11 |
| 2.5 MISCELLANEOUS .....                              | 13 |
| 2.5.1 Useful notes .....                             | 13 |
| 2.5.2 Trouble shooting .....                         | 13 |
| 2.5.3 Specification .....                            | 14 |
| <br>Chapter Three Block Diagram .....                | 15 |
| 3.1 OVERALL WIRING DIAGRAM FOR PLAYER .....          | 15 |
| 3.2 BLOCK DIAGRAM FOR PLAYER .....                   | 16 |
| <br>Chapter Four Block Diagram of Unit Circuit ..... | 17 |
| 4.1 Servo Circuit .....                              | 17 |
| 4.2 Decode Circuit .....                             | 18 |
| 4.3 Video Circuit .....                              | 18 |
| 4.4 Audio Circuit .....                              | 19 |
| 4.5 Power Circuit .....                              | 19 |
| <br>Chapter Five Troubleshooting Flow Chart .....    | 20 |
| <br>Chapter Six Waveform Diagram .....               | 23 |
| <br>Chapter Seven PCB board .....                    | 27 |
| 7.1 Surface layer of Decode Board .....              | 27 |
| 7.2 Surface layer of AV Board .....                  | 28 |
| 7.3 Bottom layer of AV Board .....                   | 28 |
| 7.4 Surface layer of Power Board .....               | 28 |
| 7.5 Bottom layer of Power Board .....                | 28 |
| 7.6 Surface layer of Main Panel .....                | 29 |
| 7.7 Bottom layer of Main Panel .....                 | 29 |
| 7.8 USB Board .....                                  | 29 |

|                                    |    |
|------------------------------------|----|
| 7.9 Surface layer of OK Boar ..... | 30 |
| 8.0 Bottom layer of OK Board ..... | 30 |

|                                     |    |
|-------------------------------------|----|
| Chapter Eight Circuit Diagram ..... | 31 |
| 8.1 Decode Board .....              | 31 |
| 8.2 Power Board .....               | 35 |
| 8.3 Main Panel .....                | 36 |
| 8.4 USB Board .....                 | 37 |

|                             |    |
|-----------------------------|----|
| Chapter Nine BOM List ..... | 38 |
|-----------------------------|----|

## Caution :

This service manual is only applicable to DVP155SI (RU) SI11.13.L.3

# Chapter One About Maintenance

## 1.1 Safety precautions

### 1.1.1 Power supply

When maintenance personnel are repairing DVD players, he should pay special attention to the power board with 220V AC and 330V DC which will cause hurt and damage to persons!

### 1.1.2 Precautions for antistatic

Movement and friction will both bring static electricity which causes serious damages to integrated IC. Though static charge is little, when a limited quantity of electric charge is added to large-scale integrated IC, as the capacitance is very small in the meantime, now the integrated IC is very much easy to be struck through by static electricity or the performance will decrease. Thus static electricity prevention is of extraordinary importance. The following are several measures to prevent static electricity:

1. Use a piece of electric conduction metal with the length of about 2 metres to insert into the earth, and Fetch the lead wire from the top of the surplus metal and connect to the required static electricity device. The length and depth of the metal embedded under the earth should be determined according to the wettability of the local soil. For humid places, it may be shorter, and longer and deeper for dry places. If possible, it can be distributed and layed in terms of “#” shape.

2. On operating table-board, the antistatic table cushion should be covered and grounded.

3. All devices and equipments should be placed on the antistatic table cushion and grounded.

4. Maintenance personnel should wear antistatic wrist ring which should be grounded.

5. Places around the operating position should also be covered with electric conduction cushion or Painted with antistatic paint.

### 1.1.3 Precautions for laser head

1. Do not stare at laser head directly, for laser emission will occur when laser head is working, which will Hurt your eyes!

2. Do not use wiping water or alcohol to clean laser head, and you may use cotton swab.

#### 1.1.4 About placement position

1. Never place DVD player in positions with high temperature and humidity.
2. Avoid placing near high magnetic fields, such as loudspeaker or magnet.
3. Positions for placement should be stable and secure.

### 1.2 Maintenance method

#### 1.2.1 Visualized method

Directly view whether abnormalities of collision, lack of element, joint welding, shedding welding, rosin joint, copper foil turning up, lead wire disconnection and elements burning up among pins of elements appear. Check power supply of the machine and then use hands to touch the casing of part of elements and check whether they are hot to judge the trouble spot. You should pay more attention when using this method to check in high voltage parts.

#### 1.2.2 Electric resistance method

Set the multimeter in resistance position and test whether the numerical value of resistance of each point in the circuit has difference from the normal value to judge the trouble spot. But in the circuit the tested numerical value of resistance is not accurate, and the tested numerical value of integrated IC's pins can only be used for reference, so the elements should be broken down for test.

#### 1.2.3 Voltage method

Voltage method is relatively convenient, quick and accurate. Set the multimeter in voltage position and test power supply voltage of the player and voltage of a certain point to judge the trouble spot according to the tested voltage variation.

#### 1.2.4 Current method

Set the multimeter in current position and test current of the player of a certain point to judge the trouble spot. But when testing in current method, the multimeter should be series connected in the circuit, which makes this method too trivial and troublesome, so it is less frequently used in reality.

#### 1.2.5 Cutting method

Cutting method should be combined with electric resistance method and voltage method to use. This method is mainly used in phenomena of short circuit and current leakage of the circuit. When cutting the input terminal voltage of a certain level, if voltage of the player rises again, it means that the trouble lies in this level.

### 1.2.6 Element substitution method

When some elements cannot be judged good or bad, substitution method may be adopted directly.

### 1.2.7 Comparison method

A same good PC board is usually used to test the correct voltage and waveform. Compared these data with those tested through fault PC board, the cause of troubles may be found.

Through the above maintenance method, theoretical knowledge and maintenance experience, all difficulties and troubles will be readily solved.

## 1.3 Required device for maintenance

- ◆ Digital oscillograph ( $\geq 100\text{MHz}$ )
- ◆ TV set
- ◆ SMD rework station
- ◆ Multimeter
- ◆ Soldering iron
- ◆ Pointed-nose pincers
- ◆ Cutting nippers
- ◆ Forceps
- ◆ Electric screw driver
- ◆ Terminals connecting cord
- ◆ Headphone
- ◆ Microphone

# Chapter Two

## Functions and Operation Instructions

### 2.1 Features

#### Compatible Disc Types

- #Digital video playback: DVD-video, super VCD, VCD compatibility
- #MPEG-4 standard support: compatibility with DivX3.11, DivX4, DivX5, DivX Pro, XviD compressed video files
- #Digital audio playback: CD(CD-DA)and HDCD compatibility
- #Fully compatible with compressed audio files such as MP3,WMA and OGG Vorbis formats
- #Playback of DVD-Video, VCD, CD+G Karaoke discs
- #Digital graphic albums playback: Kodak picture CD, JPEG compatibility

#### Audio

- #192 kHz/24 bit Audio Digital/Analog converter
- #Coaxial and optical outputs for Dolby Digital/DTS/LPCM digital audio
- #Mixed audio output for amplifier and TV connection
- #Digital multi-channel decoders, providing Dolby Digital/DTS audio stream playing
- #Built-in Dolby Pro LogicII decoder makes available to convert stereo signal into multi-channel
- #MIC input for karaoke function(only for models DV611SI,DV615SI,DV624SI ,DV626SI,DV628SI)
- #Headphones output(only for models DV626SI,DV628SI)

#### Video

- #Progressive Scan Output(Y Pb Pr) producing flicker-free and stable images
- #Composite, component(Y Cb Cr), S-Video and RGB/SCART outputs for various types of Connections

- #Capable of playing NTSC/PAL discs written in NTSC system

- #Multiple dubbings, angles, subtitles support

- #Sharpness,gamma, brightness, contrast, hue, saturation adjustment

#### Others

- #Compatible disc types: CD-R/CD-RW,DVD-R/DVD-RW,DVD+R/DVD+RW

- #USB interface to connect Mp3 player, flash card or digital camera

- #KARAOKE+ system, expanding karaoke function

- #Russia, CIs and Baltic States adaptation interface and filenames, ID3-tags and CD-Text support simplifies device operation

- #"Memory" function enables to save the last position after stop playback

- #"Q-Play" function provides direct playback and allows to skip commercial impossible to rewind

- #"Virtual Keyboard" function provides more convenient DVD playback control

- #"Browser" function provides easy access to playback control

- #Automatic Screensaver function

- #Parental control function to protect children from watching inappropriate discs

- #Super wide range of operating power supplies (~110-250v,50/60 Hz), automatic short circuit protection



Fig.1.Delay of central channel=0  
 $L=C=R$



Fig.2.Small area Delay of central channel= $L=(or)$   
 $L=R>C$


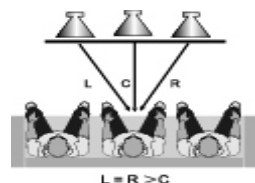


Fig.3.Small area Delay of central channel=0  
 $L=R>C$

### "Night" mode

The Dolby Digital system provides an extremely broad dynamic range of playback sound-from gentle to roaring. It creates the presence effect, especially while seeing motion pictures. However, at night a powerful sound with a broad dynamic range may give pleasure to you ,but disturb and annoy your family and neighbors. If you just decrease the volume, you will immediately notice that you ceased to hear, e, g, dialogues as clear as you do at normal volume, and such sound effects as rustle,

whisper etc. have merely disappeared. To avoid this, you just have to decrease the volume of "loud" sounds by simultaneously increasing the volume of "soft" sounds with the volume of "average" sounds left unchanged, i.e. Just decrease the dynamic range of sound accompaniment. Only Dolby Digital system provides for such a method of sound control. It uses the principle of compressing the acoustic signal's dynamic range while recording; therefore, while playing an inverse transformation(volume expansion) takes place. This is called"night" mode. The regulation limits are restricted, however, to avoid distortions of resultant signal.

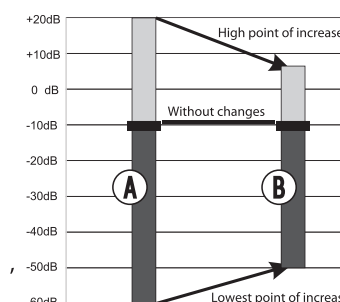

Principle of compressing the acoustic signal's dynamic range.

|                                  | Dolby Digital                                                                                       | Dolby Pro Logic surround                                                                                                                                               |
|----------------------------------|-----------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Rear channel                     | Stereo 20 Hz-20 kHz                                                                                 | Mono channel with limited frequency range(100Hz-7 kHz)                                                                                                                 |
| Low-frequency channel(subwoofer) | Available,20-120 Hz                                                                                 | N/a                                                                                                                                                                    |
| Sound field distribution         | Multivariate<br> | From left to right, from right to left, from front to rear, from rear to front<br> |
| Channels                         | 6 independent channels, each reproducing its own signal at a time                                   | 4 segmented channels. Only one channel is decoded at a time.                                                                                                           |
| Miscellaneous                    | Creates an optimum sound field with illusion of an equal distance from listener to each speaker.    | The most cost-efficient way to ensure high-quality surround effect.                                                                                                    |
|                                  | Allows adjusting the decompression degree of sound information("night" mode).                       | Surround sound may be received from any signal source.                                                                                                                 |

|               |                                                                                                                                                                |                                                                                                |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| Miscellaneous | Possibility of programmable control of the decoder to transfer basses into low-frequency channel in systems equipped with broad-band speakers and a subwoofer. | Compatible with existing and future two-channel(stereo) formats.                               |
|               | Undoubted progress in sound recording technology, especially important for program directors, film directors, sound engineers and actors.                      | Big progress in comparison with conventional stereo, the world's most popular surround format. |

## 2.5 MISCELLANEOUS

### 2.5.1 Useful notes

#To extend the service life of your DVD player make pauses of not less than 30 seconds between switching off and repeatedly switching on the DVD player.

#Disconnect the DVD player from the wall outlet after shutdown.

#Some DVD player's functions may not be applied to some discs.

#Use supply sources of rated voltage, otherwise the DVD player may not function or be damaged.

#In case of the DVD player's occasional stops, please switch the power supply off and then on again.

### 2.5.2 Trouble shooting

Please check probable causes of malfunction before addressing the service center.

| Sign of trouble             | Cause of trouble                                                                                                                                                          | Actions to eliminate the trouble                                                                                                                              |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No sound                    | 1.Poor audio cable connection<br>2.Disc dirty or damaged.<br>3. Sound disabled by the MUTE button.                                                                        | 1.Make proper connection<br>2. Clean the disc<br>3. Press the MUTE button.                                                                                    |
| No image                    | 1.Poor video cable connection.<br>2. Incorrect settings of your TV set.<br>3.The DVD player is in the progressive scan mode while your TV set does not support this mode. | 1. Make proper connection.<br>2. Correct the setting of your TV set.<br>3. Place the DVD players in the interlaced scan mode through the DVD-receiver's menu. |
| Black and white image       | 1. Incorrect TV color system selected.<br>2. Color level on the TV set adjusted incorrectly.                                                                              | 1. Set the appropriate color system via the menu: SET UP>Image>TV scan.<br>2.Readjust the color system of your TV set                                         |
| Discs cannot be read        | 1. Disc not inserted.<br>2.Disc inserted incorrectly.<br>3.Condensate on the DVD player's laser head.                                                                     | 1.Insert the disc.<br>2.Install the disc with the label side facing up.<br>3.Switch the DVD players on without disc for an hour.                              |
| Microphone does not operate | 1.Microphone is unplugged.<br>2.Low level of the microphone's sound volume.                                                                                               | 1.Connect the microphone.<br>2.Adjust the level of the microphone's sound volume.                                                                             |

|                                 |                                                                                                                                                           |                                                                                                                                                                                                          |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remote control does not operate | 1.Remote control is incorrectly directed at the DVD players's screen.<br>2. Distance to the DVD players is in excess of 8 meters.<br>3.Run out batteries. | 1.Use the remote control according to the manual.<br>2.Decrease the distance to the DVD players.<br>3.Replace both batteries.                                                                            |
| Some functions do not work      | 1.Disc is recorded incorrectly.<br>2.Incorrect key sequence.<br>3.Static voltage on the DVD player's housing.                                             | 1.Wait 5-10 seconds and the DVD players will automatically return to normal state.<br>2.Repeat the operation one more time.<br>3.Switch the DVD players off for 1-2 minutes and then switch it on again. |
| Unstable image                  | 1.Incorrect TV set settings.                                                                                                                              | 1.Correct the TV set settings.                                                                                                                                                                           |

### 2.5.3 Specification

|                         |                                                                                                                                   |                                                    |                                                    |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------|----------------------------------------------------|
| Supported formats       | DVD-Video, Super VCD, VCD, MPEG-4, CD-DA, CD+G, HDCD, MP3, WMA, Kodak Picture CD, JPEG                                            |                                                    |                                                    |
| Data medium             | CD-R, CD-RW, DVD-R, DVD+R, DVD-RW, DVD+RW                                                                                         |                                                    |                                                    |
| Inputs                  | Microphone input(two microphone inputs for(DV611SI,DV624SI,DV626SI ,DV628SI models.one microphone inputs for DV214&216SI&DV118SI) |                                                    |                                                    |
| Outputs                 | Audio outputs                                                                                                                     | Analog outputs:                                    | 2.0CH output.                                      |
|                         |                                                                                                                                   | Digital outputs :                                  | Coaxial audio out                                  |
|                         | Video outputs:                                                                                                                    | S-Video output, RGB/SCART output, Composite output |                                                    |
| Video characteristics   | Signal swing of composite video output:                                                                                           |                                                    | 1.0Vp-p(75 $\Omega$ )                              |
|                         | Signal swing of S-Video output:                                                                                                   |                                                    | 1.0Vp-p(75 $\Omega$ )                              |
|                         | Signal swing of component video output:                                                                                           |                                                    | C:0.286Vp-p(75 $\Omega$ )<br>1.0Vp-p(75 $\Omega$ ) |
|                         |                                                                                                                                   |                                                    | Cb/Cr:0.7Vp-p(75 $\Omega$ )                        |
| Audio characteristics   | Frequency:                                                                                                                        |                                                    | 20-20000 Hz( $\pm 1$ db)                           |
|                         | Signal-to-noise ration:                                                                                                           |                                                    | > 100 db                                           |
| Voltage range           | ~110-250V, 50/60 Hz                                                                                                               |                                                    |                                                    |
| Temperature requirement | 5-35°C                                                                                                                            |                                                    |                                                    |
| Moisture requirement    | 15-75%(not condensate)                                                                                                            |                                                    |                                                    |

| Model    | Dimensions(mm) | Weight(kg) | Power consumption(watt) |
|----------|----------------|------------|-------------------------|
| DVP155SI | 260×208×38     | 1.3        | 14                      |
| DV234    | 260×208×38     | 1.3        | 14                      |


#We improve quality of our production permanently, that's why specification can change without notification.

#Some discs, recorded in any supported format on any compatible device, can't playback or can playback incorrect over peculiarity of their record.



### 3.2 BLOCK DIAGRAM FOR PLAYER

Block diagram for player is shown in figure 3.2.1.

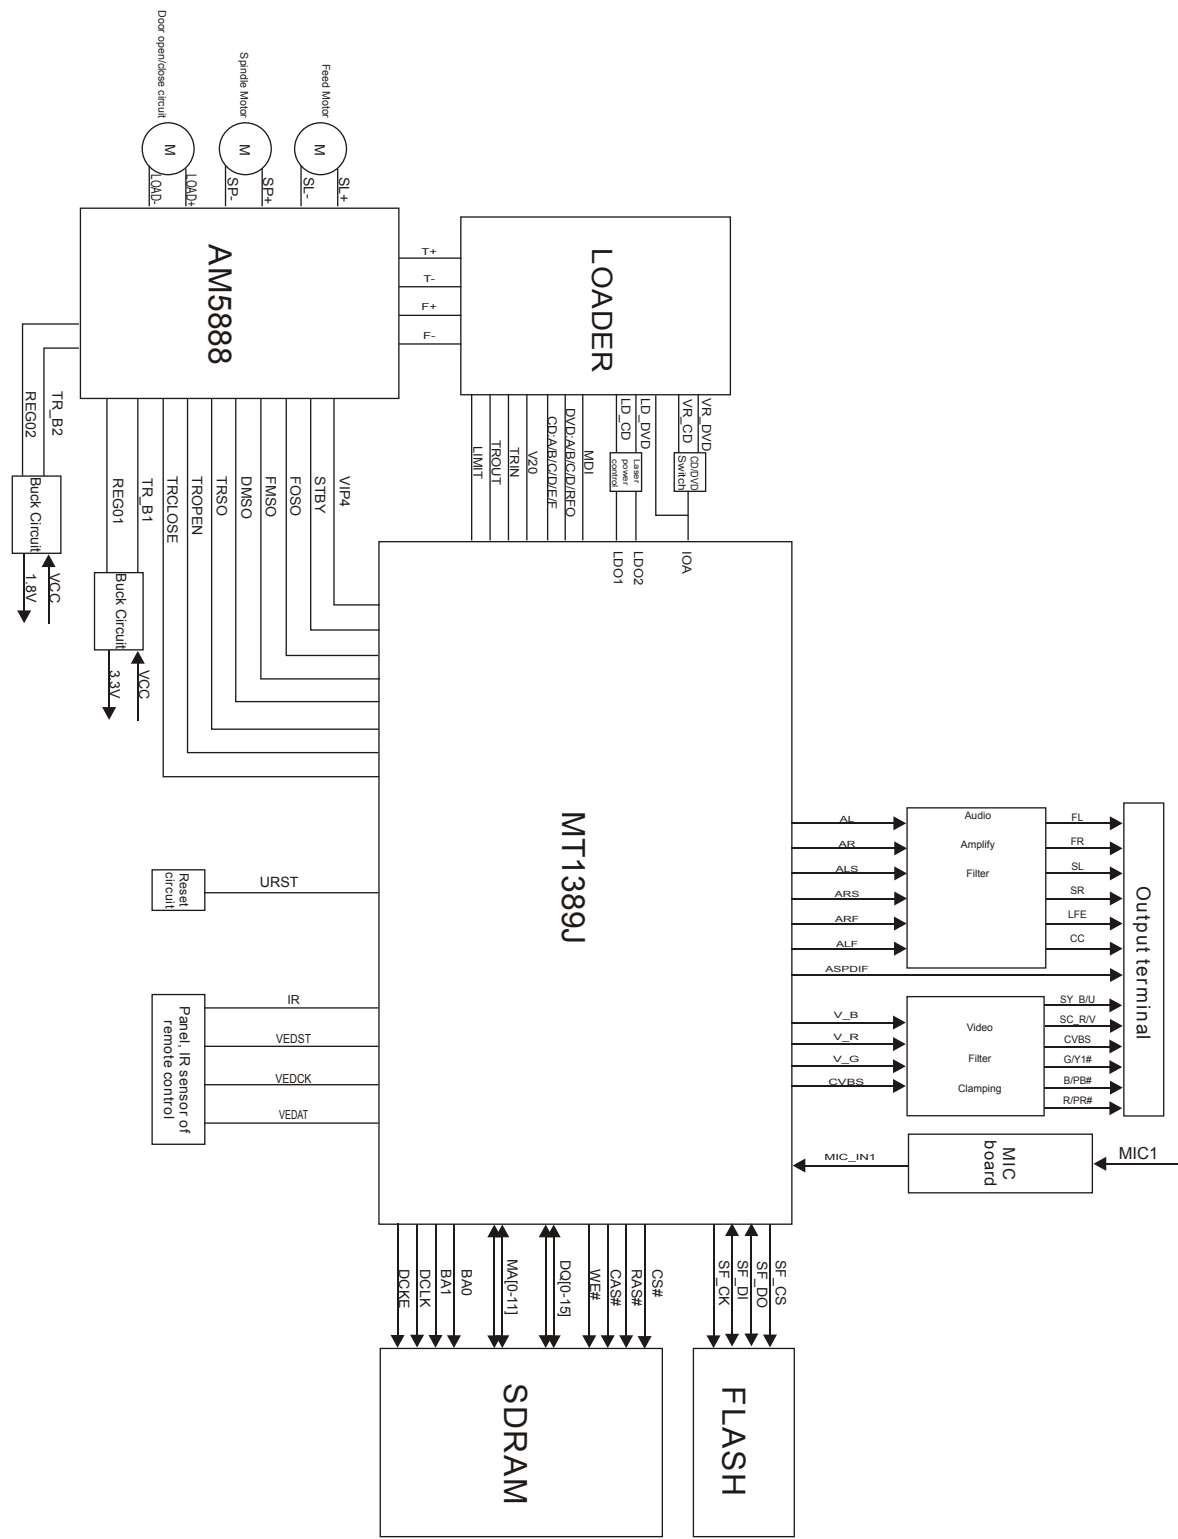

# Chapter Four

## Block Diagram of Unit Circuit

### 4.1 Servo Circuit

Servo system of this machine adopts SANYO loader and MTK decode scheme. And servo circuit is mainly composed of front signal processing, digital servo processing, digital signal processing chip MT1389 and driving chip AM5888. MT1389 is also main part of decode circuit. Block diagram of servo circuit is shown in figure 4.1.1.

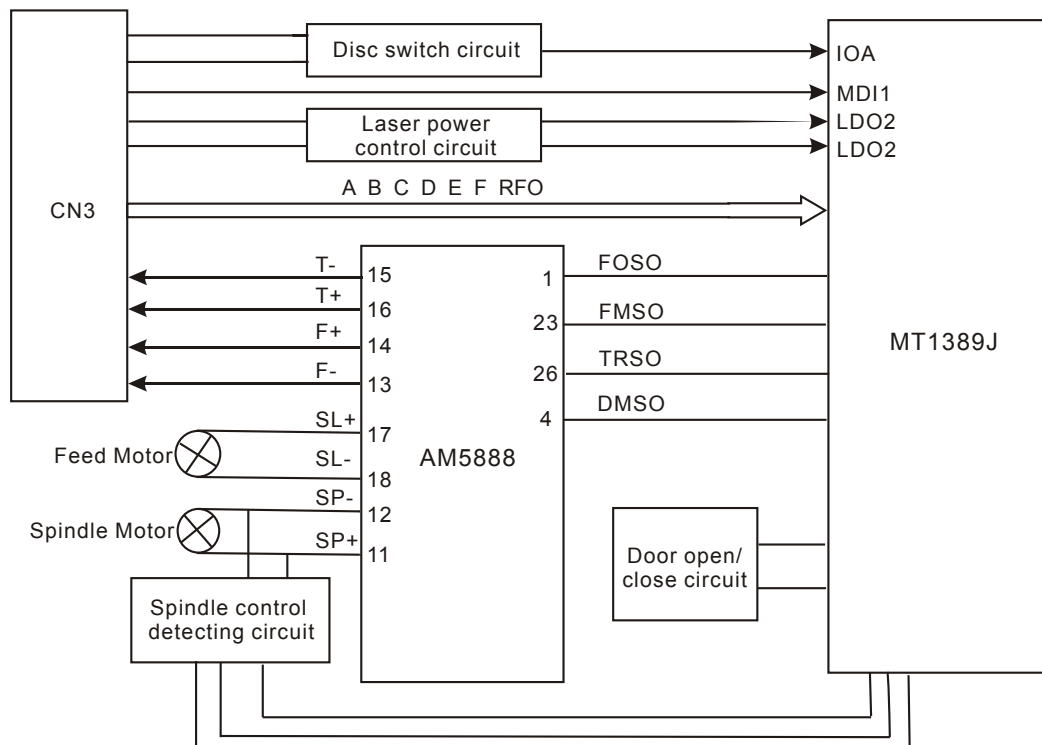


Figure 4.1.1 Block diagram of servo circuit

## 4.2 Decode Circuit

Decode circuit is mainly composed of MT1389, SDRAM and FLASH. Block diagram of circuit is shown in figure 4.2.1.

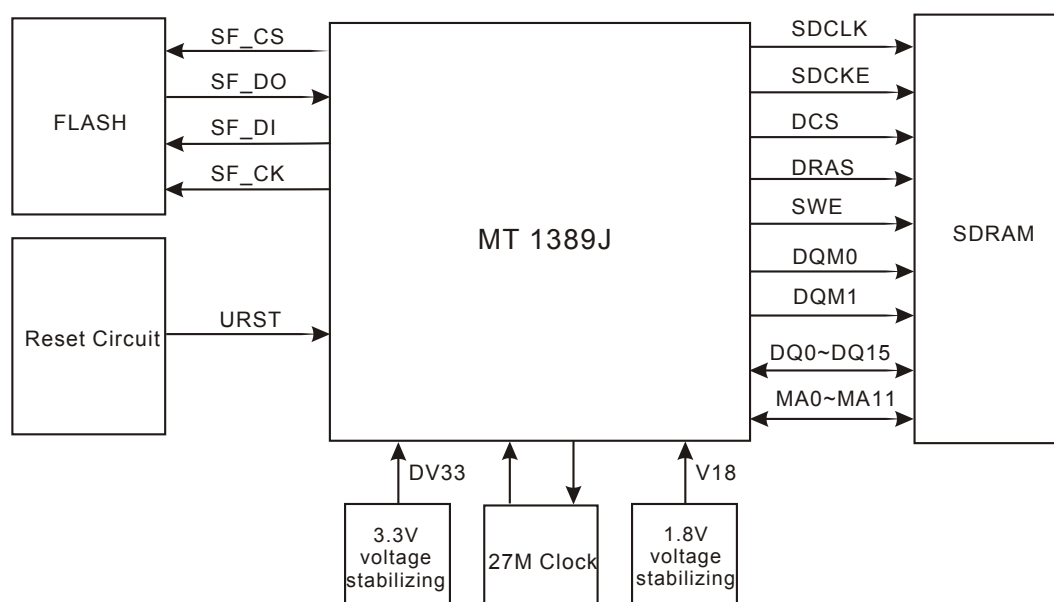


Figure 4.2.1 Block diagram of decode circuit

## 4.3 Video Circuit

MT1389J has video D/A converter circuit and video output has R/B/G, Y/Pb/Pr, Y/Cb/Cr, CVBS and Y/C output modes, in which R/B/G, Y/Pb/Pr, Y/Cb/Cr and Y/C can not output at the same time and need to be switched via software. CVBS is a separate output mode; four channel video signal is outputted to AV board by MT1389 after video filtering and clamping. Block diagram of video signal process is shown in figure 4.3.1.

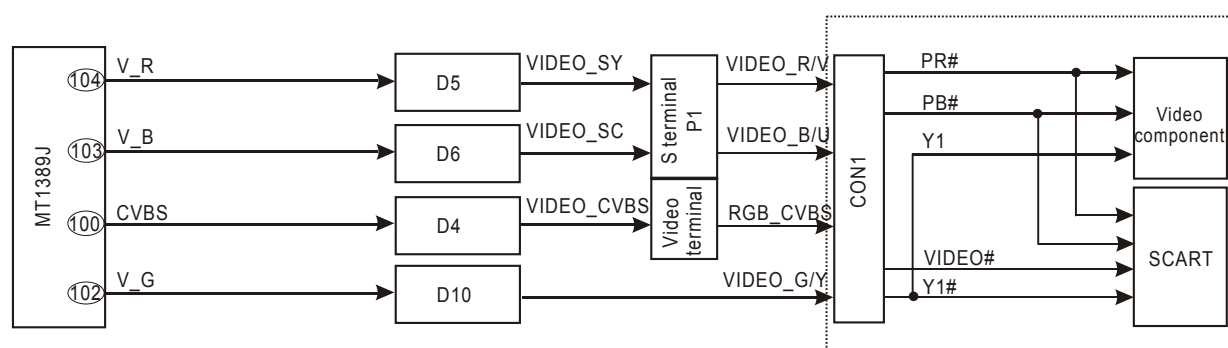


Figure 4.3.1 Block diagram of video signal process

## 4.4 Audio Circuit

Block diagram for audio circuit is shown in figure 4.4.1:

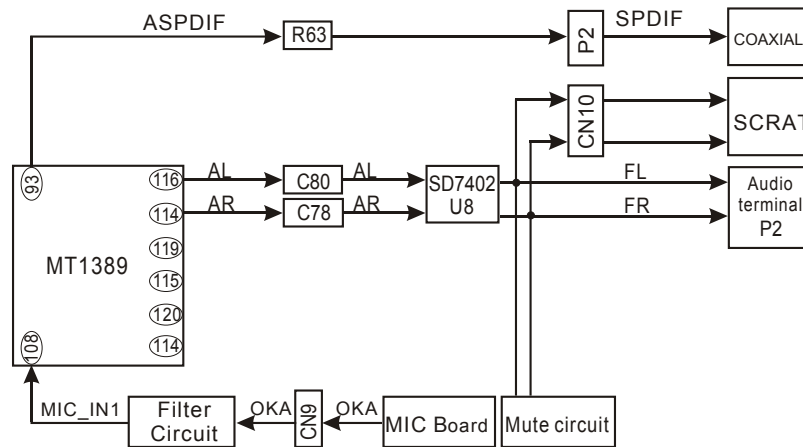


Figure 4.4.1 Block diagram of audio circuit

## 4.5 Power Circuit

1. Block diagram of power circuit is shown in figure 4.5.1.



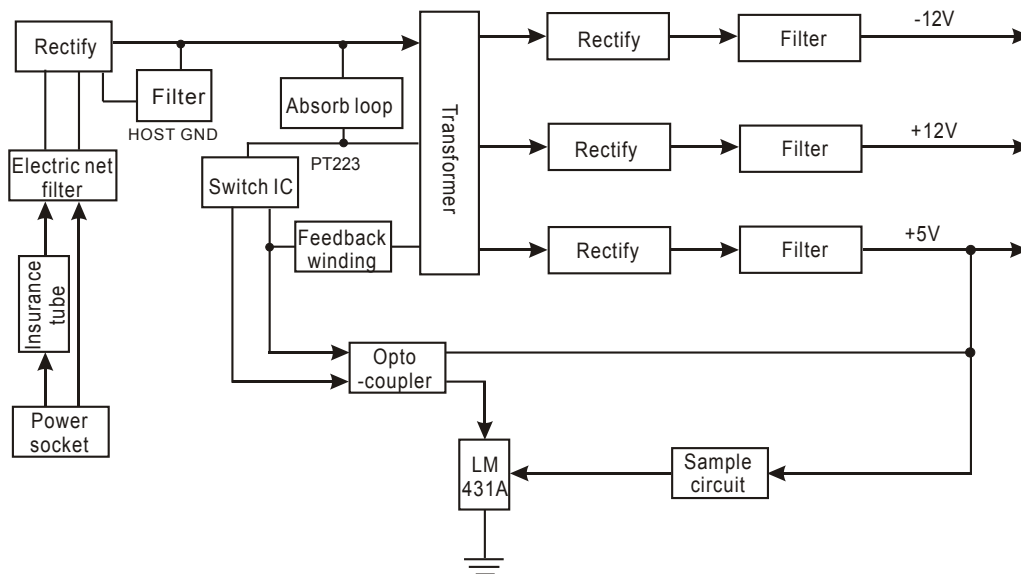


Figure 4.5.1 Block diagram of power circuit

# Chapter Five Troubleshooting Flow Chart



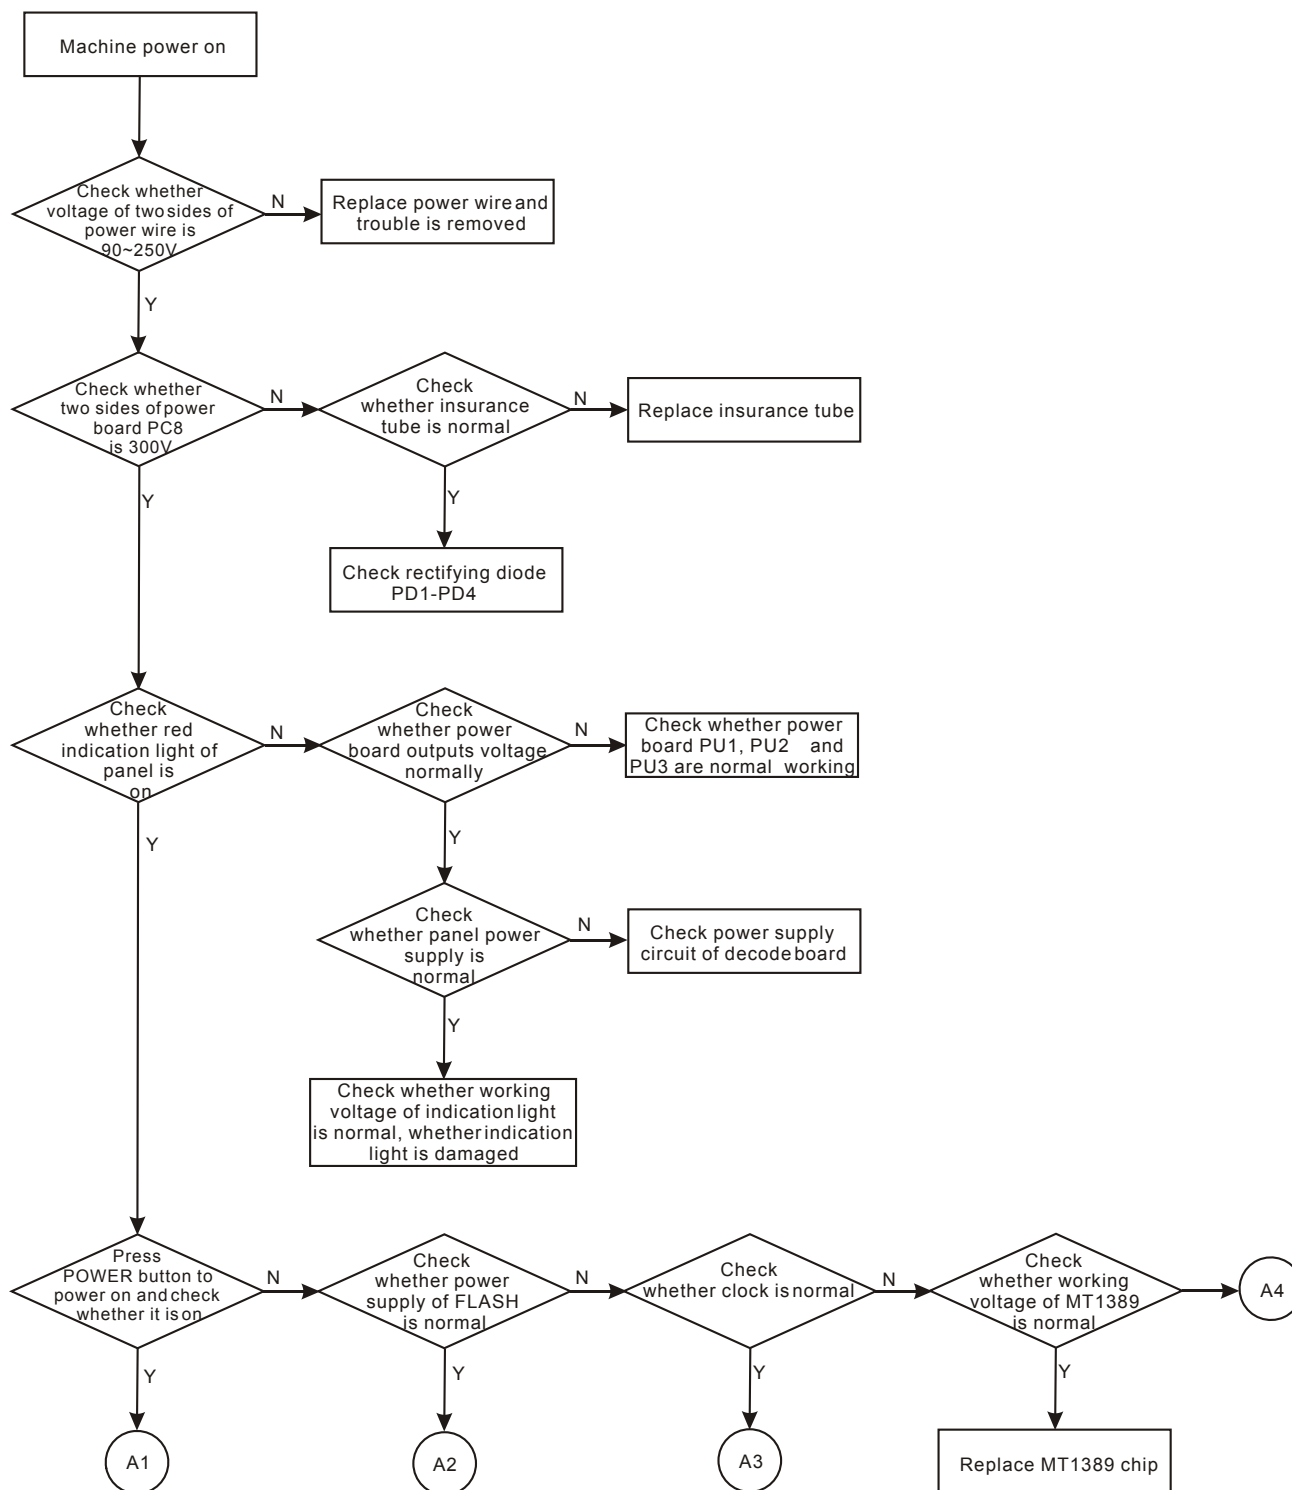


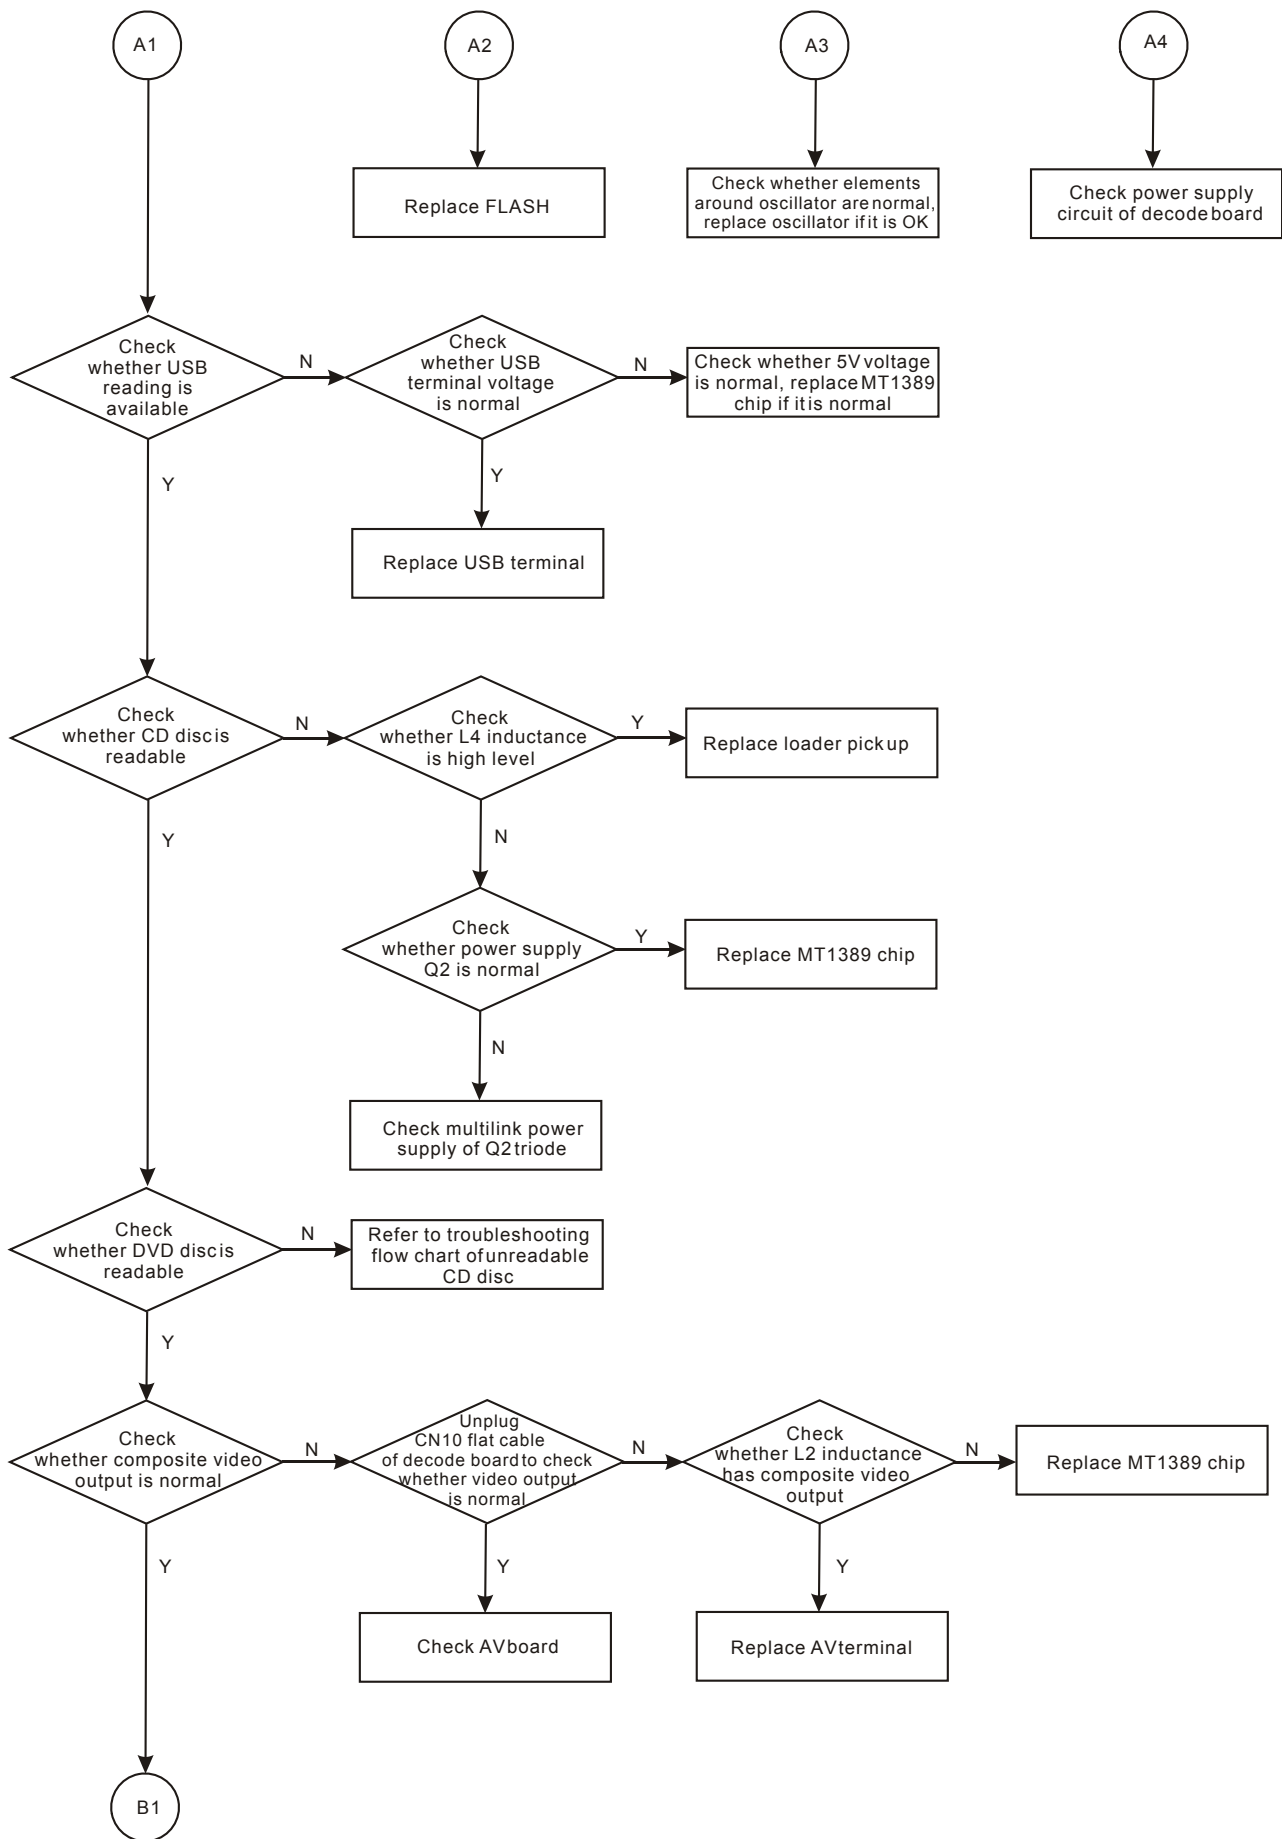


# Chapter Six Waveform Diagram

This section collects signal waveform diagram of audio, video and each unit circuit with the purpose to help servicing personnel to judge where trouble lies in accurately and quickly to improve servicing skills. For the difference of oscillograph's type, model and tuner, a certain difference may exist, so the servicing personnel are expected to pay more attention to check in daily operation.


## 1. Waveform diagram for pulse DC of power board PD5 anode.

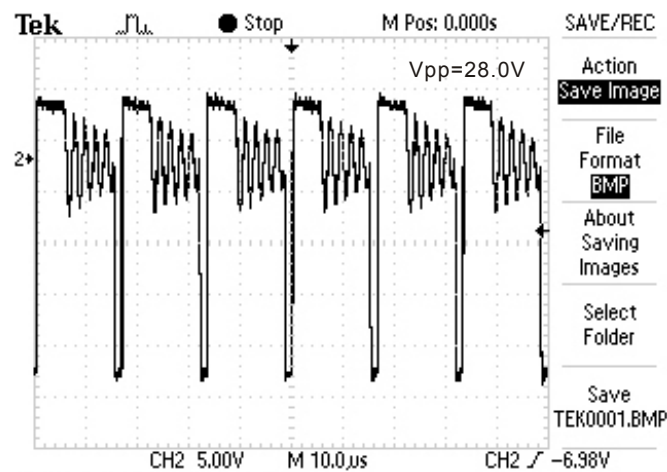


## 2. Waveform diagram for spindle signal DMO(when spindle has motion).

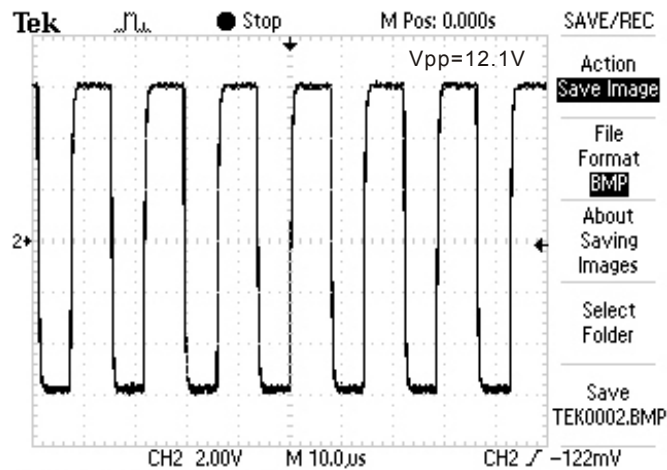


3. Waveform diagram for feed signal FMO(when pick up has feed motion).

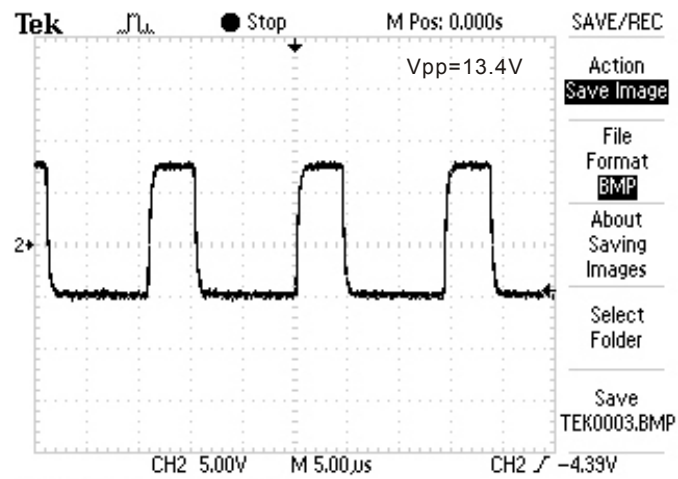


4. Waveform diagram for traction signal TRO(when pick up has traction motion).

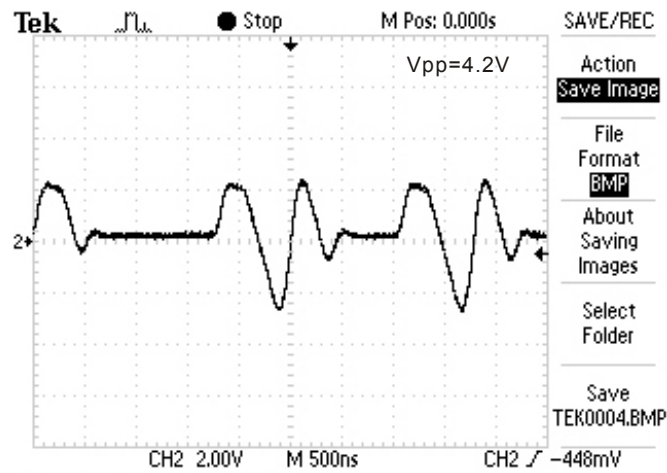


5. Waveform diagram for focus signal FOO(when pick up has focus motion).

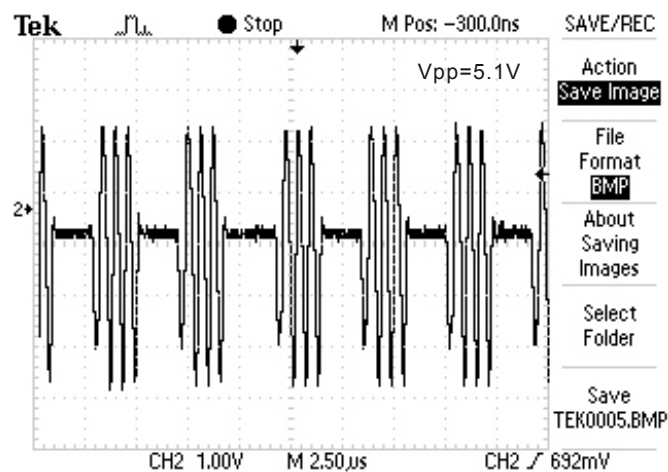


6. Waveform diagram for FLASH chip SF\_DI(pin 5 of U6).

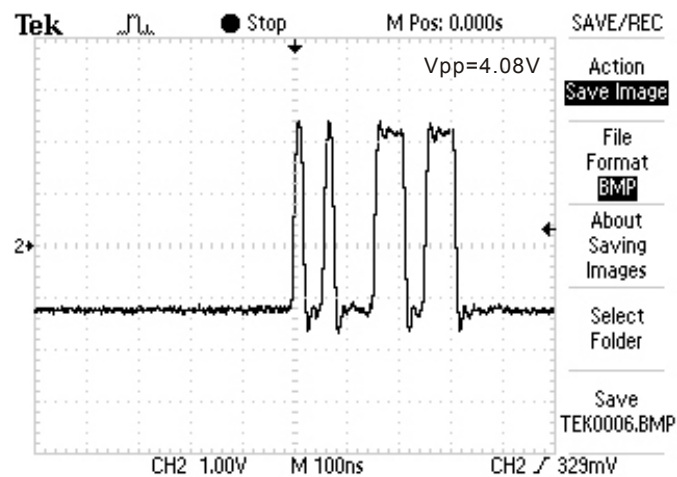


7. Waveform diagram for FLASH chip SF\_CK(pin 6 of U6).

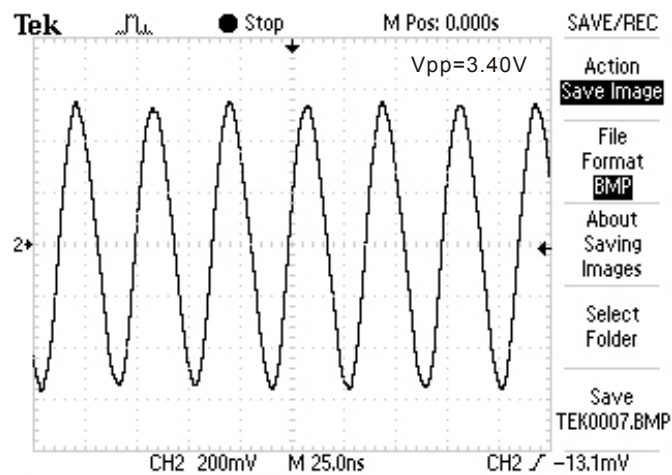


8. Waveform diagram for 27MHz clock (Y1).

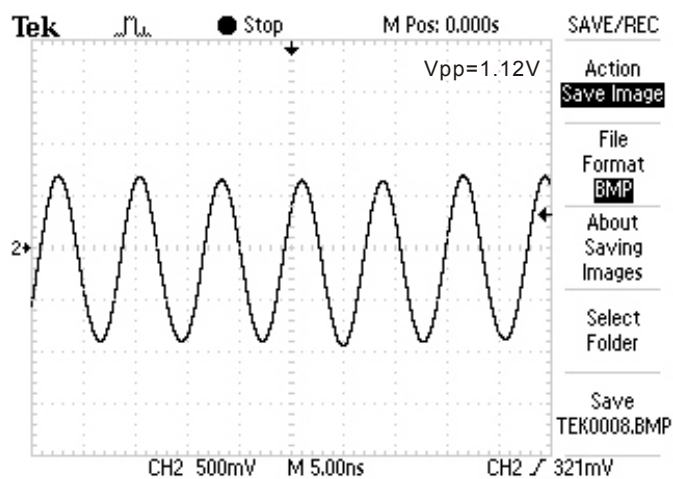


9. Reset signal URST waveform diagram.

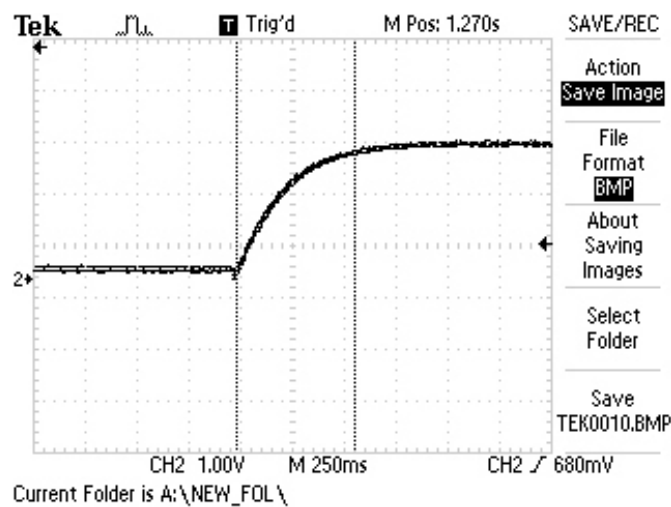

10. Video signal waveform diagram.

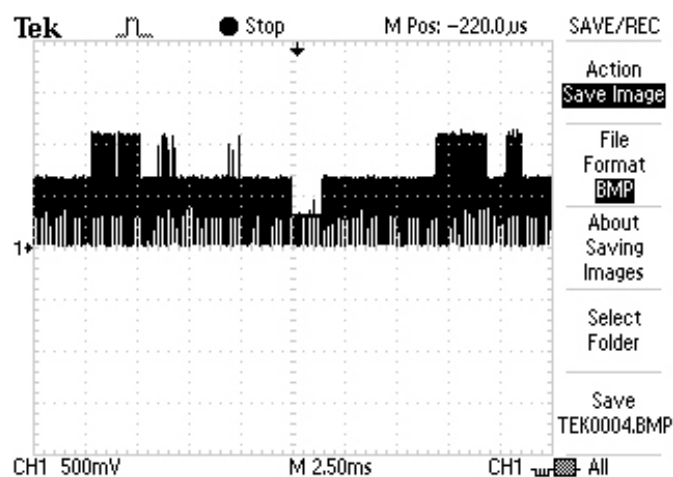


11. 1KHZ audio signal output waveform diagram(it is suggested to use test disc,if not,waveform tested will change at any time,which will affect your judgment).

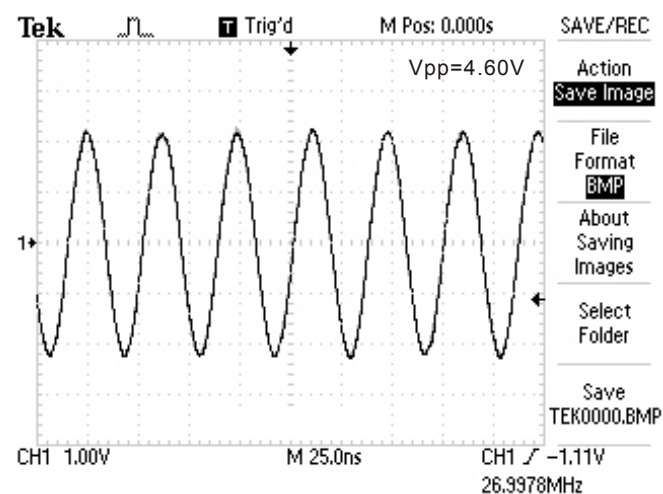

# Chapter Seven PCB Board


## 7.1 Surface layer of Decode Board

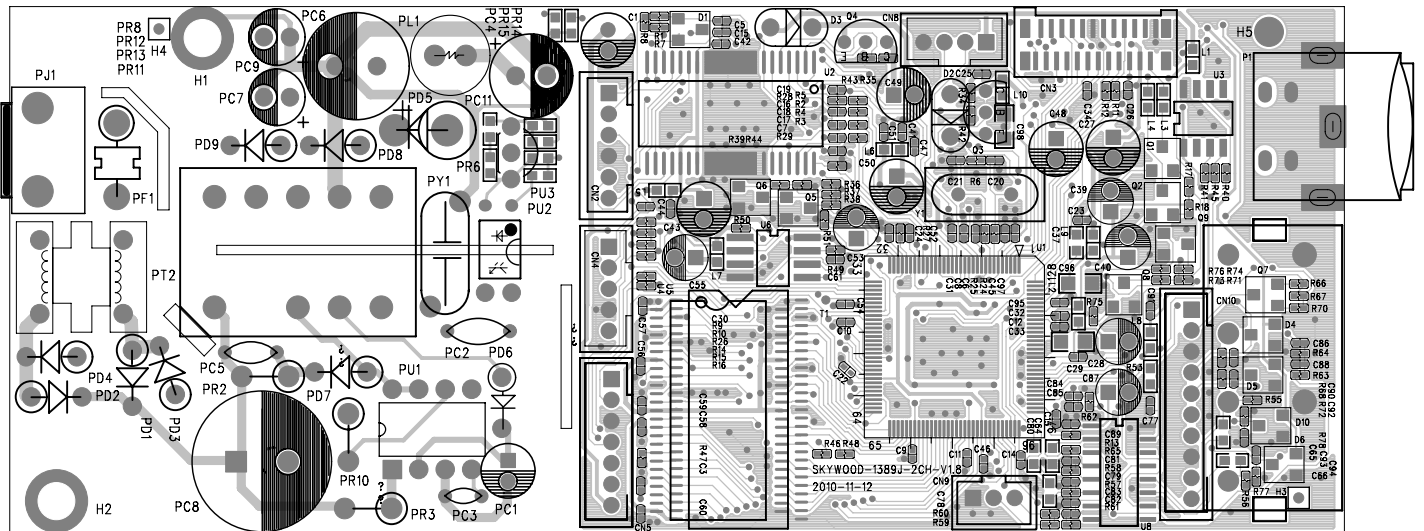


## 7.2 Surface layer of AV Board

## 7.3 Bottom layer of AV Board


## 7.4 Surface layer of Power Board

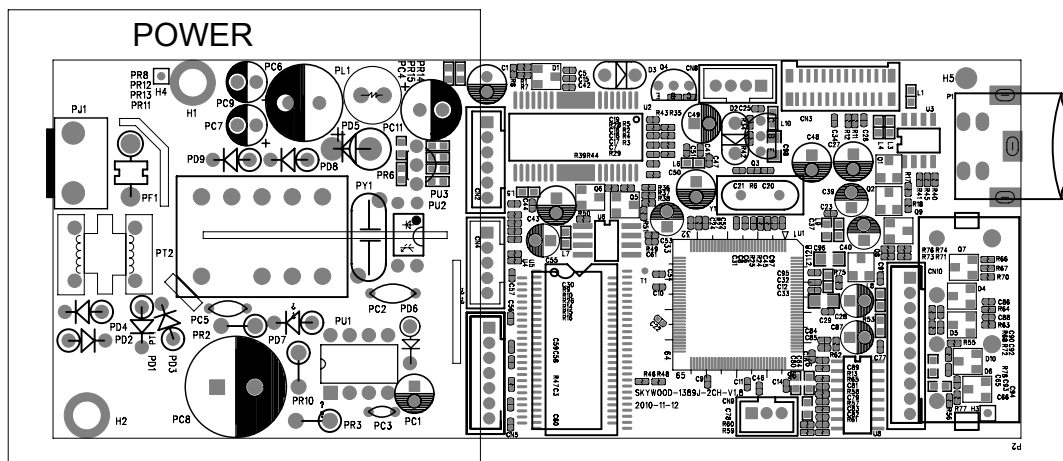


## 7.5 Bottom layer of Power Board

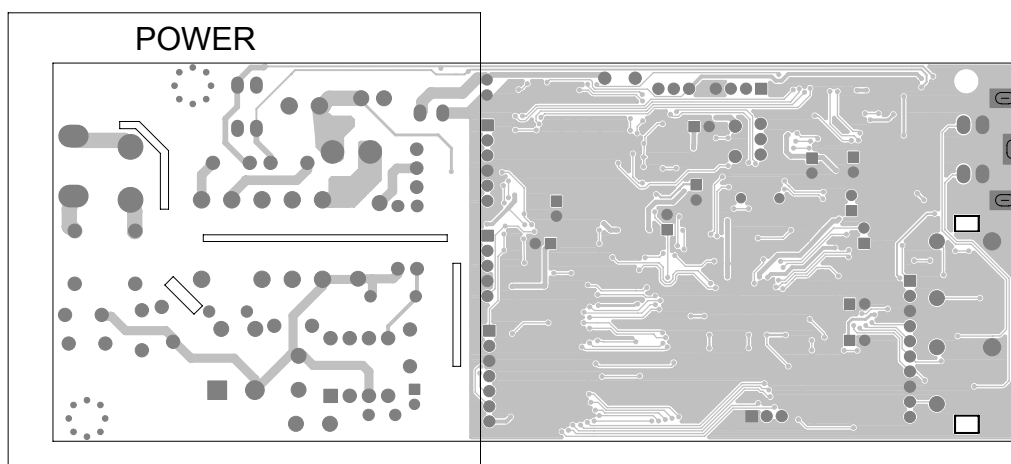


## 7.6 Surface layer of Main Panel

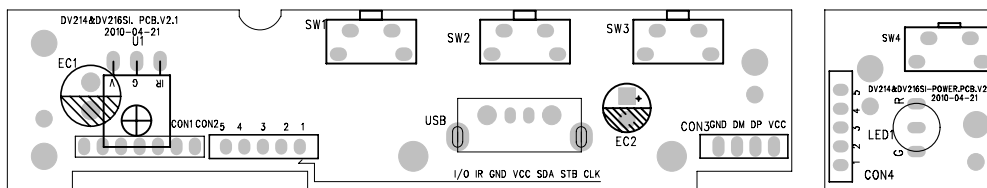


## 7.7 Bottom layer of Main Panel

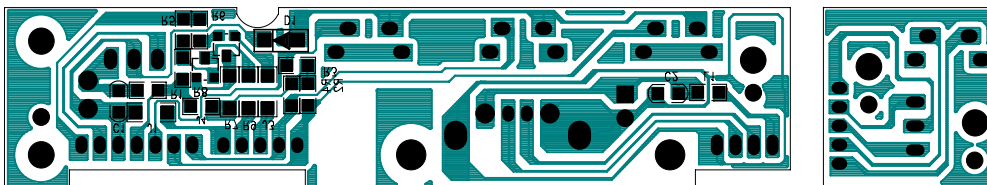


## 7.8 USB Board

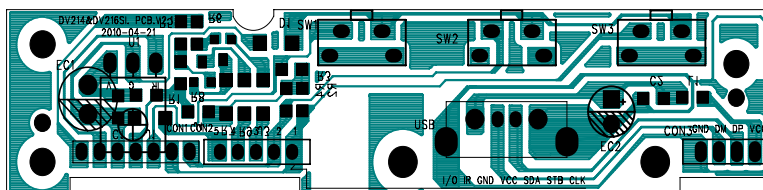

## 7.9 Surface layer of OK Board

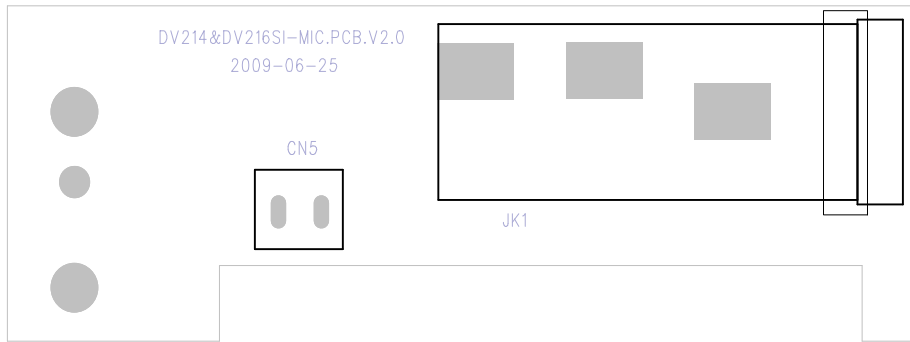

## 8.0 Bottom layer of OK Board







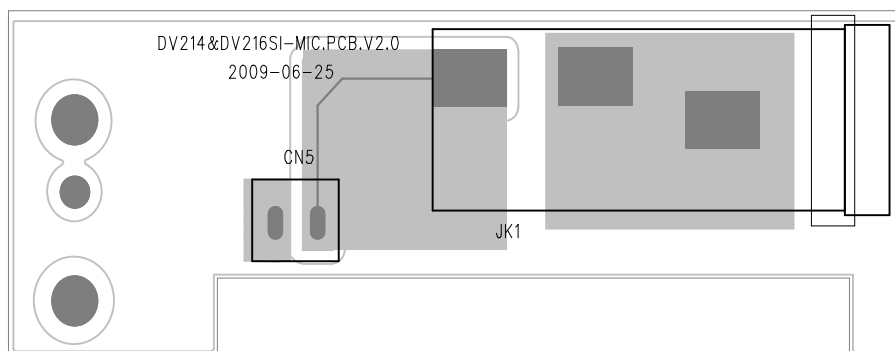


# Chapter Eight Circuit Diagram


## 8.1 Decode Board

### OFF-PAGE CONNECTION


|            |    |    |
|------------|----|----|
| DCLK       | 1  | 1  |
| RASH#      | 2  | 2  |
| CASH#      | 3  | 3  |
| WE#        | 4  | 4  |
| DRAM IF    |    |    |
| SF_CK      | 5  | 5  |
| SF_CS      | 6  | 6  |
| SF_DI      | 7  | 7  |
| SF_DO      | 8  | 8  |
| S-FLASH    |    |    |
| CVBS_OUT   | 9  | 9  |
| V_R        | 10 | 10 |
| V_B        | 11 | 11 |
| V_G        | 12 | 12 |
| VIDEO IF   |    |    |
| AR         | 13 | 13 |
| AL         | 14 | 14 |
| SCART1     | 15 | 15 |
| SCART2     | 16 | 16 |
| SCART3     | 17 | 17 |
| AUDIO_MUTE | 18 | 18 |
| AKIN1      | 19 | 19 |
| AUDIO IF   |    |    |
| ASPDI      | 20 | 20 |
| GPO14      | 21 | 21 |

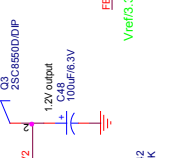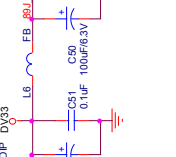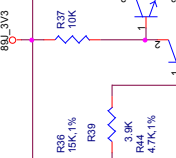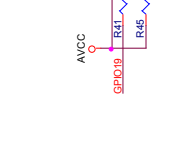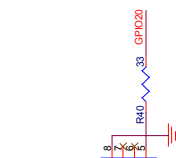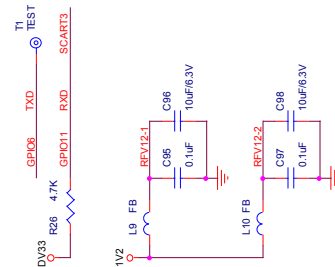


MT1389J  
No EPAD  
LQFP128

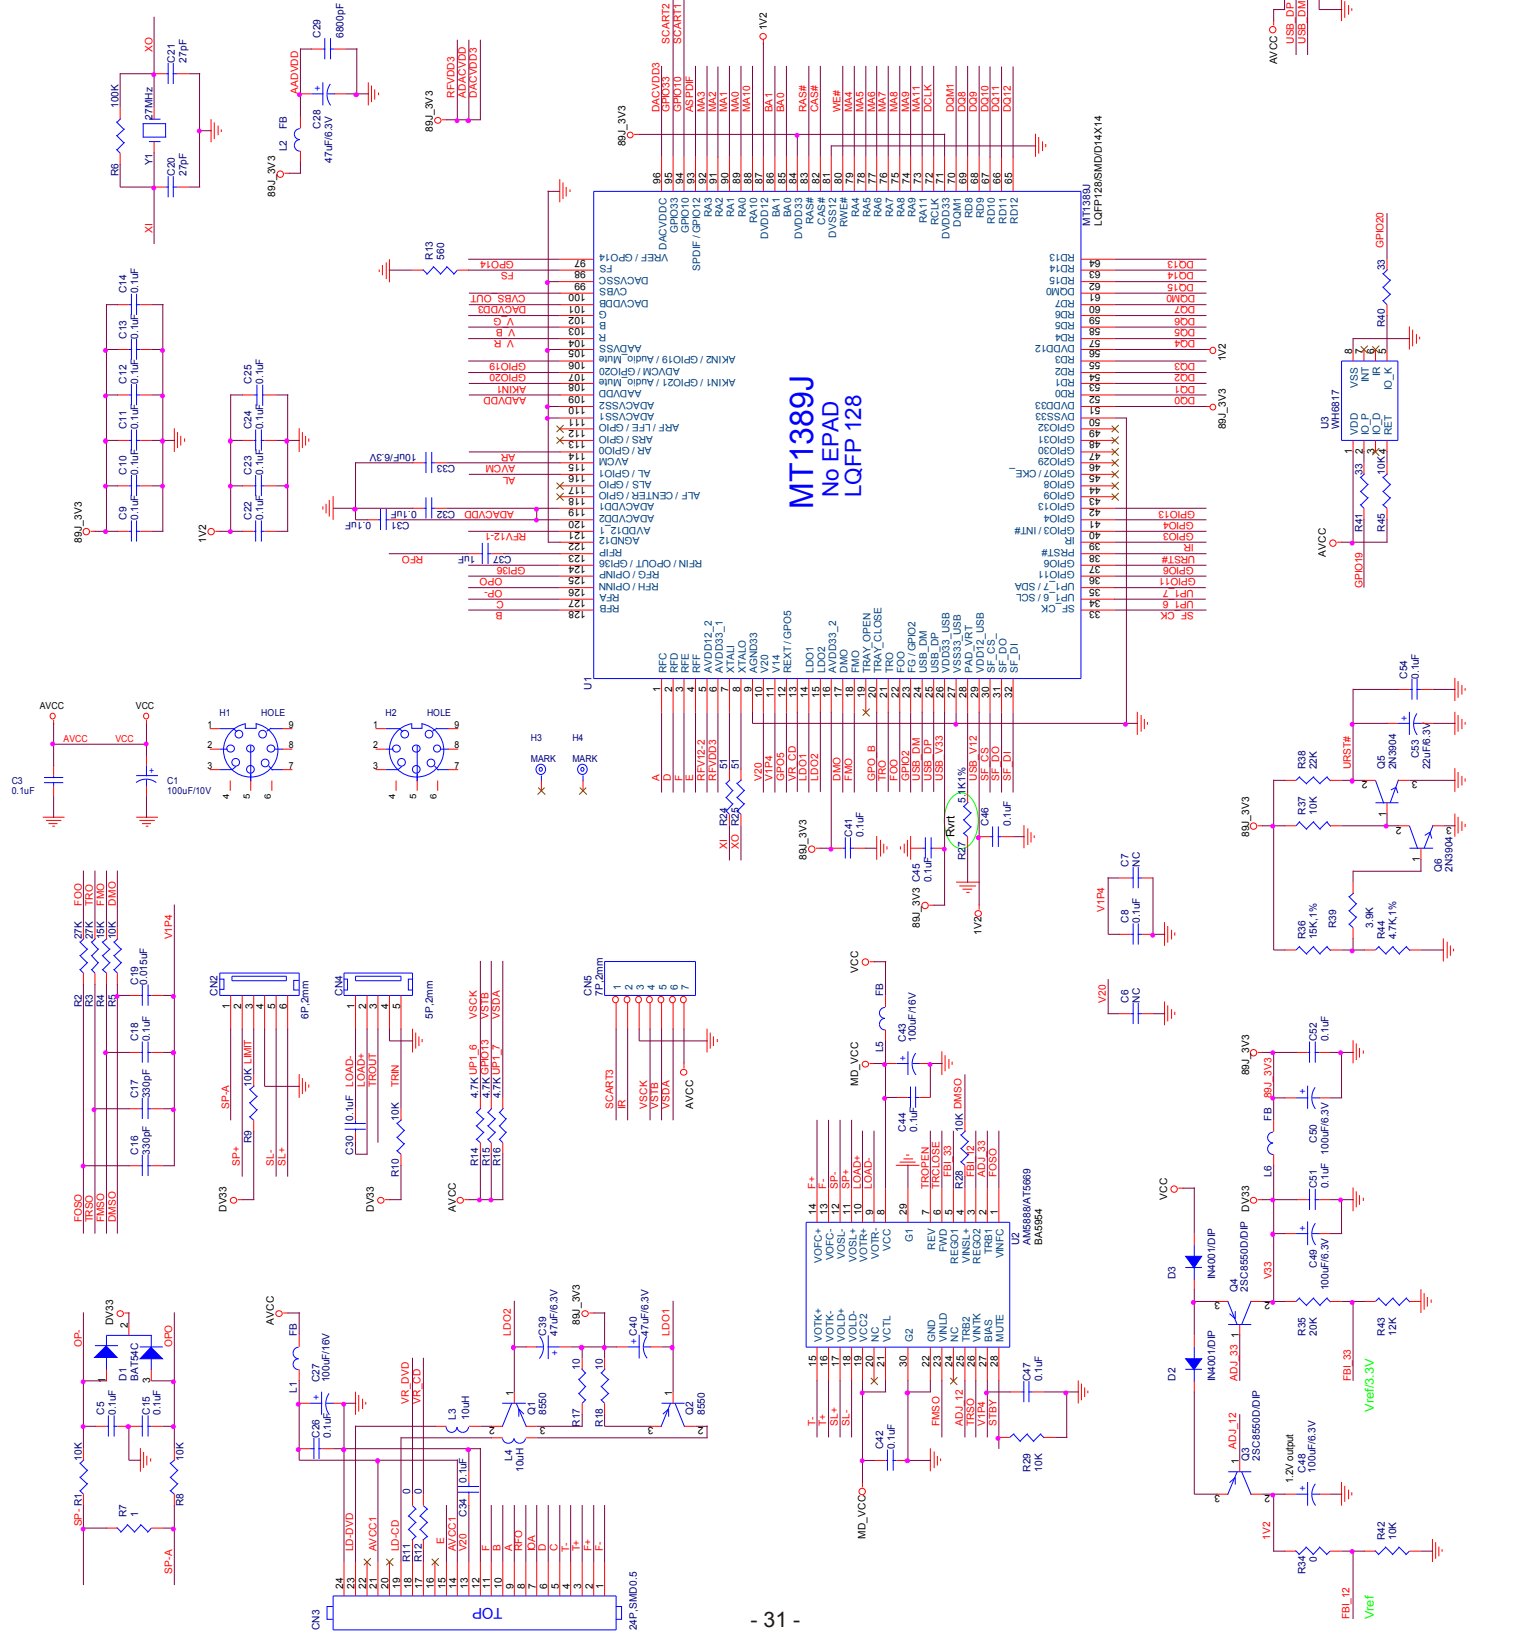







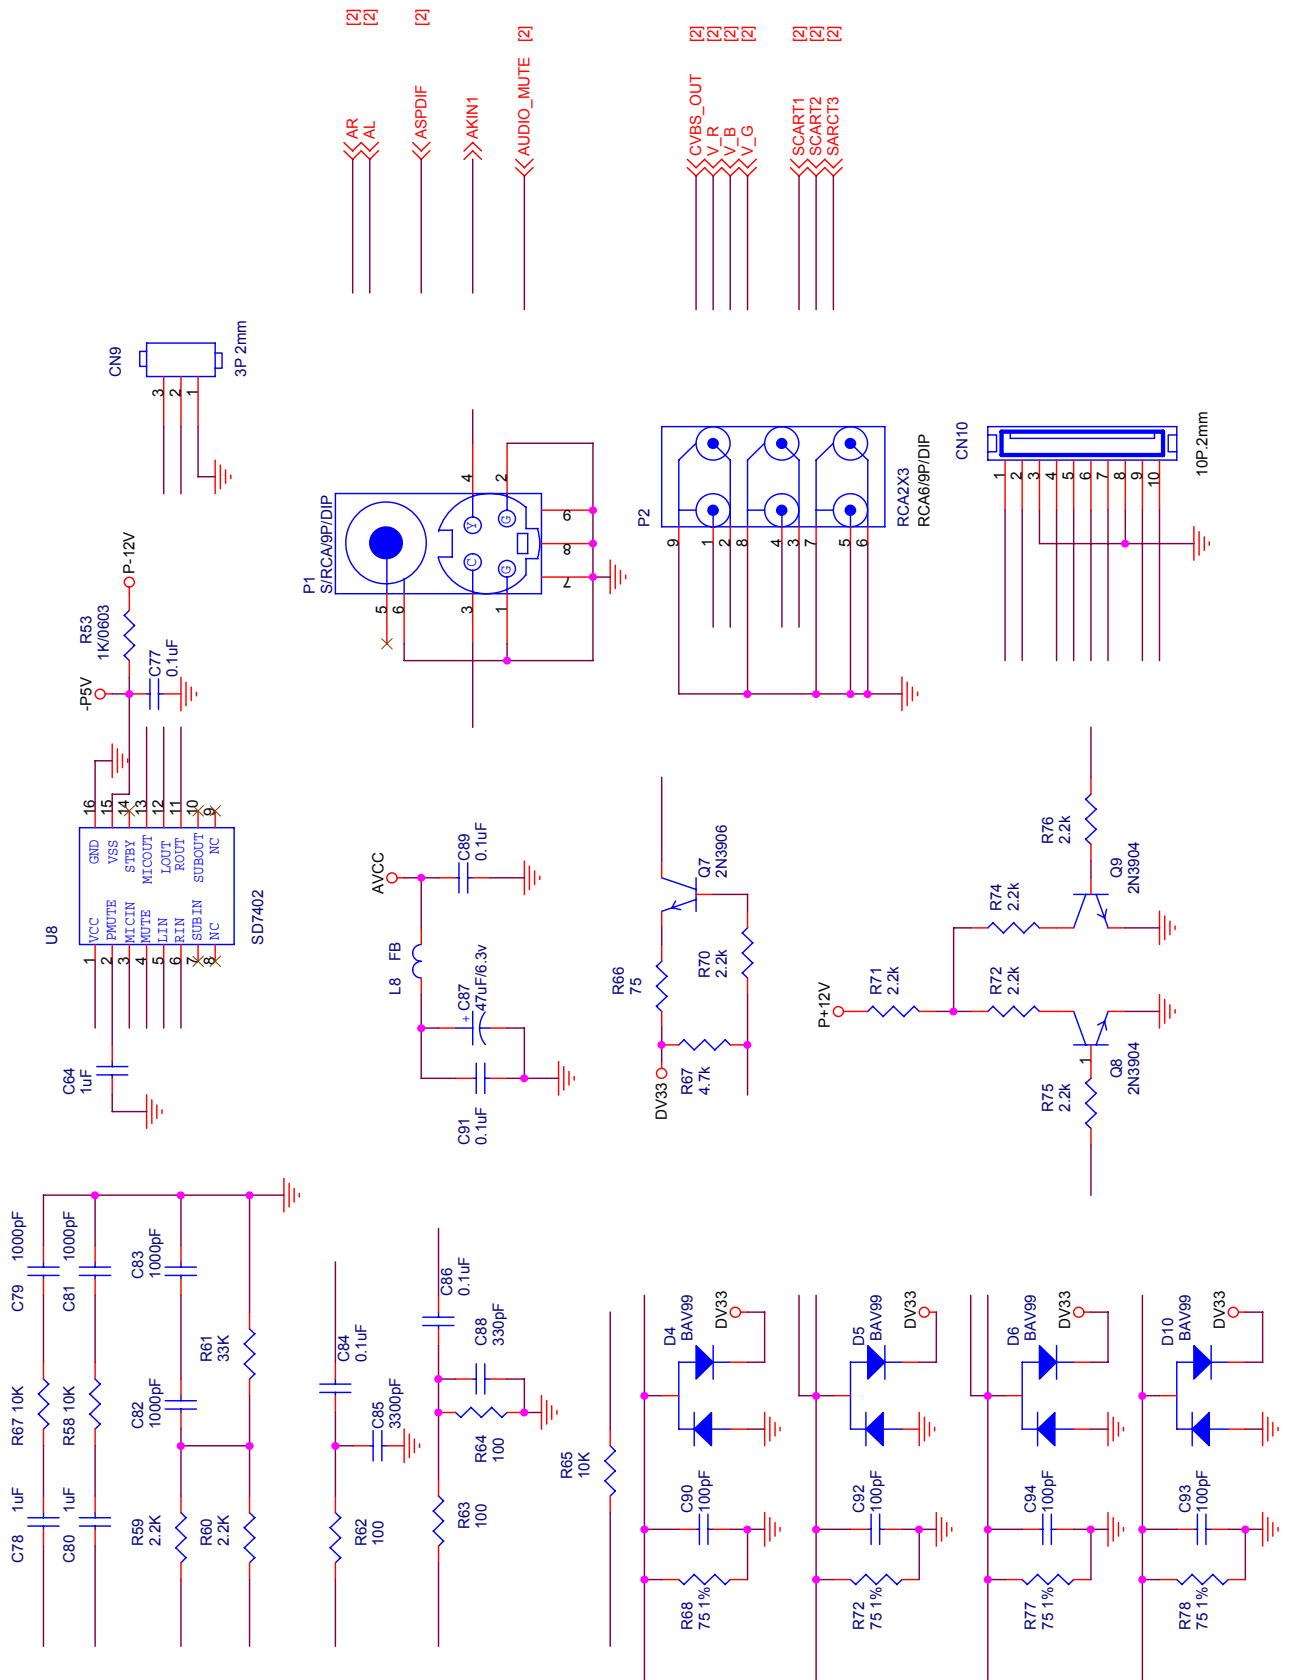

## 8.2 Power Board

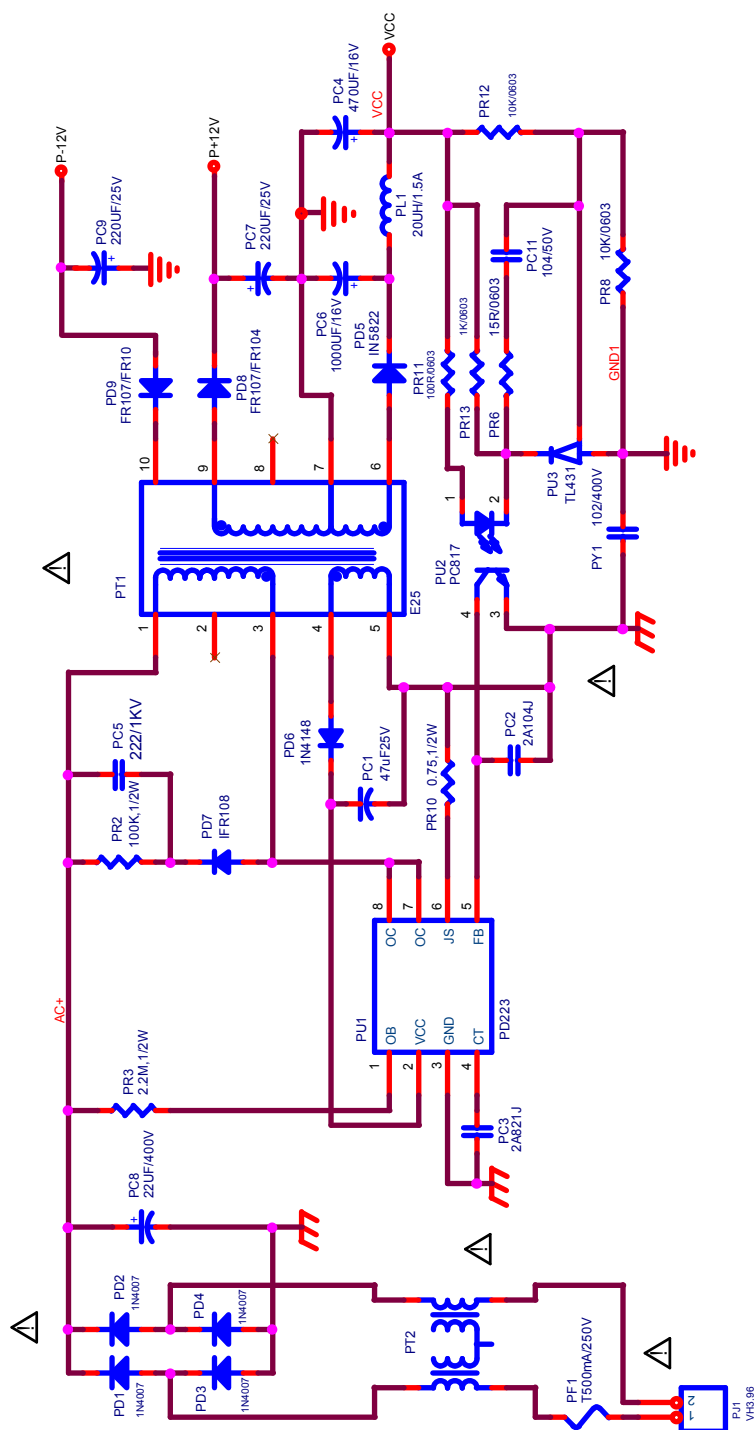

## 8.3 Main Panel

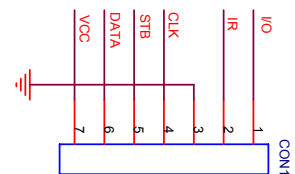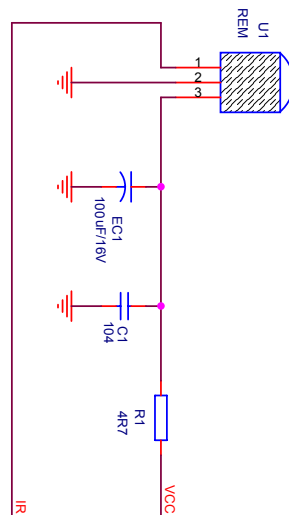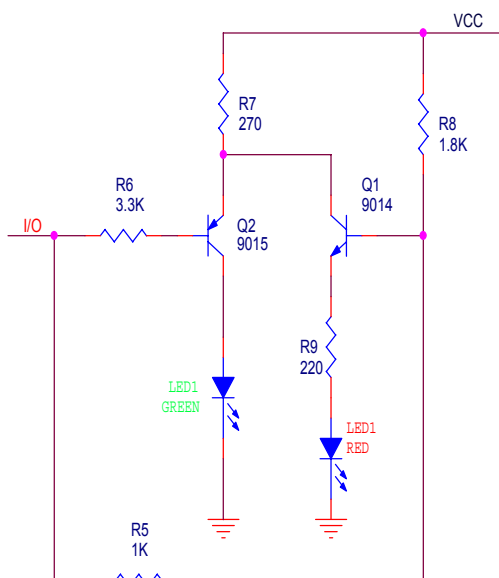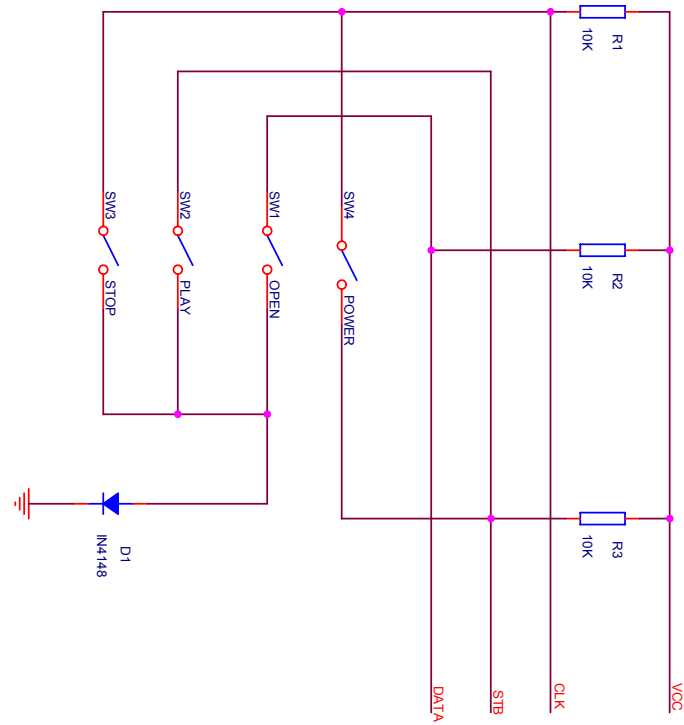

## 8.4 USB Board

