

CDX-434RF/530RF/535RF

SERVICE MANUAL

US Model
Canadian Model
CDX-434RF/530RF

AEP Model
UK Model
CDX-434RF

E Model
CDX-434RF/535RF



Photo: CDX-535RF

Model Name Using Similar Mechanism	NEW
CD Drive Mechanism Type	MG-251A-137
Optical Pick-up Name	KSS-720A/K1NP

SPECIFICATIONS

CD changer

System	Compact disc digital audio system
Laser Diode Properties	
Material	GaAlAs
Wavelength	780 nm
Emission Duration	Continuous
Laser output power	Less than 44.6 μ W*

* This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.

Transmitting frequency	88.3 MHz/88.5 MHz/ 88.7 MHz/88.9 MHz/ 89.1 MHz/89.3 MHz/ 89.5 MHz/89.7 MHz/ 89.9 MHz (switchable)
Input/output terminals	Wired remote control (8 pin) RF signal (FM) output Power input (3 pin)
Current drain	800 mA (at playback) 800 mA (at disc loading/ ejecting)
Operating temperature	-10°C to +55°C (14°F to 131°F)
Dimensions	Approx. 262 × 90 × 181.5 mm (10 ³ / ₈ × 3 ⁵ / ₈ × 7 ¹ / ₄ in.) (w/h/d)
Mass	Approx. 2.1 kg (4 lb. 10 oz.)

Relay box

Input/output	Antenna input terminal Antenna output cord CD Changer input cord
Dimensions	Approx. 40 × 40 × 27 mm (1 ⁵ / ₈ × 1 ⁵ / ₈ × 1 ¹ / ₈ in.) (w/h/d)
Mass	140 g (5 oz.)

Wired remote (RM-X88) (CDX-434RF)

Dimensions	Approx. 122 × 36.5 × 15.5 mm (4 ⁷ / ₈ × 1 ⁷ / ₁₆ × ⁵ / ₈ in.) (w/h/d)
Mass	Approx. 255 g (9 oz.)

Wired remote (RM-X87)

/Wireless remote (RM-X89) (CDX-530RF/535RF)

Dimensions	Wired remote: Approx. 122 × 36.5 × 15.5 mm (4 ⁷ / ₈ × 1 ⁷ / ₁₆ × ⁵ / ₈ in.) (w/h/d) Wireless remote: Approx. 40 × 6.5 × 86 mm (1 ⁵ / ₈ × ⁹ / ₃₂ × 3 ¹ / ₂ in.) (w/h/d)
Mass	Wired remote: Approx. 255 g (9 oz.) Wireless remote: Approx. 20 g (1 oz.)
Battery	Wireless remote: Lithium battery (CR2025)

Supplied accessories

Disc magazine (1)
Parts for installation and connections (1 set)

Design and specifications are subject to change
without notice.

COMPACT DISC CHANGER SYSTEM



SONY®

TABLE OF CONTENTS

1. SERVICING NOTES	3
2. GENERAL	
Location and Function of controls	4
Installation	10
Connections	11
3. DISASSEMBLY	13
4. MECHANISM DECK ASSEMBLY	19
5. MECHANICAL ADJUSTMENT	21
6. ELECTRICAL CHECK	22
7. DIAGRAMS	
7-1. Block Diagram – RF SERVO Section –	23
7-2. Block Diagram – MAIN Section –	24
7-3. Note for Printed Wiring Boards and Schematic Diagrams	25
7-4. Printed Wiring Boards – RF Section –	26
7-5. Schematic Diagram – RF Section –	27
7-6. Printed Wiring Boards – MAIN Section (1/2) –	28
7-7. Printed Wiring Boards – MAIN Section (2/2) –	29
7-8. Schematic Diagram – MAIN Section (1/2) –	30
7-9. Schematic Diagram – MAIN Section (2/2) –	31
7-10. Printed Wiring Boards – FM/POWER Section –	32
7-11. Schematic Diagram – FM/POWER Section –	33
7-12. IC Pin Function Description	34
8. EXPLODED VIEWS	40
9. ELECTRICAL PARTS LIST	46

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SECTION 1 SERVICING NOTES

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.
The flexible board is easily damaged and should be handled with care.

Laser Diode Properties

- Material: GaAlAs
 - Wavelength: 780 nm
 - Emission Duration: continuous
 - Laser Output Power: less than 44.6 μW *
- * This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

Notes on chip component replacement


- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

DISC MAGAZINE GETTING OUT PROCEDURE ON THE POWER SUPPLY IS OFF

Remove the COVER (LOWER.T) ass'y beforehand

- 1) Press the lever (ML.S) to arrow direction.
- 2) Removal the magazine ass'y.

Note: Take out the magazine only when the tray is completely within the magazine. If the disk or tray is sticking out, turn on the power and eject the magazine.

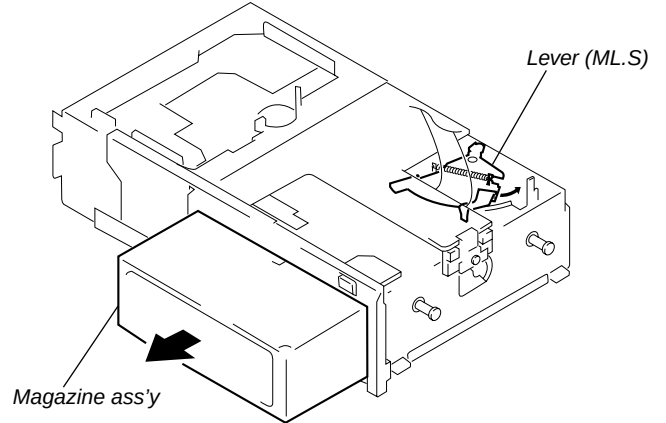


SECTION 2 GENERAL

This section is extracted from instruction manual.

Location and function of controls (CDX-434RF)

Nomenclature (CDX-434RF)

Wired remote (RM-X88)/Télécommande à fil (RM-X88)

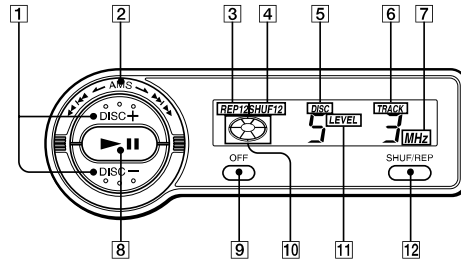

1 DISC (disc select) buttons

2 AMS (Automatic Music Sensor/manual search) control

Depending on which side of the control you push down, you can select from the following functions.

3 REP (repeat play) indication

4 SHUF (shuffle play) indication

5 DISC (disc number) indication
The indicated disc number matches the disc number in the disc magazine.

6 TRACK (track number) indication

7 MHz (frequency) indication

8 ►|| (play/pause) button

If pressed during CD playback, the CD will pause. If pressed again, CD playback will continue.

9 OFF button

10 Play/pause indication

Turns around during CD playback and flashes when the pause button is pressed.

11 LEVEL (output level) indication

12 SHUF/REP (shuffle play/repeat play/control mode set) button

1 Touches DISC (sélection de disques)

2 Commande AMS (détecteur automatique de musique/recherche manuelle)

Suivant le côté de la commande sur lequel vous appuyez, vous pouvez sélectionner les fonctions suivantes.

3 Indication REP (répétition de la lecture)

4 Indication SHUF (lecture aléatoire)

5 Indication DISC (numéro de disque)

Le numéro de disque indiqué correspond au numéro de disque dans le chargeur de disques.

6 Indication TRACK (numéro de plage)

7 Indication MHz (fréquence)

8 Touche ►|| (lecture/pause)

Si vous appuyez sur cette touche en cours de lecture CD, le CD passe en mode de pause. Si vous appuyez de nouveau sur cette touche, la lecture CD reprend.

9 Touche OFF (arrêt de la lecture de CD)

10 Indication de lecture/pause

Tourne pendant la lecture d'un CD et clignote lorsque la touche de pause est actionnée.

11 Indication LEVEL (niveau de sortie)

12 Touche SHUF/REP (lecture aléatoire/lecture répétée/mode de réglage)

AMS function

To locate the beginning of a track, push down

►►1 to locate the beginning of the next track.

◄◄ to locate the beginning of the track currently played.

If you push down the control repeatedly, the beginnings of all following or previous tracks will be located until the end of the disc is reached.

Manual search function

To quickly locate a desired point of a track, push down **and hold**

►► to fast-forward.

◄◄ to fast-reverse.

The elapsed playing time of the track will be shown in the display window during manual search.

Disc select function

To select a desired disc, press **momentarily**

(DISC+) to select the next disc.

(DISC-) to select the previous disc.

Fonction AMS

Pour localiser le début d'une plage, appuyez sur

►►1 pour localiser le début de la plage suivante.

◄◄ pour localiser le début de la plage en cours.

Si vous appuyez plusieurs fois de suite sur la commande, le début de chacune des plages précédentes ou des suivantes est localisé jusqu'à la fin du disque.

Fonction de recherche manuelle

Pour localiser rapidement un point désiré d'une plage, **maintenez enfoncé**

►► pour avancer rapidement.

◄◄ pour reculer rapidement.

La durée écoulée de la plage apparaît sur l'afficheur pendant la recherche manuelle.


Fonction de sélection de disques

Quand vous voulez sélectionner un disque, appuyez **momentanément** sur

(DISC+) pour choisir le disque suivant.


(DISC-) pour choisir le disque précédent.

Location and function of controls (CDX-530RF/535RF)

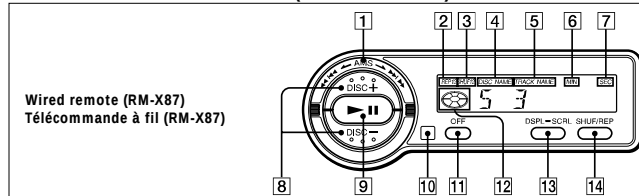

- 1 AMS (Automatic Music Sensor/manual search) control**
Depending on which side of the control you push down, you can select from the following functions.
- 2 REP (repeat play) indication**
- 3 SHUF (shuffle play) indication**
- 4 DISC NAME (disc number/disc name) indication**
The indicated disc number matches the disc number in the disc magazine.
- 5 TRACK NAME (track number/track name) indication**
- 6 MIN (minute) indication**
- 7 SEC (second) indication**
- 8 DISC buttons**
Depending on which side of the button you press, you can select from the following functions.
- 9 ►|| (play/pause) button**
If pressed during CD playback, the CD will pause. If pressed again, CD playback will continue.
- 10 Infrared receptor for the wireless remote**
- 11 OFF button**
- 12 Play/pause indication**
Turns around during CD playback and flashes when the pause button is pressed.
- 13 DSPL-SCRL (indication change/name scroll) button**
- 14 SHUF/REP (shuffle play/repeat play/control mode set) button**
- 15 NAME (character select) buttons**
- 16 DSPL-EDIT (display/name edit) button**
- 17 AMS/MANU (Automatic Music Sensor/manual search) buttons**
- 18 REP (repeat play) button**
- 19 ENTER-DELETE button**
- 20 SCRL (scroll) button**
- 21 SHUF (shuffle play) button**

Nomenclature (CDX-530RF/535RF)

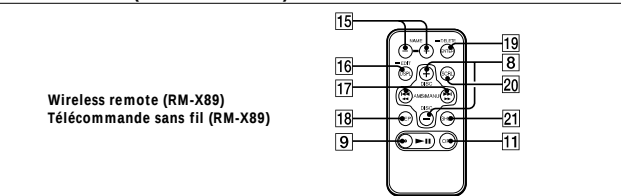


- 1 Commande AMS (détecteur automatique de musique/recherche manuelle)**
En fonction du côté de la commande sur lequel vous appuyez, vous pouvez sélectionner les fonctions suivantes.
- 2 Indication REP (répétition de la lecture)**
- 3 Indication SHUF (lecture aléatoire)**
- 4 Indication DISC NAME (numéro du disque/nom du disque)**
Le numéro de disque indiqué correspond au numéro de disque dans le chargeur de disques.
- 5 Indication TRACK NAME (numéro de plage/nom de plage)**
- 6 Indication MIN (minute)**
- 7 Indication SEC (seconde)**
- 8 Touches DISC**
En fonction du côté de la touche sur lequel vous appuyez, vous pouvez sélectionner les fonctions suivantes.
- 9 Touche ►|| (lecture/pause)**
- 10 Récepteur de télécommande sans fil IR**
- 11 Touche OFF**
- 12 Indication de lecture/pause**
Tourne pendant la lecture du CD et clignote lorsque la touche de pause est enfoncée.
- 13 Touche DSPL-SCRL (changement d'indication/défilement des noms)**
- 14 Touche SHUF/REP (lecture aléatoire/lecture répétée/réglage du mode de contrôle)**
- 15 Touches NAME (sélection des caractères)**
- 16 Touche DSPL-EDIT (affichage/affichage du nom)**
- 17 Touches AMS/MANU (détecteur automatique de musique/recherche manuelle)**
- 18 Touche REP (lecture répétée)**
- 19 Touche ENTER-DELETE**
- 20 Touche SCRL (défilement)**
- 21 Touche SHUF (lecture aléatoire)**

		AMS function To locate the beginning of a track, push down ► to locate the beginning of the next track. If you push down the control repeatedly, the beginnings of all following or previous tracks will be located until the end of the disc is reached.
		Manual search function To quickly locate a desired point of a track, push down and hold ►► to fast-forward. ◄◄ to fast-reverse. The elapsed playing time of the track will be shown in the display window during manual search.
		Disc select function To select a desired disc, press momentarily DISC+ to select the next disc. DISC- to select the previous disc.

		Fonction AMS Pour localiser le début d'une plage, appuyez sur ► pour localiser le début de la plage suivante. ◄◄ pour localiser le début de la plage actuellement reproduite. Si vous appuyez plusieurs fois sur la commande, les débuts de toutes les plages suivantes et précédentes seront localisés jusqu'à ce que la fin du disque soit atteint.
		Fonction de recherche manuelle Pour localiser rapidement un point désiré d'une plage, maintenez enfoncée ►► pour avancer rapidement. ◄◄ pour reculer rapidement. La durée écoulée de la plage apparaît sur l'afficheur pendant la recherche manuelle.
		Fonction de sélection de disque Quand vous voulez sélectionner un disque, appuyez momentanément sur DISC+ pour choisir le disque suivant. DISC- pour choisir le disque précédent.

Installing the battery (CDX-530RF/535RF)

Replace the battery with a Sony CR2025 or Duracell DL-2025 lithium battery. Use of another battery may present a risk of fire or explosion.

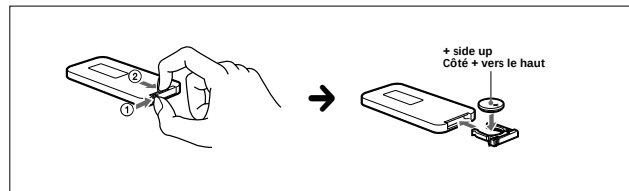

Lithium battery life

When the battery becomes weak, you will not be able to operate the unit with the wireless remote. Battery life is approx. six months depending on the conditions of use.

WARNING

Battery may explode if mistreated.
Do not recharge, disassemble or dispose of in fire.

Notes on the lithium battery

- Keep the lithium battery out of the reach of children. Should the battery be swallowed, immediately consult a doctor.
- Wipe the battery with a dry cloth to assure a good contact.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.

Installation de la pile (CDX-530RF/535RF)

Remplacez la pile par une pile au lithium CR2025 Sony ou DL-2025 Duracell. L'utilisation d'une autre pile comporte un risque d'incendie ou d'explosion.

Autonomie de la pile au lithium

Lorsque les piles s'épuisent, il ne vous sera plus possible de commander l'appareil à l'aide de la télécommande sans fil. L'autonomie de la pile est d'environ six mois suivant les conditions d'utilisation.

ATTENTION

Utilisée de façon incorrecte, la pile peut exploser. Ne pas la recharger, la démonter ni la jeter au feu.


Remarques sur la pile au lithium

- Gardez les piles au lithium hors de la portée des enfants. En cas d'ingestion, consultez immédiatement un médecin.
- Essuyez la pile à l'aide d'un chiffon sec de façon à assurer un bon contact.
- Respectez la polarité de la pile lorsque vous l'installez.
- Ne saisissez pas la pile à l'aide d'une pince métallique, sinon vous risquez de provoquer un court-circuit.

Inserting a disc


1

With the arrow side facing up
Avec le côté portant la flèche orienté vers le haut

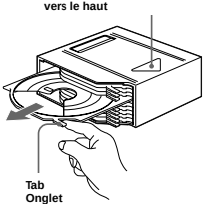

Tab
Onglet

Labeled surface up
Face imprimée vers le haut

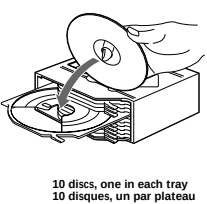

10 discs, one in each tray
10 disques, un par plateau

Use the supplied disc magazine or the disc magazine XA-250. The disc magazine XA-10B can not be used with this unit. If you use any other disc magazine, it may cause a malfunction.

Notes

- To listen to an 8 cm (3 in.) CD, use the optional Sony CD adaptor CSA-8. Be sure to always use the specified adaptor, as failing to do so may cause a malfunction of the unit. If you use any other adaptor, the unit may not operate properly. When using the Sony CD adaptor, make sure that the three catches on the adaptor are firmly latched onto the 8 cm (3 in.) CD.
- Do not insert the Sony CD adaptor CSA-8 in the disc magazine without a disc, malfunction may result.


Utilisez le magasin à disques fourni ou un magasin à disques XA-250. Vous ne pouvez pas utiliser de magasin à disques XA-10B avec cet appareil. L'utilisation d'un autre type de magasin à disques risque de provoquer un dysfonctionnement.

Remarques


- Pour écouter un CD de 8 cm (3 po.) CD, utilisez l'adaptateur CD Sony en option CSA-8. Veillez à toujours utiliser l'adaptateur spécifié, faute de quoi vous risquez de provoquer un dysfonctionnement de l'appareil. Si vous utilisez un autre adaptateur, l'appareil risque de ne pas fonctionner correctement. Lorsque vous employez l'adaptateur CD Sony, assurez-vous que les trois encoches de l'adaptateur soient fermement engagées sur le CD de 8 cm (3 po.).
- N'introduisez pas l'adaptateur CD Sony CSA-8 dans le chargeur sans disque, car il pourrait en résulter un dysfonctionnement.

2


Unlock.
Déverrouiller.



Release, and slide open.
Relâchez et coulissez pour ouvrir.




3

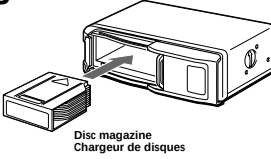

Disc magazine
Chargeur de disques


If the disc magazine does not lock properly
Take out the disc magazine, press ▲, and re-insert it.
Si vous ne pouvez pas fermer le chargeur de disques
Retirez le chargeur, appuyez sur ▲ et réintroduisez-le.

To remove
Retrait

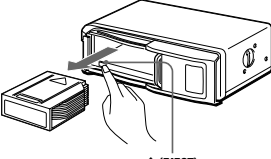

▲ (EJECT)

4



Use the unit with the door closed
Otherwise, foreign matter may enter the unit and contaminate the lenses inside the CD changer.

Utiliser cet appareil avec la trappe fermée
Sinon, des corps étrangers pénétreraient dans l'appareil et encrasseraient les lentilles à l'intérieur du changeur CD.

Notes on the disc magazine

- Do not leave the disc magazine in locations with high temperature and high humidity, such as on a car dashboard or in the rear window where the disc magazine will be subject to direct sunlight.
- Do not place more than one disc at a time onto a tray, otherwise the CD changer and the discs may be damaged.
- Do not drop the disc magazine or subject it to a violent shock.

When the tray comes out

Normally, the trays will not come out of the disc magazine. However, if they are pulled out of the disc magazine, it is easy to re-insert them.

With the cut-away portion of the tray facing you, insert the right corner of the tray in the slot, then push in the left corner until it clicks.

Note
Do not insert the tray upside down or in the wrong direction.

Remarques sur le chargeur de disques

- N'abandonnez pas le chargeur de disques dans des endroits affichant des températures et une humidité élevées, tels que sur le tableau de bord d'une voiture ou sur la plage arrière où le chargeur de disques sera soumis aux rayons directs du soleil.
- Ne placez pas plus d'un disque à la fois sur le plateau, sinon le changeur de CD et les disques risquent d'être endommagés.
- Ne pas laisser tomber le chargeur de disques ni le cogner.

Si un plateau s'enlève

En principe, les plateaux ne s'enlèvent pas du magasin. S'ils s'enlèvent du magasin, il est cependant facile de les y réintroduire.

L'encoche du plateau étant face à vous, introduisez l'angle droit du plateau dans la fente et poussez ensuite sur l'angle gauche jusqu'à ce qu'il s'encliquette.

Remarque
N'introduisez pas le plateau à l'envers ni dans le mauvais sens.

Notes on compact discs

A dirty or defective disc may cause sound drop-outs during CD playback. To enjoy optimum sound, handle the disc as follows.

- Handle the disc by its edge, and do not touch the unlabeled surface. (fig. [A])
- Do not stick paper or tape on the disc. (fig. [B])
- Do not expose the discs to direct sunlight or heat sources such as hot air-ducts. Do not leave the discs in a car parked in direct sunlight where there can be a considerable rise in temperature inside the car. (fig. [C])
- Before playing, clean the discs with an optional cleaning cloth. Wipe each disc in the direction of the arrows. (fig. [D])

Do not use solvents such as benzene, thinner, commercially available cleaner, or antistatic spray intended for analog discs.

Notes on discs

If you use the discs explained below, the sticky residue can cause the CD to stop spinning and may cause malfunction or ruin your discs.

Do not use second-hand or rental CDs that have a sticky residue on the surface (for example, from peeled-off stickers or from ink, or glue leaking from under the stickers).

- There are paste residue. Ink is sticky. (fig. [E])
Do not use rental CDs with old labels that are beginning to peel off.
- Stickers that are beginning to peel away, leaving a sticky residue. (fig. [F])
Do not use your CDs with labels or stickers attached.
- Labels are attached. (fig. [G])

Remarques sur les disques compacts

Un disque souillé ou défectueux peut provoquer des coupures de son pendant la lecture d'un CD. Pour obtenir un son optimal, manipulez les disques comme suit.

- Saisissez les disques par les bords et n'en touchez jamais la surface. (fig. [A])
- Ne collez pas de papier ni de bande adhésive sur le disque. (fig. [B])
- N'exposez pas les disques au rayonnement direct du soleil ni à des sources de chaleur comme des conduits d'air chaud. Ne laissez pas les disques dans une voiture parquée en plein soleil où la température intérieure de l'habitable risque d'augmenter considérablement. (fig. [C])
- Avant la lecture, essuyez les disques avec un chiffon de nettoyage optionnel. Essuyez chaque disque dans le sens des flèches. (fig. [D])

Ne pas utiliser de solvants tels que de la benzène, du diluant, des produits de nettoyage vendus dans le commerce ou des vaporisateurs anti-statiques destinés aux disques analogiques.

Remarques sur les disques

Si vous utilisez les disques expliqués ci-dessous, le résidu collant peut provoquer l'arrêt du disque et entraîner un dysfonctionnement ou abîmer vos disques.

N'utilisez pas de disques de seconde main ou de location qui présentent des résidus collants sur leur surface (par exemple d'étiquettes décollées ou d'encre, ou encore de colle débordant sous l'étiquette).

- Il s'agit de résidus de colle. L'encre est collante. (fig. [E])
N'utilisez pas de CD de location avec de vieilles étiquettes qui commencent à se décoller.
- Les étiquettes qui commencent à se décoller laissent des résidus collants. (fig. [F])
N'utilisez pas vos CD avec des étiquettes ou des autocollants fixés.
- Les étiquettes sont fixées. (fig. [G])

Moisture condensation

On a rainy day or in a very damp area, moisture may condense on the lenses inside the unit, and the unit will not operate properly. In such a case, remove the disc magazine and wait for about an hour until the moisture has evaporated.

If you have any questions or problems concerning your unit that are not covered in this manual, please consult your nearest Sony dealer.

Remarque sur la condensation d'humidité

Les jours de pluie et dans les régions très humides, il se peut que de l'humidité se condense sur l'objectif à l'intérieur de l'appareil, qui risque alors de ne pas fonctionner correctement. Dans ce cas, retirez le chargeur de disques et attendez environ une heure que l'humidité se soit évaporée.

Si vous avez des questions ou des problèmes au sujet de votre appareil qui ne sont pas abordés dans le présent mode d'emploi, consultez votre revendeur Sony.

6


Operation (CDX-434RF)

Precautions

- This unit cannot be used with a car audio without an FM tuner.
- If your car was parked in direct sunlight resulting in a considerable rise in temperature inside the car, allow the unit to cool off before operating it.
- If no power is being supplied to the unit, check the connections first. If everything is in order, check the fuse.
- Avoid installing the CD changer and wired remote in places:
 - subject to temperature exceeding 55°C (131°F).
 - subject to direct sunlight.
 - near heat sources (such as heaters).
 - exposed to rain or moisture.
 - exposed to excessive dust or dirt.
 - subject to excessive vibration.

Resetting the unit

Before operating the unit for the first time or after replacing the car battery, you must reset the unit. Press the reset button with a pointed object, such as a ball-point pen, etc.

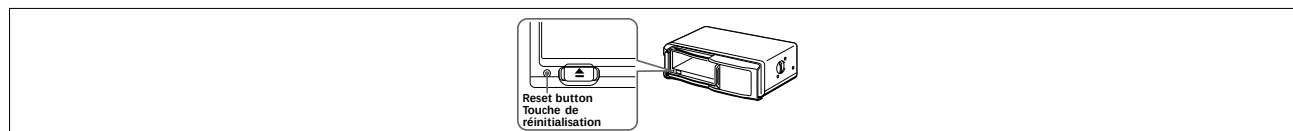

Listening to a CD

- 1 Turn on the FM tuner of your car audio.

- 2 Tune in the selected transmitting frequency* with the FM tuner of your car audio.

* The frequency of the unit is set to 88.3 MHz at the factory.
You can change the frequency. (See "Changing the transmitting frequency" below.)

- 3 Press ►II.

CD playback starts.

- 4 Adjust the volume with the volume control on your car audio.
- All the tracks play from the beginning.

Stopping CD play

Press (OFF).

Notes

- When CD playback stops, you may hear some noise from the speakers. To prevent this from happening, turn the volume down before stopping CD playback.
- If you turn off the ignition switch of your car without stopping CD playback, it will automatically resume CD playback from where it was stopped when you turn on the ignition switch again.

Listening to the radio or a tape

Be sure to stop CD playback before you start listening to the radio or a tape.

Note

Be sure to stop CD playback, otherwise there may be some interference with radio reception.


Playing tracks in random order — Shuffle Play

You can select:

- SHUF 1—to play the tracks on the current disc in random order.
- SHUF 2—to play all the discs in random order.

Press (SHUF/REP) repeatedly until the desired setting appears (SHUF1 or SHUF2). After five seconds, shuffle play starts.

Each time you press (SHUF/REP), the display changes as follows:



To go back to the normal playback mode, press (SHUF/REP) repeatedly until the "SHUF" or "REP" indication disappears.


Playing tracks repeatedly — Repeat Play

You can select:

- REP 1—to repeat the track.
- REP 2—to repeat the disc.

Press (SHUF/REP) repeatedly until the desired setting appears (REP1 or REP2). After five seconds, the repeat play starts.

Each time you press (SHUF/REP), the display changes as follows:



To go back to the normal playback mode, press (SHUF/REP) repeatedly until the "REP" or "SHUF" indication disappears.

Changing the transmitting frequency

Because this unit processes CD playback sound through an FM tuner, there may be interference noise during CD playback. In such a case, change the frequency of the modulated RF signal transmitted from the unit. The initial setting is 88.3 MHz.

- 1 Press (SHUF/REP) for two seconds until frequency appears.

- 2 Press (DISC+) or (DISC-) repeatedly to select the frequency.
Each time you press (DISC+) or (DISC-), the frequency changes as follows:

(DISC-) : 88.3 MHz → 89.9 MHz → 89.7 MHz → 89.5 MHz → 89.3 MHz → 89.1 MHz → 88.9 MHz → 88.7 MHz → 88.5 MHz → 88.3 MHz

(DISC+) : 88.3 MHz → 88.5 MHz → 88.7 MHz → 88.9 MHz → 89.1 MHz → 89.3 MHz → 89.5 MHz → 89.7 MHz → 89.9 MHz → 88.3 MHz

- 3 Press (SHUF/REP) for two seconds.

Notes


- When you change the transmitting frequency on the unit, be sure to tune your FM tuner to the newly selected one.
- Press ►II on the wired remote before changing the frequency if the power to the unit is turned off.

Changing the output level

You can select the output level from the unit. Normally the unit is used at the initial output level; change the level if necessary.

- 1 Press (SHUF/REP) for two seconds.

- 2 Press (SHUF/REP) momentarily.



- 3 Press (DISC+) or (DISC-) repeatedly to select the output level.

To decrease the output level



To increase the output level



- 4 Press (SHUF/REP) for two seconds.

Note

When you select level 4 or 5, the CD playback sound may be distorted or you may hear some noise. In such a case, select a lower output level on the unit and turn down the overall volume on your car audio.

Fonctionnement (CDX-434RF)

Précautions

- Cet appareil ne peut être utilisé avec un autoradio sans syntoniseur FM.
- Si votre voiture est parquée en plein soleil, provoquant ainsi une augmentation considérable de la température dans l'habitacle, laissez l'appareil refroidir avant de l'utiliser.
- Si l'appareil n'est pas alimenté, vérifiez d'abord les connexions. Si tout est en ordre, contrôlez le fusible.
- Evitez d'installer le changeur de CD et la télécommande à fil à un endroit :
 - où la température peut dépasser 55°C (131°F),
 - en plein soleil,
 - près d'une source de chaleur (comme un chauffage),
 - exposé à la pluie ou à l'humidité,
 - poussiéreux ou sale,
 - exposé à des vibrations fortes.

Réinitialisation de l'appareil

Avant la première mise en service de cet appareil ou après avoir remplacé la batterie de la voiture, vous devez réinitialiser l'appareil.
Appuyez sur la touche de réinitialisation à l'aide d'un objet pointu comme un stylo à bille, etc.

Lecture d'un CD

- 1 Mettez sous tension le syntoniseur FM de votre autoradio.

- 2 Syntonisez la fréquence de transmission* sélectionnée avec le syntoniseur FM de votre autoradio.

* La fréquence de l'appareil est réglée par défaut sur 88.3 MHz.
Vous pouvez changer la fréquence. (Voir "Changement de la fréquence de transmission" ci-dessous.)

- 3 Appuyez sur ►II.

La lecture du CD démarre.

- 4 Réglez le volume à l'aide de la commande du volume de votre autoradio.
- Toutes les plages sont reproduites à partir du début.

Pour arrêter la lecture d'un CD

Appuyez sur (OFF).

Remarques

- Lorsque vous arrêtez la lecture d'un CD, il se peut que vous entendiez des parasites dans les haut-parleurs. Pour éviter ce phénomène, baissez le volume avant d'arrêter la lecture du CD.
- Si vous coupez le contact de votre voiture sans arrêter la lecture du CD, celle-ci reprendra automatiquement là où elle a été interrompue lorsque vous remettrez le contact.

Ecouter la radio ou une cassette

Arrêtez la lecture du CD avant d'écouter la radio ou une cassette.

Remarque

Si vous n'arrêtez pas la lecture du CD, des interférences risquent de se produire avec la réception radio.

Lecture des plages dans un ordre quelconque — Lecture aléatoire


Vous pouvez sélectionner:

- SHUF 1—pour reproduire les plages du disque en place dans un ordre quelconque.
- SHUF 2—pour reproduire tous les disques dans un ordre quelconque.

Appuyez plusieurs fois sur (SHUF/REP) jusqu'à ce que le réglage souhaité apparaisse (SHUF1 ou SHUF2).

La lecture aléatoire commence dans les cinq secondes qui suivent.

A chaque pression sur (SHUF/REP), l'affichage change de la façon suivante:



Pour revenir à la lecture normale, appuyez plusieurs fois de suite sur (SHUF/REP) jusqu'à ce que l'indication "SHUF" ou "REP" disparaisse.

Répétition de plages — Lecture répétée


Vous pouvez sélectionner:

- REP 1—pour répéter une plage.
- REP 2—pour répéter tout un disque.

Appuyez plusieurs fois sur (SHUF/REP) jusqu'à ce que le réglage souhaité apparaisse (REP1 ou REP2).

La lecture répétée commence dans les cinq secondes qui suivent.

A chaque pression sur (SHUF/REP), l'affichage change de la façon suivante:



Pour revenir à la lecture normale, appuyez plusieurs fois de suite sur (SHUF/REP) jusqu'à ce que l'indication "REP" ou "SHUF" disparaisse.

Changement de la fréquence de transmission

Comme cet appareil traite le son de lecture CD via un syntoniseur FM, il se peut qu'il y ait des interférences durant la lecture du CD. En pareil cas, changez la fréquence du signal RF modulé transmis par l'appareil. Le réglage initial est de 88.3 MHz.

- 1 Appuyez sur (SHUF/REP) pendant deux secondes jusqu'à ce que la fréquence apparaisse.

- 2 Appuyez plusieurs fois de suite sur (DISC-) ou (DISC+) pour sélectionner la fréquence.

Chaque fois que vous appuyez sur (DISC-) ou (DISC+), la fréquence change dans l'ordre suivant :

(DISC-) : 88.3 MHz → 89.9 MHz → 89.7 MHz → 89.5 MHz → 89.3 MHz → 89.1 MHz → 88.9 MHz → 88.7 MHz → 88.5 MHz → 88.3 MHz

(DISC+) : 88.3 MHz → 88.5 MHz → 88.7 MHz → 88.9 MHz → 89.1 MHz → 89.3 MHz → 89.5 MHz → 89.7 MHz → 89.9 MHz → 88.3 MHz

- 3 Appuyez sur (SHUF/REP) pendant deux secondes.

Remarques


- Si vous changez la fréquence de transmission de l'appareil, n'oubliez pas de syntoniser votre syntoniseur FM sur la nouvelle fréquence sélectionnée.
- Appuyez sur la touche ►II de la télécommande filaire avant de changer la fréquence si l'appareil n'est pas sous tension.

Changement du niveau de sortie

Vous pouvez sélectionner le niveau de sortie de l'appareil. En principe, l'appareil est utilisé au niveau de sortie initial ; changez le niveau si nécessaire.

- 1 Appuyez sur (SHUF/REP) pendant deux secondes.

- 2 Appuyez brièvement sur (SHUF/REP).



- 3 Appuyez plusieurs fois de suite sur (DISC-) ou (DISC+) pour sélectionner le niveau de sortie.

Pour diminuer le niveau de sortie



Pour augmenter le niveau de sortie



- 4 Appuyez sur (SHUF/REP) pendant deux secondes.

Remarque

Si vous sélectionnez le niveau 4 ou 5, le son de lecture CD peut comporter des distorsions ou des parasites. En pareil cas, sélectionnez un niveau de sortie inférieur et baissez le volume de votre autoradio.


Operation (CDX-530RF/535RF)

Precautions

- This unit cannot be used with a car audio without FM tuner.
- If your car was parked in direct sunlight resulting in a considerable rise in temperature inside the car, allow the unit to cool off before operating it.
- If no power is being supplied to the unit, check the connections first. If everything is in order, check the fuse.
- Avoid installing the CD changer, wireless remote, and wired remote in places:
 - subject to temperature exceeding 55°C (131°F).
 - subject to direct sunlight.
 - near heat sources (such as heaters).
 - exposed to rain or moisture.
 - exposed to excessive dust or dirt.
 - subject to excessive vibration.

Resetting the unit

Before operating the unit for the first time or after replacing the car battery, you must reset the unit. Press the reset button with a pointed object, such as a ball-point pen, etc.



Listening to a CD

- Turn on the FM tuner of your car audio.
- Tune in the selected transmitting frequency* with the FM tuner of your car audio.
 - * The frequency of the unit is set to 88.3 MHz at the factory.
 - You can change the frequency. (See "Changing the transmitting frequency" below.)
- Press **▶||**.
CD playback starts.
- Adjust the volume with the volume control on your car audio.
All the tracks play from the beginning.

Stopping CD play

Press **(OFF)**.

Notes

- When CD playback stops, you may hear some noise from the speakers. To prevent this from happening, turn the volume down before stopping CD playback.
- If you turn off the ignition switch of your car without stopping CD playback, it will automatically resume CD playback from where it was stopped when you turn on the ignition switch again.

Listening to the radio or a tape

Be sure to stop CD playback before you start listening to the radio or a tape.

Note

Be sure to stop CD playback, otherwise there may be some interference with radio reception.

Playing tracks in random order

— Shuffle Play

- You can select:
 - SHUF 1 to play the tracks on the current disc in random order.
 - SHUF 2 to play all the discs in random order.

Press **(SHUF/REP)** repeatedly until the desired setting appears (SHUF1 or SHUF2).

After five seconds, the shuffle play starts.

Each time you press **(SHUF/REP)**, the display changes as follows:

→ SHUF 1 → SHUF 2 → REP 1* → REP 2* →

Cancel (SHUF off) ←

* These indications do not appear in operation with the wireless remote.

To go back to the normal playback mode, press **(SHUF/REP)** repeatedly until the "SHUF" or "REP" disappears.

Using on the wireless remote

Press **(SHUF)** repeatedly until the desired setting appears.

Playing tracks repeatedly

— Repeat Play

- You can select:
 - REP 1 to repeat the track.
 - REP 2 to repeat the disc.

Press **(SHUF/REP)** repeatedly until the desired setting appears (REP1 or REP2).

After five seconds, the repeat play starts.

Each time you press **(SHUF/REP)**, the display changes as follows:

→ SHUF 1* → SHUF 2* → REP 1 → REP 2 →

Cancel (REP off) ←

* These indications do not appear when in operation with the wireless remote.

To go back to the normal playback mode, press **(SHUF/REP)** repeatedly until "REP" or "SHUF" disappears.

Using on the wireless remote

Press **(REP)** repeatedly until the desired setting appears.

Labelling a CD — Disc Memo

(CD changer with custom file function)

You can label each disc with a personalized label. Use the wireless remote to enter and erase the characters.

- Press **(DSPL/EDIT)** for two seconds until the first character flashes.



- Input the characters.

Press **NAME** (◀) or (▶) to select the desired characters.

(A → B → C → ... Z → 0 → 1 → 2 → ... 9 → + → - → * → / → \ → > → < → ...)



Press **NAME** (▶) to display the available characters. If you press **NAME** (◀), the characters will appear in reverse order.


If you wish to put a blank space after a character, select " " (under-bar).

An alternative method to erase a title

You can erase a title by selecting eight "*"s (under-bar).

- Press **(ENTER/DELETE)** after locating the desired character.

The next character flashes.



- Repeat steps ① and ② to enter the entire title. Up to eight characters can be entered per disc.

- Return to the normal CD playback mode, press **(DSPL/EDIT)** for two seconds.

Displaying the disc memo

Press **(DSPL/SCRL)** during CD playback.



Each time you press **(DSPL/SCRL)** during CD playback, the display changes as follows:

→ Elapsed playback time → Disc name →

Track name ←

Using on the wireless remote

Press **(DSPL/EDIT)** to change the display.

Notes

- If a disc has not been assigned a personalized label, "*****" or "NO NAME" will appear on the display.
- The CD TEXT information appears only when a CD TEXT disc is played back.
- If you use personalized labels, they will always take priority over the original CD TEXT information when such information is displayed.
- "**WAIT**" appears in the display while the unit is reading the data.
- The system shows the CD TEXT information with alphabetic characters, numbers, and symbols. (The lowercase characters contained in the CD TEXT disc are automatically converted to uppercase.)

Erasing the disc memo

- Play the CD and press **(DSPL/EDIT)** for two seconds.
- Press **(ENTER/DELETE)** for two seconds until DISC NAME indication flashes.
- Press **NAME** (◀) or (▶) to select the title that you wish to erase.
- Press **(ENTER/DELETE)** to make DISC NAME indication and the disc name flash.
- Press **(ENTER/DELETE)** again. The title is erased. Repeat steps 2 through 4 if necessary.
- Press **(DSPL/EDIT)** for two seconds. The unit returns to the normal CD playback mode.

Changing the transmitting frequency

Because this unit processes CD playback sound through an FM tuner, there may be interference noise during CD playback. In such a case, change the frequency of the modulated RF signal transmitted from the unit. The initial setting is 88.3 MHz.

- Press **(SHUF/REP)** for two seconds until frequency appears.

Fonctionnement (CDX-530RF/535RF)

Précautions

- Cet appareil ne peut être utilisé avec un autoradio sans syntoniseur FM.
- Si votre voiture est parkée en plein soleil, provoquant ainsi une augmentation considérable de la température dans l'habitacle, laissez l'appareil refroidir avant de l'utiliser.
- Si l'appareil n'est pas alimenté, vérifiez d'abord les connexions. Si tout est en ordre, contrôlez le fusible.
- Evitez d'installer le changeur de CD, la télécommande sans fil et la télécommande à fil dans un endroit :
 - où la température peut dépasser 55°C (131°F),
 - en plein soleil,
 - près d'une source de chaleur (comme un chauffage),
 - exposé à la pluie ou à l'humidité,
 - poussiéreux ou sale,
 - exposé à des vibrations fortes.

Réinitialisation de l'appareil

Avant la première mise en service de cet appareil ou après avoir remplacé la batterie de la voiture, vous devez réinitialiser l'appareil.

Appuyez sur la touche de réinitialisation à l'aide d'un objet pointu comme un stylo à bille, etc.

Lecture d'un CD

- Allumez le syntoniseur FM de votre autoradio.
- Accordez la fréquence de transmission* sélectionnée au moyen du syntoniseur FM de votre autoradio.
 - * La fréquence de l'appareil est réglée par défaut sur 88,3 MHz.
 - Vous pouvez modifier la fréquence. (Voir "Changement de la fréquence de transmission", ci-dessous.)
- Appuyez sur **▶||**.
La lecture du CD démarre.
- Ajustez le volume avec la commande de volume de votre autoradio.
Toutes les plages sont reproduites à partir du début.

Pour arrêter la lecture d'un CD

Appuyez sur **(OFF)**.

Remarques

- Lorsque vous arrêtez la lecture d'un CD, il se peut que vous entendiez des parasites dans les haut-parleurs. Pour éviter ce phénomène, baissez le volume avant d'arrêter la lecture du CD.
- Si vous coupez le contact de votre voiture sans avoir arrêté la lecture du CD, il reprendra automatiquement la lecture du CD à l'endroit où vous l'avez arrêté lorsque vous rétablirez le contact.

Ecouter la radio ou une cassette

Arrêtez la lecture du CD avant d'écouter la radio ou une cassette.

Remarque

Si vous n'arrêtez pas la lecture du CD, des interférences risquent de se produire avec la réception radio.

Lecture des plages dans un ordre quelconque

— Lecture aléatoire

Vous pouvez sélectionner:

- SHUF 1 pour lire les plages du disque en cours dans un ordre aléatoire.
- SHUF 2 pour lire tous les disques dans un ordre aléatoire.

Appuyez plusieurs fois sur **(SHUF/REP)** jusqu'à ce que le réglage souhaité apparaisse (SHUF1 ou SHUF2).

La lecture aléatoire commence dans les cinq secondes qui suivent.

A chaque pression sur **(SHUF/REP)**, l'affichage change de la façon suivante:

→ SHUF 1 → SHUF 2 → REP 1* → REP 2* →

Annulation (SHUF hors service) ←

* Ces indications n'apparaissent pas lors de l'utilisation de la télécommande sans fil.

Pour revenir au mode de lecture normale, appuyez plusieurs fois sur **(SHUF/REP)** jusqu'à ce que "SHUF" ou "REP" disparaisse.

Utilisation de la télécommande sans fil

Appuyez plusieurs fois sur **(SHUF)** jusqu'à ce que le réglage désiré apparaisse.

Répétition de plages

— Lecture répétée

Vous pouvez sélectionner:

- REP 1 pour répéter une plage.
- REP 2 pour répéter tout un disque.

Appuyez plusieurs fois sur **(SHUF/REP)** jusqu'à ce que le réglage souhaité apparaisse (REP1 ou REP2). La lecture répétée commence dans les cinq secondes qui suivent.

A chaque pression sur **(SHUF/REP)**, l'affichage change de la façon suivante:

→ SHUF 1* → SHUF 2* → REP 1 → REP 2 →

Annulation (REP hors service) ←

* Ces indications n'apparaissent pas lors de l'utilisation de la télécommande sans fil.

Pour revenir au mode de lecture normale, appuyez plusieurs fois sur **(SHUF/REP)** jusqu'à ce que "REP" ou "SHUF" disparaisse.

Utilisation de la télécommande sans fil

Appuyez plusieurs fois sur **(REP)** jusqu'à ce que le réglage désiré apparaisse.

Identification d'un CD - Mémo de disque (changeur CD avec fonction de fichier personnalisé)

Vous pouvez identifier chaque disque au moyen d'une étiquette personnalisée. Utilisez la télécommande sans fil pour entrer et supprimer les caractères.


- Appuyez sur **(DSPL/EDIT)** pendant deux secondes jusqu'à ce que le premier caractère se mette à clignoter.



- Introduisez les caractères.

Appuyez sur **NAME** (◀) ou (▶) pour sélectionner les caractères de votre choix.

(A → B → C → ... Z → 0 → 1 → 2 → ... 9 → + → - → * → / → \ → > → < → ...)



Appuyez sur **NAME** (▶) pour afficher les caractères disponibles. Si vous appuyez sur **NAME** (◀), les caractères apparaissent dans l'ordre inverse. Si vous souhaitez introduire un espace blanc après un caractère, sélectionnez " " (trait de soulignement).

Méthode alternative pour supprimer un titre
Vous pouvez supprimer un titre en sélectionnant huit " " (trait de soulignement).

- Appuyez sur **(ENTER/DELETE)** après avoir localisé le caractère de votre choix. Le caractère suivant se met à clignoter.



- Répétez les étapes ① et ② pour introduire le titre dans son ensemble. Vous pouvez entrer jusqu'à huit caractères par disque.

- Pour revenir en mode de lecture CD normale, appuyez sur **(DSPL/EDIT)** pendant deux secondes.

Affichage du mémo de disque

Appuyez sur **(DSPL/SCRL)** en cours de la lecture CD.



Chaque fois que vous appuyez sur **(DSPL/SCRL)** en cours de lecture CD, l'affichage change comme suit:

→ Temps de lecture écoulé → Nom du disque →

Nom de la plage ←

Utilisation de la télécommande sans fil

Appuyez sur **(DSPL/EDIT)** pour modifier l'affichage.

Remarques

- Si un disque n'a pas encore reçu d'étiquette d'identification, "*****" ou "NO NAME" apparaîtront dans la fenêtre d'affichage.
- Les informations CD TEXT apparaissent uniquement lorsqu'un disque CD TEXT est reproduit.
- Si vous utilisez des étiquettes personnalisées, elles auront toujours priorité sur les informations CD TEXT d'origine lorsque de telles informations sont affichées.
- "**WAIT**" apparaît dans la fenêtre d'affichage tandis que le système lit les données.
- Le système affiche les informations CD TEXT par des lettres alphabétiques, des numéros et des symboles. (Les caractères en minuscule contenus sur un disque CD TEXT sont automatiquement converties en majuscule.)

Suppression du mémo de disque

- Démarrez la lecture du CD et appuyez ensuite sur **(DSPL/EDIT)** pendant deux secondes.
- Appuyez deux secondes sur **(ENTER/DELETE)** jusqu'à ce que l'indication DISC NAME clignote
- Appuyez sur **NAME** (◀) ou (▶) pour sélectionner le titre que vous désirez supprimer.
- Appuyez sur **(ENTER/DELETE)** pour faire clignoter l'indication DISC NAME et le nom du disque.
- Appuyez de nouveau sur **(ENTER/DELETE)**. Le titre est supprimé. Répétez les étapes 2 à 4 si nécessaire.
- Appuyez sur **(ENTER/DELETE)** pendant deux secondes. L'appareil revient au mode de lecture normale.

Changement de la fréquence de transmission

Comme cet appareil traite le son de lecture CD via un syntoniseur FM, il se peut qu'il y ait des interférences durant la lecture du CD. En pareil cas, changez la fréquence du signal RF modulé transmis par l'appareil. Le réglage initial est de 88,3 MHz.

- Appuyez sur **(SHUF/REP)** pendant deux secondes jusqu'à ce que la fréquence apparaisse.

- Press (DISC+) or (DISC-) repeatedly to select the frequency.
Each time you press (DISC+) or (DISC-), the frequency change as follows:
(DISC-): 88.3 MHz → 89.9 MHz → 89.7 MHz → 89.5 MHz → 89.3 MHz → 89.1 MHz → 88.9 MHz → 88.7 MHz → 88.5 MHz →
(DISC+): 88.3 MHz → 88.5 MHz → 88.7 MHz → 88.9 MHz → 89.1 MHz → 89.3 MHz → 89.5 MHz → 89.7 MHz → 89.9 MHz →
- Press (SHUFF/REP) for two seconds.

Using on the wireless remote

- Press (SHUF) for two seconds until frequency appears.
- Press (DISC+) or (DISC-) repeatedly to select the frequency.
- Press (SHUF) for two seconds.

Notes

- When you change the transmitting frequency on the unit, be sure to tune your FM tuner to the newly selected one.
- Press ►|| on the wired remote before changing the frequency if the power to the unit is turned off.

Changing the output level

You can select the output level from the unit. Normally the unit is used at the initial output level; change the level if necessary.

- Press (SHUFF/REP) for two seconds.
- Press (SHUFF/REP) momentarily.
- Press (DISC-) or (DISC-) repeatedly to select the output level.
To decrease the output level
(DISC-): LEVEL 1
To increase the output level
(DISC+): LEVEL 5
- Press (SHUFF/REP) for two seconds.

Using on the wireless remote

- Press (SHUF) for two seconds.
- Press (SHUF) again momentarily.
- Press (DISC-) or (DISC-) to select the output level.
- Press (SHUF) for two seconds.

Note

When you select level 4 or 5, the CD playback sound may be distorted or you may hear some noise. In such a case, select a lower output level on the unit and turn down the overall volume on your car audio.

- Appuyez plusieurs fois sur (DISC+) ou (DISC-) pour sélectionner la fréquence.
Chaque fois que vous appuyez sur (DISC+) ou (DISC-), les fréquences changent comme suit:
(DISC-): 88.3 MHz → 89.9 MHz → 89.7 MHz → 89.5 MHz → 89.3 MHz → 89.1 MHz → 88.9 MHz → 88.7 MHz → 88.5 MHz →
(DISC+): 88.3 MHz → 88.5 MHz → 88.7 MHz → 88.9 MHz → 89.1 MHz → 89.3 MHz → 89.5 MHz → 89.7 MHz → 89.9 MHz →
- Appuyez sur (SHUFF/REP) pendant deux secondes.

Utilisation de la télécommande sans fil

- Appuyez sur (SHUF) pendant deux secondes jusqu'à ce que la fréquence apparaisse.
- Appuyez sur (DISC+) ou (DISC-) pour sélectionner la fréquence.
- Appuyez sur (SHUF) pendant deux secondes.

Remarques

- Si vous changez la fréquence de transmission de l'appareil, n'oubliez pas de syntoniser votre syntoniseur FM sur la nouvelle fréquence sélectionnée.
- Appuyez sur la touche ►|| de la télécommande filaire avant de changer la fréquence si l'appareil n'est pas sous tension.

Changement du niveau de sortie

Vous pouvez sélectionner le niveau de sortie de l'appareil. En principe, l'appareil est utilisé au niveau de sortie initial ; changez le niveau si nécessaire.

- Appuyez sur (SHUFF/REP) pendant deux secondes.
- Appuyez brièvement sur (SHUFF/REP).
LEVEL 3 Réglage initial
- Appuyez plusieurs fois sur (DISC+) ou (DISC-) pour sélectionner le niveau de sortie.
Pour diminuer le niveau de sortie
(DISC-): LEVEL 1
Pour augmenter le niveau de sortie
(DISC+): LEVEL 5
- Appuyez sur (SHUFF/REP) pendant deux secondes.

Utilisation de la télécommande sans fil

- Appuyez sur (SHUF) pendant deux secondes.
- Appuyez de nouveau brièvement sur (SHUF).
- Appuyez sur (DISC-) ou (DISC-) pour sélectionner le niveau de sortie.
- Appuyez sur (SHUF) pendant deux secondes.

Remarque

Si vous sélectionnez le niveau 4 ou 5, le son de lecture CD peut comporter des distorsions ou des parasites. En pareil cas, sélectionnez un niveau de sortie inférieure et baissez le volume de votre autoradio.


Installation

How to install the CD changer

- When you install the CD changer, be careful not to damage wiring or equipment on the other side of the mounting surface.
- The brackets ❶ provide two positions for mounting, high and low. Use the appropriate screw holes according to your preference.


Horizontal installation

1



Align with the marked position.
Alignez sur le repère.

2

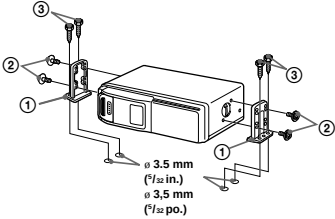


Vertical installation

1




Align with the marked position.
Alignez sur le repère.

2

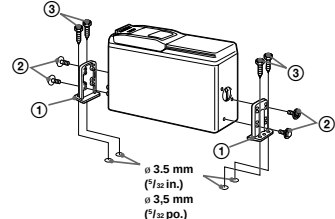


Suspended installation

1

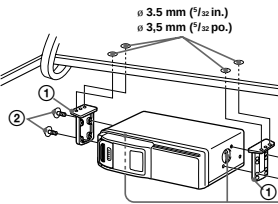

Align with the marked position.
Alignez sur le repère.

2

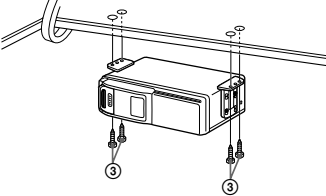


- When the unit is to be installed under the rear tray or in the trunk, observe the following.
- Choose the mounting location carefully so that the unit can be installed horizontally.
 - Make sure the unit does not hinder the action of the torsion bar spring, hinge, etc. of the deck lid.

- Si vous comptez installer le changeur de CD sous la plage arrière ou dans le coffre, prenez les précautions suivantes.
- Choisissez soigneusement l'emplacement pour que le changeur soit à l'horizontale.
 - Assurez-vous que l'appareil n'entrave pas l'action du ressort à barre de torsion, des charnières, etc., du couvercle de la malle.


Inclined installation

After installing the unit, align the dials with one of the marks so the arrow comes as close to a vertical position as possible.

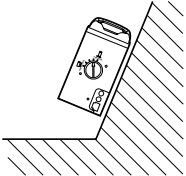

Note
Be sure to align the left and right dials with the same mark.


Après avoir installé l'appareil, alignez les disques sur l'un des repères afin que la flèche soit aussi proche que possible de la position verticale.

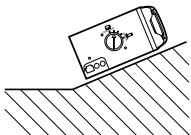

Remarque
Veillez à aligner les disques gauche et droite sur le même repère.

Installing the wired remote

Use the supplied double-sided adhesive tape ❹, and mount the wired remote in a suitable location where it will not interfere with your driving.



The back of the wired remote
Dos de la télécommande à fil


Connections

Caution

- This unit is designed for negative ground 12 V DC operation only.
- Before making connections, disconnect the earth terminal of the car battery to avoid short circuits.
- Connect the **yellow** and **red** power input leads only after all other leads have been connected.
- Be sure to connect the red power input lead to the positive 12 V power terminal which is powered when the ignition switch is in the accessory position.
- **Run all earth wires to a common earth point.**
- **When finished making all the connections, press the reset button of the CD changer.** (See "Reset button" below.)
- The use of optical instruments with this product will increase eye hazard.

Reset button

After the installation and connections are completed, after the batteries have been changed, be sure to press the reset button with a ball-point pen, etc.



Connexions

Précautions


- Cet appareil est uniquement conçu pour fonctionner sur 12 V CC avec une masse négative.
- Avant d'effectuer les raccordements, débranchez la borne de terre de la batterie du véhicule pour éviter tout court-circuit.
- Branchez les fils d'entrée d'alimentation **jaune** et **rouge** seulement après avoir terminé tous les autres branchements.
- Veillez à raccorder le fil rouge d'entrée d'alimentation à la borne positive de 12 V qui est alimentée quand la clé de contact est sur la position accessoire.
- **Rassemblez tous les fils de terre en un point de masse commun.**
- **Lorsque vous avez terminé toutes les connexions, appuyez sur la touche de réinitialisation du changeur de CD.** (Voir "Touche de réinitialisation" ci-après.)
- L'utilisation d'instruments optiques avec cet appareil accroît les risques de blessures aux yeux.

Touche de réinitialisation

Après avoir terminé l'installation et les connexions ou remplacé les piles, n'oubliez pas d'appuyer sur la touche de réinitialisation à l'aide d'un stylo à bille, etc.

Connection diagram

Schéma de connexion

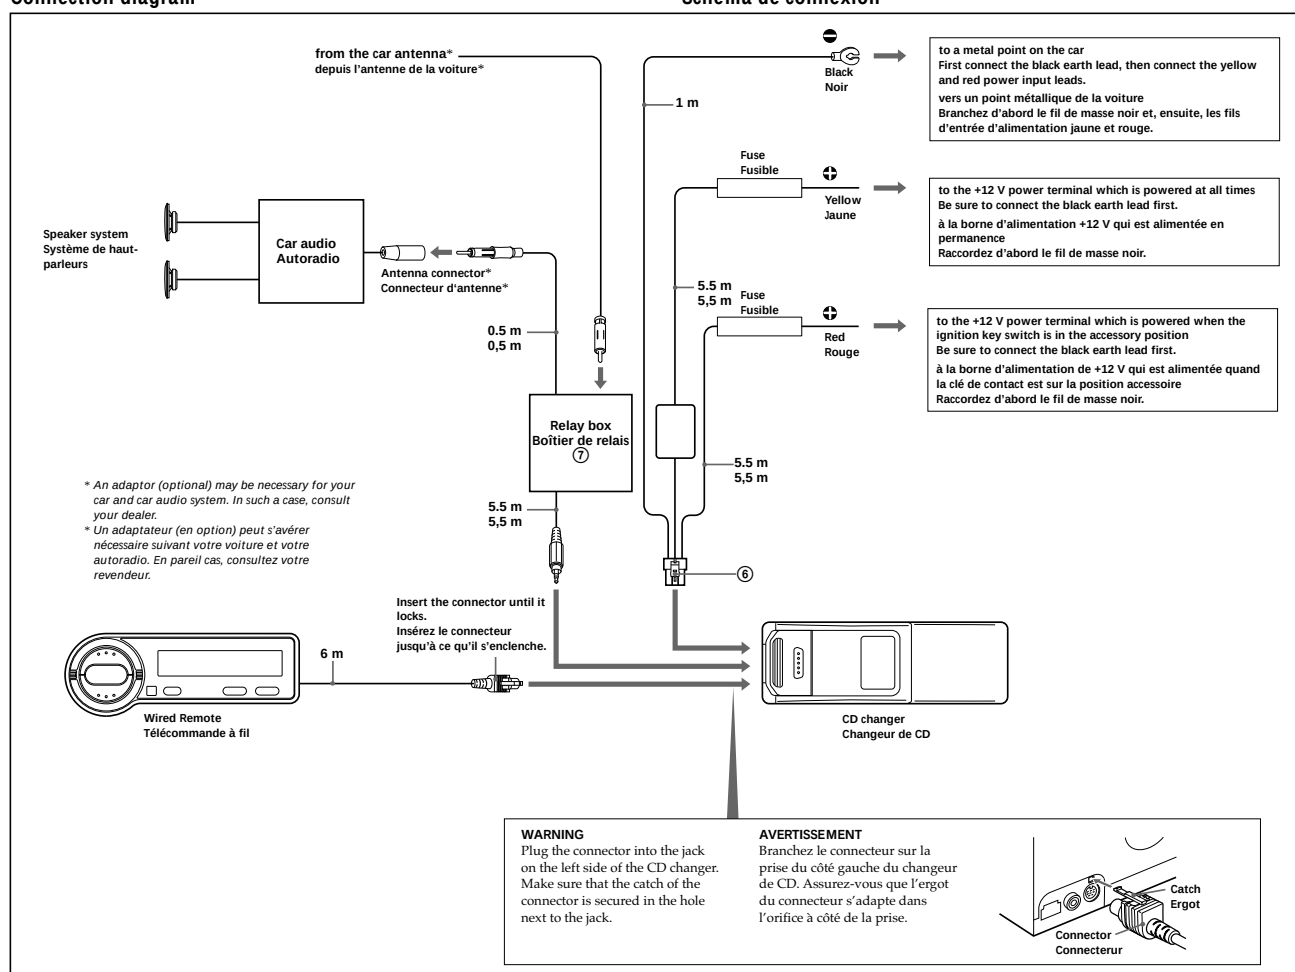

Fuse replacement

If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction.

Warning

Use a fuse with the specified amperage rating. Use of a higher amperage fuse may cause serious damage.

Remplacement du fusible

Si le fusible saute, vérifiez la connexion d'alimentation et remplacez-le. Si le fusible saute à nouveau quand vous venez de le remplacer, il s'agit peut être d'un mauvais fonctionnement interne.

Avvertissement


Utilisez un fusible de l'ampérage spécifié. L'utilisation d'un fusible d'ampérage supérieur peut causer de sérieux dommages.



Installing the wireless remote (CDX-530RF/535RF)

Use the supplied velcro tapes ⑤, and mount the wireless remote in a suitable location where it will not interfere with your driving.

Installation de la télécommande sans fil (CDX-530RF/535RF)

Utilisez les bandes velcro fournies ⑤ pour installer la télécommande sans fil dans un endroit qui ne risque pas de gêner la conduite.

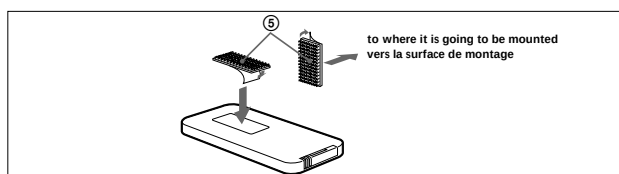

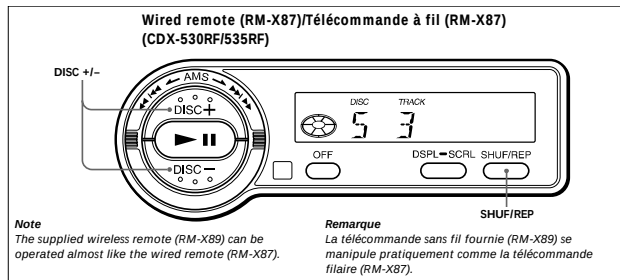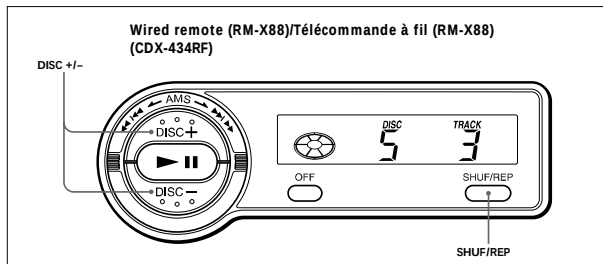

Changing the transmitting frequency

Because this unit processes CD playback sound through an FM tuner, there may be interference noise during CD playback. In such a case, change the frequency of the modulated RF signal transmitted from the unit. The initial setting is 88.3 MHz.

- Press **(SHUF/REP)** for two seconds until frequency appears.
- Press **(DISC+)** or **(DISC-)** repeatedly to select the frequency.
Each time you press **(DISC+)** or **(DISC-)**, the frequency changes as follows:
(DISC-) : 88.3 MHz → 89.9 MHz → 89.7 MHz → 89.5 MHz → 89.3 MHz → 89.1 MHz → 88.9 MHz → 88.7 MHz → 88.5 MHz → 88.3 MHz
(DISC+) : 88.3 MHz → 88.5 MHz → 88.7 MHz → 88.9 MHz → 89.1 MHz → 89.3 MHz → 89.5 MHz → 89.7 MHz → 89.9 MHz → 88.3 MHz
- Press **(SHUF/REP)** for two seconds.

Notes

- When you change the transmitting frequency on the unit, be sure to tune your FM tuner to the newly selected one.
- Press **▶II** on the wired remote before changing the frequency if the power to the unit is turned off.

Changement de la fréquence de transmission

Comme cet appareil traite le son de lecture CD via un syntoniseur FM, il se peut qu'il y ait des interférences durant la lecture du CD. En pareil cas, changez la fréquence du signal RF modulé transmis par l'appareil. Le réglage initial est de 88,3 MHz.

- Appuyez sur **(SHUF/REP)** pendant deux secondes jusqu'à ce que la fréquence apparaisse.
- Appuyez plusieurs fois de suite sur **(DISC+)** ou **(DISC-)** pour sélectionner la fréquence.
Chaque fois que vous appuyez sur **(DISC+)** ou **(DISC-)**, la fréquence change dans l'ordre suivant :
(DISC-) : 88.3 MHz → 89.9 MHz → 89.7 MHz → 89.5 MHz → 89.3 MHz → 89.1 MHz → 88.9 MHz → 88.7 MHz → 88.5 MHz → 88.3 MHz
(DISC+) : 88.3 MHz → 88.5 MHz → 88.7 MHz → 88.9 MHz → 89.1 MHz → 89.3 MHz → 89.5 MHz → 89.7 MHz → 89.9 MHz → 88.3 MHz
- Appuyez sur **(SHUF/REP)** pendant deux secondes.

Remarques

- Si vous changez la fréquence de transmission de l'appareil, n'oubliez pas de syntoniser votre syntoniseur FM sur la nouvelle fréquence sélectionnée.
- Appuyez sur la touche **▶II** de la télécommande filaire avant de changer la fréquence si l'appareil n'est pas sous tension.

Changing the transmitting frequency

Because this unit processes CD playback sound through an FM tuner, there may be interference noise during CD playback. In such a case, change the frequency of the modulated RF signal transmitted from the unit. The initial setting is 88.3 MHz.

- Press **(SHUF/REP)** for two seconds until frequency appears.
- Press **(DISC+)** or **(DISC-)** repeatedly to select the frequency.
Each time you press **(DISC+)** or **(DISC-)**, the frequencies change as follows:
(DISC-) : 88.3 MHz → 89.9 MHz → 89.7 MHz → 89.5 MHz → 89.3 MHz → 89.1 MHz → 88.9 MHz → 88.7 MHz → 88.5 MHz → 88.3 MHz
(DISC+) : 88.3 MHz → 88.5 MHz → 88.7 MHz → 88.9 MHz → 89.1 MHz → 89.3 MHz → 89.5 MHz → 89.7 MHz → 89.9 MHz → 88.3 MHz
- Press **(SHUF/REP)** for two seconds.

Using on the wireless remote

- Press **(SHUF)** for two seconds until frequency appears.
- Press **(DISC+)** or **(DISC-)** repeatedly to select the frequency.
- Press **(SHUF)** for two seconds.

Notes

- When you change the transmitting frequency on the unit, be sure to tune your FM tuner to the newly selected one.
- Press **▶II** on the wired remote before changing the frequency if the power of the unit is turned off.

Changement de la fréquence de transmission

Comme cet appareil traite le son de lecture CD via un syntoniseur FM, il se peut qu'il y ait des interférences durant la lecture du CD. En pareil cas, changez la fréquence du signal RF modulé transmis par l'appareil. Le réglage initial est de 88,3 MHz.

- Appuyez sur **(SHUF/REP)** pendant deux secondes jusqu'à ce que la fréquence apparaisse.
- Appuyez plusieurs fois de suite sur **(DISC+)** ou **(DISC-)** pour sélectionner la fréquence.
Chaque fois que vous appuyez sur **(DISC+)** ou **(DISC-)**, la fréquence change dans l'ordre suivant :
(DISC-) : 88.3 MHz → 89.9 MHz → 89.7 MHz → 89.5 MHz → 89.3 MHz → 89.1 MHz → 88.9 MHz → 88.7 MHz → 88.5 MHz → 88.3 MHz
(DISC+) : 88.3 MHz → 88.5 MHz → 88.7 MHz → 88.9 MHz → 89.1 MHz → 89.3 MHz → 89.5 MHz → 89.7 MHz → 89.9 MHz → 88.3 MHz
- Appuyez sur **(SHUF/REP)** pendant deux secondes.

Utilisation de la télécommande sans fil

- Appuyez sur **(SHUF)** pendant deux secondes jusqu'à ce que la fréquence apparaisse.
- Appuyez plusieurs fois de suite sur **(DISC+)** ou **(DISC-)** pour sélectionner la fréquence.
- Appuyez sur **(SHUF)** pendant deux secondes.

Remarques

- Si vous changez la fréquence de transmission de l'appareil, n'oubliez pas de syntoniser votre syntoniseur FM sur la nouvelle fréquence sélectionnée.
- Appuyez sur la touche **▶II** de la télécommande filaire avant de changer la fréquence si l'appareil n'est pas sous tension.

Changing the output level

You can select the output level of the unit. Normally the unit is used in the initial output level; change the level if necessary.

- Press **(SHUF/REP)** for two seconds.
- Press **(SHUF/REP)** momentarily.
 Initial setting
- Press **(DISC+)** or **(DISC-)** repeatedly to select the output level.
To decrease the output level
(DISC-) :

To increase the output level
(DISC+) :
- Press **(SHUF/REP)** for two seconds.

Note

When you select level 4 or 5, the CD playback sound may be distorted or you may hear some noise. In such a case, select a lower output level on the unit and turn down the overall volume on your car audio.

Changement du niveau de sortie

Vous pouvez sélectionner le niveau de sortie de l'appareil. En principe, l'appareil est utilisé au niveau de sortie initial ; changez le niveau si nécessaire.

- Appuyez sur **(SHUF/REP)** pendant deux secondes.
- Appuyez brièvement sur **(SHUF/REP)**.
 Réglage initial
- Appuyez plusieurs fois de suite sur **(DISC+)** ou **(DISC-)** pour sélectionner le niveau de sortie.
Pour diminuer le niveau de sortie
(DISC-) :

Pour augmenter le niveau de sortie
(DISC+) :
- Appuyez sur **(SHUF/REP)** pendant deux secondes.

Remarque

Si vous sélectionnez le niveau 4 ou 5, le son de lecture CD peut comporter des distorsions ou des parasites. En pareil cas, sélectionnez un niveau de sortie inférieure et baissez le volume de votre autoradio.

Changing the output level

You can select the output level from the unit. Normally the unit is used at the initial output level; change the level if necessary.

- Press **(SHUF/REP)** for two seconds.
- Press **(SHUF/REP)** momentarily.
 Initial setting
- Press **(DISC+)** or **(DISC-)** repeatedly to select the output level.
To decrease the output level
(DISC-) :

To increase the output level
(DISC+) :
- Press **(SHUF/REP)** for two seconds.

Using on the wireless remote

- Press **(SHUF)** for two seconds.
- Press **(SHUF)** again momentarily.
- Press **(DISC+)** or **(DISC-)** to select the output level.
- Press **(SHUF)** for two seconds.

Note

When you select level 4 or 5, the CD playback sound may be distorted or you may hear some noise. In such a case, select a lower output level on the unit and turn down the overall volume on your car audio.

Changement du niveau de sortie

Vous pouvez sélectionner le niveau de sortie de l'appareil. En principe, l'appareil est utilisé au niveau de sortie initial ; changez le niveau si nécessaire.

- Appuyez sur **(SHUF/REP)** pendant deux secondes.
- Appuyez brièvement sur **(SHUF/REP)**.
 Réglage initial
- Appuyez plusieurs fois de suite sur **(DISC+)** ou **(DISC-)** pour sélectionner le niveau de sortie.
Pour diminuer le niveau de sortie
(DISC-) :

Pour augmenter le niveau de sortie
(DISC+) :
- Appuyez sur **(SHUF/REP)** pendant deux secondes.

Utilisation de la télécommande sans fil

- Appuyez sur **(SHUF)** pendant deux secondes.
- Appuyez de nouveau brièvement sur **(SHUF)**.
- Appuyez sur **(DISC+)** ou **(DISC-)** pour sélectionner le niveau de sortie.
- Appuyez sur **(SHUF)** pendant deux secondes.


Remarque

Si vous sélectionnez le niveau 4 ou 5, le son de lecture CD peut comporter des distorsions ou des parasites. En pareil cas, sélectionnez un niveau de sortie inférieure et baissez le volume de votre autoradio.


SECTION 3 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.


COVER (UPPER T), FRONT PANEL ASS'Y

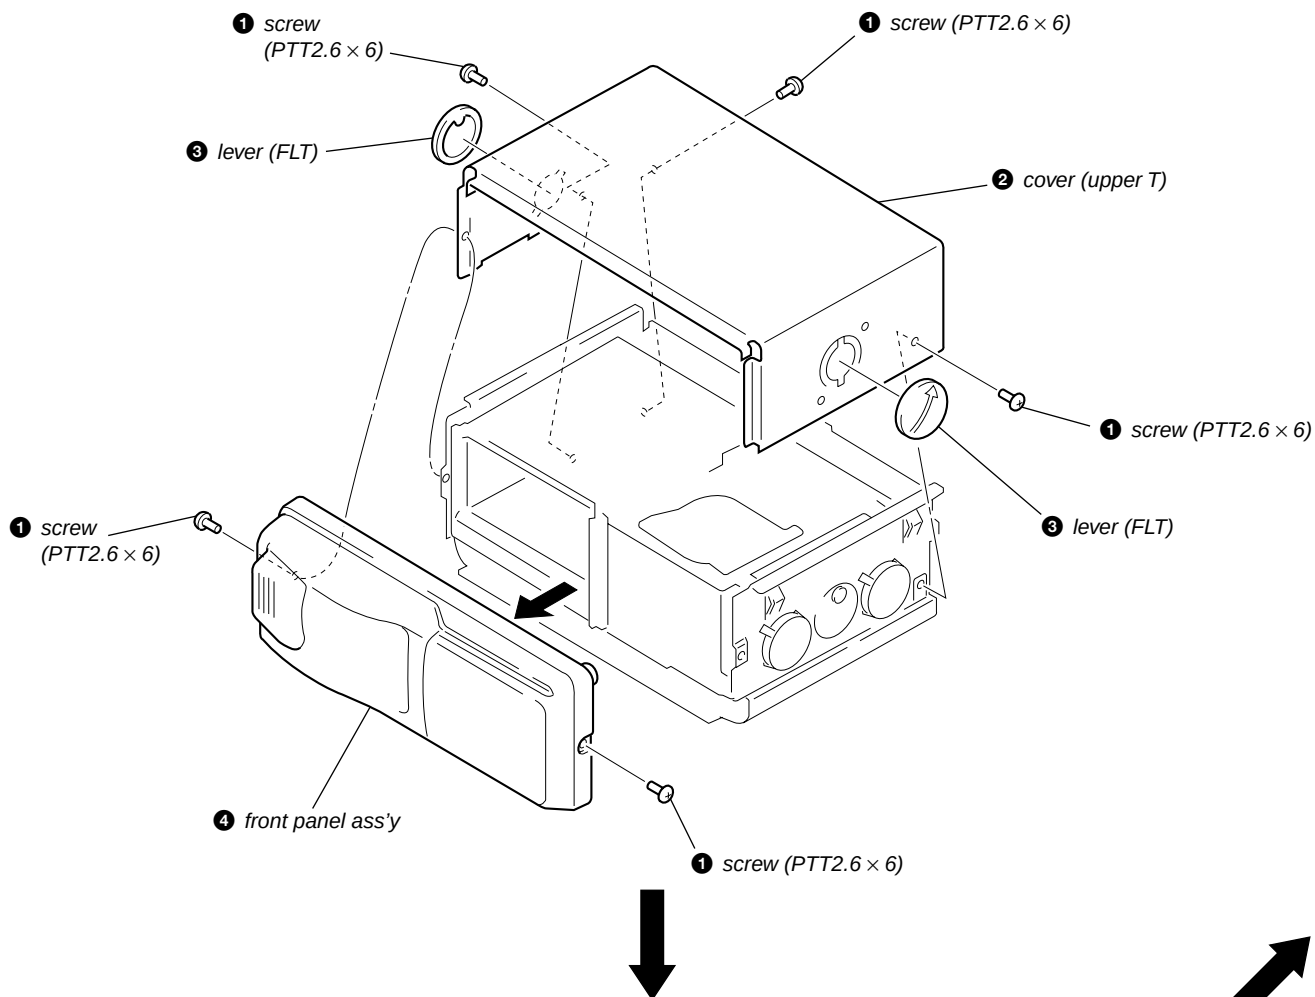


MECHANISM DECK (MG-251A-137)

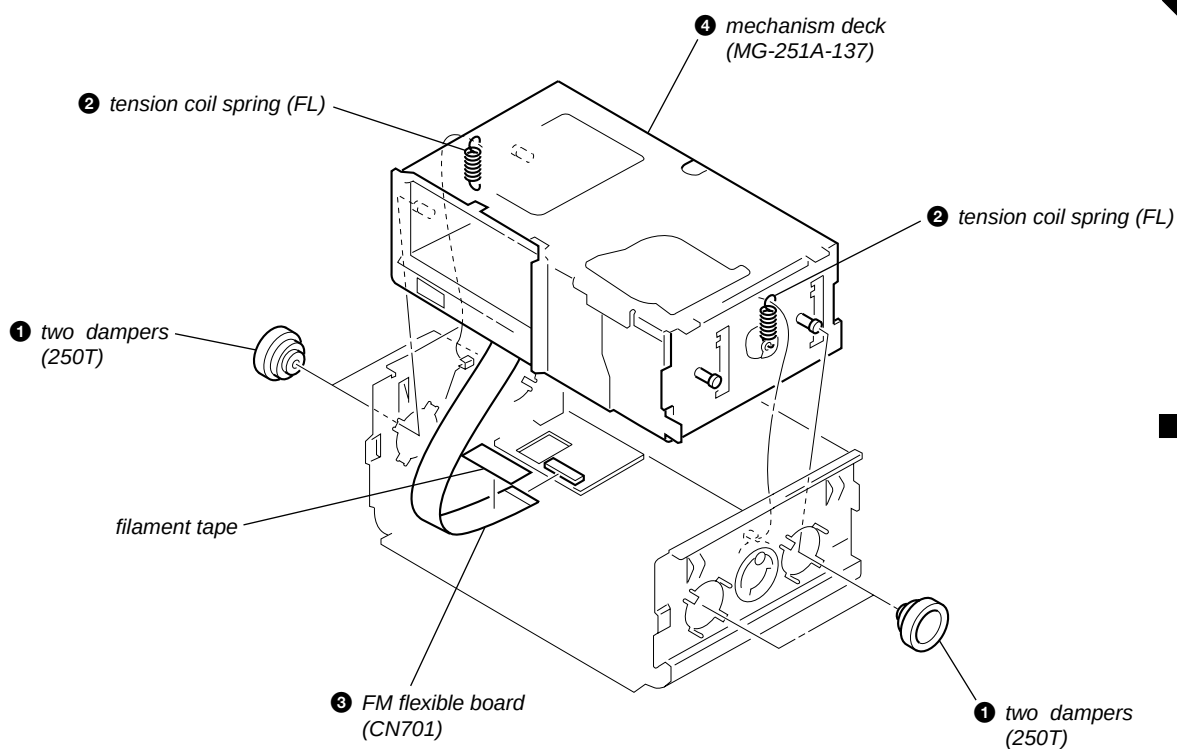


FM BOARD

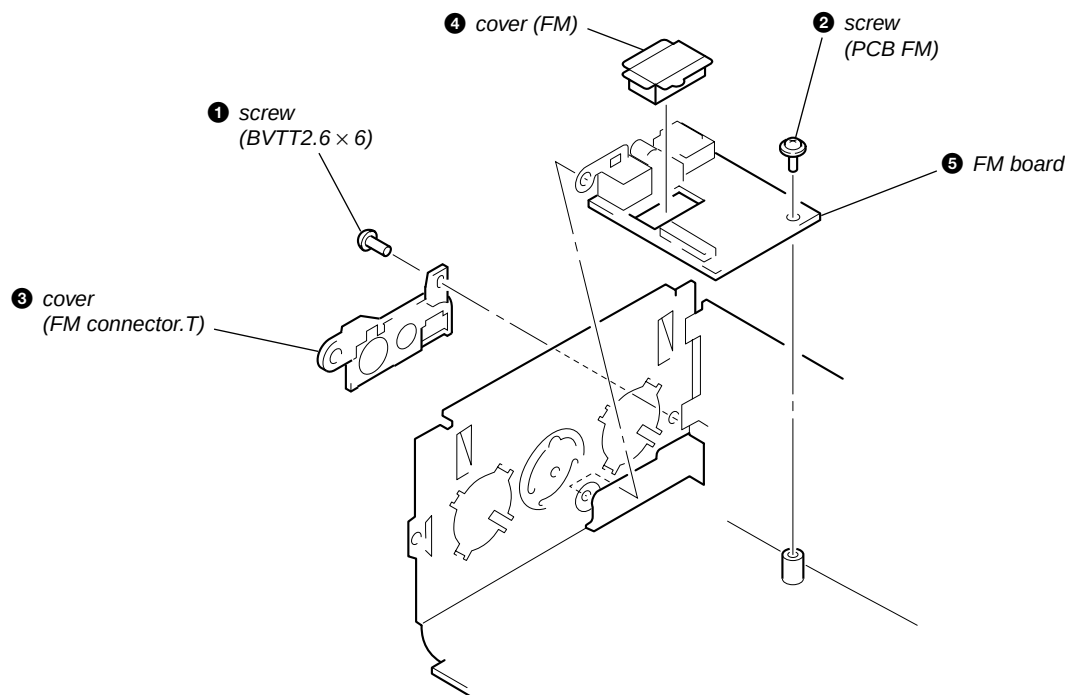


MAIN BOARD, SLIDE VARIABLE RESISTOR (ELEVATOR HEIGHT SENSOR) (RV202)

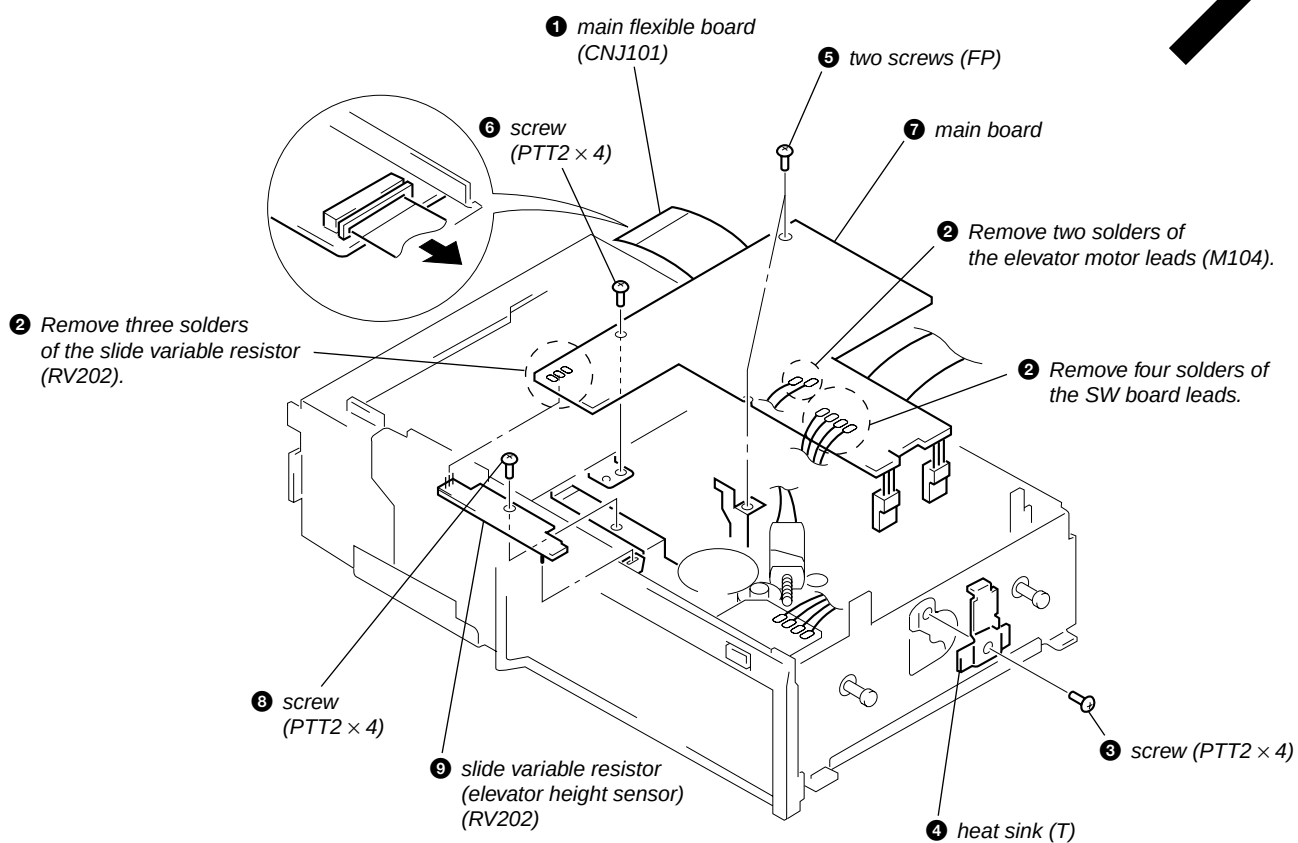


ELJ MOTOR ASS'Y (ELEVATOR) (M104)

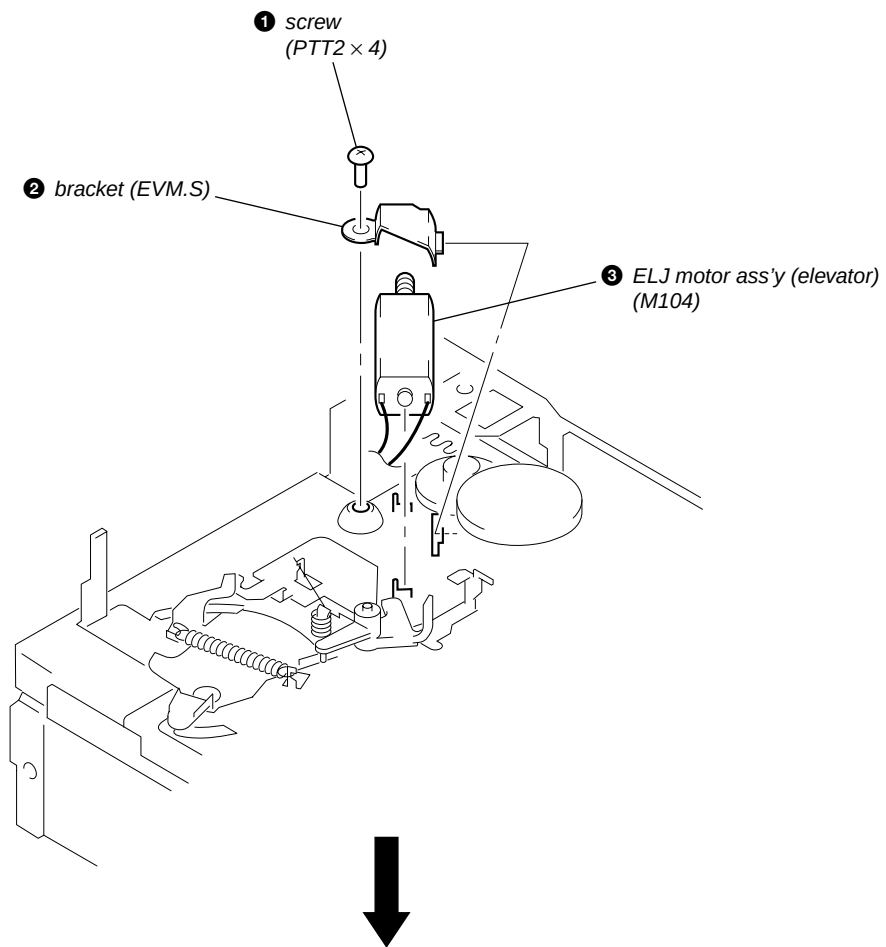


ESCUTCHEON (T)

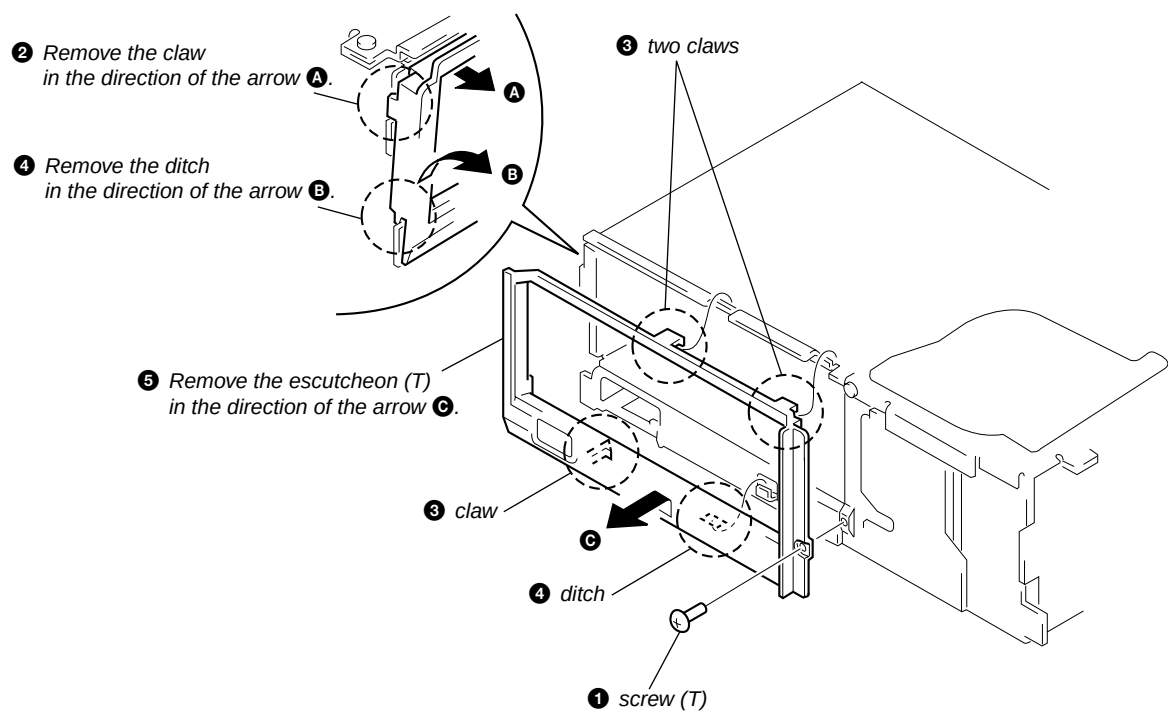


CHASSIS (U.S) SUB ASS'Y

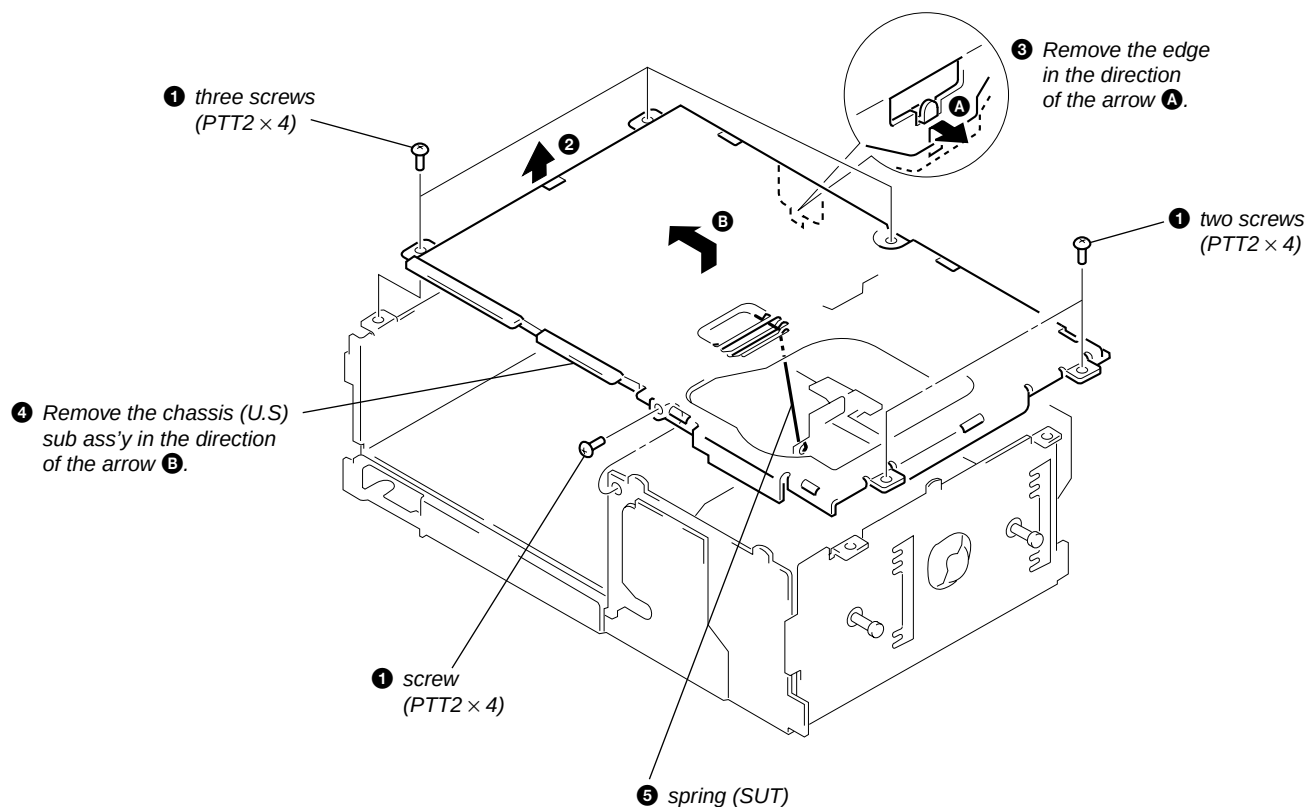


CHASSIS ASS'Y

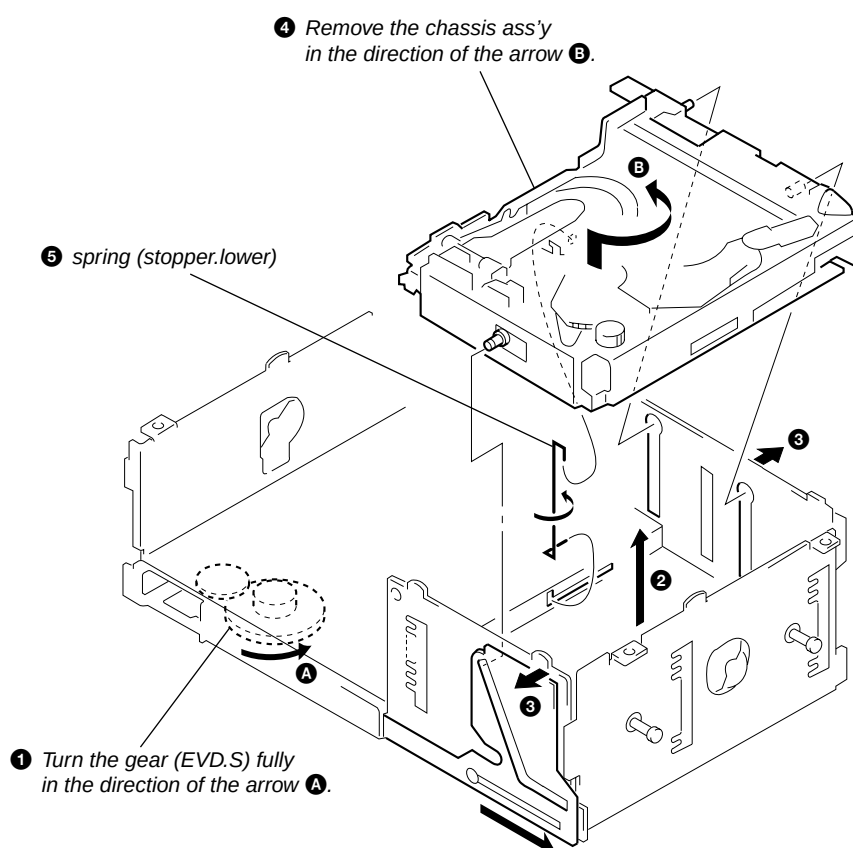


RF BOARD

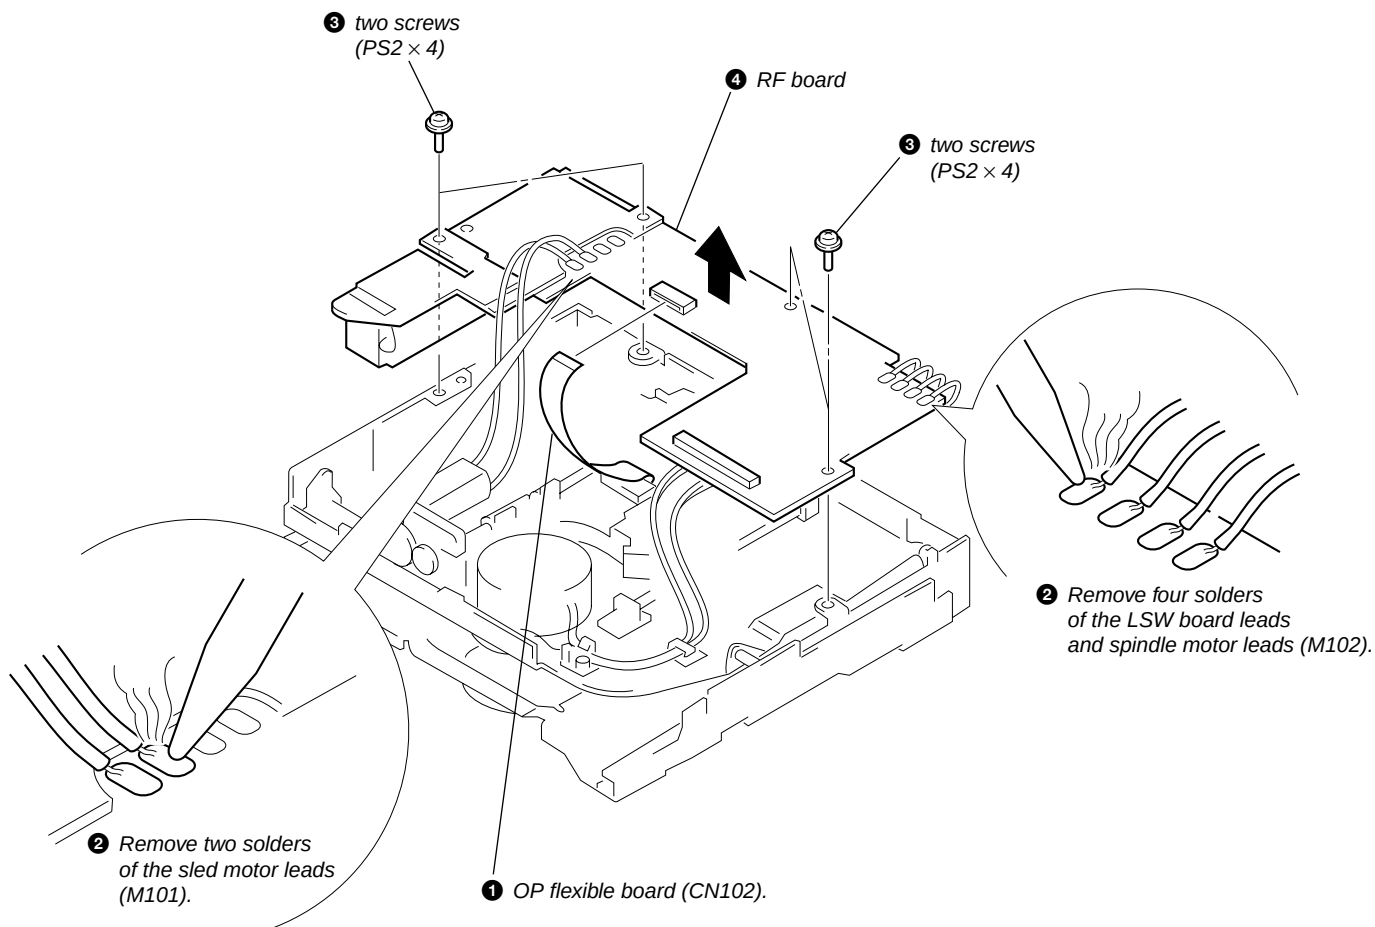


SLED MOTOR ASS'Y (M101), OPTICAL PICK-UP (KSS-720A/K1NP)

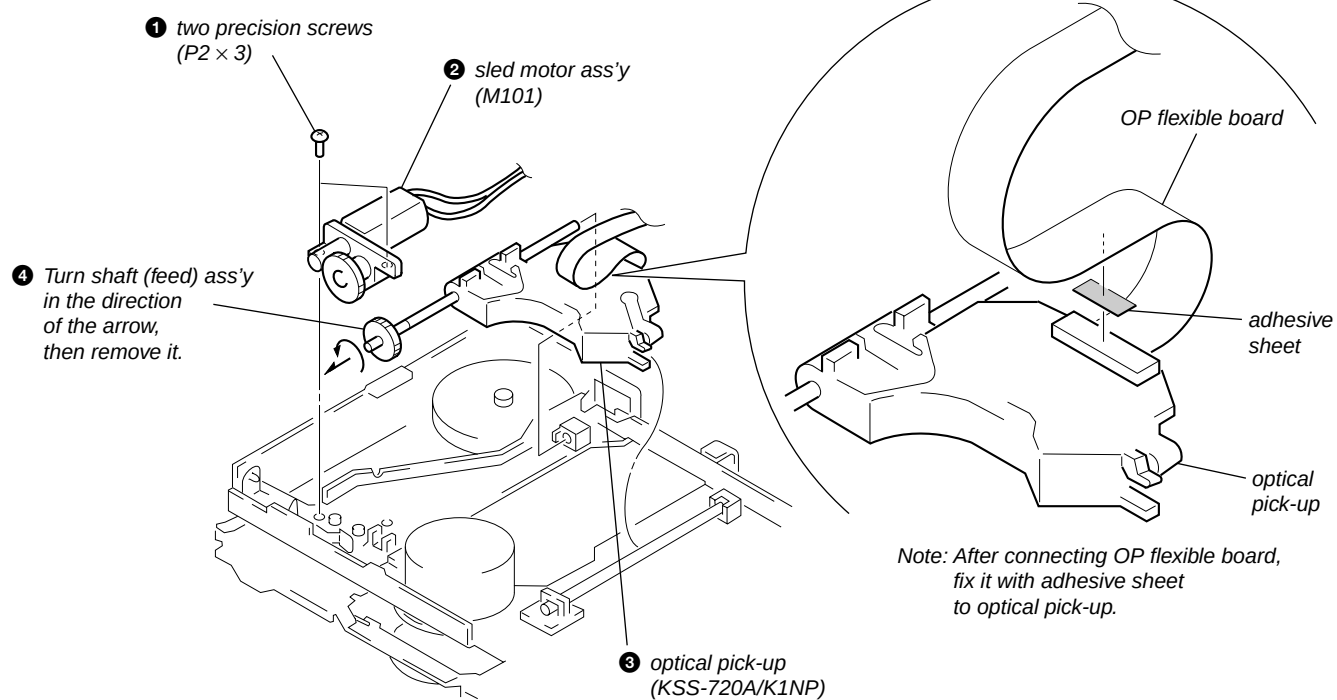

LSW BOARD, SPINDLE MOTOR (S) SUB ASS'Y (M102)

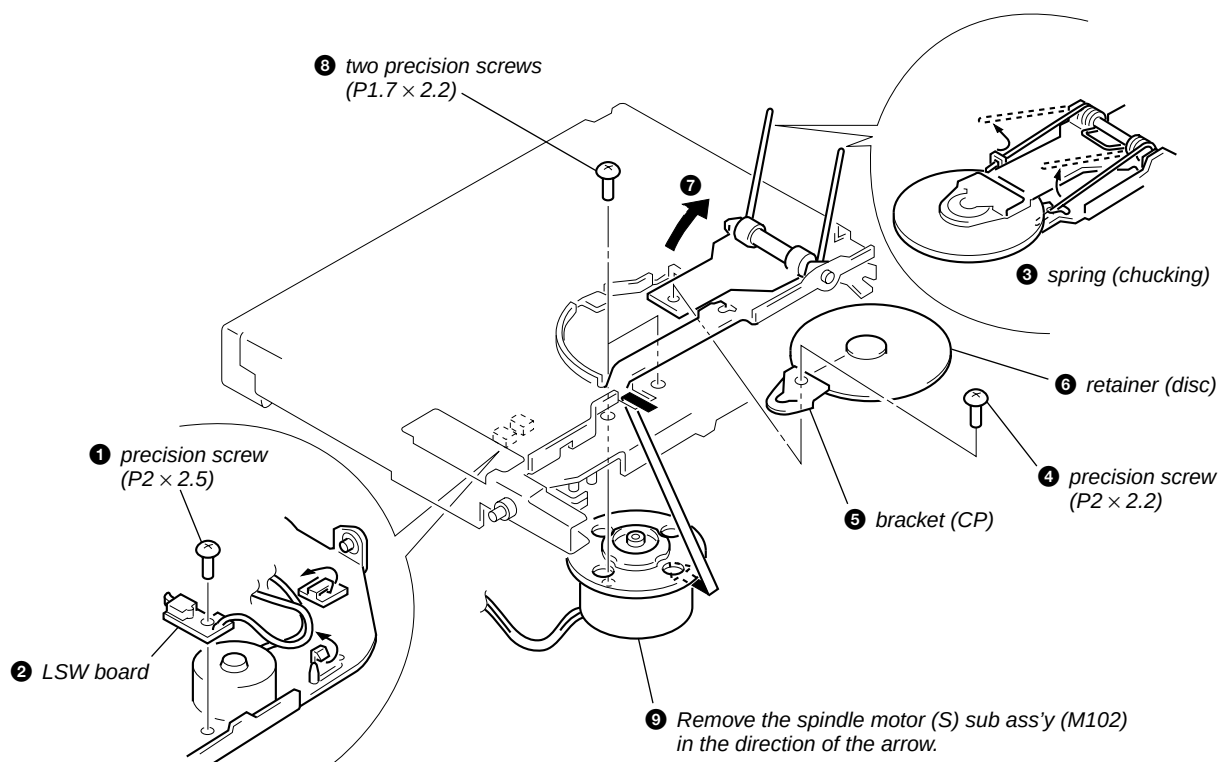


ELJ MOTOR ASS'Y (CHUCKING) (M103)

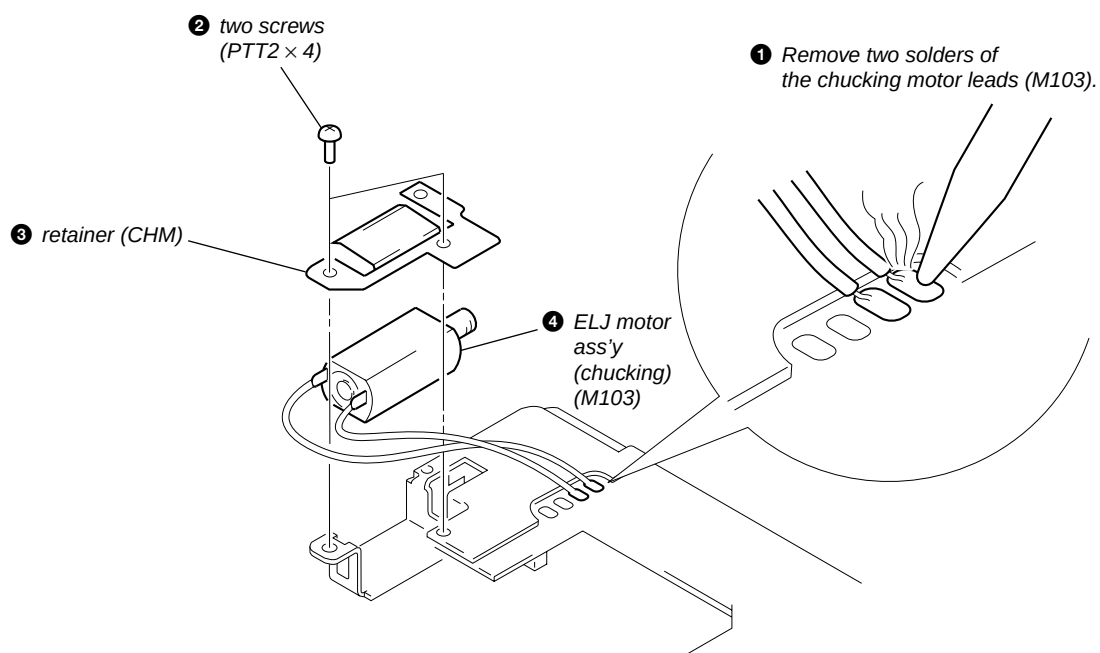


SECTION 4 MECHANISM DECK ASSEMBLY

Note: Follow the assembly procedure in the numerical order given.

OPTICAL PICK-UP COMPLETE ASS'Y

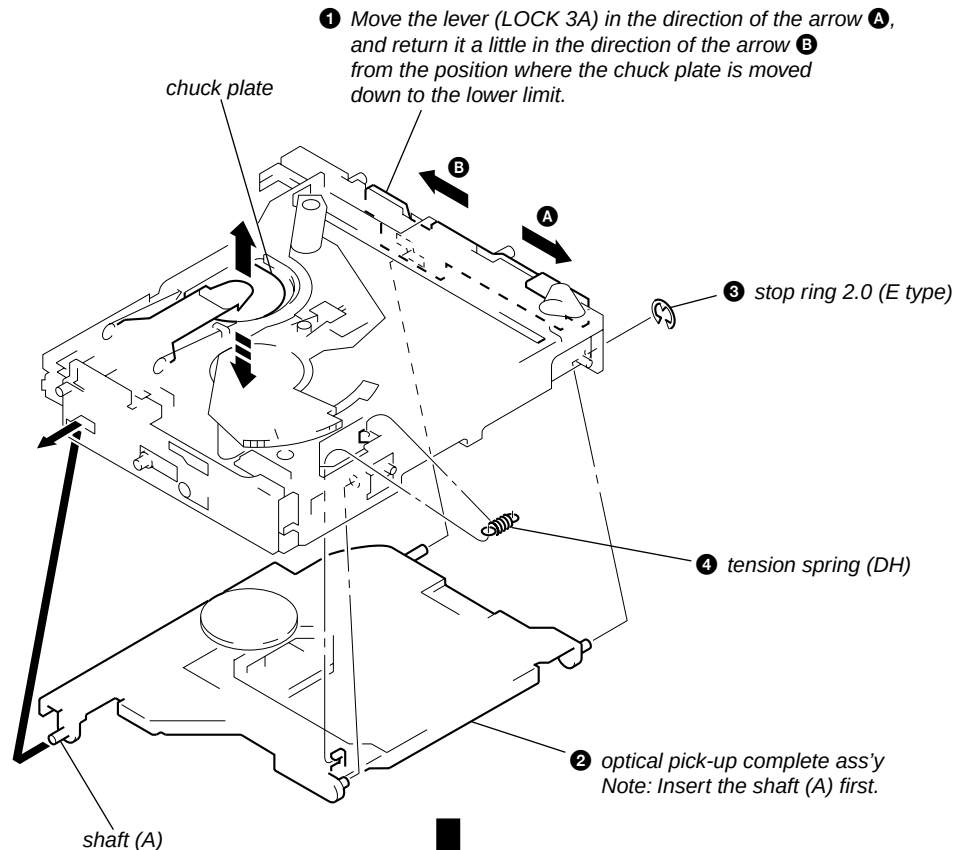


GEAR (LOMINI)/(LOAD 1) ASS'Y

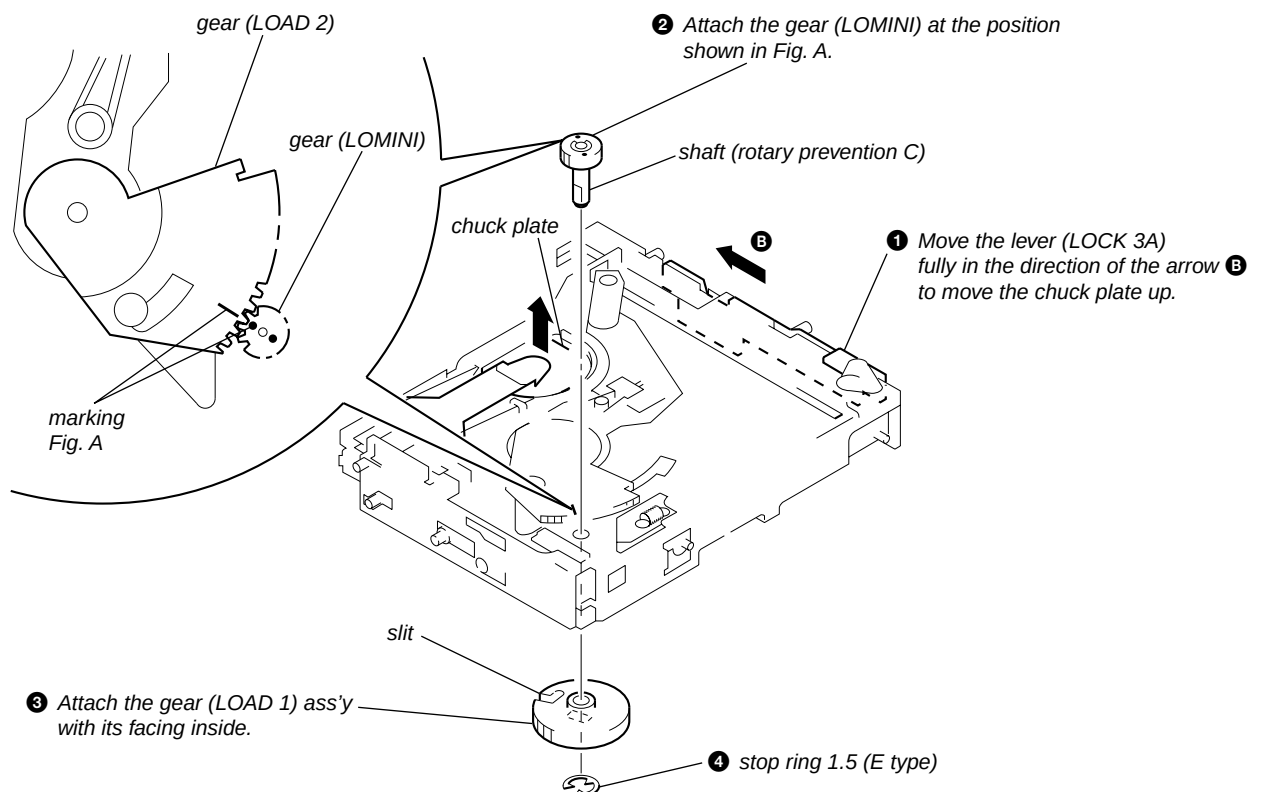

OPERATION CHECK

- ① Confirm that the slider moves in the direction of the arrow **C** to move down the chuck plate if the gear (LOAD 1) is rotated in the direction of the arrow **A** or the chuck plate moves up and the slider moves in the direction of the arrow **D** if the gear is rotated in the direction of the arrow **B**.

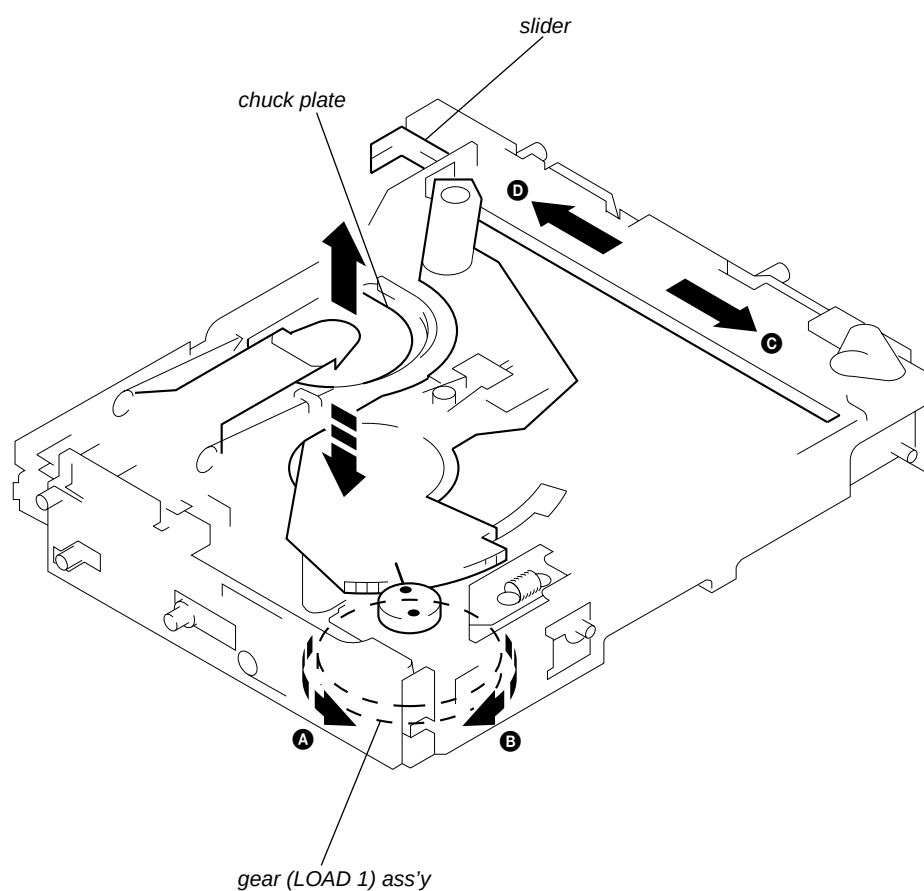


SECTION 5 MECHANICAL ADJUSTMENT

• Elevator Height (Address) Adjustment


Note: This adjustments is necessary when the system controller (IC201), variable resistor (RV201), slider (R), slider (L), or chassis (ELV) was replaced for any repair.

Connection:

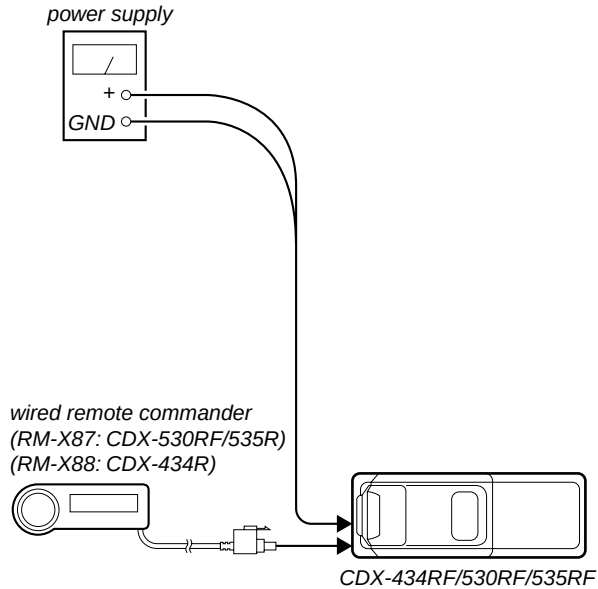

Adjustment Method:

1. Load a disc magazine, and place the set vertically as shown below.
2. Connect the regulated power supply, and turn the power on.
3. Press the DISC button on the wired remote commander (RM-X87/X88) and select DISC 5.
4. At this time, if the elevator shaft does not position between comb teeth A and B at addresses 5 and 6 as shown below, adjust the following.
5. Press repeatedly the DISC + and – buttons on the wired remote commander (RM-X87/X88) so that the elevator shafts moves from address 6 to address 5, or from 5 to 6. At this time, adjust RV201 on the main board so that the elevator shaft positions smoothly between comb teeth A and B.
6. Further, place the set horizontally and make same adjustment as mentioned above.
7. After adjustment at addresses 5 to 6 is finished, check all operations from addresses 1 to 10 with the set placed vertically and horizontally respectively to confirm that the elevator shaft positions in a range between comb teeth A to B.

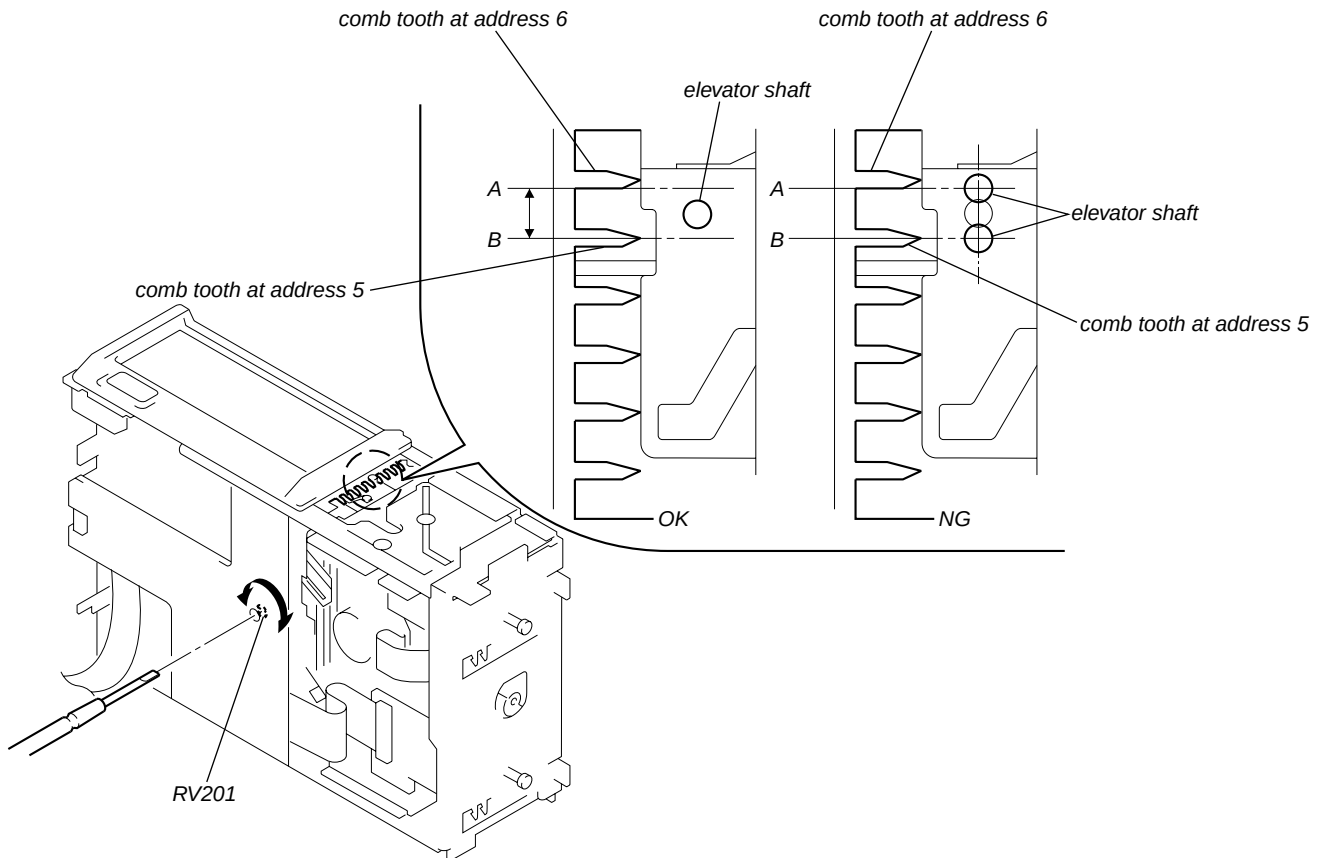


SECTION 6 ELECTRICAL CHECK

Note:

Power supply voltage: DC14.4 V (more than 3 A).

• FOCUS BIAS CHECK

– RF BOARD – (Component Side)

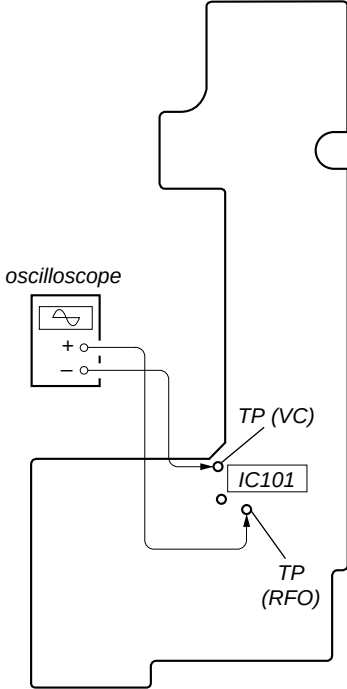


Procedure:

1. Connect the oscilloscope to TP (RFO) and TP (VC) on the RF board.
2. Put the set into play mode by loading the disc.
3. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.

Note:


Clear RF signal waveform means that the shape “◇” can be clearly distinguished at the center of the waveform.

RF signal waveform

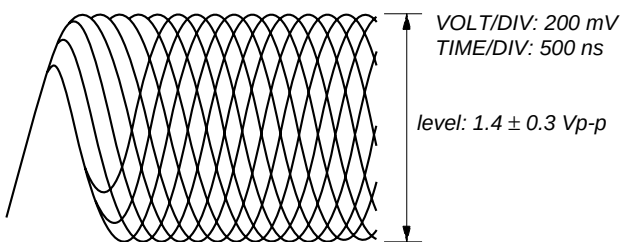

• TRACKING OFFSET CHECK

– RF BOARD – (Component Side)

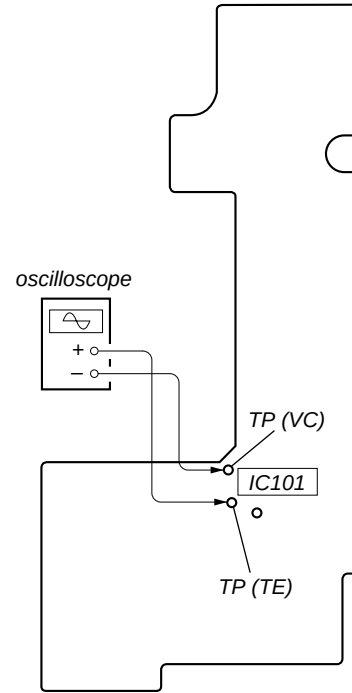


Procedure:

1. Connect the oscilloscope to TP (TE) and TP (VC) on the RF board.
2. Put the set into play mode by loading the disc.
3. Press the **AMS** button, and check the traverse waveform*.
4. Confirm that the oscilloscope waveform is symmetrical on the top and bottom in relation to 0 V dc, and check this level.


* Traverse waveform: This is the tracking error wave form appears when crossing the track.

Traverse waveform

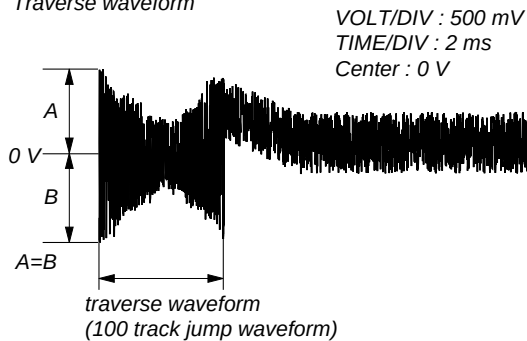


05

7-2. BLOCK DIAGRAM – MAIN Section –

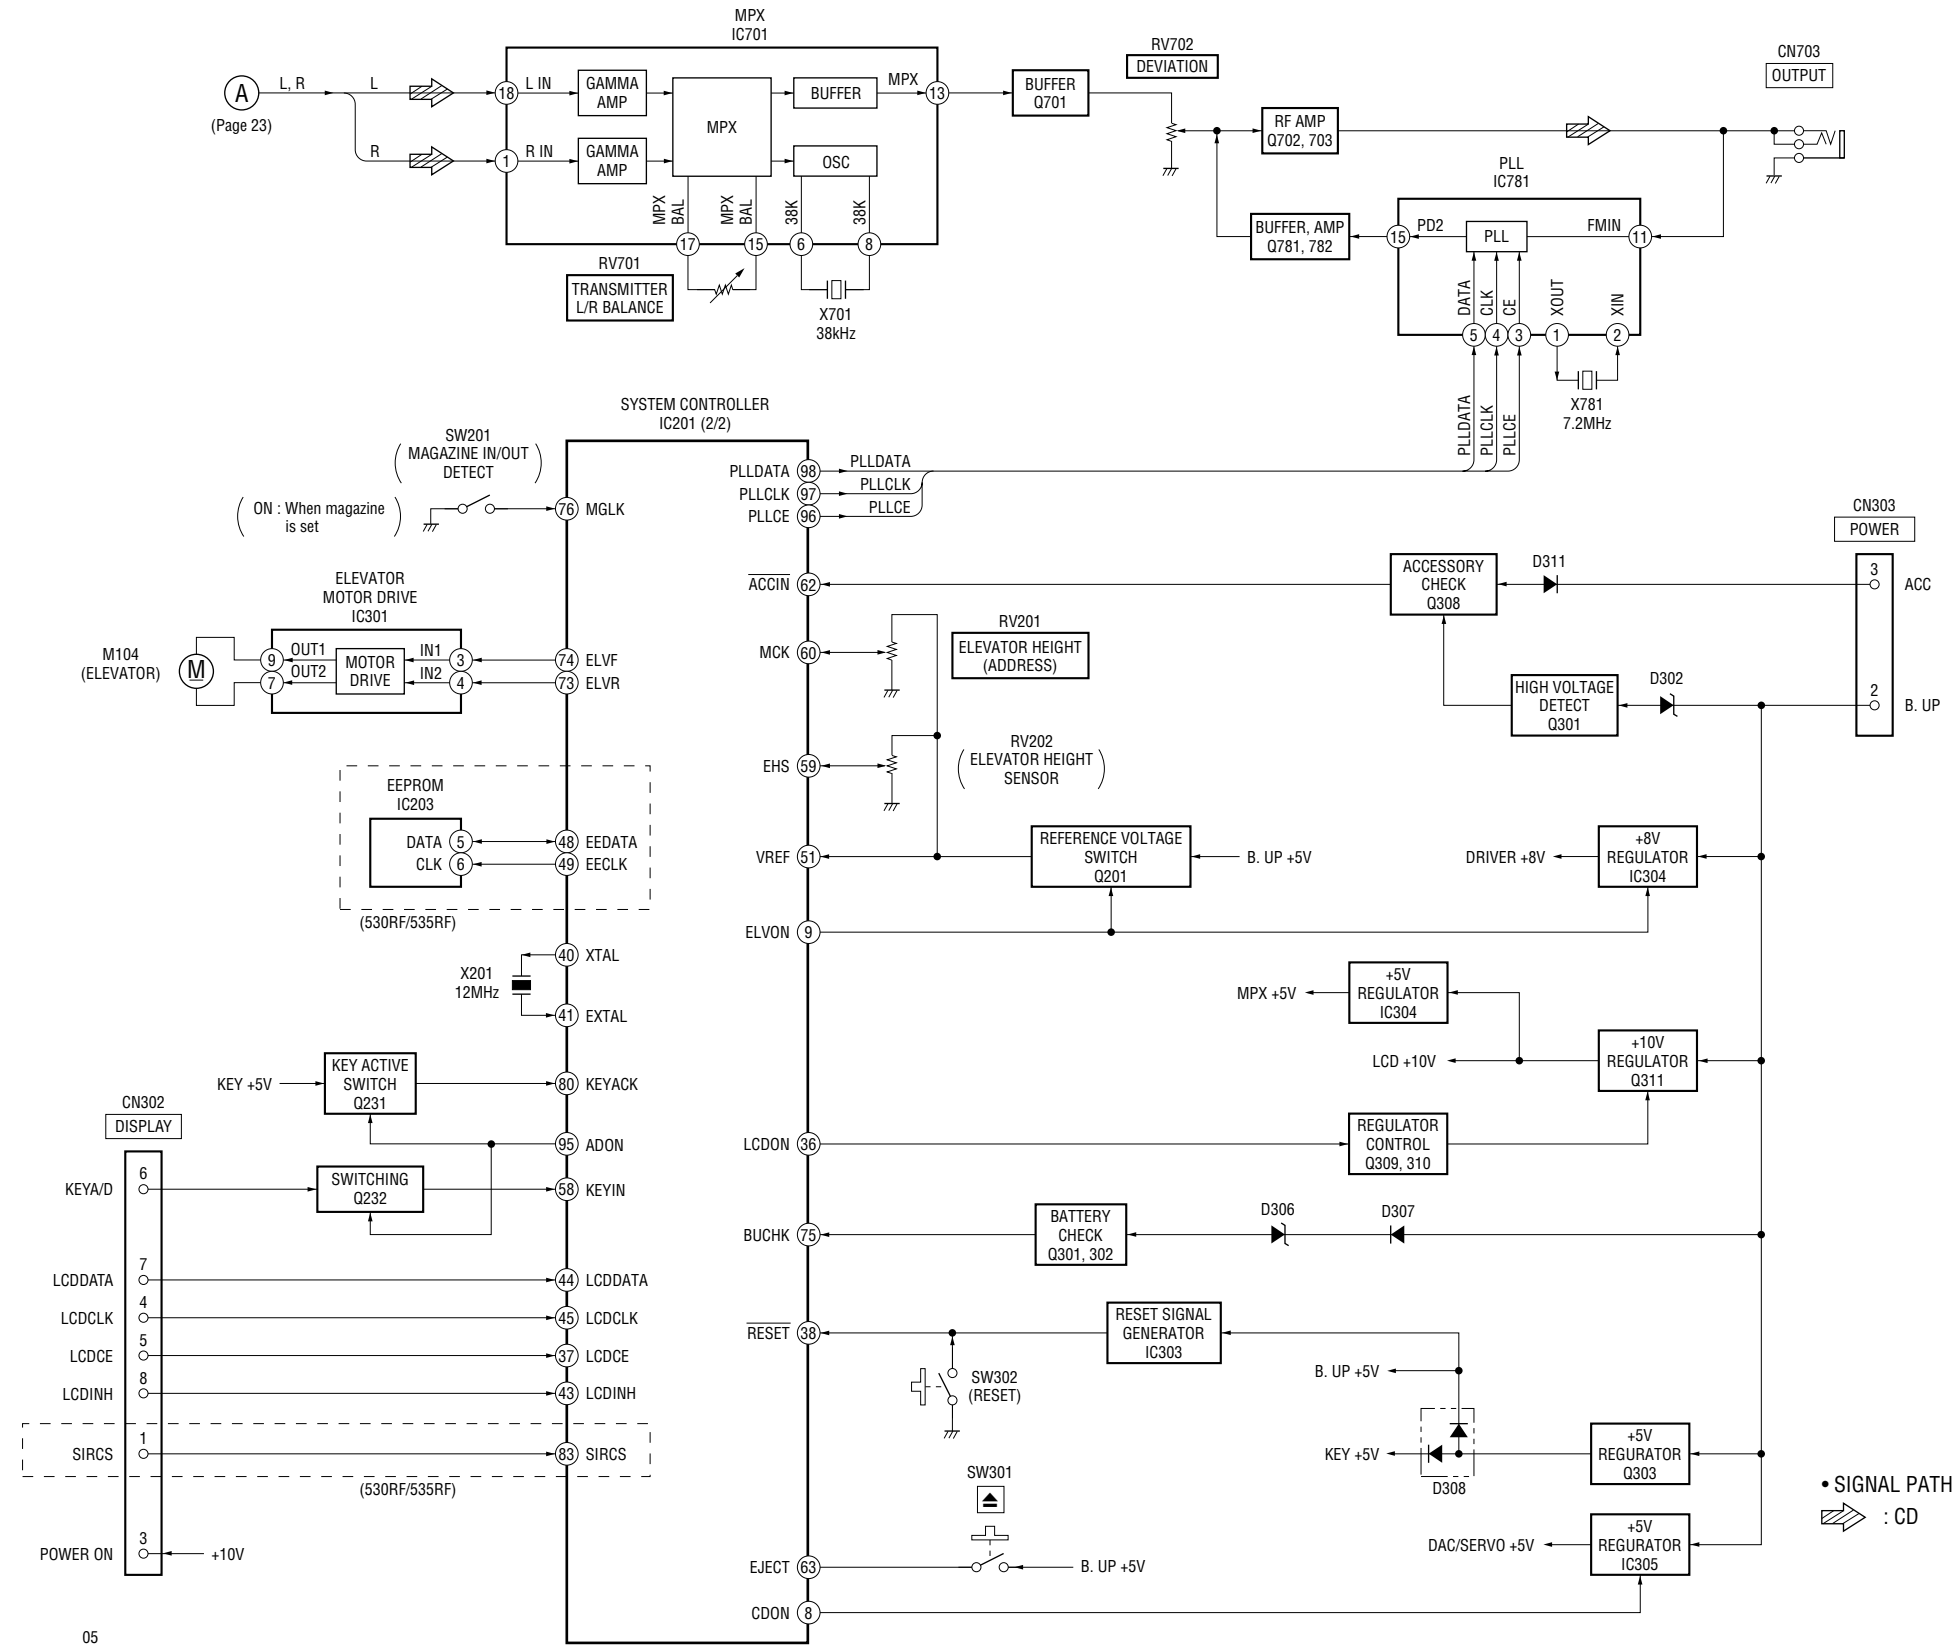

• Circuit Boards Location

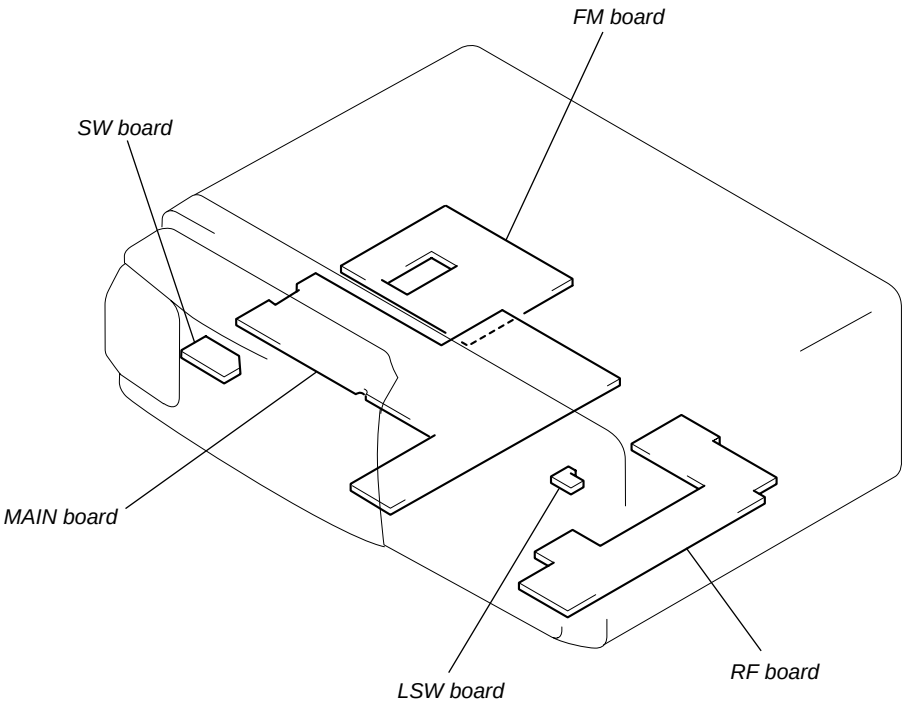

7-3. NOTE FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

Note on Printed Wiring Boards:

- — : parts extracted from the component side.
- : parts extracted from the conductor side.
- + : indicates side identified with part number.
- ▨ : Pattern from the side which enables seeing.
(The other layers' patterns are not indicated.)

Caution:	
Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component Side)	Parts on the parts face side seen from the parts face are indicated.


Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF : $\mu\mu\text{F}$
50 WV or less are not indicated except for electrolytics
and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise
specified.
- Δ : internal component.
- : panel designation.


Note: The components identi- fied by mark Δ or dotted line with mark Δ are criti- cal for safety. Replace only with part number specified.	Note: Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
---	--

- + : B+ Line.
- : adjustment for repair.
- Power voltage is dc 14.4V and fed with regulated dc power
supply from CD changer controller.
- Voltages and waveforms are dc with respect to ground
under no-signal conditions.
no mark : CD PLAY
- Voltages are taken with a VOM (Input impedance 10 M Ω).
Voltage variations may be noted due to normal produc-
tion tolerances.
- Waveforms are taken with a oscilloscope.
Voltage variations may be noted due to normal produc-
tion tolerances.
- Circled numbers refer to waveforms.
- Signal path.
⇒ : CD PLAY

7-4. PRINTED WIRING BOARDS – RF Section – • See page 25 for Circuit Boards Location.

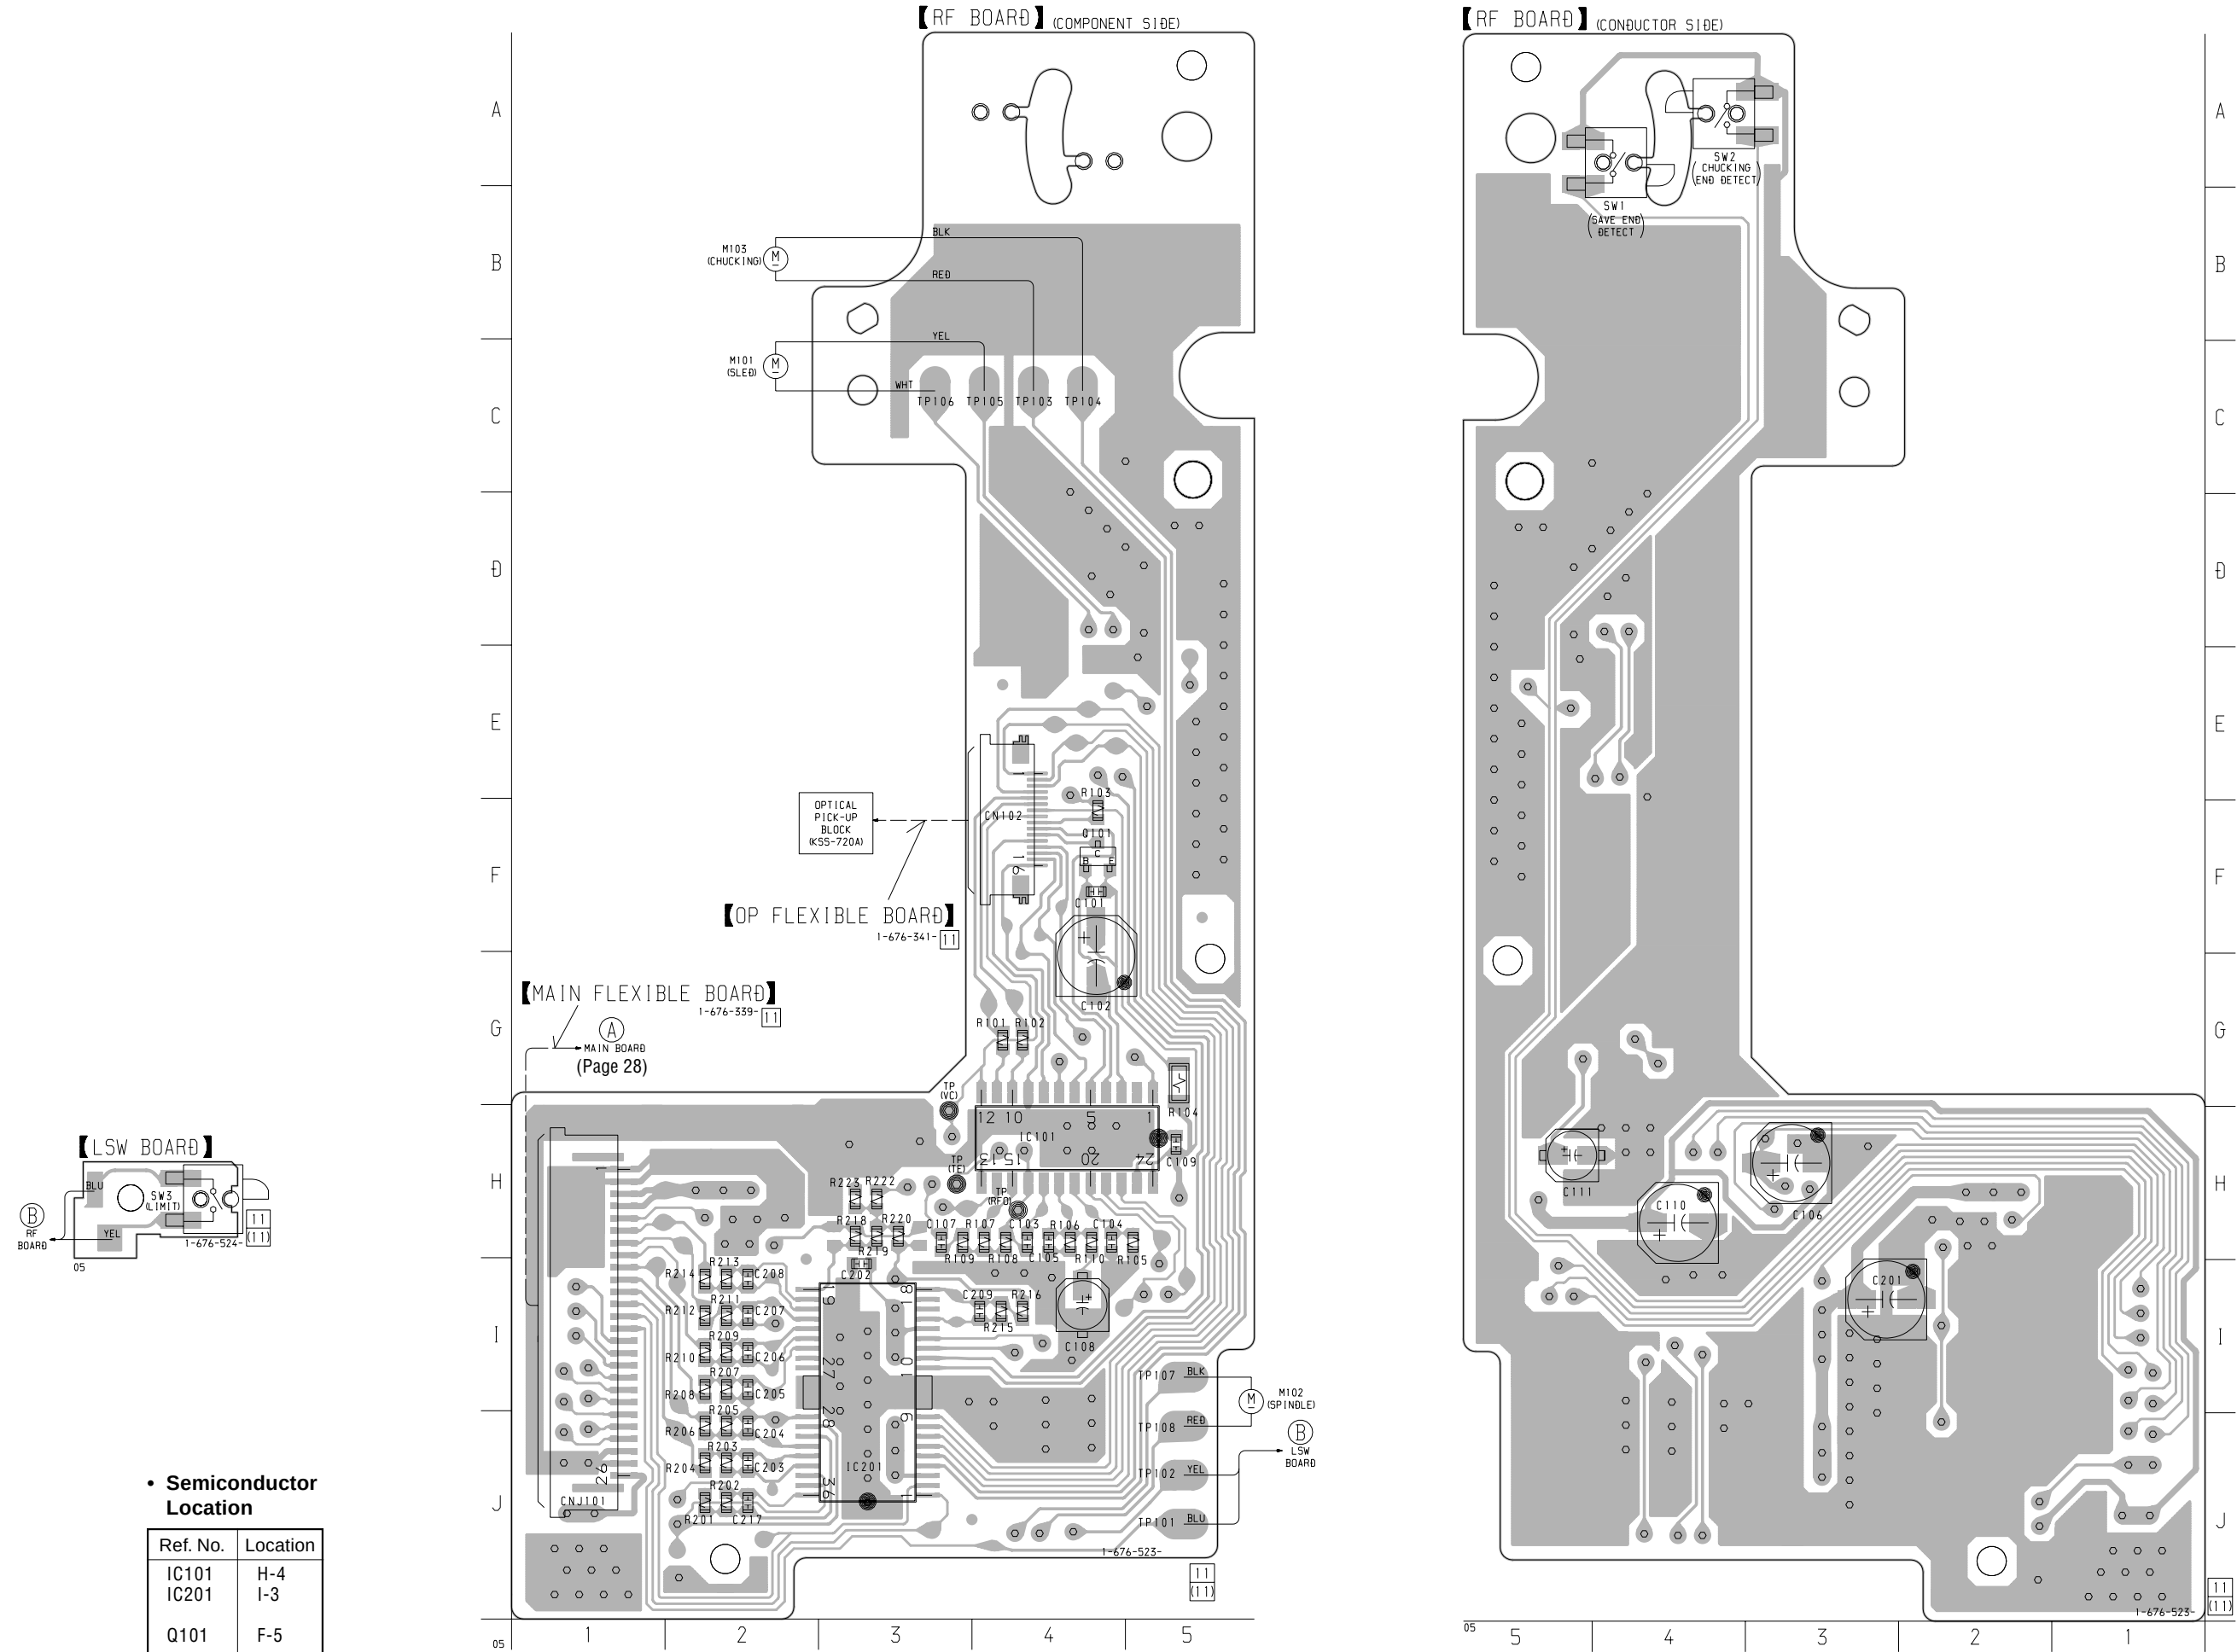

7-5. SCHEMATIC DIAGRAM – RF Section – • See page 36 for Waveforms. • See page 37 for IC Block Diagrams.

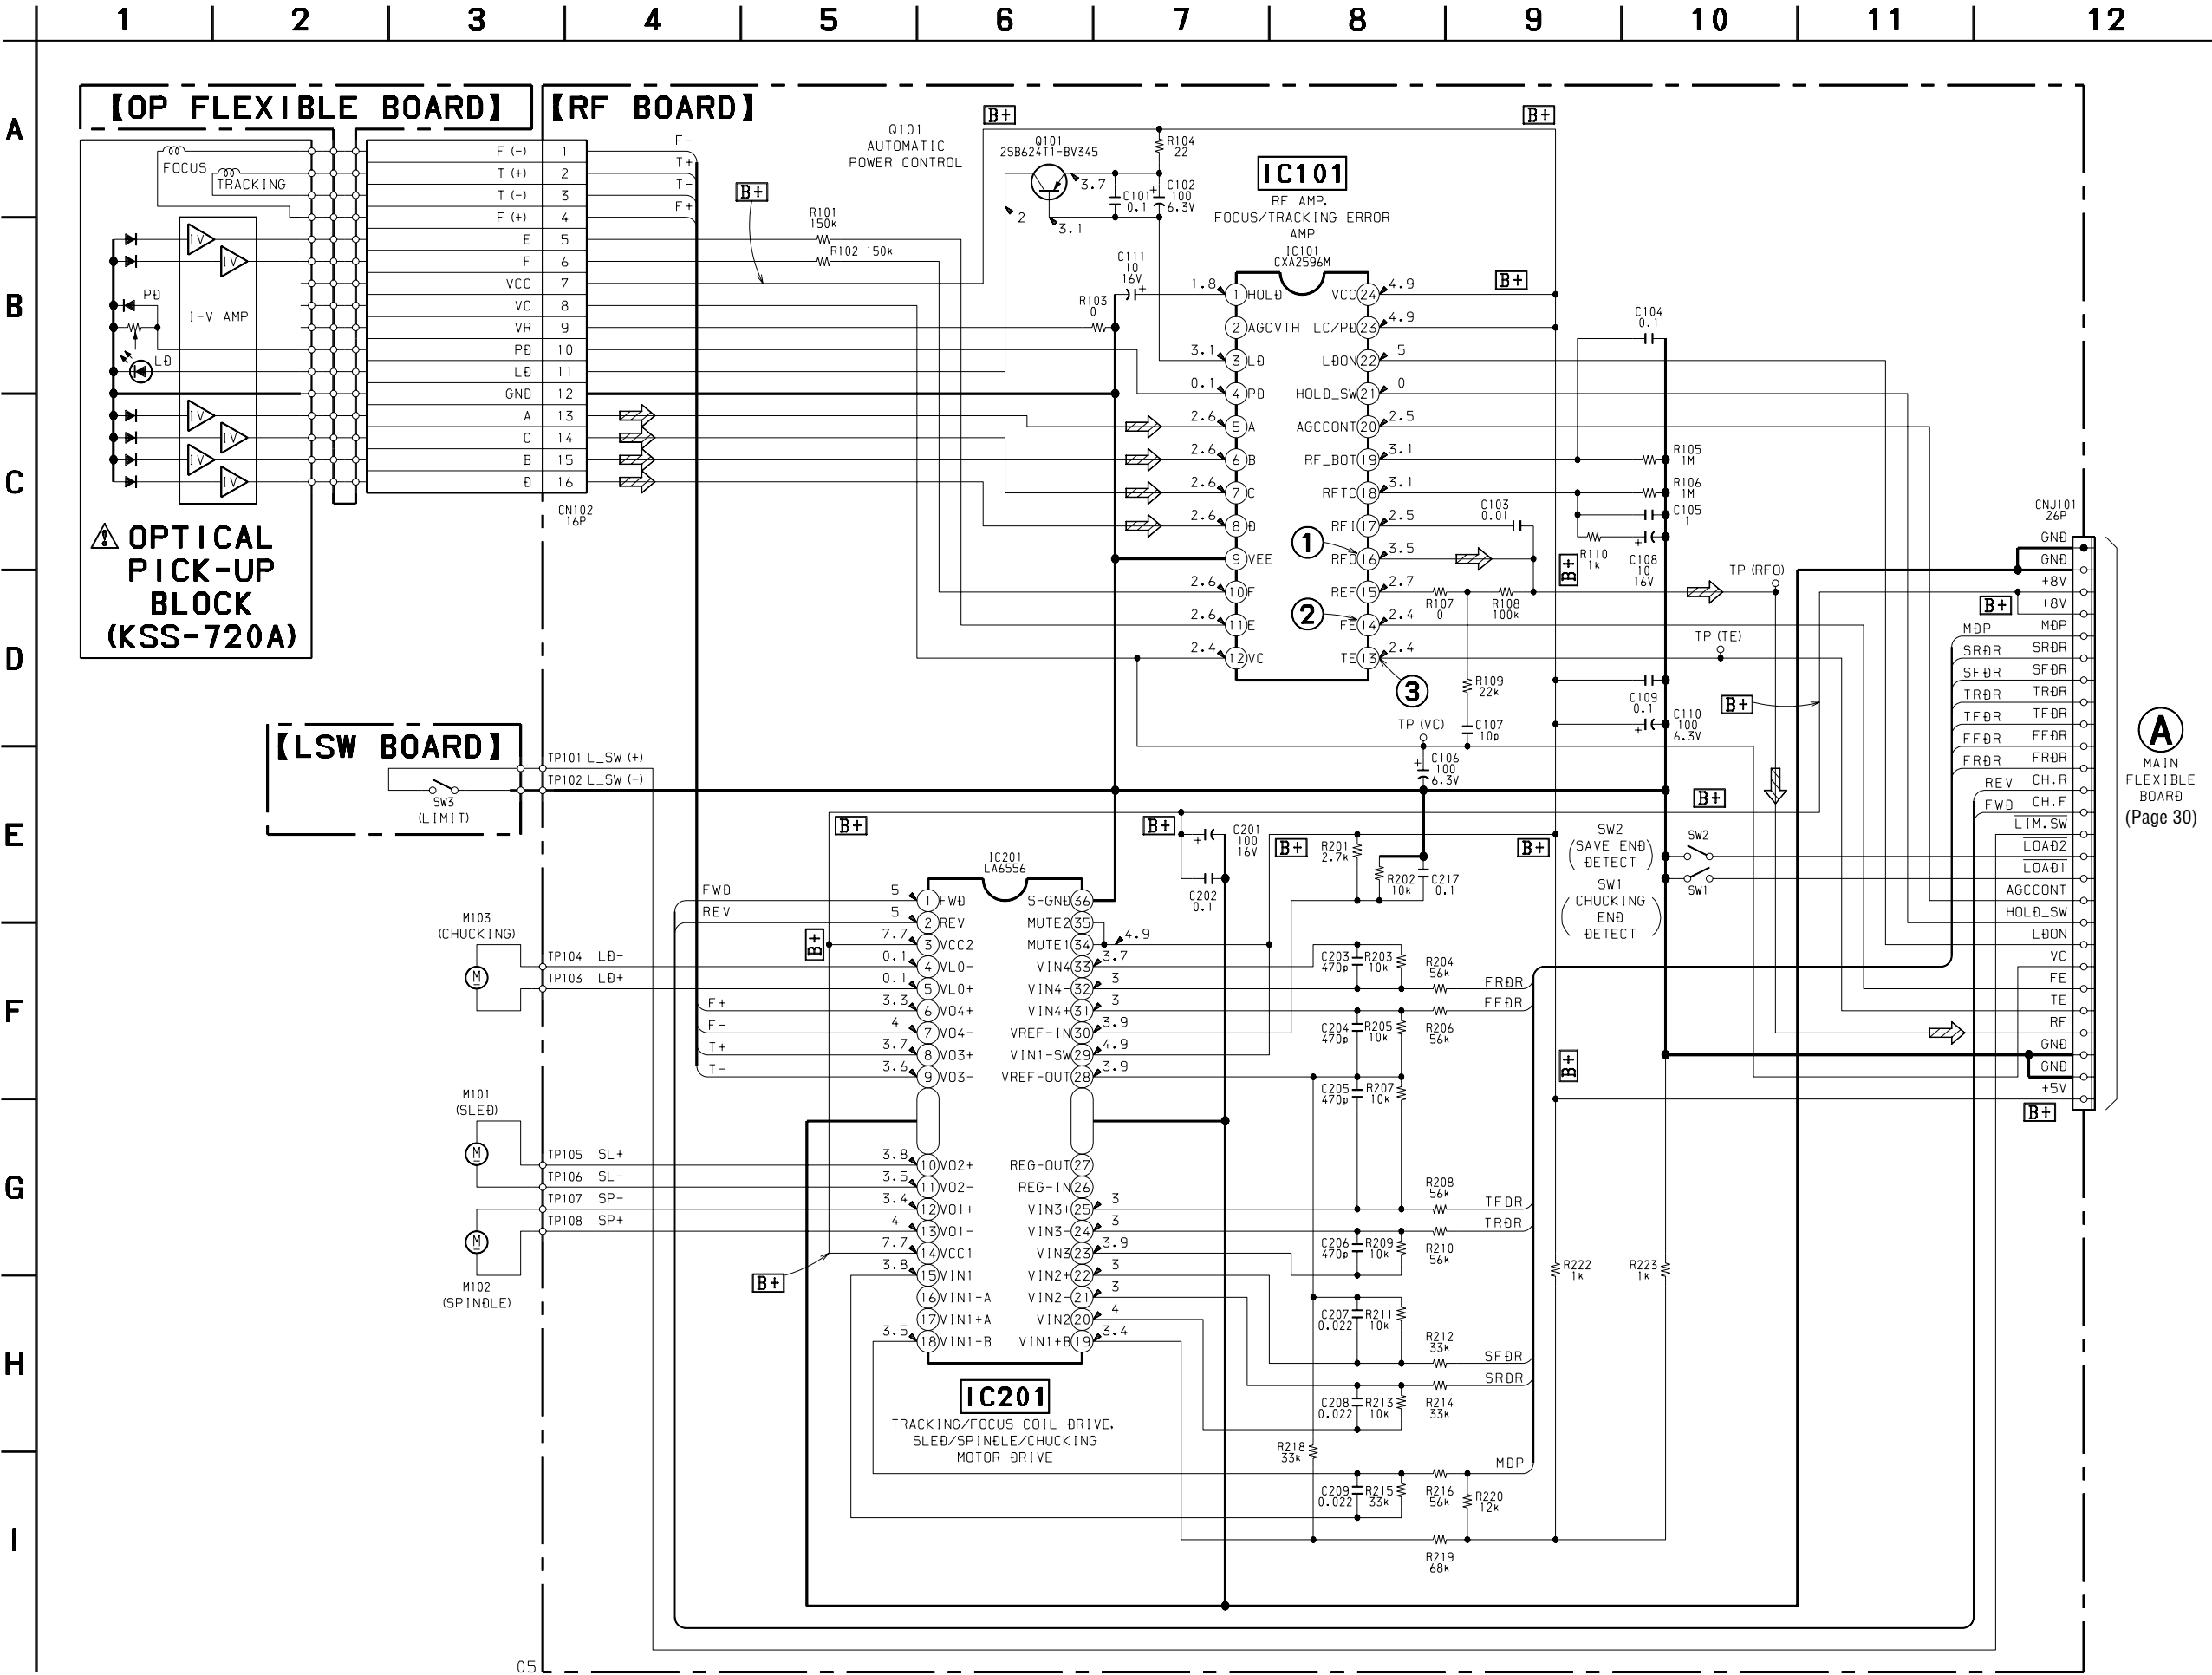


The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

7-6. PRINTED WIRING BOARDS – MAIN Section (1/2) – • See page 25 for Circuit Boards Location.


• Semiconductor Location

Ref. No.	Location
D201	B-6
D202	B-6
D231	F-8
D306	F-5
D307	F-5
D308	G-4
D309	F-4
D310	G-4
D311	F-3
D312	F-6
D313	F-3
IC101	C-8
IC201	F-8
IC203	G-10
IC301	G-3
IC303	F-3
IC401	C-6
Q201	E-10
Q231	F-7
Q232	F-8
Q301	F-5
Q302	F-5
Q303	F-4
Q401	D-8
Q402	D-8
Q410	C-6
Q420	B-6

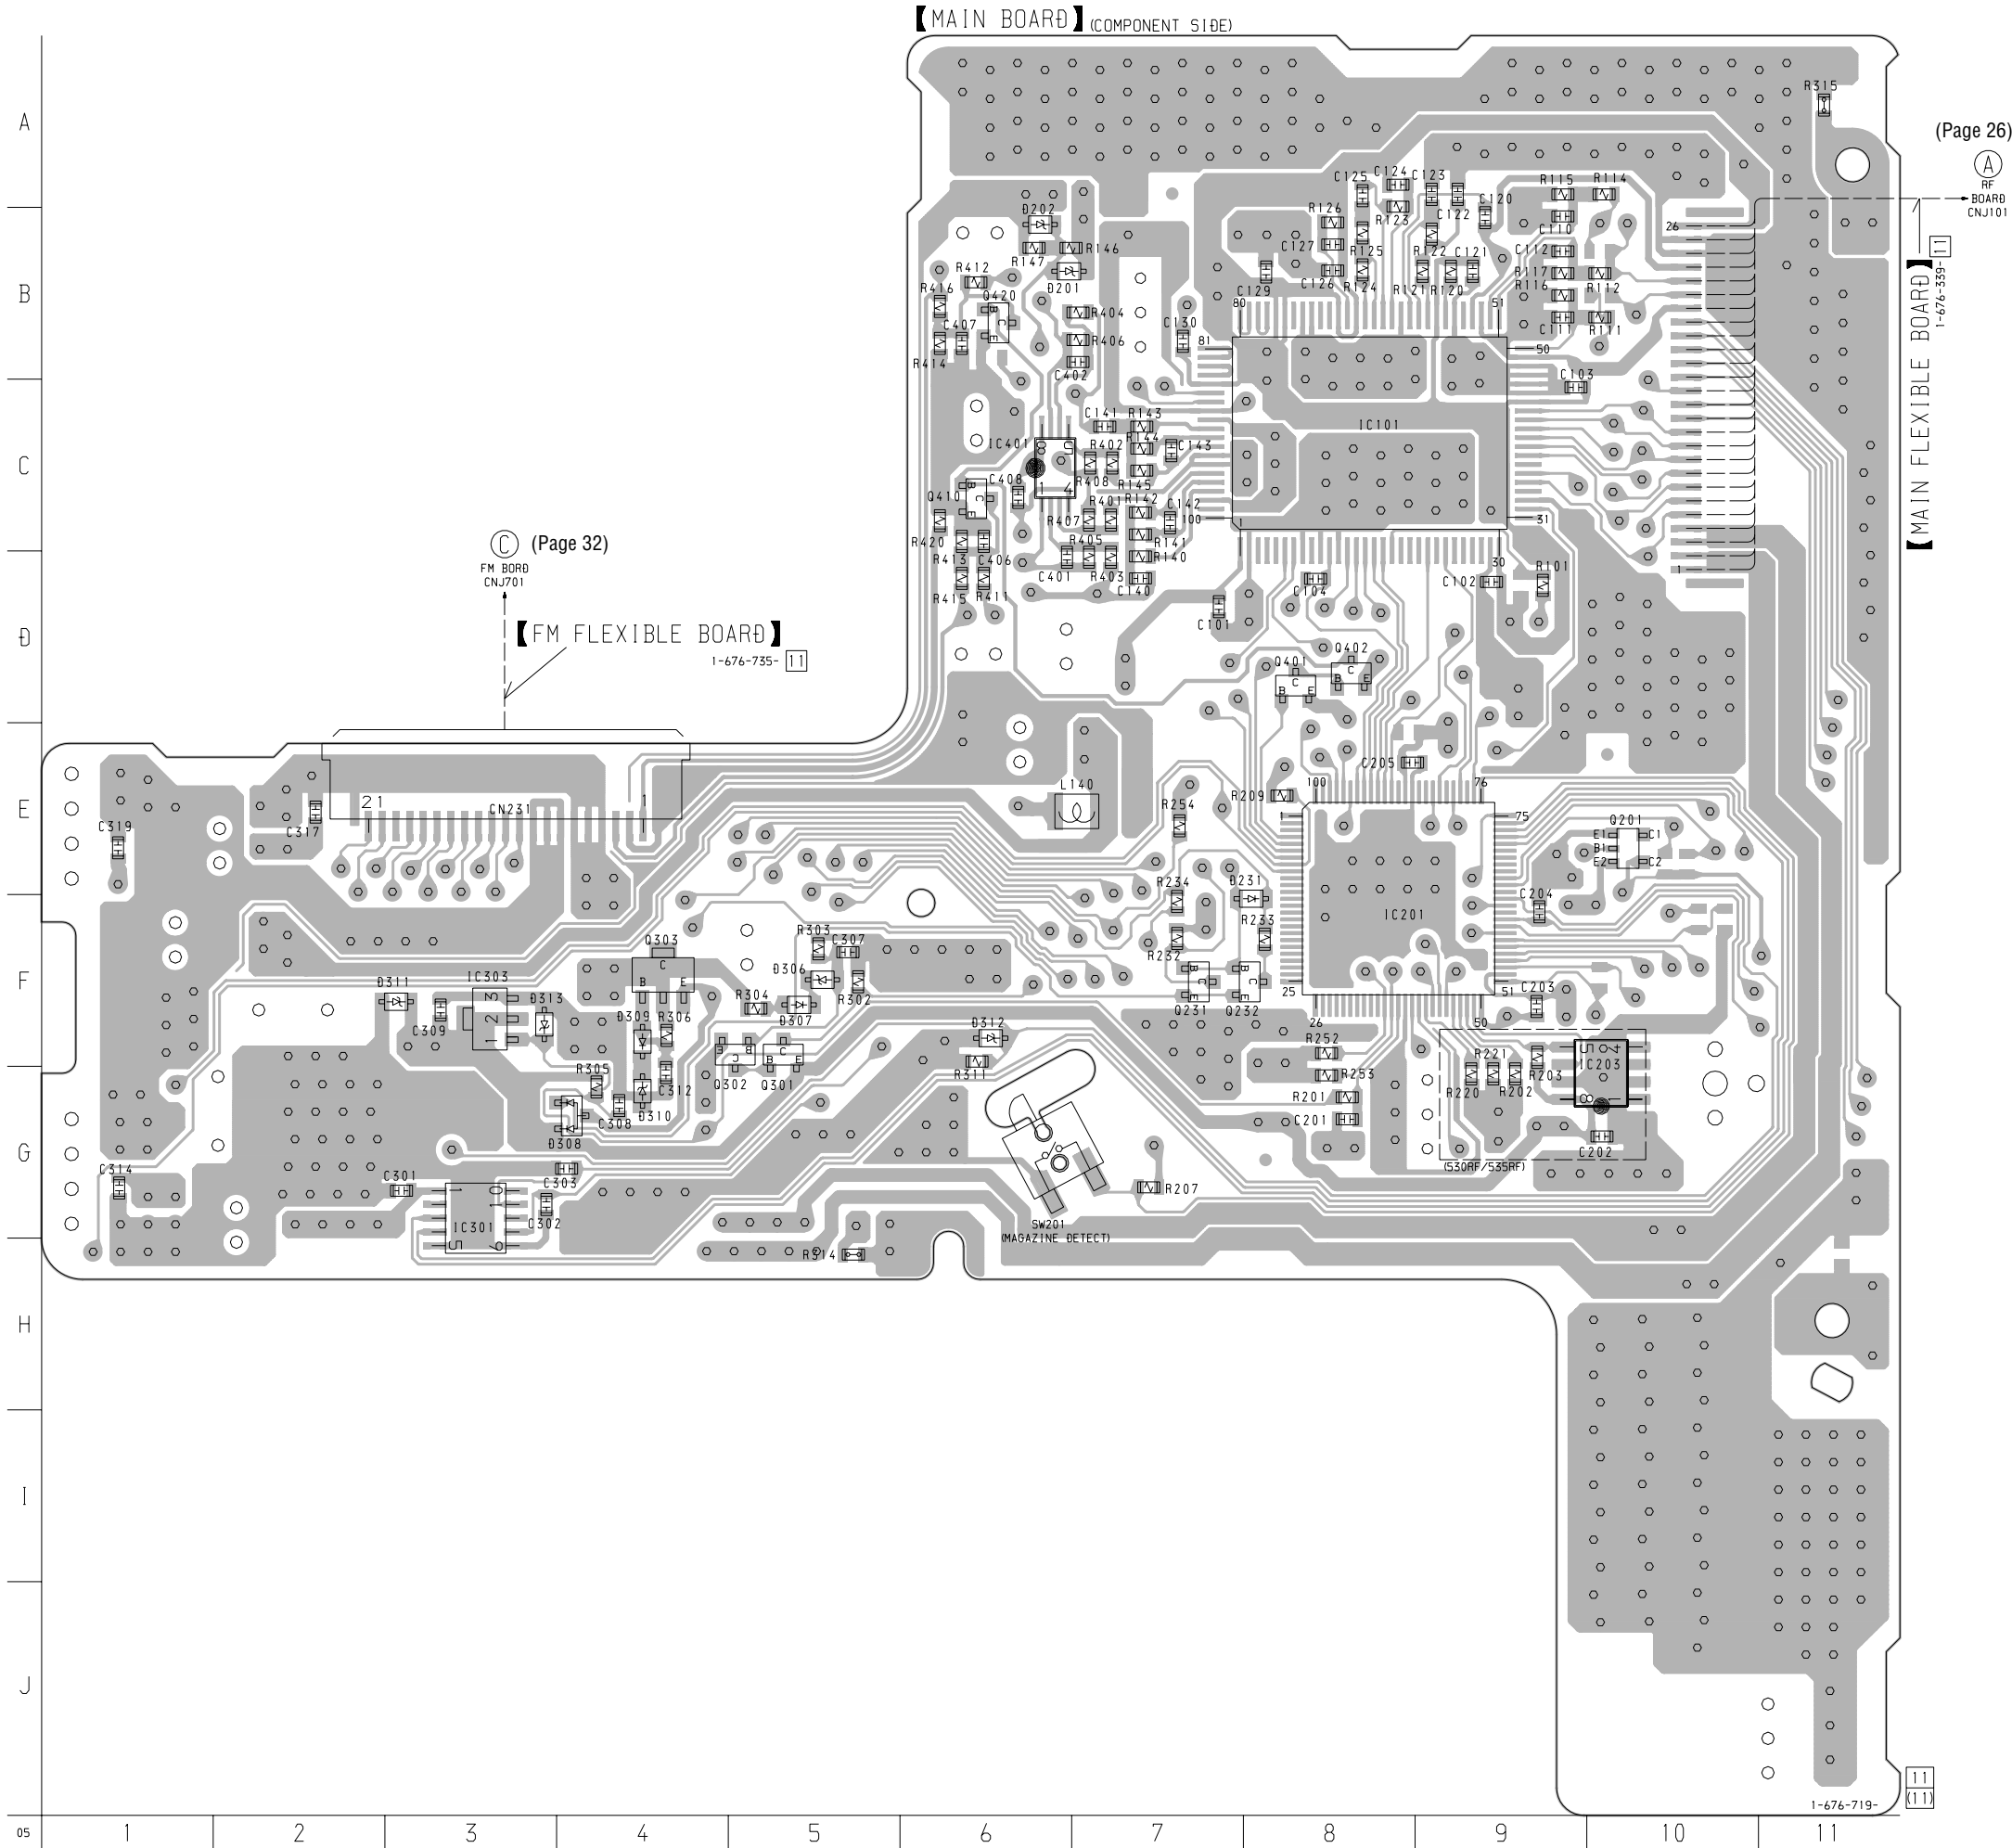

7-7. PRINTED WIRING BOARDS – MAIN Section (2/2) – • See page 25 for Circuit Boards Location.


【MAIN BOARD】 (CONDUCTOR SIDE)

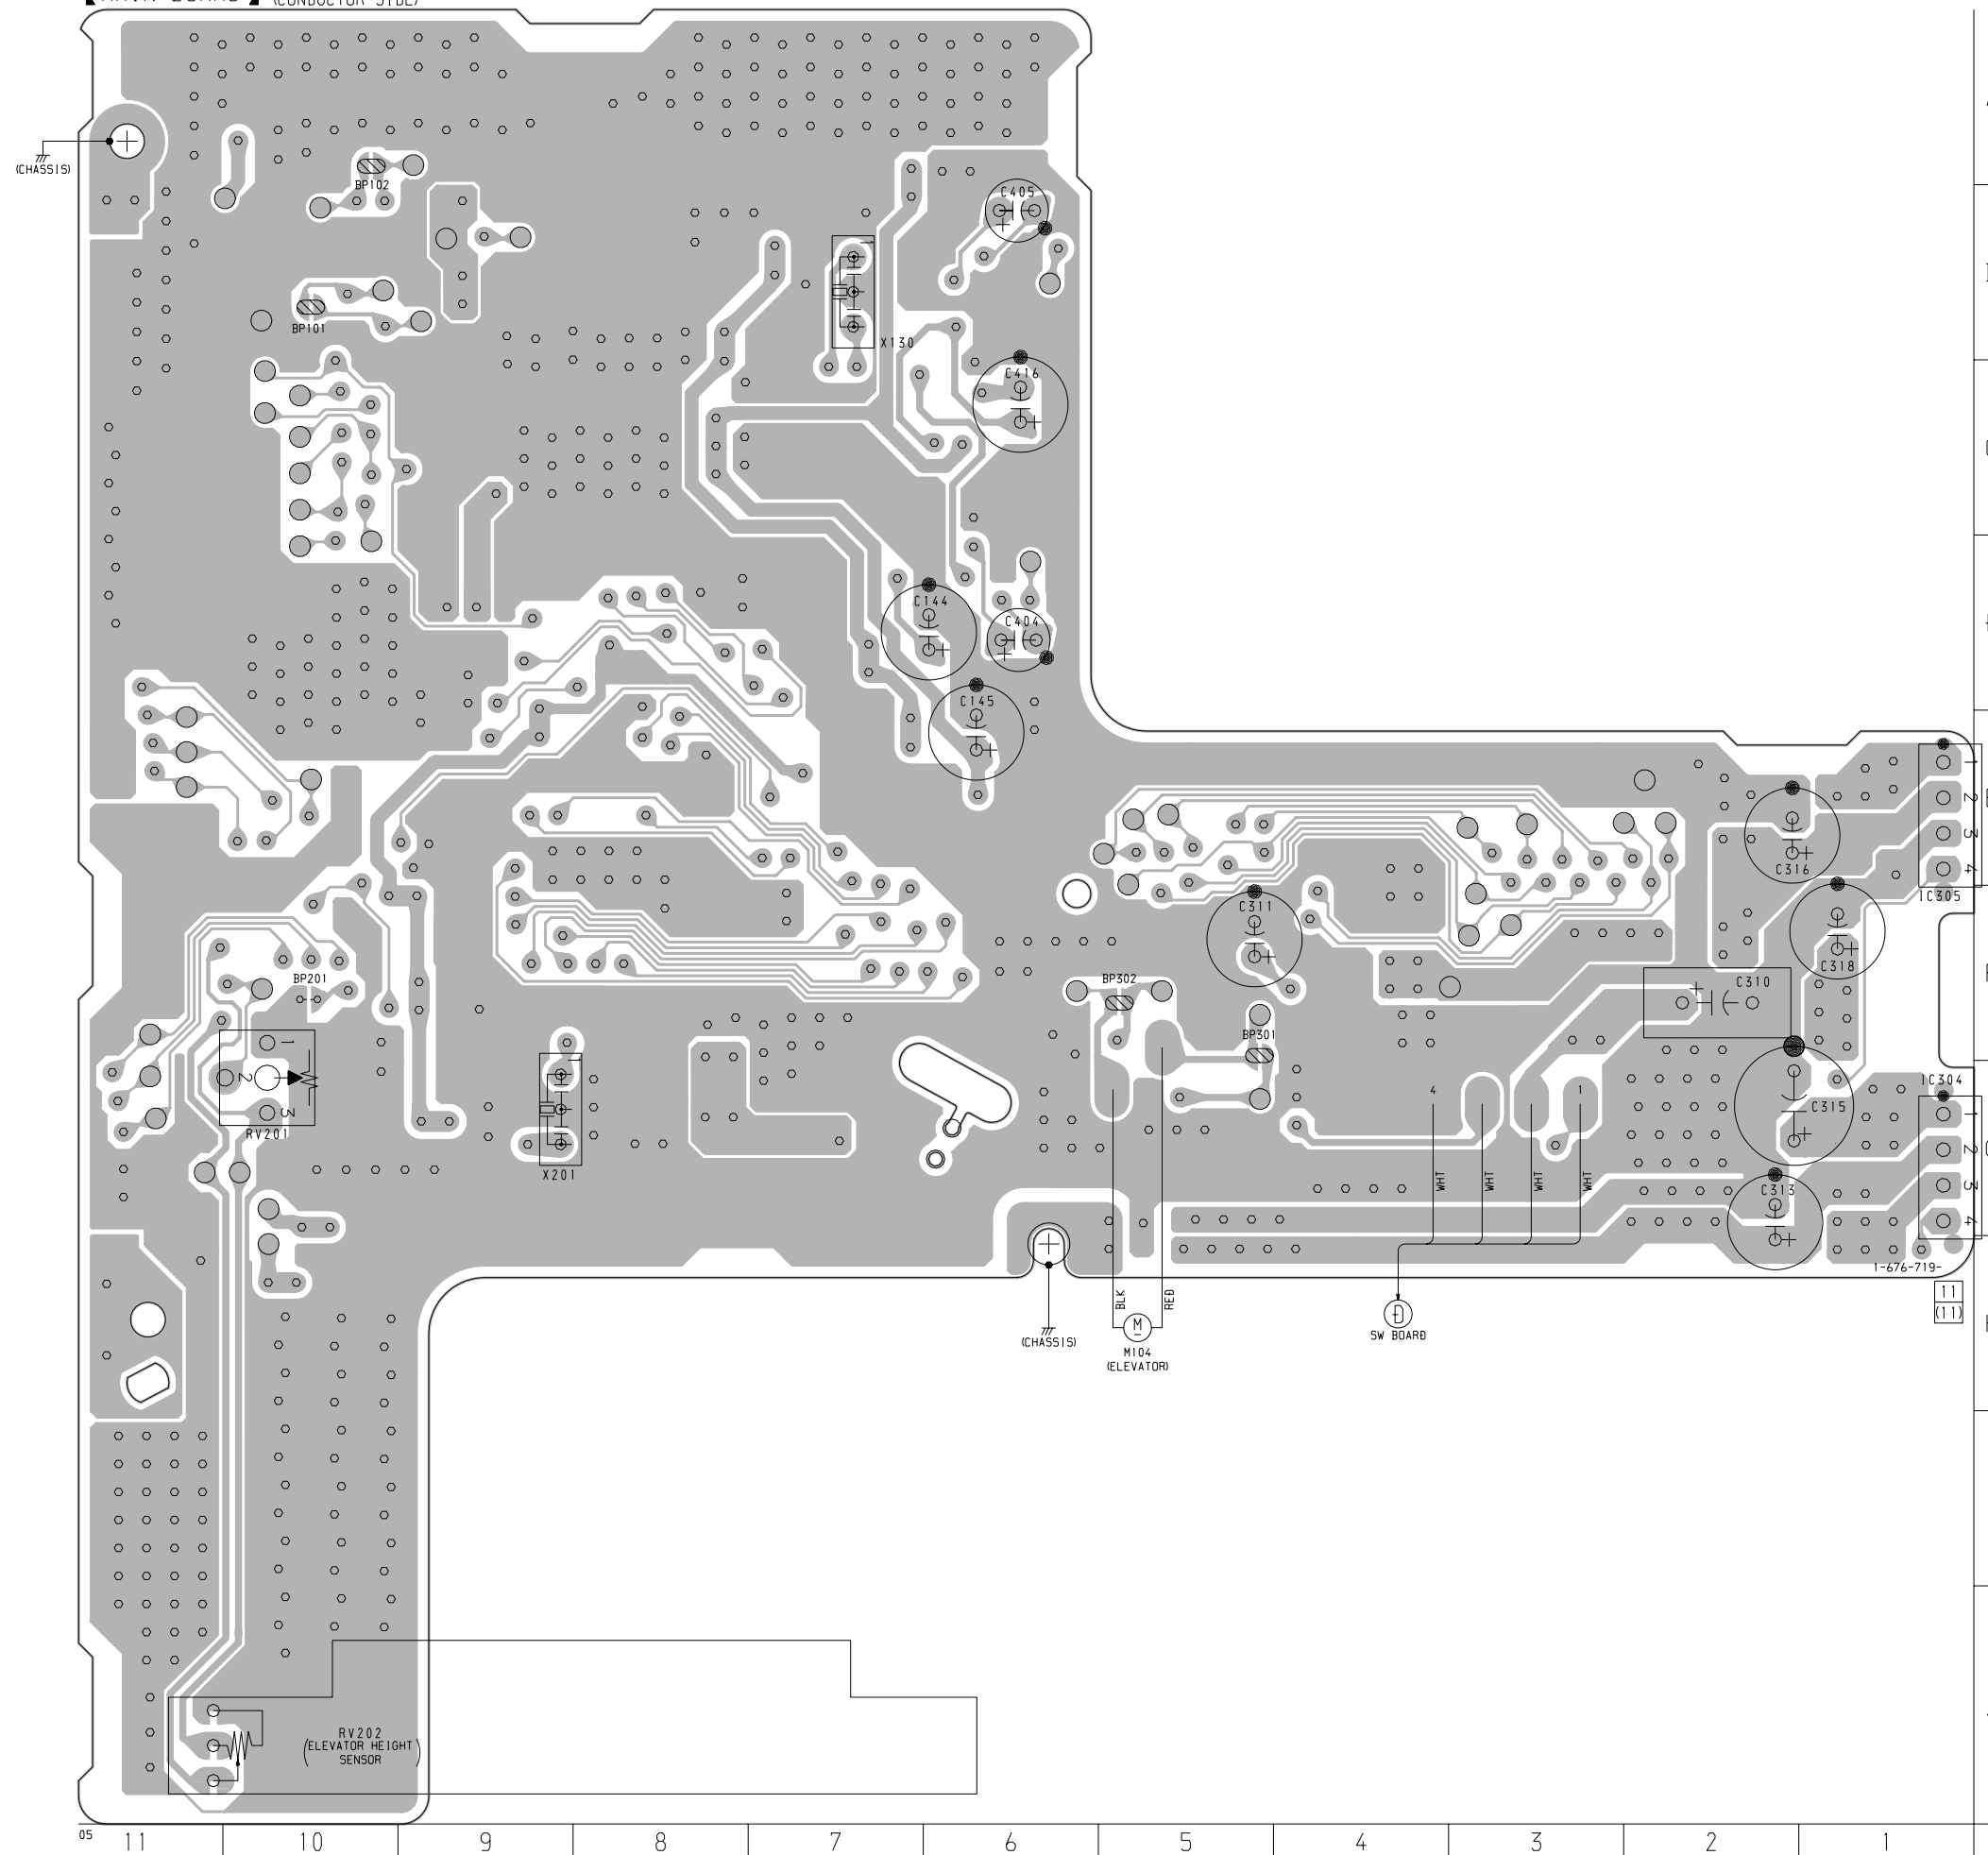

- **Semiconductor Location**


Ref. No.	Location
IC304	G-1
IC305	E-1

【SW BOARD】

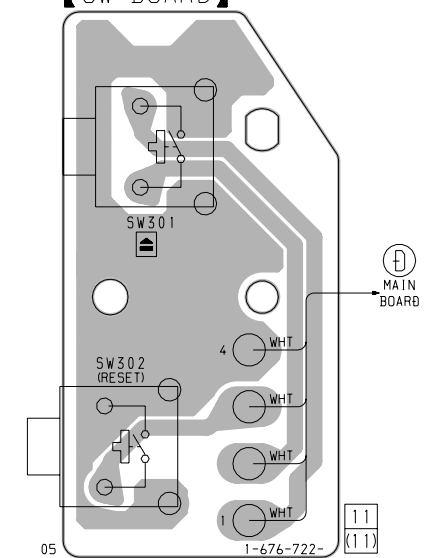




7-10. PRINTED WIRING BOARDS – FM/POWER Section – • See page 25 for Circuit Boards Location.

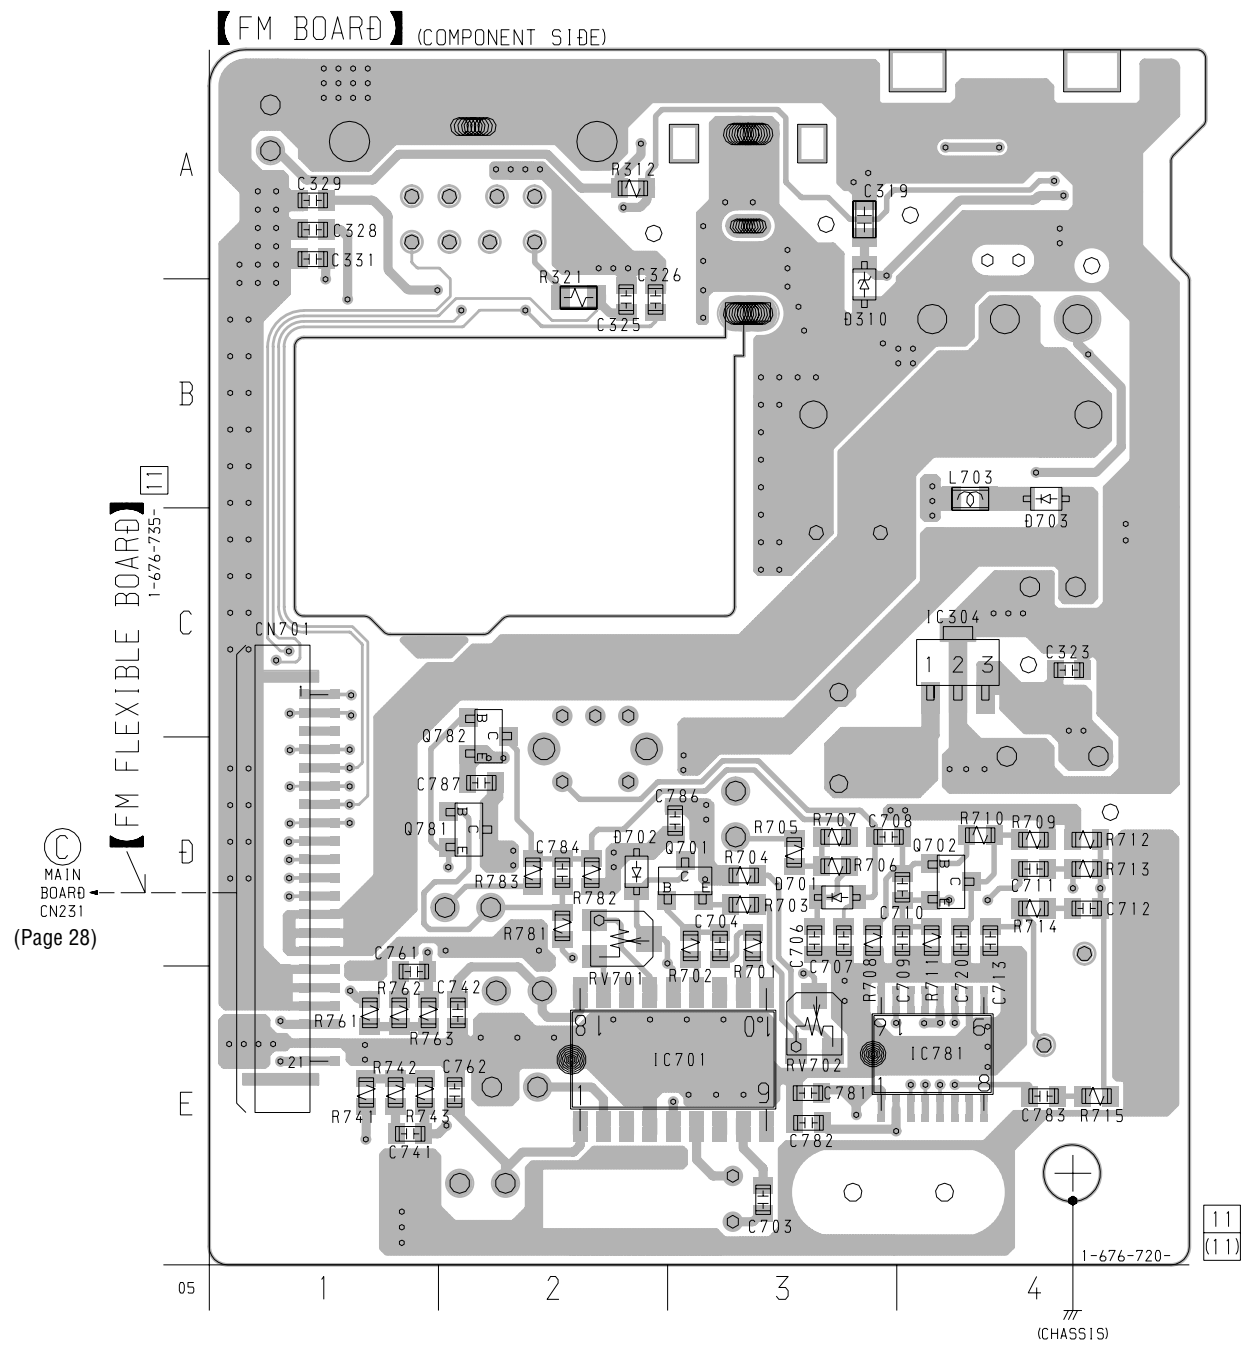

• Semiconductor Location

Ref. No.	Location
D310	B-3
D701	D-3
D702	D-2
D703	B-4
IC304	C-4
IC701	E-3
IC781	E-4
Q701	D-3
Q702	D-4
Q781	D-2
Q782	C-2

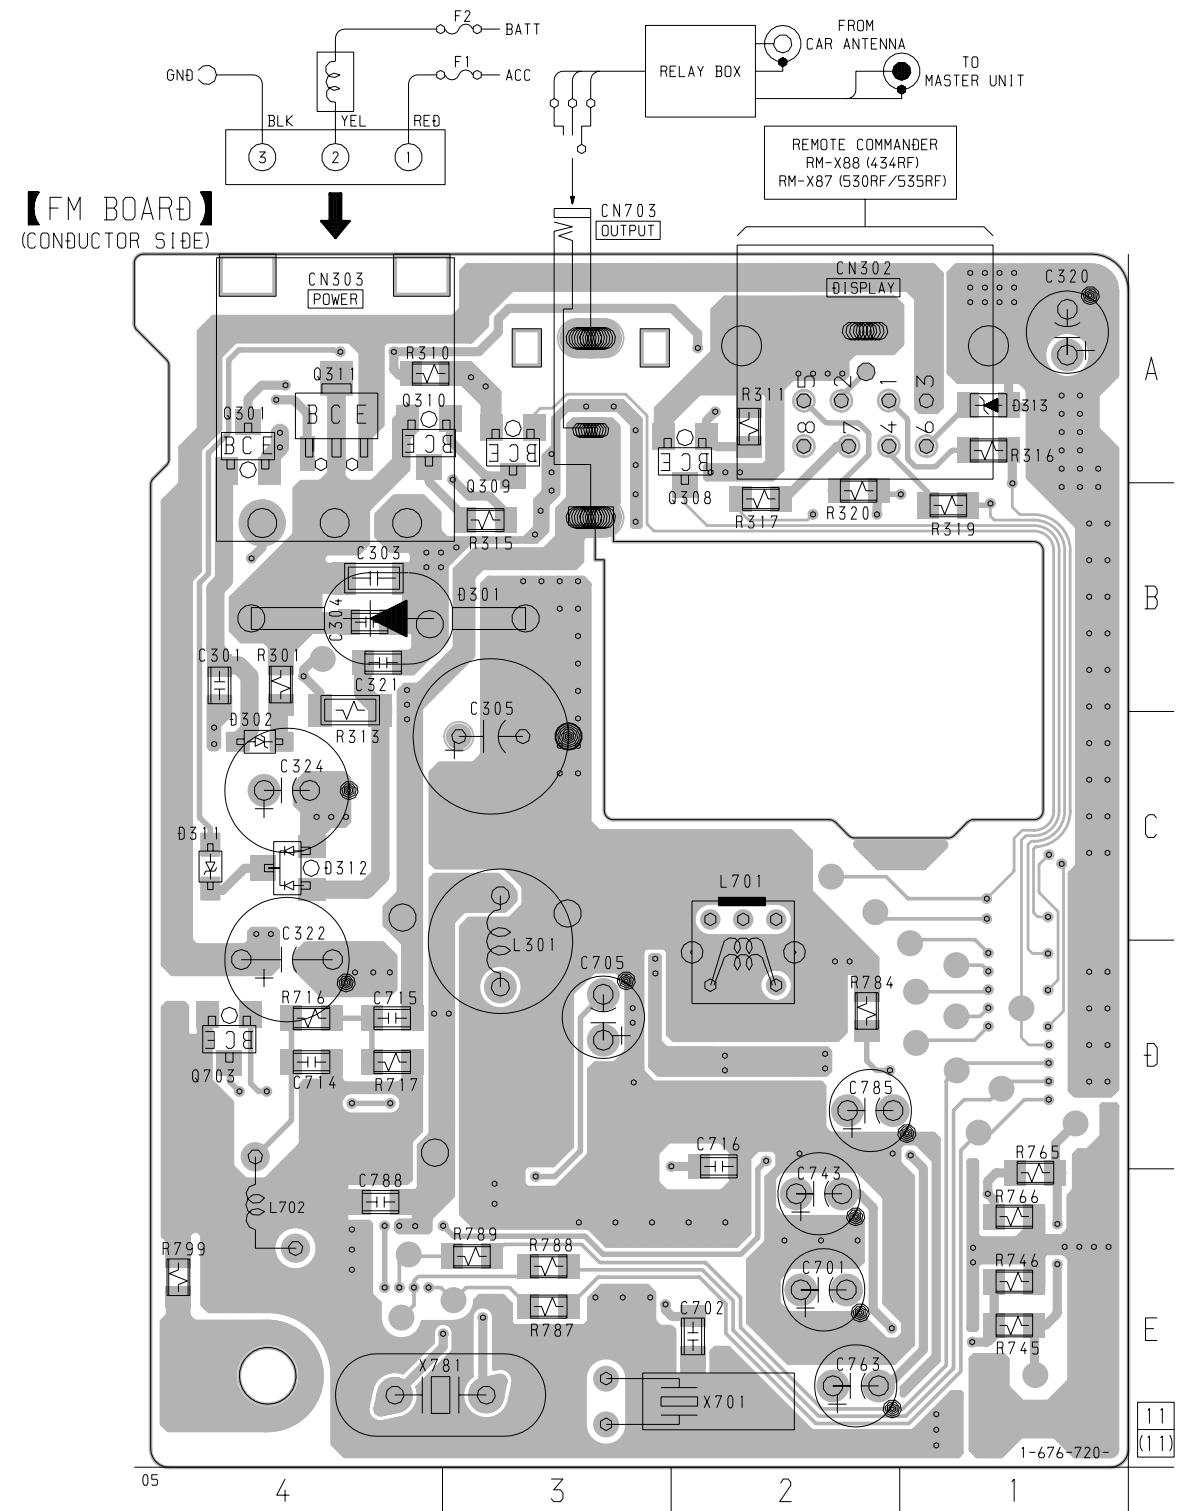

• Semiconductor Location

Ref. No.	Location
D301	B-4
D302	C-4
D311	C-4
D312	C-4
D313	A-1
Q301	A-4
Q308	A-2
Q309	A-3
Q310	A-4
Q311	A-4
Q703	D-4



7-12. IC PIN FUNCTION DESCRIPTION

• MAIN BOARD IC201 CXP740056-004R (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Function
1 to 3	NC	—	Not used (open)
4	AMUTE	O	Audio line muting on/off control signal output terminal “H”: muting on
5	CDXLT	O	Serial data latch pulse signal output to the CXD2598Q (IC101)
6	CDDATA	O	Serial data output to the CXD2598Q (IC101)
7	CDCLK	O	Serial data transfer clock signal output to the CXD2598Q (IC101)
8	CDON	O	D/A converter and servo section power supply on/off control signal output “H”: power on
9	ELVON	O	Mechanism deck section power supply on/off control signal output “H”: power on
10 to 35	NC	—	Not used (open)
36	LCDON	O	The LCD in remote commander and FM transmitter section power supply on/off control signal output “H”: power on
37	LCDCE	O	Chip enable signal output to the LCD driver in remote commander
38	<u>RESET</u>	I	System reset signal input from the reset switch (SW302) and reset signal generator (IC303) “L”: reset For several hundreds msec. after the power supply rises, “L” is input, then it changes to “H”
39	GND	—	Ground terminal
40	XTAL	O	Main system clock output terminal (12 MHz)
41	EXTAL	I	Main system clock input terminal (12 MHz)
42	TEXTSEL	I	CD text on/off setting terminal “L” CD text on 434RF: fixed at “H” (open) 530RF/535RF: fixed at “L”
43	LCDINH	O	Inhibit signal output to the LCD driver in remote commander
44	LCDDATA	O	Serial data output to the LCD driver in remote commander
45	LCDCLK	O	Serial data transfer clock signal output to the LCD driver in remote commander
46	CFSEL	I	Custom file on/off setting terminal “L” custom file on 434RF: fixed at “H” (open) 530RF/535RF: fixed at “L”
47	EEINIT	I	Initialize signal input for the EEPROM (IC203) “H”: format 434RF: not used (open) 530RF/535RF: fixed at “L”
48	EEDATA	I/O	Two-way data bus with the EEPROM (IC203) (530RF/535RF only) 434RF: not used (open)
49	EECLK	O	Serial data transfer clock signal output to the EEPROM (IC203) (530RF/535RF only) 434RF: not used (open)
50	VSS	—	Ground terminal (for A/D converter)
51	AVREF	I	Reference voltage (+5V) input terminal (for A/D converter)
52	VDD	—	Power supply terminal (+5V) (for A/D converter)
53	SINGLE	I	Setting terminal for the single disc/multiple discs mode “L”: single mode, “H”: multiple discs mode Fixed at “H” in this set (open)
54	LDON	O	The laser automatic power control on/off signal output “H”: automatic power control on
55	AGCHOLD	O	RF AGC hold on/off signal output “H”: hold
56	RFAGC	I/O	RF AGC level control signal output “L (O)”: off, “I”: 40%, “H (O)”: 60%
57	H.TEMP	I	High temperature sensor input terminal Not used (open)
58	KEYIN	I	Key input terminal (A/D input) from the remote commander
59	EHS	I	Elevator height position detect input from the RV202 (elevator height sensor) (A/D input)
60	MCK	I	Input of signal for the fine adjustment (elevator height (address) adjustment; RV201) of elevator position (A/D input)
61	NC	—	Not used (open)
62	<u>ACCIN</u>	I	Accessory detect signal input terminal “L”: accessory on
63	EJECT	I	Eject switch (SW301) input terminal “H” active

Pin No.	Pin Name	I/O	Function
64	MAGSW	I	Magazine in/out detect switch input Not used (open)
65	<u>LOAD1</u>	I	Chucking end detect switch (SW1) input terminal “L”: When completion of the disc chucking operation
66	<u>LOAD2</u>	I	Save end detect switch (SW2) input terminal “L”: When completion of the disc save operation
67 to 70	NC	—	Not used (open)
71	CH.F	O	Motor drive signal (save direction) output to the chucking motor drive (IC201) “L” active *1
72	CH.R	O	Motor drive signal (chucking direction) output to the chucking motor drive (IC201) “L” active *1
73	ELVR	O	Motor drive signal (elevator down direction) output to the elevator motor drive (IC301) “L” active *2
74	ELVF	O	Motor drive signal (elevator up direction) output to the elevator motor drive (IC301) “L” active *2
75	BUCHK	I	Battery detect signal input terminal “H”: battery on
76	MGLK	I	Magazine detect switch (SW201) input “L”: magazine is set
77	SQSO	O	Subcode Q/text serial data output to the CXD2598Q (IC101)
78	NC	—	Not used (open)
79	SQCK	O	Subcode Q/text serial data transfer clock signal output to the CXD2598Q (IC101)
80	KEYACK	I	Input of acknowledge signal for the key entry Acknowledge signal is input to accept from the remote commander in the power off status
81	NC	—	Not used (open)
82	SCOR	I	Subcode sync (S0+S1) detection signal input from the CXD2598Q (IC101)
83	SIRCS	I	SIRCS signal input from the remote commander (530RF/535RF only)
84	TEX	I	Sub system clock input terminal Not used (open)
85	TX	O	Sub system clock output terminal Not used (open)
86	VSS	—	Ground terminal
87	VDD	—	Power supply terminal (+5V)
88	NC	—	Not used (open)
89	<u>LIMSW</u>	I	Sled limit in detect switch (SW3) input terminal “L”: When the optical pick-up is inner position
90	FOK	I	Focus OK signal input from the CXD2598Q (IC101) “H” is input when focus is on (“L”: NG)
91	GFS	I	Guard frame sync signal input from the CXD2598Q (IC101) “L”: NG, “H”: OK
92	SCLK	O	Serial data transfer clock signal output to the CXD2598Q (IC101)
93	SENS	I	Internal status signal (sense signal) input from the CXD2598Q (IC101)
94	XRST	O	System reset signal output to the CXD2598Q (IC101) “L”: reset
95	ADON	O	Power supply on/off control signal output for the A/D converter “L”: power on
96	PLLCE	O	Chip enable signal output to the PLL IC (IC781)
97	PLLCLK	O	Serial data transfer clock signal output to the PLL IC (IC781)
98	PLLDATA	O	Serial data output to the PLL IC (IC781)
99, 100	NC	—	Not used (open)

*1 chucking motor (M103) control

Terminal \ Mode	STOP	LOAD CHUCKING	SAVE	BRAKE
CH.F (pin ⑦1)	“H”	“H”	“L”	“L”
CH.R (pin ⑦2)	“H”	“L”	“H”	“L”


*2 elevator motor (M104) control

Terminal \ Mode	STOP	ELEVATOR UP	ELEVATOR DOWN	BRAKE
ELVF (pin ⑦4)	“H”	“L”	“H”	“L”
ELVR (pin ⑦3)	“H”	“H”	“L”	“L”


• Waveforms

– RF Board –


① IC101 ⑩ (RFO) (play mode)

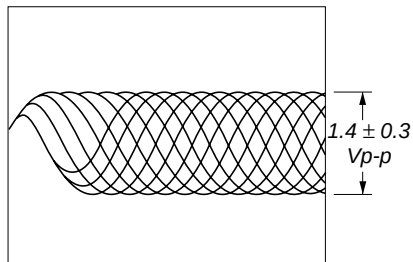

② IC101 ⑭ (FE) (play mode)

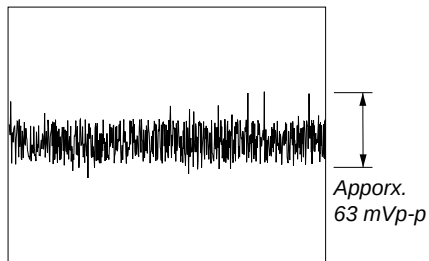


③ IC101 ⑬ (TE) (play mode)

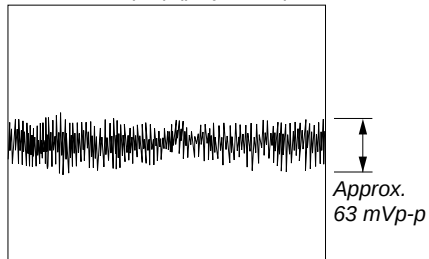


– MAIN Board –


① IC101 ⑦⑦ (LRCK), ⑦⑧ (LRCKI) (play mode)

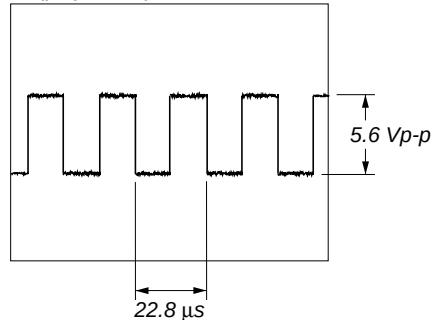


② IC101 ⑧① (BCK), ⑧② (BCKI) (play mode)

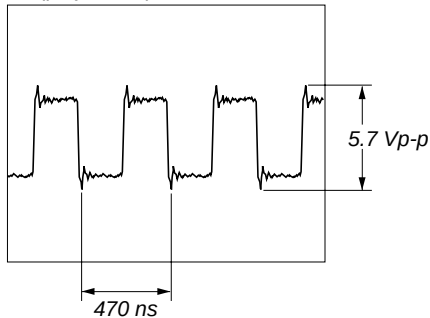


③ IC101 ⑧⑥ (XTAL) (play mode)

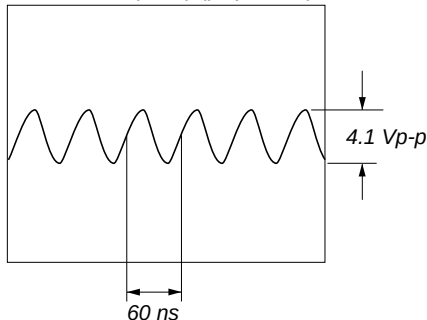

④ IC101 ②④ (SCOR), IC201 ②② (SCOR) (play mode)

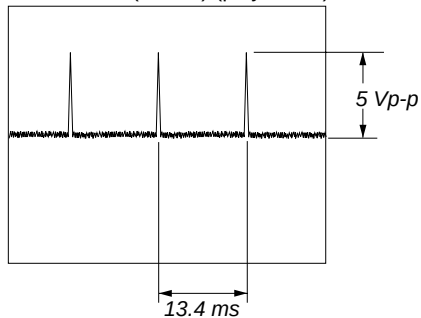


⑤ IC201 ④① (EXTAL) (play mode)

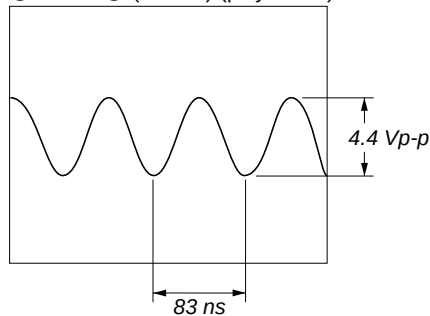


– FM Board –


① IC701 ⑧ (38K) (play mode)

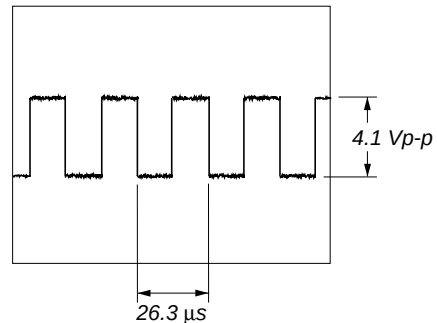

② IC781 ① (XOUT) (play mode)

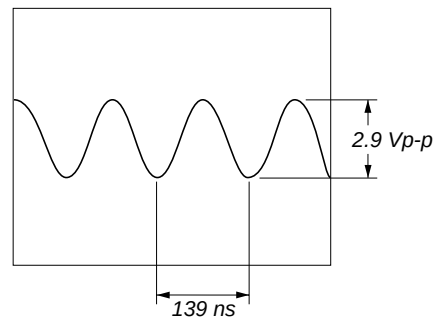


③ IC781 ①① (FMIN) (play mode)

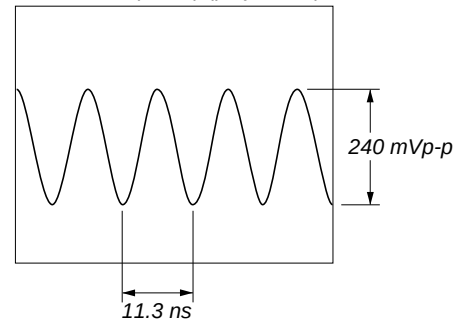


• IC Block Diagrams
– RF Board –

IC101 CXA2596M-T6

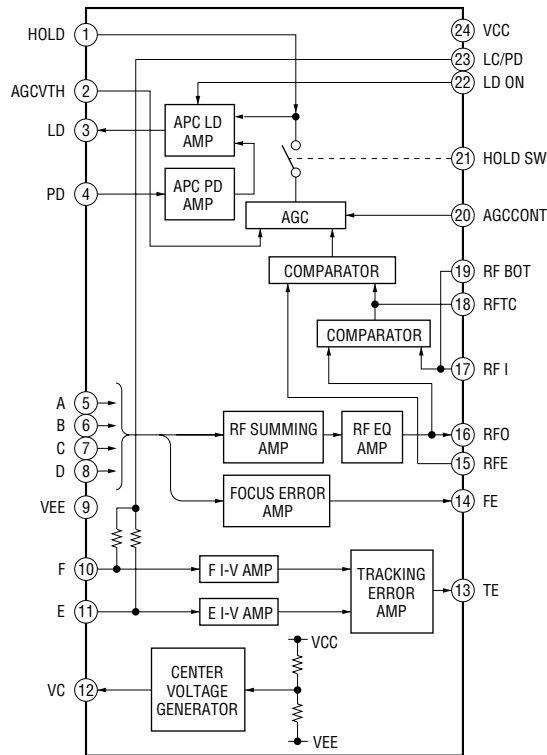


IC201 LA6556

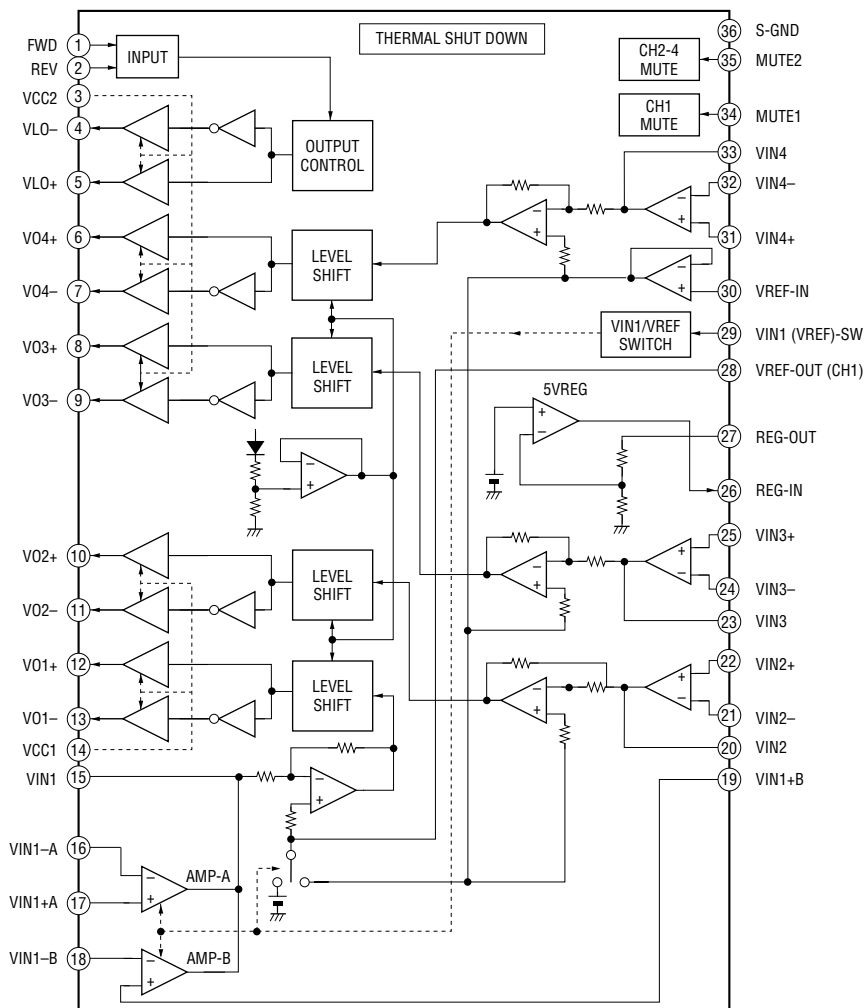


– MAIN Board –


IC101 CXD2598Q

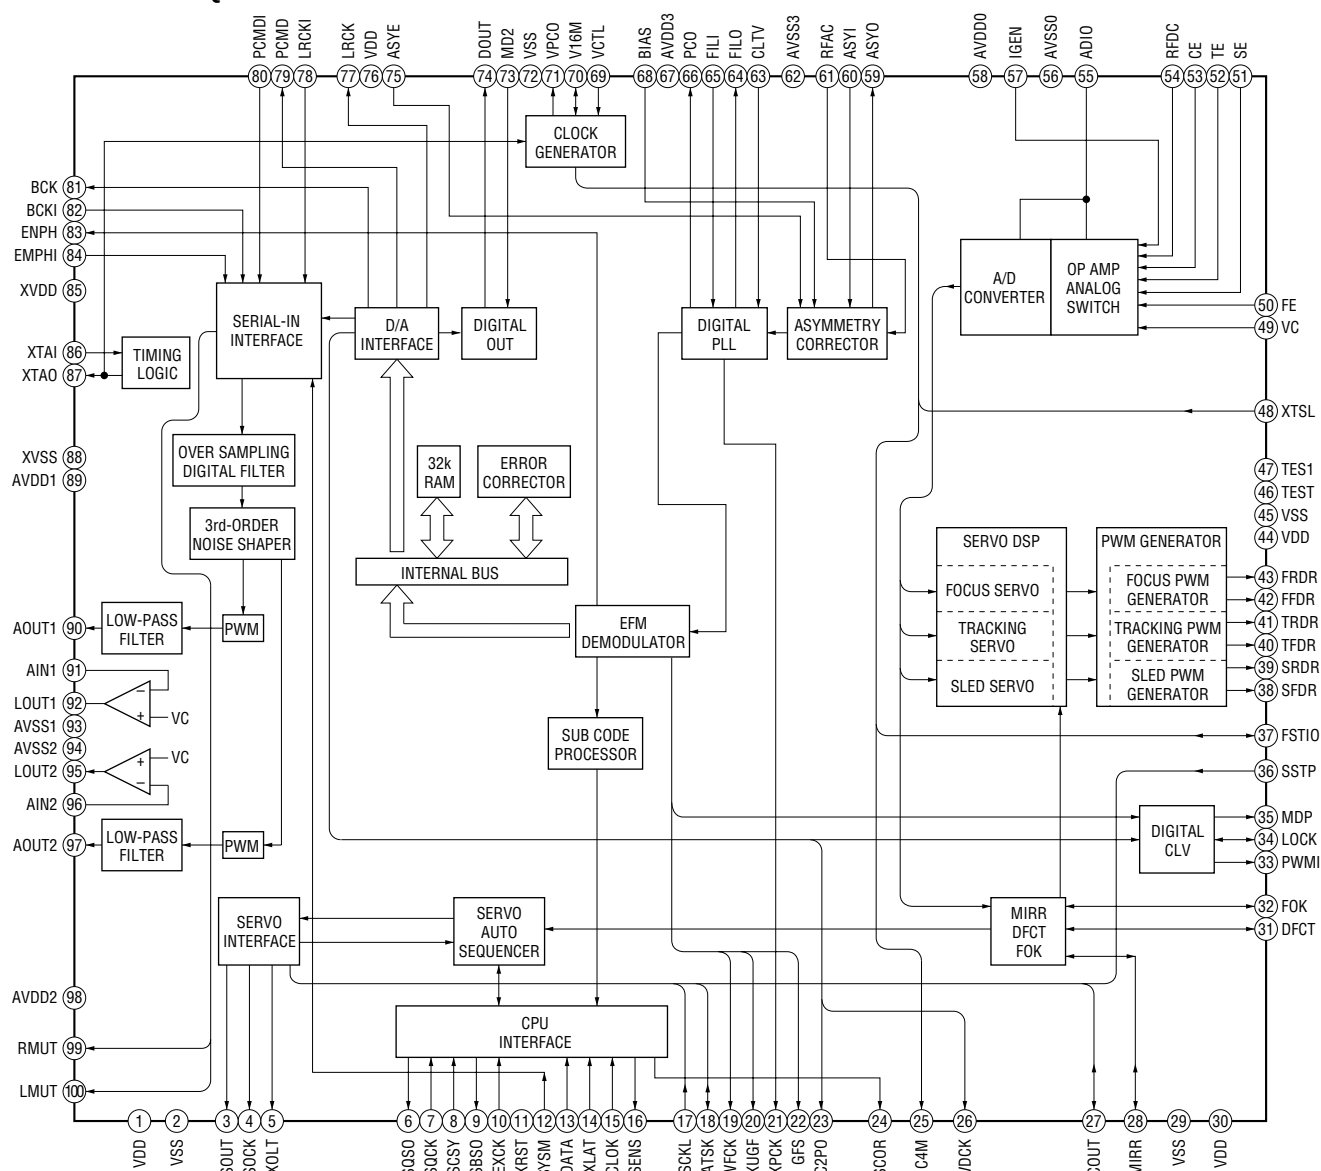

IC203 BR24C16FJ-E2 (CDX-530RF/535RF)

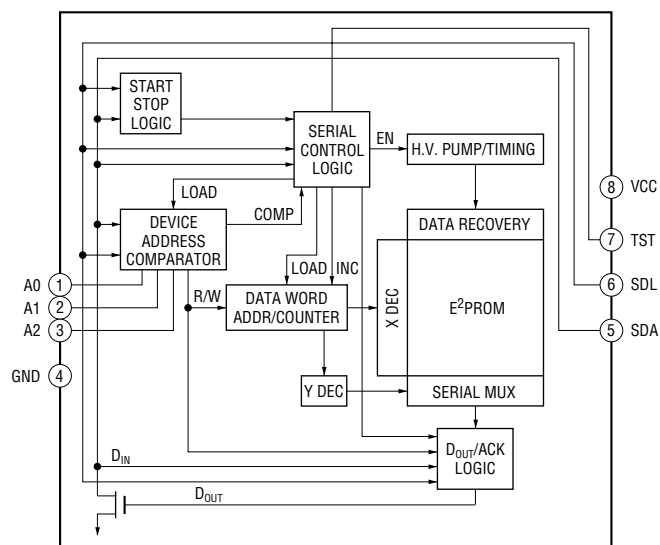


IC301 LB1930M-TLM

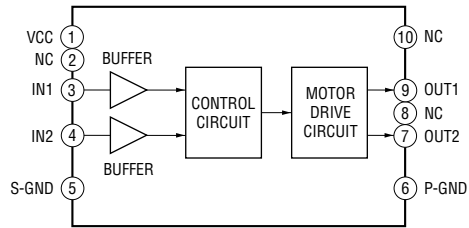


IC304 NJM2395F08

IC305 NJM2395F05

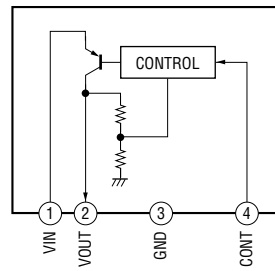


- FM Board -

IC701 BA1405F-E2

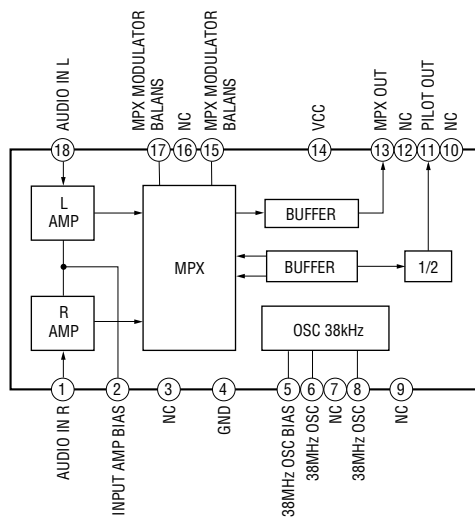

IC781 BU2611AFS-E2

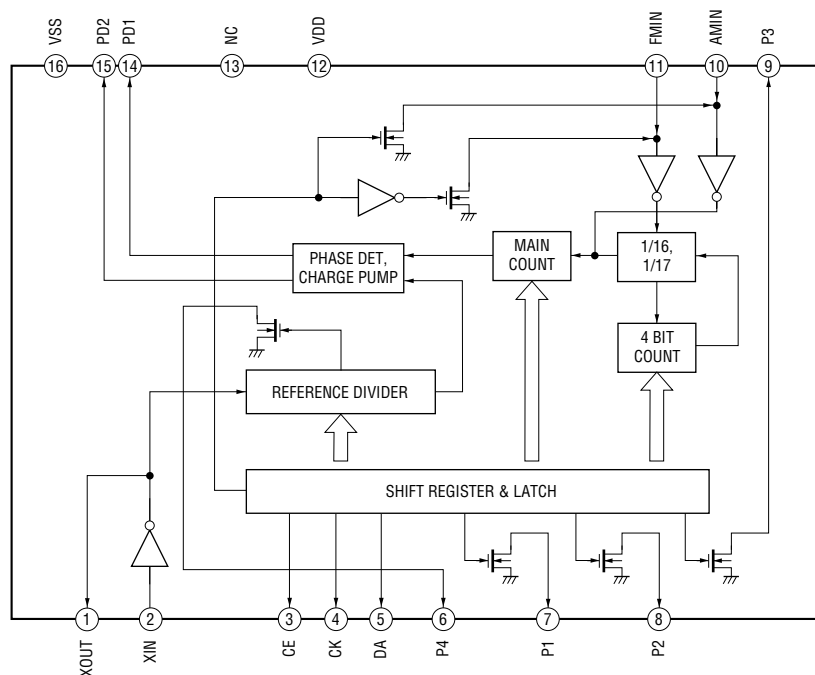

SECTION 8

EXPLODED VIEWS

NOTE:

- XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE) . . . (RED)


Parts Color Cabinet's Color

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of the electrical parts list.

The components identified by mark  or dotted line with mark  are critical for safety.
Replace only with part number specified.


Les composants identifiés par une
marque  sont critiques pour la
sécurité.
Ne les remplacer que par une pièce
portant le numéro spécifié.

(1) COVER SECTION

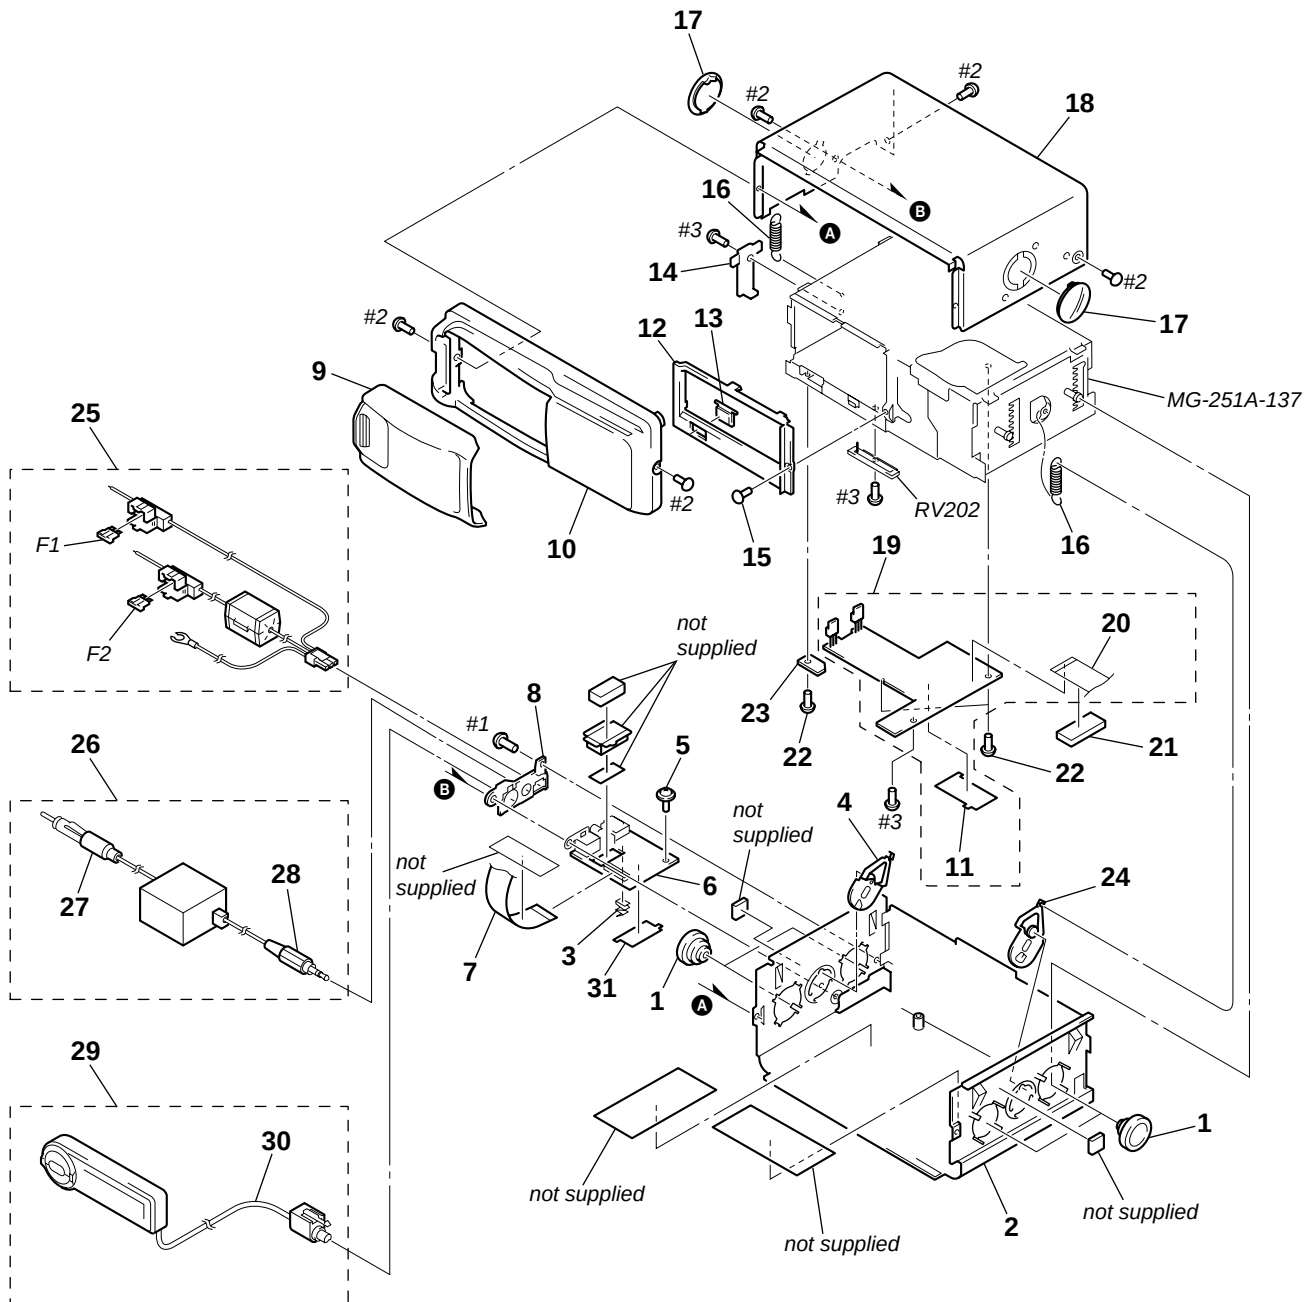


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-022-011-01	DAMPER (250T)		* 18	3-022-008-52	COVER (UPPER T) (434RF/530RF)	
* 2	X-3378-122-1	COVER (LOWER. T) ASSY (434RF/530RF)		* 18	3-022-008-62	COVER (UPPER T) (535RF)	
* 2	X-3378-123-1	COVER (LOWER. T) ASSY (535RF)		* 19	A-3294-791-A	MAIN BOARD, COMPLETE (530RF/535RF)	
3	3-046-112-01	SPRING (GROUND)		* 19	A-3294-792-A	MAIN BOARD, COMPLETE (434RF)	
4	X-3375-357-1	ARM (FLT) ASSY		20	1-676-339-11	MAIN FLEXIBLE BOARD	
5	3-041-417-01	SCREW (PCB FM)		21	3-024-067-01	CUSHION (T), BATTERY	
* 6	A-3326-027-A	FM BOARD, COMPLETE		22	3-935-636-11	SCREW (FP)	
7	1-676-735-11	FM FLEXIBLE BOARD		* 23	1-676-722-11	SW BOARD	
8	3-042-999-01	COVER (FM CONNECTOR. T) (535RF)		24	X-3375-360-2	ARM (FRT) ASSY	
8	3-042-999-11	COVER (FM CONNECTOR. T) (434RF/530RF)		25	1-792-043-11	CORD (WITH CONNECTOR) (POWER)	
9	X-3376-454-1	DOOR (T) ASSY (535RF)		26	A-3301-964-A	RELAY BOX ASSY	
9	X-3377-952-1	DOOR (T) ASSY (434RF)		27	1-792-045-11	CORD (WITH CONNECTOR) (ANT-OUT)	
9	X-3378-117-1	DOOR (T) ASSY (530RF)				(for RELAY BOX ASSY)	
10	3-030-490-31	PANEL (T), FRONT (530RF)		28	1-792-044-11	CORD (WITH CONNECTOR) (CD-OUT)	
10	3-030-490-41	PANEL (T), FRONT (535RF)				(for RELAY BOX ASSY)	
10	3-039-239-21	PANEL (T), FRONT (434RF)		29	A-3220-731-A	WIRED REMOTE COMMANDER (RM-X87)	
* 11	3-046-988-01	PLATE (MAIN), SHIELD				(530RF/535RF)	
12	3-041-218-21	ESCUTCHEON (T)		29	A-3220-733-A	WIRED REMOTE COMMANDER (RM-X88)	
13	3-022-007-02	BUTTON (EJT) (▲)				(434RF)	
* 14	3-022-012-01	HEAT SINK (T)		30	1-792-596-11	CABLE (WITH CONNECTOR) (for RM-X87/X88)	
15	3-042-244-11	SCREW (T)		* 31	3-046-989-01	PLATE (FM), SHIELD	
16	3-038-166-01	SPRING (FL), TENSION COIL		F1	1-532-798-11	FUSE (BLADE TYPE) (AUTO FUSE) (1A/32V)	
17	3-010-101-01	LEVER (FLT) (535RF)		F2	1-532-731-11	FUSE (BLADE TYPE) (AUTO FUSE) (3A/32V)	
17	3-022-010-21	LEVER (FLT) (434RF/530RF)		RV202	1-227-137-11	RES. VAR, SLIDE 10K	
						(ELEVATOR HEIGHT SENSOR)	

(2) MECHANISM DECK SECTION-1
(MG-251A-137)

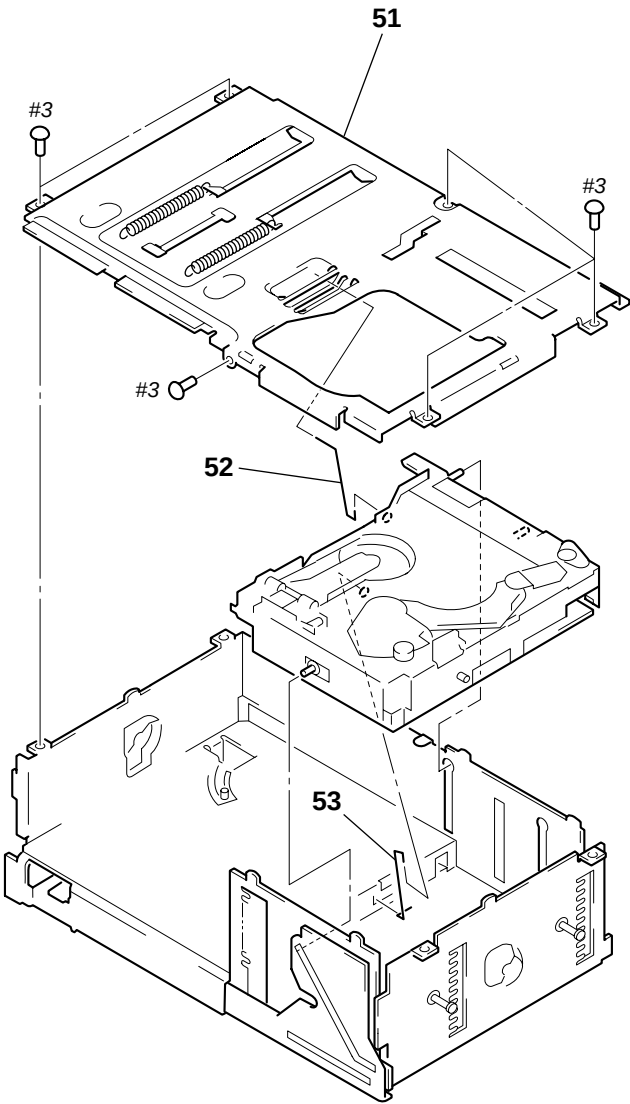


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	X-3378-091-1	CHASSIS (U. S) SUB ASSY		53	3-011-997-01	SPRING (STOPPER. LOWER)	
52	3-024-161-01	SPRING (SUT)					

(3) MECHANISM DECK SECTION-2
(MG-251A-137)

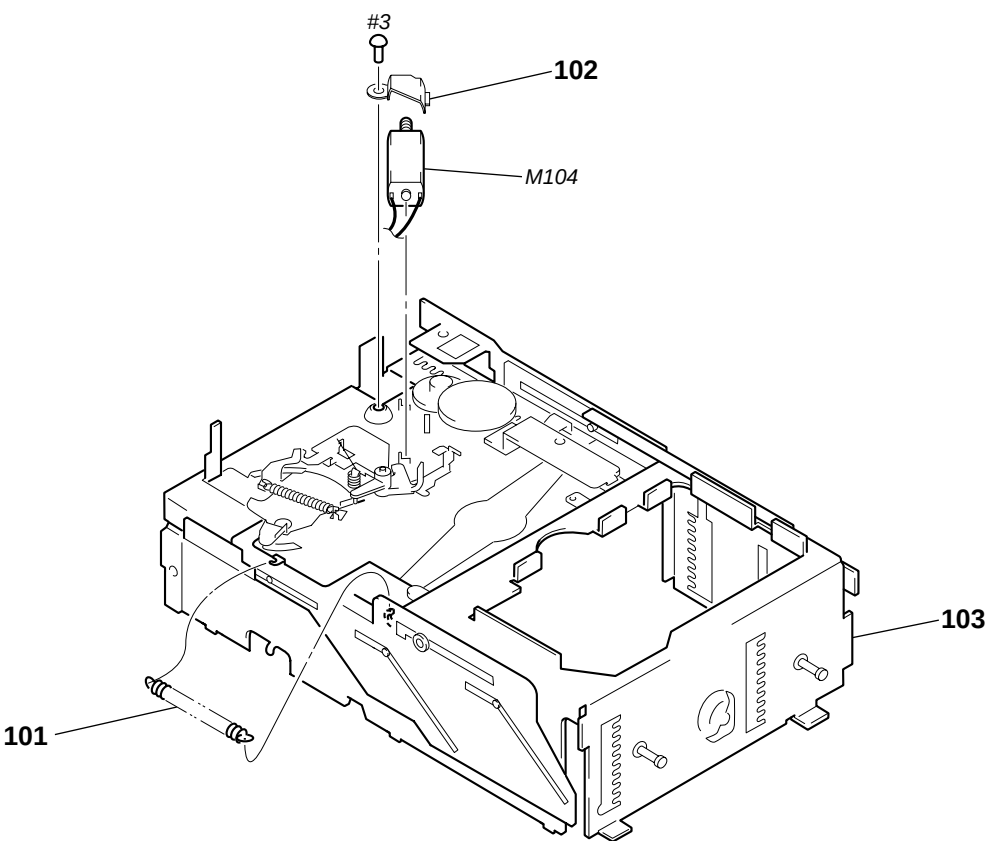


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	3-024-170-01	SPRING (SB), TENSION		103	X-3378-092-1	CHASSIS (D. S) SUB ASSY	
* 102	3-040-790-01	BRACKET (EVM. S)		M104	A-3301-123-A	ELJ MOTOR ASSY (ELEVATOR)	

(4) MECHANISM DECK SECTION-3
(MG-251A-137)

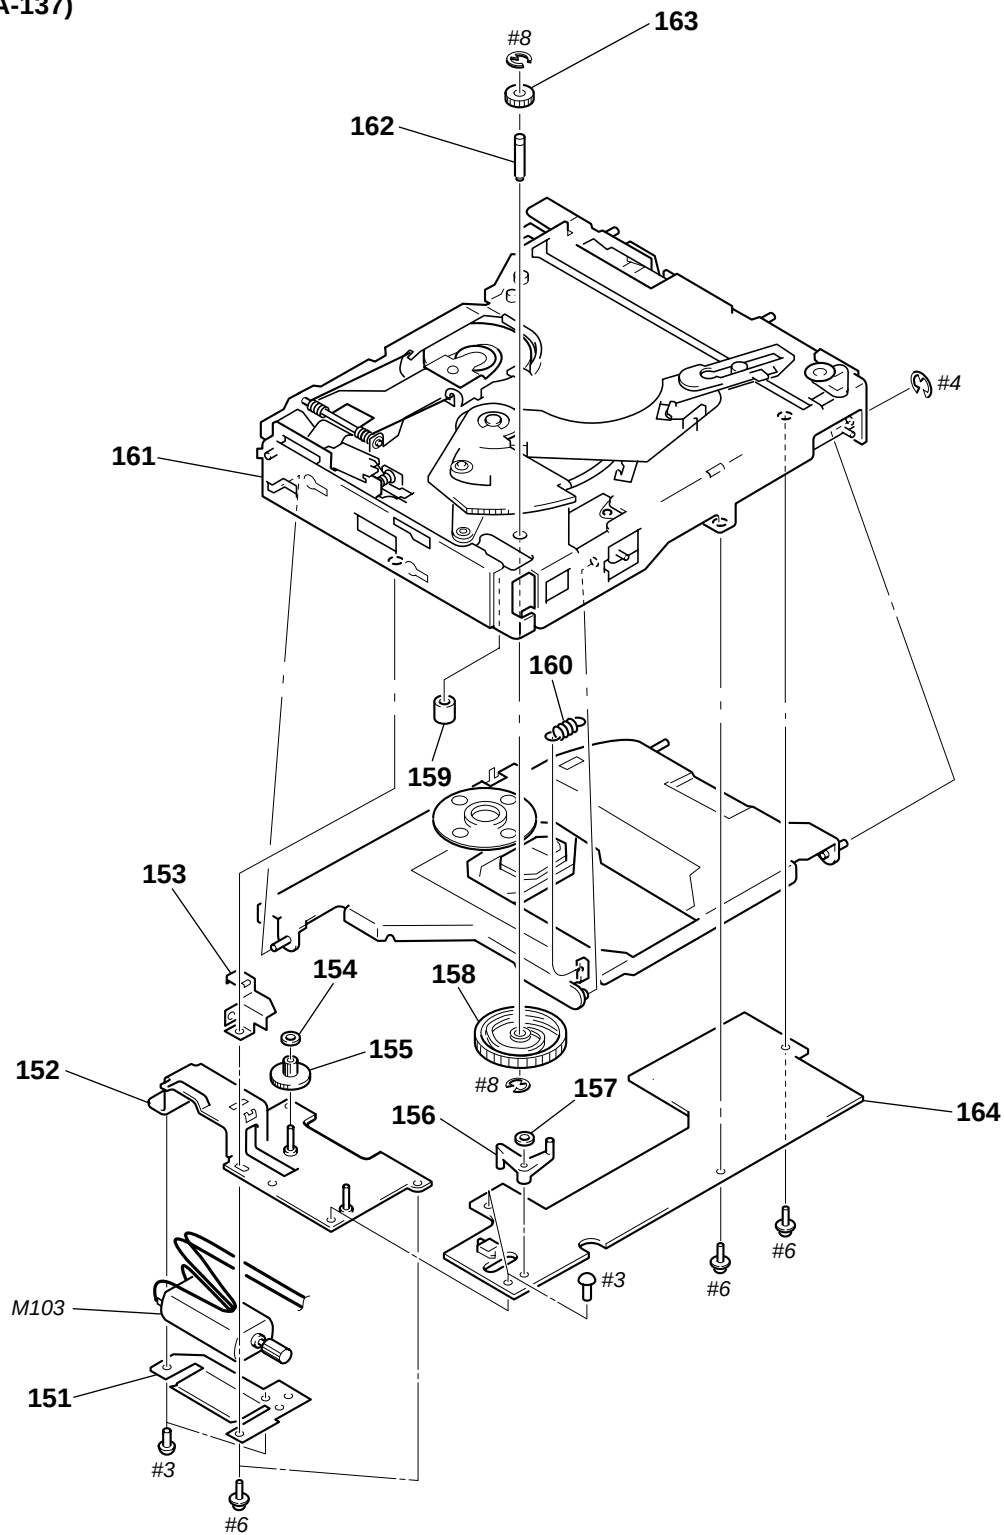

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 151	3-024-150-01	RETAINER (CHM)		159	3-010-252-01	ROLLER (CRE)	
* 152	X-3378-080-1	BRACKET (CHM. D) ASSY		160	3-010-268-01	SPRING (DH), TENSION	
153	3-010-270-01	COVER (CHM)		* 161	A-3290-194-K	MAIN ASSY, CHASSIS (EVY)	
154	3-321-813-01	WASHER, COTTER POLYETHYLENE		162	3-010-254-01	SHAFT (ROTARY PREVENTION C)	
155	3-017-139-01	GEAR (NWL)		163	3-010-253-01	GEAR (LOMINI)	
156	3-010-255-02	ARM (NSW)		* 164	A-3326-000-A	RF BOARD, COMPLETE	
157	3-573-936-00	STOPPER, REEL		M103	A-3301-123-A	ELJ MOTOR ASSY (CHUCKING)	
158	X-3373-552-1	GEAR (LOAD 1) ASSY					

(5) MECHANISM DECK SECTION-4
(MG-251A-137)

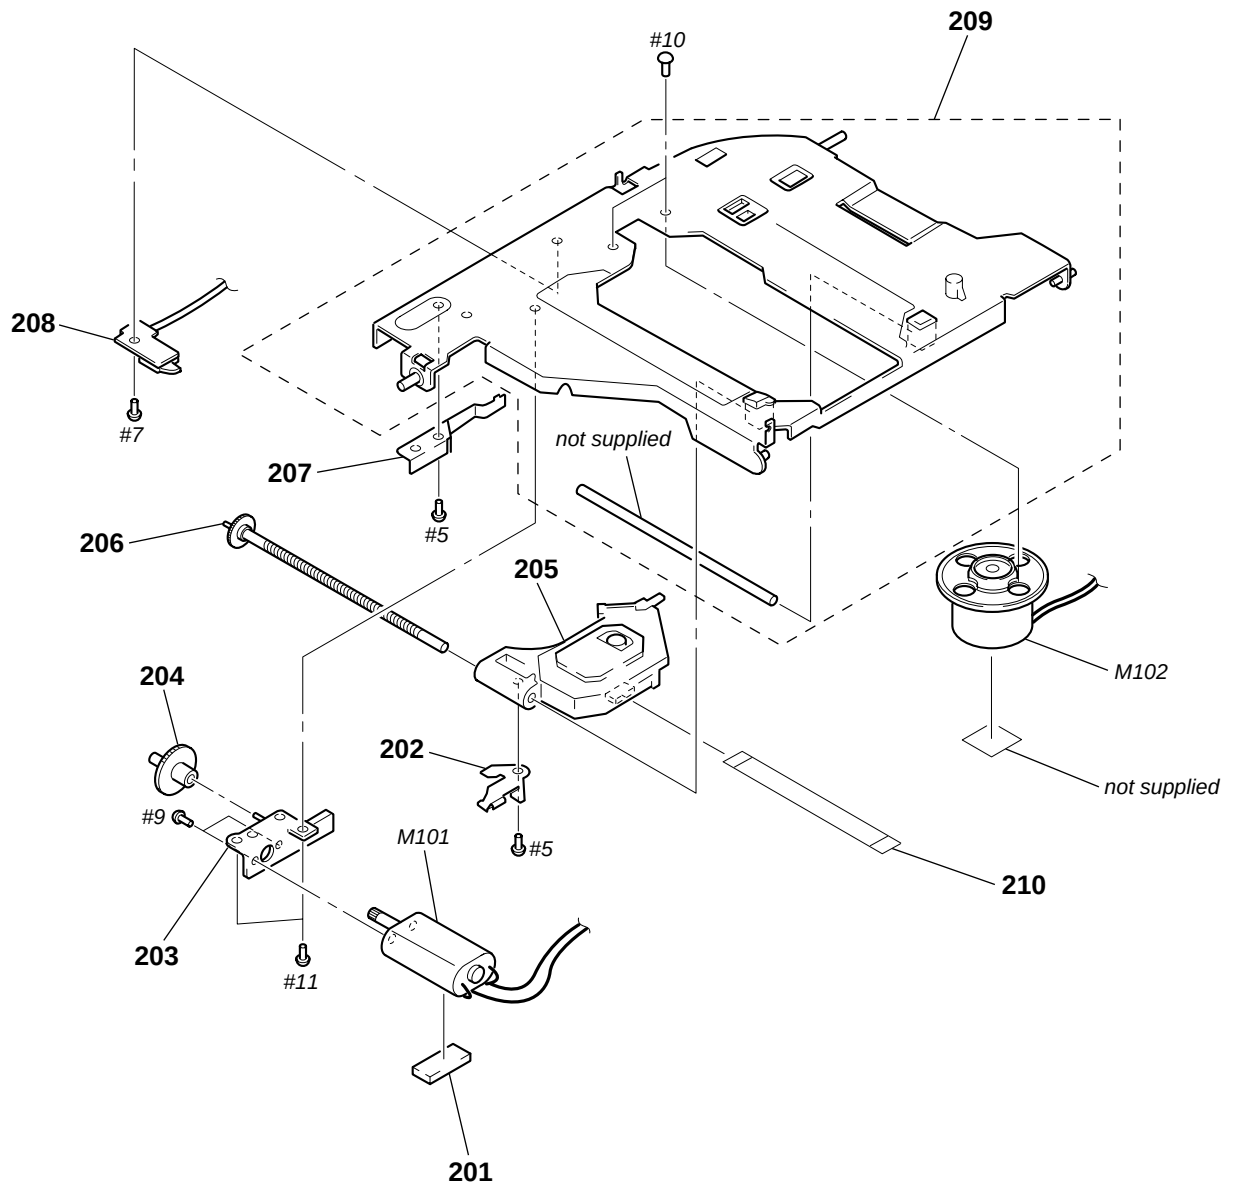

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	---

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	3-911-215-02	SHEET (LEAD RETAINER)		207	3-010-263-01	DETENT (SHAFT THRUST)	
202	3-025-743-01	SPRING (FEED), LEAF		* 208	1-676-524-11	LSW BOARD	
203	X-3378-101-1	HOLDER (SLED. S) ASSY		209	A-3301-954-A	BASE (OPT. S) (J) ASSY	
204	3-931-832-01	GEAR (SL MIDWAY)		210	1-676-341-11	OP FLEXIBLE BOARD	
Δ 205	8-820-103-03	OPTICAL PICK-UP KSS-720A/K1RP		M101	A-3315-151-A	SLED MOTOR ASSY (251)	
206	A-3291-669-A	SHAFT (FEED) ASSY		M102	A-3301-998-A	SPINDLE MOTOR (S) SUB ASSY	

SECTION 9 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA. . : μ A. . uPA. . : μ PA. .
uPB. . : μ PB. . uPC. . : μ PC. .
uPD. . : μ PD. .
- CAPACITORS
uF: μ F
- COILS
uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	A-3326-027-A	FM BOARD, COMPLETE *****		C782	1-162-920-11	CERAMIC CHIP 27PF 5%	50V
		< CAPACITOR >		C783	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C301	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V	C784	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C303	1-127-820-11	CERAMIC CHIP 4.7uF	16V	C785	1-126-514-11	ELECT 22uF 20%	10V
C304	1-109-982-11	CERAMIC CHIP 1uF	10% 10V	C786	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V
C305	1-128-499-11	ELECT 220uF	20% 16V				
C319	1-109-982-11	CERAMIC CHIP 1uF	10% 10V	C787	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V
				C788	1-109-982-11	CERAMIC CHIP 1uF 10%	10V
C320	1-115-866-11	ELECT 4.7uF	20% 35V			< CONNECTOR/JACK >	
C321	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V	CN302	1-794-066-11	CONNECTOR, MINIATURE DIN 8P (DISPLAY)	
C322	1-125-972-61	ELECT 100uF	20% 16V	CN303	1-793-286-11	PIN, CONNECTOR (PC BOARD) 3P (POWER)	
C323	1-125-837-11	CERAMIC CHIP 1uF	10% 6.3V	CN701	1-784-829-21	CONNECTOR, FPC 21P	
C324	1-124-584-00	ELECT 100uF	20% 10V	CN703	1-566-822-41	JACK (OUTPUT)	
						< DIODE >	
C325	1-162-927-11	CERAMIC CHIP 100PF	5% 50V	D301	8-719-029-25	DIODE DSA3A4-F2	
C326	1-162-927-11	CERAMIC CHIP 100PF	5% 50V	D302	8-719-022-90	DIODE MA8160-M-TX	
C328	1-162-927-11	CERAMIC CHIP 100PF	5% 50V	D310	8-719-423-23	DIODE MA8110-M-TX	
C329	1-162-927-11	CERAMIC CHIP 100PF	5% 50V	D311	8-719-977-12	DIODE DTZ6.8B	
				D312	8-719-801-78	DIODE MA152WK-TX	
C331	1-162-927-11	CERAMIC CHIP 100PF	5% 50V				
C701	1-126-514-11	ELECT 22uF	20% 10V	D313	8-719-977-12	DIODE DTZ6.8B	
C702	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V	D701	8-719-058-78	DIODE HVU202A3TRF	
C703	1-162-915-11	CERAMIC CHIP 10PF	0.5PF 50V	D702	8-719-988-61	DIODE 1SS355TE-17	
C704	1-162-927-11	CERAMIC CHIP 100PF	5% 50V	D703	8-719-988-61	DIODE 1SS355TE-17	
						< IC >	
C705	1-115-866-11	ELECT 4.7uF	20% 35V	IC304	8-759-711-58	IC NJM78L05UA	
C706	1-162-927-11	CERAMIC CHIP 100PF	5% 50V	IC701	8-759-393-50	IC BA1405F-E2	
C707	1-162-997-11	CERAMIC CHIP 10PF	0.5PF 50V	IC781	8-759-595-05	IC BU2611AFS-E2	
C708	1-162-915-11	CERAMIC CHIP 10PF	0.5PF 50V			< COIL >	
C709	1-162-916-11	CERAMIC CHIP 12PF	5% 50V	L301	1-419-545-11	INDUCTOR 1uH	
				L701	1-419-467-11	COIL, IFT	
C710	1-162-917-11	CERAMIC CHIP 15PF	5% 50V	L702	1-411-845-11	COIL, AIR-CORE	
C711	1-162-913-11	CERAMIC CHIP 8PF	0.5PF 50V	L703	1-410-997-42	INDUCTOR CHIP 2.2uH	
C712	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V			< TRANSISTOR >	
C713	1-162-923-11	CERAMIC CHIP 47PF	5% 50V	Q301	8-729-900-53	TRANSISTOR DTC114EKA-T146	
C714	1-163-243-11	CERAMIC CHIP 47PF	5% 50V	Q308	8-729-120-28	TRANSISTOR 2SC2412K-T-146-Q	
				Q309	1-801-806-11	TRANSISTOR DTC144EKA-T146	
C715	1-107-725-11	CERAMIC CHIP 0.1uF	10% 16V	Q310	8-729-027-31	TRANSISTOR DTA124EKA-T146	
C716	1-109-982-11	CERAMIC CHIP 1uF	10% 10V	Q311	8-729-106-68	TRANSISTOR 2SD1664-T100-R	
C720	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V				
C741	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V	Q701	8-729-120-28	TRANSISTOR 2SC2412K-T-146-Q	
C742	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V	Q702	8-729-804-72	TRANSISTOR 2SC2814-F4	
C743	1-115-872-11	ELECT 2.2uF	20% 50V				
C761	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V				
C762	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V				
C763	1-115-872-11	ELECT 2.2uF	20% 50V				
C781	1-162-920-11	CERAMIC CHIP 27PF	5% 50V				

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark			
Q703	8-729-804-72	TRANSISTOR	2SC2814-F4			< VIBRATOR >						
Q781	8-729-120-28	TRANSISTOR	2SC2412K-T-146-Q			X701	1-567-093-00	VIBRATOR, CRYSTAL (38kHz)				
Q782	8-729-120-28	TRANSISTOR	2SC2412K-T-146-Q			X781	1-760-838-21	VIBRATOR, CRYSTAL (7.2MHz)				
< RESISTOR >						*****						
R301	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	*	1-676-524-11	LSW BOARD				
R310	1-216-089-00	RES-CHIP	47K	5%	1/10W	*****						
R311	1-216-085-00	METAL CHIP	33K	5%	1/10W	< SWITCH >						
R312	1-216-841-11	METAL CHIP	47K	5%	1/16W							
R313	1-216-206-00	RES-CHIP	2.2K	5%	1/8W							
R315	1-216-041-00	METAL CHIP	470	5%	1/10W	SW3	1-529-565-11	SWITCH, PUSH (1 KEY) (LIMIT)				
R316	1-216-025-00	RES-CHIP	100	5%	1/10W	*****						
R317	1-216-049-11	METAL CHIP	1K	5%	1/10W	*	A-3294-791-A	MAIN BOARD, COMPLETE (530RF/535RF)				
R319	1-216-049-11	METAL CHIP	1K	5%	1/10W	*	A-3294-792-A	MAIN BOARD, COMPLETE (434RF)				
R320	1-216-049-11	METAL CHIP	1K	5%	1/10W	*****						
R321	1-216-049-11	METAL CHIP	1K	5%	1/10W							
R701	1-216-850-11	METAL CHIP	270K	5%	1/16W	*	1-676-339-11	MAIN FLEXIBLE BOARD				
R702	1-216-835-11	METAL CHIP	15K	5%	1/16W	3-046-988-01 PLATE (MAIN), SHIELD						
R703	1-216-818-11	METAL CHIP	560	5%	1/16W	< CAPACITOR >						
R704	1-216-809-11	METAL CHIP	100	5%	1/16W	C101	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
R705	1-216-828-11	METAL CHIP	3.9K	5%	1/16W	C102	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
R706	1-216-833-11	RES-CHIP	10K	5%	1/16W	C103	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
R707	1-216-833-11	RES-CHIP	10K	5%	1/16W	C104	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
R708	1-216-834-11	METAL CHIP	12K	5%	1/16W	C110	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V	
R709	1-216-821-11	METAL CHIP	1K	5%	1/16W	C111	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V	
R710	1-216-833-11	RES-CHIP	10K	5%	1/16W	C112	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V	
R711	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	C120	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V	
R712	1-216-817-11	METAL CHIP	470	5%	1/16W	C121	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
R713	1-216-845-11	METAL CHIP	100K	5%	1/16W	C122	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	
R714	1-216-815-11	METAL CHIP	330	5%	1/16W	C123	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
R715	1-216-809-11	METAL CHIP	100	5%	1/16W	C124	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V	
R716	1-216-037-00	METAL CHIP	330	5%	1/10W	C125	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V	
R717	1-216-025-00	RES-CHIP	100	5%	1/10W	C126	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
R741	1-216-821-11	METAL CHIP	1K	5%	1/16W	C127	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	
R742	1-216-833-11	RES-CHIP	10K	5%	1/16W	C129	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
R743	1-216-840-11	METAL CHIP	39K	5%	1/16W	C130	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
R745	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	C140	1-162-963-11	CERAMIC CHIP	680PF	10%	50V	
R746	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	C141	1-162-963-11	CERAMIC CHIP	680PF	10%	50V	
R761	1-216-821-11	METAL CHIP	1K	5%	1/16W	C142	1-164-217-11	CERAMIC CHIP	150PF	5%	50V	
R762	1-216-833-11	RES-CHIP	10K	5%	1/16W	C143	1-164-217-11	CERAMIC CHIP	150PF	5%	50V	
R763	1-216-840-11	METAL CHIP	39K	5%	1/16W	C144	1-126-382-11	ELECT	100uF	20%	16V	
R765	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	C145	1-126-382-11	ELECT	100uF	20%	16V	
R766	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	C201	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
R781	1-216-837-11	METAL CHIP	22K	5%	1/16W	C202	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
R782	1-216-833-11	RES-CHIP	10K	5%	1/16W	(530RF/535RF)						
R783	1-216-819-11	METAL CHIP	680	5%	1/16W	C203	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
R784	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	C204	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
R787	1-216-049-11	METAL CHIP	1K	5%	1/10W	C205	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
R788	1-216-049-11	METAL CHIP	1K	5%	1/10W	C301	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
R789	1-216-049-11	METAL CHIP	1K	5%	1/10W	C302	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
R799	1-216-295-00	SHORT	0			C303	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
< VARIABLE RESISTOR >						C307	1-165-112-11	CERAMIC CHIP	0.33uF	20%	10V	
RV701	1-238-092-11	RES, ADJ, CERMET	47K			C308	1-125-837-11	CERAMIC CHIP	1uF	10%	6.3V	
RV702	1-238-086-11	RES, ADJ, CERMET	470			C309	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
						C310	1-125-701-11	DOUBLE LAYER	0.047F		5.5V	
						C311	1-126-382-11	ELECT	100uF	20%	16V	
						C312	1-115-156-11	CERAMIC CHIP	1uF		10V	
						C313	1-126-382-11	ELECT	100uF	20%	16V	

MAIN

Ref. No.	Part No.	Description	Remark		
C314	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C315	1-115-466-00	ELECT	1000uF	20%	16V
C316	1-126-382-11	ELECT	100uF	20%	16V
C317	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C318	1-126-382-11	ELECT	100uF	20%	16V
C319	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C401	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C402	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C404	1-126-157-11	ELECT	10uF	20%	16V
C405	1-126-157-11	ELECT	10uF	20%	16V
C406	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C407	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C416	1-126-382-11	ELECT	100uF	20%	16V
< CONNECTOR >					
CN231	1-784-829-21	CONNECTOR, FPC 21P			
< DIODE >					
D201	8-719-069-57	DIODE UDZS-TE17-6.8B			
D202	8-719-069-57	DIODE UDZS-TE17-6.8B			
D231	8-719-988-61	DIODE 1SS355TE-17			
D306	8-719-069-56	DIODE UDZS-TE17-6.2B			
D307	8-719-988-61	DIODE 1SS355TE-17			
D308	8-719-914-44	DIODE DAP202K-T-146			
D309	8-719-988-61	DIODE 1SS355TE-17			
D310	8-719-422-67	DIODE MA8062-H-TX			
D311	8-719-069-57	DIODE UDZS-TE17-6.8B			
D312	8-719-069-57	DIODE UDZS-TE17-6.8B			
D313	8-719-069-57	DIODE UDZS-TE17-6.8B			
< IC >					
IC101	8-752-392-04	IC CXD2598Q			
IC201	8-752-914-29	IC CXP740056-004R			
IC203	8-759-660-38	IC BR24C16FJ-E2 (530RF/535RF)			
IC301	8-759-527-33	IC LB1930M-TLM			
IC303	8-759-363-81	IC XC61AN4002PR			
IC304	8-759-655-30	IC NJM2395F08			
IC305	8-759-655-29	IC NJM2395F05			
IC401	8-759-662-11	IC TLV2362IPWR			
< COIL >					
L140	1-412-058-11	INDUCTOR CHIP	10uH		
< TRANSISTOR >					
Q201	8-729-020-67	TRANSISTOR	XN1A312-TX		
Q231	8-729-027-23	TRANSISTOR	DTA114EKA-T146		
Q232	8-729-027-23	TRANSISTOR	DTA114EKA-T146		
Q301	8-729-028-62	TRANSISTOR	DTA115EKA-T146		
Q302	8-729-230-49	TRANSISTOR	2SC2712-YG-TE85L		
Q303	8-729-921-12	TRANSISTOR	2SD1834-T101		
Q401	8-729-901-00	TRANSISTOR	DTC124EKA-T146		
Q402	8-729-027-23	TRANSISTOR	DTA114EKA-T146		
Q410	8-729-015-39	TRANSISTOR	UN2226- (TX)		
Q420	8-729-015-39	TRANSISTOR	UN2226- (TX)		

Ref. No.	Part No.	Description	Remark		
< RESISTOR >					
R101	1-216-833-11	RES-CHIP	10K	5%	1/16W
R111	1-216-833-11	RES-CHIP	10K	5%	1/16W
R112	1-216-845-11	METAL CHIP	100K	5%	1/16W
R114	1-216-833-11	RES-CHIP	10K	5%	1/16W
R115	1-216-833-11	RES-CHIP	10K	5%	1/16W
R116	1-216-837-11	METAL CHIP	22K	5%	1/16W
R117	1-216-845-11	METAL CHIP	100K	5%	1/16W
R120	1-216-839-11	METAL CHIP	33K	5%	1/16W
R121	1-216-845-11	METAL CHIP	100K	5%	1/16W
R122	1-216-845-11	METAL CHIP	100K	5%	1/16W
R123	1-216-833-11	RES-CHIP	10K	5%	1/16W
R124	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R125	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R126	1-216-857-11	METAL CHIP	1M	5%	1/16W
R140	1-216-834-11	METAL CHIP	12K	5%	1/16W
R141	1-216-834-11	METAL CHIP	12K	5%	1/16W
R142	1-216-834-11	METAL CHIP	12K	5%	1/16W
R143	1-216-834-11	METAL CHIP	12K	5%	1/16W
R144	1-216-834-11	METAL CHIP	12K	5%	1/16W
R145	1-216-834-11	METAL CHIP	12K	5%	1/16W
R146	1-216-833-11	RES-CHIP	10K	5%	1/16W
R147	1-216-833-11	RES-CHIP	10K	5%	1/16W
R201	1-216-821-11	METAL CHIP	1K	5%	1/16W
R202	1-216-845-11	METAL CHIP	100K	5%	1/16W
R203	1-216-841-11	METAL CHIP	47K	5%	(530RF/535RF) 1/16W (530RF/535RF)
R207	1-216-845-11	METAL CHIP	100K	5%	1/16W
R209	1-216-833-11	RES-CHIP	10K	5%	1/16W
R220	1-216-864-11	METAL CHIP	0	5%	1/16W (530RF/535RF)
R221	1-216-864-11	METAL CHIP	0	5%	1/16W (530RF/535RF)
R232	1-216-845-11	METAL CHIP	100K	5%	1/16W
R233	1-216-833-11	RES-CHIP	10K	5%	1/16W
R234	1-216-821-11	METAL CHIP	1K	5%	1/16W
R252	1-216-845-11	METAL CHIP	100K	5%	1/16W
R253	1-216-845-11	METAL CHIP	100K	5%	1/16W
R254	1-216-845-11	METAL CHIP	100K	5%	1/16W
R302	1-216-845-11	METAL CHIP	100K	5%	1/16W
R303	1-216-846-11	METAL CHIP	120K	5%	1/16W
R304	1-216-847-11	METAL CHIP	150K	5%	1/16W
R305	1-216-841-11	METAL CHIP	47K	5%	1/16W
R306	1-216-844-11	METAL CHIP	82K	5%	1/16W
R311	1-216-841-11	METAL CHIP	47K	5%	1/16W
R314	1-216-864-11	METAL CHIP	0	5%	1/16W
R315	1-216-864-11	METAL CHIP	0	5%	1/16W
R401	1-216-833-11	RES-CHIP	10K	5%	1/16W
R402	1-216-833-11	RES-CHIP	10K	5%	1/16W
R403	1-216-833-11	RES-CHIP	10K	5%	1/16W
R404	1-216-833-11	RES-CHIP	10K	5%	1/16W
R405	1-216-833-11	RES-CHIP	10K	5%	1/16W
R406	1-216-833-11	RES-CHIP	10K	5%	1/16W
R407	1-216-833-11	RES-CHIP	10K	5%	1/16W
R408	1-216-833-11	RES-CHIP	10K	5%	1/16W
R411	1-216-813-11	METAL CHIP	220	5%	1/16W
R412	1-216-813-11	METAL CHIP	220	5%	1/16W

Ref. No.	Part No.	Description	Remark		
R413	1-216-845-11	METAL CHIP	100K	5%	1/16W
R414	1-216-845-11	METAL CHIP	100K	5%	1/16W
R415	1-216-864-11	METAL CHIP	0	5%	1/16W
R416	1-216-864-11	METAL CHIP	0	5%	1/16W
R420	1-216-864-11	METAL CHIP	0	5%	1/16W
< VARIABLE RESISTOR >					
RV201	1-223-834-11	RES, ADJ, CARBON 47K			
< SWITCH >					
SW201	1-572-688-11	SWITCH, PUSH (1 KEY) (MAGAZINE DETECT)			
< VIBRATOR >					
X130	1-760-307-11	VIBRATOR, CERAMIC (16.9344MHz)			
X201	1-579-126-11	VIBRATOR, CERAMIC (12MHz)			

*	A-3326-000-A	RF BOARD, COMPLETE			

< CAPACITOR >					
C101	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C102	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C103	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C104	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C105	1-125-837-11	CERAMIC CHIP	1uF	10%	6.3V
C106	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C107	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C108	1-124-779-00	ELECT CHIP	10uF	20%	16V
C109	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C110	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C111	1-124-779-00	ELECT CHIP	10uF	20%	16V
C201	1-117-681-11	ELECT CHIP	100uF	20%	16V
C202	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C203	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C204	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C205	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C206	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C207	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C208	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C209	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C217	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
< CONNECTOR >					
CN102	1-778-303-21	CONNECTOR, FPC (ZIF) 16P			
CNJ101	1-778-777-21	CONNECTOR, FPC 26P			
< IC >					
IC101	8-752-095-36	IC CXA2596M-T6			
IC201	8-759-653-67	IC LA6556			
< TRANSISTOR >					
Q101	8-729-141-48	TRANSISTOR	2SB624T1-BV345		
< RESISTOR >					
R101	1-216-847-11	METAL CHIP	150K	5%	1/16W

Ref. No.	Part No.	Description	Remark		
R102	1-216-847-11	METAL CHIP	150K	5%	1/16W
R103	1-216-864-11	METAL CHIP	0	5%	1/16W
R104	1-216-158-00	RES-CHIP	22	5%	1/8W
R105	1-216-857-11	METAL CHIP	1M	5%	1/16W
R106	1-216-857-11	METAL CHIP	1M	5%	1/16W
R107	1-216-864-11	METAL CHIP	0	5%	1/16W
R108	1-216-845-11	METAL CHIP	100K	5%	1/16W
R109	1-216-837-11	METAL CHIP	22K	5%	1/16W
R110	1-216-821-11	METAL CHIP	1K	5%	1/16W
R201	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R202	1-216-833-11	RES-CHIP	10K	5%	1/16W
R203	1-216-833-11	RES-CHIP	10K	5%	1/16W
R204	1-216-842-11	METAL CHIP	56K	5%	1/16W
R205	1-216-833-11	RES-CHIP	10K	5%	1/16W
R206	1-216-842-11	METAL CHIP	56K	5%	1/16W
R207	1-216-833-11	RES-CHIP	10K	5%	1/16W
R208	1-216-842-11	METAL CHIP	56K	5%	1/16W
R209	1-216-833-11	RES-CHIP	10K	5%	1/16W
R210	1-216-842-11	METAL CHIP	56K	5%	1/16W
R211	1-216-833-11	RES-CHIP	10K	5%	1/16W
R212	1-216-839-11	METAL CHIP	33K	5%	1/16W
R213	1-216-833-11	RES-CHIP	10K	5%	1/16W
R214	1-216-839-11	METAL CHIP	33K	5%	1/16W
R215	1-216-839-11	METAL CHIP	33K	5%	1/16W
R216	1-216-842-11	METAL CHIP	56K	5%	1/16W
R218	1-216-839-11	METAL CHIP	33K	5%	1/16W
R219	1-216-843-11	METAL CHIP	68K	5%	1/16W
R220	1-216-834-11	METAL CHIP	12K	5%	1/16W
R222	1-216-821-11	METAL CHIP	1K	5%	1/16W
R223	1-216-821-11	METAL CHIP	1K	5%	1/16W
< SWITCH >					
SW1	1-529-566-21	SWITCH, PUSH (1 KEY)	(CHUCKING END DETECT)		
SW2	1-529-566-21	SWITCH, PUSH (1 KEY) (SAVE END DETECT)			

*	1-676-722-11	SW BAORD	*****		
< SWITCH >					
SW301	1-571-532-21	SWITCH, TACTIL (▲)			
SW302	1-571-532-21	SWITCH, TACTIL (RESET)			

MISCELLANEOUS					

7	1-676-735-11	FM FLEXIBLE BOARD			
20	1-676-339-11	MAIN FLEXIBLE BOARD			
25	1-792-043-11	CORD (WITH CONNECTOR) (POWER)			
26	A-3301-964-A	RELAY BOX ASSY			
27	1-792-045-11	CORD (WITH CONNECTOR) (ANT-OUT)			
		(for RELAY BOX ASSY)			
28	1-792-044-11	CORD (WITH CONNECTOR) (CD-OUT)			
		(for RELAY BOX ASSY)			
29	A-3220-731-A	WIRED REMOTE COMMANDER (RM-X87)			
		(530RF/535RF)			
29	A-3220-733-A	WIRED REMOTE COMMANDER (RM-X88)			
		(434RF)			

Ref. No.	Part No.	Description	Remark
30	1-792-596-11	CABLE (WITH CONNECTOR) (for RM-X87/X88)	
△ 205	8-820-103-03	OPTICAL PICK-UP KSS-720A/K1RP	
210	1-676-341-11	OP FLEXIBLE BOARD	
F1	1-532-798-11	FUSE (BLADE TYPE) (AUTO FUSE) (1A/32V)	
F2	1-532-731-11	FUSE (BLADE TYPE) (AUTO FUSE) (3A/32V)	
M101	A-3315-151-A	SLED MOTOR ASSY (251)	
M102	A-3301-998-A	SPINDLE MOTOR (S) SUB ASSY	
M103	A-3301-123-A	ELJ MOTOR ASSY (CHUCKING)	
M104	A-3301-123-A	ELJ MOTOR ASSY (ELEVATOR)	
RV202	1-227-137-11	RES, VAR, SLIDE 10K	
		(ELEVATOR HEIGHT SENSOR)	

HARDWARE LIST

#1	7-685-862-09	SCREW +BVT 2.6X6 (S)	
#2	7-685-792-09	SCREW +PTT 2.6X6 (S)	
#3	7-685-781-09	SCREW +PTT 2X4 (S)	
#4	7-624-104-04	STOP RING 2.0, TYPE -E	
#5	7-627-554-07	SCREW, PRECISION +P 2X2.2	
#6	7-628-253-00	SCREW +PS 2X4	
#7	7-627-553-27	SCREW, PRECISION +P 2X2.5	
#8	7-624-102-04	STOP RING 1.5, TYPE -E	
#9	7-627-850-28	SCREW, PRECISION +P 1.4X3	
#10	7-627-000-00	SCREW, PRECISION +P 1.7X2.2 TYPE 3	
#11	7-627-553-37	PRECISION SCREW +P 2X3 TYPE 3	


ACCESSORIES & PACKING MATERIALS

1-418-783-11	WIRELESS REMOTE COMMANDER (RM-X89)	(530RF/535RF)
3-867-765-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH)	(530RF)
3-867-766-11	MANUAL, INSTRUCTION, INSTALL	(ENGLISH, FRENCH) (530RF)
3-867-767-11	MANUAL, INSTRUCTION (ENGLISH, FRENCH)	(434RF: US, Canadian)
3-867-767-21	MANUAL, INSTRUCTION (ENGLISH, SPANISH, CHINESE) (434RF: E)	
3-867-767-31	MANUAL, INSTRUCTION (ENGLISH, SPANISH, SWEDISH, PORTUGUESE) (434RF: AEP, UK)	
3-867-767-41	MANUAL, INSTRUCTION (FRENCH, GERMAN, DUTCH, ITALIAN) (434RF: AEP, UK)	
3-867-767-51	MANUAL, INSTRUCTION (ENGLISH, GERMAN, POLISH, GREEK, RUSSIAN) (434RF: German)	
3-867-768-11	MANUAL, INSTRUCTION, INSTALL (ENGLISH, FRENCH) (434RF: US, Canadian)	
3-867-768-21	MANUAL, INSTRUCTION, INSTALL (ENGLISH, SPANISH, CHINESE) (434RF: E)	
3-867-768-31	MANUAL, INSTRUCTION, INSTALL	(ENGLISH, SPANISH, SWEDISH, PORTUGUESE) (434RF: AEP, UK)
3-867-768-41	MANUAL, INSTRUCTION, INSTALL (FRENCH, GERMAN, DUTCH, ITALIAN) (434RF: AEP, UK)	
3-867-768-51	MANUAL, INSTRUCTION, INSTALL	(ENGLISH, GERMAN, POLISH, GREEK, RUSSIAN) (434RF: German)
3-867-769-11	MANUAL, INSTRUCTION (ENGLISH, SPANISH, CHINESE) (535RF)	

Ref. No.	Part No.	Description	Remark
	3-867-770-11	MANUAL, INSTRUCTION, INSTALL (ENGLISH, SPANISH, CHINESE) (535RF)	
	9-939-196-01	HOLDER, BATTERY (for RM-X89)	(530RF/535RF)
	A-3291-950-C	MAGAZINE (250T) ASSY	
	A-3220-731-A	WIRED REMOTE COMMANDER (RM-X87)	(530RF/535RF)
	A-3220-733-A	WIRED REMOTE COMMANDER (RM-X88)	(434RF)

PARTS FOR INSTALLATION AND CONNECTIONS

501	3-040-583-21	BRACKET	
* 502	X-3369-824-1	SCREW ASSY	
503		not supplied	
504	4-916-258-01	TAPE, MAGIC (for RM-X89) (530RF/535RF)	
505	1-792-043-11	CORD (WITH CONNECTOR) (POWER)	
506	A-3301-964-A	RELAY BOX ASSY	
507	1-792-045-11	CORD (WITH CONNECTOR) (ANT-OUT)	(for RELAY BOX ASSY)
508	1-792-044-11	CORD (WITH CONNECTOR) (CD-OUT)	(for RELAY BOX ASSY)
F1	1-532-798-11	FUSE (BLADE TYPE) (AUTO FUSE) (1A/32V)	
F2	1-532-731-11	FUSE (BLADE TYPE) (AUTO FUSE) (3A/32V)	

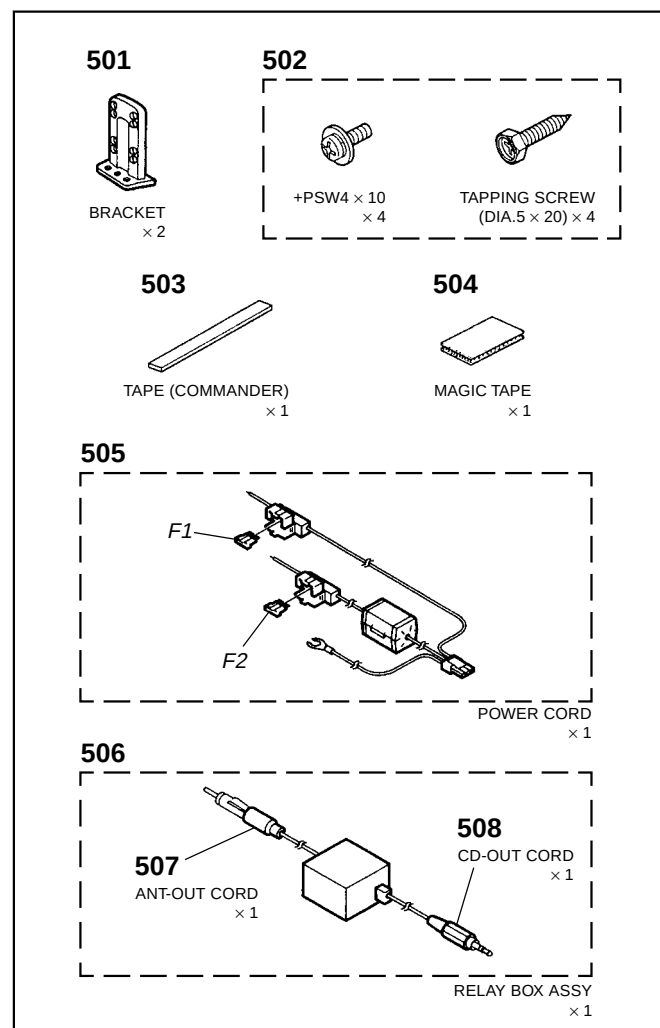

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

MEMO

