


Service Manual



Amplifier/Cassette Player SU-CH40

Colour

(K) ... Black Type

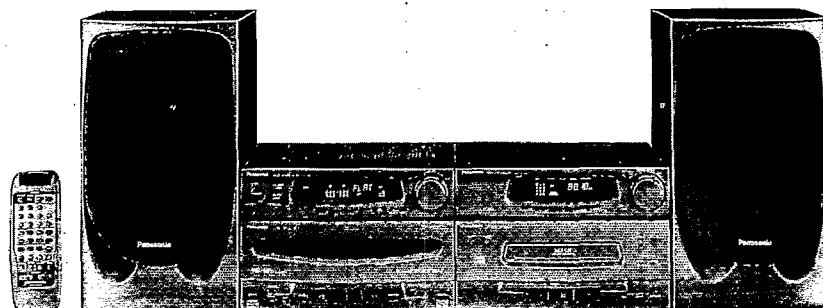

SB-CH40

SU-CH40

SL-CH40

SB-CH40

Area

Suffix for Model No.	Area	Colour
(E)	Continental Europe	(K)
(EB)	Great Britain	
(EG)	F.R. Germany/Italy	

TAPE DECK : MECHANISM SERIES (AR300)

■ SPECIFICATIONS

■ AMPLIFIER SECTION

1 kHz continuous power output both channels driven	2 X 30 W (THD 1%, 6 Ω)
Total harmonic distortion half power at 1 kHz	0.05% (6Ω)
Frequency response	
AUX	52 Hz — 20 kHz (−3 dB)
Input sensitivity	
AUX	250 mV
Input impedance	
AUX	22 kΩ
Graphic equalizer	±10 dB
	(100 Hz, 250 Hz, 1 kHz, 3.3 kHz, 12.5 kHz)

■ GENERAL

Power consumption	130 W
Power supply	AC 50 Hz, 230 — 240 V
Dimension (W x H x D)	270 x 184.4 x 361.4 mm
Weight	6.3 kg

Notes :

- Specifications are subject to change without notice.
Weight and dimensions shown are approximate.
- Total harmonic distortion is measured by the digital spectrum analyzer.

* Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"Dolby" and the double-D symbol are trade marks of Dolby Laboratories Licensing Corporation.

■ CASSETTE DECK SECTION



Track system	4 — track, 2 — channel
Heads	
Playback	Solid Permalloy Head (Rotary Head)
Record/Playback	Solid Permalloy Head (Rotary Head)
Erasure	Double gap ferrite head
Motor	DC servo motor
Recording system	AC bias, 100 kHz
Erase system	AC erase, 100 kHz
Tape speed	4.8 cm/sec
Frequency response	
NORMAL	30 Hz—14 kHz (+3, −6 dB)
CrO ₂	30 Hz—15 kHz (+3, −6 dB)
S/N (CrO ₂ type tape)	
Dolby NR off	52 dB (A-WTD)
Dolby NR on	61 dB (CCIR)
Wow and Flutter	0.1% (WRMS)
Fast forward and rewind time	

Approx. 110 seconds with C-60 cassette tape

Panasonic

System	Amplifier/ Cassette Deck	Tuner/ CD Player	Speaker
SC-CH40E	SD-CH40E		SB-CH40E (MADE IN PAES)
	SU-CH40E	SL-CH40E	
SC-CH40EB	SD-CH40EB		
	SU-CH40EB	SL-CH40E	
SC-CH40EG	SD-CH40EG		
	SU-CH40EG	SL-CH40EG	

■ LOCATION OF CONTROLS

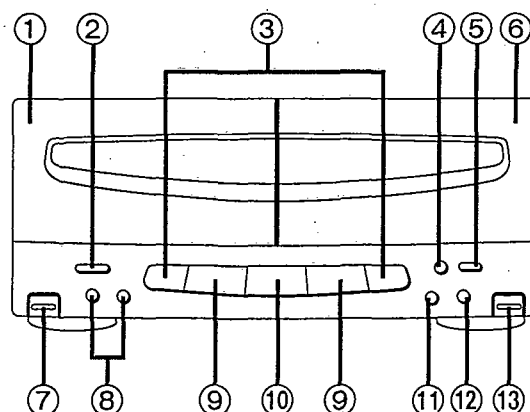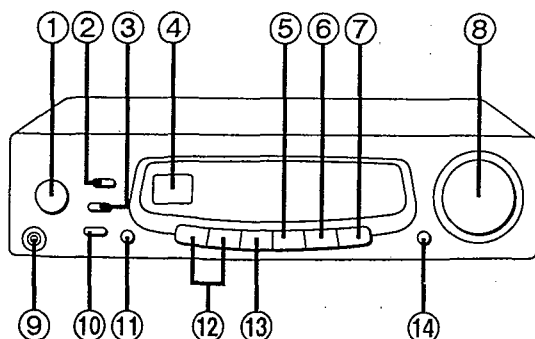

Amplifier sections

- ① **Power "STANDBY /ON" switch (POWER, STANDBY **

Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

- ② **Record timer button (REC TIMER)**
 ③ **Play timer button (PLAY TIMER)**
 ④ **Remote control signal sensor (SENSOR)**
 ⑤ **EQ mode button (EQ MODE)**
 ⑥ **SPACE mode button (SPACE MODE)**
 ⑦ **V. BASS button (V. BASS)**
 ⑧ **Volume control (VOLUME)**
 ⑨ **Headphones jack (PHONES)**
 ⑩ **Clock/timer button (CLOCK/TIMER)**
 ⑪ **Setting button (SET)**
 ⑫ **Timer adjust/effect control buttons (TIME/EFFECT)**
 ⑬ **ON/FLAT button (ON/FLAT)**
 ⑭ **Display mode select button (DISPLAY)**

Cassette deck section

- ① **Deck 1 cassette holder**
 ② **Deck 1/deck 2 select button (DECK 1/2)**
 ③ **Fast forward/rewind/tape program sensor buttons [ (TPS) • (TPS) ]**
 ④ **Dolby noise reduction button (DOLBY NR)**
 ⑤ **Record pause button (REC PAUSE)**
 ⑥ **Deck 2 cassette holder**
 ⑦ **Deck 1 cassette eject button ( EJECT)**
 ⑧ **One-touch tape edit buttons (ONE TOUCH TAPE EDIT)**
 ⑨ **Playback buttons ( • )**
 ⑩ **Stop button ()**
 ⑪ **Counter reset button (COUNTER RESET)**
 ⑫ **Reverse mode select button (REVERSE MODE)**
 ⑬ **Deck 2 cassette eject button ( EJECT)**

■ TEST MODE INSPECTION

- How to enter the test mode** :
- (1) Set the cassette tapes on Deck 1 and Deck 2.
 - * For test [1],[2],[6] : The tape used on Deck 2 **should** have the erase protection tabs on both sides. If not, test mode will be cancelled.
 - * For test [3] : The tape used on Deck 2 **should not** have the erase protection tabs on both sides. If not, test mode will be cancelled.
 - (2) Press ■ [TAPE STOP] key on the center unit. While holding the [TAPE STOP] key, press the [4] key followed by [7] key on the remote control unit.
 - (3) The first segment from the right side of FL will be displayed when test mode is entered ("≡").

Note: • If "MUTING" was set to ON, it will be continued at the test mode.
 • Following keys have no effect at the test mode:
 [TAPE EDIT NORMA/HIGH], [DISPLAY], [CLOCK/TIMER], [PLAY TIMER], [SET]

- How to start the test mode** :
- (1) Press the keys of the remote control unit to start the following items.
- [1] KEY : TAPE EDIT (HIGH SPEED)
 - [2] KEY : TAPE EDIT (NORMAL SPEED)
 - [3] KEY : TPS FUNCTION
 - [4] KEY : REVERSE MODE FUNCTION
 - [6] KEY : TAPE RECORDING THROUGH AUX INPUT
 - [7] KEY : TACT SWITCH AND FL DISPLAY CONNECTION
 - [8] KEY : ALL SEGMENTS OF FL DISPLAY LIGHTS ON
 - [9] KEY : SETTING THE VOLUME TO MAXIMUM
 - [0] KEY : SETTING THE VOLUME TO MINIMUM

- How to exit from test mode** :
- (1) Press [POWER] key or [CD STOP] key on the remote control unit.
 (Last memory will return at next power on)
 - (2) Pull out the AC power supply plug to set the "cold start".
 (Memory will be set to the initial condition at the next power on)

Note : Memory will also set to the initial condition at the next power on, when the AC power was off **after** exit from the test mode.

Test [1]: TAPE EDIT (HIGH SPEED), Test [2]: TAPE EDIT (NORMAL SPEED)

- (1) Enter the test mode.
- (2) Press [1] or [2] key.
 - * Input selector will set to "TAPE"
 - * Volume level will set to "-20dB".
 - * Reverse mode will set to "↔" (1 way).
 - * Tape counter will set to "000-".
 - * [1] key : HIGH SPEED TAPE EDIT will start
 - * [2] key : NORMAL SPEED TAPE EDIT will start.
- (3) Press ■ [TAPE STOP] key
 - * Both keys are acceptable from center unit or remote control unit
- (4) Press ◀◀ (TAPE REW) key.
 - * Tape will stop at "000-" of the tape counter.
- (5) Press ▶ (TAPE REW PLAY) key.
 Ensure that the sound was recorded accurately.

Note :

- * The tape used on Deck 2 **should** have the erase protection tabs on both sides. If not, test mode will be cancelled.
- * Test mode will be cancelled if the tape reaches the end, either deck 1 or deck 2.

Test [3]: TPS FUNCTION

- (1) Press [3] key.
 - * Input selector will set to "TAPE".
 - * Volume level will set to "-20 dB".
 - * Reverse mode will set to "↔" (1 way).
 - * F-REW TPS will set on deck 1. (FWD-PLAY~REW).
 - * Deck 1 will stop at the beginning of the present program.
 - * R-FF TPS will set on deck 2. (REV-PLAY~FF)
 - * Deck 2 will stop at the beginning of the present program.
 - (2) Press ◀ (REV PLAY) key, the present program of deck 2 will be started soon.
 - (3) Press [DECK1/2] to select deck 1, and then press ▶ (FWD/PLAY) key, the present program of deck 1 will be started soon.
- Note:
- * The tape used on Deck 2 **should** have the erase protection tabs on both sides. If not, test mode will be cancelled.

Test [4]: REVERSE MODE FUNCTION

- (1) Press [4] key.
 - * Input selector will set to "TAPE".
 - * Volume level will set to "-20 dB".
 - * REV mode will set to "↔" (REPEAT) mode.
 - * Deck 1 will start to REV-PLAY.
 - * Deck 2 will start to FWD-PLAY at D1 tape end.
- * REV mode will start to "↔" (REVERSE) mode.
- * Deck 2 will change to REV-PLAY at D2 tape end.
- * Deck 2 will stop at the tape end.
- * REV mode will set to "↔" (1 way) mode.
- * Deck 1 will start to FWD-PLAY.
- * Deck 1 will stop at the tape end.

Test [6]: TAPE RECORDING THROUGH AUX INPUT

- (1) Press [6] key.
 - * Selector position will set to [AUX].
 - * volume level will set to "-20 dB".
 - * REVERSE mode will set to "↔" (1 way).
 - * Tape counter will set to "000-" on deck 2.
 - * Recording will start on deck 2.
 - (2) Press ■ (TAPE STOP) key.
 - * Both keys are acceptable for center unit or remote control unit.
 - (3) Press ◀◀ (TAPE REW) key.
 - * Tape will stop at "000-" of the tape counter.
 - (4) Press ▶ (TAPE FWD PLAY) key.
 - Ensure the sound was recorded accurately.
- Note:
- * The tape used on Deck 2 **should** have the erase protection tabs on both sides. If not, test mode will be cancelled.
 - * Test mode will be cancelled if deck 2 reaches the end.

Test [7] : TACT SWITCH AND FL DISPLAY CONNECTION

- (1) Press [7] key.
 - * FL display will light out.
- (2) Press any key one by one.
 - * FL display will indicate on each segment.
- (3) After all of the keys were pressed, all segments of the FL display will on.
 - ([POWER] key has no effect)
- (4) Press [POWER] key or [CD STOP] key on the remote control unit to exit from the test mode.

Test [8] : ALL SEGMENTS OF FL DISPLAY LIGHTS ON

- (1) Press [8] key.
 - * FL display will indicate same as TEST [7].

Test [9] : VOLUME MAXIMUM

- (1) Press [9] key.
 - * Volume level will be set to maximum.
 - * "od ≡" will be displayed in 2 sec.

Test [0] : VOLUME MINIMUM

- (1) Press [0] key.
 - * Volume level will be set to minimum.
 - * "-d ≡" will be displayed in 2 sec.

■ TERMINAL FUNCTION OF IC'S

• IC601 (M38173M6272) : System microprocessor

Pin No.	Mark	I/O Division	Function
1	SPE4	—	Not used.
2	SPE3	—	Not used.
3	SPE2	I	Spectrum analyser control pin.
4	SPE1	I	Spectrum analyser control pin.
5	BDAO	O	Bus control data output.
6	BCLO	O	Bus control clock output.
7	BDAI	I	Bus control data input.
8	BCLI	I	Bus control clock input.
9	P57	O	ATT1 control signal.
10	P52	O	ATT2 control signal.
11	JOGB	I	JOG dial signal input.
12	JOGA	I	JOG dial signal input.
13	PWR/ SPEAN	—	not used.
14	MUTEA	O	AF muting signal output.
15	SELB	O	Function select signal output.
16	SELA	O	Function select signal output.
17	MUTEB	O	Mute control output.
18	SPDA	O	Signal processing data control.
19	SPCK	O	Signal processing clock signal.
20	SPLA	O	Signal processing latch signal.

Pin No.	Mark	I/O Division	Function
21	ATT	O	Volume attenuator signal output.
22	MKCL	O	Clock control for deck circuit.
23	MKDA	O	Data output for deck circuit.
24	RMT	I	Remote control pulse signal input.
25	PWDET	I	Power down detection input.
26	ACDET	I	Power down detection input.
27	RESET	I	μ-com reset input.
28	XC IN	I	Crystal oscillator input (32 kHz).
29	XC OUT	O	Crystal oscillator output (32 kHz).
30	XIN	I	Ceramic oscillator input (4.9 MHz).
31	XOUT	O	Ceramic oscillator output (4.9 MHz).
32	VSS	—	GND.
33	MBP1	O	μ-com beatproof output 1.
34	MBP2	O	μ-com beatproof output 2.
35	KARAOKE	—	Not used.
36	PW CNT	O	Power control signal output.
37	KR3	I	Key return signal.
38	KR2	I	Key return signal.
39	KR1	I	Key return signal.
40	KR0	I	Key return signal.

Pin No.	Mark	I/O Division	Function
41	P17	O	PASS control signal.
42	P16	—	Not used.
43	DEG13	O	Digit drive signal for FL display.
44	DEG12	O	Digit drive signal for FL display.
45	DEG11	O	Digit drive signal for FL display.
46	DEG10	O	Digit drive signal for FL display.
47	DEG9	O	Digit drive signal for FL display.
48	DEG8	O	Digit drive signal for FL display.
49	DEG7	O	Digit drive signal for FL display.
50	DEG6	O	Digit drive signal for FL display.
51	DEG5	O	Digit drive signal for FL display.
52	DEG4	O	Digit drive signal for FL display.
53	DEG3	O	Digit drive signal for FL display.
54	DEG2	O	Digit drive signal for FL display.
55	DEG1	O	Digit drive signal for FL display.
56	DEG0	O	Digit drive signal for FL display.
57	SEG15	O	Segment drive signal for FL display.
58	SEG14	O	Segment drive signal for FL display.
59	SEG13	O	Segment drive signal for FL display.
60	SEG12	O	Segment drive signal for FL display.

Pin No.	Mark	I/O Division	Function
61	SEG11	O	Segment drive signal for FL display.
62	SEG10	O	Segment drive signal for FL display.
63	SEG9	O	Segment drive signal for FL display.
64	SEG8	O	Segment drive signal for FL display.
65	SEG7	O	Segment drive signal for FL display.
66	SEG6	O	Segment drive signal for FL display.
67	SEG5	O	Segment drive signal for FL display.
68	SEG4	O	Segment drive signal for FL display.
69	SEG3	O	Segment drive signal for FL display.
70	SEG2	O	Segment drive signal for FL display.
71	SEG1	O	Segment drive signal for FL display.
72	SEG0	O	Segment drive signal for FL display.
73	VCC	—	+5V
74	VEE	—	-30V
75	AVSS	—	GND
76	VREF	O	Output reference voltage.
77	DECK3	I/O	AD converter input (cass. mech. sensor).
78	DECK2	I/O	AD converter input (cass. mech. sensor).
79	DECK1	I/O	AD converter input (cass. mech. sensor).
80	CRT	I/O	CR timer during backup.

SU-CH40 SU-CH40



Note:

< for Main circuit >

- The voltage value and waveforms are the reference voltage of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis.
- Accordingly, there may arise some error in voltage values and waveforms depending upon the internal impedance of the tester or the measuring unit.
- The parenthesized are the values of voltage generated during playing (Test disc 1 kHz, L + R, 0 dB), others are voltage values in stop mode.

No mark Tape Playback


- Important safety notice:
Components identified by Δ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

Caution !

- IC, LSI are sensitive to static electricity.
Secondary trouble can be prevented by taking care during repair.
- Cover the parts boxes made of plastics with aluminum foil.
- Ground the soldering iron.
- Put a conductive mat on the work table.
- Do not touch the pins of IC or LSI with fingers directly.

- AUX signal line
- Playback signal line
- Recording signal line
- Servo (CD) signal line
- Tuner signal line
- Main signal line
- Spectrum Analyser signal line
- B line
- +B line

SCHEMATIC DIAGRAM (Parts list on page 53 ~ 61)

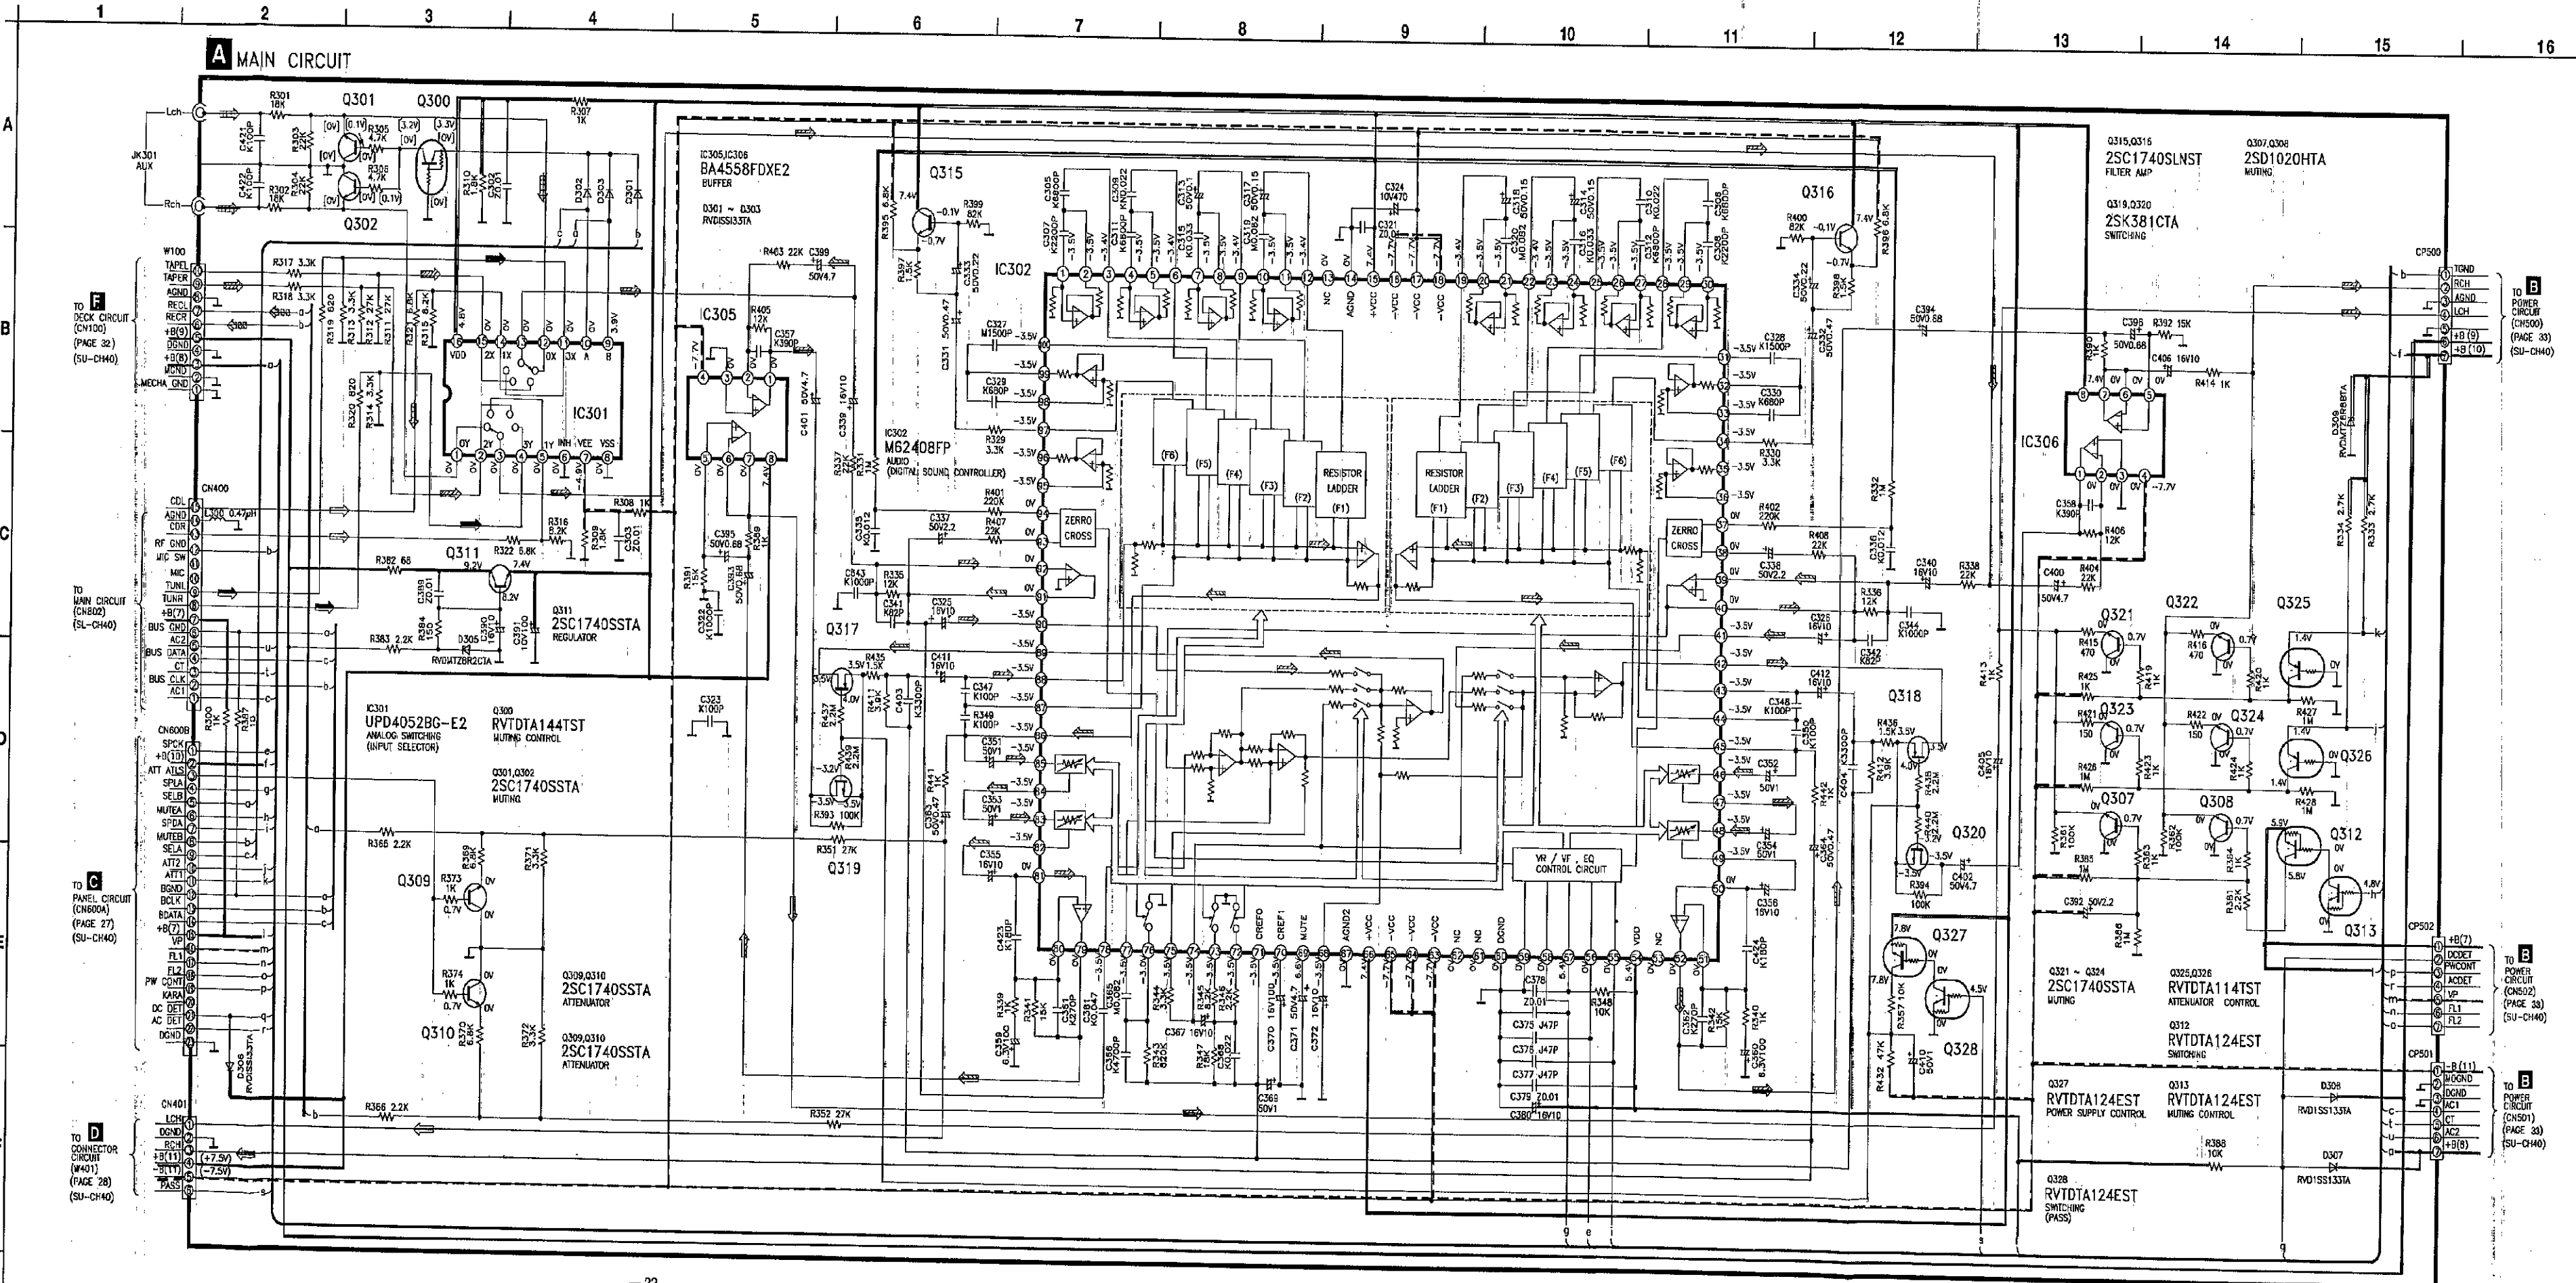

SCHEMATIC DIAGRAM

Note:

< for Panel circuit >

- S601 : EDIT normal switch
- S602 : EDIT high switch
- S603 : DECK 1/2 select switch
- S604 : REC pause switch
- S605 : TPS REV switch
- S606 : REV play switch
- S607 : FWD play switch
- S608 : TPS FWD switch
- S609 : STOP switch
- S610 : REV mode switch
- S611 : DOLBY switch
- S612 : COUNT reset switch
- S613 : POWER switch
- S614 : V BASS switch
- S615 : DOWN switch
- S616 : UP switch
- S617 : REC timer switch
- S618 : PLAY timer switch
- S619 : CLOCK/TIMER switch
- S620 : SET switch
- S621 : EQ ON/FLAT switch
- S622 : EQ switch
- S623 : SPACE mode switch
- S624 : DISPLAY switch

•VR601 : Main volume control VR

General

•DC voltages measurement are taken with electronic voltmeter.
The negative terminal of the battery provides negative meter connection point.

No markTape Playback

Important safety notice:

Components identified by Δ mark have special characteristics important for safety.
When replacing any of these components, use only manufacturer's specified parts.

Caution!

- IC and LSI are sensitive to static electricity.
- Secondary trouble can be prevented by taking care during repair.
- *Cover the parts boxes made of plastics with aluminum foil.
- *Ground the soldering iron.
- *Put a conductive mat on the work table.
- *Do not touch the pins of IC or LSI with fingers directly.


•This schematic diagram may be modified at any time with the development of new technology.

— — — — — : +B Line

- - - - - : -B Line

➡ : Spectrum Analyser signal line

C PANEL CIRCUIT

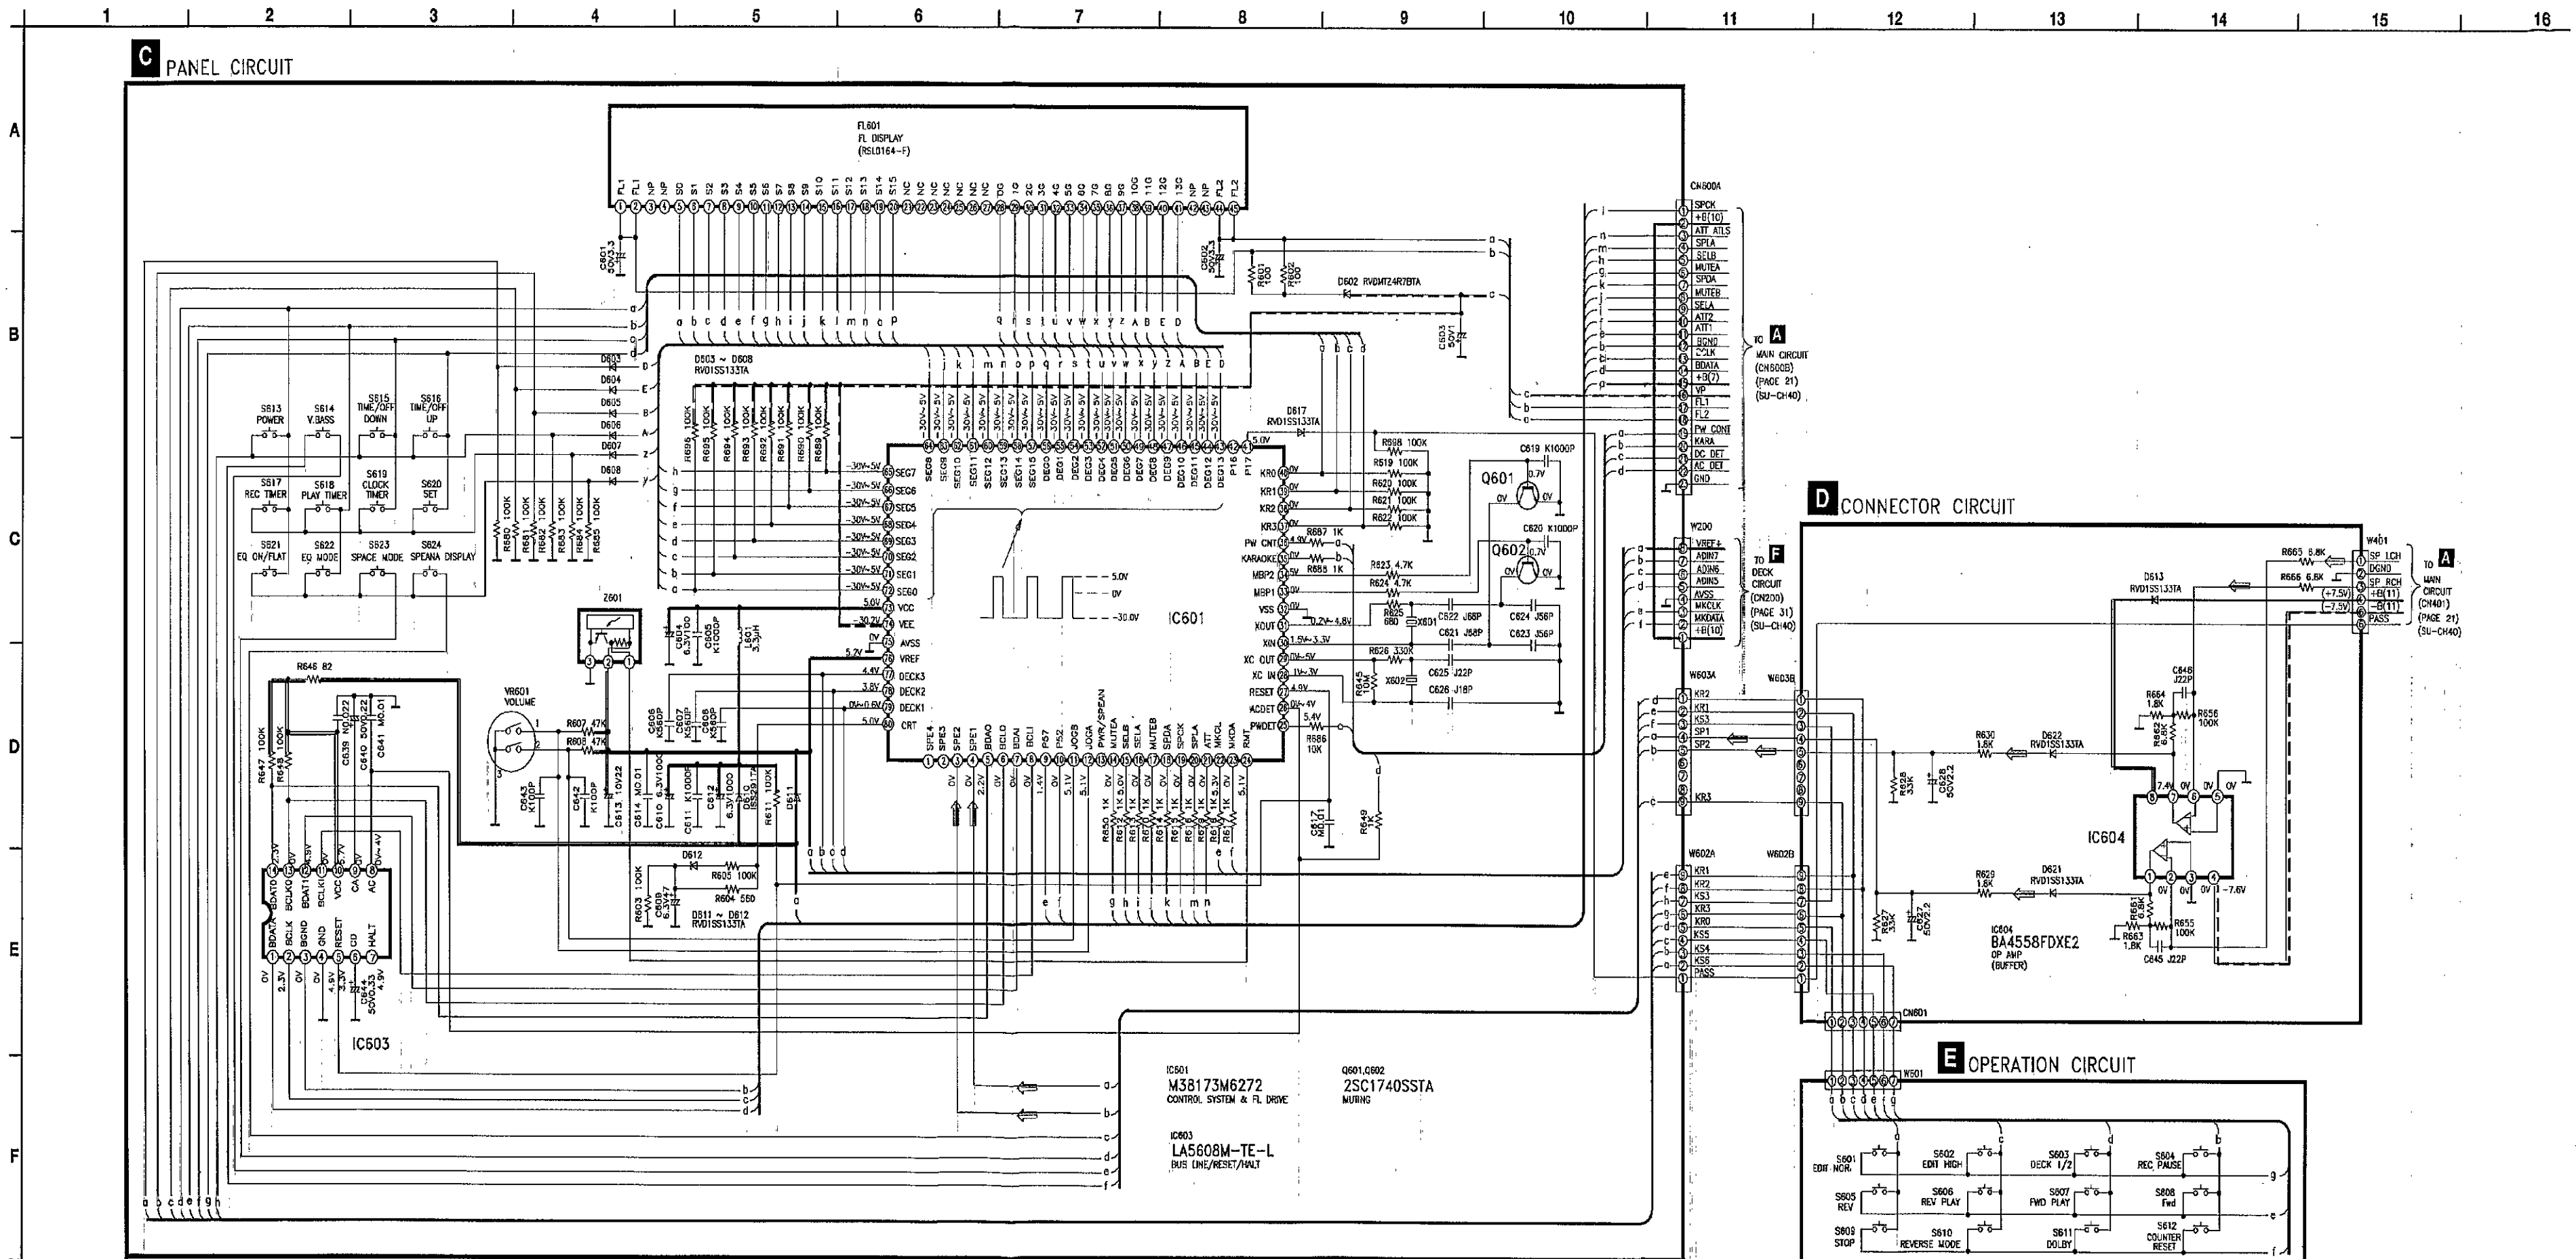

■ SCHEMATIC DIAGRAM

Note :

< for Deck circuit >

- S951 : Deck 1 mode detect switch.
- S952 : Deck 1 tape detect switch.
- S953 : Deck 1 tape select switch.
- S971 : Deck 2 mode detect switch.
- S972 : Deck 2 tape detect switch.
- S973 : Deck 2 tape tab switch (REV).
- S974 : Deck 2 tape tab switch (FWD).
- S975 : Deck 2 tape select switch (C/O).

- VR101 : Deck 1 Lch playback gain adjustment VR (Dolby).
- VR102 : Deck 1 Rch playback gain adjustment VR (Dolby).
- VR103 : Deck 2 Lch playback gain adjustment VR (Dolby).
- VR104 : Deck 2 Rch playback gain adjustment VR (Dolby).
- VR201 : Deck 1 tape speed adjustment VR (Normal).
- VR202 : Deck 2 tape speed adjustment VR (Normal).
- VR203 : Deck 2 tape speed adjustment VR (High).

General

- The voltage value and waveforms are the reference voltage of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis.
- Accordingly, there may arise some error in voltage values and waveforms depending upon the internal impedance of the tester or the measuring unit.
- The parenthesized are the values of voltage generated during playing (Test disc 1 kHz, L+R, 0 dB), others are voltage values in stop mode.

(()) CD << >> Tape Recording No mark Tape Playback


Important safety notice :

- Components identified by Δ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.


Caution I

- IC, LSI are sensitive to static electricity.
- Secondary trouble can be prevented by taking care during repair.
- Cover the parts boxes made of plastics with aluminum foil.
- Ground the soldering iron.
- Put a conductive mat on the work table.
- Do not touch the pins of IC or LSI with fingers directly.

-  : Playback signal line
-  : Recording signal line
-  : +B line
-  : -B line
-  : Main signal line

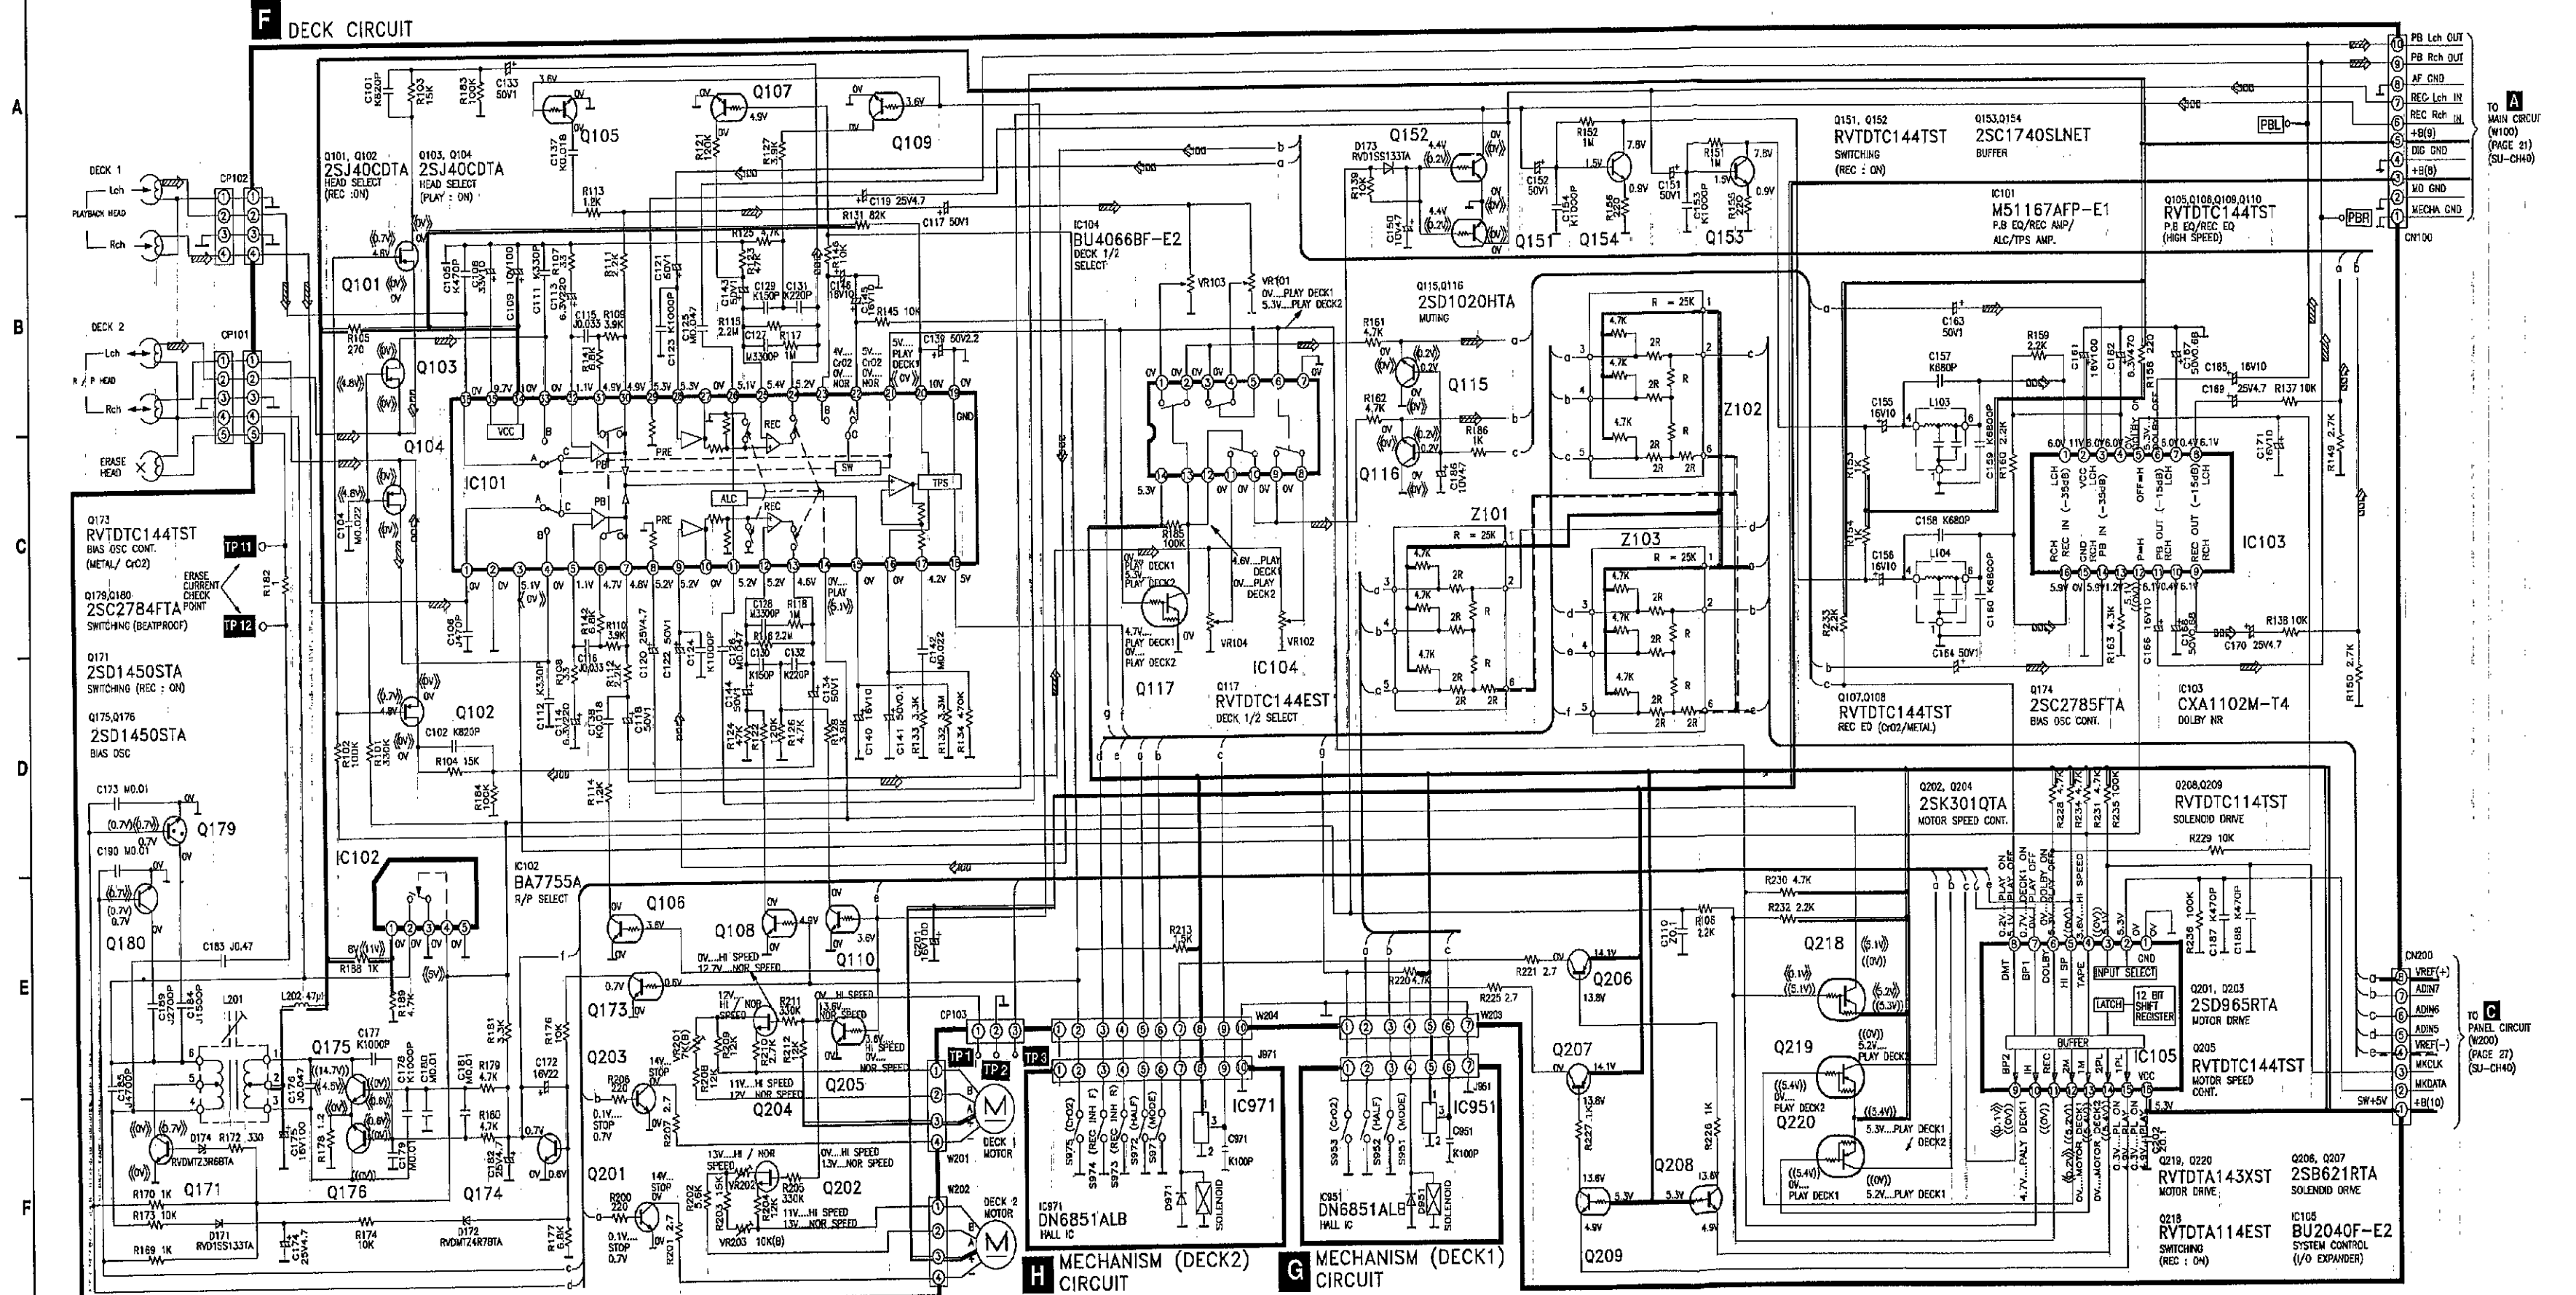

■ WIRING CONNECTION DIAGRAM

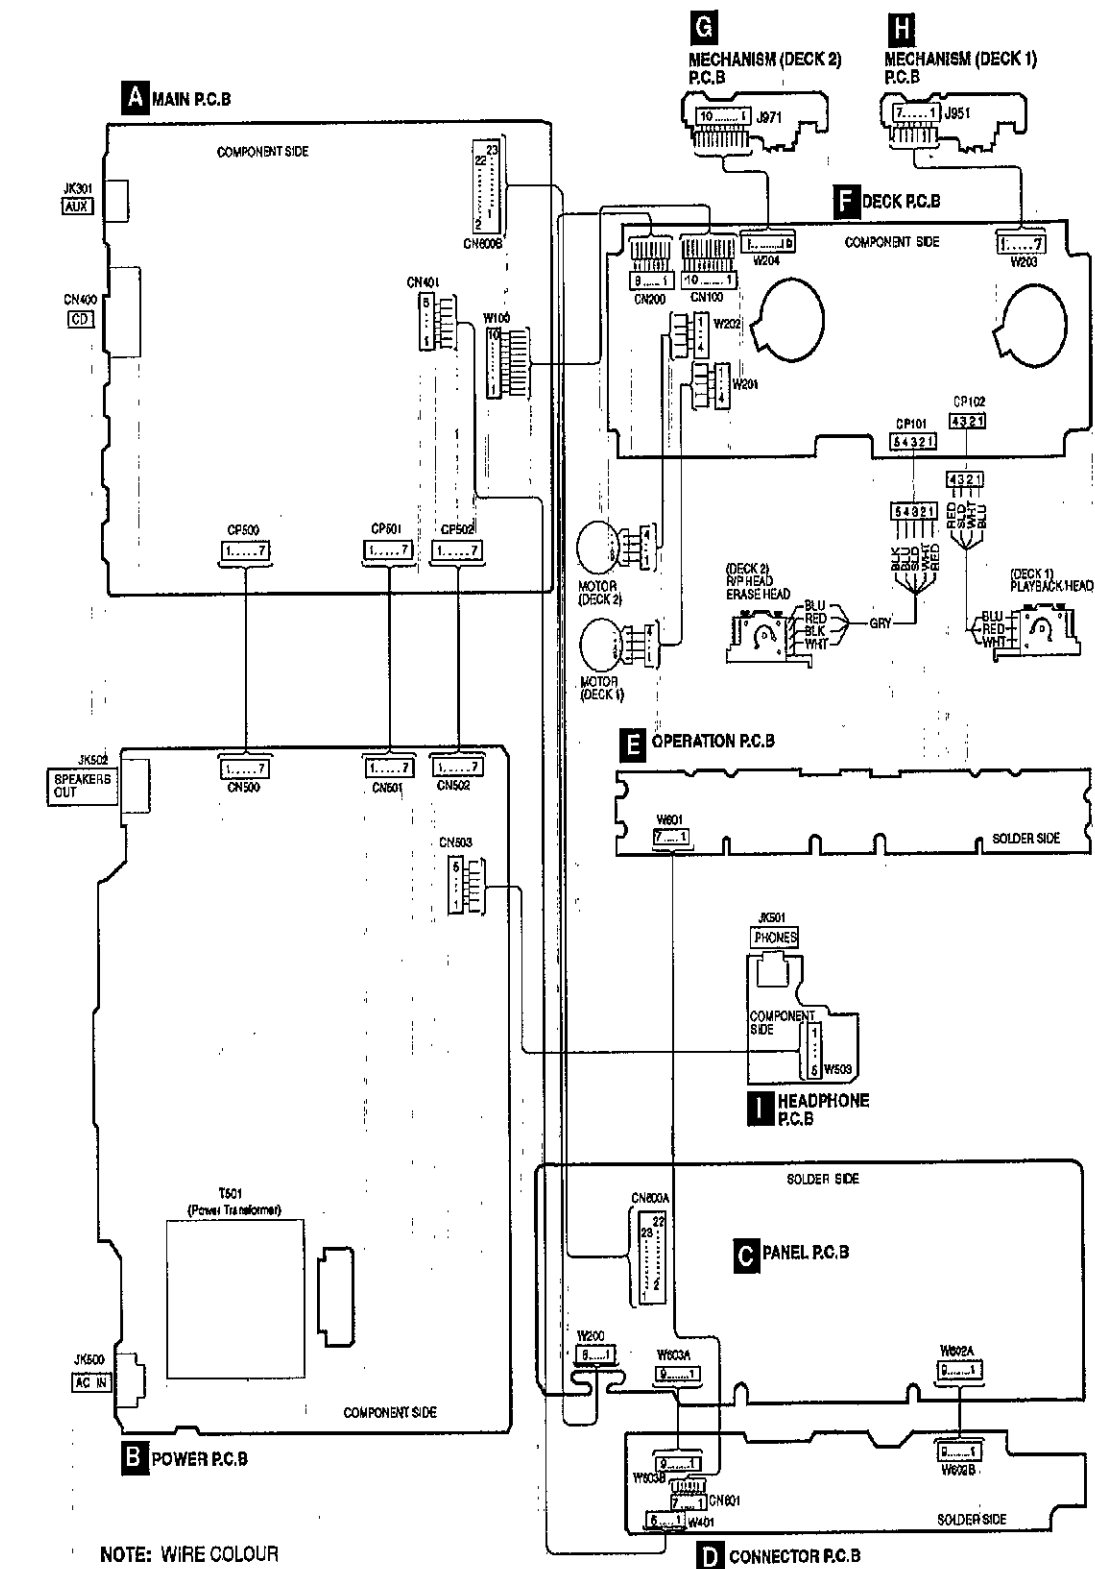

BLK	Black
BLU	Blue
GRY	Gray
RED	Red
SLD	Shield Wire
WHT	White

Ref. No	Part No.	Part Name & Description	Remarks	Ref. No	Part No.	Part Name & Description	Remarks
		INTEGRATED CIRCUITS		Q203	2SD965RTA	TRANSISTOR	
				Q204	2SK301QTA	TRANSISTOR	[M]
				Q205	RVTDTC144TST	TRANSISTOR	
IC101	M51167BFP-E1	IC, R/P		Q206	2SB621RTA	TRANSISTOR	
IC102	BA7755A	IC, SWITCH		Q207	2SB621RTA	TRANSISTOR	
IC103	CXA1102M-T4	IC, DOLBY		Q208	RVTDTC114TST	TRANSISTOR	
IC104	BU4066BF-E2	IC, ANALOG SW		Q209	RVTDTC114TST	TRANSISTOR	
IC105	BU2040F-E2	IC, I/O	[M]	Q218	RVTDTA114EST	TRANSISTOR	
IC301	UPD4052BG-E2	IC, ANALOG SW	[M]	Q219	RVTDTA143XST	TRANSISTOR	
IC302	M62408FP	IC, AUDIO		Q220	RVTDTA143XST	TRANSISTOR	
IC305	BA4558FDXE2	IC, OP AMP	[M]	Q300	RVTDTA144TST	TRANSISTOR	
IC306	BA4558FDXE2	IC, OP AMP	[M]	Q301	2SC1740SSTA	TRANSISTOR	
IC501	SVI3101D	IC, HIC	△	Q302	2SC1740SSTA	TRANSISTOR	
IC601	M38173M6272	IC, MICROPROCESSOR	[M]	Q307	2SD1020HTA	TRANSISTOR	[M]
IC603	LA5608M-TE-L	IC, RESET		Q308	2SD1020HTA	TRANSISTOR	[M]
IC604	BA4558FDXE2	IC, OP AMP	[M]	Q309	2SC1740SSTA	TRANSISTOR	
IC951	DN6851ALB	IC, HALL (DECK 1)		Q310	2SC1740SSTA	TRANSISTOR	
IC971	DN6851ALB	IC, HALL (DECK 2)		Q311	2SC1740SSTA	TRANSISTOR	
		TRANSISTORS		Q312	RVTDTA124EST	TRANSISTOR	
				Q313	RVTDTC124EST	TRANSISTOR	[M]
				Q315	2SC1740SLNST	TRANSISTOR	
Q101	2SJ40CDTA	TRANSISTOR		Q316	2SC1740SLNST	TRANSISTOR	
Q102	2SJ40CDTA	TRANSISTOR		Q317	2SJ40CTA	TRANSISTOR	
Q103	2SJ40CDTA	TRANSISTOR		Q318	2SJ40CTA	TRANSISTOR	
Q104	2SJ40CDTA	TRANSISTOR		Q319	2SK381CTA	TRANSISTOR	
Q105	RVTDTC144TST	TRANSISTOR		Q320	2SK381CTA	TRANSISTOR	
Q106	RVTDTC144TST	TRANSISTOR		Q321	2SC1740SSTA	TRANSISTOR	
Q107	RVTDTC144TST	TRANSISTOR		Q322	2SC1740SSTA	TRANSISTOR	
Q108	RVTDTC144TST	TRANSISTOR		Q323	2SC1740SSTA	TRANSISTOR	
Q109	RVTDTC144TST	TRANSISTOR		Q324	2SC1740SSTA	TRANSISTOR	
Q110	RVTDTC144TST	TRANSISTOR		Q325	RVTDTA114TST	TRANSISTOR	
Q115	2SD1020HTA	TRANSISTOR	[M]	Q326	RVTDTA114TST	TRANSISTOR	
Q116	2SD1020HTA	TRANSISTOR	[M]	Q327	RVTDTA124EST	TRANSISTOR	
Q117	RVTDTC144EST	TRANSISTOR		Q328	RVTDTC124EST	TRANSISTOR	[M]
Q151	RVTDTC144TST	TRANSISTOR		Q500	2SA933SSTA	TRANSISTOR	
Q152	RVTDTC144TST	TRANSISTOR		Q503	2SD2037ETA	TRANSISTOR	[M]
Q153	2SC1740SLNET	TRANSISTOR		Q505	2SD1762EF	TRANSISTOR	
Q154	2SC1740SLNET	TRANSISTOR		Q506	2SB1185E	TRANSISTOR	△
Q171	2SD1450STA	TRANSISTOR		Q507	2SD1273P	TRANSISTOR	
Q173	RVTDTC144TST	TRANSISTOR		Q508	2SB621ARTA	TRANSISTOR	△
Q174	2SC1740SSTA	TRANSISTOR		Q509	2SC2785FTA	TRANSISTOR	△
Q175	2SD1450STA	TRANSISTOR		Q510	2SA564RTA	TRANSISTOR	
Q176	2SD1450STA	TRANSISTOR		Q511	2SD1762EF	TRANSISTOR	△
Q179	2SC2784FTA	TRANSISTOR	[M]	Q512	2SC1740SSTA	TRANSISTOR	
Q180	2SC2784FTA	TRANSISTOR	[M]	Q513	2SC1740SSTA	TRANSISTOR	
Q201	2SD965RTA	TRANSISTOR		Q601	2SC1740SSTA	TRANSISTOR	
Q202	2SK301QTA	TRANSISTOR	[M]	Q602	2SC1740SSTA	TRANSISTOR	

Ref. No	Part No.	Part Name & Description	Remarks	Ref. No	Part No.	Part Name & Description	Remarks
		DIODES		D622	RVD1SS133TA	DIODE	
				D951	RVD1SS133TA	DIODE (DECK 1)	
				D971	RVD1SS133TA	DIODE (DECK 2)	
D171	RVD1SS133TA	DIODE				VARIABLE RESISTORS	
D172	RVDMTZ4R7BTA	DIODE					
D173	RVD1SS133TA	DIODE		VR101	RVNCC24B1T-A	VR, PB GAIN (D1 L)	
D174	RVDMTZ3R6BTA	DIODE	[M]	VR102	RVNCC24B1T-A	VR, PB GAIN (D1 R)	
D301	RVD1SS133TA	DIODE		VR103	RVNCC24B1T-A	VR, PB GAIN (D2 L)	
D302	RVD1SS133TA	DIODE		VR104	RVNCC24B1T-A	VR, PB GAIN (D2 R)	
D303	RVD1SS133TA	DIODE		VR201	RVNCC73B1T-A	VR, SPEED (D1 NOR)	
D305	RVDMTZ8R2CTA	DIODE	[M]	VR202	RVNCC24B1T-A	VR, SPEED (D2 NOR)	
D306	RVD1SS133TA	DIODE		VR203	RVNCC14B1T-A	VR, SPEED (D2 HIGH)	
D307	RVD1SS133TA	DIODE		VR601	RRV16B24104A	VR, VOLUME	[M]
D308	RVD1SS133TA	DIODE				SWITCHES	
D309	RVDMTZ6R8BTA	DIODE					
D500	RVD1SS133TA	DIODE		S601	EVQ21405R	SW, EDIT LOW	
D501	RVD1SS133TA	DIODE		S602	EVQ21405R	SW, EDIT HIGH	
D502	RVDMTZ6R8ATA	DIODE	[M]	S603	EVQ21405R	SW, DECK 1/2	
D503	1D3E	DIODE	[M] Δ	S604	EVQ21405R	SW, REC PAUSE	
D504	1D3E	DIODE	[M] Δ	S605	EVQ21405R	SW, TPS REV	
D505	RVDMTZ6R2ATA	DIODE	[M]	S606	EVQ21405R	SW, REV PLAY	
D507	RVDMTZ15CTA	DIODE	[M]	S607	EVQ21405R	SW, FWD PLAY*	
D508	RVDMTZ8R2CTA	DIODE	[M]	S608	EVQ21405R	SW, TPS FWD	
D509	1D3E	DIODE	[M]	S609	EVQ21405R	SW, STOP	
D510	1D3E	DIODE	[M]	S610	EVQ21405R	SW, REV MODE	
D511	1N5402BM21	DIODE	Δ	S611	EVQ21405R	SW, DOLBY	
D512	1N5402BM21	DIODE	Δ	S612	EVQ21405R	SW, COUNT RESET	
D513	1N5402BM21	DIODE	Δ	S613	EVQ21405R	SW, POWER	
D514	1N5402BM21	DIODE	Δ	S614	EVQ21405R	SW, V BASS	
D516	RVDMTZ15CTA	DIODE	[M]	S615	EVQ21405R	SW, DOWN	
D517	1D3E	DIODE	[M]	S616	EVQ21405R	SW, UP	
D518	MA4300HTA	DIODE	Δ	S617	EVQ21405R	SW, REC TIMER	
D519	RVDMTZ5R1BTA	DIODE		S618	EVQ21405R	SW, PLAY TIMER	
D520	RVDMTZ10BTA	DIODE	Δ	S619	EVQ21405R	SW, CLOCK/TIMER	
D602	RVDMTZ4R7BTA	DIODE		S620	EVQ21405R	SW, SET	
D603	RVD1SS133TA	DIODE		S621	EVQ21405R	SW, EQ ON/FLAT	
D604	RVD1SS133TA	DIODE		S622	EVQ21405R	SW, EQ MODE	
D605	RVD1SS133TA	DIODE		S623	EVQ21405R	SW, SPACE MODE	
D606	RVD1SS133TA	DIODE		S624	EVQ21405R	SW, DISPLAY	
D607	RVD1SS133TA	DIODE		S951	RSH1A89ZD-U	SW, MODE DETECT (1)	
D608	RVD1SS133TA	DIODE		S952	RSH1A90YD-U	SW, TAPE DETECT (1)	
D610	1SS291TA	DIODE		S953	RSH1A90YD-U	SW, CrO2 DETECT (1)	
D611	RVD1SS133TA	DIODE		S971	RSH1A89ZD-U	SW, MODE DETECT (2)	
D612	RVD1SS133TA	DIODE		S972	RSH1A90YD-U	SW, TAPE DETECT (2)	
D613	RVD1SS133TA	DIODE		S973	RSH1A90YD-U	SW, TAB DETECT (2)	(REV)
D617	RVD1SS133TA	DIODE					
D621	RVD1SS133TA	DIODE					

Ref. No	Part No.	Part Name & Description	Remarks	Ref. No	Part No.	Part Name & Description	Remarks
S974	RSH1A90YD-U	SW, TAB DETECT (2)	(FWD)	L501	SLQY07G-40	SP COIL	
S975	RSH1A90YD-U	SW, CrO2 DETECT (2)		L502	SLQY07G-40	SP COIL	
		CONNECTORS		L601	RLQZP3R3KT-Y	AXIAL COIL	
				T501	RTP1M3B005	POWER TRANSFORMER	[M]△
CN100	RJS10T4ZA	10P CONNECTOR				COMPONENT COMBINATIONS	
CN200	RJS8T4ZA	8P CONNECTOR					
CN400	RJT065K15	AB CONNECTOR		Z101	EXBF6L306SYV	BLOCK RESISTOR	
CN401	RJS1A5206	7P CONNECTOR	[M]	Z102	EXBF6L306SYV	BLOCK RESISTOR	
CN500	SJS50778JQ	7P CONNECTOR		Z103	EXBF6L306SYV	BLOCK RESISTOR	
CN501	SJS50778JQ	7P CONNECTOR		Z501	BL02RN2R65T2	BEAD CORE	(EG)
CN502	SJS50778JQ	7P CONNECTOR		Z502	BL02RN2R65T2	BEAD CORE	(EG)
CN503	RJS1A5205	5P CONNECTOR	[M]	Z503	BL02RN2R65T2	BEAD CORE	(EG)
CN510	RJS1A1101T1	PIN CONNECTOR		Z601	RCDHC-278N	REMOCON SENSOR	[M]
CN511	RJS1A1101T1	PIN CONNECTOR				OSCILLATORS	
CN512	RJS1A1101T1	PIN CONNECTOR					
CN513	RJS1A1101T1	PIN CONNECTOR		X601	RSXZ4M19M01T	OSCILLATOR	
CN520	RJS1A1101T1	PIN CONNECTOR		X602	RSXD32K7S02	OSCILLATOR 32.768kHz	[M]
CN521	RJS1A1101T1	PIN CONNECTOR				DISPLAY TUBE	
CN522	RJS1A1101T1	PIN CONNECTOR					
CN523	RJS1A1101T1	PIN CONNECTOR		FL601	RSL0164-F	FL DISPLAY	[M]
CN524	RJS1A1101T1	PIN CONNECTOR				FUSES	
CN525	RJS1A1101T1	PIN CONNECTOR					
CN526	RJS1A1101T1	PIN CONNECTOR		F1	XBA2C10TB0	FUSE	△
CN527	RJS1A1101T1	PIN CONNECTOR		F2	XBA2C08TB0	FUSE	△
CN528	RJS1A1101T1	PIN CONNECTOR		F3	XBA2C08TB0	FUSE	△
CN529	RJS1A1101T1	PIN CONNECTOR				FUSE CLIP	
CN600A	RJS1A6223-1	23P CONNECTOR					
CN600B	RJS1A6823	23P CONNECTOR		FC1	EYF52BC	FUSE HOLDER	
CN601	RJS1A5207	7P CONNECTOR		FC2	EYF52BC	FUSE HOLDER	
CP101	RJP5G18ZA	5P CONNECTOR		FC3	EYF52BC	FUSE HOLDER	
CP102	RJP4G18ZA	4P CONNECTOR		FC4	EYF52BC	FUSE HOLDER	
CP103	RJP3G1ZA	PLUG		FC5	EYF52BC	FUSE HOLDER	
CP500	RJP7G9YA	7P CONNECTOR	[M]	FC6	EYF52BC	FUSE HOLDER	
CP501	RJP7G9YA	7P CONNECTOR	[M]			EARTH TERMINALS	
CP502	RJP7G9YA	7P CONNECTOR	[M]				
J951	RJS7T7ZA	CONNECTOR (DECK 1)		E1	SNE1004-1	EARTHPLATE	
J971	RJS10T7ZA	CONNECTOR (DECK 2)		E2	SNE1004-1	EARTHPLATE	(EG)
		COILS & TRANSFORMERS					
L103	RLE2B001-1M	TRAP COIL	[M]				
L104	RLE2B001-1M	TRAP COIL	[M]				
L201	RL08C002M-T	BIAS OSC COIL					
L202	RLQZB470KT-D	RF CHOKE COIL					
L300	RLQZPR47KT-Y	AXIAL COIL					
L500	SLQZ650MH49	AC LINE COIL	△				

[illegible]

RESISTORS & CAPACITORS

Notes : * Capacitor values are in microfarad (μF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)
 * Resistors values are in ohms, unless specified otherwise, 1k=1,000(OHM), 1M=1,000k(OHM)

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
	RESISTORS							
R101	ERD25TJ334T	330K 1/4W	R152	ERDS2TJ105T	1M 1/4W	R220	ERDS2TJ472T	4.7K 1/4W
R102	ERDS2TJ104T	100K 1/4W	R153	ERDS2TJ102T	1K 1/4W	R221	ERDS2TJ2R7T	2.7 1/4W
R103	ERDS2TJ153T	15K 1/4W	R154	ERDS2TJ102T	1K 1/4W	R225	ERDS2TJ2R7T	2.7 1/4W
R104	ERDS2TJ153T	15K 1/4W	R155	ERDS2TJ221T	220 1/4W	R226	ERDS2TJ102T	1K 1/4W
R105	ERDS2TJ271T	270 1/4W	R156	ERDS2TJ221T	220 1/4W	R227	ERDS2TJ102T	1K 1/4W
R106	ERD25TJ222T	2.2K 1/4W	R158	ERDS2TJ221T	220 1/4W	R228	ERDS2TJ472T	4.7K 1/4W
R107	ERDS2TJ330T	33 1/4W	R159	ERDS2TJ222T	2.2K 1/4W	R229	ERDS2TJ103T	10K 1/4W
R108	ERDS2TJ330T	33 1/4W	R160	ERDS2TJ222T	2.2K 1/4W	R230	ERDS2TJ472T	4.7K 1/4W
R109	ERDS2TJ392T	3.9K 1/4W	R161	ERDS2TJ472T	4.7K 1/4W	R231	ERDS2TJ472T	4.7K 1/4W
R110	ERDS2TJ392T	3.9K 1/4W	R162	ERDS2TJ472T	4.7K 1/4W	R232	ERDS2TJ222T	2.2K 1/4W
R111	ERDS2TJ222T	2.2K 1/4W	R163	ERDS2TJ433T	43K 1/4W	R233	ERD25TJ222T	2.2K 1/4W
R112	ERDS2TJ222T	2.2K 1/4W	R169	ERDS2TJ102T	1K 1/4W	R234	ERDS2TJ472T	4.7K 1/4W
R113	ERDS2TJ122T	1.2K 1/4W	R170	ERDS2TJ102T	1K 1/4W	R235	ERDS2TJ104T	100K 1/4W
R114	ERDS2TJ122T	1.2K 1/4W	R172	ERDS2TJ331T	330 1/4W	R236	ERDS2TJ104T	100K 1/4W
R115	ERDS2TJ225T	2.2M 1/4W	R173	ERDS2TJ103T	10K 1/4W	R300	ERDS2TJ102T	1K 1/4W
R116	ERDS2TJ225T	2.2M 1/4W	R174	ERDS2TJ103T	10K 1/4W	R301	ERDS2TJ183T	18K 1/4W
R117	ERDS2TJ105T	1M 1/4W	R176	ERDS2TJ103T	10K 1/4W	R302	ERDS2TJ183T	18K 1/4W
R118	ERDS2TJ105T	1M 1/4W	R177	ERDS2TJ682T	6.8K 1/4W	R303	ERDS2TJ223T	22K 1/4W
R121	ERDS2TJ124T	120K 1/4W	R178	ERDS2TJ1R2T	1.2 1/4W	R304	ERDS2TJ223T	22K 1/4W
R122	ERDS2TJ124T	120K 1/4W	R179	ERDS2TJ472T	4.7K 1/4W	R305	ERDS2TJ472T	4.7K 1/4W
R123	ERDS2TJ473T	47K 1/4W	R180	ERDS2TJ472T	4.7K 1/4W	R306	ERDS2TJ472T	4.7K 1/4W
R124	ERDS2TJ473T	47K 1/4W	R181	ERD25TJ332T	3.3K 1/4W	R307	ERDS2TJ102T	1K 1/4W
R125	ERDS2TJ472T	4.7K 1/4W	R182	ERDS2TJ1R0T	1 1/4W	R308	ERDS2TJ102T	1K 1/4W
R126	ERDS2TJ472T	4.7K 1/4W	R183	ERDS2TJ104T	100K 1/4W	R309	ERDS2TJ182T	1.8K 1/4W
R127	ERDS2TJ392T	3.9K 1/4W	R184	ERDS2TJ104T	100K 1/4W	R310	ERDS2TJ182T	1.8K 1/4W
R128	ERDS2TJ392T	3.9K 1/4W	R185	ERDS2TJ104T	100K 1/4W	R311	ERDS2TJ273T	27K 1/4W
R131	ERDS2TJ823T	82K 1/4W	R186	ERDS2TJ102T	1K 1/4W	R312	ERDS2TJ273T	27K 1/4W
R132	ERDS2TJ335T	3.3M 1/4W	R188	ERDS2TJ102T	1K 1/4W	R313	ERDS2TJ332T	3.3K 1/4W
R133	ERDS2TJ332T	3.3K 1/4W	R189	ERDS2TJ472T	4.7K 1/4W	R314	ERDS2TJ332T	3.3K 1/4W
R134	ERDS2TJ474T	470K 1/4W	R200	ERDS2TJ221T	220 1/4W	R315	ERDS2TJ822T	8.2K 1/4W
R137	ERD25TJ103T	10K 1/4W	R201	ERDS2TJ2R7T	2.7 1/4W	R316	ERDS2TJ822T	8.2K 1/4W
R138	ERD25TJ103T	10K 1/4W	R202	ERDS2TJ562T	5.6K 1/4W	R317	ERDS2TJ332T	3.3K 1/4W
R139	ERDS2TJ103T	10K 1/4W	R203	ERDS2TJ153T	15K 1/4W	R318	ERDS2TJ332T	3.3K 1/4W
R141	ERDS2TJ682T	6.8K 1/4W	R204	ERDS2TJ123T	12K 1/4W	R319	ERDS2TJ821T	820 1/4W
R142	ERDS2TJ682T	6.8K 1/4W	R205	ERDS2TJ334T	330K 1/4W	R320	ERDS2TJ821T	820 1/4W
R145	ERDS2TJ103T	10K 1/4W	R206	ERDS2TJ221T	220 1/4W	R321	ERDS2TJ682T	6.8K 1/4W
R146	ERDS2TJ103T	10K 1/4W	R207	ERDS2TJ2R7T	2.7 1/4W	R322	ERDS2TJ682T	6.8K 1/4W
R149	ERDS2TJ272T	2.7K 1/4W	R208	ERDS2TJ123T	12K 1/4W	R329	ERDS2TJ332T	3.3K 1/4W
R150	ERDS2TJ272T	2.7K 1/4W	R209	ERDS2TJ123T	12K 1/4W	R330	ERDS2TJ332T	3.3K 1/4W
R151	ERDS2TJ105T	1M 1/4W	R210	ERDS2TJ272T	2.7K 1/4W	R331	ERDS2TJ105T	1M 1/4W
			R211	ERDS2TJ334T	330K 1/4W	R332	ERDS2TJ105T	1M 1/4W
			R212	ERDS2TJ123T	12K 1/4W	R333	ERDS2TJ272T	2.7K 1/4W
			R213	ERDS2TJ152T	1.5K 1/4W	R334	ERDS2TJ272T	2.7K 1/4W

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
R335	ERDS2TJ123T	12K 1/4W	R399	ERDS2TJ823T	82K 1/4W	R512	ERDS2TJ103T	10K 1/4W
R336	ERDS2TJ123T	12K 1/4W	R400	ERDS2TJ823T	82K 1/4W	R513	ERD25FVJ820T	82 1/4W
R337	ERDS2TJ223T	22K 1/4W	R401	ERDS2TJ224T	220K 1/4W	R514	ERDS2TJ221T	220 1/4W
R338	ERDS2TJ223T	22K 1/4W	R402	ERDS2TJ224T	220K 1/4W	R515	ERDS1FVJ100T	10 1/2W Δ
R339	ERDS2TJ102T	1K 1/4W	R403	ERDS2TJ223T	22K 1/4W	R516	ERDS1FVJ100T	10 1/2W Δ
R340	ERDS2TJ102T	1K 1/4W	R404	ERDS2TJ223T	22K 1/4W	R517	ERDS2TJ100T	10 1/4W
R341	ERDS2TJ153T	15K 1/4W	R405	ERDS2TJ123T	12K 1/4W	R518	ERDS2TJ100T	10 1/4W
R342	ERDS2TJ153T	15K 1/4W	R406	ERDS2TJ123T	12K 1/4W	R519	ERDS2TJ334T	330K 1/4W
R343	ERDS2TJ824T	820K 1/4W	R407	ERDS2TJ223T	22K 1/4W	R520	ERDS2TJ820T	82 1/4W
R344	ERDS2TJ332T	3.3K 1/4W	R408	ERDS2TJ223T	22K 1/4W	R521	ERDS1FVJ330T	33 1/2W Δ
R345	ERDS2TJ822T	8.2K 1/4W	R411	ERDS2TJ392T	3.9K 1/4W	R522	ERDS1FVJ330T	33 1/2W Δ
R346	ERDS2TJ222T	2.2K 1/4W	R412	ERDS2TJ392T	3.9K 1/4W	R523	ERDS1FVJ272T	2.7K 1/2W Δ
R347	ERDS2TJ183T	18K 1/4W	R413	ERDS2TJ102T	1K 1/4W	R524	ERDS1FVJ330T	33 1/2W Δ
R348	ERDS2TJ103T	10K 1/4W	R414	ERDS2TJ102T	1K 1/4W	R525	ERDS2TJ103T	10K 1/4W
R351	ERDS2TJ273T	27K 1/4W	R415	ERDS2TJ471T	470 1/4W	R526	ERDS2TJ151T	150 1/4W
R352	ERDS2TJ273T	27K 1/4W	R416	ERDS2TJ471T	470 1/4W	R527	ERDS1FVJ182T	1.8K 1/2W Δ
R357	ERDS2TJ103T	10K 1/4W	R419	ERDS2TJ102T	1K 1/4W	R529	ERDS2TJ151T	150 1/4W
R361	ERDS2TJ104T	100K 1/4W	R420	ERDS2TJ102T	1K 1/4W	R530	ERDS1FVJ332T	3.3K 1/2W Δ
R362	ERDS2TJ104T	100K 1/4W	R421	ERDS2TJ151T	150 1/4W	R531	ERDS2TJ103T	10K 1/4W
R363	ERDS2TJ102T	1K 1/4W	R422	ERDS2TJ151T	150 1/4W	R533	ERDS1FVJ330T	33 1/2W Δ
R364	ERDS2TJ102T	1K 1/4W	R423	ERDS2TJ102T	1K 1/4W	R534	ERDS1FVJ820T	82 1/2W Δ
R365	ERDS2TJ222T	2.2K 1/4W	R424	ERDS2TJ102T	1K 1/4W	R535	ERDS1FVJ820T	82 1/2W Δ
R366	ERDS2TJ222T	2.2K 1/4W	R425	ERDS2TJ105T	1M 1/4W	R536	ERDS1FVJ820T	82 1/2W Δ
R369	ERDS2TJ682T	6.8K 1/4W	R426	ERDS2TJ105T	1M 1/4W	R538	ERDS2TJ151T	150 1/4W
R370	ERDS2TJ682T	6.8K 1/4W	R427	ERDS2TJ105T	1M 1/4W	R539	ERDS2TJ332T	3.3K 1/4W Δ
R371	ERDS2TJ332T	3.3K 1/4W	R428	ERDS2TJ105T	1M 1/4W	R540	ERDS2TJ820T	82 1/4W
R372	ERDS2TJ332T	3.3K 1/4W	R432	ERDS2TJ473T	47K 1/4W	R541	ERDS2TJ820T	82 1/4W
R373	ERDS2TJ102T	1K 1/4W	R435	ERDS2TJ152T	1.5K 1/4W	R542	ERDS2TJ820T	82 1/4W
R374	ERDS2TJ102T	1K 1/4W	R436	ERDS2TJ152T	1.5K 1/4W	R543	ERDS2TJ820T	82 1/4W
R381	ERDS2TJ222T	2.2K 1/4W	R437	ERDS2TJ225T	2.2M 1/4W	R545	ERDS1FVJ4R7T	4.7 1/2W
R382	ERDS1FVJ680T	68 1/2W	R438	ERDS2TJ225T	2.2M 1/4W	R546	ERDS1FVJ4R7T	4.7 1/2W
R383	ERDS2TJ222T	2.2K 1/4W	R439	ERDS2TJ225T	2.2M 1/4W	R548	ERDS2TJ102T	1K 1/4W
R384	ERDS2TJ151T	150 1/4W	R440	ERDS2TJ225T	2.2M 1/4W	R549	ERDS2TJ151T	150 1/4W
R385	ERDS2TJ105T	1M 1/4W	R441	ERDS2TJ102T	1K 1/4W	R550	ERDS2TJ681T	680 1/4W
R386	ERDS2TJ105T	1M 1/4W	R442	ERDS2TJ102T	1K 1/4W	R551	ERDS1FVJ330T	33 1/2W Δ
R387	ERDS2TJ100T	10 1/4W	R470	ERDS2TJ101T	100 1/4W	R552	ERDS1FVJ330T	33 1/2W Δ
R388	ERDS2TJ103T	10K 1/4W	R501	ERDS2TJ102T	1K 1/4W	R554	ERDS2TJ471T	470 1/4W
R389	ERDS2TJ102T	1K 1/4W	R502	ERDS2TJ102T	1K 1/4W	R555	ERDS2TJ152T	1.5K 1/4W
R390	ERDS2TJ102T	1K 1/4W	R503	ERDS2TJ332T	3.3K 1/4W	R556	ERD2FCVJ4R7T	4.7 1/4W
R391	ERDS2TJ153T	15K 1/4W	R504	ERDS2TJ332T	3.3K 1/4W	R557	ERDS1FVJ390T	39 1/2W Δ
R392	ERDS2TJ153T	15K 1/4W	R505	ERDS2TJ104T	100K 1/4W	R559	ERDS1FVJ3R3T	3.3 1/2W Δ
R393	ERDS2TJ104T	100K 1/4W	R506	ERDS2TJ104T	100K 1/4W	R561	ERD2FCVG220T	22 1/4W Δ
R394	ERDS2TJ104T	100K 1/4W	R507	ERDS2TJ104T	100K 1/4W	R562	ERDS2TJ151T	150 1/4W
R395	ERDS2TJ682T	6.8K 1/4W	R508	ERDS2TJ104T	100K 1/4W	R563	ERDS2TJ823T	82K 1/4W
R396	ERDS2TJ682T	6.8K 1/4W	R509	ERD25FVJ470T	47 1/4W	R564	ERDS2TJ124T	120K 1/4W
R397	ERDS2TJ152T	1.5K 1/4W	R510	ERDS1FVJ222T	2.2K 1/2W	R565	ERDS2TJ563T	56K 1/4W
R398	ERDS2TJ152T	1.5K 1/4W	R511	ERDS2TJ563T	56K 1/4W	R601	ERDS2TJ101T	100 1/4W

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
R602	ERDS2TJ101T	100 1/4W	R677	ERDS2TJ820T	82 1/4W	C126	ECFR1C473MR	0.047 16V
R603	ERDS2TJ104T	100K 1/4W	R678	ERDS2TJ820T	82 1/4W	C127	ECBT1C332MR5	3300P 16V
R604	ERDS2TJ561T	560 1/4W	R679	ERDS2TJ102T	1K 1/4W	C128	ECBT1C332MR5	3300P 16V
R605	ERDS2TJ104T	100K 1/4W	R680	ERDS2TJ104T	100K 1/4W	C129	ECBT1H151KB5	150P 50V
R607	ERDS2TJ473T	47K 1/4W	R681	ERDS2TJ104T	100K 1/4W	C130	ECBT1H151KB5	150P 50V
R608	ERDS2TJ473T	47K 1/4W	R682	ERDS2TJ104T	100K 1/4W	C131	ECBT1H221KB5	220P 50V
R611	ERDS2TJ104T	100K 1/4W	R683	ERDS2TJ104T	100K 1/4W	C132	ECBT1H221KB5	220P 50V
R612	ERDS2TJ102T	1K 1/4W	R684	ERDS2TJ104T	100K 1/4W	C133	ECEA1HKS010B	1 50V
R613	ERDS2TJ102T	1K 1/4W	R685	ERDS2TJ104T	100K 1/4W	C134	ECEA1HKA010B	1 50V
R614	ERDS2TJ102T	1K 1/4W	R686	ERDS2TJ103T	10K 1/4W	C137	ECFR1C183KR	0.018 16V
R615	ERDS2TJ102T	1K 1/4W	R687	ERDS2TJ102T	1K 1/4W	C138	ECFR1C183KR	0.018 16V
R616	ERDS2TJ102T	1K 1/4W	R688	ERDS2TJ102T	1K 1/4W	C139	ECEA1HU2R2B	2.2 50V
R617	ERDS2TJ102T	1K 1/4W	R689	ERDS2TJ104T	100K 1/4W	C140	ECEA1CKA100B	10 16V
R618	ERDS2TJ102T	1K 1/4W	R690	ERDS2TJ104T	100K 1/4W	C141	ECEA1HU0R1B	0.1 50V
R619	ERDS2TJ104T	100K 1/4W	R691	ERDS2TJ104T	100K 1/4W	C142	ECFR1C223MR	0.022 16V
R620	ERDS2TJ104T	100K 1/4W	R692	ERDS2TJ104T	100K 1/4W	C143	ECEA1HKA010B	1 50V
R621	ERDS2TJ104T	100K 1/4W	R693	ERDS2TJ104T	100K 1/4W	C144	ECEA1HKA010B	1 50V
R622	ERDS2TJ104T	100K 1/4W	R694	ERDS2TJ104T	100K 1/4W	C145	ECEA1CKA100B	10 16V
R623	ERDS2TJ472T	4.7K 1/4W	R695	ERDS2TJ104T	100K 1/4W	C146	ECEA1CKA100B	10 16V
R624	ERDS2TJ472T	4.7K 1/4W	R696	ERDS2TJ104T	100K 1/4W	C150	ECEA1AU470B	47 10V
R625	ERDS2TJ681T	680 1/4W	R698	ERDS2TJ104T	100K 1/4W	C151	ECEA1HKA010B	1 50V
R626	ERDS2TJ334T	330K 1/4W				C152	ECEA1HKA010B	1 50V
R627	ERDS2TJ333T	33K 1/4W		CAPACITORS		C153	ECBT1H102KB5	1000P 50V
R628	ERDS2TJ333T	33K 1/4W				C154	ECBT1H102KB5	1000P 50V
R629	ERDS2TJ182T	1.8K 1/4W	C101	ECBT1H821KB5	820P 50V	C155	ECEA1CKA100B	10 16V
R630	ERDS2TJ182T	1.8K 1/4W	C102	ECBT1H821KB5	820P 50V	C156	ECEA1CKA100B	10 16V
R645	ERDS2TJ106T	10M 1/4W	C104	ECFR1C223MR	0.022 16V	C157	ECBT1H681KB5	680P 50V
R646	ERDS2TJ820T	82 1/4W	C105	ECBT1H471KB5	470P 50V	C158	ECBT1H681KB5	680P 50V
R647	ERDS2TJ104T	100K 1/4W	C106	ECBT1H471KB5	470P 50V	C159	ECBT1C682KR5	6800P 16V
R648	ERDS2TJ104T	100K 1/4W	C108	ECEA1AU330B	33 10V	C160	ECBT1C682KR5	6800P 16V
R649	ERDS2TJ102T	1K 1/4W	C109	ECEA1AU101B	100 10V	C161	ECEA1CU101B	100 16V
R650	ERDS2TJ102T	1K 1/4W	C110	ECFR1E104ZF5	0.1 25V	C162	ECEA0JU471B	470 6.3V
R655	ERDS2TJ104T	100K 1/4W	C111	ECBT1H331KB5	330P 50V	C163	ECEA1HKA010B	1 50V
R656	ERDS2TJ104T	100K 1/4W	C112	ECBT1H331KB5	330P 50V	C164	ECEA1HKA010B	1 50V
R661	ERDS2TJ682T	6.8K 1/4W	C113	ECEA0JU221B	220 6.3V	C165	ECEA1CKA100B	10 16V
R662	ERDS2TJ682T	6.8K 1/4W	C114	ECEA0JU221B	220 6.3V	C166	ECEA1CKA100B	10 16V
R663	ERDS2TJ182T	1.8K 1/4W	C115	ECFR1C333JR	0.033 16V	C167	ECEA50ZR68B	0.68 50V
R664	ERDS2TJ182T	1.8K 1/4W	C116	ECFR1C333JR	0.033 16V	C168	ECEA50ZR68B	0.68 50V
R665	ERDS2TJ123T	12K 1/4W	C117	ECEA1HKA010B	1 50V	C169	ECEA1EU4R7B	4.7 25V
R666	ERDS2TJ123T	12K 1/4W	C118	ECEA1HKA010B	1 50V	C170	ECEA1EU4R7B	4.7 25V
R670	ERDS2TJ102T	1K 1/4W	C119	ECEA1EU4R7B	4.7 25V	C171	ECEA1CKA100B	10 16V
R671	ERDS2TJ820T	82 1/4W	C120	ECEA1EU4R7B	4.7 25V	C172	ECEA1CU220B	22 16V
R672	ERDS2TJ820T	82 1/4W	C121	ECEA1HKA010B	1 50V	C173	ECBT1C103MS5	0.01 16V
R673	ERDS2TJ820T	82 1/4W	C122	ECEA1HKA010B	1 50V	C174	ECEA1EU4R7B	4.7 25V
R674	ERDS2TJ820T	82 1/4W	C123	ECBT1H102KB5	1000P 50V	C175	ECEA1CU101B	100 16V
R675	ERDS2TJ820T	82 1/4W	C124	ECBT1H102KB5	1000P 50V	C176	ECQV1H473JZ3	0.047 50V
R676	ERDS2TJ820T	82 1/4W	C125	ECFR1C473MR	0.047 16V	C177	ECBT1H102KB5	1000P 50V

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
C178	ECBT1H102KB5	1000P 50V	C335	ECFR1C123KR	0.012 16V	C394	ECEA1HKAR68B	0.68 50V
C179	ECBT1C103MS5	0.01 16V	C336	ECFR1C123KR	0.012 16V	C395	ECEA1HKAR68B	0.68 50V
C180	ECFR1C103MR	0.01 16V	C337	ECEA1HK2R2B	2.2 50V	C396	ECEA1HKAR68B	0.68 50V
C181	ECBT1C103MS5	0.01 16V	C338	ECEA1HK2R2B	2.2 50V	C399	ECEA1HKA4R7B	4.7 50V
C182	ECEA1EU4R7B	4.7 25V	C339	ECEA1CKA100B	10 16V	C400	ECEA1HKA4R7B	4.7 50V
C183	ECQV1H474JZ3	0.47 50V	C340	ECEA1CKA100B	10 16V	C401	ECEA1HKA4R7B	4.7 50V
C184	ECQP1152JZ	1500P 100V	C341	ECBT1H820KB5	82P 50V	C402	ECEA1HKA4R7B	4.7 50V
C185	ECQP1472JZT	4700P 100V	C342	ECBT1H820KB5	82P 50V	C403	ECBT1C332KR5	3300P 16V
C186	ECEA1AU470B	47 10V	C343	ECBT1H102KB5	1000P 50V	C404	ECBT1C332KR5	3300P 16V
C187	ECBT1H471KB5	470P 50V	C344	ECBT1H102KB5	1000P 50V	C405	ECEA1CKA100B	10 16V
C188	ECBT1H471KB5	470P 50V	C347	ECBT1H101KB5	100P 50V	C406	ECEA1CKA100B	10 16V
C189	ECQP1272JZ	2700P 100V	C348	ECBT1H101KB5	100P 50V	C410	ECEA1HK010B	1 50V
C190	ECBT1C103MS5	0.01 16V	C349	ECBT1H101KB5	100P 50V	C411	ECEA1CKA100B	10 16V
C201	ECEA1CU101B	100 16V	C350	ECBT1H101KB5	100P 50V	C412	ECEA1CKA100B	10 16V
C202	ECFR1E104ZF5	0.1 25V	C351	ECEA1HK010B	1 50V	C421	ECBT1H101KB5	100P 50V
C302	ECBT1E103ZF5	0.01 25V	C352	ECEA1HK010B	1 50V	C422	ECBT1H101KB5	100P 50V
C303	ECBT1E103ZF5	0.01 25V	C353	ECEA1HK010B	1 50V	C423	ECBT1H181KB5	180P 50V
C305	ECBT1C682KR5	6800P 16V	C354	ECEA1HK010B	1 50V	C424	ECBT1H181KB5	180P 50V
C306	ECBT1C682KR5	6800P 16V	C355	ECEA1CKA100B	10 16V	C501	ECEA1HKA0R1B	0.1 50V
C307	ECBT1C222KR5	2200P 16V	C356	ECEA1CKA100B	10 16V	C502	ECEA1HKA0R1B	0.1 50V
C308	ECBT1C222KR5	2200P 16V	C357	ECBT1H391KB5	390P 50V	C503	ECBT1H331KB5	330P 50V
C309	ECFR1C223KR	0.022 16V	C358	ECBT1H391KB5	390P 50V	C504	ECBT1H331KB5	330P 50V
C310	ECFR1C223KR	0.022 16V	C359	ECEA0JKA101B	100 6.3V	C505	ECBT1H821KB5	820P 50V
C311	ECBT1C682KR5	6800P 16V	C360	ECEA0JKA101B	100 6.3V	C506	ECBT1H821KB5	820P 50V
C312	ECBT1C682KR5	6800P 16V	C361	ECBT1H271KB5	270P 50V	C507	ECBT1H150J5	15P 50V
C313	ECEA1HKA0R1B	0.1 50V	C362	ECBT1H271KB5	270P 50V	C508	ECBT1H150J5	15P 50V
C314	ECEA1HKA0R1B	0.1 50V	C363	ECEA1HKAR47B	0.47 50V	C509	ECEA1HU330B	33 50V
C315	ECFR1C333KR	0.033 16V	C364	ECEA1HKAR47B	0.47 50V	C510	ECEA2AU100B	10 100V
C316	ECFR1C333KR	0.033 16V	C365	ECFR1C823MR	0.082 16V	C511	ECKR1H473ZF5	0.047 50V
C317	ECEA1HKR15B	0.15 50V	C366	ECBT1C472KR5	4700P 16V	C512	ECKR1H473ZF5	0.047 50V
C318	ECEA1HKR15B	0.15 50V	C367	ECEA1CN100SB	10 16V	C513	ECEA1HKA010B	1 50V
C319	ECFR1C823MR	0.082 16V	C368	ECFR1C223KR	0.022 16V	C514	ECEA1HKA010B	1 50V
C320	ECFR1C823MR	0.082 16V	C369	ECEA1HK010B	1 50V	C516	ECKR1H103ZF5	0.01 50V△
C321	ECBT1E103ZF5	0.01 25V	C370	ECEA1CKA101B	100 16V	C517	ECKR1H103ZF5	0.01 50V△
C322	ECBT1H102KB5	1000P 50V	C371	ECEA1HKA4R7B	4.7 50V	C518	ECKR1H103ZF5	0.01 50V△
C323	ECBT1H101KB5	100P 50V	C372	ECEA1CKA100B	10 16V	C519	ECKR1H103ZF5	0.01 50V△
C324	ECEA1AU471B	470 10V	C375	ECBT1H470J5	47P 50V	C520	ECEA1CU470B	47 16V
C325	ECEA1CKA100B	10 16V	C376	ECBT1H470J5	47P 50V	C521	ECEA1CU221B	220 16V
C326	ECEA1CKA100B	10 16V	C377	ECBT1H470J5	47P 50V	C523	ECEA0JKA101B	100 6.3V
C327	ECBT1C152MR5	1500P 16V	C378	ECBT1E103ZF5	0.01 25V	C524	ECKR1H103ZF5	0.01 50V
C328	ECBT1C152MR5	1500P 16V	C379	ECBT1E103ZF5	0.01 25V	C525	ECKR1H103ZF5	0.01 50V
C329	ECBT1H681KB5	680P 50V	C380	ECEA1CKA100B	10 16V	C526	ECEA1HKA220B	22 50V
C330	ECBT1H681KB5	680P 50V	C381	ECFR1C473KR	0.047 16V	C528	ECEA1AKA470B	47 10V
C331	ECEA1HKAR47B	0.47 50V	C389	ECBT1E103ZF5	0.01 25V	C529	ECKR1H103ZF5	0.01 50V
C332	ECEA1HKAR47B	0.47 50V	C390	ECEA1CKA100B	10 16V	C530	ECEA1HU102E	1000 50V△
C333	ECEA1HKAR22B	0.22 50V	C391	ECEA1AKA101B	100 10V	C531	ECKR1H103ZF5	0.01 50V△
C334	ECEA1HKAR22B	0.22 50V	C392	ECEA1HK2R2B	2.2 50V	C532	ECEA0JU101B	100 6.3V△

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
C533	ECKR1H103ZF5	0.01 50V Δ	C623	ECBT1H560J5	56P 50V			
C535	ECEA1CU101B	100 16V Δ	C624	ECBT1H560J5	56P 50V			
C536	ECKR1H103ZF5	0.01 50V Δ	C625	ECBT1H220JC5	22P 50V			
C537	ECEA1CKA101B	100 16V Δ	C626	ECBT1H180JC5	18P 50V			
C538	ECKR1H103ZF5	0.01 50V Δ	C627	ECEA1HKA2R2B	2.2 50V			
C539	ECKR1H103ZF5	0.01 50V	C628	ECEA1HKA2R2B	2.2 50V			
C540	ECKR1H103ZF5	0.01 50V (EG)	C639	ECBT0J223NS5	0.022 6.3V			
C541	ECEA1HU222E	2200 50V Δ	C640	ECEA1HKAR22B	0.22 50V			
C542	ECEA1HU222E	2200 50V Δ	C641	ECBT1C103MS5	0.01 16V			
C543	ECKR1H103ZF5	0.01 50V (EG)	C642	ECBT1H101KB5	100P 50V			
C544	ECKR1H103ZF5	0.01 50V (EG)	C643	ECBT1H101KB5	100P 50V			
C547	ECEA1HKA220B	22 50V	C644	ECEA1HKAR33B	0.33 50V			
C548	ECKR1H103ZF5	0.01 50V	C645	ECBT1H220JC5	22P 50V			
C549	ECEA1HU101B	100 50V	C646	ECBT1H220JC5	22P 50V			
C550	ECQE1224KZ	0.22 100V	C651	ECBT1H331KB5	330P 50V			
C551	ECBT1H101KB5	100P 50V (EG)	C652	ECBT1H331KB5	330P 50V			
C552	ECBT1H101KB5	100P 50V (EG)	C951	ECBT1H101KB5	100P 50V (D 1)			
C553	ECKR1H103ZF5	0.01 50V (E/EB)	C971	ECBT1H101KB5	100P 50V (D 2)			
C553	ECKR1H223ZF5	0.022 50V (EG)						
C554	ECKR1H103ZF5	0.01 50V (E/EB)						
C554	ECKR1H223ZF5	0.022 50V (EG)						
C555	ECBT1H101KB5	100P 50V (EG)						
C556	ECBT1H101KB5	100P 50V (EG)						
C557	ECBT1H101KB5	100P 50V (EG)						
C559	ECBT1C103MS5	0.01 16V (EG)						
C561	ECBT1H101KB5	100P 50V (EG)						
C562	ECBT1H101KB5	100P 50V (EG)						
C601	ECEA1HK3R3B	3.3 50V						
C601	ECEA1HKA3R3B	3.3 50V						
C602	ECEA1HKA3R3B	3.3 50V						
C603	ECEA1HKA010B	1 50V						
C604	ECEA0JKA101B	100 6.3V						
C605	ECBT1H102KB5	1000P 50V						
C606	ECBT1H561KB5	560P 50V						
C607	ECBT1H561KB5	560P 50V						
C608	ECBT1H561KB5	560P 50V						
C609	ECEA0JKA470B	47 6.3V						
C610	ECEA0JU102B	1000 6.3V						
C611	ECBT1H102KB5	1000P 50V						
C612	ECEA0JU102B	1000 6.3V						
C613	ECEA1AKA220B	22 10V						
C614	ECBT1C103MS5	0.01 16V						
C617	ECBT1C103MS5	0.01 16V						
C619	ECBT1H102KB5	1000P 50V						
C620	ECBT1H102KB5	1000P 50V						
C621	ECBT1H680J5	68P 50V						
C622	ECBT1H680J5	68P 50V						