

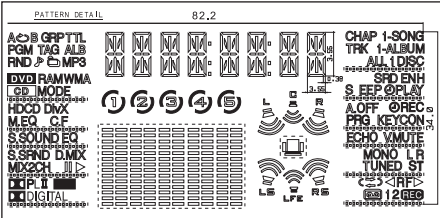


Item		FL Display	Key Operation
Mode Name	Description		Front Key
Firmware Version Check	To check the EEPROM checksum and Micro-P firmware version.	(Condition 1)  Micro-processor Version If the version of the EEPROM does not match, [NG] is displayed. (Condition 2)  Micro-processor Version (a) If there is NO EEPROM header string OR (b) If there is no EEPROM (no data is received by Micro-processor), [NO] is displayed. (Condition 3)  Micro-processor Version EEPROM Checksum (If applicable) The checksum of EEPROM and firmware version will be displayed. (If applicable) * ROM correction ** Firmware version No.	In Doctor Mode, press [STOP] button on the main unit, followed by [4] and [7] on the remote control unit. To exit, press [ENTER] button on the remote control unit or power off the main unit.
Cold Start	For restart.		In Doctor Mode, press [4] on the remote control unit. To exit, press [ENTER] button on the remote control unit or power off the main unit.
Tape Ejected Test	To check on the eject function. (For DECK 1/2)	No display. Both deck will be ejected automatically.	In Doctor Mode, press [0] button on the remote control. To exit, press [ENTER] button on the remote control unit or power off the main unit.
FL Display Test	To check the FL segments display. (All segments will light up and LED will blink at 0.5 second interval).	 All segments of FL Will light up	In Doctor Mode, press [DISPLAY/REC] button on the remote control unit. To exit, press [ENTER] button on the remote control unit or power off the main unit.