
Service Manual

Tumble Dryer

Air Vent

AWG 263

Model	AWG 263	
Version	8537 417 51001	Page
	Spare part list	2
	Exploded view	3 - 5
	Circuit and wiring diagram	6

Spare part list


Model
Service No.
Version

AWG 263
853741751001
853741751001


Pos. No.	12NC Code	Description
101	4812 361 58166	Motor with capacitor
112	4819 121 18279	Capacitor 8 F
125	4819 358 18131	V-ribbed belt
141	4819 321 18066	Connect.cable
142	4812 290 68217	Terminal block
196	4819 440 19603	Cabinet
199	4812 440 19904	Plinth
201	4812 466 68631	Gasket
203	4812 440 19905	Door cpl.
203 a	4812 440 19906	Frame,door glas (Cpl)
211	4812 282 18878	Timer
227	4812 259 28753	Heating element
228	4819 282 48221	Thermostat MRTL
229	4812 282 48241	Thermostat
230	4812 282 48251	Thermostat inlet
235	4812 310 38507	Switch
248	4812 310 38505	Microswitch Door
266	4812 418 18272	Drum
270	4819 535 78078	Bearing, kit
352	4812 412 38008	Knob timer
353	4812 452 10882	Control panel
355	4812 417 78051	Cover for hinge
359	4812 417 18942	Hinge Door (assy)
362	4819 450 69666	Window
363	4812 440 19907	Frame,door glas
363 a	4812 462 68015	Handle,door
364	4819 535 18013	Shaft hook
365	4819 492 48105	Spring,ret.
366	4819 417 58128	Hook
367	4819 404 78695	Holder,adjust. Door
369	4819 492 68299	Spring Clip
370	4819 462 38702	Latch Guide
376	4819 440 19642	Front panel
385	4819 404 49023	Bracket Top cover
386	4812 440 19727	Table top white
390	4819 325 68005	Gasket Thermostat
391	4819 410 28894	Button,push
393	4812 401 18475	Bracket
394	4812 462 79727	Foot
395	4819 492 68317	Clip,fix Heater
399	4812 404 48707	Support heating element
400	4812 404 78376	Plate heating element
402	4812 462 28132	Cover rear access
405	4812 502 38158	Screw M5 x 16
406	4819 530 88011	Washer,toothed 5 mm
407	4822 505 10327	Nut M 5
408	4812 435 18093	Clamp cable
413	4812 453 88009	Panel, rear
427	4822 310 20275	Clamp Motor
432	4819 404 49026	Holder Motor
437	4819 530 28506	Waste air hose
440	4819 418 78978	Air guide
441	4819 520 28022	Friction plate short
442	4812 466 68625	Seal Front
444	4819 466 98324	Drum lifter

Pos. No.	12NC Code	Description
445	4819 520 28021	Friction plate long
445 a	4819 520 28037	Sealing SET
446	4819 515 28127	Fan wheel
447	4819 440 19619	Cover
448	4812 491 48006	Spring ring (fan)
449	4819 492 68616	Fastener f.button switch
450	4819 466 89392	Bracket for Switch
454	4812 481 28152	Filter
455	4812 502 18455	Screw 6X10 countersunkh
456	4812 466 68626	Gasket banjo
457	4819 492 68296	Clip
458	4812 404 48709	Insert No. 2, banjo
459	4812 404 48711	Insert No. 1, banjo
518	4812 435 18088	Cable clamp
519	4812 505 18381	Nut M5
520	4812 290 68216	Connection Earth
537	4819 462 48404	Clip,fix
554	4819 532 68848	Holder, timer shaft

Exploded view

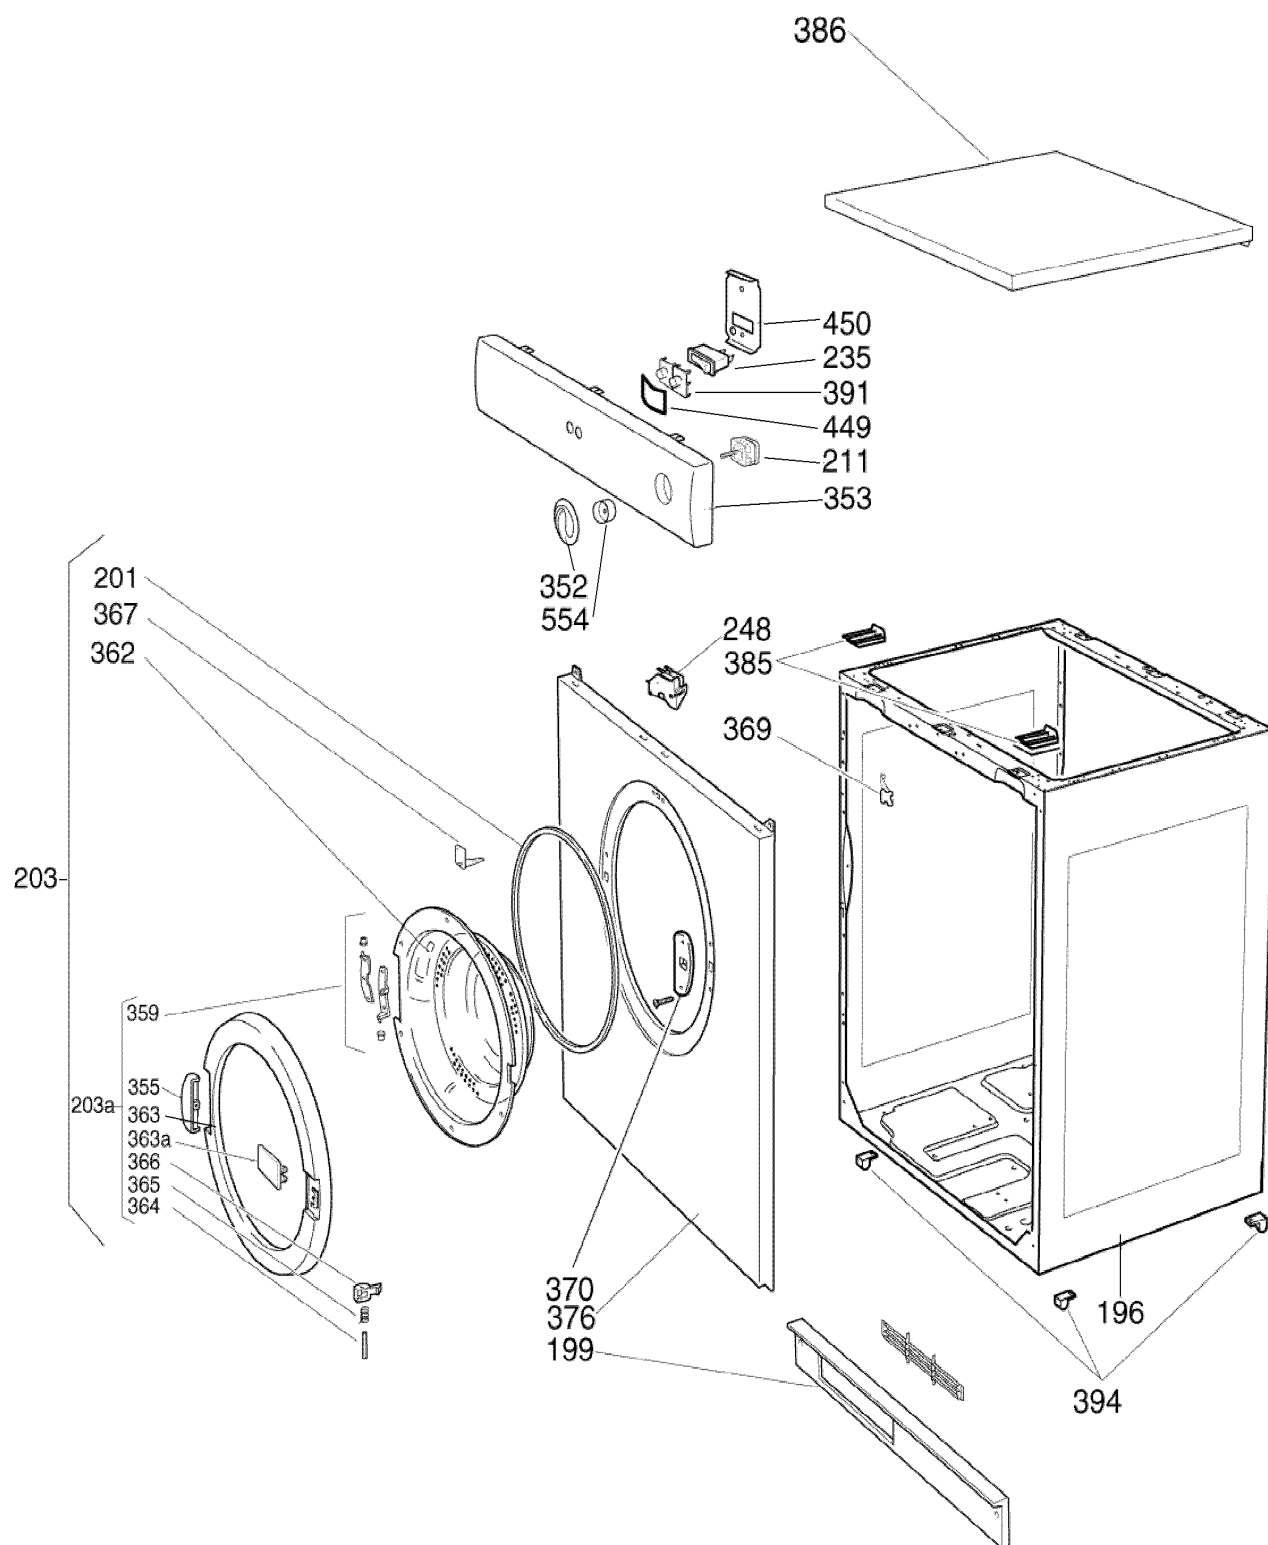


Exploded view

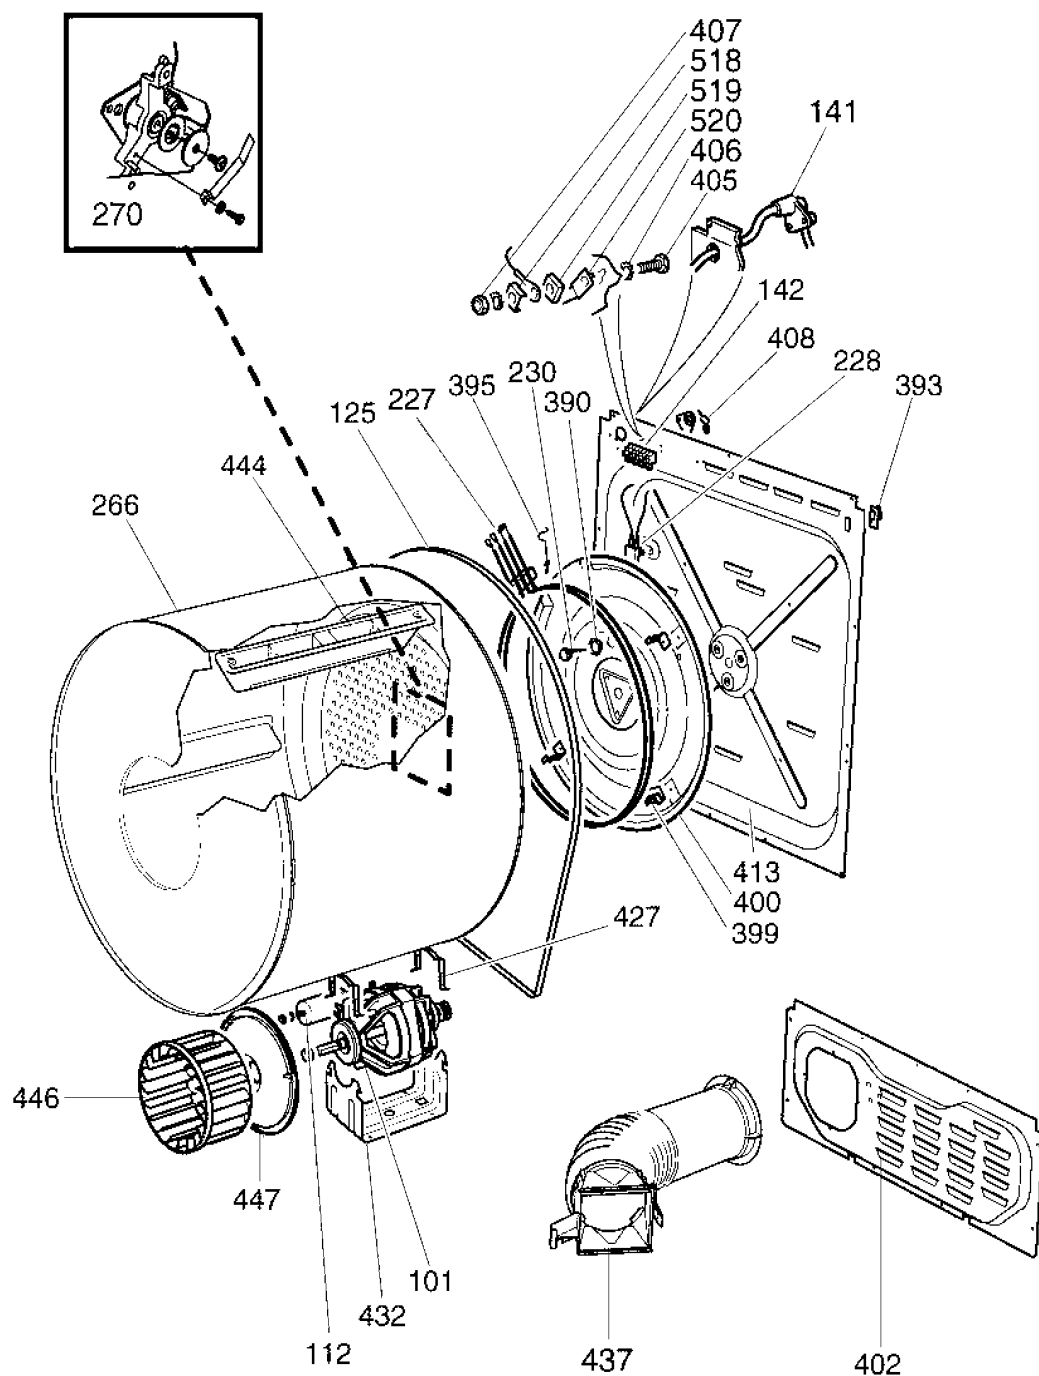


4213 094 60991-3

Exploded view

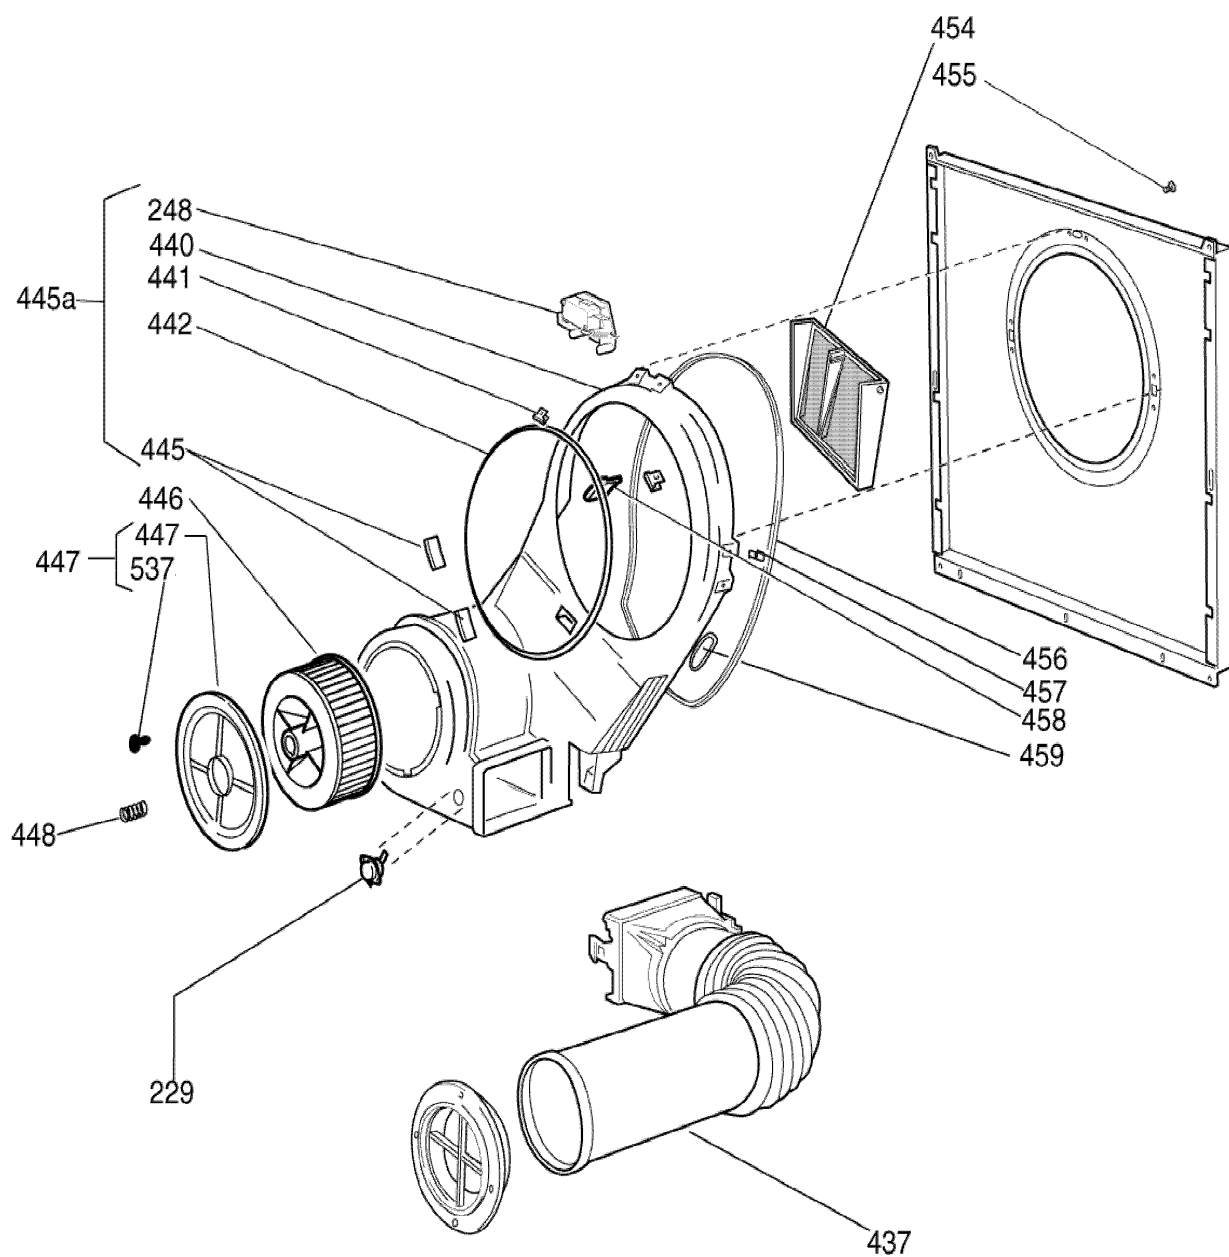

Circuit and wiring diagram

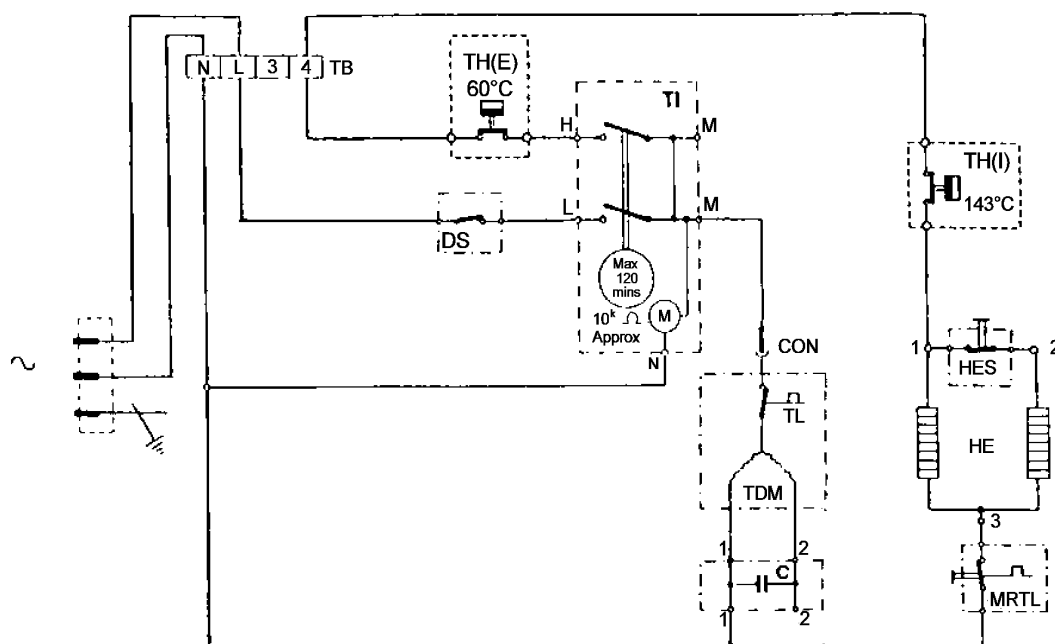

- A BLACK
- B BROWN
- C RED
- D ORANGE
- E YELLOW
- F GREEN
- G BLUE
- H VIOLET
- K WHITE

- TH(I) THERMOSTAT (INLET)
- TL TEMPERATUR LIMITER
- CON CCONNECTING LINK
- DS DOOR SWITCH
- HE HEATER
- HES HEAT SWITCH
- M MOTOR
- MC MAINS CORD
- TH(E) THERMOSTAT (EXHAUST)
- TB TERMINAL BLOCK
- TDM TUMBLE DRYER MOTOR
- C CAPACITOR
- TI TIMER
- MRTL TEMPERATURE LIMITER (MANUAL RESET)

