


Инструкция по настройке LCD телевизоров 13LTV10-10 и 17LTV10-20.

Вход в сервисное меню: Включить телевизор в рабочий режим и на ПДУ последовательно нажать следующие кнопки, "POWER", "MUTE", "CALL", "TIMER", . На экране появится надпись FACTORY. Нажать кнопку "TIMER", откроется первая строка меню регулировки баланса белого. Переход на следующую строку осуществляется с ПДУ кнопками "CH", изменение цифрового значения байта – кнопками "VOL".

S-BRI	76*	B-DRW	78*	R-DRW	79*	G-BIA	34*
C.B/W	0*	G-DRW	15*	B-BIA	130*	R-BIA	128*

Нажать кнопку "TIMER", откроется страница "ADJUST MENU 0", переход на следующую страницу меню – кнопкой "MUTE". Выбор параметра и изменение его значения - кнопками "CH" и "VOL". Выход из сервисного меню – кнопкой "TIMER".

ADJUST MENU 0		SEARCH CHECK	OFF	6122 VOL. OPT	OFF
H. PHASE	28*	BAND OPTION	PORT/H	SUB. CONT	31
V. SIZE	96*	AV ONLY	OFF	SUB. COLOR	15
V. LINE	16*	AV OPTION	1	SUB. SHARP	0
V.POSITION	50*	AV AUTO	OFF	SUB. TINT	32
V. SC	0*	AV MUTE	OFF	ADJUST MENU 7	
NT. H. PHASE	6*	AV MENU	ON	PAL OPTION	ON
NT. V. SIZE	48*	ADJUST MENU 4		N3.58 OPTION	ON
NT. V. LINE	7*	BACK COLOR	BLUE	N4.43 OPTION	ON
NT. V. POSI	36*	BLK PROCESS	ON	SECAM OPTION	ON
NT. V. SC	3*	BLUE OPTION	ON	COLOR AUTO	ON
ADJUST MENU 1		LINE MODE	OFF	4.5M OPTION	OFF
RF. AGC	23*	SENSI TIVITY	OFF	5.5M OPTION	OFF
VOLUME OUT	105	V. MUTE P. OFF	ON	6.0M OPTION	OFF
R-Y/B-Y G.BL	8	CALENDAR	ON	6.5M OPTION	ON
R-Y/B-Y ANG	8	GAME OPTION	ON	B.B. BRIGHT	80
B-Y DC LEVEL	8	ZOOM H./L.	OFF	ADJUST MENU 8	
R-Y DC LEVEL	8	CORING. OPT	OFF	H. FREQVENCE	32
SECAM B-Y DC	8	ADJUST MENU 5		AFC GAIN	HIGT
SECAM R-Y DC	8	HORIZONTAL	ON	V. SEPUP	1
ADJUST MENU 2		VERTICAL	ON	VIDEO. LEVEL	7
H. BLK. LEFT	4	4:3. OPT	OFF	FM. LEVEL	15
H. BLK. RIGHT	4	16:9. OPT1	OFF	CD. MODE	0
OSD H. POSI	85*	16:9. OPT2	OFF	SOUND TRAP	4
OSD V. POSI	18	LED OPTION	ON	R/G GAMMA	OFF
OSD CONT	80	BACKWARD OSD	ON	BLUE GAMMA	3
SHINESE OSD	OFF	GAME BLUE	ON	DIGITAL OSD	ON
ENGLISH OSD	ON	MENU BACK	OFF	ADJUST MENU 9	
RUSSIAN OSD	ON	DVD/VCD OSD	BKWARD	VOL. FILTER	ON
GERMAN OSD	OFF	ADJUST MENU 6		VIF. SYS. SW	38.0M
PERSIAN OSD	OFF	STEREO. OPT	OFF	BRT.ABL.DEF	0
ADJUST MENU 3		MENU 0	ON	MID.STP.DEF	0
IC SELECT	76810	DVD OPTION	OFF	BRT.ABL.TH	7
POWER OPTION	REM	VCD OPTION	OFF	EMG.ABL.DEF	0
POWER LOGO	ON	CD6122. OPT	OFF		

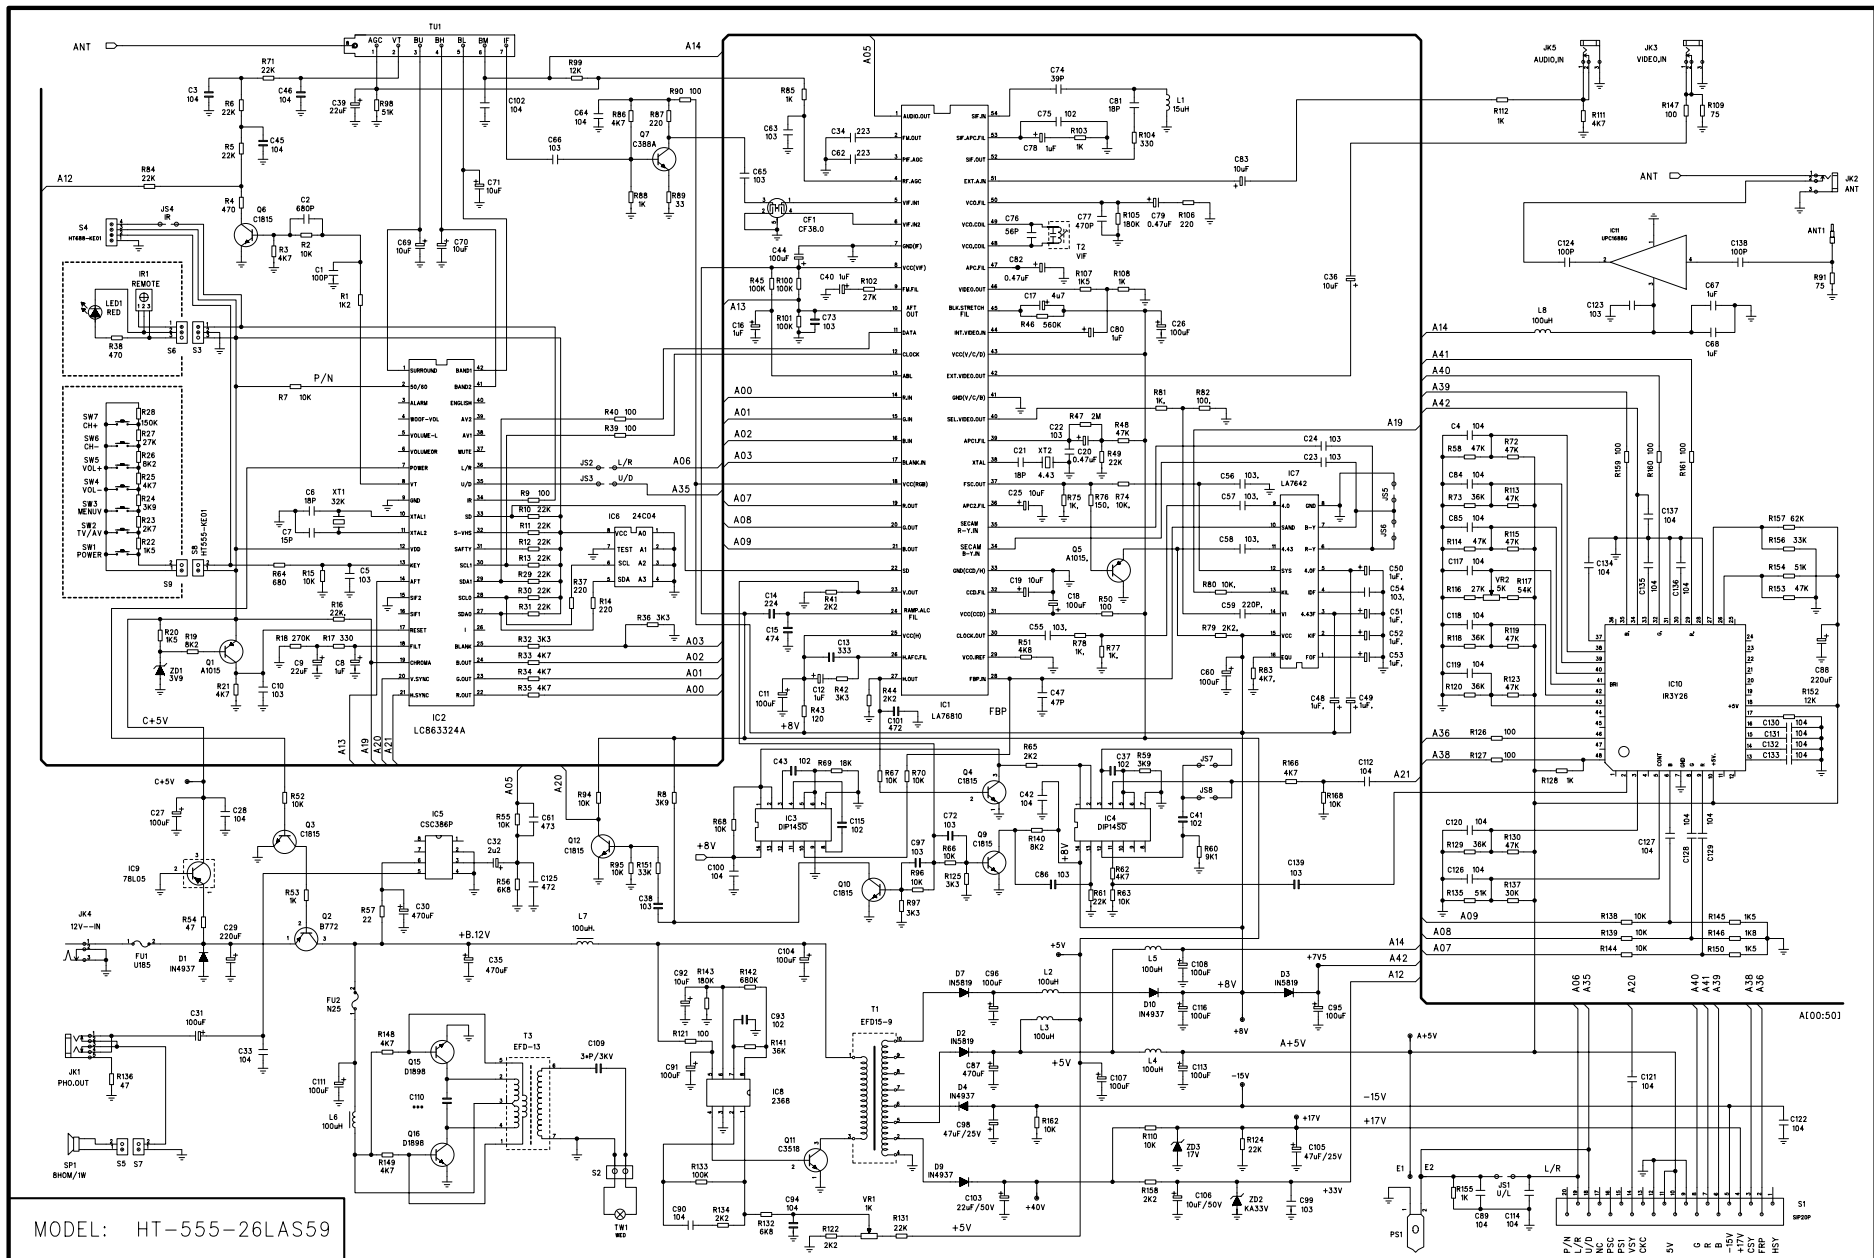

MODEL: HT-555-26LAS59

STUDIED OUT:

AUDITING:

AUTHORIZED:

DATE: 2003/4/23

REV: A