

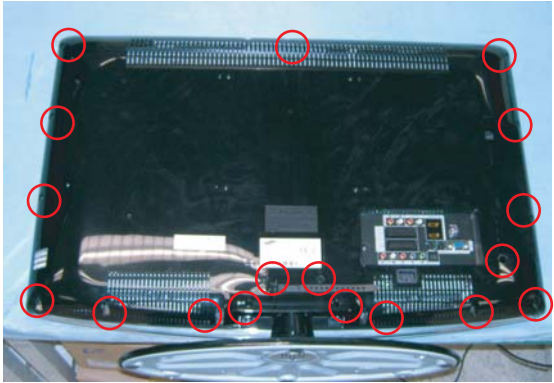
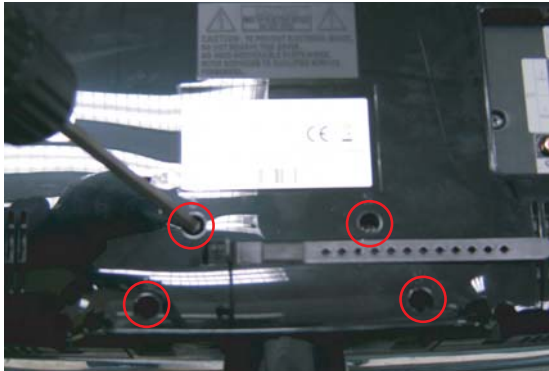
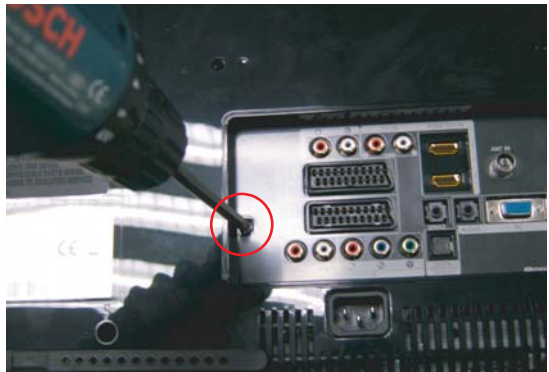
11 Disassembly and Reassembly

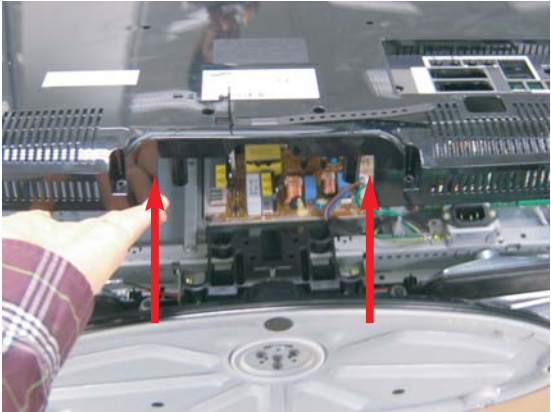
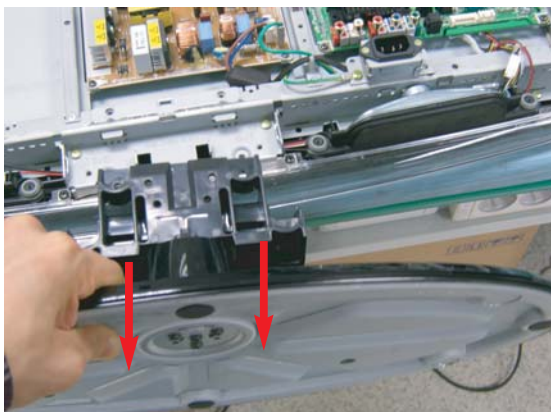
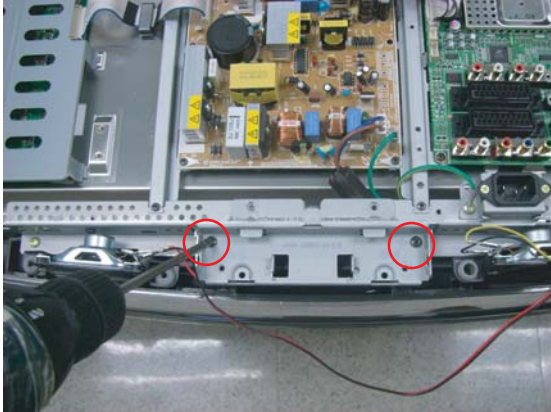
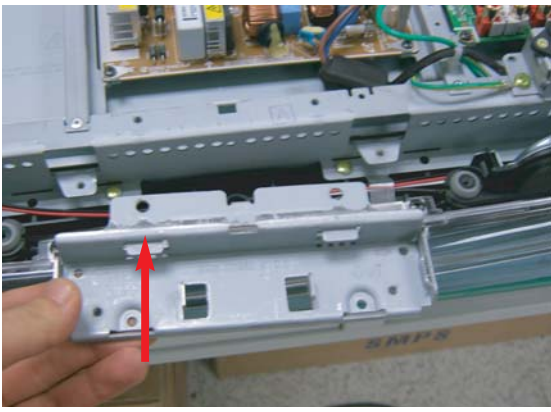
This section of the service manual describes the disassembly and reassembly procedures for the TFT-LCD TV.

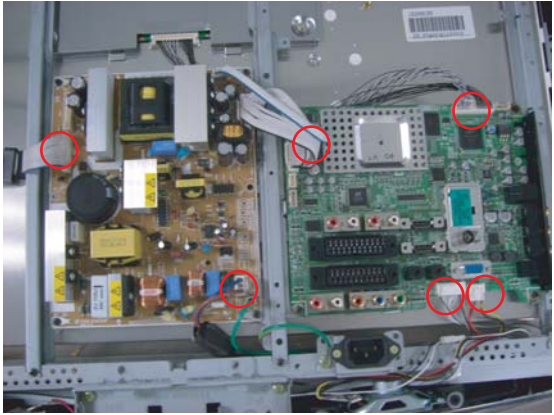
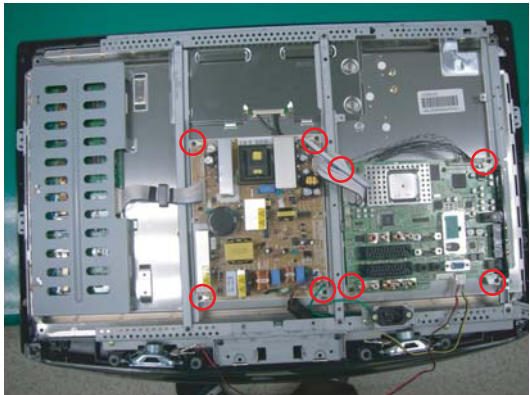
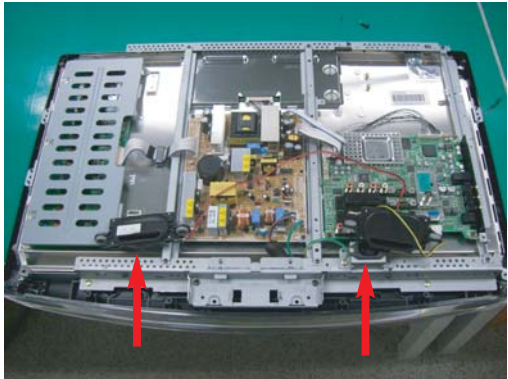
⚠ WARNING : This monitor contains electrostatically sensitive devices. Use caution when handling these components.

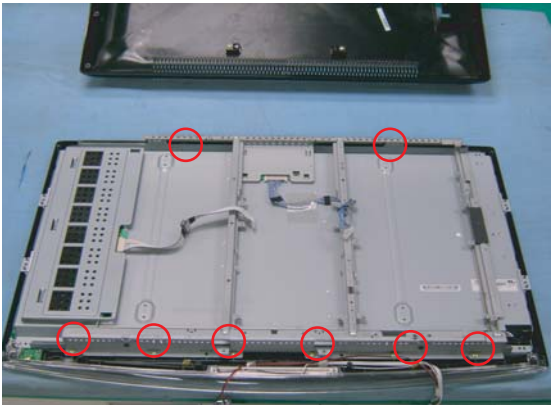
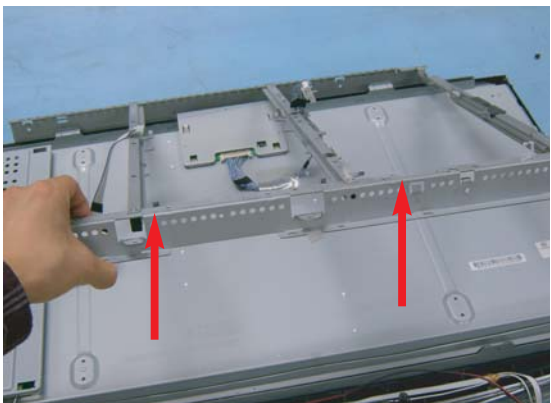
11-1 Disassembly

⚠ Cautions : 1. Disconnect the monitor from the power source before disassembly.
2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.

Description	Picture Description
1. Place monitor face down on cushioned table. Remove screws from the rear cover and remove screws from the stand.	 A photograph showing the back of the monitor. Numerous screws are visible, securing the rear cover and the stand. Red circles are drawn around each screw head to indicate where to remove them.
	 A close-up photograph of a hand using a screwdriver to remove a screw from the bottom of the monitor's stand. The screw is circled in red.
	 A close-up photograph of a hand using a screwdriver to remove a screw from the rear cover of the monitor. The screw is circled in red.

Description	Picture Description
2. Lift up the rear cover and remove the stand.	
	
3. Remove Screws from the stand BRKT and lift up the stand BRKT.	
	

Description	Picture Description
4. Lift up the shield and disconnect cables from the boards.	
5. Remove screws from the boards and remove screw from the side connector.	
	

Description	Picture Description
6. Remove screws and lift up the BRKT	 A photograph showing the rear view of a device chassis. Several screws are circled in red, indicating the locations to be removed. A black component is visible at the top of the frame.
	 A close-up photograph showing a hand lifting a metal bracket. Two red arrows point upwards, indicating the direction of movement for the bracket.
	 A photograph showing the rear view of the device chassis after the bracket has been removed. The internal components and wiring are visible.

11-2 Reassembly

Reassembly procedures are in the reverse order of disassembly procedures.

Memo