


EXPLODED VIEW

1.REMOTE CONTROLLER SECTION

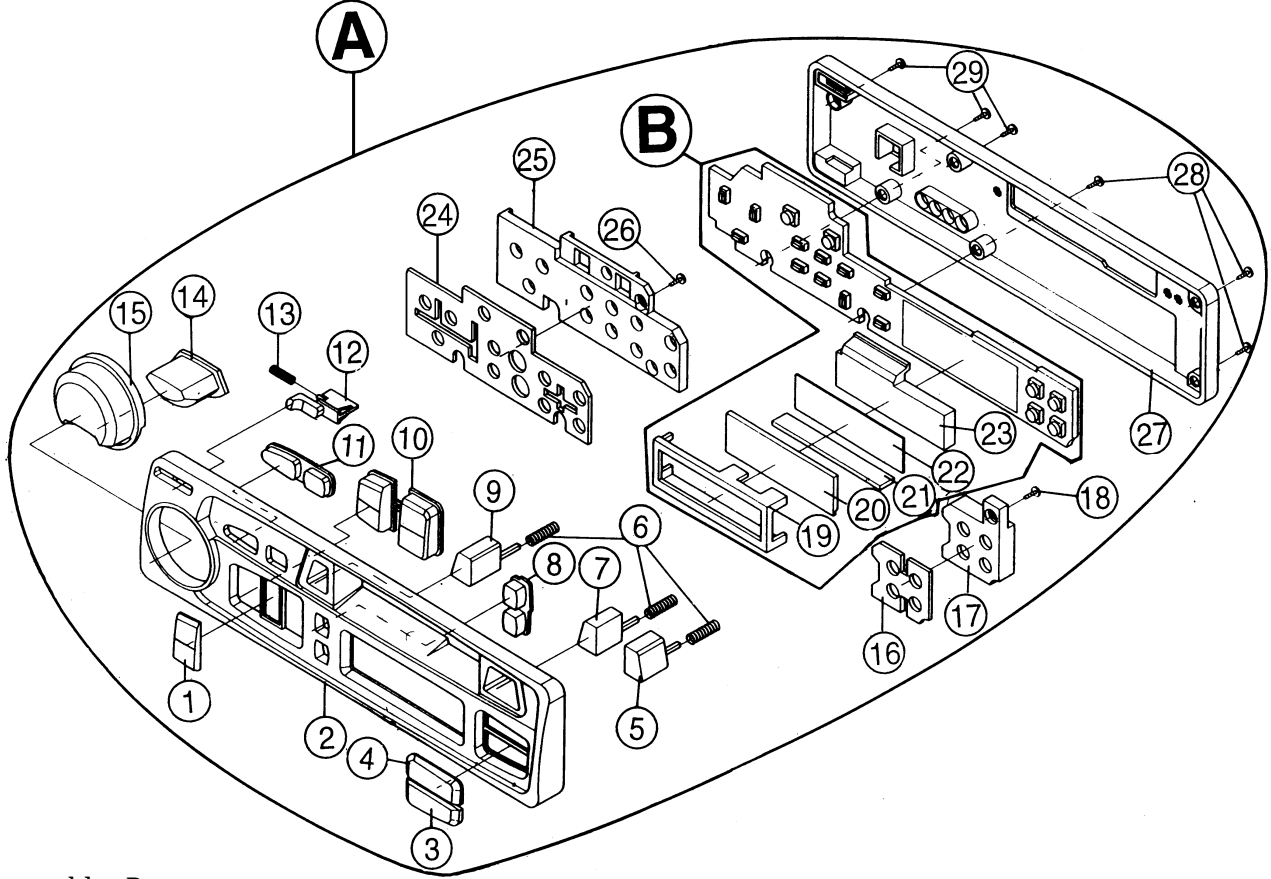

(1) Assembly Parts


Ref. No.	Part No.	Description
A	6762S-0004A	DETACHABLE UNIT ASS'Y
	6762S-0004B	DETACHABLE UNIT ASS'Y (GREEN, LGEPL etc.)
B	6871SF31FAA	FRONT PCB ASS'Y
	6871SF31FAB	FRONT PCB ASS'Y (GREEN, LGEPL etc.)

(2) Individual Parts

Ref. No.	Part No.	Description
1	4940S-0512A	KNOB PRESET #2,5 DISP
2	3720S-0520B	FRONT PANEL
3	4940S-0515B	KNOB AS/PS
4	4940S-0516A	KNOB SKIP
5	4940S-0508A	KNOB FF
6	442-690A	SPRING EJECT/FF/REW
7	4940S-0507A	KNOB REW
8	4940S-0513B	KNOB FUNC RDS/PTY
9	4040S-0506B	KNOB EJECT

Ref. No.	Part No.	Description
10	4940S-0511A	KNOB PRESET #1, 4/3, 6
11	4940S-0514B	KNOB PWR, BD/CD
12	4940S-6771A	KNOB RELEASE
13	442-690B	SPRING RELEASE
14	4940S-0510B	KNOB MD/LD
15	4940S-0509A	KNOB LEVEL
16	4850S-0002A	CUSHION SUB-R
17	464-678A	REFLECTOR SUB-R
18	353-028A	SCREW 2 x 6
19	3110S-0673A	CASE HOUSING
20	659-148F	DISPLAY KXN19980AAP KEC
21	563-013G	RUBBER CONNECTOR
22	231-836S	SHEET LCD
23	464-670A	REFLECTOR LCD
24	4850S-0001A	CUSHION MAIN-L
25	464-677A	FEFLECTOR MAIN-L
26	353-028A	SCREW 2 x 6
27	3720S-0672B	REAR PANEL
28	353-645A	SCREW 2 x 8
29	353-645A	SCREW 2 x 8

2.MAIN SECTION

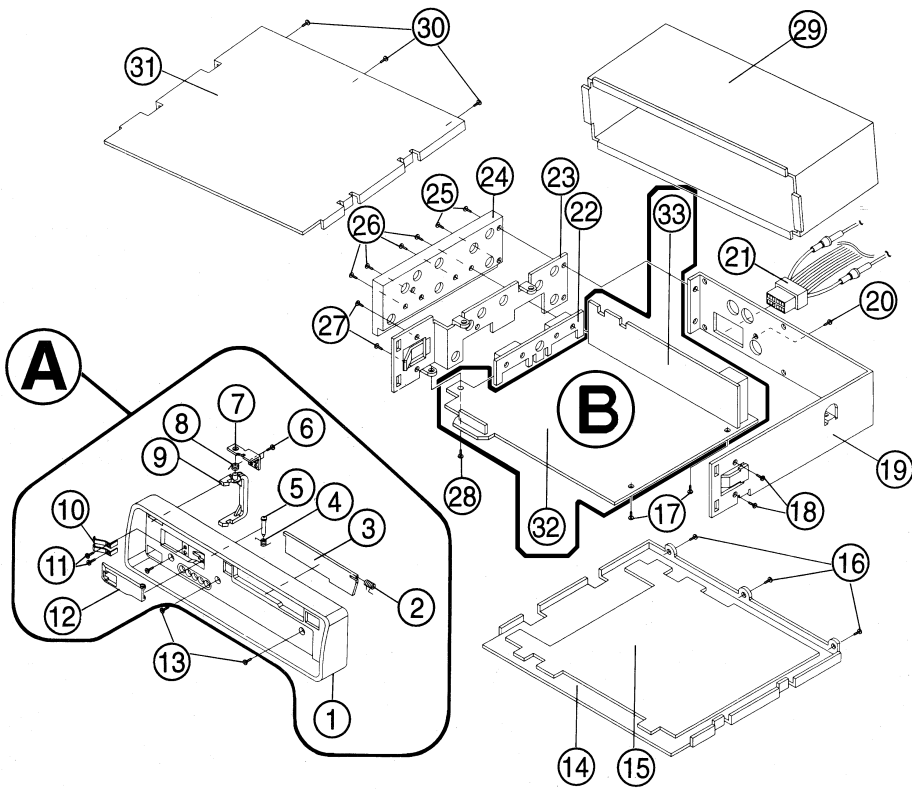

(1) Assembly Parts


Ref. No.	Part No.	Description
A	3721S-M008L	TRIM PANEL ASS'Y (1~12)
B	6871S-286AC	MAIN+RF PCB ASS'Y (32+33) AGON, LGEDG, LGEPL
	6871S-286AE	MAIN+RF PCB ASS'Y (32+33) LGEFS

(2) Individual Parts

Ref. No.	Part No.	Description
1	3720S-0670A	TRIM PANEL
2	442-330B	SPRING DOOR
3	226-668P	DOOR CST
4	442-566B	SPRING UNIT-PUSH
5	423-561B	SHAFT UNIT-PUSH
6	353-028A	SCREW 2 x 6
7	4810S-0674A	BRACKET HOLDER GUIDE-B
8	442-691A	SPRING HOLDER GUIDE-S
9	324-675A	HOLDER GUIDE-H
10	442-567A	SPRING POWER
11	353-028A	SCREW 2 x 6
12	333-562A	LEVER UNIT PUSH
13	1MBC0261416	SCREW 2.6 x 4
14	221-340F	COVER BOTTOM

Ref. No.	Part No.	Description
15	231-973A	SHEET INSULATION
16	353-022B	SCREW 2.6 x 6
17	353-052P	SCREW 2.6 x 6
18	353-022B	SCREW 2.6 x 6
19	3141S-0670A	CHASSIS MAIN COMMON
20	353-022B	SCREW 2.6 x 6
21	563-957B	POWER CONNECTOR (12PIN)
	563-957T	POWER CONNECTOR (12PIN) LGEPL
22	4810S-0330A	BRACKET IC HOLD
23	3141S-0074A	CHASSIS SIDE ASS'Y
24	255-326A	HEAT SINK
25	1MRC0262418	SCREW 2.6 x 8
26	1MRC0302818	SCREW 3 x 12
27	353-022B	SCREW 2.6 x 6
28	353-052P	SCREW 2.6 x 6
29	217-124A	DIN SLEEVE CASE
30	353-022B	SCREW 2.6 x 6
31	221-339F	TOP COVER
32	6871SA286AC	MAIN PCB ASS'Y(AGON,LGEDG,LGEPL)
	6871SA286AE	MAIN PC ASS'Y (LGEFS)
33	6871SB286AC	RF PCB ASS'Y

3.DECK SECTION

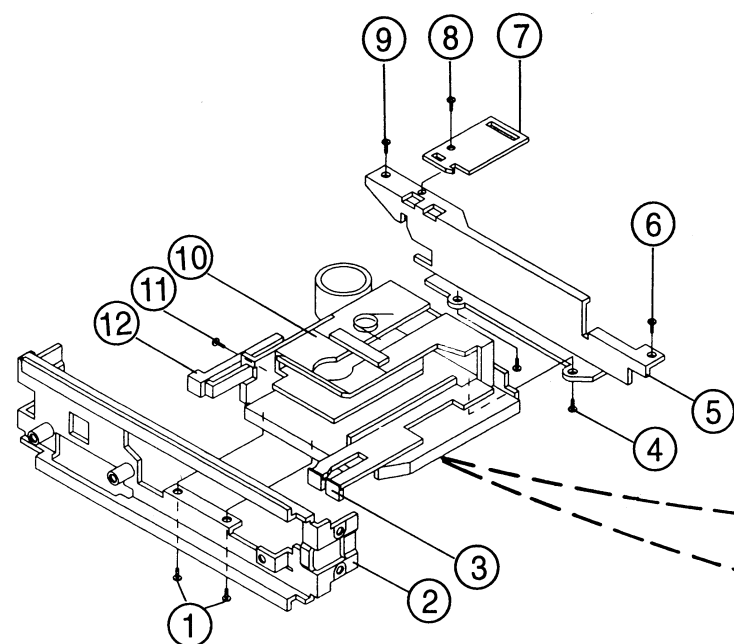

Ref. No.	Part No.	PART NAME
1	1MPC0301418	SCREW 3 x 4
2	3140S-0673A	CHASSIS FRONT-C
3	324-674A	HOLDER FF/REW-H
4	1MPC0301418	SCREW 3 x 4
5	4810S-0673A	BRACKET DECK-B
6	1MPC0301418	SCREW 3 x 4
7	4810S-0675A	BRACKET PCB
8	353-022B	SCREW 2.6 x 6
9	1MPC0301418	SCREW 3 x 4
10	419-600E	DECK ADC1205DSW
11	353-022B	SCREW 2.6 x 6
12	324-673A	HILDER EJECT-H

Ref. No.	Part No.	PART NAME	Q'TY
A	419-600E	DECK ADC1205DSW	1
2	6768S-Q002A	ASS'Y-MOTOR	1
13	6768S-L002A	PULLEY-C	1
14	6768S-B002A	BELT-SUB	1
15	6768S-L003A	ASS'Y-FLYWHEEL F	1
16	6768S-B003A	BELT-MAIN	1
25	6768S-H002A	WIRE-HEAD	1
28	6768S-T002A	SLIDE-S/W	1
31	6768S-R001B	ASS'Y-ARM-PINCH-L	1
32	6768S-P002A	ASS'Y-ARM-CR	1
35	6768S-S002A	SPRING-LEVER	2
42	6768S-R001A	ASS'Y-ARM-PINCH-R	1
80	6768S-W002A	P-WASHER(1.2x3x0.25)	9
81	6768S-W002B	P-WASHER(2.1x3.5x0.25)	4
101	6768S-X001A	CONNECTOR-WIRE	1
104	6768S-L003B	ASS'Y-FLYWHEEL R	1

A

