


MYSTERY[®] Service Manual

MOBILE VIDEO SYSTEM

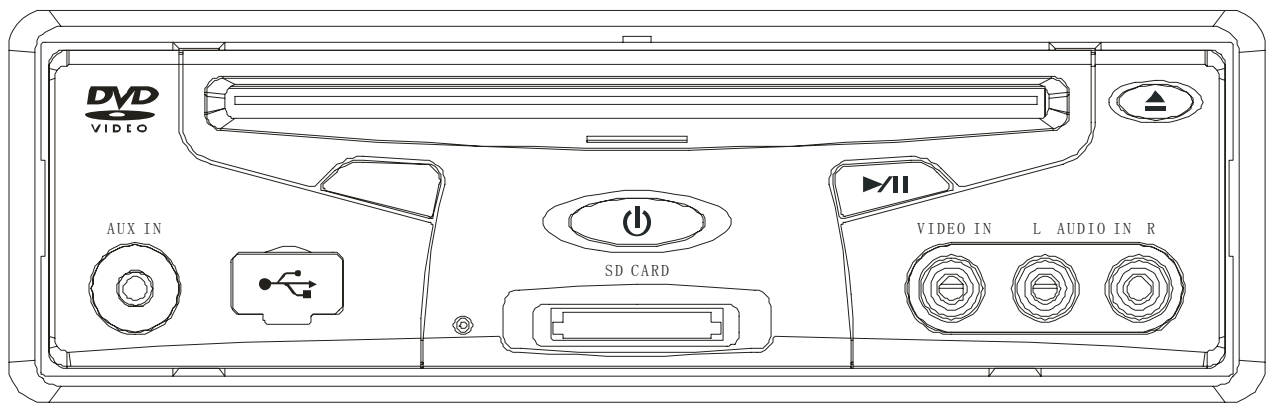

MODEL: (MDV-604RFU)

Note:

- Multi-subtitle Language Function
- Multi-audio Language Function
- Multi-angle Function
- Parental Control


CONTENTS

	Page
Disassembly Instructions	3
Disassembly Diagram	4
Block Diagram	5
Printed Circuit Board	6
Exploded View	16
Exploded View Parts List	17
Exploded View(DECK).....	18
Exploded View Parts List(DECK).....	19
Schematic Diagram	21
Electrical Parts List	28
Specifications	36


DISASSEMBLY INSTRUCTIONS

1. Remove two screws (A) from each side of the top cabinet and remove three screws (B) located on the rear of the top cabinet then remove the Top Cabinet.
2. Remove four screws (C) located on the under the bottom cabinet then remove four Rubber Foot.
3. Remove two screws (D) from each side of the top panel then remove the Top Panel.
4. Remove four screws (E) from on the rear of the bottom bracket.
5. Remove two screws (F) from on the deck front bracket and remove two screws (G) from on the deck rear bracket then remove the Main Board and the Bottom Cabinet.
6. Remove two screws (H) from on the USB Board and two screws (I) from under the Main Board then remove the USB board and the Stand Bracket.
7. Remove two screws (J) from under the deck front bracket then remove the Deck Front Bracket.
8. Remove two screws (K) from under the deck rear bracket then remove the Deck and the Deck Rear Bracket.

DISASSEMBLY DIAGRAM

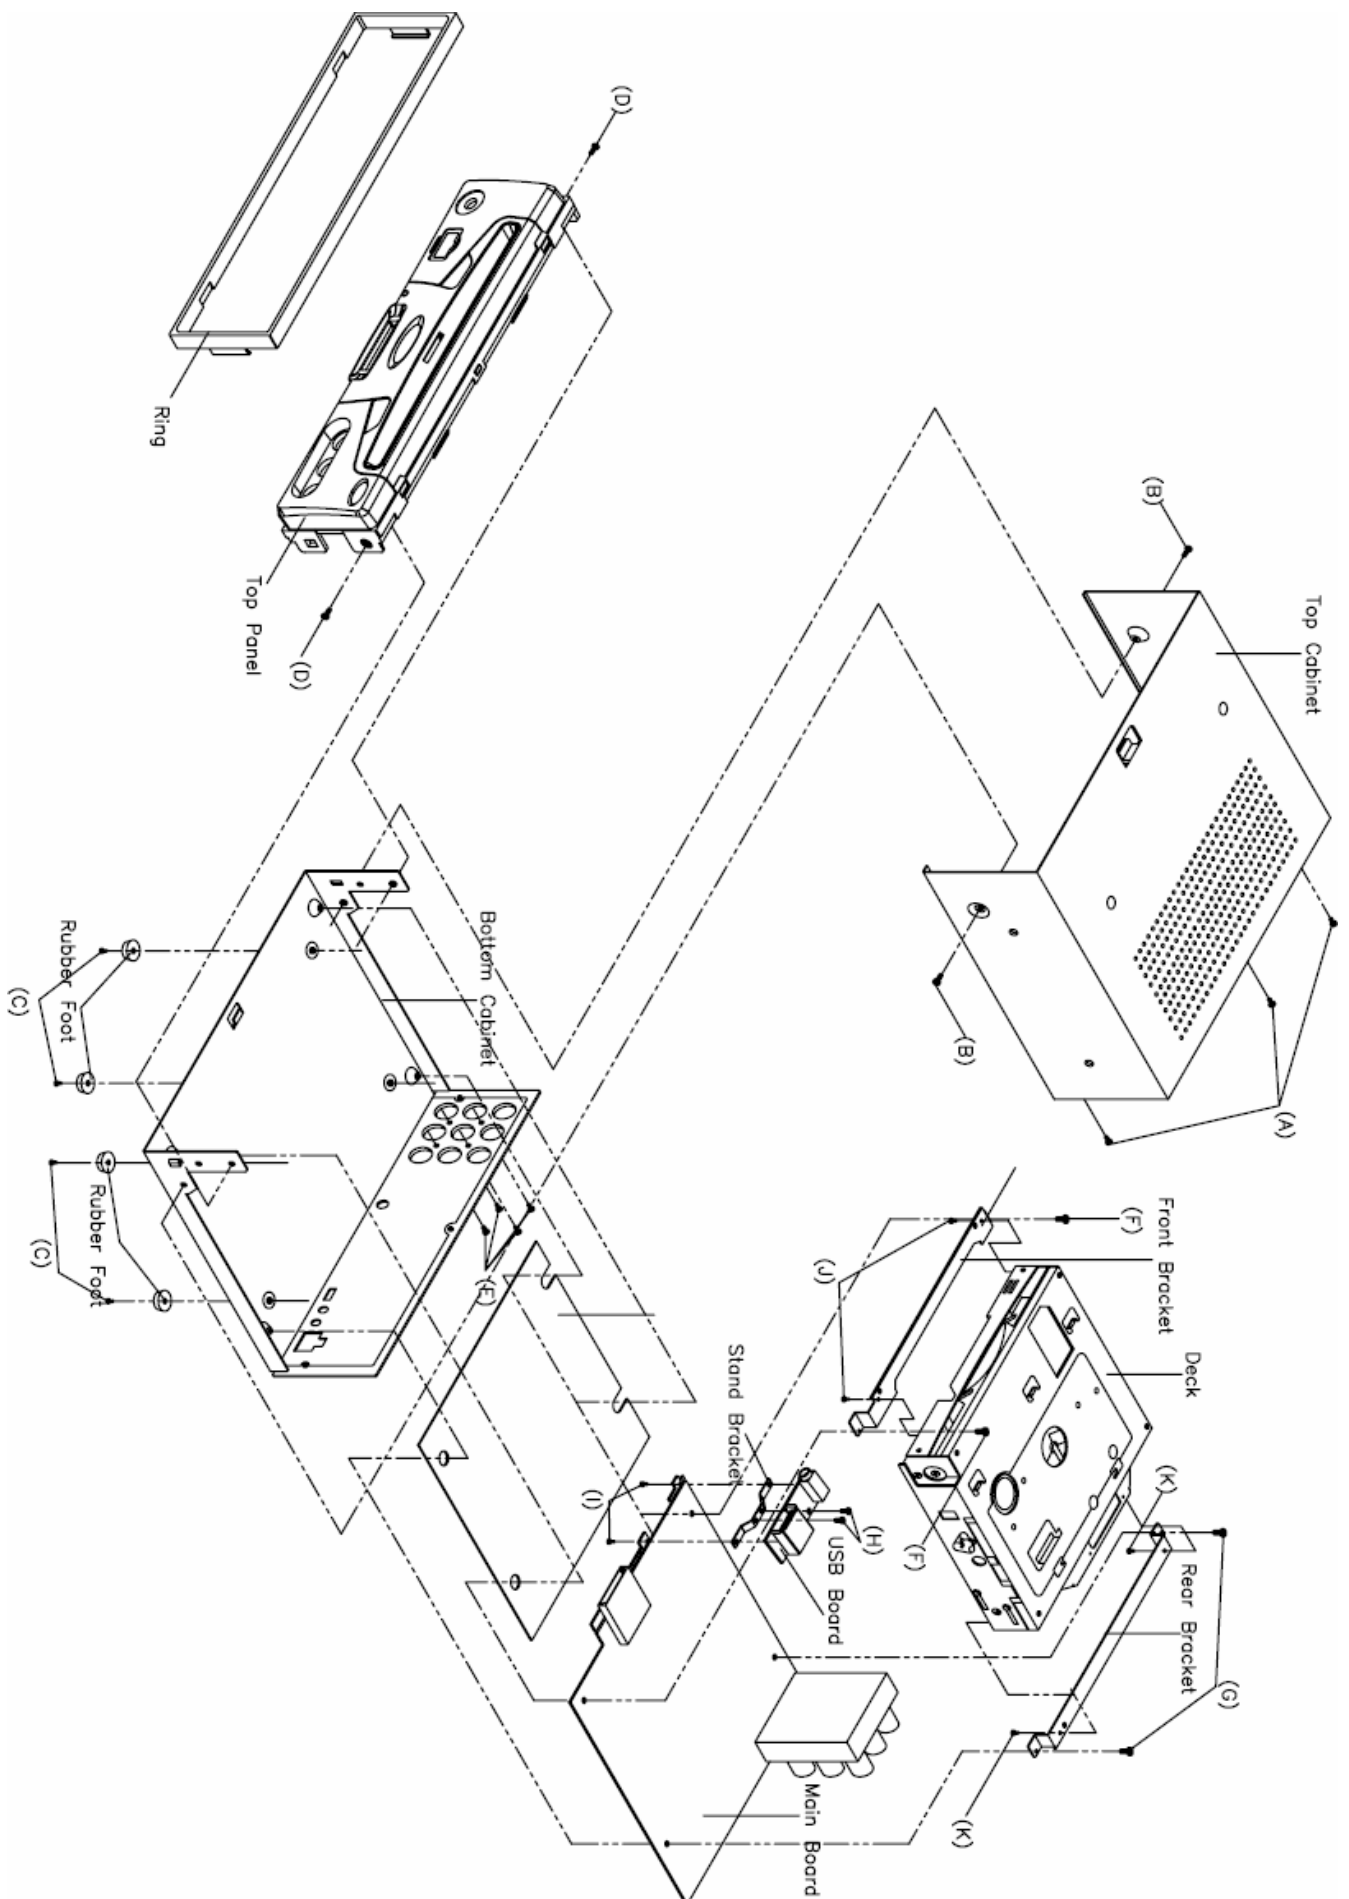


BLOCK DIAGRAM

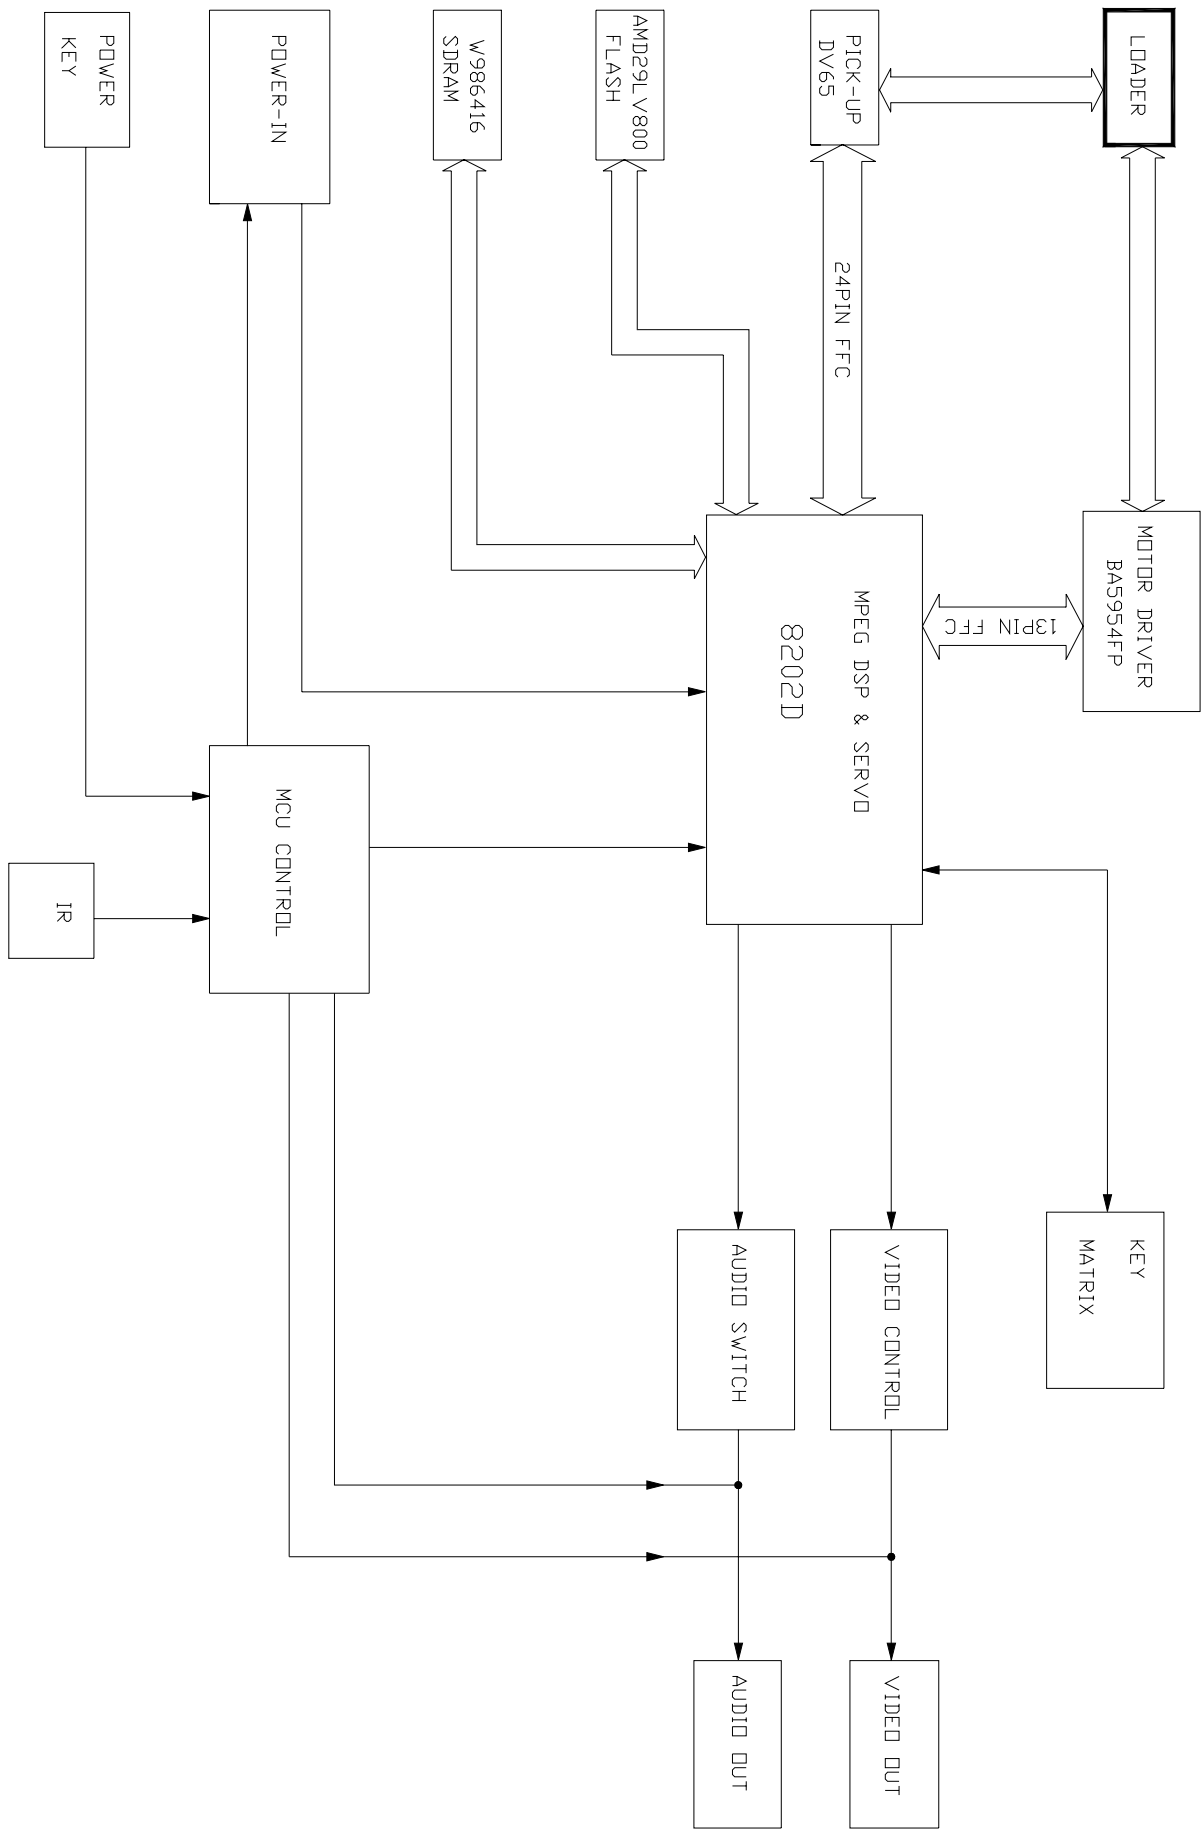


PRINTED CIRCUIT BOARDS

MAIN BOARD

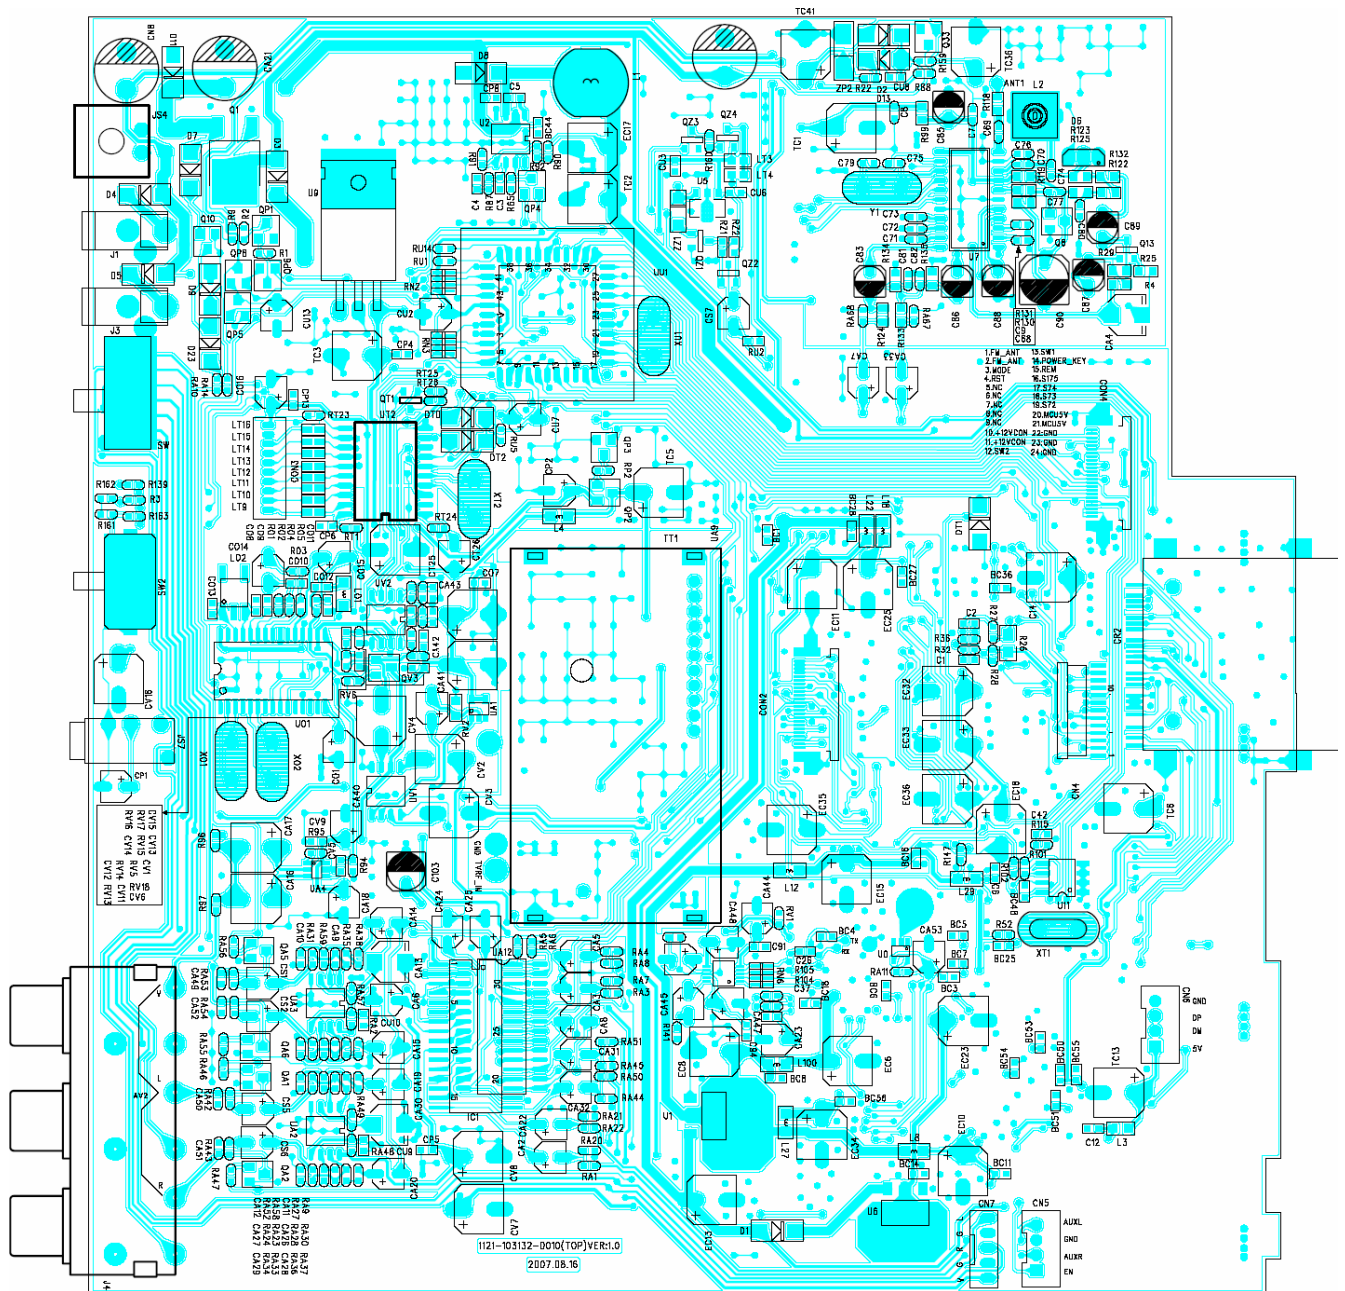


TOP VIEW

MAIN BOARD

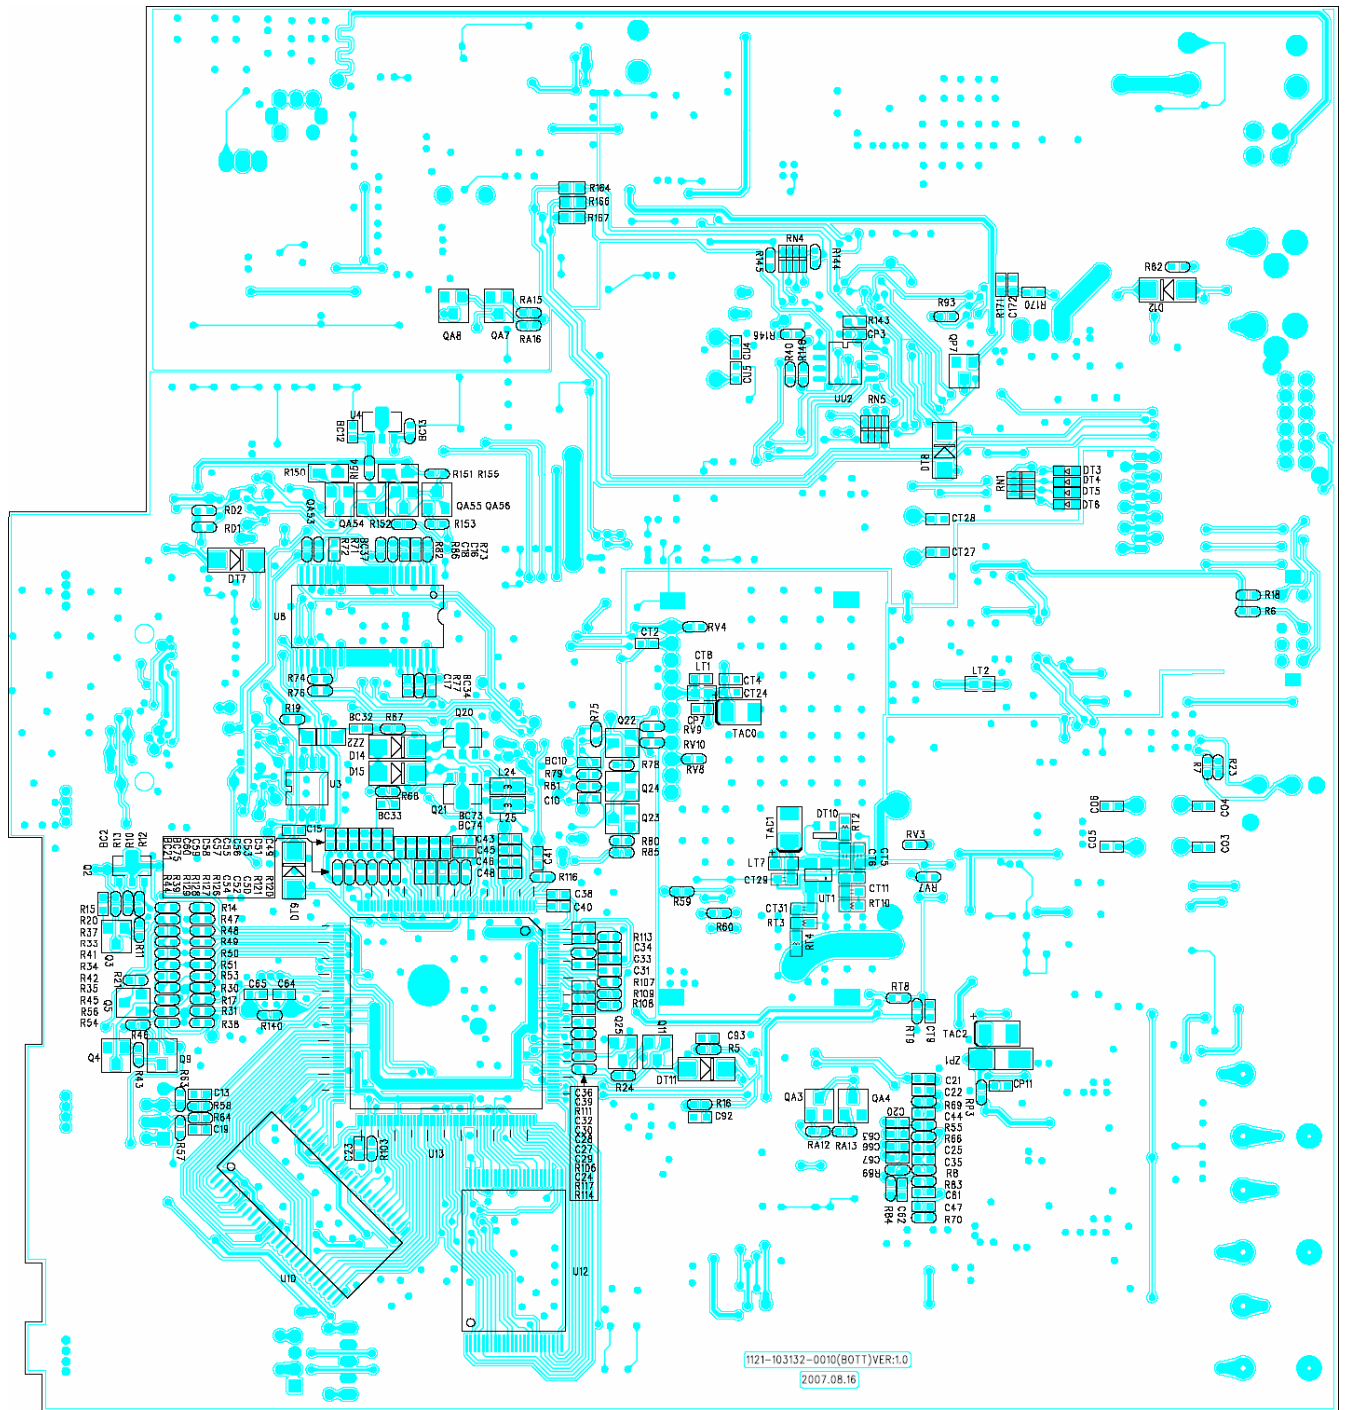


BOTTOM VIEW

KEY BOARD

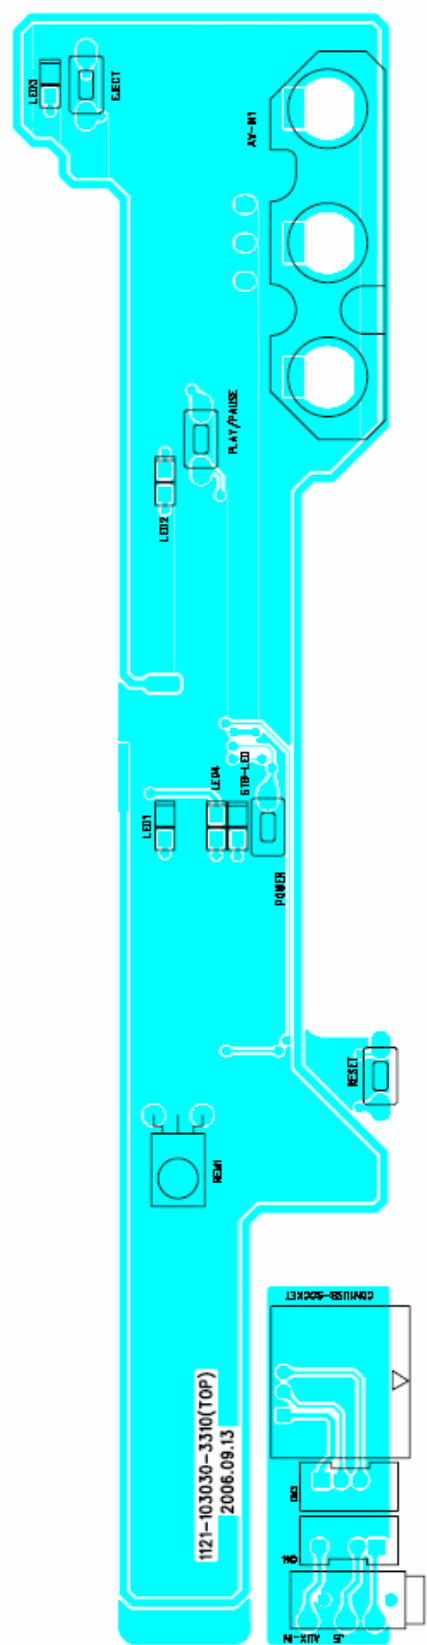


TOP VIEW

KEY BOARD

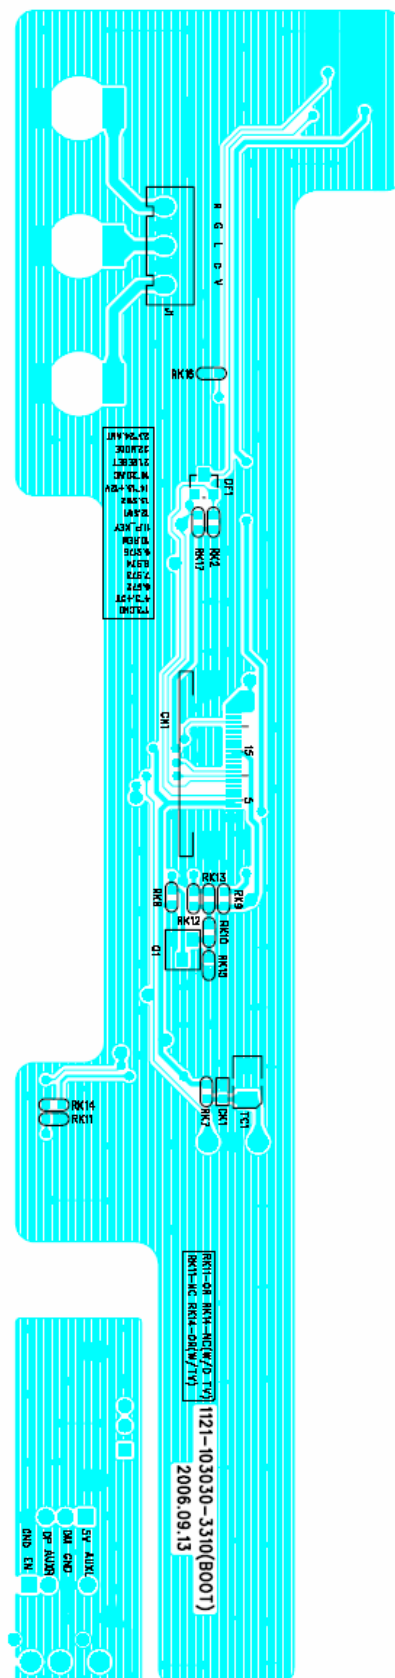


BOTTOM VIEW

SERVO BOARD

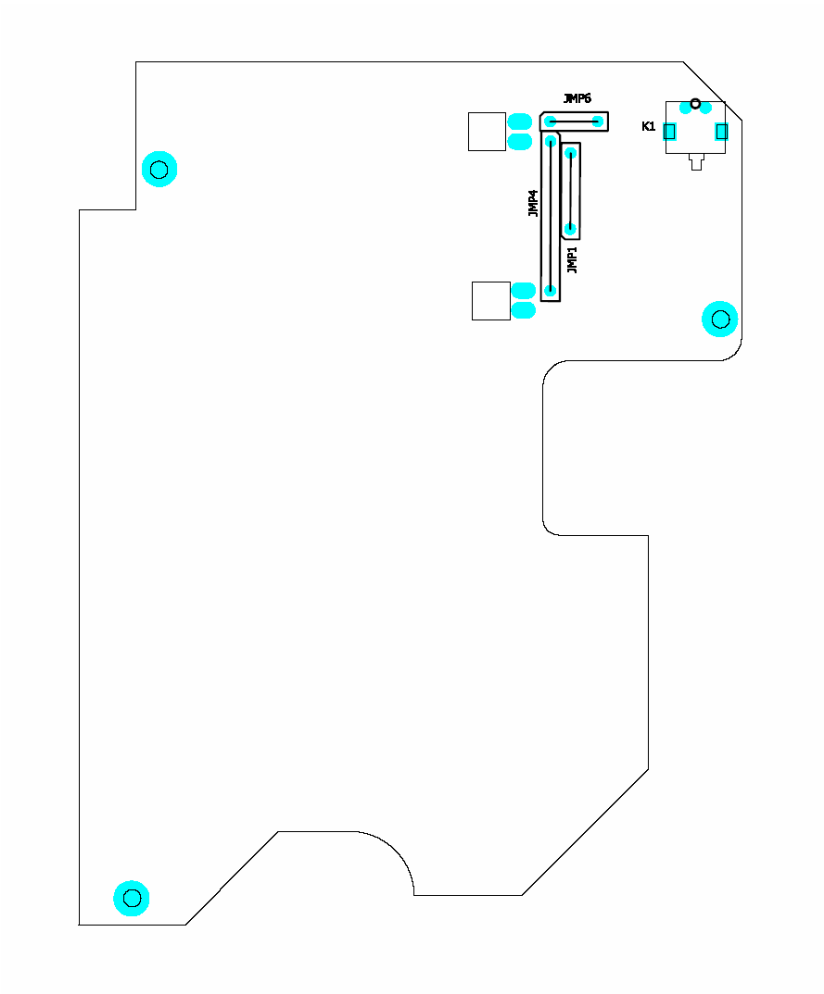


TOP VIEW

SERVO BOARD

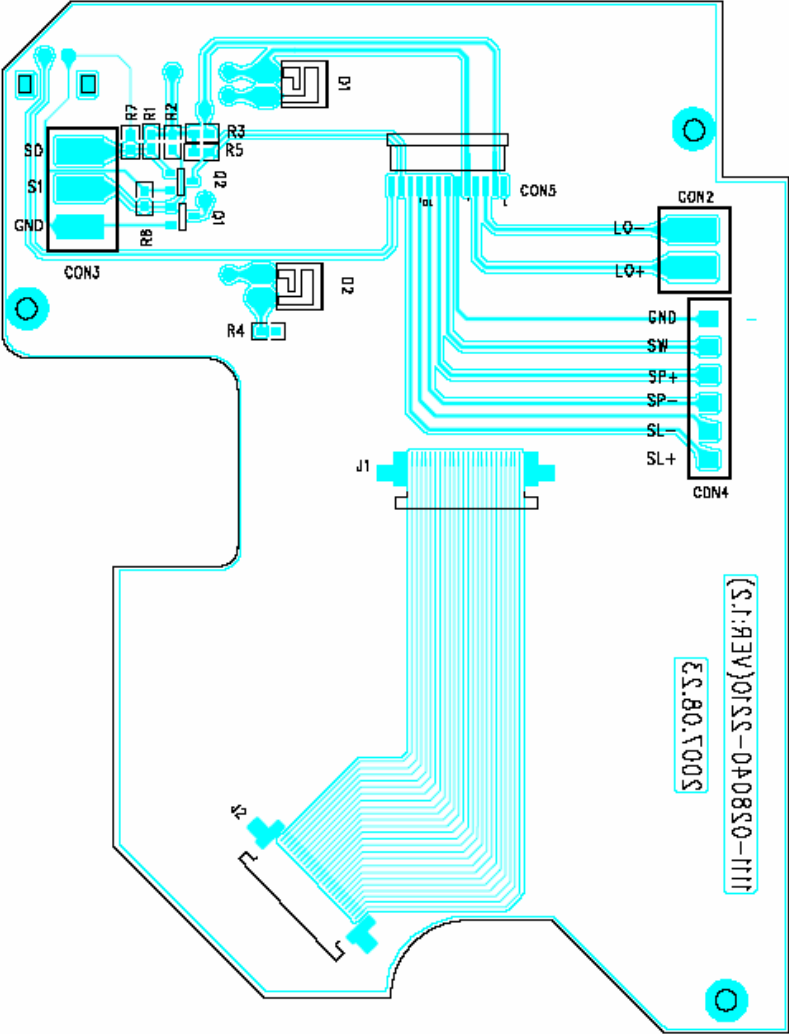


BOTTOM VIEW

REMOTE BOARD

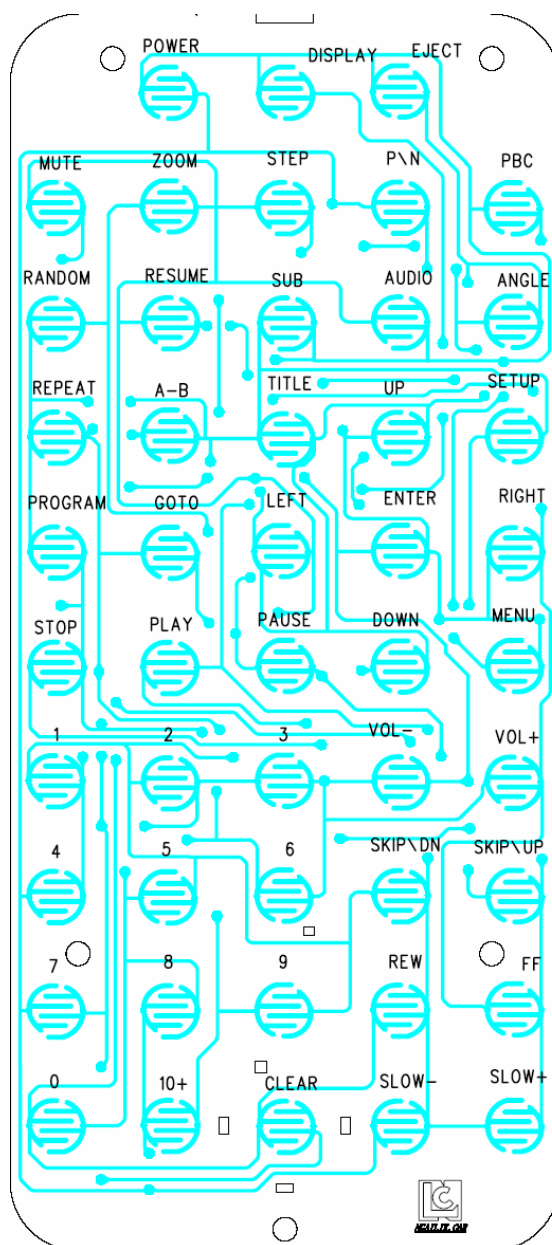


TOP VIEW

REMOTE BOARD

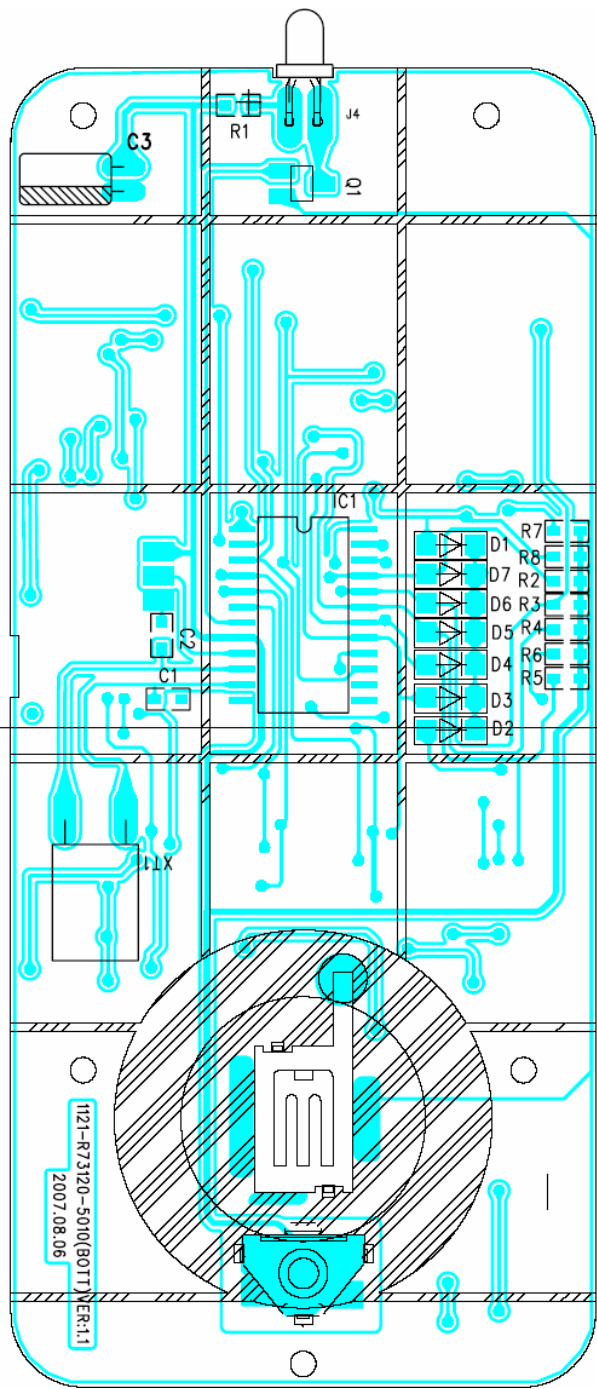


BOTTOM VIEW

CHOKE BOARD

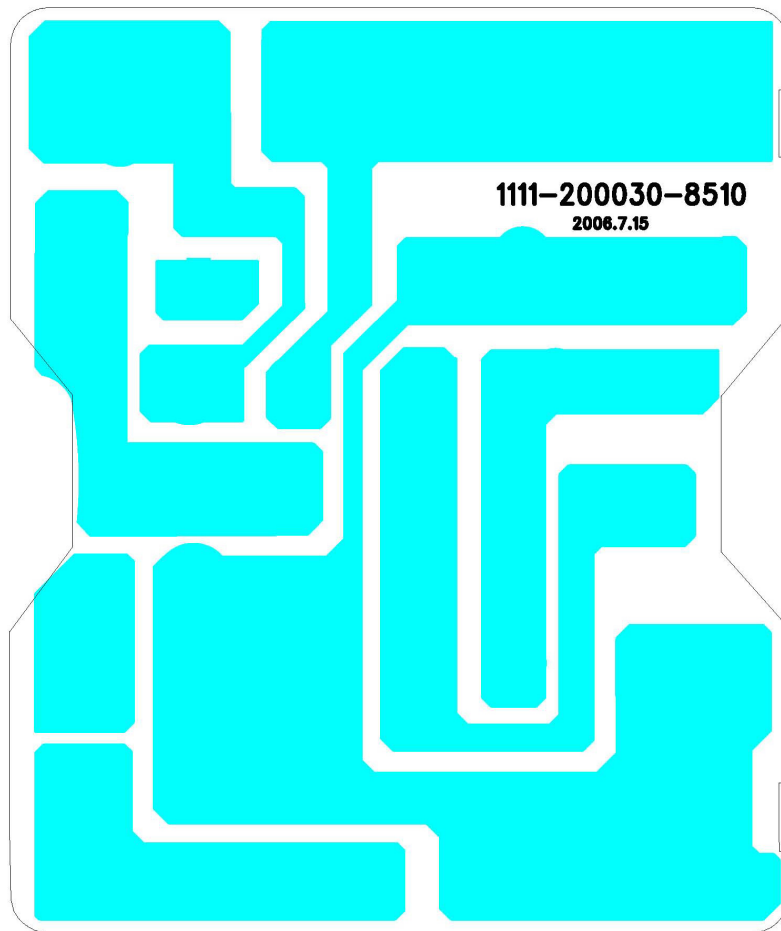

TOP VIEW

CHOKE BOARD

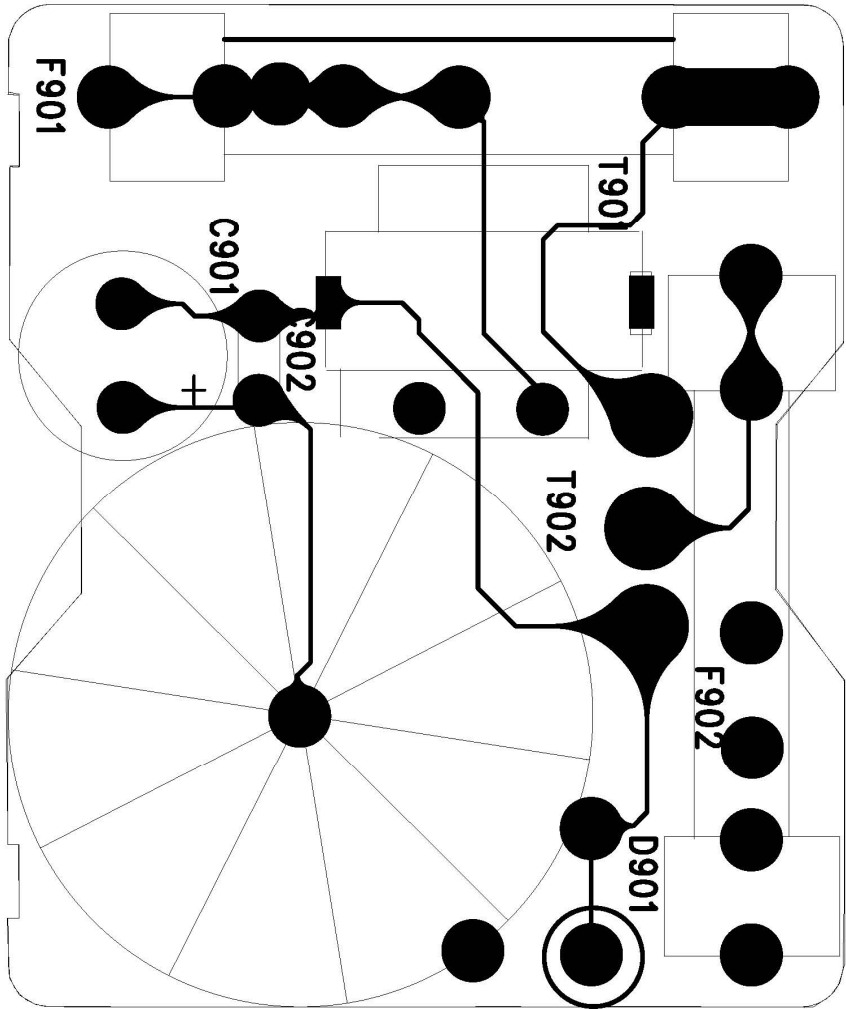

BOTTOM VIEW