1. Alignment and Adjustments

1. Tuner

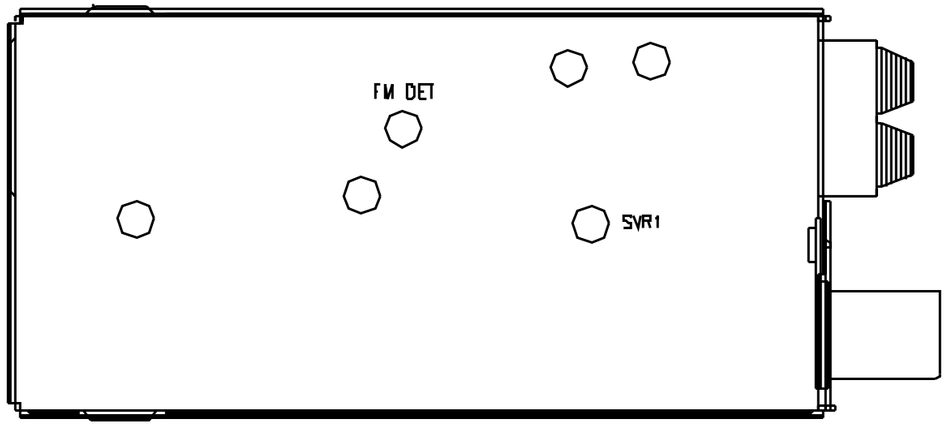

* Adjustment Location of Tuner PACK

FM THD Adjustment	
SSG FREQ.	98 MHz
Adjustment point **(FM DET)**	FM DETECTOR COIL
Output	60 dB
Minumum Distortion (0.4% below) (Figure 1-1)	

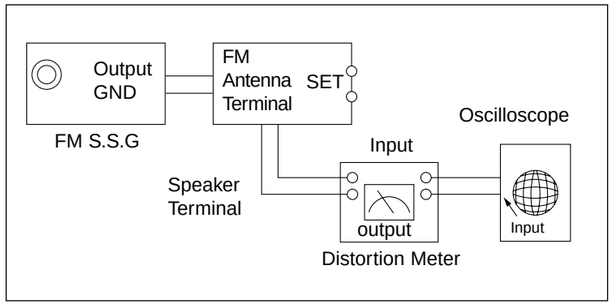

Figure1-1 IF CENTER and THD Adjustment

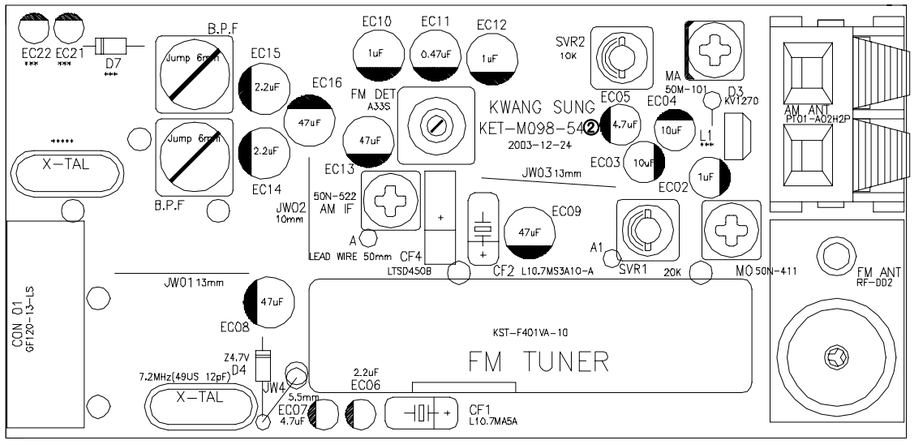

FM Search Level Adjustment	
SSG FREQ.	98 MHz
Adjustment point **(SVR1)**	BEACON SENSITIVITY SEMI-VR(20KΩ)
Output	28 dB(±2dB)
Adjust SVR1 so that “TUNED” of FLT is lighted (Figure 1-2)	

*Adjust FM S.S.G level to 28dB

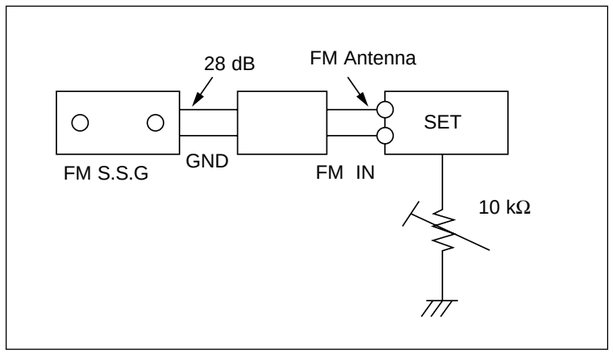

Figure1-2 FM Auto Search Level Adjustment

* AM, LW, SW Band : No Adjustment point