


Service

Service

Service

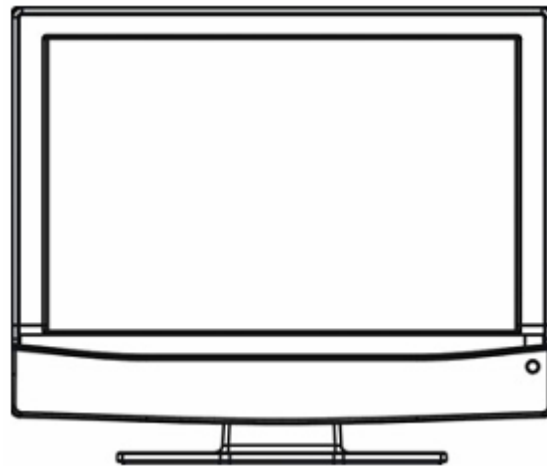

Service Manual

TABLE OF CONTENTS

Description	Page	Description	Page
Table Of Contents.....	1	6.2 Power Board.....	29
Important Safety Notice.....	2	6.3 Key Board.....	32
1. Monitor Specification.....	4	6.4 IR Board.....	32
2. Operating Instructions.....	6	7. Block Diagram.....	33
2.1 The Use Of Remote Control.....	6	8. Schematic Diagram.....	34
2.2 OSD Operations.....	8	8.1 Main Board.....	34
2.3 Control Knobs and Connection.....	13	8.2 Power Board.....	42
3. Mechanical Instructions.....	15	8.3 Key Board.....	44
4. Repair Flow Chart	21	8.4 IR Board.....	45
5. White Balance Luminance Adjustment.....	26	9.Exploded View.....	46
6. PCB Layout	27	10.BOM List.....	47
6.1 Main Board.....	27	11.Different Parts List.....	61

SAFETY NOTICE

ANY PERSON ATTEMPTING TO SERVICE THIS CHASSIS MUST FAMILIARIZE HIMSELF WITH THE CHASSIS AND BE AWARE OF THE NECESSARY SAFETY PRECAUTIONS TO BE USED WHEN SERVICING ELECTRONIC EQUIPMENT CONTAINING HIGH VOLTAGES.

CAUTION: USE A SEPARATE ISOLATION TRANSFORMER FOR THIS UNIT WHEN SERVICING

Important Safety Notice

Proper service and repair is important to the safe, reliable operation of all AOC Company Equipment. The service procedures recommended by AOC and described in this service manual are effective methods of performing service operations. Some of these service operations require the use of tools specially designed for the purpose. The special tools should be used when and as recommended.

It is important to note that this manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It is also important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. AOC could not possibly know, evaluate and advise the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, AOC has not undertaken any such broad evaluation. Accordingly, a servicer who uses a service procedure or tool which is not recommended by AOC must first satisfy himself thoroughly that neither his safety nor the safe operation of the equipment will be jeopardized by the service method selected.

Hereafter throughout this manual, AOC Company will be referred to as AOC.

WARNING

Use of substitute replacement parts, which do not have the same, specified safety characteristics might create shock, fire, or other hazards.

Under no circumstances should the original design be modified or altered without written permission from AOC. AOC assumes no liability, express or implied, arising out of any unauthorized modification of design.

Servicer assumes all liability.

FOR PRODUCTS CONTAINING LASER:

DANGER-Invisible laser radiations when open AVOID DIRECT EXPOSURE TO BEAM.

CAUTION-Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION -The use of optical instruments with this product will increase eye hazard.

TO ENSURE THE CONTINUED RELIABILITY OF THIS PRODUCT, USE ONLY ORIGINAL MANUFACTURER'S REPLACEMENT PARTS, WHICH ARE LISTED WITH THEIR PART NUMBERS IN THE PARTS LIST SECTION OF THIS SERVICE MANUAL.

Take care during handling the LCD module with backlight unit

- Must mount the module using mounting holes arranged in four corners.
- Do not press on the panel, edge of the frame strongly or electric shock as this will result in damage to the screen.
- Do not scratch or press on the panel with any sharp objects, such as pencil or pen as this may result in damage to the panel.
- Protect the module from the ESD as it may damage the electronic circuit (C-MOS).
- Make certain that treatment person's body is grounded through wristband.
- Do not leave the module in high temperature and in areas of high humidity for a long time.
- Avoid contact with water as it may a short circuit within the module.
- If the surface of panel becomes dirty, please wipe it off with a soft material. (Cleaning with a dirty or rough cloth may damage the panel.)

Revision List

[illegible]

1. Monitor Specification

Feature	19" screen WXGA (1440x900) Resolution Cotrast ratio :800:1 Wide Viewing Angle (80°L/ 80°R; 80°U/ 80°D)		
Items	Specification		
	Screen Size	19" TFT -LCD Panel	
	Aspect Ratio	16: 10	
	Resolution	1440x900	
	Display area	408.24 (H) × 255.15(V)	
	Pixel Pitch	0.2835 x 0.2835	
	Display colors	16.7 M	
	Viewing Angle	80° (Horizontal)/ 80° (Vertical)	
	Response Time	Fast 5ms	
	Lamp life	50000 hours	
	Color Temperature	Cool / Warm / Normal	
PC Function	Input frequency	Recommended : 1440x900/60Hz 1280X1024/60Hz 1024x768/60Hz 800x600/60Hz	
	Audio input	Stereo headphone jack (3.5ø)mm	
TV Function	TV Standard	PAL B/G、D/K、I ; NTSC M; SECAM D/K	
	Sound systems	NICAM	
	Color systems	PAL, NTSC, SECAM	
Extended input	Video	RCA x 1	Audio L / R x 1
	S-VIDEO	S-Video x 1	
	Component input Y Pb/Cb Pr/Cr	Y Pb/Cb Pr/Cr x 1	Audio L / R x 1
	Component input support	480i, 576i, 480p, 576p, 720p, 1080i	
	HDMI input	HDMI x 1	
	HDMI input support	576i, 480p, 480i, 576p, 720p, 1080i,	

Audio Output		Audio Output: L / R	Speaker (5 watt) : Two Speaker
			Stereo headphone jack (3.5Ø)mm
OSD language		English /Vietnam/Russian/indonesian	
Table Stand		Included	
Wall Mount		VESA 100 x 100 mm	
Power	Power Supply		100-240V~ 50/60Hz
	Power Consumption		< 75W
Tilt		forward/Backward/Rotate	Lead angle: 3±1° Tilt: 15±1°
Environment		operating temp	+ 5 °C ~ + 35 °C
		storage temp	- 25 °C ~ + 60 °C
		operating humidity	10% ~ 85%
Dimension	Unit dimension	W x H x D(with stand)	478 x 406 x 209(mm)
Weight (net)		Kg (w/o Accessories)	6.2 Kg

2. Operations Instructions

2.1 The Use Of Remote Control

POWER

Press to turn on/off the TV.
The TV is never completely powered off unless it is physically unplugged.

VIDEO

Press this key you could select AV, S-VIDEO.

Comp

Press this key you could select YPbPr,HDMI

0~9/100 DIGIT BUTTONS

To select a TV channel.

SUBPAGE

Teletext Sub-page function.

Source

Select your input source from list, according to where you connected your external source.

NICAM

To select Mono from TV RF input.

WIDE

Press these key to select desired picture format.
(Full or normal)

VOL

Press + or – to increase or decrease the volume.

MENU

Press this key to display main menu.



DISPLAY

Press this key to display:
(1) the channel number when watching a TV program.
(2) the input source when watching an AV program.

MUTE

Temporarily interrupt the sound or restore it.

PC

Display PC mode

TV

Display TV mode

PRE-CH

To display select sound effect.

EFFECT

Not support this function.

SLEEP

With this key you can set a time period after which the TV should switch itself to standby. Press the key repeatedly to select the number of minutes. The counter runs from 15, 30, 45, 60, 90, 120 minutes. The timer begins to count down from the number of minutes selected after the display has disappeared.

CH

Press + or - (or MENU ▲ / ▼ button) buttons to scroll through the channels.

EXIT

Press this key to exit main menu/or source selecting menu.

< > button

Use this button to confirm selection or adjust the desired parameter.

▲ ▼ button

When in menu mode, use this button to select to the up/down.

OK

Press this KEY to validate your selected.

TELETEXT

Teletext is an information service organized like a magazine, which is provided by some TV stations in addition to regular television broadcasting.



TELETEXT

Press **TELETEXT**. The Teletext screen appears.

To turn off the Teletext mode, press **TELETEXT** again.

MIX

Press **MIX** to superimpose the teletext over a normal broadcast picture. Press again to return to Teletext mode.

SIZE

Press **SIZE** repeatedly to display the upper teletext part, the lower teletext part and then to return to the normal.

RED / GREEN / YELLOW / BLUE

Use the **COLOURED BUTTONS** to operate the Teletext screen.

i INFO

Press **i-INFO** to show DTV information(This product doesn't support).

INDEX

Press **INDEX** to return to the main index page.

SUBTITLE

Press to select the next page marked as a subtitle page and request it as the display page.

HOLD

Press **HOLD** to hold the Teletext page when viewing information. Press again to return to automatic page update.

REVEAL

Press **REVEAL** to display reveal hidden words e.g. quiz page answers. Press again to hide.

PAGE SELECTION

Page can be selected in two ways.

- Press **▼** or **▲** to increase or decrease the page number by one.
- By entering the page number, using digit buttons 0~9.

SUBPAGE ACCESS

When Teletext information exceeds more than one page, press **SUBPAGE** first then select the required page number using digit buttons 0~9.

2.2 OSD Operations

To use the menus

1. Press the Menu button to display or exit the Main Menu.
2. Use the $\blacktriangle$, $\blacktriangledown$ to select the function to be adjusted.
3. Use the $\blacktriangleleft$, $\blacktriangleright$ to enter into the submenu, or to enable or adjust the selected function.


Source Menu

Press the SOURCE button to enter the Source Menu: VGA, HDMI, TV, AV, S-VIDEO, YPb Pr.



Main Menu

1. Press the menu to enter into the OSD menu.

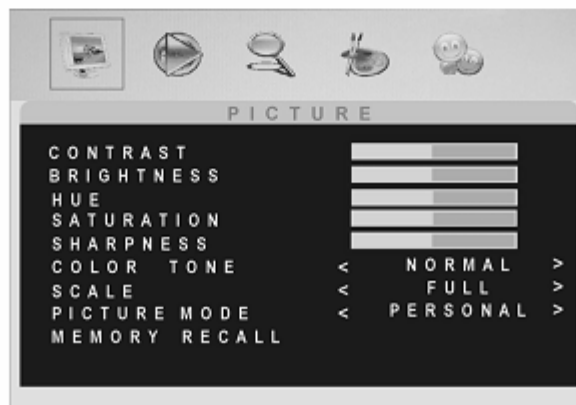


Adjustable items for TV mode includes: Picture, Sound, advance, System and TV Channel .

Adjustable items for PC mode includes: PC, Sound, Geometry, System.

Adjustable items for HDMI mode includes: PC, Sound, and System.

Adjustable items for Video mode(S-Video mode or YPb/Cb Pr/Cr Video) input includes: Picture, Sound, advance, system.

II、 Picture

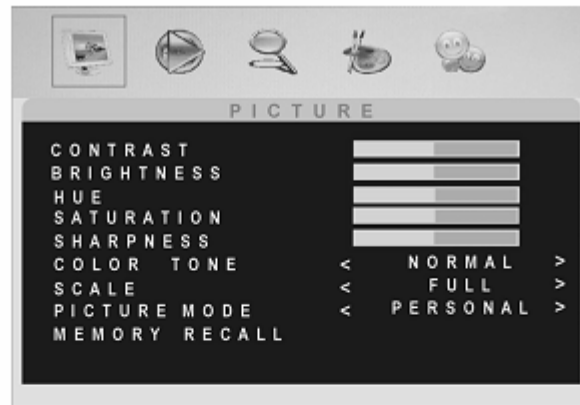

1. Adjustable Brightness and Contrast range is from 0~100. Screen brightness can be set by adjusting the Brightness or Contrast.
2. Hue: Adjustable range is from 0~100. Adjusting this option will change the screen color. (when the color system is NTSC)
3. Saturation: Adjustable range from 0~100. Adjust this option to change the color intensity on the screen.
4. Sharpness: Adjustable range from 0~100. Input the value to set the sharpness of the screen.
5. Color tone: This option provides 3 choices: Normal, Warm and Cool.
6. Scale: 2 modes available for screen aspect ratio selection: Normal, Full, (for TV/AV/Component/S-video mode).
7. Picture mode: 4 options: Personal, Standard, Dynamic, Soft, to select the overall effect of the screen.
8. MEMORY RECALL: To reset the video settings back to the factory default settings. Brightness, Contrast, Tint, saturation and Sharpness in the picture of setting up a "personal settings" adjustable.

III、 Sound settings (Applicable for all modes)




1. Bass, Treble and Balance: Adjustable ranges are from 0~100. Right channel sound fades out as adjusting from 50 to 0 and the left channel fades out as adjusting from 50 to 100. (Available when the Audio setting is under Custom mode).
2. Sound mode: Standard, News, Music and Personal. Bass, Treble and Balance options are available when Personal mode is selected.
3. AVC: Select On/Off to enable. Prevents the rapid change of volume while switching modes or channels.
4. MEMORY RECALL: To reset the Sound settings back to the factory default settings.

IV、Geometry settings (under PC mode)




1. H-Position,V-Position: Adjustable ranges are from 0~100. To move the entire screen up/down or left/right.
2. Clock or Phase: Adjustable range is from 0~100. Adjust only when the entire screen shakes or glitches appear. Do not adjust when everything is normal.
3. Auto size: Adjust the above values automatically.

V、Advanced Settings (Under TV, AV, S-video or YPbPr modes)

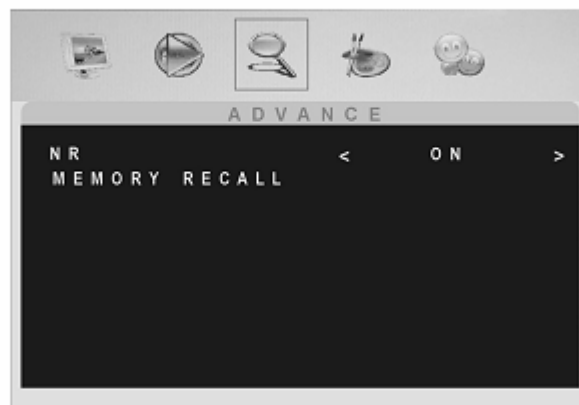

1. NR: Weak, Middle, Strong, Off .Choose to clear serious noise problems from the screen. Please refer to the actual screen when making your selection. It is recommended not to change settings when noise problems are minor.
2. MEMORY REACLL: To reset the Function settings back to the factory default setting.

VI、 System Settings

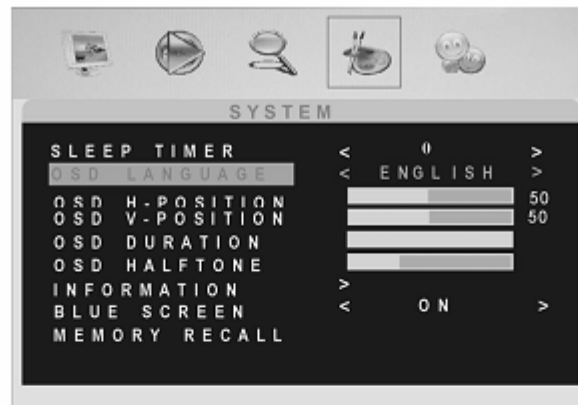

1. **Sleep Timer:** You can set a timer to enter standby status for the unit. Timer options are 0, 15, 30, 45, 60, 90 and 120 minutes. The timer starts counting as soon as the menu disappears from the screen. Set the Sleep Timer to 0 to disable the Sleep Timer function. The timer pauses automatically when entering PC mode, resumes when returning to other modes.
2. **OSD Language:** Select the OSD language among English, Vietnan, Russian, Indonesian.
3. **OSD H/V Position:** Adjustable range from 0~100. To adjust the position of the menu on the screen.
4. **OSD Duration:** Adjustable range from 5~60 sec. To adjust the duration of the Menu on the screen.
5. **OSD Halftone:** Adjustable range from 0~100. To adjust the menu transparency. The screen will not be seen through the menu when the set to 0.
6. **information:** To display the information of current signal and firmware version. (note: the version is being continuously improved, changes may be made to this manual without notice.).




7. **Blue Screen:** If the blue screen option is set to "On", the TV will display a default blue screen when there is no input TV signal. The system default is "On" to communicate to the user that there is no input signal.
8. **MEMORY REACLL:** To reset the System settings back to the factory default settings.

VII、TV-Channel (Available only under TV mode)




1. Color system: To display the color standard of the current TV signal (display as Auto after choosing Auto Save). (In Hongkong, the PAL Color system is used)
2. Sound system: To display the sound standard of the current TV signal (display as Auto after choosing Auto Save). (In Hongkong, the I sound system is used)
3. Auto Scan: To scan for the channels automatically.
4. Manual search: For the user to scan the channels and save programs manually.



5. Set frequency: Display the frequency of the current channel. The frequency can be input manually. (Range is from 43.25MHZ to 879.25MHZ).
6. Fine tuning: Use left/right buttons to fine tune the frequency.

2.3. Control Knobs and Connection

2.3.1 Front panel control knobs

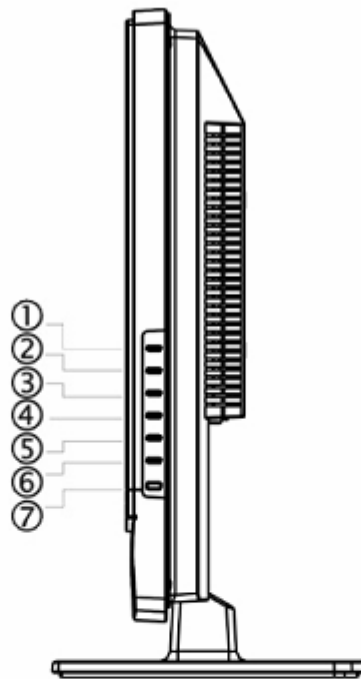

VOL▲▼①②: To adjust the volume. Under Menu status these 2 buttons can be used to confirm selected options.

CH ▲▼③④: To switch channels. Under Menu status these 2 buttons can be used to access selected options.


MENU ⑤: Enter or exit the OSD Menu.

INPUT ⑥: Enter the source menu to select different input source signals.

POWER ⑦: Switch to enter/exit Standby mode.




2.3.2 Back panel connection




Place the TV on a table with the LCD screen facing down to facilitate easy connection with the external equipment. Please take precautionary measures to avoid damaging the LCD screen.



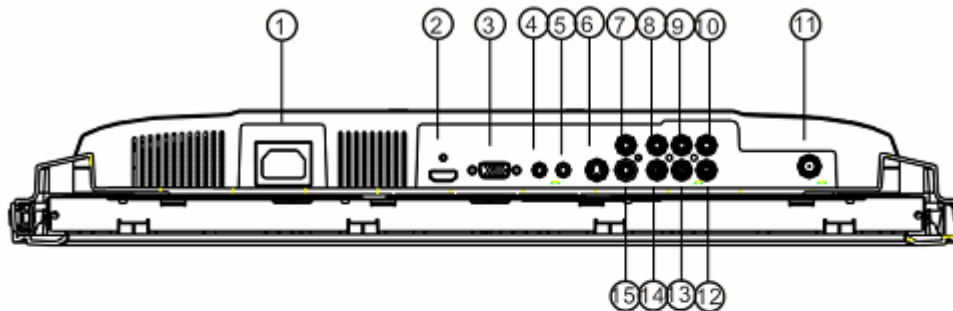


- 1:POWER: AC-IN
- 2:HDMI: Input signal for HDMI.
- 3:VGA : Input signal for PC video with a VGA signal cable
- 4:AUDIO: Input for PC audio signal
- 5: EARPHONE 
- 6: S-Video : S-Video cable input for DVD, LD player, VCR or Video
- 7: Component in: audio signal input (Right channel)
- 8, 9,10: Pr/Cr, Pb/Cb, Y component signal input
- 11: ANT: TV antenna input
- 12: Right channel audio input (Video Input /S-Video Input)
- 13: Left channel audio input (Video Input /S-Video Input)
- 14: Video in: AV- Input
- 15: Component in: audio signal input (Left channel)


3. Mechanical Instructions

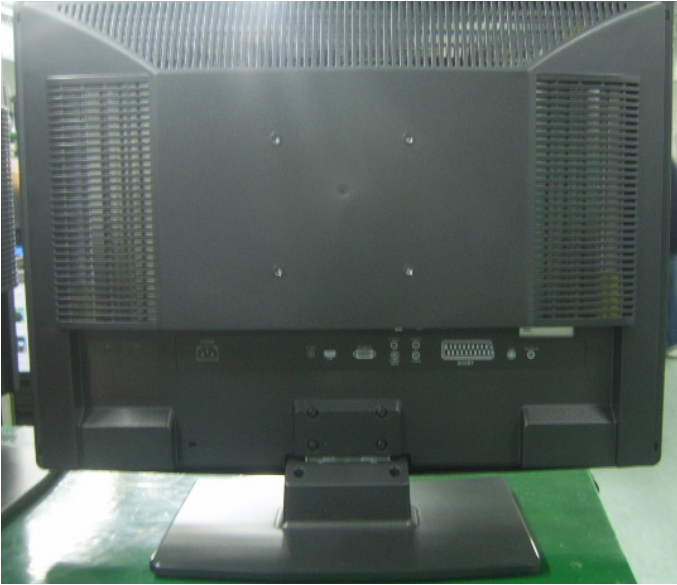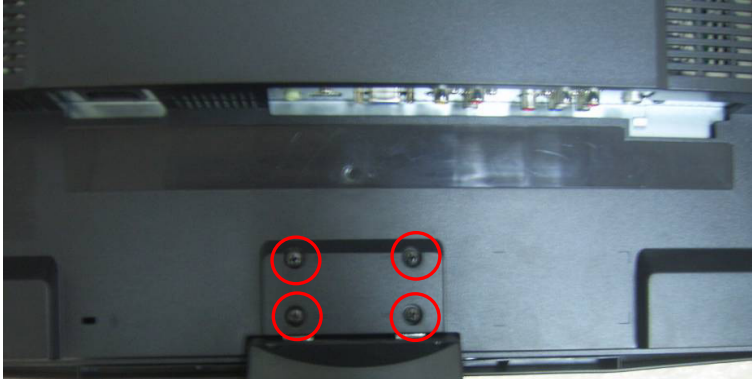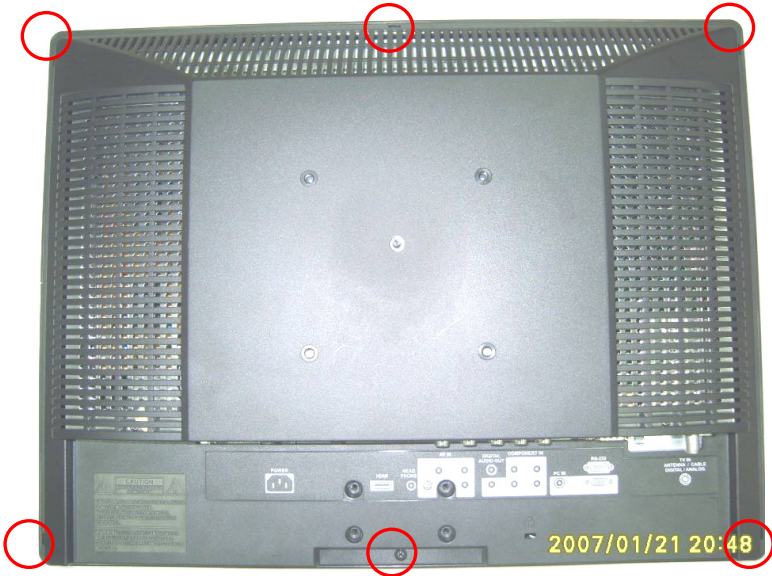Step	Figure	Description
Preparation		Lay the LCD-TV on a flat, soft and clean surface.
Remove the stand and base		Remove the hinge cover and the 4 screws
Remove the back cover		Remove the 6 screws.

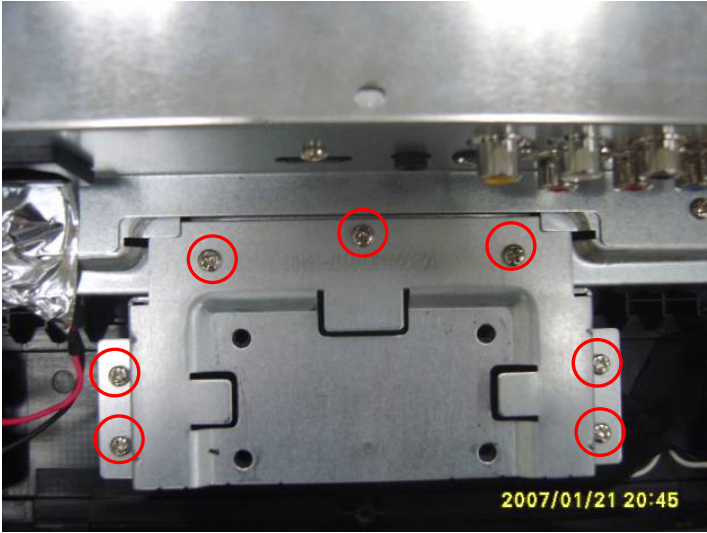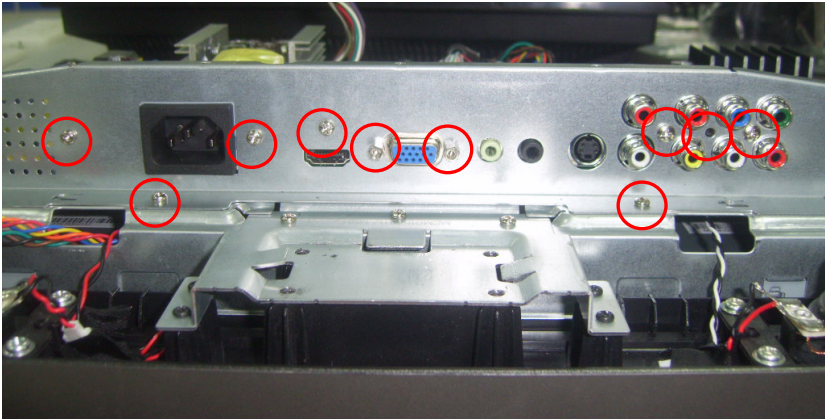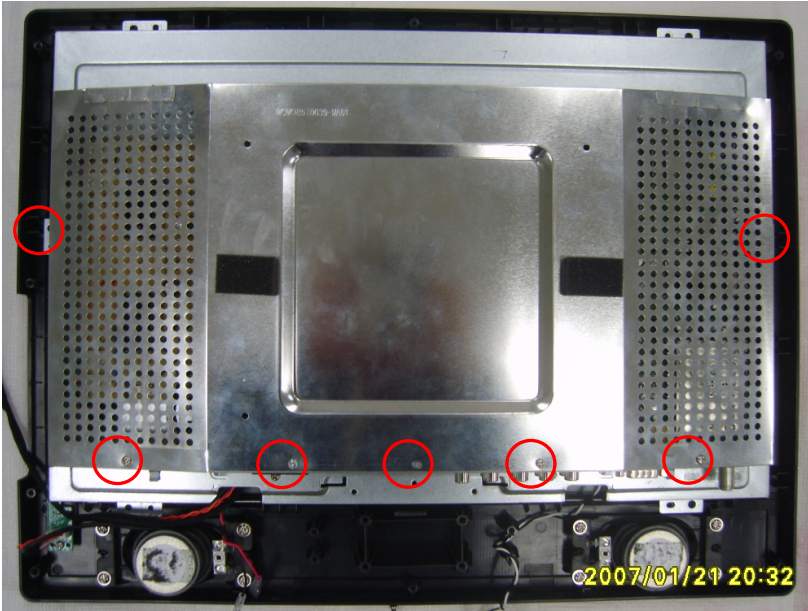Remove hinge plate	 2007/01/21 20:45	Remove the 7 screws
Remove support bkt	 2007/01/21 20:32	Remove the 10 screws
Remove shield	 2007/01/21 20:32	Remove the 7 screws

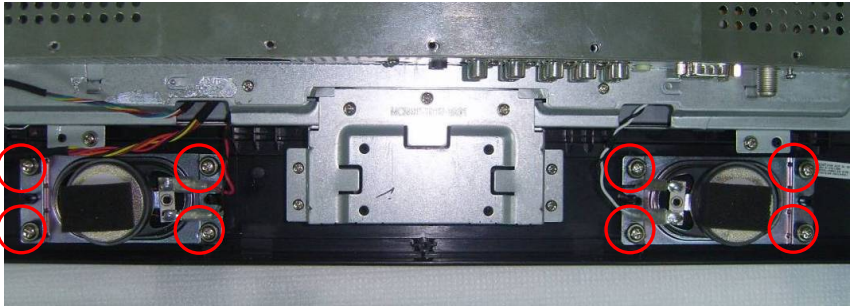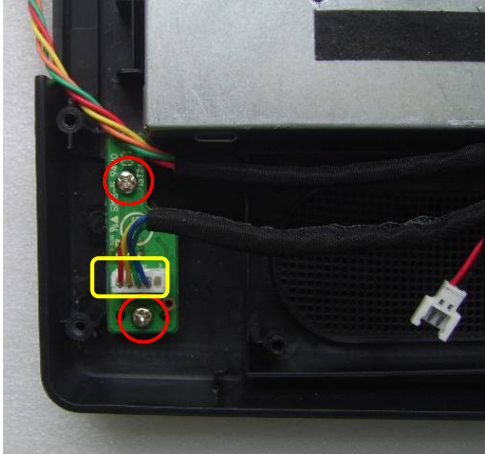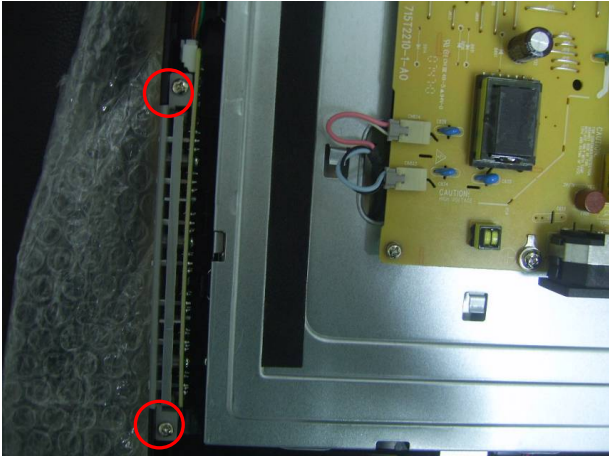
Remove speaker		Remove the 8 screws
Remove IR board		Remove the 2 screws and connect wire
Remove key board		Remove the 2 screws
Remove pin		Remove the 7 connect wire

**Remove
connect
wire**

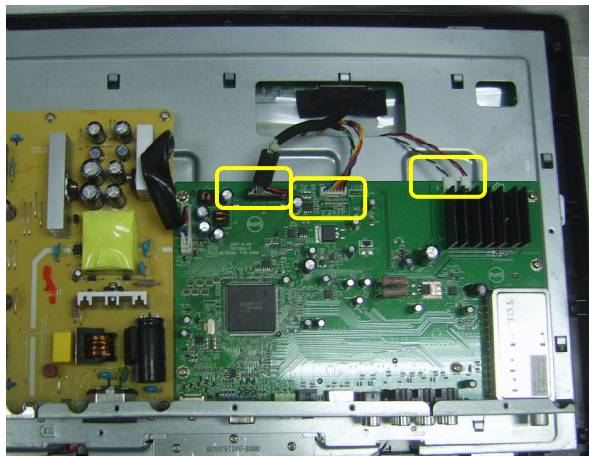


Remove the 3
connect wire

**Remove
main and
power
boards**


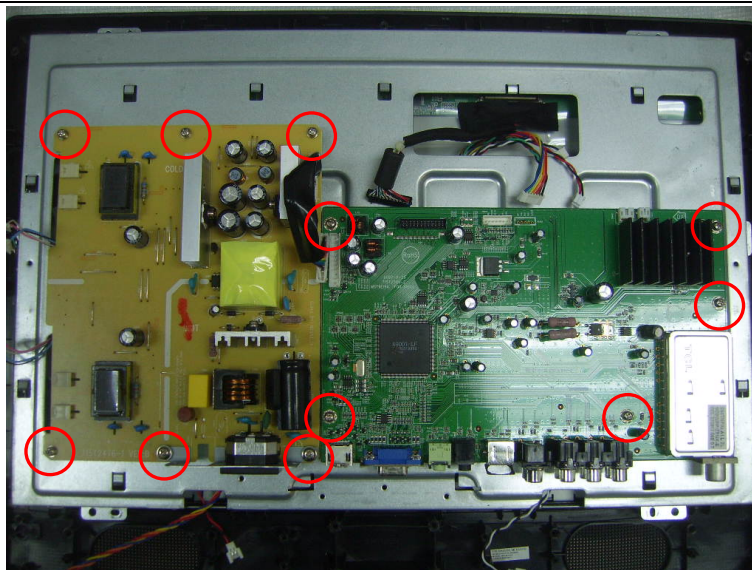




Remove the 11
screws

**Remove
bezel**

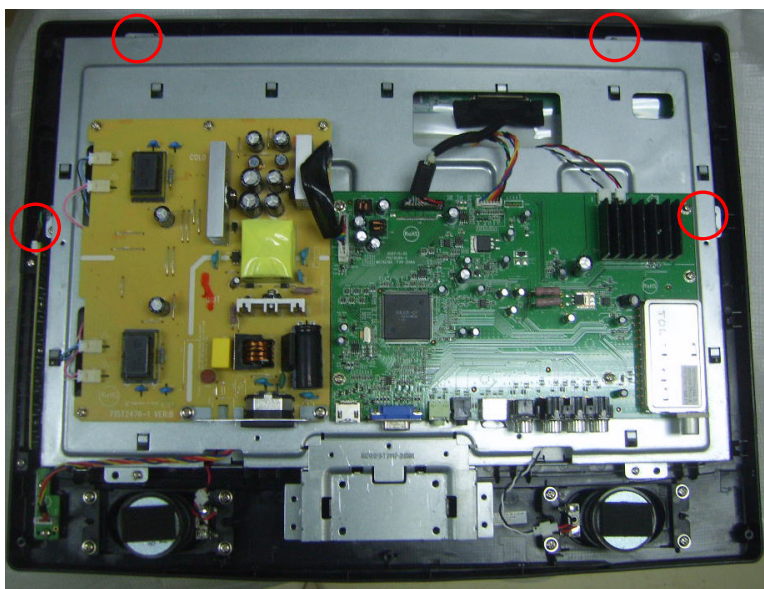


Remove the 4
screws

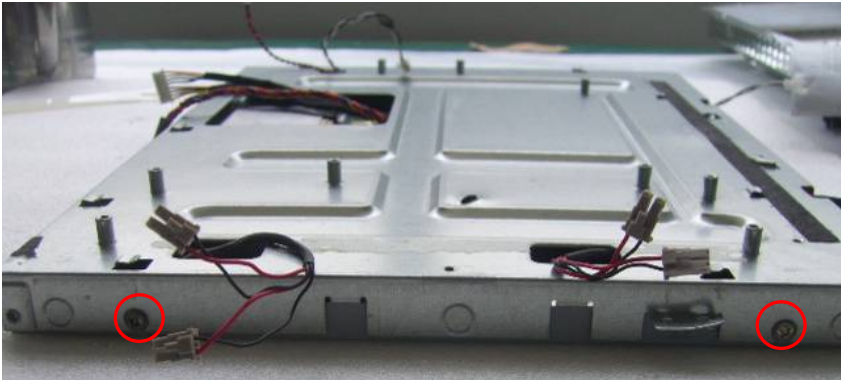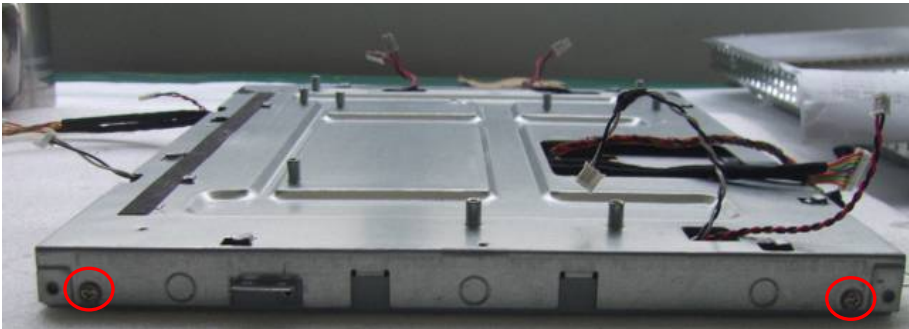		
Remove panel		Remove the 4 screws
		

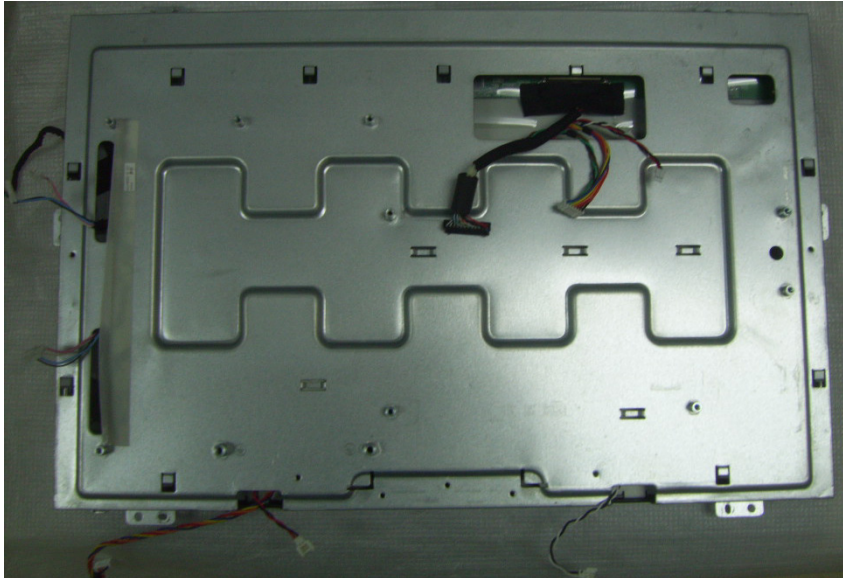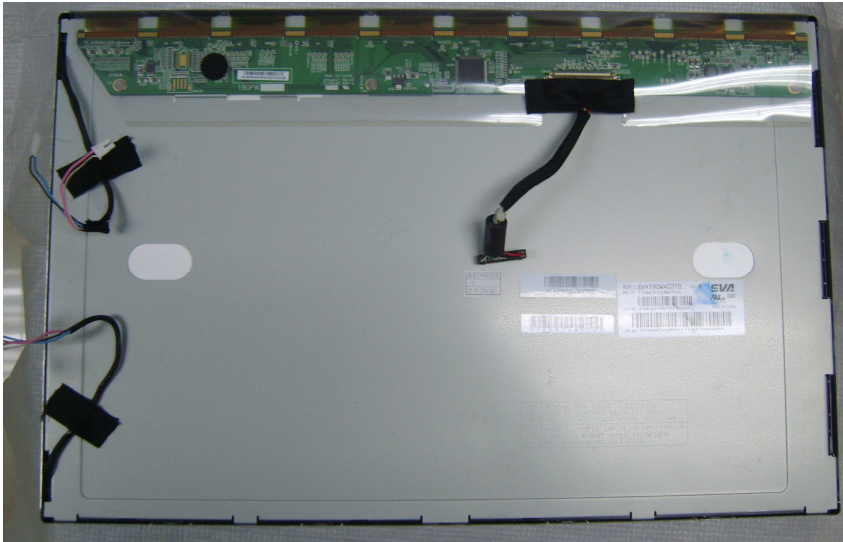
Remove main frame	 A photograph showing the back of a 19-inch LCD panel. The main frame has been removed, leaving a silver-colored metal plate with a complex, wavy internal structure. Various cables and connectors are visible along the edges of the panel.	
Panel	 A photograph showing the front of the LCD panel. The panel is white and rectangular. A green circuit board is visible along the top edge. Several cables and connectors are attached to the panel. A label with a barcode and the text "EVA" is visible on the right side of the panel.	The end

4. Repair Flow Chart


4.1 No Power (No LED indicator)

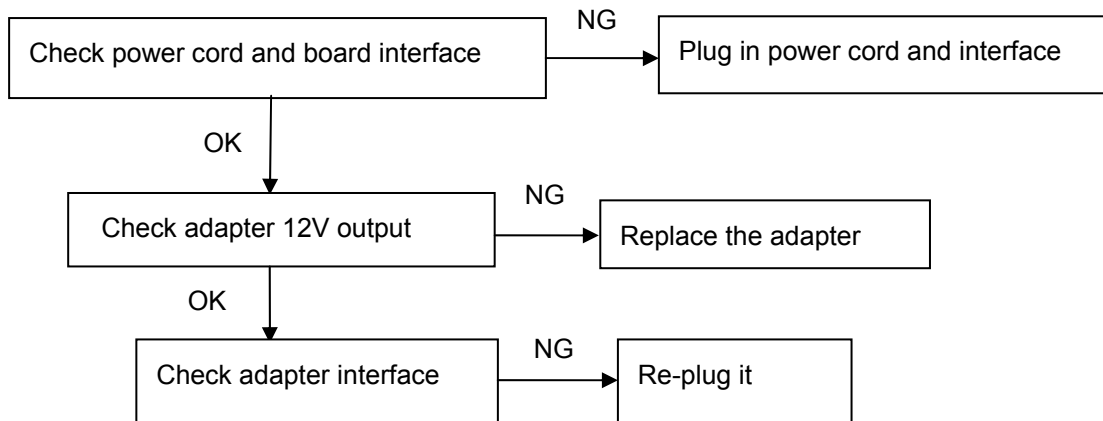


4.2 Can not start (LED indicator yellow)

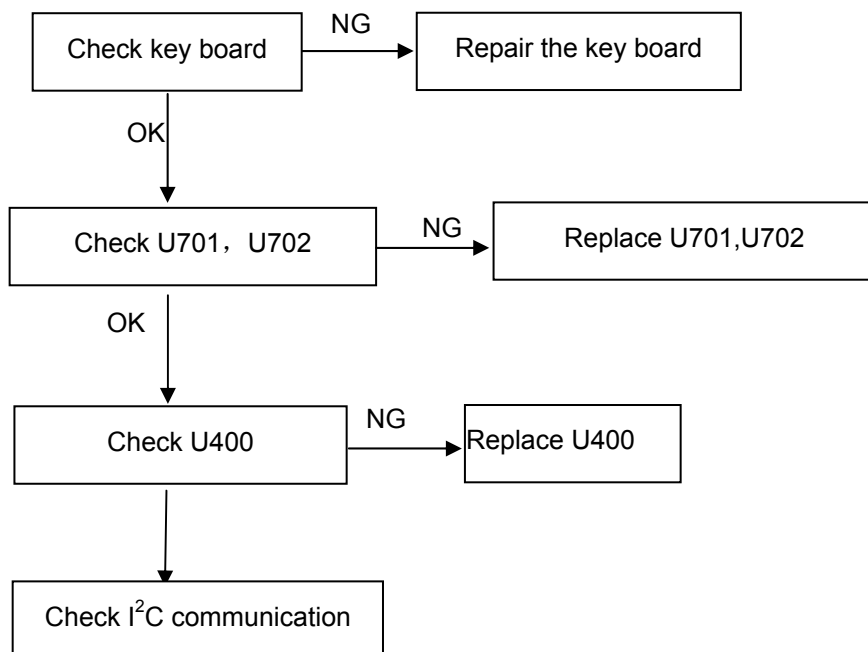


4.3 No display (LED indicator green)

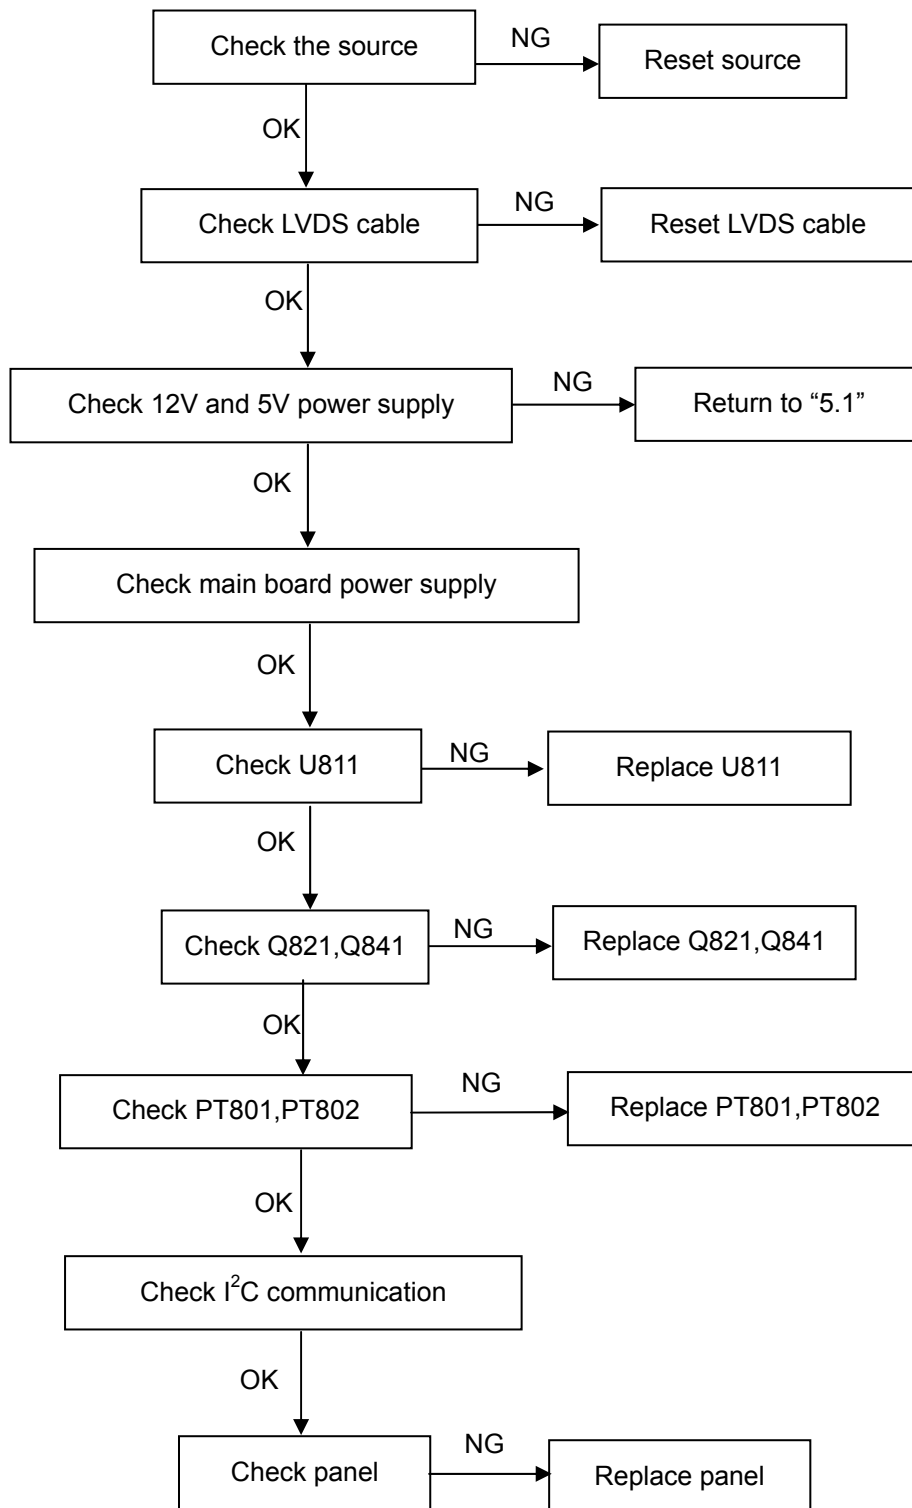


4.4 Abnormal display

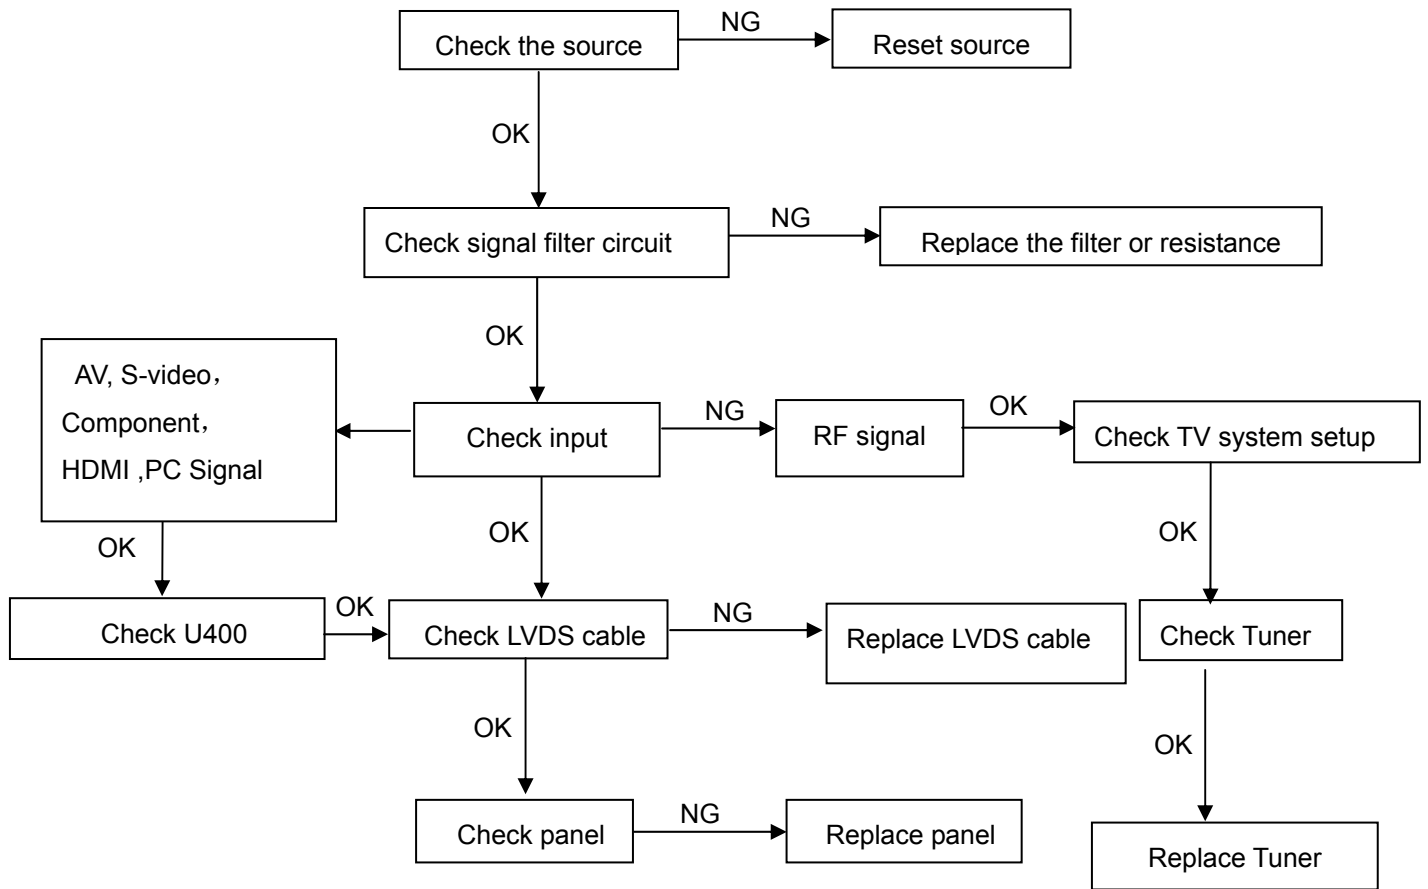

4.5 No sound

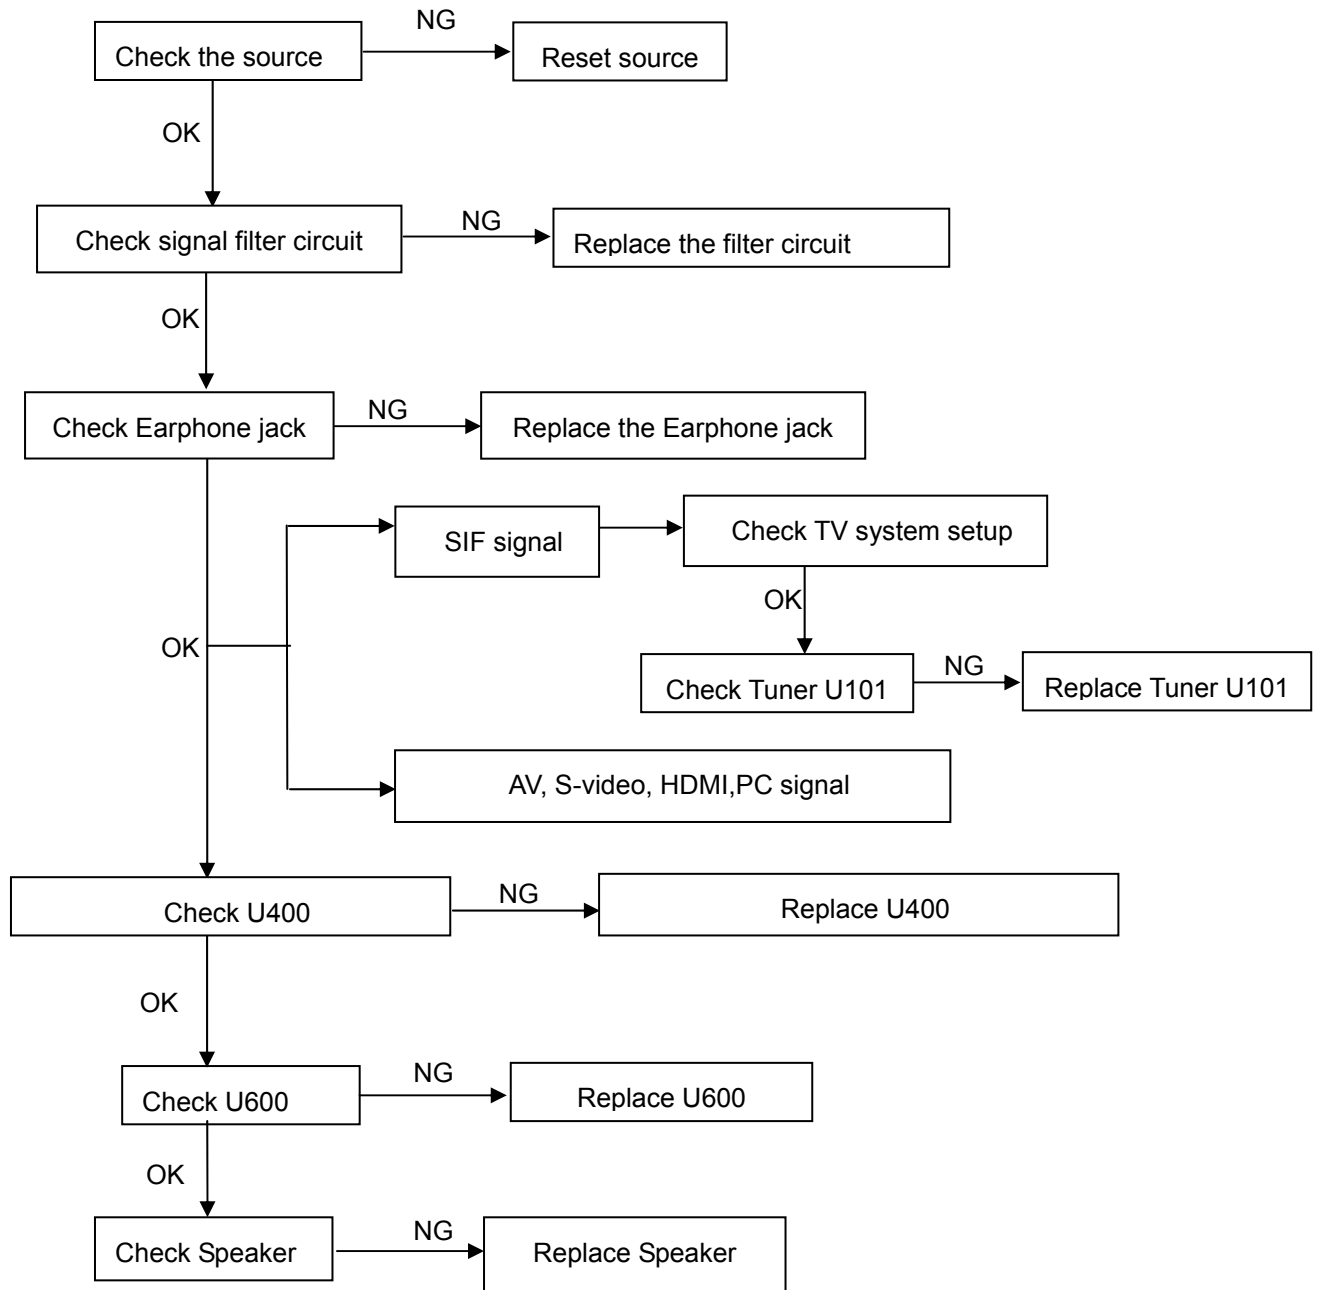

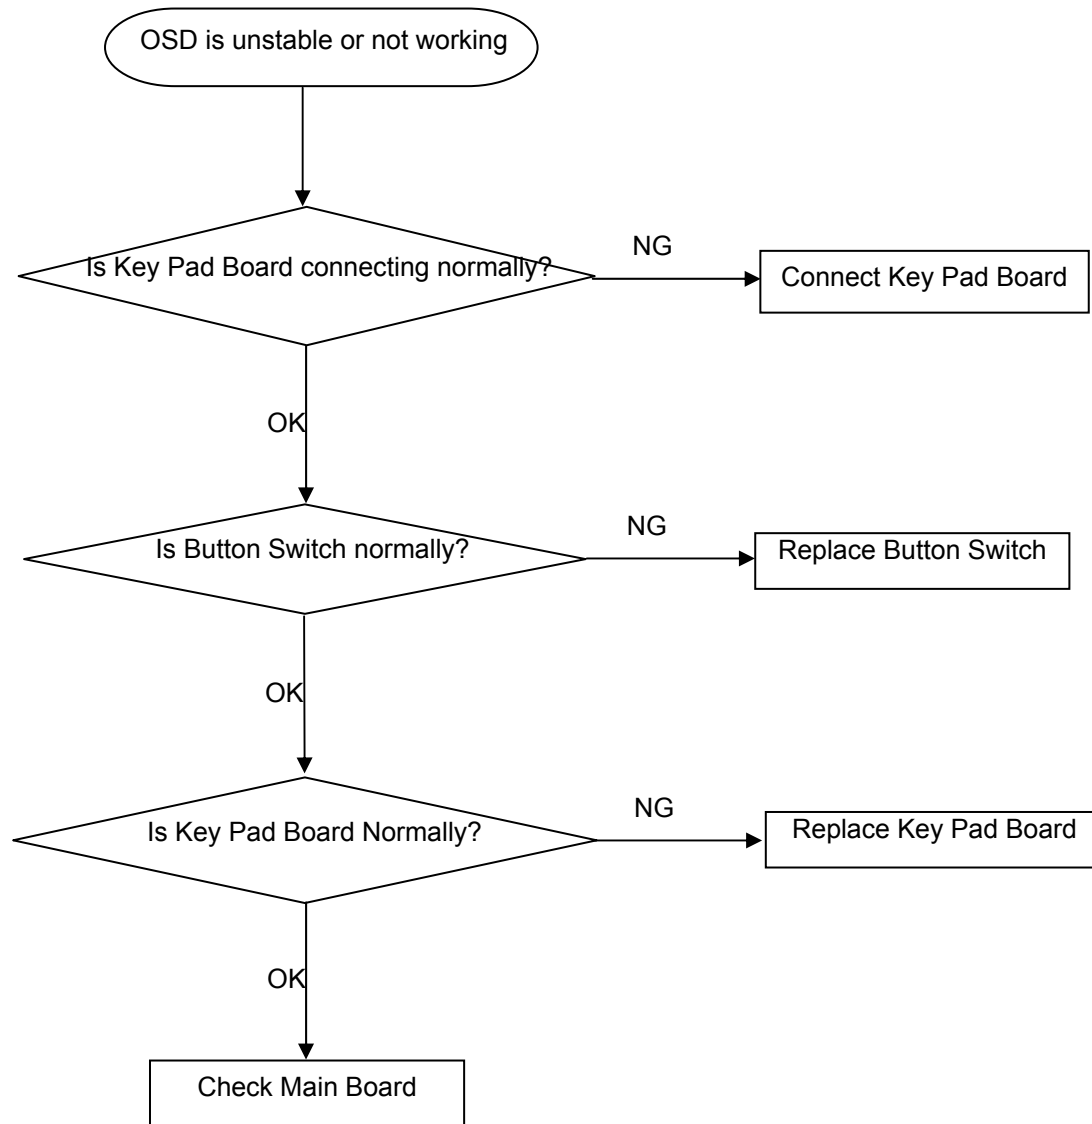


5. White Balance, Luminance Adjustment

It is no need to do white balance for this model.

6. PCB Layout


6.1 Main Board


715T2509-2

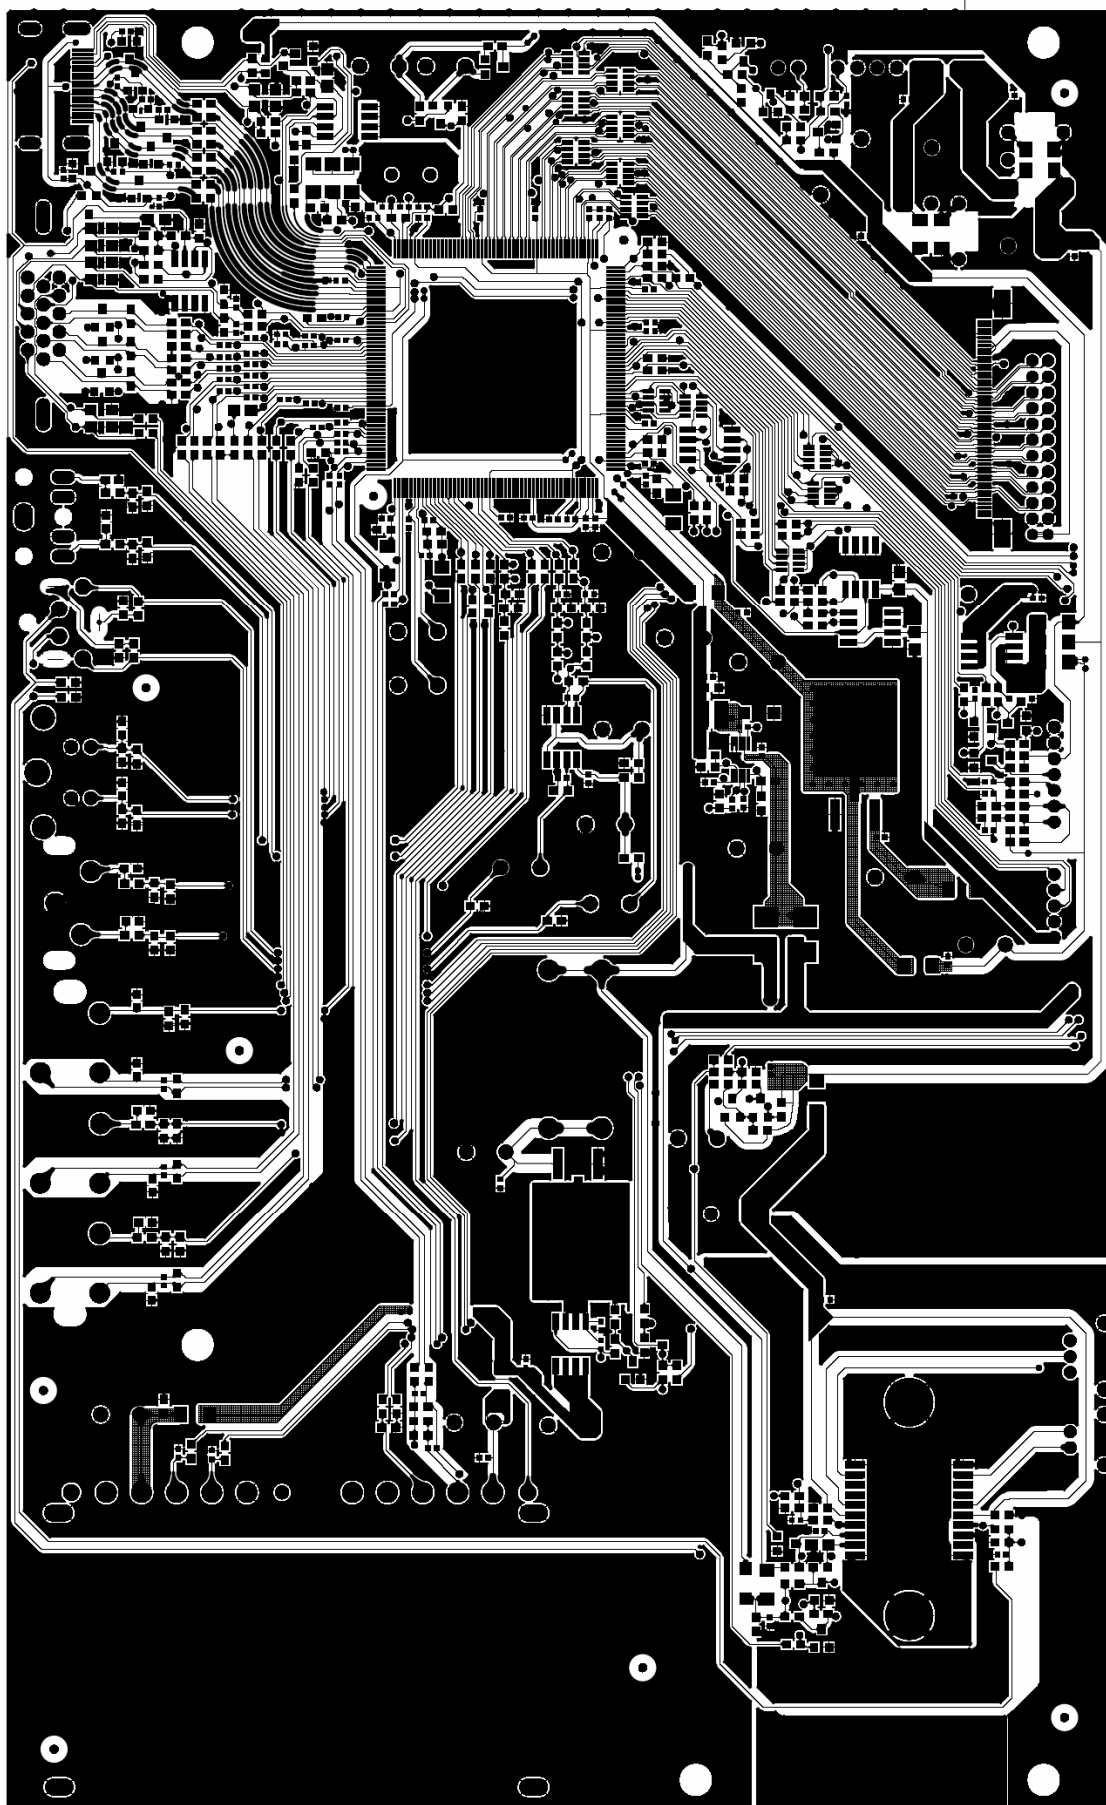




715T2476-1 VER:B

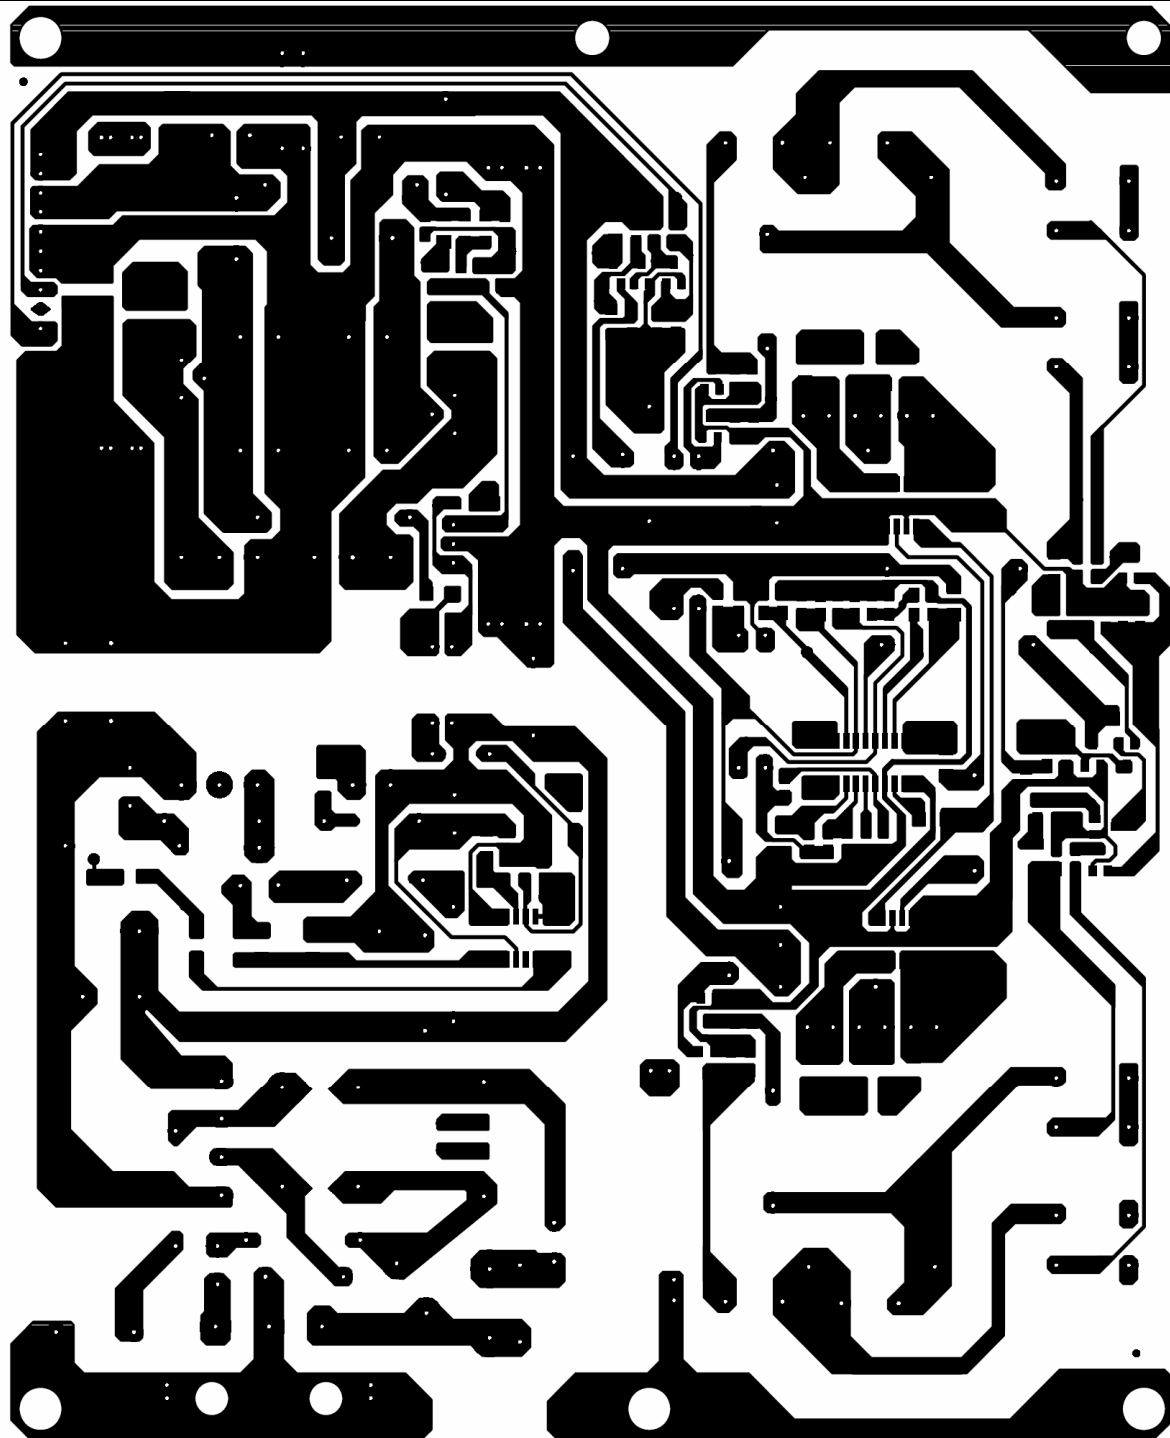

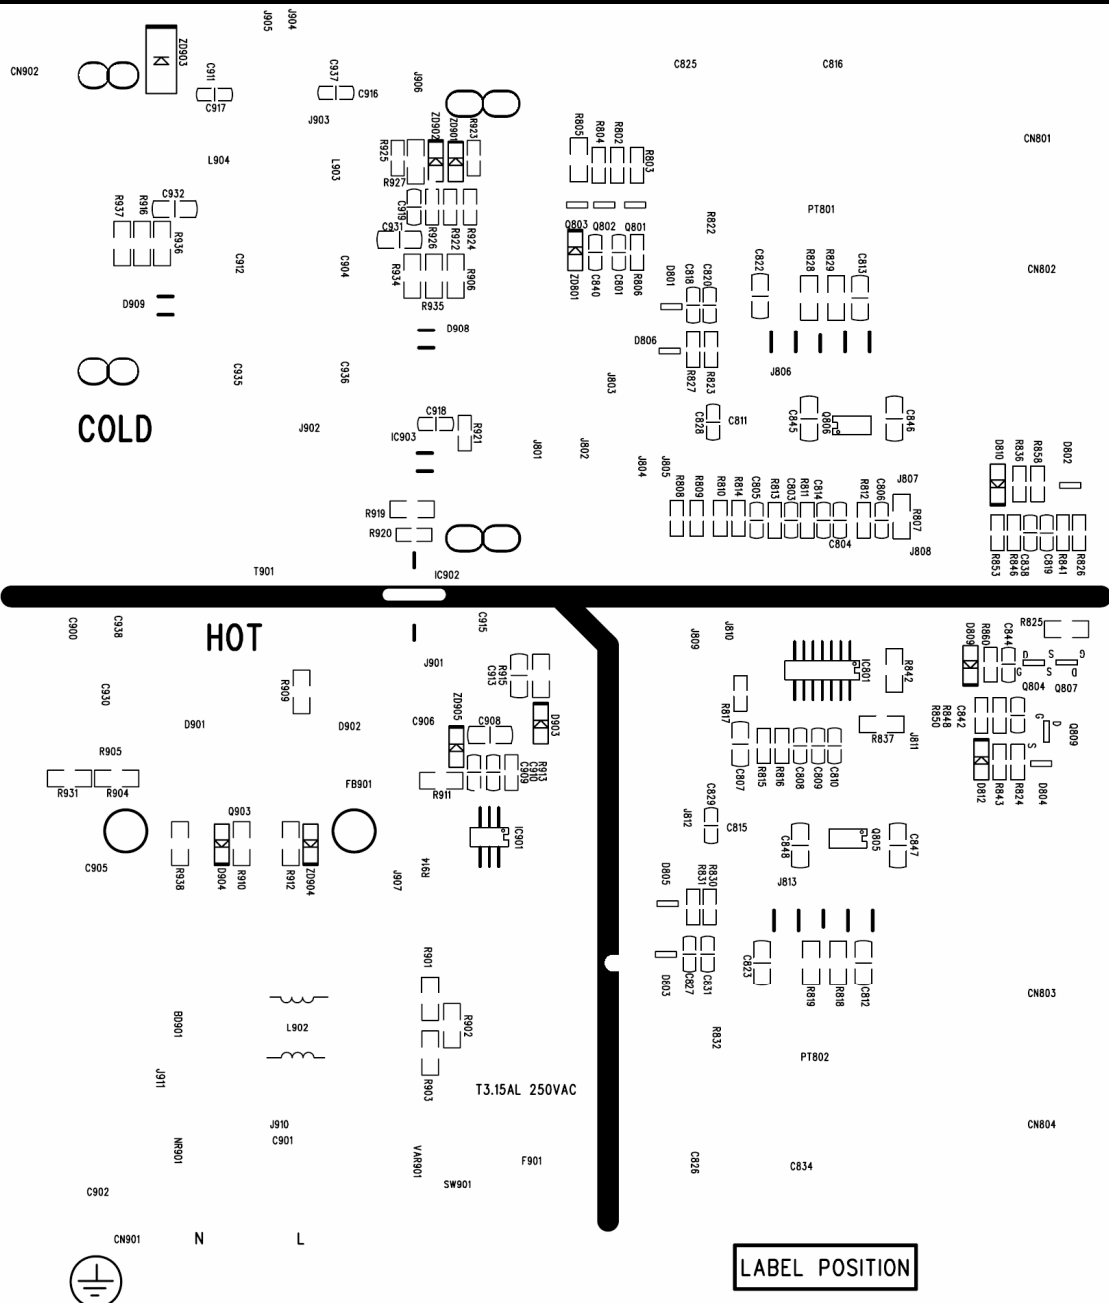




6.3 Key Board

715T2501-1

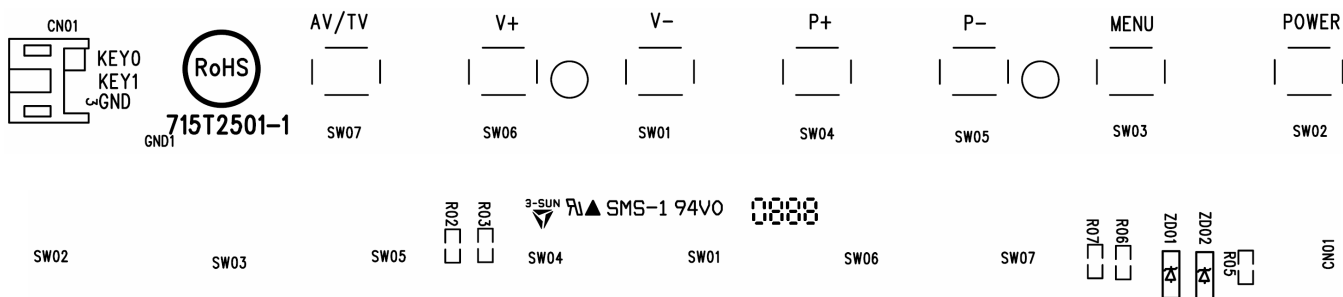


6.4 IR Board

715T2499-1

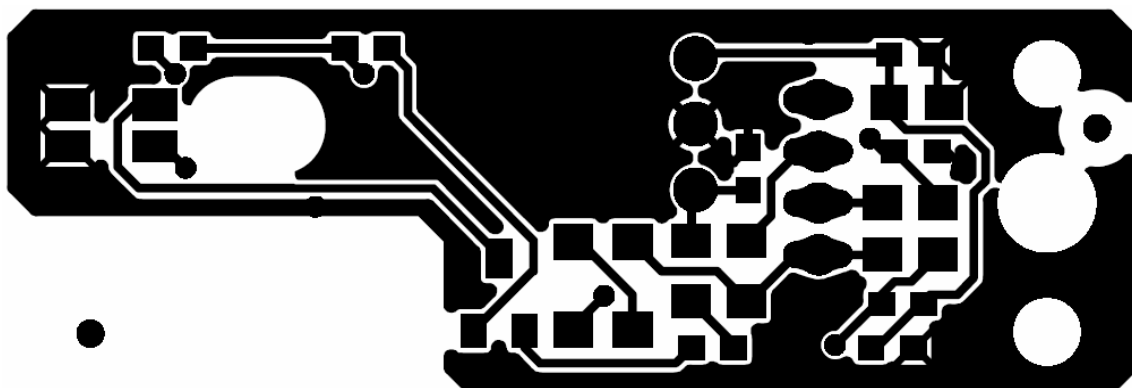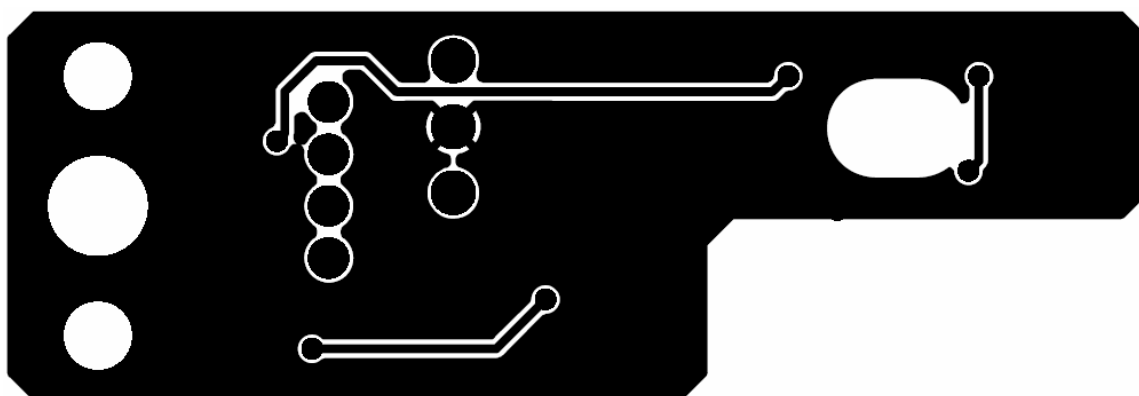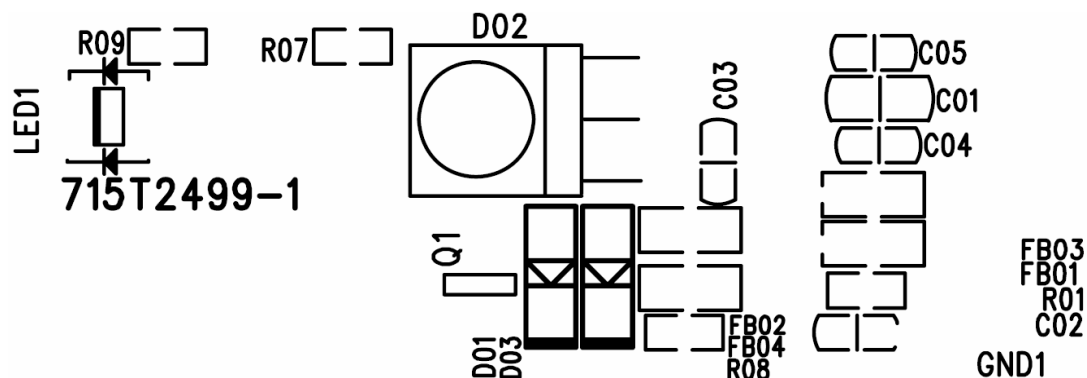

7. Block Diagram

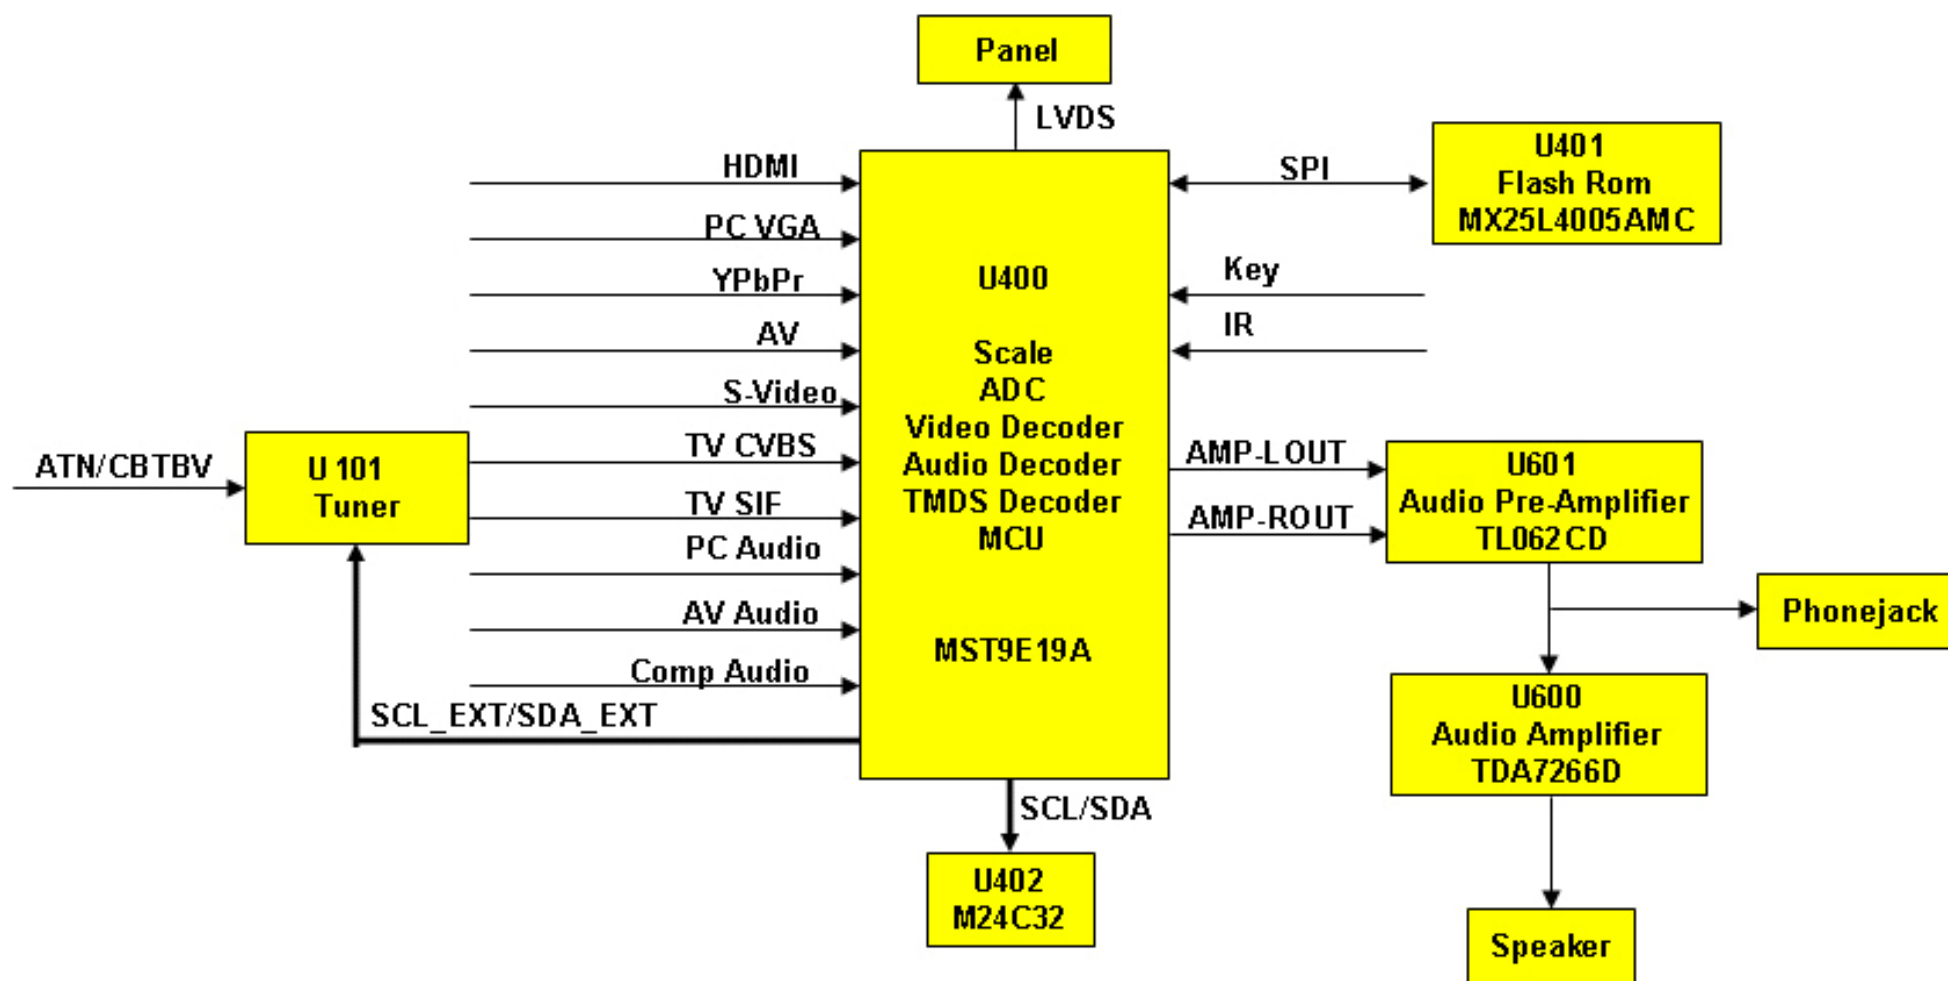


8. Schematic Diagram



8.1 Main Board

715T2509-2

Power Source

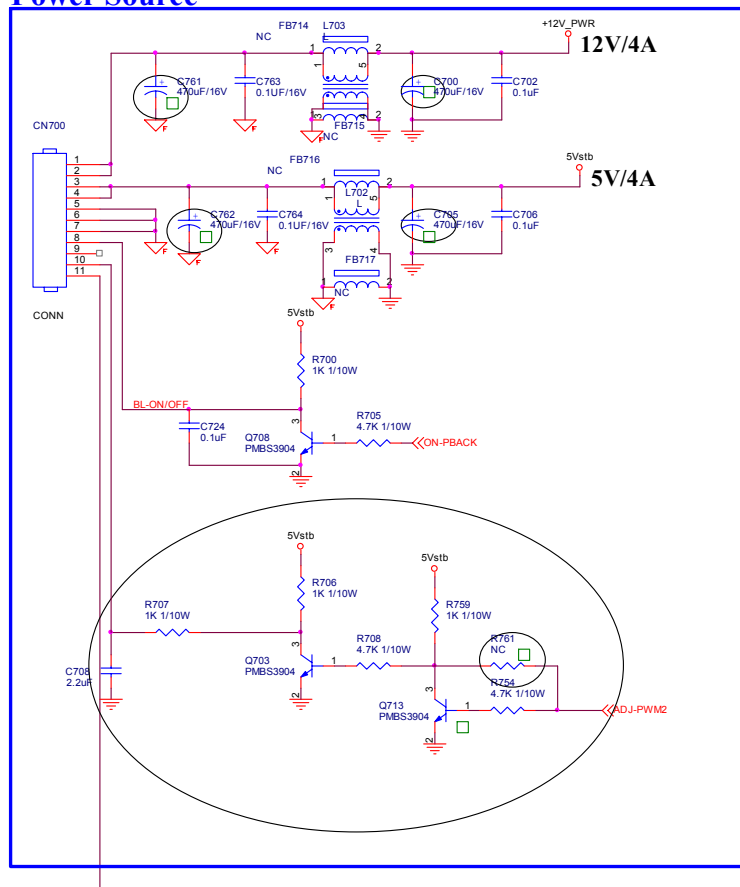


Panel Power

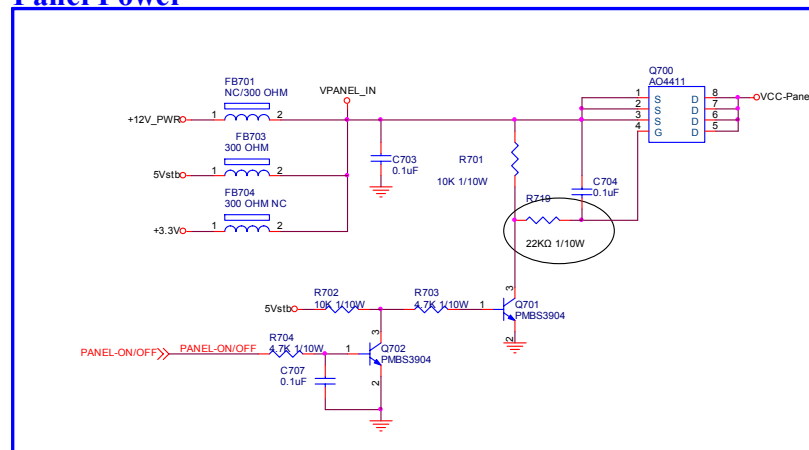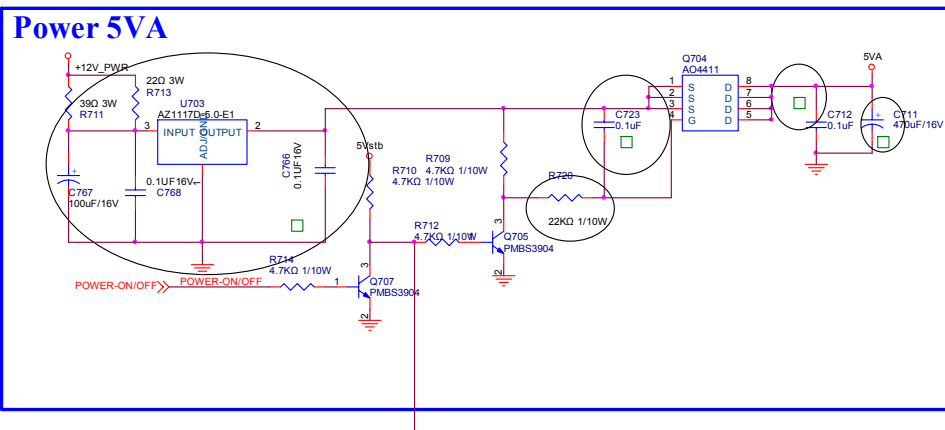
**Power 5VA**

Title 01)System Power				
Size A3	Document Number T2509-2-X-X-4-070606			
Date:	Wednesday, June 06, 2007	Sheet	1	of 8


Vcc3.3 for MST9E19A

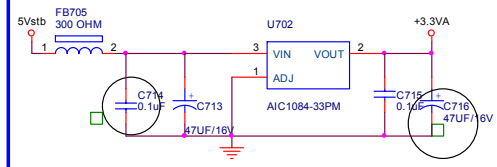


+3.3AVDD for AVDD_AU

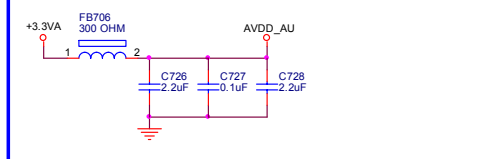


+3.3V for VDD_MPLL

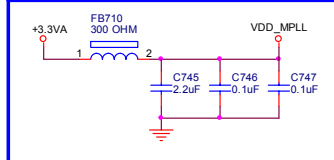


3.3V for AVDDPLL2

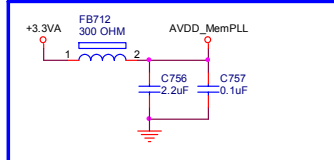


+3.3AVDD for AVDD_SIF

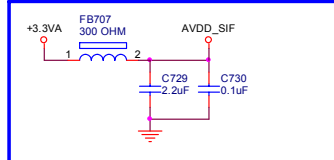


+3.3AVDD for AVDD_HDMI

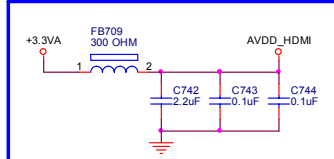


+3.3AVDD for AVDDA

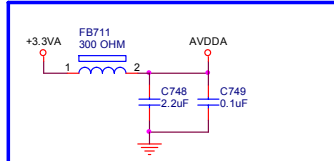


Vcc1.8 for MST9E19A


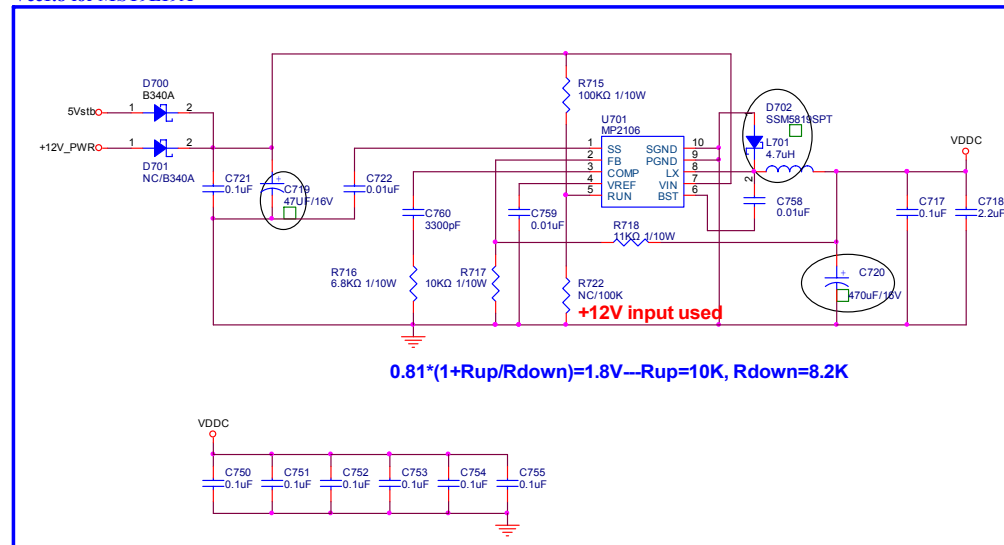


Vcc3.3 for MST9E19A Digital

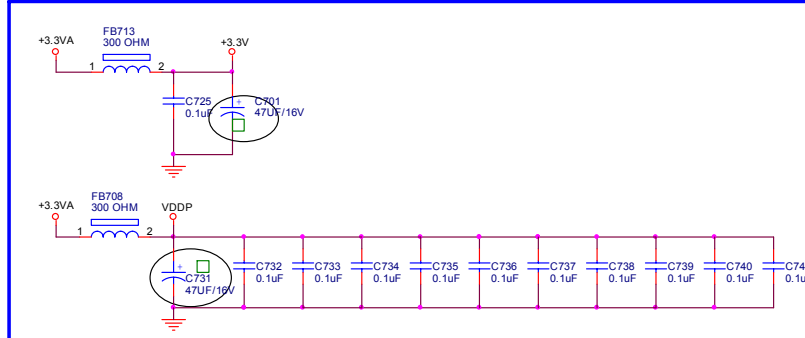


Title		
02/Power For MST9E19A		
Size	Document Number	Rev
A3	T2509-2-X-X-4-070606	01
Date:	Wednesday, June 06, 2007	Sheet 2 of 8



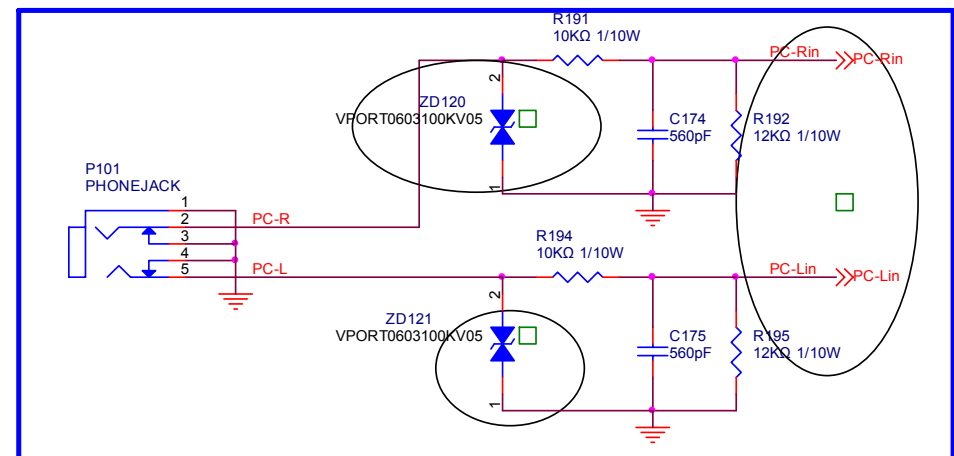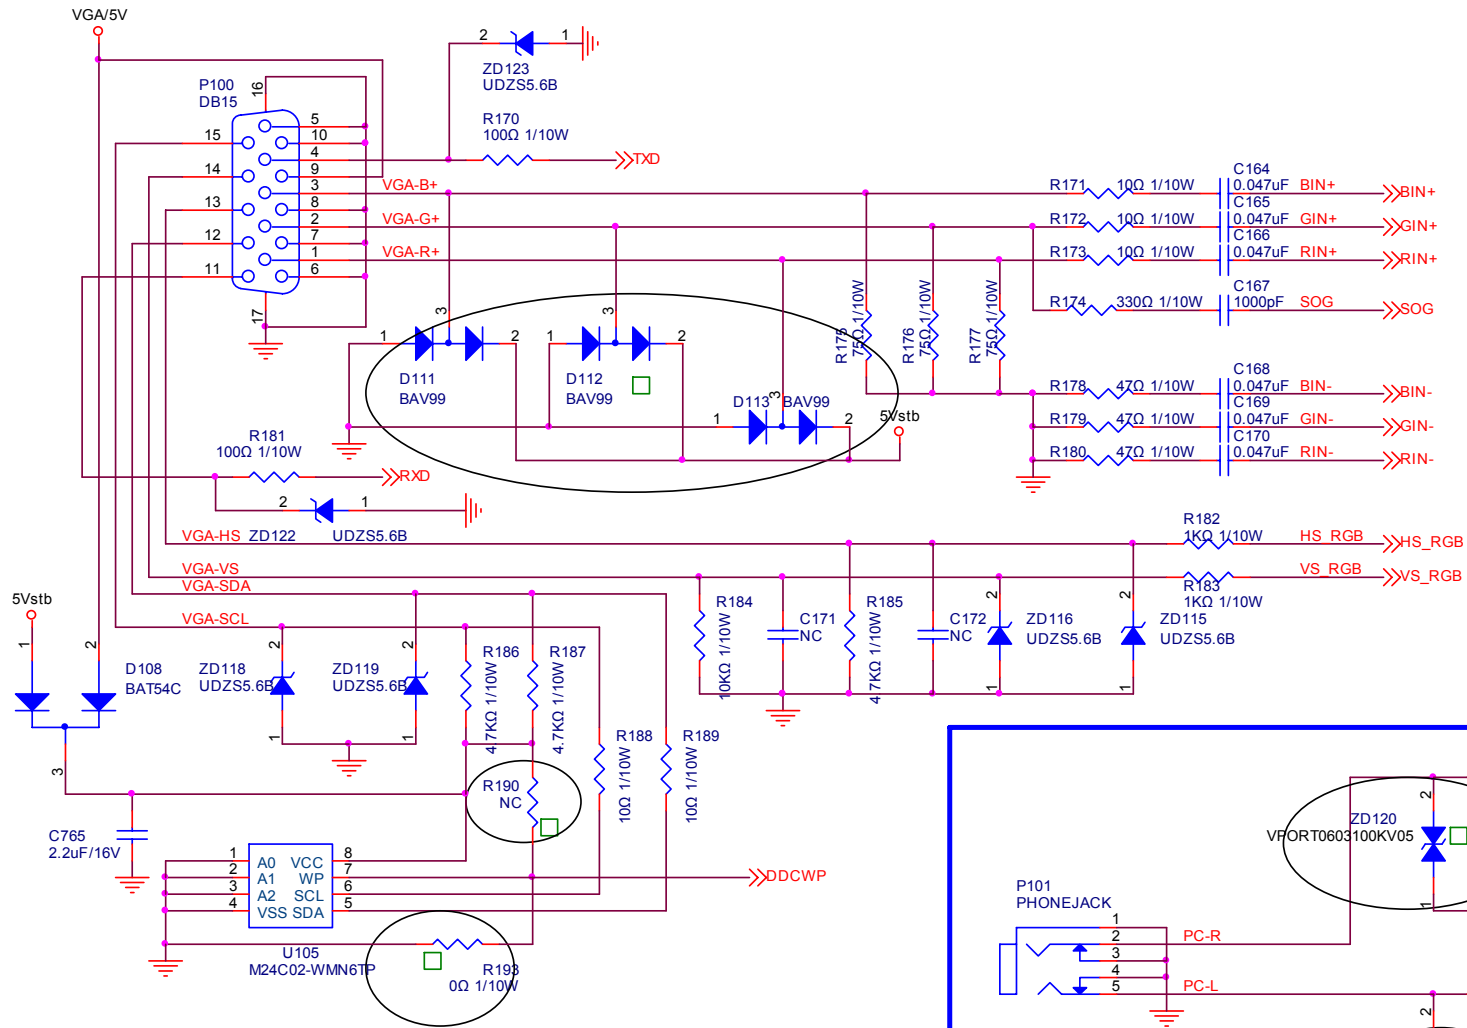


Title		
04)VGA		
Size	Document Number	Rev
A4	T2509-2-X-X-4-070606	01
Date:	Wednesday, June 06, 2007	Sheet 4 of 8

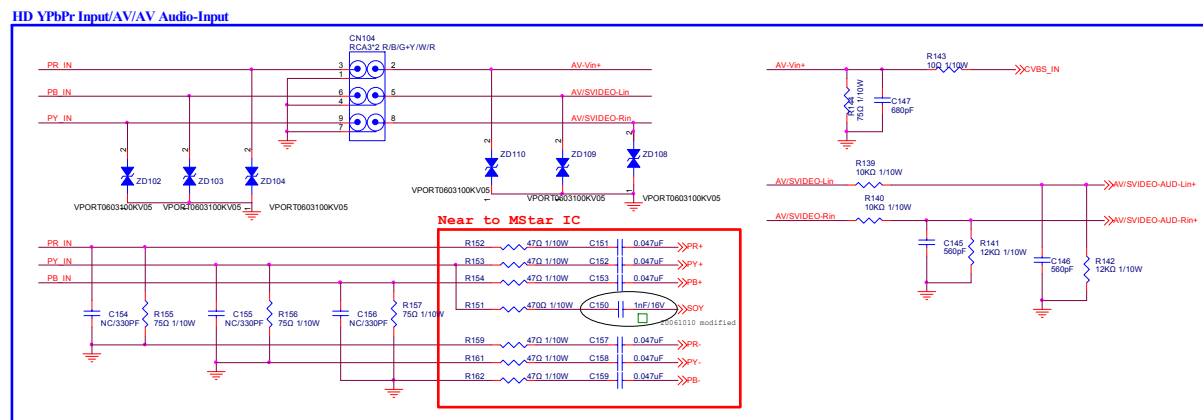



Video Module (Tuner+Demodulator) Option

TUNER TCLMO9WPP-2PN-E

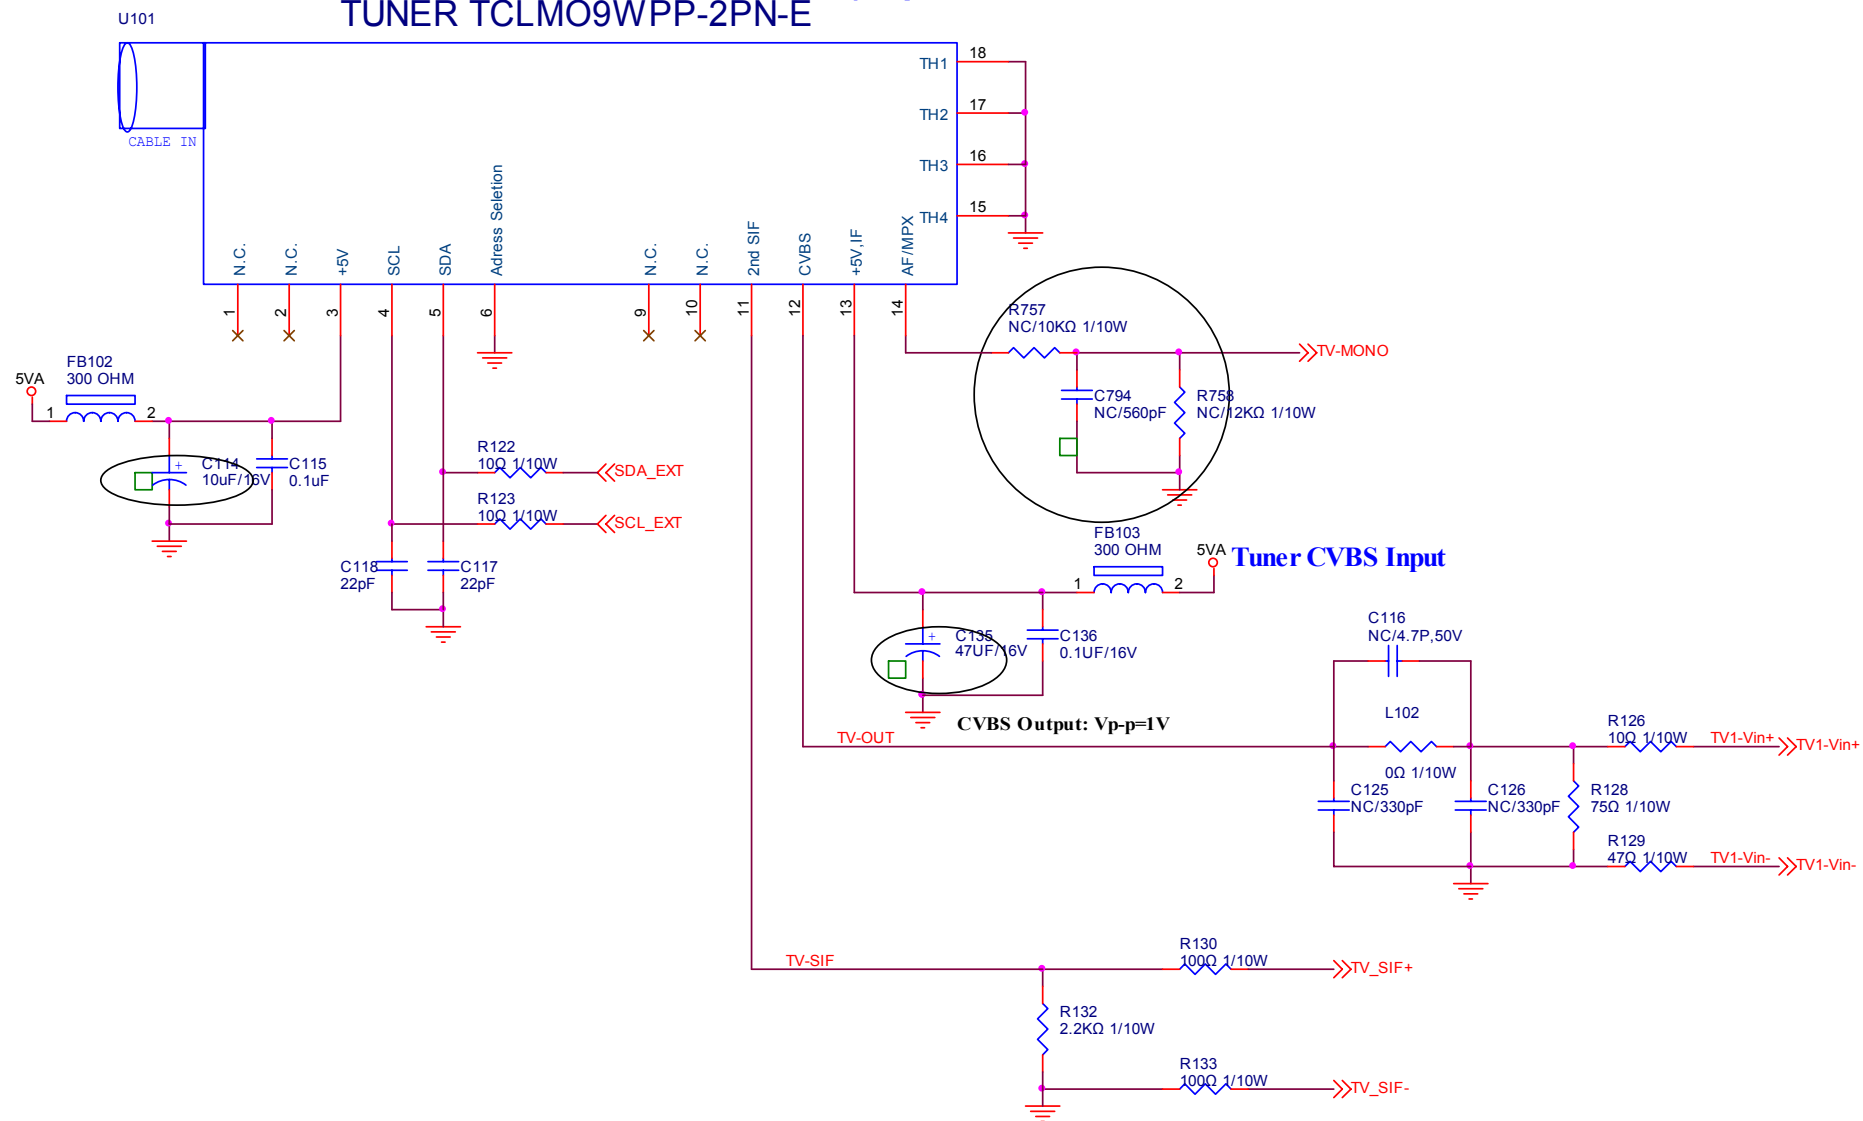


Title		
07)TUNER+IF		
Size	Document Number	Rev
A4	T2509-2-X-X-4-070606	01
Date:	Wednesday, June 06, 2007	Sheet 7 of 8


Audio Pre-Amplifier

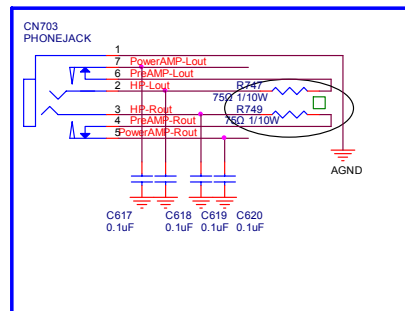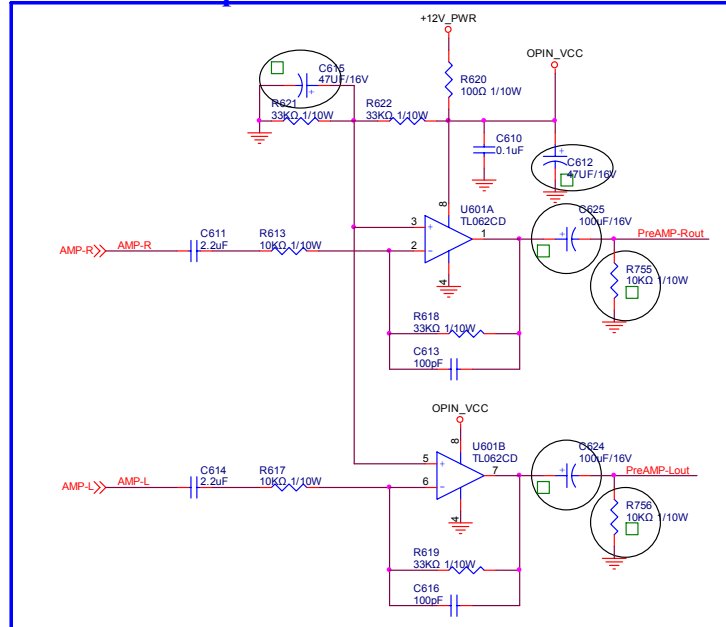

Audio Power Amplifier

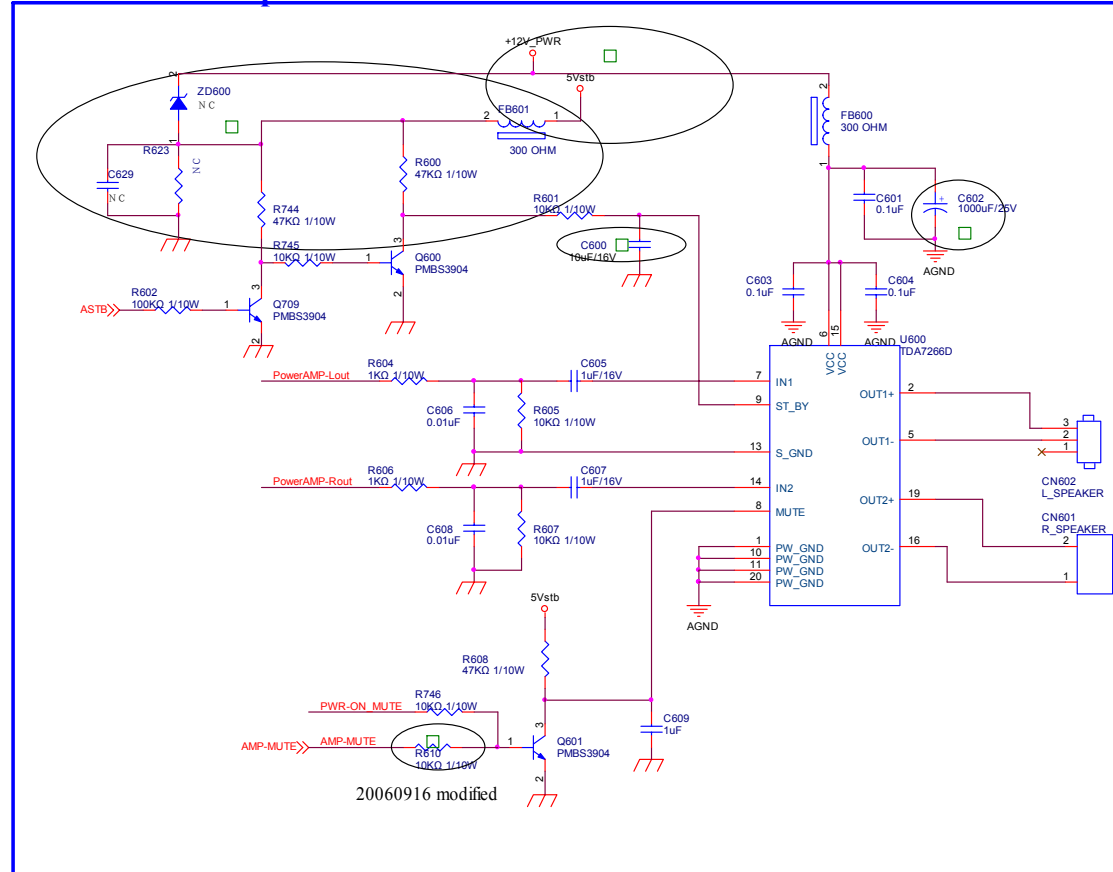

MUTE CIRCUIT

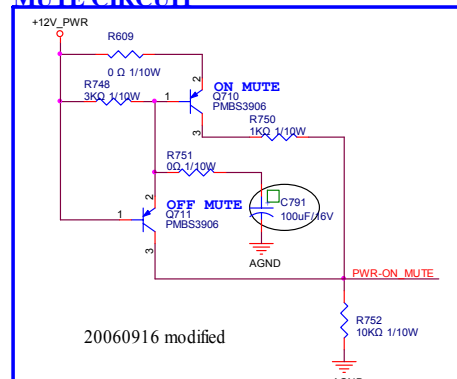


Title			
08)Audio AMP			
Size	Document Number		Rev
A3	T2509-2-X-X-4-070606		01
Date:	Wednesday, June 06, 2007	Sheet	8 of 8


19" LCD TV

8.2 Power Board

AOC L19AS73

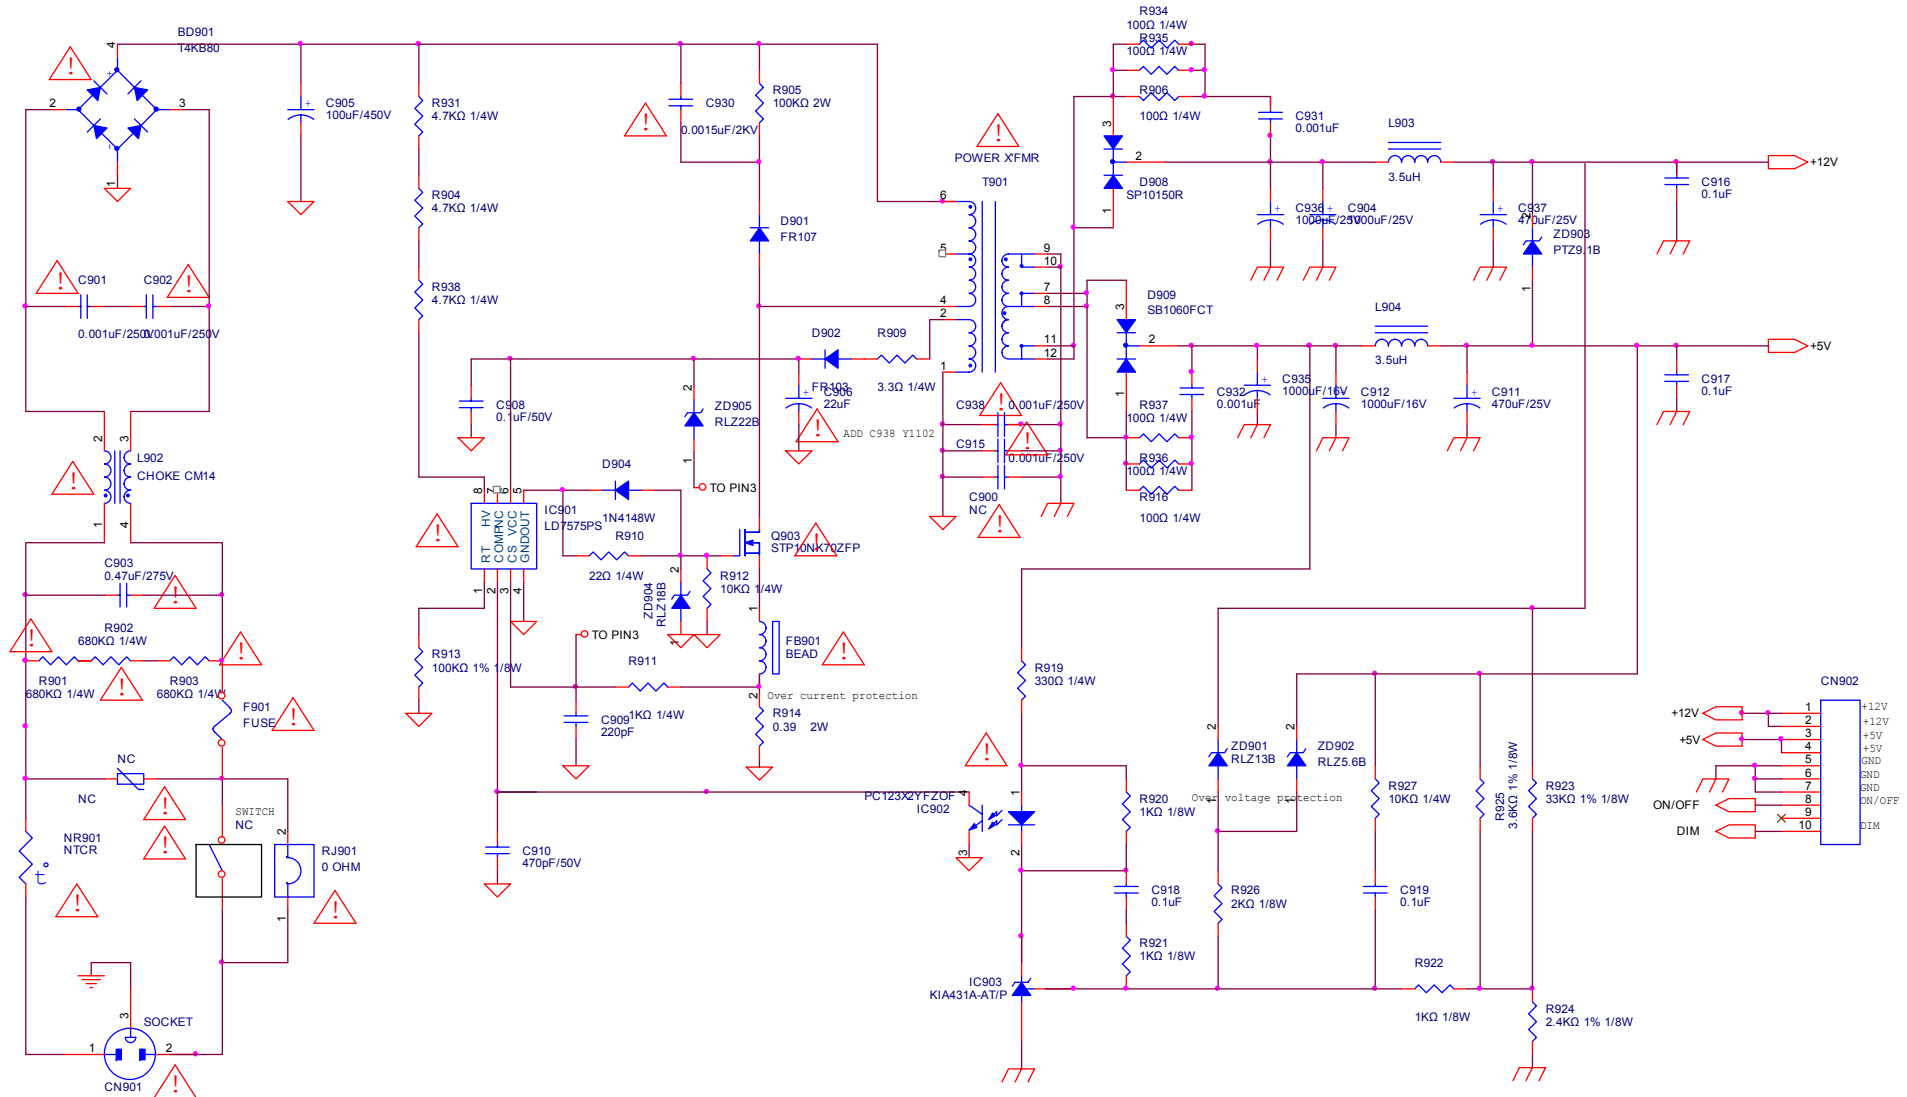


Title			
01.Power			
Size	Document Number		Rev
	715T2476-1		1
Date:	Tuesday, March 20, 2007	Sheet	1 of 1

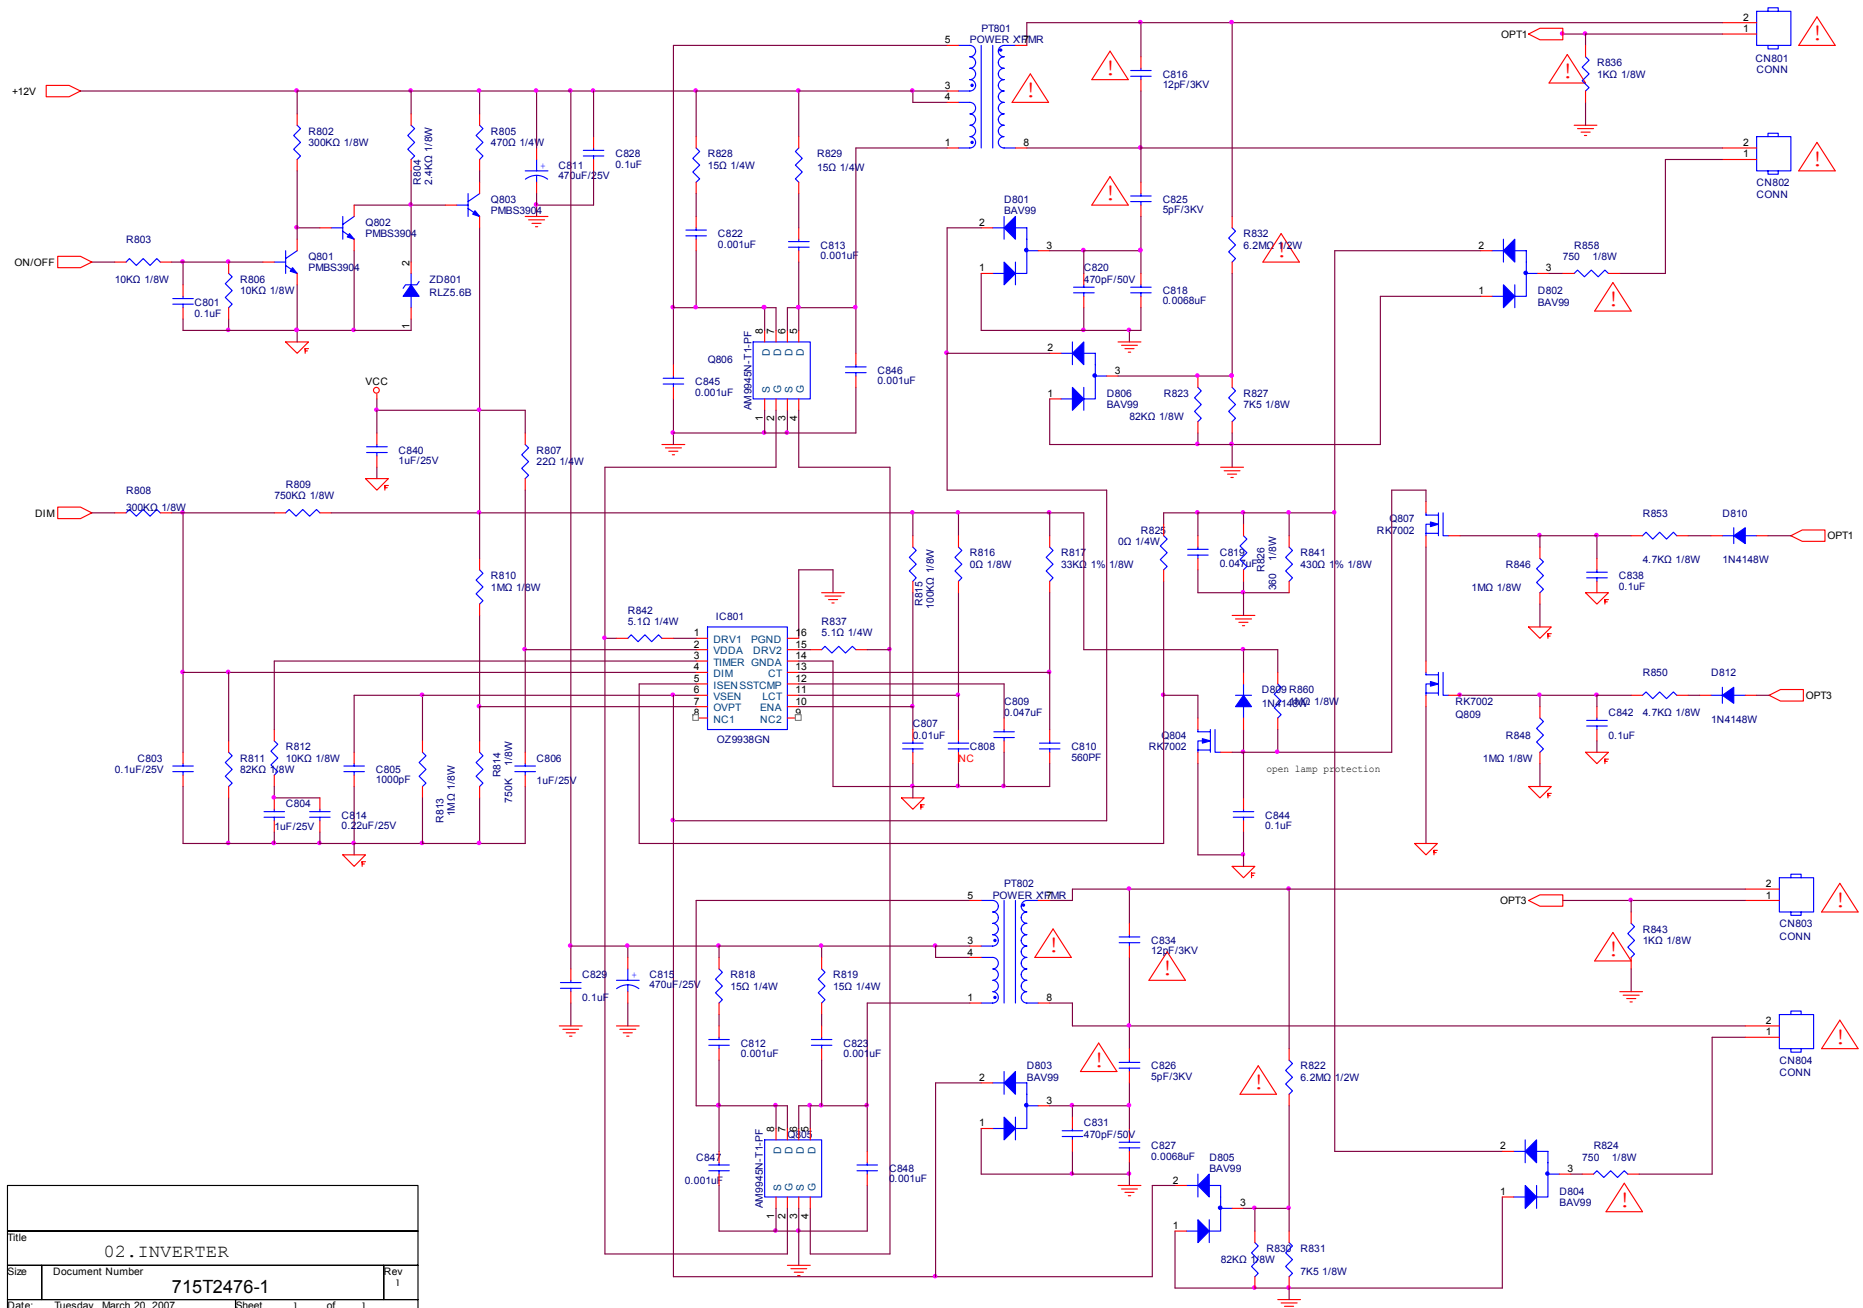


Title		
02. INVERTER		
Size	Document Number	Rev
	715T2476-1	1
Date:	Tuesday, March 20, 2007	Sheet 1 of 1

8.3 Key Board

715T2501 1

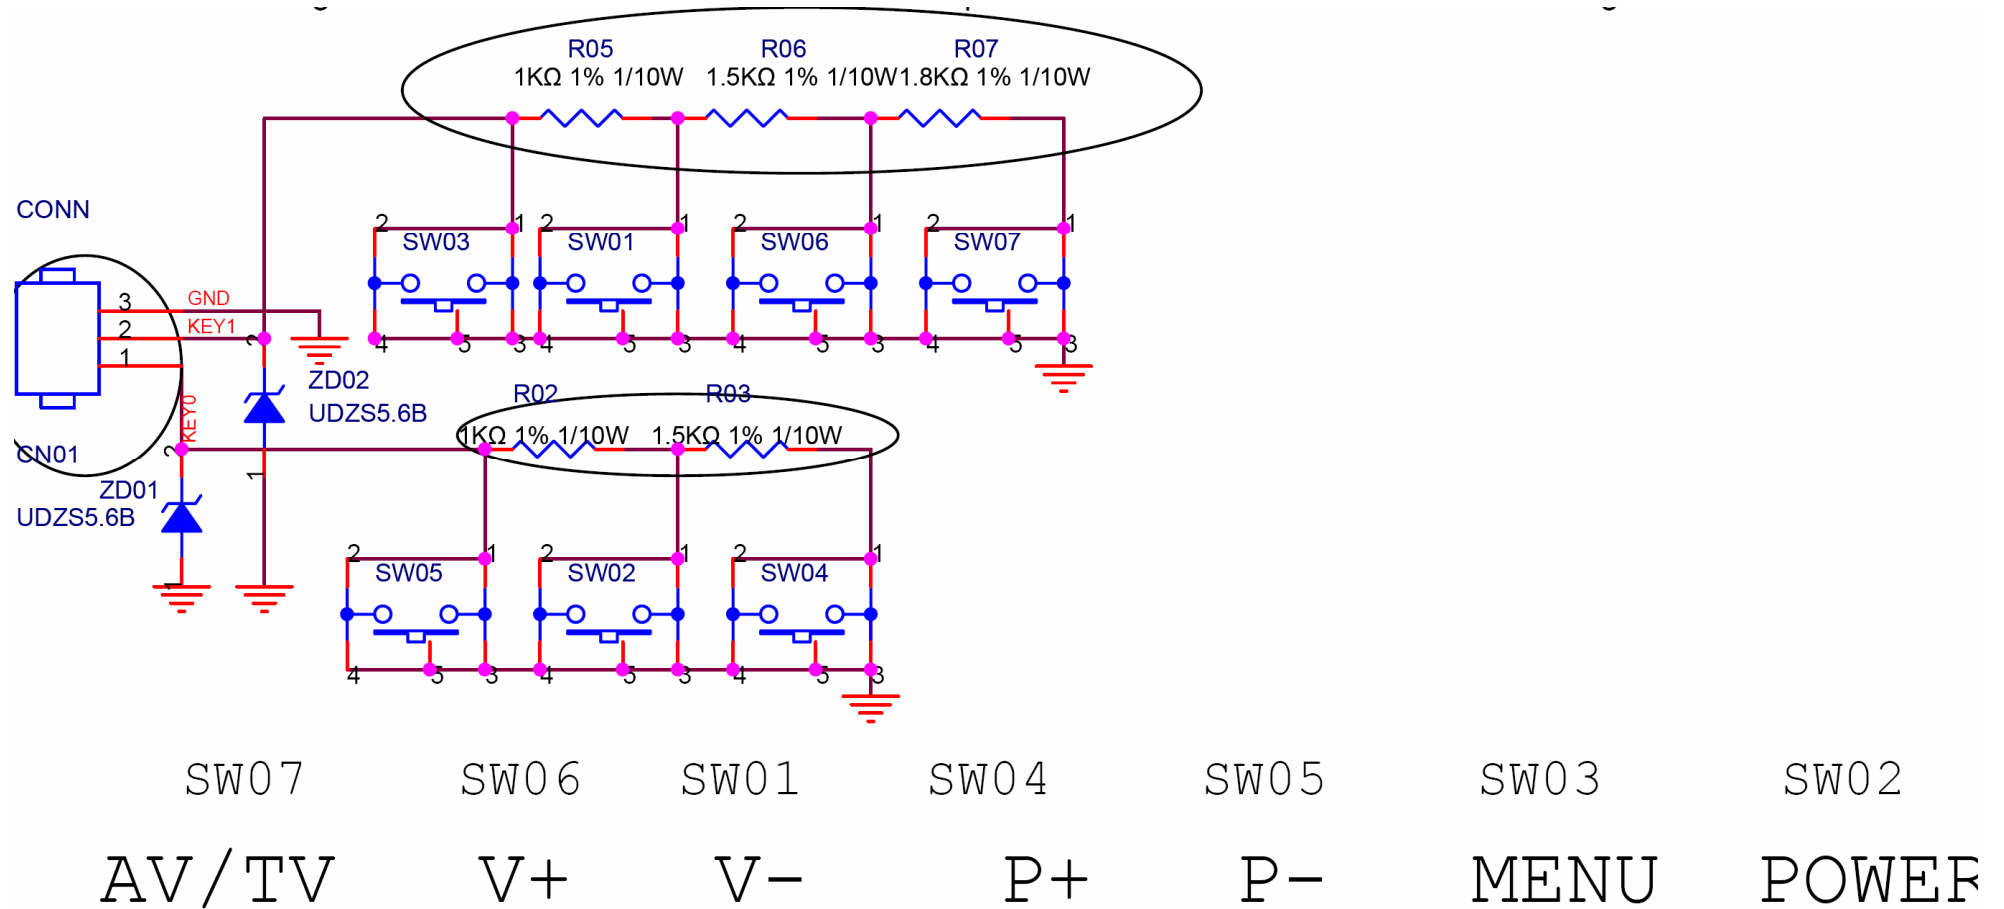

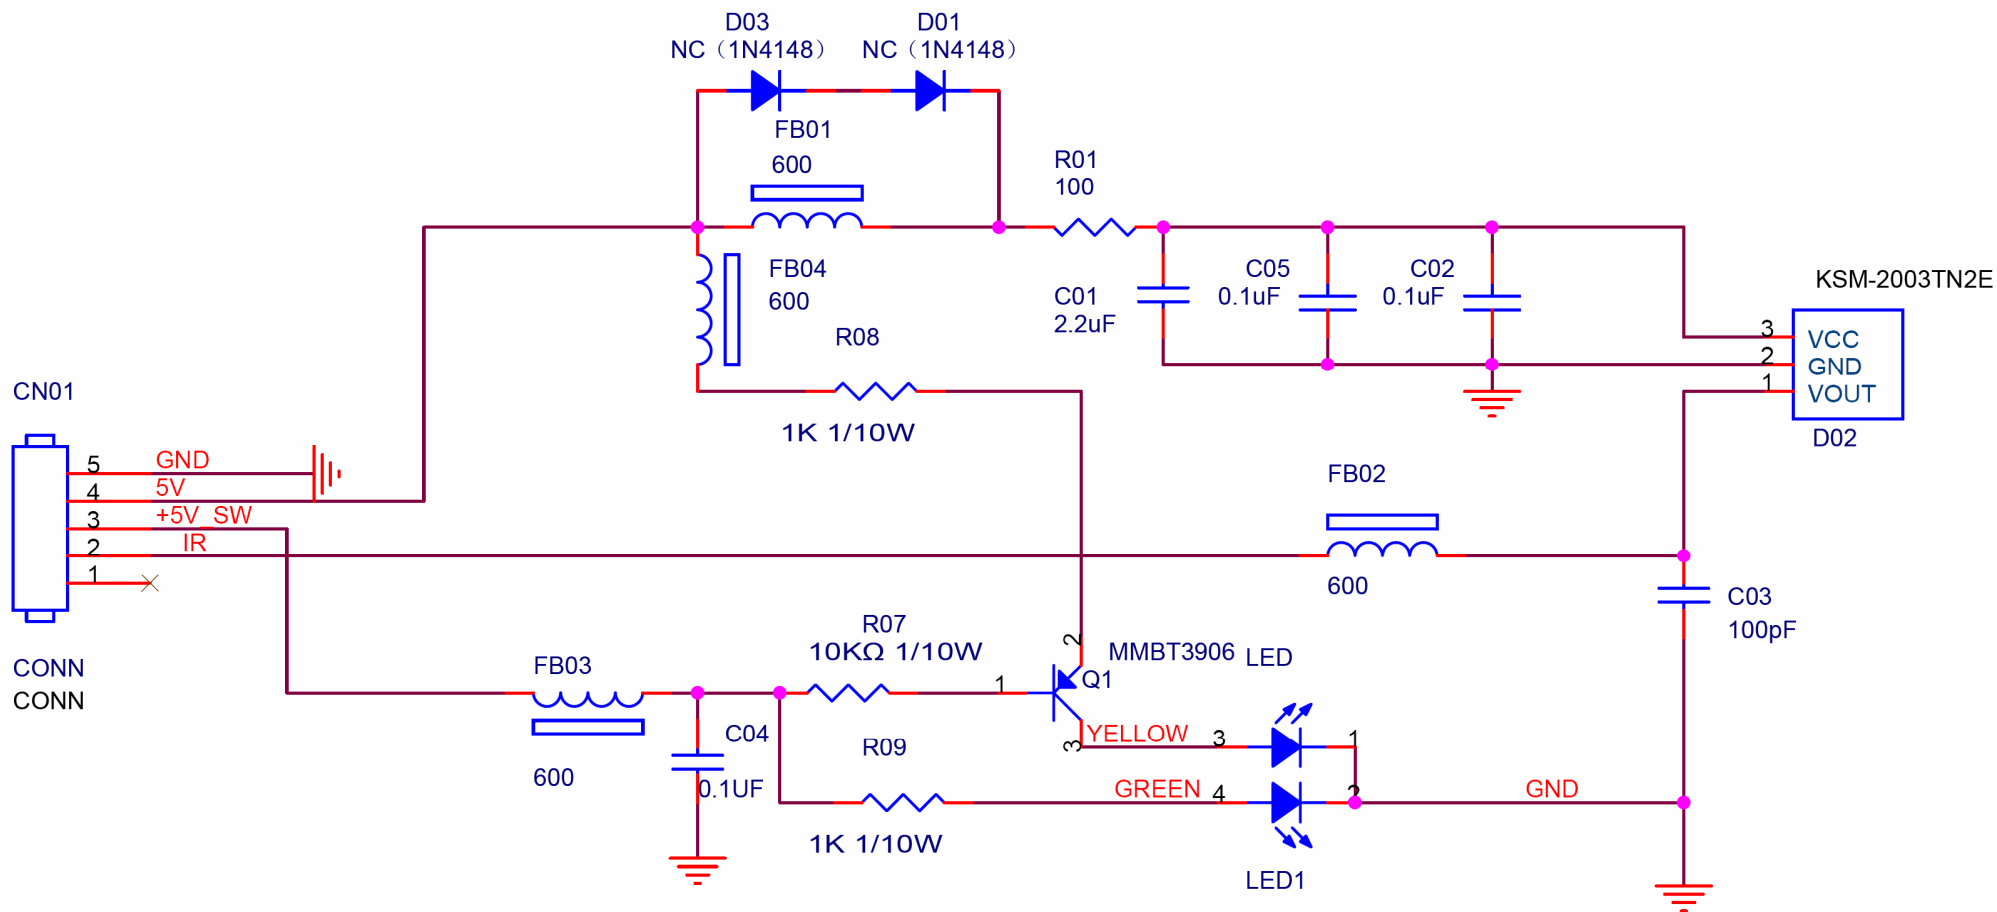

9. Exploded View

01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 X2 17 18 X3 19 20 21 22 23 24 X4 25 X2 26 X4 27 28 X2 29 X2 30 X4 31 X9 32 X1 33 X1 34 X2 35 X2 36 X5 37 X4 38 X2 39 X4 40 X3

Screw for reference

Item	P/N	Description	Qt'y	Item	P/N	Description	Qt'y
01		BEZEL	1	31	MIT1730-6-120	SCREW<MAIN BOARD/MAINFRAME>	9
02		PANEL	1	32	MIT140-6-120	SCREW<POWER BOARD/MAINFRAME>	1
03		MAIN FRAME	1	33	DIT930-6-120	SCREW<SHIELD/ID BKT>	6
04		SHIELD	1	34	DIT930-6-120	SCREW<SHIELD/ID MAINFRAME>	2
05		ID-BRACKET	1	35	DIT930-6-120	SCREW<ID BKT/MAINFRAME>	2
06		BACK COVER	1	36	QIT930-12-47	SCREW<REAR COVER/BEZEL>	5
07		STAND-BRACKET	1	37	QIT940-12-47	SCREW<REAR COVER/BEZEL>	4
08		ATAND	1	38	DIT930-6-120	SCREW<STAND/STAND BKT>	2
09		BASE	1	39	DIT130-6-120	SCREW<BASE BKT/BASE>	4
10		BASE-BKT	1	40	IT6017-600	SCREW<BASE BKT/STAND BKT>	2
11		KEY-COVER	1	41	QIT930-8-120	SCREW<ID-BKT/ID IN BOARD>	2
12		KEY-PAD	1				
13		POWER-LENS	1				
14		IR-LENS	1				
15		BRACKET-SUPPORT	1				
16		BKT_VESA	2				
17		KENSINGTON LOCK	1				
18		RUBBER FOOT	9				
19		SPEAKER	1				
20		IR BOARD	1				
21		KEY BOARD	1				
22		POWER BOARD	1				
23		MAIN BOARD	1				
24	DIT1730-6-120	SCREW<Frame/Panel>	4	54			
25	QIT930-6-120	SCREW<IR BOARD/ BEZEL>	2	55			
26	QIT1840-12-120	SCREW<SPK/BEZEL>	8	56			
27	QIT930-8-120	SCREW<KEY BOARD/KEY COVER>	3	57			
28	QIT940-12-120	SCREW<SUPPORT BKT/BEZEL>	4	58			
29	MIT140-8-120	SCREW<SUPPORT BKT/MAINFRAME>	2	59			
30	MIT1730-6-120	SCREW<POWER BOARD/MAINFRAME>	4	60			

10. BOM List

E197V1NMNWSDDN

Location	Part No.	Description
	040T 581 26704	SHIPPING LABEL
	041T 68508 A	CONTROL CARD
	044T6002716 6A	PAPER BOARD
	045T 77 3	PE PACKING
	049T 51 1A	ERADICATOR
	052T 1150 C	BLACK TAPE
	052T 1186	SMALL TAPE
	052T 1211 B	ADHESIVE TYPE
	052T6025 15125	MYLAR
	052T6025 15211	MYLAR
	078T 476500 Y	SPK 8OHM 5W 96X41X33.5MM 25MM SUNLINK
	089T 17356C553	AUDIO CABLE
	089T 725GAA DB	D-SUB
	089T410A15N IS	POWER CORD
	092TB1JX1A21GM	BATTERY LR06 XINLI
	095T8014 2X555	WIRE HARNESS 2P(PLUG) 360MM
	095T8014 3X574	WIRE HARNESS 3P(PLUG) 330MM
	095T8014 7X536	WIRE HARNESS 7P-3P+5P 500MM
	095T8018 3X638	LVDS CABLE
	098TRABD6NTACF	REMOTE CONTROL FOR CITA
	0M1T 330 4120	SCREW 42A9930008
	0M1T 330 4120	SCREW 42A9930008
	0M1T 330 4120	SCREW 42A9930008
	0M1T 330 4120	SCREW 42A9930008
	0M1T 330 4120	SCREW 42A9930008
	0M1T 330 6120	SCREW 42A9930014
	0M1T 960 10120	SCREW
	0M1T1140 6120	SCREW 4*6MM
	0M1T1730 6120	SCREW 3*6MM
	0M1T1730 6120	SCREW 3*6MM
	0M1T1730 6120	SCREW 3*6MM
	0Q1T 330 6120	SCREW 42A9930001
	0Q1T 330 8120	SCREW 3X8MM 42A9930017
	0Q1T 330 8120	SCREW 3X8MM 42A9930017
	0Q1T 330 10 47 CR3	SCREW
	0Q1T 340 14 47 CR3	SCREW
	0Q1T 930 6120	SCREW
	0Q1T1030 10120	SCREW
	0Q1T1040 8120	SCREW
	705TQ734020	STAND ASS'Y
	012T 394 3	RUBBER FOOT
	0M1T 330 6120	SCREW 42A9930014
	0Q1T 130 6120	SCREW (T3X6)
	Q15T0127 1	BKT_BASE
	Q34T0135 GM 1L 33	BASE S1
	Q34T0136 GM 1L	STAND
	Q37T0035 2	HINGE ASS'Y
	705TQ734447	REAR COVER ASS'Y
	044T3121510506	SPONGE
	044T3121510513	SPONGE

	044T3121510515	SPONGE
	A15T0028 1	BACKET
	Q34T0129 GM 1LB030	REAR COVER 19
	Q36T 600 30 9	HIMERON
	Q44T3121510522	SPONGE
	705TQ834128	BEZEL ASS'Y
	036T 600 18118	NONWOVEN FABRTC
	0Q1T 330 6120	SCREW 42A9930001
	A33T0142 ED 1C	IR LENS
	Q33T0097 GMB1L 30	COVER_FUNC
	Q33T0098 PO 1L	BUTTON_FUNC
	Q33T0111 1 1C	POWER LENS
	Q34T0256 GMA1L0130	BEZEL TV19W-7AS1
	750TVD902TB11N	PANEL SVA190WX02TB A SH SVA
	CBPF7X4CQ4	MAIN BOARD T2509-2-X-X-12-080326
CN700	033T3278 10 K9 X	CONNECTOR
CN601	033T3802 2B YH	CONN.2P 2.0 DIP
CN602	033T3802 3B YH	CONN.3P 2.0 DIP
CN401	033T3802 7B Y	CONNECTOR 7PIN
CN402	033T8027 24	CONN W TO B 12P*2 P*2.0 4504-2
	040T 45762412B	CBPC LABEL
R713	061T153M220 59	RST MOFR 22 OHM +-5% 3WS
R711	061T153M390 59	39 OHM 5% 3W
C602	067T 305102 4	105C 1000UF +-20% 25V
L702	073T 253137 ER	CHOKE COIL BY EROCORE SCB-03
L703	073T 253137 ER	CHOKE COIL BY EROCORE SCB-03
CN703	088G 30211K	PHONE JACK 5PIN
CN105	088T 78 10 2C	RCA JACK
CN104	088T 78 13 5C	RCA JACK
CN102	088T 100 6 C	4PIN MINI DIN JACK
P101	088T 30214K	PHONE JACK
CN704	088T 35315F H	DB15 RIGHT ANGLE FEMALE
X400	093T 22 53	CRYSTAL 14.318MHZHC-49US
U101	094TNPALALL 2L	TUNER TCL M09WPP-2PNK-E
C114	067T 305100 3T	10UF 16V
C406	067T 305100 3T	10UF 16V
C433	067T 305100 3T	10UF 16V
C438	067T 305100 3T	10UF 16V
C624	067T 305101 3T	100UF 16V 105C
C625	067T 305101 3T	100UF 16V 105C
C767	067T 305101 3T	100UF 16V 105C
C791	067T 305101 3T	100UF 16V 105C
C731	067T 305470 3T	EC 105℃ 47UF M 16V
C719	067T 305470 3T	EC 105℃ 47UF M 16V
C716	067T 305470 3T	EC 105℃ 47UF M 16V
C713	067T 305470 3T	EC 105℃ 47UF M 16V
C701	067T 305470 3T	EC 105℃ 47UF M 16V
C615	067T 305470 3T	EC 105℃ 47UF M 16V
C612	067T 305470 3T	EC 105℃ 47UF M 16V
C400	067T 305470 3T	EC 105℃ 47UF M 16V
C135	067T 305470 3T	EC 105℃ 47UF M 16V
C720	067T 305471 3T	105 摄氏度 470UF +-20% 16V
C761	067T 305471 3T	105 摄氏度 470UF +-20% 16V
C762	067T 305471 3T	105 摄氏度 470UF +-20% 16V

C705	067T 305471 3T	105 摄氏度 470UF +-20% 16V
C711	067T 305471 3T	105 摄氏度 470UF +-20% 16V
C700	067T 305471 3T	105 摄氏度 470UF +-20% 16V
C434	067T 305471 3T	105 摄氏度 470UF +-20% 16V
	040T 457624 1B	CPU LABEL
U601	056T 192900	IC TL062CD SO-8
U600	056T 535 3	IC TDA7266D13TR
U400	056T 562537	IC A9001 MSTAR
U702	056T 563 7	AIC1084-33PM TO-263 AIC
U701	056T 563510	IC MP2106DK MSOP-10 MPS
U703	056T 585 11	AZ1117D-5.0-E1
U105	056T1133 34	M24C02-WMN6TP
U500	056T1133 34	M24C02-WMN6TP
U403	056T1133524 AT	IC AT24C04N-10SU-2.7 4K EEPROM/SO-8
U401	056T1133526CI4	IC MX25L4005AMC-12G SOP-8
U402	056T113353A	M24C32-WMN6TP
Q401	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q500	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q600	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q601	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q701	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q702	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q703	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q705	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q707	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q708	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q709	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q713	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q400	057T 417 6	PMBS3906/PHILIPS-SMT
Q710	057T 417 6	PMBS3906/PHILIPS-SMT
Q711	057T 417 6	PMBS3906/PHILIPS-SMT
Q704	057T 763 3	AO4411L SO-8 BY AOS SMT
Q700	057T 763 3	AO4411L SO-8 BY AOS SMT
RP401	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RP402	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RP403	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RP404	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RP405	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RP406	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RP407	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RP408	061T 125330 8	RST CHIP AR 8P4R 33 OHM +-5% 1/16W
RP400	061T 125472 8	RST CHIP AR 8P4R 4.7KOHM +-5% 1/16W
RP409	061T 125472 8	RST CHIP AR 8P4R 4.7KOHM +-5% 1/16W
RP410	061T 125472 8	RST CHIP AR 8P4R 4.7KOHM +-5% 1/16W
RP411	061T 125472 8	RST CHIP AR 8P4R 4.7KOHM +-5% 1/16W
R751	061T0603000	RST CHIPR 0 OHM +-5% 1/10W
R609	061T0603000	RST CHIPR 0 OHM +-5% 1/10W
R514	061T0603000	RST CHIPR 0 OHM +-5% 1/10W
R193	061T0603000	RST CHIPR 0 OHM +-5% 1/10W
L102	061T0603000	RST CHIPR 0 OHM +-5% 1/10W
R436	061T0603100	CHIP 10OHM 1/16W
R437	061T0603100	CHIP 10OHM 1/16W
R438	061T0603100	CHIP 10OHM 1/16W
R439	061T0603100	CHIP 10OHM 1/16W

R500	061T0603100	CHIP 100HM 1/16W
R501	061T0603100	CHIP 100HM 1/16W
R502	061T0603100	CHIP 100HM 1/16W
R503	061T0603100	CHIP 100HM 1/16W
R504	061T0603100	CHIP 100HM 1/16W
R505	061T0603100	CHIP 100HM 1/16W
R506	061T0603100	CHIP 100HM 1/16W
R507	061T0603100	CHIP 100HM 1/16W
R122	061T0603100	CHIP 100HM 1/16W
R123	061T0603100	CHIP 100HM 1/16W
R126	061T0603100	CHIP 100HM 1/16W
R143	061T0603100	CHIP 100HM 1/16W
R145	061T0603100	CHIP 100HM 1/16W
R147	061T0603100	CHIP 100HM 1/16W
R171	061T0603100	CHIP 100HM 1/16W
R172	061T0603100	CHIP 100HM 1/16W
R173	061T0603100	CHIP 100HM 1/16W
R188	061T0603100	CHIP 100HM 1/16W
R189	061T0603100	CHIP 100HM 1/16W
R424	061T0603100	CHIP 100HM 1/16W
R512	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R457	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R451	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R435	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R434	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R429	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R416	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R415	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R414	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R407	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R406	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R401	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R181	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R170	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R133	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R130	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R513	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R620	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R706	061T0603102	RST CHIPR 1KOHM +-5% 1/10W
R707	061T0603102	RST CHIPR 1KOHM +-5% 1/10W
R750	061T0603102	RST CHIPR 1KOHM +-5% 1/10W
R759	061T0603102	RST CHIPR 1KOHM +-5% 1/10W
R700	061T0603102	RST CHIPR 1KOHM +-5% 1/10W
R606	061T0603102	RST CHIPR 1KOHM +-5% 1/10W
R604	061T0603102	RST CHIPR 1KOHM +-5% 1/10W
R515	061T0603102	RST CHIPR 1KOHM +-5% 1/10W
R508	061T0603102	RST CHIPR 1KOHM +-5% 1/10W
R459	061T0603102	RST CHIPR 1KOHM +-5% 1/10W
R440	061T0603102	RST CHIPR 1KOHM +-5% 1/10W
R423	061T0603102	RST CHIPR 1KOHM +-5% 1/10W
R422	061T0603102	RST CHIPR 1KOHM +-5% 1/10W
R183	061T0603102	RST CHIPR 1KOHM +-5% 1/10W
R182	061T0603102	RST CHIPR 1KOHM +-5% 1/10W
R448	061T0603103	RST CHIPR 10KOHM +-5% 1/10W

R447	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R443	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R411	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R410	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R409	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R400	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R194	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R191	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R184	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R165	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R163	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R140	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R139	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R756	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R755	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R752	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R746	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R745	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R717	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R702	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R701	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R617	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R613	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R610	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R607	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R605	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R601	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R602	061T0603104	RST CHIPR 100KOHM +-5% 1/10W
R715	061T0603104	RST CHIPR 100KOHM +-5% 1/10W
R413	061T0603105	RST CHIPR 1MOHM +-5% 1/10W
R718	061T0603113 2F	RST CHIPR 11.3 KOHM +-1% 1/10W
R195	061T0603123	RST CHIPR 12 KOHM +-5% 1/10W
R192	061T0603123	RST CHIPR 12 KOHM +-5% 1/10W
R166	061T0603123	RST CHIPR 12 KOHM +-5% 1/10W
R164	061T0603123	RST CHIPR 12 KOHM +-5% 1/10W
R142	061T0603123	RST CHIPR 12 KOHM +-5% 1/10W
R141	061T0603123	RST CHIPR 12 KOHM +-5% 1/10W
R132	061T0603222	CHIP 2.2K OHM 1/16W
R403	061T0603223	CHIP 22KOHM 1/16W
R412	061T0603223	CHIP 22KOHM 1/16W
R719	061T0603223	CHIP 22KOHM 1/16W
R720	061T0603223	CHIP 22KOHM 1/16W
R748	061T0603302	CHIP 3K OHM 5% 1/16
R174	061T0603331	RST CHIPR 330 OHM +-5% 1/10W
R618	061T0603333	RST CHIPR 33 KOHM +-5% 1/10W
R619	061T0603333	RST CHIPR 33 KOHM +-5% 1/10W
R621	061T0603333	RST CHIPR 33 KOHM +-5% 1/10W
R622	061T0603333	RST CHIPR 33 KOHM +-5% 1/10W
R421	061T0603391	RST CHIPR 390 OHM +-5% 1/10W
R129	061T0603470	RST CHIPR 47 OHM +-5% 1/10W
R149	061T0603470	RST CHIPR 47 OHM +-5% 1/10W
R427	061T0603470	RST CHIPR 47 OHM +-5% 1/10W
R180	061T0603470	RST CHIPR 47 OHM +-5% 1/10W
R179	061T0603470	RST CHIPR 47 OHM +-5% 1/10W

R178	061T0603470	RST CHIPR 47 OHM +-5% 1/10W
R162	061T0603470	RST CHIPR 47 OHM +-5% 1/10W
R161	061T0603470	RST CHIPR 47 OHM +-5% 1/10W
R159	061T0603470	RST CHIPR 47 OHM +-5% 1/10W
R154	061T0603470	RST CHIPR 47 OHM +-5% 1/10W
R153	061T0603470	RST CHIPR 47 OHM +-5% 1/10W
R152	061T0603470	RST CHIPR 47 OHM +-5% 1/10W
R151	061T0603471	RST CHIPR 470OHM +-5% 1/10W
R185	061T0603472	CHIP 4.7KOHM 1/16W
R186	061T0603472	CHIP 4.7KOHM 1/16W
R509	061T0603472	CHIP 4.7KOHM 1/16W
R510	061T0603472	CHIP 4.7KOHM 1/16W
R703	061T0603472	CHIP 4.7KOHM 1/16W
R762	061T0603472	CHIP 4.7KOHM 1/16W
R754	061T0603472	CHIP 4.7KOHM 1/16W
R714	061T0603472	CHIP 4.7KOHM 1/16W
R712	061T0603472	CHIP 4.7KOHM 1/16W
R710	061T0603472	CHIP 4.7KOHM 1/16W
R709	061T0603472	CHIP 4.7KOHM 1/16W
R420	061T0603472	CHIP 4.7KOHM 1/16W
R417	061T0603472	CHIP 4.7KOHM 1/16W
R187	061T0603472	CHIP 4.7KOHM 1/16W
R456	061T0603472	CHIP 4.7KOHM 1/16W
R708	061T0603472	CHIP 4.7KOHM 1/16W
R705	061T0603472	CHIP 4.7KOHM 1/16W
R704	061T0603472	CHIP 4.7KOHM 1/16W
R600	061T0603473	CHIP 47KOHM 1/16W
R608	061T0603473	CHIP 47KOHM 1/16W
R744	061T0603473	CHIP 47KOHM 1/16W
R716	061T0603682	RST CHIPR 6.8KOHM +-5% 1/10W
R128	061T0603750	RST CHIPR 75 OHM +-5% 1/10W
R144	061T0603750	RST CHIPR 75 OHM +-5% 1/10W
R146	061T0603750	RST CHIPR 75 OHM +-5% 1/10W
R148	061T0603750	RST CHIPR 75 OHM +-5% 1/10W
R155	061T0603750	RST CHIPR 75 OHM +-5% 1/10W
R156	061T0603750	RST CHIPR 75 OHM +-5% 1/10W
R157	061T0603750	RST CHIPR 75 OHM +-5% 1/10W
R175	061T0603750	RST CHIPR 75 OHM +-5% 1/10W
R176	061T0603750	RST CHIPR 75 OHM +-5% 1/10W
R177	061T0603750	RST CHIPR 75 OHM +-5% 1/10W
R747	061T0603750	RST CHIPR 75 OHM +-5% 1/10W
R749	061T0603750	RST CHIPR 75 OHM +-5% 1/10W
R763	061T0603752	RST CHIPR 7.5 KOHM +-5% 1/10W
R418	061T0603822	RST CHIPR 8.2 KOHM +-5% 1/10W
R419	061T0603822	RST CHIPR 8.2 KOHM +-5% 1/10W
C405	065T0402101 32	100PF +-10% 50V X7R
C412	065T0402101 32	100PF +-10% 50V X7R
C413	065T0402101 32	100PF +-10% 50V X7R
C414	065T0402101 32	100PF +-10% 50V X7R
C613	065T0402101 32	100PF +-10% 50V X7R
C616	065T0402101 32	100PF +-10% 50V X7R
C167	065T0402102 32	1000PF +-10% 50V X7R
C402	065T0402103 32	MLCC 0402 10NF K 50V X7R
C407	065T0402103 32	MLCC 0402 10NF K 50V X7R

C417	065T0402103 32	MLCC 0402 10NF K 50V X7R
C418	065T0402103 32	MLCC 0402 10NF K 50V X7R
C419	065T0402103 32	MLCC 0402 10NF K 50V X7R
C421	065T0402103 32	MLCC 0402 10NF K 50V X7R
C422	065T0402103 32	MLCC 0402 10NF K 50V X7R
C423	065T0402103 32	MLCC 0402 10NF K 50V X7R
C606	065T0402103 32	MLCC 0402 10NF K 50V X7R
C608	065T0402103 32	MLCC 0402 10NF K 50V X7R
C722	065T0402103 32	MLCC 0402 10NF K 50V X7R
C758	065T0402103 32	MLCC 0402 10NF K 50V X7R
C759	065T0402103 32	MLCC 0402 10NF K 50V X7R
C136	065T0402104 12	CAP CHIP 0402 0.1UF 16V X7R
C501	065T0402104 12	CAP CHIP 0402 0.1UF 16V X7R
C502	065T0402104 12	CAP CHIP 0402 0.1UF 16V X7R
C503	065T0402104 12	CAP CHIP 0402 0.1UF 16V X7R
C504	065T0402104 12	CAP CHIP 0402 0.1UF 16V X7R
C505	065T0402104 12	CAP CHIP 0402 0.1UF 16V X7R
C506	065T0402104 12	CAP CHIP 0402 0.1UF 16V X7R
C507	065T0402104 12	CAP CHIP 0402 0.1UF 16V X7R
C508	065T0402104 12	CAP CHIP 0402 0.1UF 16V X7R
C763	065T0402104 12	CAP CHIP 0402 0.1UF 16V X7R
C764	065T0402104 12	CAP CHIP 0402 0.1UF 16V X7R
C766	065T0402104 12	CAP CHIP 0402 0.1UF 16V X7R
C768	065T0402104 12	CAP CHIP 0402 0.1UF 16V X7R
C714	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C712	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C707	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C706	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C704	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C703	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C702	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C610	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C601	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C439	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C436	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C435	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C432	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C425	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C424	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C416	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C415	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C740	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C739	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C738	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C737	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C736	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C735	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C734	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C733	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C732	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C730	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C727	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C725	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C724	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN

C723	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C721	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C717	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C715	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C411	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C741	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C743	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C744	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C746	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C747	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C749	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C750	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C751	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C752	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C753	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C754	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C755	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C757	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C410	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C409	065T040210427T	CAP 0402 0.1UF Z 25V Y5V TAIYO YUDEN
C609	065T0402105 A5	MLCC 0402 1UF K 10V X5R
C118	065T0402220 31	CHIP 22PF 50V NPO
C117	065T0402220 31	CHIP 22PF 50V NPO
C408	065T0402330 31	33PF +-50% 50V NPO
C404	065T0402330 31	33PF +-50% 50V NPO
C760	065T0402332 32	CHIP 3300PF 50V X7R
C158	065T0402473 12	MLCC 0402 47NF K 16V X7R
C159	065T0402473 12	MLCC 0402 47NF K 16V X7R
C164	065T0402473 12	MLCC 0402 47NF K 16V X7R
C165	065T0402473 12	MLCC 0402 47NF K 16V X7R
C166	065T0402473 12	MLCC 0402 47NF K 16V X7R
C168	065T0402473 12	MLCC 0402 47NF K 16V X7R
C169	065T0402473 12	MLCC 0402 47NF K 16V X7R
C170	065T0402473 12	MLCC 0402 47NF K 16V X7R
C443	065T0402473 12	MLCC 0402 47NF K 16V X7R
C157	065T0402473 12	MLCC 0402 47NF K 16V X7R
C153	065T0402473 12	MLCC 0402 47NF K 16V X7R
C151	065T0402473 12	MLCC 0402 47NF K 16V X7R
C152	065T0402473 12	MLCC 0402 47NF K 16V X7R
C603	065T0603104 32	CHIP 0.1UF 50V X7R
C115	065T0603104 32	CHIP 0.1UF 50V X7R
C604	065T0603104 32	CHIP 0.1UF 50V X7R
C617	065T0603104 32	CHIP 0.1UF 50V X7R
C618	065T0603104 32	CHIP 0.1UF 50V X7R
C619	065T0603104 32	CHIP 0.1UF 50V X7R
C620	065T0603104 32	CHIP 0.1UF 50V X7R
C607	065T0603105 12	CHIP 1UF 16V X7R
C605	065T0603105 12	CHIP 1UF 16V X7R
C426	065T0603225 17	CHIP 2.2UF 16V Y5V
C427	065T0603225 17	CHIP 2.2UF 16V Y5V
C428	065T0603225 17	CHIP 2.2UF 16V Y5V
C429	065T0603225 17	CHIP 2.2UF 16V Y5V
C430	065T0603225 17	CHIP 2.2UF 16V Y5V
C431	065T0603225 17	CHIP 2.2UF 16V Y5V

C437	065T0603225 17	CHIP 2.2UF 16V Y5V
C611	065T0603225 17	CHIP 2.2UF 16V Y5V
C792	065T0603225 17	CHIP 2.2UF 16V Y5V
C756	065T0603225 17	CHIP 2.2UF 16V Y5V
C748	065T0603225 17	CHIP 2.2UF 16V Y5V
C745	065T0603225 17	CHIP 2.2UF 16V Y5V
C742	065T0603225 17	CHIP 2.2UF 16V Y5V
C729	065T0603225 17	CHIP 2.2UF 16V Y5V
C728	065T0603225 17	CHIP 2.2UF 16V Y5V
C726	065T0603225 17	CHIP 2.2UF 16V Y5V
C718	065T0603225 17	CHIP 2.2UF 16V Y5V
C708	065T0603225 17	CHIP 2.2UF 16V Y5V
C614	065T0603225 17	CHIP 2.2UF 16V Y5V
C145	065T0603561 31	CHIP 560PF 50V NPO
C146	065T0603561 31	CHIP 560PF 50V NPO
C160	065T0603561 31	CHIP 560PF 50V NPO
C163	065T0603561 31	CHIP 560PF 50V NPO
C174	065T0603561 31	CHIP 560PF 50V NPO
C175	065T0603561 31	CHIP 560PF 50V NPO
C147	065T0603681 31	CHIP 680PF 50V NPO
C148	065T0603681 31	CHIP 680PF 50V NPO
C149	065T0603681 31	CHIP 680PF 50V NPO
C150	065T0805105 17	CHIP 1UF 16V Y5V
C600	065T0805106 15	CHIP 10UF 16V X5R 0805
C765	065T0805225 17	CHIP 2.2UF 16V Y5V
C500	065T0805225 17	CHIP 2.2UF 16V Y5V
C444	065T0805225 17	CHIP 2.2UF 16V Y5V
C440	065T0805225 17	CHIP 2.2UF 16V Y5V
U403	070GHDCP500HDC	HDCP CODE
FB102	071T 57G301 EA	CHIP BEAD
FB103	071T 57G301 EA	CHIP BEAD
FB713	071T 57G301 EA	CHIP BEAD
FB712	071T 57G301 EA	CHIP BEAD
FB711	071T 57G301 EA	CHIP BEAD
FB710	071T 57G301 EA	CHIP BEAD
FB709	071T 57G301 EA	CHIP BEAD
FB708	071T 57G301 EA	CHIP BEAD
FB707	071T 57G301 EA	CHIP BEAD
FB706	071T 57G301 EA	CHIP BEAD
FB705	071T 57G301 EA	CHIP BEAD
FB703	071T 57G301 EA	CHIP BEAD
FB601	071T 57G301 EA	CHIP BEAD
FB600	071T 57G301 EA	CHIP BEAD
L701	073T253S 12 S	SMD CHOKE 4.7UH +-20%
CN500	088T 340 19CHA	HDMI HEADER 19P 0471518121
D508	093T 60230	BAT54C BY MCC
D108	093T 60230	BAT54C BY MCC
D700	093T 60264	B340A D0-214AC
ZD102	093T 64 37 N	V-PORT-0603-100K V05
ZD103	093T 64 37 N	V-PORT-0603-100K V05
ZD104	093T 64 37 N	V-PORT-0603-100K V05
ZD105	093T 64 37 N	V-PORT-0603-100K V05
ZD106	093T 64 37 N	V-PORT-0603-100K V05
ZD107	093T 64 37 N	V-PORT-0603-100K V05

ZD108	093T 64 37 N	V-PORT-0603-100K V05
ZD109	093T 64 37 N	V-PORT-0603-100K V05
ZD110	093T 64 37 N	V-PORT-0603-100K V05
ZD117	093T 64 37 N	V-PORT-0603-100K V05
ZD120	093T 64 37 N	V-PORT-0603-100K V05
ZD121	093T 64 37 N	V-PORT-0603-100K V05
D501	093T 6433S	DIODE BAV99 SEMTECH
D500	093T 6433S	DIODE BAV99 SEMTECH
D504	093T 6433S	DIODE BAV99 SEMTECH
D505	093T 6433S	DIODE BAV99 SEMTECH
D502	093T 6433S	DIODE BAV99 SEMTECH
D503	093T 6433S	DIODE BAV99 SEMTECH
D507	093T 6433S	DIODE BAV99 SEMTECH
D506	093T 6433S	DIODE BAV99 SEMTECH
D111	093T 6433S	DIODE BAV99 SEMTECH
D112	093T 6433S	DIODE BAV99 SEMTECH
D113	093T 6433S	DIODE BAV99 SEMTECH
D400	093T 6433S	DIODE BAV99 SEMTECH
ZD122	093T 39S 34 T	UDZSNP5.6B ROHM
ZD123	093T 39S 34 T	UDZSNP5.6B ROHM
ZD119	093T 39S 34 T	UDZSNP5.6B ROHM
ZD118	093T 39S 34 T	UDZSNP5.6B ROHM
ZD116	093T 39S 34 T	UDZSNP5.6B ROHM
ZD115	093T 39S 34 T	UDZSNP5.6B ROHM
ZD500	093T 39S 34 T	UDZSNP5.6B ROHM
ZD501	093T 39S 34 T	UDZSNP5.6B ROHM
	715T2509 2	MAIN BOARD PCB
	Q85T 583162	GASKET_ALUMINIUM FOIL
	Q90T8009 1 1A	HEAT SINK
	IRPF7Y2	IR BOARD T2499-1-X-X-1-080228
CN01	033T3802 5	AUDIO IN
D02	056T 627 14 1	IC KSM-2003TN2E 37.9KHZ
Q1	057T 417 6	PMBS3906/PHILIPS-SMT
R01	061T0603101	RST CHIPR 100 OHM +-5% 1/10W
R07	061T0603103	RST CHIPR 10KOHM +-5% 1/10W
R09	061T0603331	RST CHIPR 330 OHM +-5% 1/10W
R08	061T0603331	RST CHIPR 330 OHM +-5% 1/10W
C03	065T0603101 31	CHIP 100PF 50V NPO
C05	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C04	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C02	065T0603104 12	MLCC 0603 0.1UF K 16V X7R
C01	065T0805225 27	MLCC 0805 CAP 2.2UF Z 25V Y5V
FB04	071T 56Z601	CHIP BEAD 600 OHM
FB03	071T 56Z601	CHIP BEAD 600 OHM
FB02	071T 56Z601	CHIP BEAD 600 OHM
FB01	071T 56Z601	CHIP BEAD 600 OHM
LED1	081T 14501 KT GP	LED KL-121SYSGC-5MA
	715T2499 1	IR BOARD PCB
	KEPF7Y2	KEY BOARD T2501-B-X-X-1-070110
CN01	033T3802 3H	WAFER 3P RIGHT ANGLE
SW04	077T 600 4 HJ	TACT SW TSPB-1L
SW03	077T 600 4 HJ	TACT SW TSPB-1L
SW02	077T 600 4 HJ	TACT SW TSPB-1L
SW01	077T 600 4 HJ	TACT SW TSPB-1L

SW06	077T 600 4 HJ	TACT SW TSPB-1L
SW05	077T 600 4 HJ	TACT SW TSPB-1L
SW07	077T 600 4 HJ	TACT SW TSPB-1L
R02	061T0603100 1F	RST CHIPR 1 KOHM +-1% 1/10W
R05	061T0603100 1F	RST CHIPR 1 KOHM +-1% 1/10W
R03	061T0603150 1F	RST CHIPR 1.5 KOHM +-1% 1/10W
R06	061T0603150 1F	RST CHIPR 1.5 KOHM +-1% 1/10W
R07	061T0603180 1F	RST CHIPR 1.8 KOHM +-1% 1/10W
ZD01	093T 39S 34 T	UDZSNP5.6B ROHM
ZD02	093T 39S 34 T	UDZSNP5.6B ROHM
	715T2501 1	KEY BOARD PCB
	PWTV1942FQA2P	POWER BOARD T2476-1-X-X-2-071114
CN801	033T8021 2E U	WAFER
CN802	033T8021 2E U	WAFER
CN803	033T8021 2E U	WAFER
CN804	033T8021 2E U	WAFER
	040T 45762420A	S/N LABEL
	051T 6 4503	GLUE_RTV
IC902	056T 139 3A	IC PC123Y22FZ0F
NR901	061T 58080 WT	8 OHM NCT
R905	061T152M10464E	RST MOFR 100KOHM +-5% 2WS
R914	061T152M39864E	RST MOFR 0.39 OHM +-5% 2WS
C903	063T107K474 TS	CAP X2 0.47UF K 275VAC UTX
C816	065T 6J1206ET	12PF 5% SL 6KV TDK
C834	065T 6J1206ET	12PF 5% SL 6KV TDK
C825	065T 6J5096ET	5PF 5% SL 6KV TDK CC45SL3JD050CYHN
C826	065T 6J5096ET	5PF 5% SL 6KV TDK CC45SL3JD050CYHN
C915	065T306M1022BM	Y1.CAP.001UF 250VAC MURATA
C902	065T306M1022BM	Y1.CAP.001UF 250VAC MURATA
C901	065T306M1022BM	Y1.CAP.001UF 250VAC MURATA
C938	065T306M1022BM	Y1.CAP.001UF 250VAC MURATA
C935	067T215P1023PV	CAP 105℃ 1000UF M 16V
C912	067T215P1023PV	CAP 105℃ 1000UF M 16V
C936	067T215P1024PV	CAP 105℃ 1000UF M 25V
C904	067T215P1024PV	CAP 105℃ 1000UF M 25V
C811	067T215P4714PV	CAP 105℃ 470UF M 25V
C815	067T215P4714PV	CAP 105℃ 470UF M 25V
C911	067T215P4714PV	CAP 105℃ 470UF M 25V
C937	067T215P4714PV	CAP 105℃ 470UF M 25V
C905	067T215Y10115A	CAP 105℃ 100UF M 450V
L902	073L 174 26H1G	LINE FILTER
L903	073T 253 91 H	CHOKE COIL
L904	073T 253 91 H	CHOKE COIL
PT801	080GL19T 8 H1	XFMR FOR INVERTER DADON
PT802	080GL19T 8 H1	XFMR FOR INVERTER DADON
T901	080TL19T 17 N	X'FMR 610UH FOR POWER YUVA
CN901	087T 501 32 S	AC SOCKET
CN902	095T801310X613	WIRE HARNESS
	705T 19 57 06	Q903 ASS'Y
	051T 200 1	OIL FOR DISAPPEAR
Q903	057T 667 21	STP10NK70ZFP
	0M1T1730 8120	SCREW
	Q90T6064 1	HEAT SINK
	705T 19 93 09	D908 ASS'Y

	051T 200 1	OIL FOR DISAPPEAR
D908	093T 60522	DIODE MBR10150FCT PANJIT
	0M1T1730 8120	SCREW
	Q90T6241 2	HEAT SINK
	705T 19 93 10	D909 ASS'Y
	051T 200 1	OIL FOR DISAPPEAR
D909	093T 60257	SB1060FCT ITO-220AB BY PAN JIT
	0M1T1730 8120	SCREW
	Q90T0012 3	HEAT SINK
	705TQ793003	BD901 ASS'Y
BD901	093T 5046016A	T4KB80
IC901	056T 379 61	IC LD7575PS SOP-8 LEADTREND
IC801	056T 608 10	0Z9938GN
Q801	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q802	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q803	057T 417 4	CHIP PMBS3904 BY PHILIPS
Q809	057T 759 2	RK7002
Q807	057T 759 2	RK7002
Q804	057T 759 2	RK7002
Q805	057T 763 14	AM9945N-T1-PF
Q806	057T 763 14	AM9945N-T1-PF
R816	061T0805000	RST CHIPR 0 OHM +-5% 1/8W
R913	061T0805100 3F	RST CHIPR 100 KOHM +-1% 1/8W
R836	061T0805102	RST CHIPR 1KOHM +-5% 1/4W
R843	061T0805102	RST CHIPR 1KOHM +-5% 1/4W
R920	061T0805102	RST CHIPR 1KOHM +-5% 1/4W
R922	061T0805102	RST CHIPR 1KOHM +-5% 1/4W
R921	061T0805102	RST CHIPR 1KOHM +-5% 1/4W
R803	061T0805103	RST CHIPR 10 KOHM +-5% 1/8W
R806	061T0805103	RST CHIPR 10 KOHM +-5% 1/8W
R812	061T0805103	RST CHIPR 10 KOHM +-5% 1/8W
R815	061T0805104	RST CHIPR 100 KOHM +-5% 1/8W
R813	061T0805105	RST CHIPR 1 MOHM +-5% 1/8W
R846	061T0805105	RST CHIPR 1 MOHM +-5% 1/8W
R860	061T0805105	RST CHIPR 1 MOHM +-5% 1/8W
R848	061T0805105	RST CHIPR 1 MOHM +-5% 1/8W
R810	061T0805105	RST CHIPR 1 MOHM +-5% 1/8W
R926	061T0805202	RST CHIPR 2 KOHM +-5% 1/8W
R924	061T0805240 1F	RST CHIPR 2.4 KOHM +-1% 1/8W
R804	061T0805242	RST CHIPR 2.4 KOHM +-5% 1/8W
R802	061T0805304	RST CHIPR 300 KOHM +-5% 1/8W
R808	061T0805304	RST CHIPR 300 KOHM +-5% 1/8W
R923	061T0805330 2F	RST CHIPR 33 KOHM +-1% 1/8W
R817	061T0805348 2F	RST CHIPR 34.8 KOHM +-1% 1/8W
R925	061T0805360 1F	RST CHIPR 3.6 KOHM +-1% 1/8W
R826	061T0805361	RST CHIPR 360 OHM +-5% 1/8W
R841	061T0805430 0F	RST CHIPR 430 OHM +-1% 1/8W
R850	061T0805472	RST CHIPR 4.7 KOHM +-5% 1/8W
R853	061T0805472	RST CHIPR 4.7 KOHM +-5% 1/8W
R831	061T0805750 1F	RST CHIPR 7.5KOHM +-1% 1/8W
R827	061T0805750 1F	RST CHIPR 7.5KOHM +-1% 1/8W
R824	061T0805751	RST CHIPR 750 OHM +-5% 1/8W
R858	061T0805751	RST CHIPR 750 OHM +-5% 1/8W
R814	061T0805754	RST CHIPR 750KOHM +-5% 1/8W

R809	061T0805754	RST CHIPR 750KOHM +-5% 1/8W
R823	061T0805823	RST CHIPR 82 KOHM +-5% 1/8W
R830	061T0805823	RST CHIPR 82 KOHM +-5% 1/8W
R811	061T0805823	RST CHIPR 82 KOHM +-5% 1/8W
R825	061T1206000	RST CHIPR 0 OHM +-5% 1/4W
R936	061T1206101	RST CHIPR 100 OHM +-5% 1/4W
R937	061T1206101	RST CHIPR 100 OHM +-5% 1/4W
R906	061T1206101	RST CHIPR 100 OHM +-5% 1/4W
R916	061T1206101	RST CHIPR 100 OHM +-5% 1/4W
R934	061T1206101	RST CHIPR 100 OHM +-5% 1/4W
R935	061T1206101	RST CHIPR 100 OHM +-5% 1/4W
R911	061T1206102	RST CHIPR 1 KOHM +-5% 1/4W
R912	061T1206103	RST CHIPR 10 KOHM +-5% 1/4W
R927	061T1206103	RST CHIPR 10 KOHM +-5% 1/4W
R828	061T1206150	RST CHIPR 15 OHM +-5% 1/4W
R819	061T1206150	RST CHIPR 15 OHM +-5% 1/4W
R818	061T1206150	RST CHIPR 15 OHM +-5% 1/4W
R829	061T1206150	RST CHIPR 15 OHM +-5% 1/4W
R910	061T1206220	RST CHIPR 22 OHM +-5% 1/4W
R807	061T1206220	RST CHIPR 22 OHM +-5% 1/4W
R919	061T1206331	RST CHIPR 330 OHM +-5% 1/4W
R909	061T1206339	RST CHIPR 3.3 OHM +-5% 1/4W
R805	061T1206471	RST CHIPR 470 OHM +-5% 1/4W
R904	061T1206472	RST CHIPR 4.7 KOHM +-5% 1/4W
R931	061T1206472	RST CHIPR 4.7 KOHM +-5% 1/4W
R938	061T1206472	RST CHIPR 4.7 KOHM +-5% 1/4W
R837	061T1206519	RST CHIPR 5.1 OHM +-5% 1/4W
R842	061T1206519	RST CHIPR 5.1 OHM +-5% 1/4W
R901	061T1206684	RST CHIPR 680KOHM +-5% 1/4W
R902	061T1206684	RST CHIPR 680KOHM +-5% 1/4W
R903	061T1206684	RST CHIPR 680KOHM +-5% 1/4W
C805	065T0805102 31	1000PF 50V NPO
C803	065T0805104 22	0.1UF +-10% 25V X7R 0805
C919	065T0805104 32	CHIP 0.1UF 50V X7R
C918	065T0805104 32	CHIP 0.1UF 50V X7R
C917	065T0805104 32	CHIP 0.1UF 50V X7R
C916	065T0805104 32	CHIP 0.1UF 50V X7R
C844	065T0805104 32	CHIP 0.1UF 50V X7R
C842	065T0805104 32	CHIP 0.1UF 50V X7R
C838	065T0805104 32	CHIP 0.1UF 50V X7R
C829	065T0805104 32	CHIP 0.1UF 50V X7R
C828	065T0805104 32	CHIP 0.1UF 50V X7R
C801	065T0805104 32	CHIP 0.1UF 50V X7R
C840	065T0805105 22	CHIP 1UF 25V X7R 0805
C806	065T0805105 22	CHIP 1UF 25V X7R 0805
C804	065T0805105 22	CHIP 1UF 25V X7R 0805
C909	065T0805221 31	220PF 50V NPO
C814	065T0805224 22	CAIP CAP 0.22 UF 25V X7R
C910	065T0805471 31	CHIP 470PF 50V NPO
C831	065T0805471 31	CHIP 470PF 50V NPO
C820	065T0805471 31	CHIP 470PF 50V NPO
C819	065T0805473 32	CHIP 0.047UF 50V X7R
C809	065T0805473 32	CHIP 0.047UF 50V X7R
C810	065T080556131G	CAP CHIP 0805 560PF G 50V NPO

C827	065T0805682 32	CHIP 6.8NF 50V X7R 0805
C818	065T0805682 32	CHIP 6.8NF 50V X7R 0805
C848	065T1206102 72	CHIP 1000PF 500V X7R
C847	065T1206102 72	CHIP 1000PF 500V X7R
C846	065T1206102 72	CHIP 1000PF 500V X7R
C845	065T1206102 72	CHIP 1000PF 500V X7R
C932	065T1206102 72	CHIP 1000PF 500V X7R
C931	065T1206102 72	CHIP 1000PF 500V X7R
C823	065T1206102 72	CHIP 1000PF 500V X7R
C822	065T1206102 72	CHIP 1000PF 500V X7R
C813	065T1206102 72	CHIP 1000PF 500V X7R
C812	065T1206102 72	CHIP 1000PF 500V X7R
C807	065T1206103 32	MLCC 1206 CAP 10NF K 50V X7R
C908	065T1206104 32	CHIP 0.1UF 50V X7R 1206
D805	093T 64 33	BAV99 SOT-23
D804	093T 64 33	BAV99 SOT-23
D803	093T 64 33	BAV99 SOT-23
D802	093T 64 33	BAV99 SOT-23
D801	093T 64 33	BAV99 SOT-23
D806	093T 64 33	BAV99 SOT-23
D904	093T 6432S	IN4148W
D812	093T 6432S	IN4148W
D810	093T 6432S	IN4148W
D809	093T 6432S	IN4148W
ZD905	093T 39S 20 T	RLZ22B LLDS
ZD801	093T 39S 24 T	RLZ 5.6B LLDS
ZD902	093T 39S 24 T	RLZ 5.6B LLDS
ZD903	093T 39S 38 T	PTZ 9.1B
ZD901	093T 39S 40 T	RLZ 13B LLDS
ZD904	093T 39S 44 T	RLZ18B
CN901	006T 31500	EYELET(2.0) FOR ITEM CN901(AC SOCKET)
T901	006T 31502	EYELET(1.5) FOR T902*4,L906*2,C907*2
Q903	006T 31502	EYELET(1.5) FOR T902*4,L906*2,C907*2
PT802	006T 31502	EYELET(1.5) FOR T902*4,L906*2,C907*2
PT801	006T 31502	EYELET(1.5) FOR T902*4,L906*2,C907*2
L902	006T 31502	EYELET(1.5) FOR T902*4,L906*2,C907*2
C905	006T 31502	EYELET(1.5) FOR T902*4,L906*2,C907*2
IC903	056T 158 12	KIA431A-AT/P
R832	061T212Y625 KT	RST MGFR 6.2MOHM +-5% 1/2W
R822	061T212Y625 KT	RST MGFR 6.2MOHM +-5% 1/2W
C930	065T 2K152 1T6921	1.5NF/2KV Y5P +-10%
C906	067T215P2207PT	CAP 105℃ 22UF M 50V
FB901	071T 55 29	BEAD
F901	084T 55 7W	FUSE 3.15A 250V WICKMANN
D901	093T 6026T52T	FR107
D902	093T 6038T52T	FR103
J807	095T 90 23	JUMP WIRE
J806	095T 90 23	JUMP WIRE
J805	095T 90 23	JUMP WIRE
J804	095T 90 23	JUMP WIRE
J803	095T 90 23	JUMP WIRE
J802	095T 90 23	JUMP WIRE
J812	095T 90 23	JUMP WIRE
J801	095T 90 23	JUMP WIRE

J811	095T 90 23	JUMP WIRE
J810	095T 90 23	JUMP WIRE
J813	095T 90 23	JUMP WIRE
J911	095T 90 23	JUMP WIRE
J910	095T 90 23	JUMP WIRE
J907	095T 90 23	JUMP WIRE
J909	095T 90 23	JUMP WIRE
J906	095T 90 23	JUMP WIRE
J905	095T 90 23	JUMP WIRE
J904	095T 90 23	JUMP WIRE
J903	095T 90 23	JUMP WIRE
J902	095T 90 23	JUMP WIRE
J901	095T 90 23	JUMP WIRE
J809	095T 90 23	JUMP WIRE
J808	095T 90 23	JUMP WIRE
	715T2476 1	POWER BOARD PCB
	Q07T 7 T156	COMPOUND PALLET
	Q07T 7 T157	COMPOUND PALLET
	Q15T0116 3	BKT_IO
	Q15T0117 2	BKT-STAND-SUPPORT
	Q15T0241 6	MAIN FRAME
	Q15T6357 1	BKT FOR AC AND POWER SW
	Q40T 19261519A	RATING LABEL
	Q40T0001624 4A	PALLET LABEL
	Q40T000262443A	I/O LABEL
	Q44T3121510522	SPONGE
	Q44T9003214	CORNER PAPER
	Q44T9061 1	EPS
	Q44T9061 2	EPS
	Q44T906161512A	19 TV CARTON
	Q45T 76 28 RN R	PE BAG
	Q45T 88609 22 R	EPE COVER
	Q45T 88609 28 R	EPE COVER FOR BASE
	Q52T 1185 66	AOC TAPE
	Q52T 1211811	ALUMINUM FOIL TAPE
	Q52T6025 15193	MYLAR
	Q85T 583142	FOAM_ELECTRIC
	Q85T0039 1	MAIN SHIELD
	Q41T900361527A	MANUAL
	Q45T 76 28NV2 R	PE BAG FOR CLAMP
	040T 58162435A	LABEL
	Q26T 800504 2	BARCODE

11. Different Parts List

Diversity of E19731NMNWSXNN compared with E197V1NMNWSXNN		
Location	Part No.	Description
	705TQ834306	BEZEL ASS'Y
	750TVV902TB11N	PANEL TPM190A1(WX02TB) A2 FQ TPV
	Q15T0241 8	MAIN FRAME
	045T 76 28 C	PE BAG FOR MANUAL
	Q41T900361535A	MANUAL