
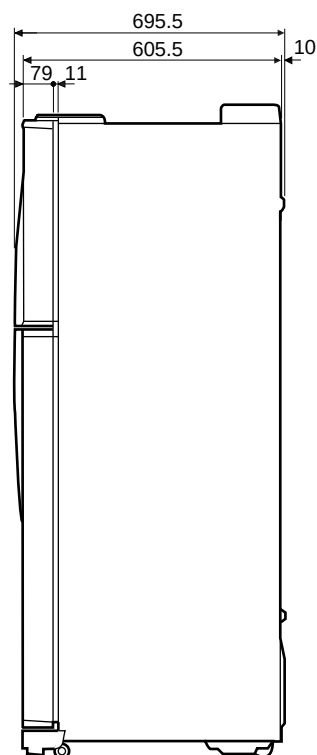
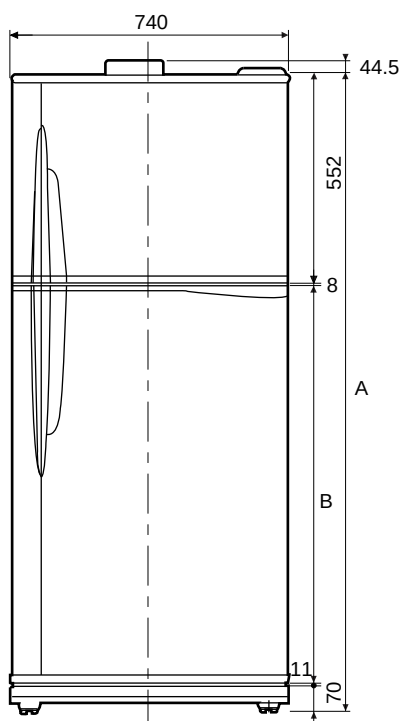


5. Function & Operating Instruction

5-1 Product Dimension

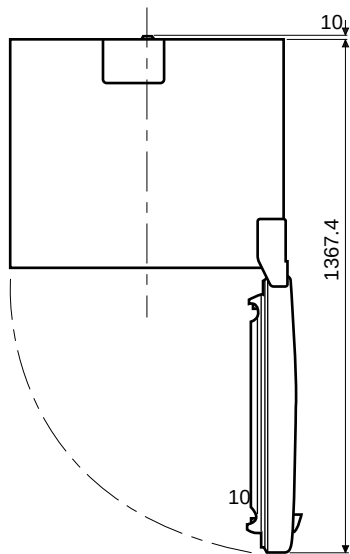


MODEL	A	B	Remark
SR(G)-V52, 519MV, 519LV	1703.5	1062.5	
SR(G)-V57, 569MV, 569LV	1791.5	1150.5	

5-2 Identifying and disassembling the parts


To remove shelves in the freezer compartment

- First remove the icemaking molds. Tilt the shell up at front, then lift it up pull it out of the tracks.

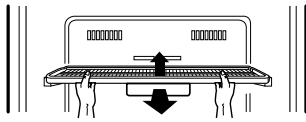


To remove bio deodorizer

- While pushing the front end knob of the bio deodorizer, pull it downward to disengage.

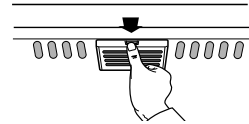

To remove shelves in the fresh food compartment



- Hold the shelf by the front and pull it forward out of the rack.

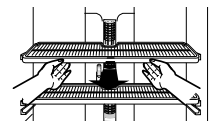


To remove shelves in the super fresh compartment

- Lift up the cover, push the cover to the right (as shown) until the mounting hook (①) disengages, then disengage the other mounting hook (②) and pull out the cover.
- Pull the shelf forward until it stops, then lift it up and pull it out.


Procedure of disassemble

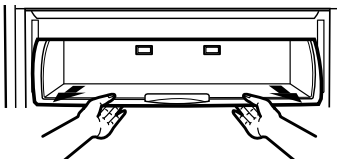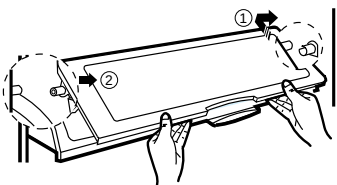

Procedure of assemble

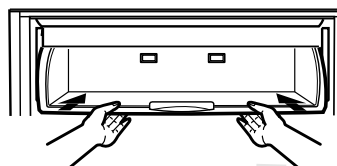


- With shelf front raised slightly, engage the roller between the rails and slide it back.
- To replace the cover, first engage the mounting hook (①) as shown, then engage the other hook (②) and push in.

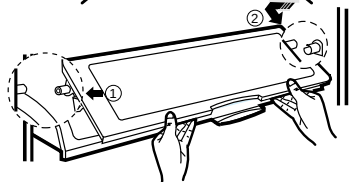


To remove door bins

- While pushing the bin to the left, lift it up to disengage.

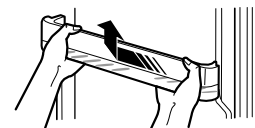

To remove storage drawers and covers

- Lift up to remove the cover. Pull the drawer half way out, then lifting it up, pull it out completely.

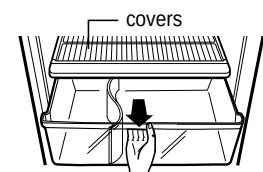

5-3 Circuit diagram of the circulation of coolant gas

COMPRESSOR → SUB CONDENSER → CLUSTER PIPE → HOT PIPE → DRYER → CAPILLARY TUBE
→ R-EVAPORATOR → ACCUMULATOR → SUCTION PIPE → COMPRESSOR

