
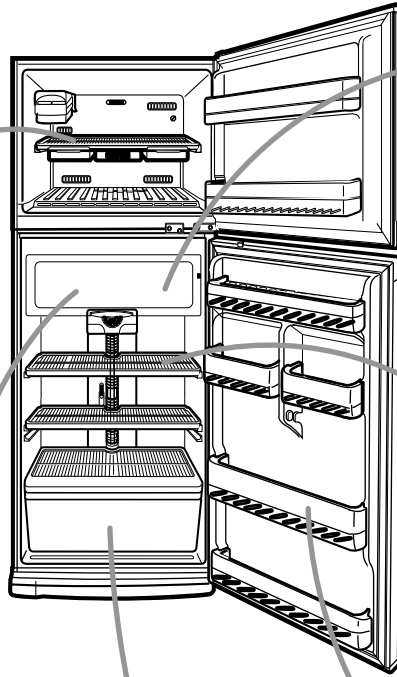


5. Identifying and disassembling the parts


To remove shelves in the freezing compartment

- First remove the icemaking molds. Tilt the shell up at front, then lift it up pull it out of the tracks.

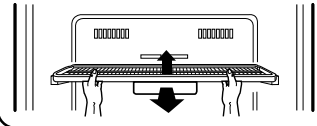


To remove bio deodorizer

- While pushing the front end knob of the bio deodorizer, pull it downward to disengage.



To remove shelves in the refrigerating compartment



- Hold the shelf by the front and pull it forward of the rack.





To remove shelves in the chilled compartment

- Lift up the cover, push the cover to the right (as shown) until the mounting hook (1) disengages, then disengage the other mounting hook (2) and pull out the cover.
- Pull the shelf forward until it stops. then lift it up and pull it out.

Disassemble

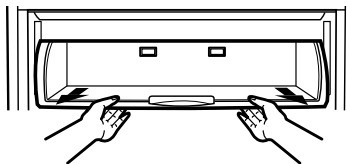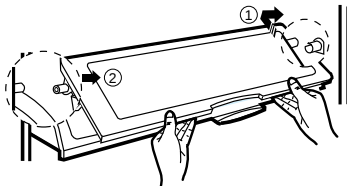


Reassemble

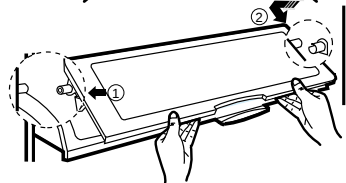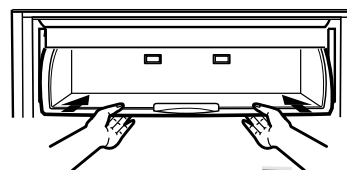

- With shelf front raised slightly, engage the roller between the rails and slide it back.
- To replace the cover, first engage the mounting hook (1) as shown, then engage the other hook (2) and push in.

To remove door bins

- While pushing the bin to the left, lift it up to disengage.



To remove storage drawers and covers

- Lift up to remove the cover. Pull the drawer half way out, then lifting it up, pull it out completely.

