



SHARP**SERVICE MANUAL**

S14M714D1-SA/

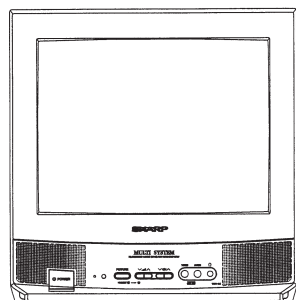

14D1-SA/SF/GA/GF

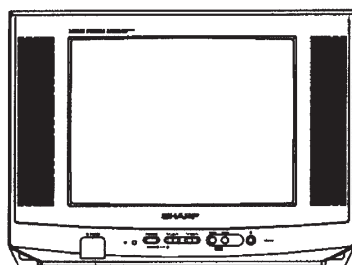

14D2-SA/SF/GA/GF

COLOUR TELEVISION***Chassis No. GA-1AM***

14D1-SA/SF/GA/GF

14D2-SA/SF/GA/GF

MODELS

In the interests of user-safety (Required by safety regulations in some countries) the set should be re-stored to its original condition and only parts identical to those specified should be used.

FEATURES

- Multi 18 systems
- Full Auto Channel Preset and Auto Channel Skip
- 100-CH Program Memory
- CATV(Hyper Band) Ready
<Used Frequency Synthesizer Tuner>
- AVL(Sound Keeper) Function
- Black Stretch Circuit
- On Timer/Sleep Timer/Reminder Timer
- Blue Back Noise Mute
- Front Headphone Terminal
- Front AV-In & Rear AV-In/Out Terminals
(Front Priority)
- Colour Comb Filter(NTSC only)
- High Contrast Picture
- Hotel Mode
- Arabic/Chinese/English/French/Malay
5 Languages OSD
- White Temperature Adjustment

CONTENTS

	Page		Page
● SPECIFICATIONS	2	■ CRT UNIT	42
● IMPORTANT SERVICE NOTES	2	■ HEADPHONE UNIT	44
● ADJUSTMENT PRECAUTIONS	3	● PRINTED WIRING BOARD ASSEMBLIES	46
● MEMORY MAP	12	● REPLACEMENT PARTS LIST	
● GA1 HOTEL MODE APPLICATION	16	■ ELECTRICAL PARTS	
● TROUBLE SHOOTING FLOWCHART	17	MAIN UNIT	51
● WAVEFORMS	19	CRT UNIT	55
● SOLID STATE DEVICE BASE DIAGRAM	21	HEADPHONE UNIT	55
● CHASSIS LAYOUT	23	■ SUPPLIED ACCESSORIES	55
● BLOCK DIAGRAM	27	■ PACKING PARTS	56
● DESCRIPTION OF SCHEMATIC DIAGRAM ..	33	■ CABINET PARTS	56
● SCHEMATIC DIAGRAM		● PACKING OF THE SET	58
■ MAIN UNIT	34		

WARNING

The chassis in this receiver is partially hot. Use an isolation transformer between the line cord plug and power receptacle, when servicing this chassis. To prevent electric shock, do not remove cover. No user – serviceable parts inside. Refer servicing to qualified service personnel.

SHARP CORPORATION

SPECIFICATIONS

Convergence	Self Convergence System
Focus	Electrostatic Focus High Bi-Potential
Sweep Deflection	Magnetic
Intermediate Frequencies	
Picture IF Carrier	38.9MHz
Sound IF Carrier Frequency	
6.5MHz	32.4MHz
6.0MHz	32.9MHz
5.5MHz	33.4MHz
Colour Sub-Carrier Frequency	34.47MHz
Power Input	110 ~ 240V AC 50/60 Hz
Power Consumption	
14D1-SA/SF/GA/GF	58W
14D2-SA/SF/GA/GF	62W
Audio Power Output Rating	
14D1-SA/SF/GA/GF	3.0W(at Max.)
14D2-SA/SF/GA/GF	5.0W(at Max.)
Speaker	
Size	
14D1-SA/SF/GA/GF	5 x 9 cm Elliptic (1pc)
14D2-SA/SF/GA/GF	5 x 9 cm Elliptic (2 pcs)
Voice Coil Impedance	16 ohms at 400 Hz
Aerial Input Impedance	
VHF/UHF	75 ohms Unbalanced
Receiving System	CCIR SECAMPAL B, G, D, K, J
Tuner Ranges	
VHF-Channels	E2(48.25MHz) thru E12(224.25MHz) C1(49.75MHz) thru C12(216.25 MHz) S1(105.25MHz) thru S36(423.25HMz)
UHF-Channels	E21(471.25MHz) thru E69(855.25MHz) C13(471.25MHz) thru C57(863.25MHz) S37(431.25MHz) thru S41(463.25MHz)
Dimensions	
14D1-SA/SF/GA/GF	Width: 357.0mm Height: 465.0mm Depth: 370.5mm
	Weight(approx): 9.5 kg
14D2-SA/SF/GA/GF	Width: 466.0mm Height: 333.0mm Depth: 362.0mm
	Weight(approx): 9.2 kg
Cabinet material	All Plastics

Specifications are subject to change without prior notice.

IMPORTANT SERVICE NOTES

Maintenance and repairing of this receiver should be done by qualified service personnel only.

SERVICE OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE

When servicing the high voltage system, remove static charge from it by Connecting a 10K ohm Resistor in series with an insulated wire(such as a test probe) between picture tube dag and 2nd anode lead. (AC line cord should be disconnected from AC outlet.)

1. Picture tube in this receiver employs integral implosion protection.
2. Replace with tube of the same type number for continued safety.
3. Do not lift picture tube by the neck.
4. Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage completely.

X-RAY

This receiver is designed so that any X-Ray radiation is kept to an absolute Minimum. Since certain malfunctions or servicing may produce potentially hazardous radiation with prolonged exposure at close range, the following precautions should be observed:

1. When repairing the circuit, be sure not to increase the high voltage to more than 25.2kV(at beam 0 uA) for the set.
2. To keep the set in a normal operation, be sure to make it function on 22.7kV±1.5kV(at beam 800 uA) in the case of the set. The set has been factory - Adjusted to the above-mentioned high voltage.
* If there is a possibility that the high voltage fluctuates as a result of the repairing, never forget to check for such high voltage after the work.
3. Do not substitute a picture tube with unauthorized types and/or brands which may cause excess X-ray radiation.

BEFORE RETURNING THE RECEIVER

Before returning the receiver to the user, perform the following safety Checks.

1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the receiver.
2. Inspect all protective devices such as non-metallic control knobs, insulating fishpapers, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators etc.

ADJUSTMENT PRECAUTIONS

This model's setting are adjusted in two different ways: through the I²C bus control and in the conventional analog manner. The adjustments via the I²C bus control include preset-only items and variable data.
CAUTION: Make sure TV Set is in "Normal Condition" before switch to Service Mode for adjustment.

1. Setting the service mode by the microprocessor.

- ①. Short JA 137 & JA 138 for 1 second and release to switch to the service mode position, and the microprocessor is in input mode. (Adjustment through the I²C bus control).
- ②. Press the CH DOWN / UP key on the remote controller to get ready to select the mode one by one.
- ③. Press the CH DOWN / UP key on the remote controller to select the modes reversibly one by one.
- ④. Using the VOLUME UP/ DOWN key on the remote controller, the data can be modified.
- ⑤. Short JA 137 & JA 138 for 1 second and release to switch to the normal mode position, and the microprocessor is in out of the service mode.

2. Factory Presetting.

- ①. Short JA 137 & JA 138 then turn "ON" the main power and release to switch to the Service Mode position. Initial values are automatically preset, only when a new EEPROM is used (Judge with the first 4 bytes).
- ②. The initial data are preset as listed in page 5.
- ③. Make sure the data need modification or not (Initial data).


Note: Once the chassis has been assembly together and ready to be POWER ON for the FIRST TIME, make sure to short JA137 & JA138 to switch to the service mode position first and then turn on the main power switch (See 2-① above).

Precaution: If haven't done this initialization, it may possibly generate excessive Beam current.


3. For reference please check with memory map (GA-1AM Series type RH-IX3368CE Attachment)

SERVICE MODE

(1) In the Service Mode, Key is used to select the mode in the following order.


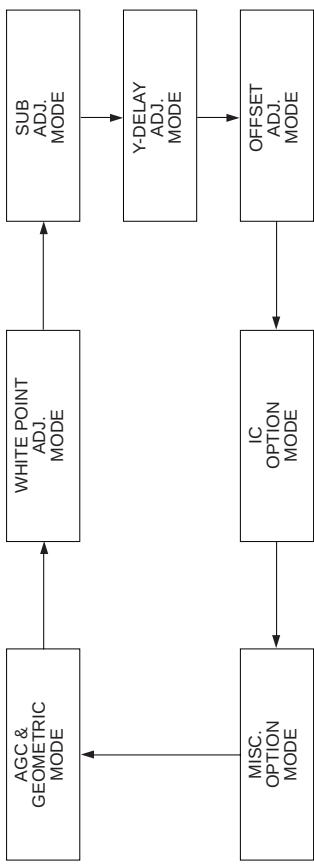


FORWARD : CH DOWN KEY
REVERSE : CH UP KEY

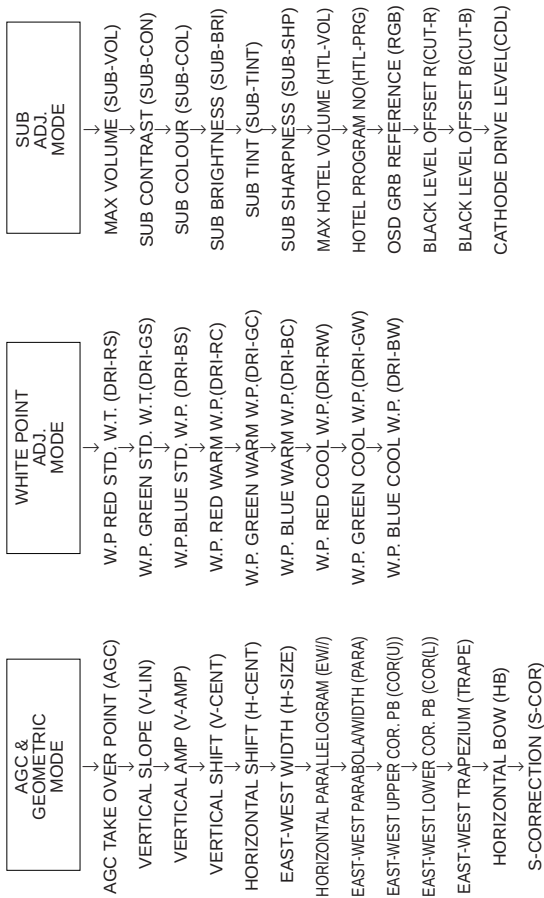

FORWARD : CH DOWN KEY
REVERSE : CH UP KEY
* () means OSD display.

* Direct Key-in Mode for Service Items in Service Mode

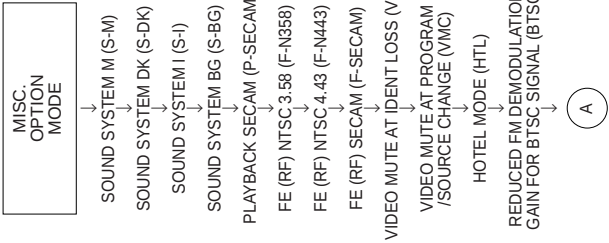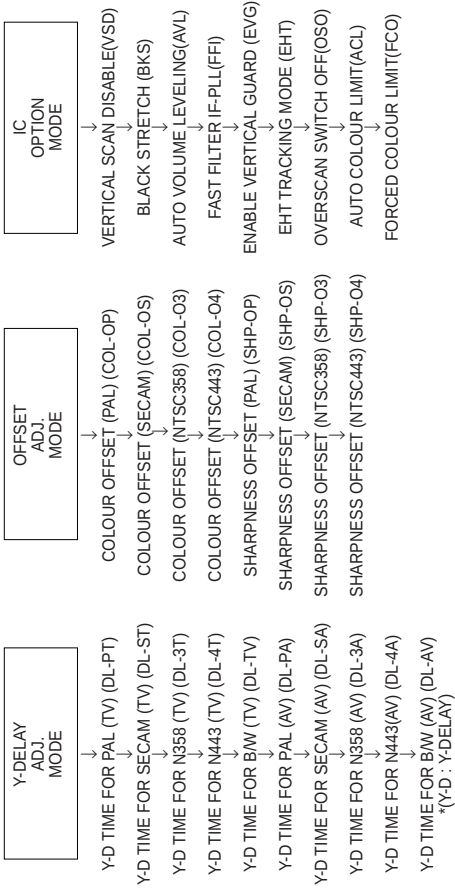

RC CODE (HEX)	R/C KEY NAME	SERVICE ITEM
FA	FUNCTION	AGC
C4	CONTRAST DOWN	V-LIN
A4	COLOUR DOWN	V-AMP
54	BRIGHTNESS DOWN	V-CENT
74	TINT DOWN	H-CENT
8D	SHARPNESS DOWN	EWI/
F6	S-SYSTEM	HB
DC	BLUE BACK	S-COR
CA	TIMER	SUB-VOL
44	CONTRAST UP	SUB-CON
24	COLOUR UP	SUB-COL
94	BRIGHTNESS UP	SUB-BRI
B4	TINT UP	SUB-TINT
0D	SHARPNESS UP	SUB-SHP

AFTER SHORT JA 137 & JA 138 AND TURN ON THE MAIN POWER SWITCH,READ DATA FROM EEPROM ADDRESS 00H ~ 03H,AND COMPARE TO THE LIST BELOW, IF DIFFERENT, INITIALIZE THE EEPROM.

Address : Data
00H : 55H
01H : 4FH

Address : Data
02H : 43H
03H : A1H

EEPROM ITEMS	OSD	DATA LENGTH	INITIAL DATA	FIX/ADJ	REMARKS
AGC TAKE OVER POINT	AGC	0-63	14	ADJ	
VERTICAL SLOPE	V-LIN	0-63	32	ADJ	
VERTICAL AMPLITUDE	V-AMP	0-63	32	ADJ	
HORIZONTAL SHIFT	V-CENT	0-63	32	ADJ	
EAST-WEST WIDTH	H-CENT	0-63	32	ADJ	
HORIZONTAL PARALLELOGRAM	H-SIZE	0-63	32	*FIX	
EAST-WEST PARABOLAWIDTH	EW//	0-63	32	*FIX	
EAST-WEST UPPER CORNER PARABOLA	COR (U)	0-63	32	*FIX	
EAST-WEST LOWER CORNER PARABOLA	COR (L)	0-63	32	*FIX	
EAST-WEST TRAPEZIUM	TRAPE	0-63	32	*FIX	
HORIZONTAL BOW	HB	0-63	32	*FIX	
S-CORRECTION	S-COR	0-63	0	ADJ	*4
WHITE POINT RED STD WHITE TEMP	DRI-RS	0-63	32	*FIX	
WHITE POINT GREEN STD WHITE TEMP	DRI-GS	0-63	32	ADJ	
WHITE POINT BLUE STD WHITE TEMP	DRI-BS	0-63	32	ADJ	
WHITE POINT RED COOL WHITE TEMP	DRI-RC	0-63	25	ADJ	*3
WHITE POINT GREEN COOL WHITE TEMP	DRI-GC	0-63	32	ADJ	*3
WHITE POINT BLUE COOL WHITE TEMP	DRI-BC	0-63	32	ADJ	SAME AS (DRI-BS) DATA
WHITE POINT RED WARM WHITE TEMP	DRI-RW	0-63	32	*FIX	
WHITE POINT GREEN WARM WHITE TEMP	DRI-GW	0-63	32	ADJ	*8
WHITE POINT BLUE WARM WHITE TEMP	DRI-BW	0-63	32	ADJ	*8
MAX VOLUME	SUB-VOL	0-63	63	*FIX	
SUB CONTRAST	SUB-CON	0-63	63	ADJ	*6
SUB COLOUR	SUB-COL	0-63	32	ADJ	
SUB BRIGHTNESS	SUB-BRI	0-63	32	ADJ	
SUB TINT	SUB-TINT	0-63	32	ADJ	
SUB SHARPNESS	SUB-SHP	0-63	32 (20)	*FIX	
MAX HOTEL VOLUME	HTL-VOL	0-63	32	*FIX	
HOTEL PROGRAM NUMBER	HTL-PRG	0-99 OR 29 FOR NONE	255	*FIX	
OSD RGB REFERENCE	RGB	0-15	15	ADJ	*7
BLACK LEVEL OFF-SET R	CUT-R	0-63	32	ADJ	
BLACK LEVEL OFF-SET G	CUT-G	0-63	32	ADJ	
CATHODE DRIVE LEVEL	CDL	0-15	0	ADJ	*2
Y-DELAY TIME FOR PAL(TV) [YD]	DL-PT	0-15	12	*FIX	
Y-DELAY TIME FOR SECAM(TV) [YD]	DL-ST	0-15	15	*FIX	
Y-DELAY TIME FOR N358 (TV) [YD]	DL-3T	0-15	12	*FIX	
Y-DELAY TIME FOR N443 (TV) [YD]	DL-4T	0-15	12	*FIX	
Y-DELAY TIME FOR BW (TV) [YD]	DL-TV	0-15	12	*FIX	
Y-DELAY TIME FOR PAL (AV) [YD]	DL-PA	0-15	12	*FIX	
Y-DELAY TIME FOR N358 (AV) [YD]	DL-3A	0-15	12	*FIX	
Y-DELAY TIME FOR N443 (AV) [YD]	DL-4A	0-15	12	*FIX	
Y-DELAY TIME FOR BW (AV) [YD]	DL-AV	0-15	12	*FIX	
COLOUR OFFSET (PAL)	COL-OP	0-15	8	ADJ	*5
COLOUR OFFSET (SECAM)	COL-OS	0-15	8	ADJ	*5
COLOUR OFFSET (NTSC358)	COL-O3	0-15	4	ADJ	*5
COLOUR OFFSET (NTSC443)	COL-O4	0-15	4	ADJ	*5
SHARPNESS OFFSET (PAL)	SHP-OP	0-15	8	*FIX	
SHARPNESS OFFSET (SECAM)	SHP-OS	0-15	4	*FIX	
SHARPNESS OFFSET (NTSC358)	SHP-O3	0-15	12 (8)	*FIX	

EEPROM ITEMS	OSD	DATA LENGTH	INITIAL DATA	FIX/ADJ	REMARKS
SHARPNESS OFFSET (NTSC443)	SHP-O4	0-15	8	*FIX	
VERTICAL SCAN DISABLE	VSD	0(SHABLE)/1(EHABLE)	0	*FIX	
BLACK STRETCH	BKS	0(SHABLE)/1(EHABLE)	1	*FIX	
AUTOMATIC VOLUME LEVELING	AVL	0(SHABLE)/1(EHABLE)	1	*FIX	
FAST FILTER IF-PLL	FFI	0(SHABLE)/1(EHABLE)	0	*FIX	
ENABLE VERTICAL GUARD (RGB BLANKING)	EVG	0(SHABLE)/1(EHABLE)	1	*FIX	
EHT TRACKING MODE (HCO)	EHT	0(SHABLE)/1(EHABLE)	1	*FIX	
OVERSCAN SWITCH OFF	OSO	0(SHABLE)/1(EHABLE)	0	*FIX	
AUTO COLOUR LIMIT	ACL	0(SHABLE)/1(EHABLE)	0	*FIX	
FORCED COLOUR LIMIT	FCO	0(SHABLE)/1(EHABLE)	0	*FIX	
SOUND SYSTEM M	S-M	0(SHABLE)/1(EHABLE)	0	*FIX	
SOUND SYSTEM DK	S-DK	0(SHABLE)/1(EHABLE)	1	*FIX	
SOUND SYSTEM I	S-I	0(SHABLE)/1(EHABLE)	1	*FIX	
SOUND SYSTEM BG	S-BG	0(SHABLE)/1(EHABLE)	1	*FIX	
PLAYBACK SECAM	P-SECAM	0(SHABLE)/1(EHABLE)	1	*FIX	
FE (RF) NTSC 3.58	F-N358	0(SHABLE)/1(EHABLE)	0	*FIX	
FE (RF) NTSC 4.43	F-N443	0(SHABLE)/1(EHABLE)	1	*FIX	
FE (RF) SECAM	F-SECAM	0(SHABLE)/1(EHABLE)	1	*FIX	
VIDEO MUTE AT IDENT LOSS	VMI	0(SHABLE)/1(EHABLE)	1	*FIX	
VIDEO MUTE AT PROGRAM/SOURCE CHANGE	VMC	0(SHABLE)/1(EHABLE)	1	*FIX	
HOTEL MODE	HTL	0(SHABLE)/1(EHABLE)	0	*FIX	
REDUCED FM DEMODULATOR GAIN FOR BTSC SIGNAL	BTSC	0(SHABLE)/1(EHABLE)	0	*FIX	
NUMBER OF EXTERNAL AV SOURCE	AV	0 FOR 1 AV/1 FOR 2AV	1 (0)	*FIX	
FM WINDOW SELECTION	FMWS	0(SHABLE)/1(EHABLE)	0	*FIX	
SOUND MUTE BIT 0	SM0	0(SHABLE)/1(EHABLE)	1	*FIX	
SOUND MUTE BIT 1	SM1	0(SHABLE)/1(EHABLE)	0	*FIX	
THAI LANGUAGE	THA	0(SHABLE)/1(EHABLE)	0	*FIX	
ARABIC LANGUAGE	ARA	0(SHABLE)/1(EHABLE)	1	*FIX	
MALAY LANGUAGE	MAL	0(SHABLE)/1(EHABLE)	1	*FIX	
CHINESE LANGUAGE	CHI	0(SHABLE)/1(EHABLE)	1	*FIX	
FRENCH LANGUAGE	FRE	0(SHABLE)/1(EHABLE)	1	*FIX	
RUSSIAN LANGUAGE	RUS	0(SHABLE)/1(EHABLE)	1 (0)	*FIX	
FORCED V-SYNC SLICING LEVEL	FSL	0(SHABLE)/1(EHABLE)	0	*FIX	
SYNC OF OSD	HP2	0(SHABLE)/1(EHABLE)	0	*FIX	
TUNER SELECTION (0:SHARP/ALPS1:MURATA)	CPT	0(SHABLE)/1(EHABLE)	0	*FIX	
BILINGUAL	BIL	0(SHABLE)/1(EHABLE)	0	*FIX	
IF AGC SPEED BIT 0	AGC0	0(SHABLE)/1(EHABLE)	1	*FIX	
IF AGC SPEED BIT 1	AGC1	0(SHABLE)/1(EHABLE)	0	*FIX	
PHI-1 TIME CONSTANT (RF)	FOA-FE	0(SHABLE)/1(EHABLE)	0	*FIX	
PHI-1 TIME CONSTANT (RF)	FOA-FE	0(SHABLE)/1(EHABLE)	0	*FIX	
PHI-1 TIME CONSTANT (OFF AIR)	FOA-AV	0(SHABLE)/1(EHABLE)	1	*FIX	
PHI-1 TIME CONSTANT (OFF AIR)	FOB-AV	0(SHABLE)/1(EHABLE)	1	*FIX	
LED BLINK SPEED	LED F	0(SHABLE)/1(EHABLE)	0 (1)	*FIX	
VOLUME CONTROL PWM TABLE	MSA	0(SHABLE)/1(EHABLE)	0 (1)	*FIX	
OUTPUT VERTICAL GUARD	NDF	0(SHABLE)/1(EHABLE)	0 (1)	*FIX	

- NOTE: 1) *FIX: PLEASE DO NOT CHANGE FIXED DATA WITHOUT SPECIFIC INSTRUCTION.
Please set the EEPROM initial data according to the value in parenthesis () before adjustment.
- 2) *2: CDI ADJUST = 5
- 3) *3: ADJUST DRI-RC AND DRI-GC AS FOLLOWS:
- | | | |
|----------|-----------|-----------|
| DRI-RC = | SMF | OTHER |
| DRI-GC = | 27 | 25 |
| | (DRI-GS)5 | (DRI-GS)7 |
- 4) *4: S-COR ADJUST = 17
- 5) *5: ADJUST COLOUR OFFSET AFTER ADJUST SUB-COLOUR.
COL-OP: 8 ----> 14
COLOUR OFFSET (PAL)
COL-O3: 8 ----> 14
COLOUR OFFSET (SECAM)
COL-O3: 4 ----> 10
COLOUR OFFSET (NTSC358)
COL-O4: 4 ----> 10
COLOUR OFFSET (NTSC443)
COL-O4: 4 ----> 10
- 6) *6: SUB-CON = 52
- 7) *7: RGB = 6
- 8) *8: PLEASE REFER TO PAGE 8-2 (WHITE BALANCE ADJUSTMENT MODE)

INITIAL SHIPPING SETTING

- (1). Please set to **MCL1** for all models.
(2). After set the MCL, please set the **INITIAL SETTING** for each models.
INITIAL 3 : For Singapore and Africa (All Channel Sound System are set to B/G)
INITIAL 4 : For Middle-East (All Channel Sound System are set to B/G)

CH-NO	Fv (MHz)	MCL1 (HEX AE)	SOUND SYS
0			
1	48.25		B/G
2	62.25		B/G
3	77.25		D/K
4	175.25		B/G
5	182.25		B/G
6	183.25		D/K
7	191.25		D/K
8	196.25		B/G
9	199.25		M
10	210.25		B/G
11	224.25		B/G
12	471.25		B/G
13	487.25		I
14	503.25		B/G
15	575.25		B/G
16	583.25		B/G
17	599.25		B/G
18	621.25		M
19	639.25		D/K
20	703.25		B/G
21	735.25		I
22	767.25		B/G
23	815.25		B/G
24	855.25		I
25	855.25		B/G
26	55.25		M
27	83.25		M
28	183.25		M
29	193.25		M
30	217.25		M
31	471.25		M
32	477.25		M
33	693.25		M
34	41.10		
35	112.25		B/G
36	168.25		B/G
37			
38	294.25		B/G
39	463.25		B/G
40			
41	647.25		B/G
42	663.25		B/G
43	679.25		B/G
44	174.95		B/G
45	175.55		B/G
46			

SHIPPING SETTING & CHECKING

- (1) The following default data has been factory-set for the EEPROM follow by INITIAL DATA selected.

ITEMS	DATA SETTING
LAST PROGRAM/CHANNEL	1
FLASHBACK PROGRAM/CH	1
CHANNEL ENTRY DIGIT NUMBER	1
C-SYSTEM	AUTO
S-SYSTEM	*1
SKIP	OFF
AFC	ON
VOLUME	1
CONTRAST	MAX
COLOUR	CENTER
BRIGHTNESS	CENTER
TINT	CENTER
SHARPNESS	CENTER
WHITE TEMP	STANDARD
REMINDER TIMER	In-active, "u-v-;-"-"
ON TIMER	In-active, "u-v-;-"-"
OFF TIMER	In-active, "u-v-;-"-"
LAST POWER	POWER-ON
LANGUAGE	*1
BLUE BACK MUTE	ON
HOTEL MODE	OFF
0 CHANNEL SKIP	ON
LAST TV/AV	TV

*1: Please refer defaults for LANGUAGE and SOUND SYSTEM per MODEL as follows,

INITIAL	LANGUAGE	SOUND SYSTEM
3	ENGLISH	B/G
4	ARABIC	B/G

FACTORY SETTING BY MODEL (Reference: Geomagnetism Adjustment)




MODEL	MAGNETIC FILED (H,V) nT	Background	Lang.	S-SYS	Lang. QTY
SINGAPORE	-10.000	40.000	12300K	ENGLISH	B/G
AFRICA	-10.000	40.000	12300K	ENGLISH	B/G
MID-EAST	30.000	20.000	18000K	ARABIC	B/G

*NOTE FOR OSD TYPE
5: ENGLISH/CHINESE/FRENCH/ARABIC/MALAY





ADJUSTMENT PRECAUTION:

Make sure TV Set is in "Normal Condition" before switch to service mode for adjustment.






PIF ADJUSTMENT

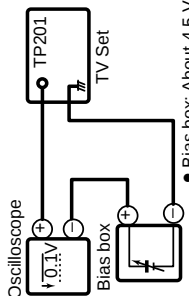No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	Tuner IFT (PRESET)	- Get the tuner ready to receive the CH. E - 9 signal, but with no signal input. Adjust the PLL data. - Connect the sweep generator's output cable to the tuner antenna. (RF SWEEP) - Adjust the sweep generator's to 80dBuV. - Connect the response lead (use LOW IMPED-ANCE probe with wave detector ; see Fig.1) to the tuner's IF output terminal. (This terminal must have the probe alone connected) - Set the RF-AGC to 0 - 6 V with no saturation with the waveform. - Adjust the tuner IF coil to obtain the waveform as shown in Fig. 2. Note: Be sure to keep the tuner cover in position during this adjustment.	 Fig. 1  Fig. 2
2	RF-AGC TAKE OVER POINT AD- JUSTMENT (IC BUS CONTROL)	- Receive "PAL COLOUR BAR" signal. - Signal Strength: 57 ± 1 dBuV (75 ohm open) - Connect the oscilloscope to TP201(Tuner's AGC Terminal) as shown in Fig. 3.  Fig. 3 - Call "AGC" mode in service mode. Adjust the "AGC" bus data to obtain the Tuner output pin drop 0.1V below maximum voltage. - Change the antenna input signal to 63-67dBuV, and make sure there is no noise. - Turn up the input signal to 90-95 dBuV to be sure that there is no cross modulation beat.	Note: For the 50 ohm signal strength gauge, when not using 50/75 impedance adapter, signal strength is 52 ± 1 dBuV (75 ohm open), instead of 57 ± 1 dBuV (75 ohm open). Precaution: The loss of using impedance adapter



PURITY ADJUSTMENT

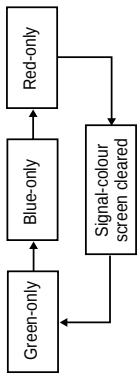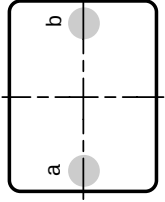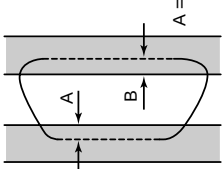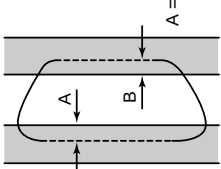No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	PURITY ADJ.	- Receive the GREEN-ONLY signal. Adjust the beam current to about 500 μA. - Degauss the CRT enough with the degaussing coil. Note: Follow the Job Instruction Sheet to adjust the magnetic field. - Maintain the purity magnet at the zero magnetic field and keep the static convergence roughly adjusted. - Observe the points a, b as shown in Fig. 4-1 through the microscope. Adjust the landing to the rank A requirements. - Orient the raster rotation to 0 eastward. - Tighten up the deflection coil screws. - Tightening torque: 108 ± 20 N (11 ± 2 kgf) - Make sure the CRT corners landing meet the A rank requirements. If not, stick the magnet sheet to correct it. Note: This adjustment must be done after warming up the unit for 30 minutes or longer with a beam current over 500 μA. * For the following colours press R/C RGB key to change. 	 Fig. 4-1  Fig. 4-2 Rank "A" (on the right of the CRT)  Fig. 4-3 Rank "A" (on the left of the CRT) * Press R/C RGB key for 1 second in NORMAL MODE, the colour will change to RGB mono colour mode.

CONVERGENCE ADJUSTMENT

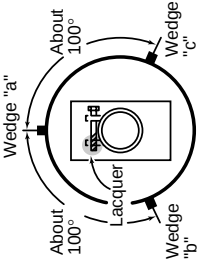No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	CONVERGENCE ADJ. (To be done after the purity adjustment)	1. Receive the "Crosshatch Pattern" signal. 2. Using the remote controller, call NORMAL mode. STATIC CONVERGENCE 1. Turn the 4-pole magnet to a proper opening angle in order to superpose the blue and red colours. 2. Turn the 6-pole magnet to a proper opening angle in order to superpose the green colour over the blue and red colours. DYNAMIC CONVERGENCE 1. Adjust the convergence on the fringes of the screen in the following steps. a) Fig. 5-1: Drive the wedge at point "a" and swing the deflection coil upward. b) Fig. 5-2: Drive the wedge at points "b" and "c" and swing the deflection coil downward. c) Fig. 5-3: Drive the "c" wedge deeper and swing the deflection coil rightward. d) Fig. 5-4: Drive the "b" wedge deeper and swing the deflection coil leftward. 2. Fix all the wedges on the CRT and apply glass tape over them. 3. Apply lacquer to the deflection yoke lock screw, magnet unit (purity, 4-pole, 6-pole magnets) and magnet unit lock screw. Finally received the Red-only and Blue-only signals to make sure there is no other colours on the screen.	 Fig. 5-1  Fig. 5-2  Fig. 5-3  Fig. 5-4  Wedge "a" About 100° Lacquer Wedge "b" About 100° Wedge "c" 4-pole magnet 6-pole magnet CRT neck Lacquer Purity magnet Noile*** Note*** SAMSUNG CRT : 32mm CPT CRT : 35mm TOSHIBA CRT : 35mm

CRT CUT-OFF, SUB-BRIGHT AND WHITE BALANCE ADJUSTMENT

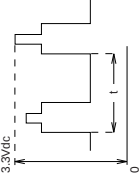No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	CRT CUTOFF ADJUSTMENT (FC BUS CONTROL)	Remark 1. Before CRT cutoff adjustment, SUB-BRIGHT, DRI-RS/RW/RC, DRI-GS/GW/GC, DRI-BS/BW/BC, CUT-R and CUT-G must be INITIAL DATA. 2. CRT Cutoff adjustment must be done inside a dark room. 1. Switch TV to VIDEO mode, BLUE BACK OFF, with NO VIDEO signal. 2. Press R/C to set Picture Normal condition. 3. First, off the screen by adjust screen variable resistor. *4. Next, checking AKB circuit function by slowly increase screen variable resistor until colour raster suddenly on and off (AKB start function). 5. Then continue adjust until retrace line appear. 6. Finally, slowly decrease the screen variable resistor until screen retrace line cut off. (Not Raster) Note : Must confirm the AKB function in set before continue the next adjustment.	*Alternative Procedure (1) Step (1), (2), (3) and (4) are same as beside procedure. (2) Then continue adjust until retrace line appear and make sure the colour appear whether red, green or blue. (3) Connect the oscilloscope to related test points as below which is based on colour appear at (2) RED = TP4/R, GREEN = TP4/G, BLUE = TP4/B. (4) Then adjust Screen VR until the tip of signal reach 3.3Vdc. 
2	SUB-BRIGHTNESS ADJUSTMENT (FC BUS CONTROL)	1. Call " SUB-BRT" in service mode. (Receive Cross-hatch pattern with 4 black level windows) * (2) Adjust the " SUB BRIGHT " bus data in order that the line 1and 2 have the same darkness whereas line 3 is one step (data) brighter than line 2. Finally data minus 1 to make line 1, 2, and 3 are in same level (darkness).	 Line 3 is one step (data) brighter than line 2 
3	WHITE BALANCE SERVICE MODE ADJ. (FC BUS CONTROL)	1. Receive the "WHITE" pattern with BURST signal. 2. Press R/C to set Picture NORMAL condition. 3. Connect the DC milliammeter between TP602 (c) TP603 (+). 4. Check Beam current should be around 800 μA. 5. Set it to service mode and adjust the DRI-GS, & DRI-BS data to have a colour temperature of 12300°K or 18000°K (white). * Note . 6. Receive "WHITE" pattern, WITH BURST signal and set BRIGHTNESS Y by generator, to *10 cd/m2 (MINOLTA CA-100) by reducing LUMINATE Y signal. 7. Adjust "CUT-R" & "CUT-G" to get desired colour temperature #. Then go back NORMAL mode (HIGH BRIGHT**) to check colour temperature. If out of range, back to (1). Note: This adjustment must be done after warming up the unit for 30 minutes or longer with a beam current over 500μA. * ADJUST DRI-GC/GW, DRI-BC/BW as following DATA, after finishing DRI-BS and DRI-GS DATA ADJUSTMENT. DRI-RW = 32 (FIXED), DRI-RS = 32 (FIXED) DRI-BC = "DRI-BS" (For 12300°K And 18000°K Condition)	# 12300°K X : 0.272 Y : 0.275 # 18000°K X : 0.255 Y : 0.255 (MINOLTA COLOUR ANALYZER CA-100) *Note: Above Data can be UP/DOWN by Volume key. LOW HIGH 10cd/m2 200cd/m2 * 12300°K DRI-GW="DRI-GS"-7 DRI-BW="DRI-BS"-7 DRI-GC="DRI-GS"-7 DRI-RC=25 * 18000°K DRI-GW="DRI-GS"-7 DRI-BW="DRI-BS"-7 DRI-GC="DRI-GS"-5 DRI-RC=27


CRT CUT-OFF, SUB-BRIGHT AND WHITE BALANCE ADJUSTMENT (Continued)

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
4	Max beam check	1. Receive the "Monoscope Pattern" signal. 2. Press R/C to set Picture NORMAL condition. 3. Connect the DC milliammeter between TP603 (+) & TP602 (-). 4. Beam current must be within $800 \pm 100 \mu\text{A}$. (1.4")	

HORIZONTAL, VERTICAL DEFLECTION LOOP AND FOCUSADJUSTMENT

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	V-LIN (fC BUS CONTROL)	1. Receive Monoscope Pattern Signal. 2. Call the "V-LIN" mode. 3. Increase or decrease "V-LIN" by Volume key till the horizontal line in the center of monoscope is just at the position where the blanking starts.	
2	V-CENT (fC BUS CON-TROL)	1. Call the "V-CENT" mode. 2. Increase or decrease "V-CENT" by Volume key till the picture is centered.	
3	V-AMP (fC BUS CON-TROL)	1. Call the "V-AMP" mode. 2. Increase or decrease "V-AMP" by Volume key to set overscan of 9.5% typical. Adjustment Spec 9.5% range +1% -0%.	
4	H-CENT (fC BUS CON-TROL)	1. Call the "H-CENT" mode. 2. Increase or decrease "H-CENT" by Volume key to center the picture horizontal.	
5	S-CORREC-TION (fC BUS CONTROL)	1. SET DATA TO 17. * Check the E-5 CH Monoscope Pattern then re-adjust V-Slope, V-Shift and V-Amp to make sure adjustment is in acceptable Ring-Shaped.	
6	SUB-SHARP-NESS	1. SET DATA TO 20.	
1	Focus	1. Receive the "Monoscope Pattern" signal. 2. Press R/C to set Picture NORMAL condition. 3. Adjust the focus control to get the best focusing.	

NTSC CHROMA ADJUSTMENT

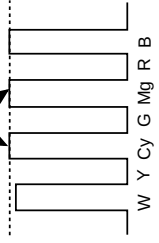No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	SUB-TINT (fC BUS CON-TROL)	1. Receive the "NTSC 3.58 Colour Bar" signal thru AV in. 2. Connect the oscilloscope to TP47B (P882 pin 5) BLUE-OUT. • Range : 100mV/div. (AC)(Use Probe 10:1) • Sweep time : 10 $\mu\text{sec/div}$. 3. Call the "SUB-TINT" mode in service mode. Adjust the "SUB-TINT" bus data to obtain the waveform shown as Fig. 1-1. 4. Clear the SERVICE mode.	 Fig. 1-1


PROTECTOR OPERATION CHECKING

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	BEAM PRO-TECTOR	1. Receive "Monoscope Pattern" signal. 2. Set CONTRAST MAX. 3. Set BRIGHT MAX. 4. During the Collector & Emitter of Q883/5/7 short, make sure the protector ON and switch to standby mode.	* Select one of Q883/5/7 to do each short test.
2	H+V PROTEC-TOR	1. Receive "Monoscope Pattern" signal. 2. Connect output of Bias Box to D603 cathode (R610 side). 3. Set voltage of Bias Box to 18V and make sure the protector is not working. 4. Set voltage of Bias Box to 27V, and make sure the protector is working.	
3	Other protectors	1. Once finish rectified Electrolytic Capacitor short testing in +B line, check all possible damaged components on +B line. (Use random selected Set for inspection)	

AV INPUT AND OUTPUT CHECKING

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	VIDEO AND AUDIO OUTPUT CHECK	1. Receive the "PAL Colour Bar" signal (100% White Colour Bar, Sound 400 Hz 100% Mod). 2. Terminate the Video output with a 75 ohm impedance. Make sure the output is as specified (1.0 Vp-p ± 3 dB). 3. Terminate the Audio output with a 10k ohm impedance. Make sure the O/P is as specified (1.76 Vp-p ± 3 dB).	
2	VIDEO AND AUDIO INPUT CHECK	1. Using the TV/AV key on the remote controller, make sure that the modes change in order of TV, AV & TV again and the video & audio output are according to the input terminal for each mode. If connect input to Front and Rear AV terminal, input terminal of Front AV will be selected.	

PAL CHROMA ADJUSTMENT

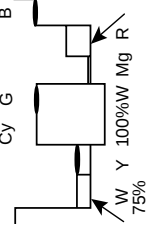No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	SUB COLOUR (fC BUS CONTROL)	1. Receive the "PAL Colour Bar" signal. 2. Press R/C to set Picture Normal condition. 3. Connect the oscilloscope to Red cathode(D981 Cathode). • Range : 20 V/div. (AC) (Using 10:1 probe) • Sweep time : 10 $\mu\text{sec/div}$. 4. Using the R/C call "SUB COL" in SERVICE mode. Adjust SUB COLOUR bus data, so that the 75% White & Red portions of PAL Color Bar be at the same level shown as Fig. 1-1. 5. Clear the SERVICE mode.	 Fig. 1-1

FUNCTION OPERATION CHECKING (VIDEO AND AUDIO)

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	CONTRAST key	1. Receive "Monoscope Pattern" signal. 2. Set P-Mode to select CONTRAST. 3. Press Volume Up/Down key to check whether the CONTRAST effect is OK or not.	
2	COLOUR key	1. Receive "Colour Bar" signal. 2. Set P-Mode to select COLOUR. 3. Press Volume Up/Down key to check whether the COLOUR effect is OK or not.	
3	BRIGHTNESS key	1. Receive "Monoscope Pattern" signal. 2. Set P-Mode to select BRIGHTNESS. 3. Press Volume Up/Down key to check whether the BRIGHTNESS effect is OK or not.	
4	TINT key	1. Receive the "NTSC Colour Bar" signal thru AV in. 2. Set P-Mode to select TINT. 3. Press Volume Up/Down key to check TINT, UP for GREEN direction and DOWN for PURPLE direction whether is OK or not.	
5	SHARPNESS Key	1. Receive "Monoscope Pattern" signal. 2. Set P-mode to select SHARPNESS. 3. Press Volume Up/Down key to check whether the SHARPNESS effect is OK or not.	
6	CH DISPLAY COLOUR	1. All Ch (1-99) will have an OSD display of the channel number in green colour under AFT ON condition.	
7	NORMAL Key	1. Once in PICTURE Mode, and the NORMAL key is pressed, all the settings will be present to normal setting. (Normal setting value for every mode). ● CONTRAST : MAX ● COLOUR : CENTER ● BRIGHTNESS : CENTER ● TINT : CENTER ● SHARPNESS : CENTER	Notes:if nothing is display mean contrast, colour, bright, tint, sharpness are all in normal setting.
8	WHITE TEMP	1. Receive "Monoscope Pattern" signal. 2. Set FUNCTION to select WHITE TEMP. 3. Press Volume Up/Down key to check WHITE TEMP Option. STANDARD: NORMAL SETTING. WARM for more REDDISH direction changing, COOL for more BLUISH direction changing.	

10-1

FUNCTION OPERATION CHECKING (VIDEO AND AUDIO) (Continued)

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
9	COLOUR SYSTEM	1. Receive the "PAL COLOUR BAR" signal, press the COLOUR SYSTEM key to select modes except PAL, check the COLOUR is not working properly. Then, select the "PAL" mode. Check again its colour so that it is working properly. 2. Receive "SECAM COLOUR BAR" signal, press COLOUR SYSTEM key to select modes except SECAM, check the COLOUR is not working properly. Then, select the "SECAM" mode. Check again its colour so that it is working properly. 3. Receive "NTSC 4.43/3.58 COLOUR BAR" signal thru AV, press COLOUR SYSTEM key to select modes except N4.43/3.58, check the COLOUR is not working properly. Then, select the "NTSC 4.43/3.58" mode. Check again its colour so that it is working properly.	
10	SOUND SYSTEM	1. Receive "PAL-D/K" signal, press the "SOUND SYSTEM" to select B/G. I. Check the sound output is not working properly. Select D/K and check the sound output to make sure it is working properly. 2. Receive "PAL-I" signal, press the "SOUND SYSTEM" to select B/G. D/K. Check the sound output is not working properly. Select I and check the sound output to make sure it is working properly. 3. Receive "PAL-B/G" signal, press the "SOUND SYSTEM" to select I, D/K. Check the sound output is not working properly. Select B/G and check the sound output to make sure it is working properly.	
11	NOISE MUTE CHECKING	1. Receive "PAL COLOUR BAR" signal. 2. Turn up the volume control to maximum, make sure the sound is heard from the speakers. Then put the unit in no signal state. 3. Check the sound mute is effective. 4. Finally turn sound level of CTV to minimum.	
12	OSD LANGUAGE QUANTITY CHECK	Check OSD LANGUAGE quantity and type as English, Chinese, French, Arabic and Malay.	

10-2

HOTEL MODE CHECKING

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	HOTEL MODE FUNCTION CHECKING	1. Press the R/C FUNCTION key until language appear, within five seconds press the (one/two digit) key and keep pressing it for five seconds, then the Hotel Mode with four digits password appears. 2. Key in the four digits password starting with number "1", "3", "7", "9" then the Hotel Mode will be enable, to switch ON/OFF the Hotel Mode please press volume up/down at R/C. HOTEL ON PASSWORD*** ← Set volume up/down by R/C key ← Input 1,3,7,9 by R/C key 3. After "ON" the Hotel Mode, user can't control Preset mode, Fine Tuning, Skip mode and System selection. Other functions are allowed to be used. Note: Please OFF HOTEL mode after finish checking the hotel mode. 4. To "OFF" HOTEL Mode, please follow steps (1) and (2) .	

SHOCK TEST CHECKING

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	SHOCK TEST	1. Hit at the top of TV set for two times. 2. Check TV set not damage and TV operation operate correctly.	

MEMORY MAP

12-1

12-2

13-1


FREQS (MHz)	DATA							MCON DEFAULT	EPRPM RANGE	EPRPM WAVEFORM	CHASSIS FREQUENCY DIRECTIVE	CITY/FINAL		LATITUDE SUNTIME	REMARKS
	D7	D6	D5	D4	D3	D2	D1					D0	QDMS DATE		
100	5SV5			AFT	(a60)			C:SV5						POS 46	
101				TUNING FREQUENCY (HIGHER PART)											
102				TUNING FREQUENCY (LOWER PART)											
103	5SV5			AFT	(a60)			C:SV5						POS 47	
104				TUNING FREQUENCY (HIGHER PART)											
105				TUNING FREQUENCY (LOWER PART)											
106	5SV5			AFT	(a60)			C:SV5						POS 48	
107				TUNING FREQUENCY (HIGHER PART)											
108				TUNING FREQUENCY (LOWER PART)											
109	5SV5			AFT	(a60)			C:SV5						POS 49	
110				TUNING FREQUENCY (HIGHER PART)											
111				TUNING FREQUENCY (LOWER PART)											
112	5SV5			AFT	(a60)			C:SV5						POS 50	
113				TUNING FREQUENCY (HIGHER PART)											
114				TUNING FREQUENCY (LOWER PART)											
115	5SV5			AFT	(a60)			C:SV5						POS 51	
116				TUNING FREQUENCY (HIGHER PART)											
117				TUNING FREQUENCY (LOWER PART)											
118	5SV5			AFT	(a60)			C:SV5						POS 52	
119				TUNING FREQUENCY (HIGHER PART)											
120				TUNING FREQUENCY (LOWER PART)											
121	5SV5			AFT	(a60)			C:SV5						POS 53	
122				TUNING FREQUENCY (HIGHER PART)											
123				TUNING FREQUENCY (LOWER PART)											
124	5SV5			AFT	(a60)			C:SV5						POS 54	
125				TUNING FREQUENCY (HIGHER PART)											
126				TUNING FREQUENCY (LOWER PART)											
127	5SV5			AFT	(a60)			C:SV5						POS 55	
128				TUNING FREQUENCY (HIGHER PART)											
129				TUNING FREQUENCY (LOWER PART)											
130	5SV5			AFT	(a60)			C:SV5						POS 56	
131				TUNING FREQUENCY (HIGHER PART)											
132				TUNING FREQUENCY (LOWER PART)											
133	5SV5			AFT	(a60)			C:SV5						POS 57	
134				TUNING FREQUENCY (HIGHER PART)											
135				TUNING FREQUENCY (LOWER PART)											
136	5SV5			AFT	(a60)			C:SV5						POS 58	
137				TUNING FREQUENCY (HIGHER PART)											
138				TUNING FREQUENCY (LOWER PART)											
139	5SV5			AFT	(a60)			C:SV5						POS 59	
140				TUNING FREQUENCY (HIGHER PART)											
141				TUNING FREQUENCY (LOWER PART)											
142	5SV5			AFT	(a60)			C:SV5						POS 60	
143				TUNING FREQUENCY (HIGHER PART)											
144				TUNING FREQUENCY (LOWER PART)											
145	5SV5			AFT	(a60)			C:SV5						POS 61	
146				TUNING FREQUENCY (HIGHER PART)											
147				TUNING FREQUENCY (LOWER PART)											
148	5SV5			AFT	(a60)			C:SV5						POS 62	
149				TUNING FREQUENCY (HIGHER PART)											
150				TUNING FREQUENCY (LOWER PART)											
151	5SV5			AFT	(a60)			C:SV5						POS 63	
152				TUNING FREQUENCY (HIGHER PART)											
153				TUNING FREQUENCY (LOWER PART)											
154	5SV5			AFT	(a60)			C:SV5						POS 64	
155				TUNING FREQUENCY (HIGHER PART)											
156				TUNING FREQUENCY (LOWER PART)											
157	5SV5			AFT	(a60)			C:SV5						POS 65	
158				TUNING FREQUENCY (HIGHER PART)											
159				TUNING FREQUENCY (LOWER PART)											
160	5SV5			AFT	(a60)			C:SV5						POS 66	
161				TUNING FREQUENCY (HIGHER PART)											
162				TUNING FREQUENCY (LOWER PART)											
163	5SV5			AFT	(a60)			C:SV5						POS 67	
164				TUNING FREQUENCY (HIGHER PART)											
165				TUNING FREQUENCY (LOWER PART)											
166	5SV5			AFT	(a60)			C:SV5						POS 68	
167				TUNING FREQUENCY (HIGHER PART)											
168				TUNING FREQUENCY (LOWER PART)											
169	5SV5			AFT	(a60)			C:SV5						POS 69	
170				TUNING FREQUENCY (HIGHER PART)											
171				TUNING FREQUENCY (LOWER PART)											
172	5SV5			AFT	(a60)			C:SV5						POS 70	
173				TUNING FREQUENCY (HIGHER PART)											
174				TUNING FREQUENCY (LOWER PART)											
175	5SV5			AFT	(a60)			C:SV5						POS 71	
176				TUNING FREQUENCY (HIGHER PART)											
177				TUNING FREQUENCY (LOWER PART)											
178	5SV5			AFT	(a60)			C:SV5						POS 72	
179				TUNING FREQUENCY (HIGHER PART)											
180				TUNING FREQUENCY (LOWER PART)											
181	5SV5			AFT	(a60)			C:SV5						POS 73	
182				TUNING FREQUENCY (HIGHER PART)											
183				TUNING FREQUENCY (LOWER PART)											
184	5SV5			AFT	(a60)			C:SV5						POS 74	
185				TUNING FREQUENCY (HIGHER PART)											
186				TUNING FREQUENCY (LOWER PART)											
187	5SV5			AFT	(a60)			C:SV5						POS 75	
188				TUNING FREQUENCY (HIGHER PART)											
189				TUNING FREQUENCY (LOWER PART)											
190	5SV5			AFT	(a60)			C:SV5						POS 76	
191				TUNING FREQUENCY (HIGHER PART)											
192				TUNING FREQUENCY (LOWER PART)											
193	5SV5			AFT	(a60)			C:SV5						POS 77	
194				TUNING FREQUENCY (HIGHER PART)											
195				TUNING FREQUENCY (LOWER PART)											
196	5SV5			AFT	(a60)			C:SV5						POS 78	
197				TUNING FREQUENCY (HIGHER PART)											
198				TUNING FREQUENCY (LOWER PART)											
199	5SV5			AFT	(a60)			C:SV5						POS 79	
200				TUNING FREQUENCY (HIGHER PART)											
201				TUNING FREQUENCY (LOWER PART)											
202	5SV5			AFT	(a60)			C:SV5						POS 80	
203				TUNING FREQUENCY (HIGHER PART)											
204				TUNING FREQUENCY (LOWER PART)											
205	5SV5			AFT	(a60)			C:SV5						POS 81	
206				TUNING FREQUENCY (HIGHER PART)											
207				TUNING FREQUENCY (LOWER PART)											
208	5SV5			AFT	(a60)			C:SV5						POS 82	
209				TUNING FREQUENCY (HIGHER PART)											
210				TUNING FREQUENCY (LOWER PART)											
211	5SV5			AFT	(a60)			C:SV5						POS 83	
212				TUNING FREQUENCY (HIGHER PART)											
213				TUNING FREQUENCY (LOWER PART)											
214	5SV5			AFT	(a60)			C:SV5						POS 84	
215				TUNING FREQUENCY (HIGHER PART)											
216				TUNING FREQUENCY (LOWER PART)											
217	5SV5			AFT	(a60)			C:SV5						POS 85	
218				TUNING FREQUENCY (HIGHER PART)											
219				TUNING FREQUENCY (LOWER PART)											
220	5SV5			AFT	(a60)			C:SV5						POS 86	
221				TUNING FREQUENCY (HIGHER PART)											
222				TUNING FREQUENCY (LOWER PART)											
223	5SV5			AFT	(a60)			C:SV5						POS 87	
224				TUNING FREQUENCY (HIGHER PART)											
225				TUNING FREQUENCY (LOWER PART)											
226	5SV5			AFT	(a60)			C:SV5						POS 88	
227				TUNING FREQUENCY (HIGHER PART)											
228				TUNING FREQUENCY (LOWER PART)											
229	5SV5			AFT	(a60)			C:SV5						POS 89	
230				TUNING FREQUENCY (HIGHER PART)											
231				TUNING FREQUENCY (LOWER PART)											
232	5SV5			AFT	(a60)			C:SV5						POS 90	
233				TUNING FREQUENCY (HIGHER PART)											
234				TUNING FREQUENCY (LOWER PART)											
235	5SV5			AFT	(a60)			C:SV5						POS 91	
236				TUNING FREQUENCY (HIGHER PART)											
237				TUNING FREQUENCY (LOWER PART)											
238	5SV5			AFT	(a60)			C:SV5						POS 92	
239				TUNING FREQUENCY (HIGHER PART)											
240				TUNING FREQUENCY (LOWER PART)											
241	5SV5			AFT	(a60)			C:SV5						POS 93	
242				TUNING FREQUENCY (HIGHER PART)											
243				TUNING FREQUENCY (LOWER PART)											
244	5SV5			AFT	(a60)										

15-1

GA1 HOTEL MODE APPLICATION

How to enable/disable the "Hotel Mode" ?

- Ans: a) Press the R/C (FUNCTION) {1} key until language selection appear, within five second press the (one/two digit) {2} key and keep pressing it for five second, then you can see the hotel mode with four digits password.
- b) Key in the four digits password starting with number "1" "3" "7" "9", then the hotel mode will be enable, you can switch on/off the hotel mode by using R/C (volume up/down) {3} key.

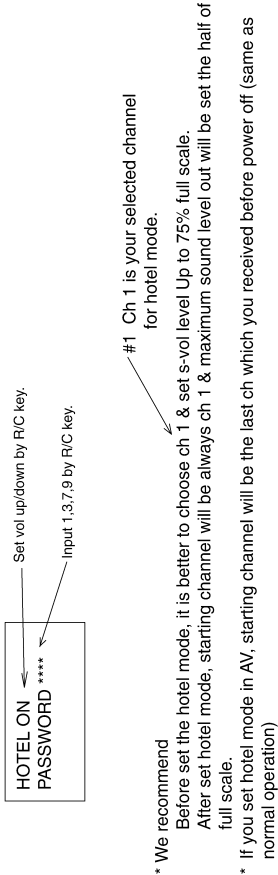


CONDITION:

When using hotel mode, user can control "contrast", "brightness", "sharpness" and "tint" function.
But after power off, it will return to the initial setting.
You can't use:--

- Preset mode
 - Fine tuning
 - Skip mode
 - System selection
- The others function is allowed to be used.

TROUBLE SHOOTING FLOWCHART

NO RASTER

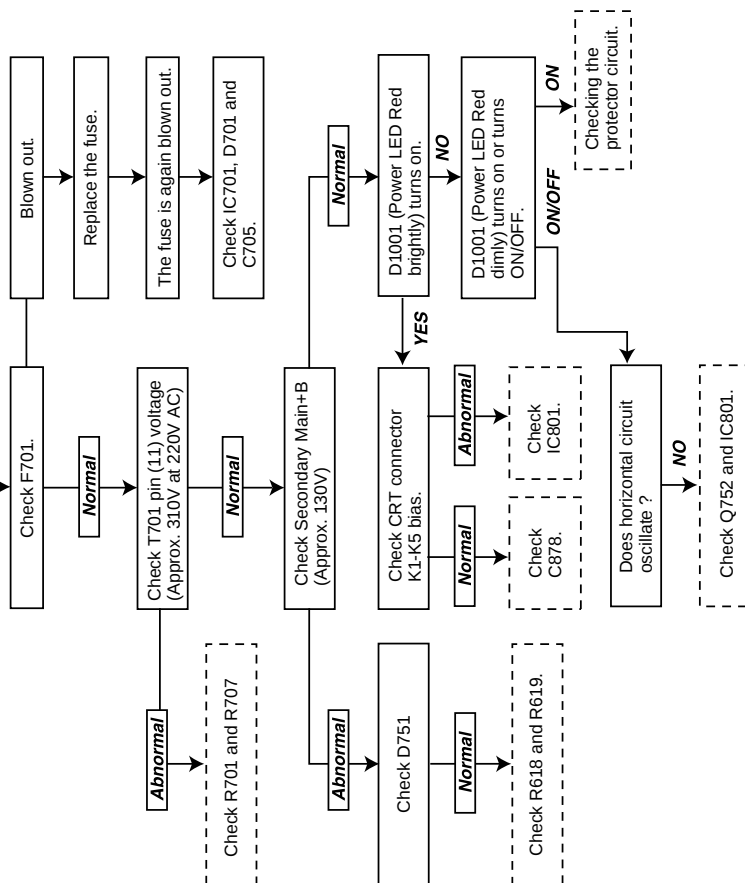


TROUBLE SHOOTING FLOWCHART (Continued)

NO PICTURE, NO SOUND

CIRCUITS TO BE CHECKED:


- Tuner.
- PIF.
- Automatic Gain Control.
- (5V), (32V) Power Source.

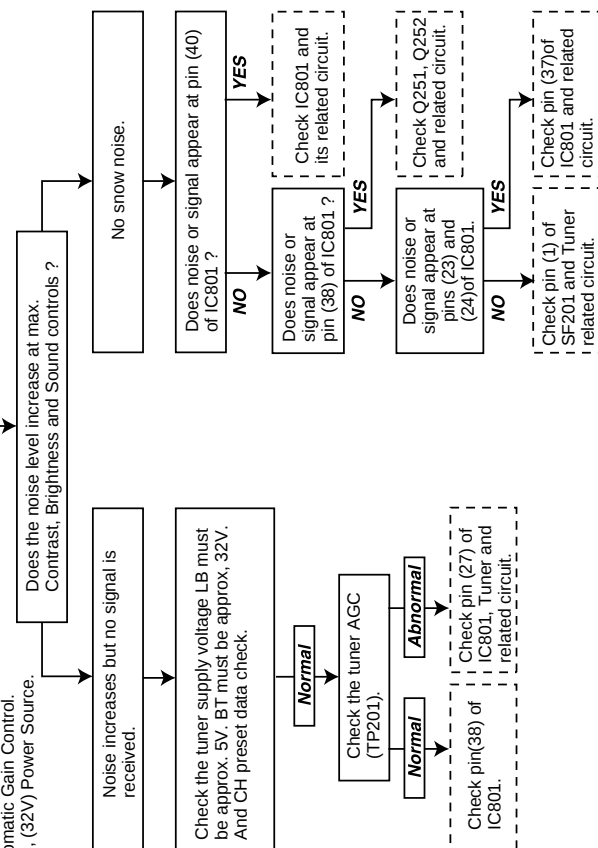

CIRCUITS TO BE CHECKED:


- Sound system pins (28), (29) and (44) of IC801.
- Sound Detector Circuit.
- Sound Switch and Att. Control.
- Audio Output Circuit.

NO SOUND

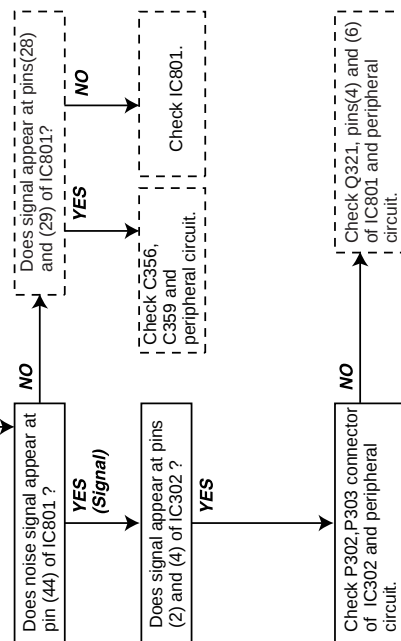




WAVEFORMS (14D1-SA/SF/GA/GF)

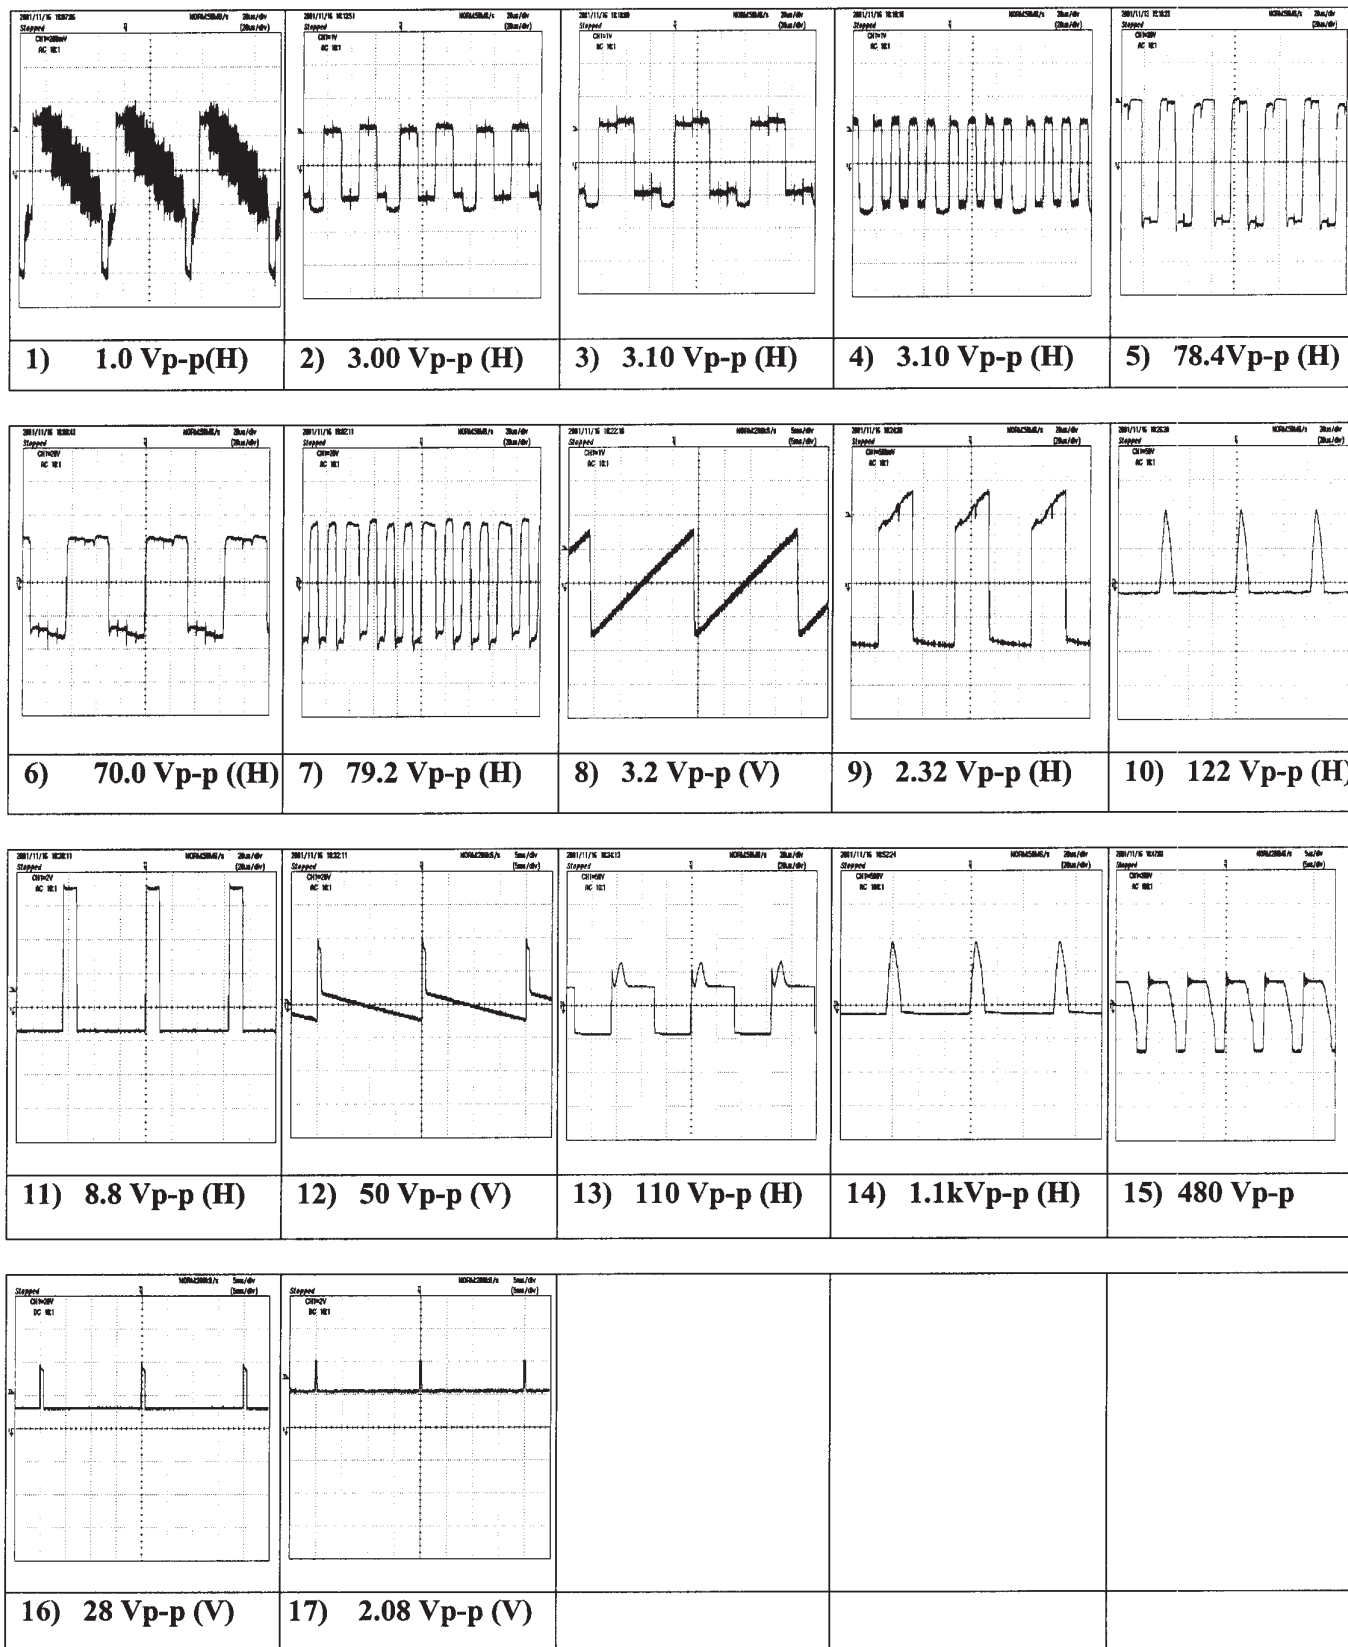


WAVEFORMS (14D2-SA/SF/GA/GF)

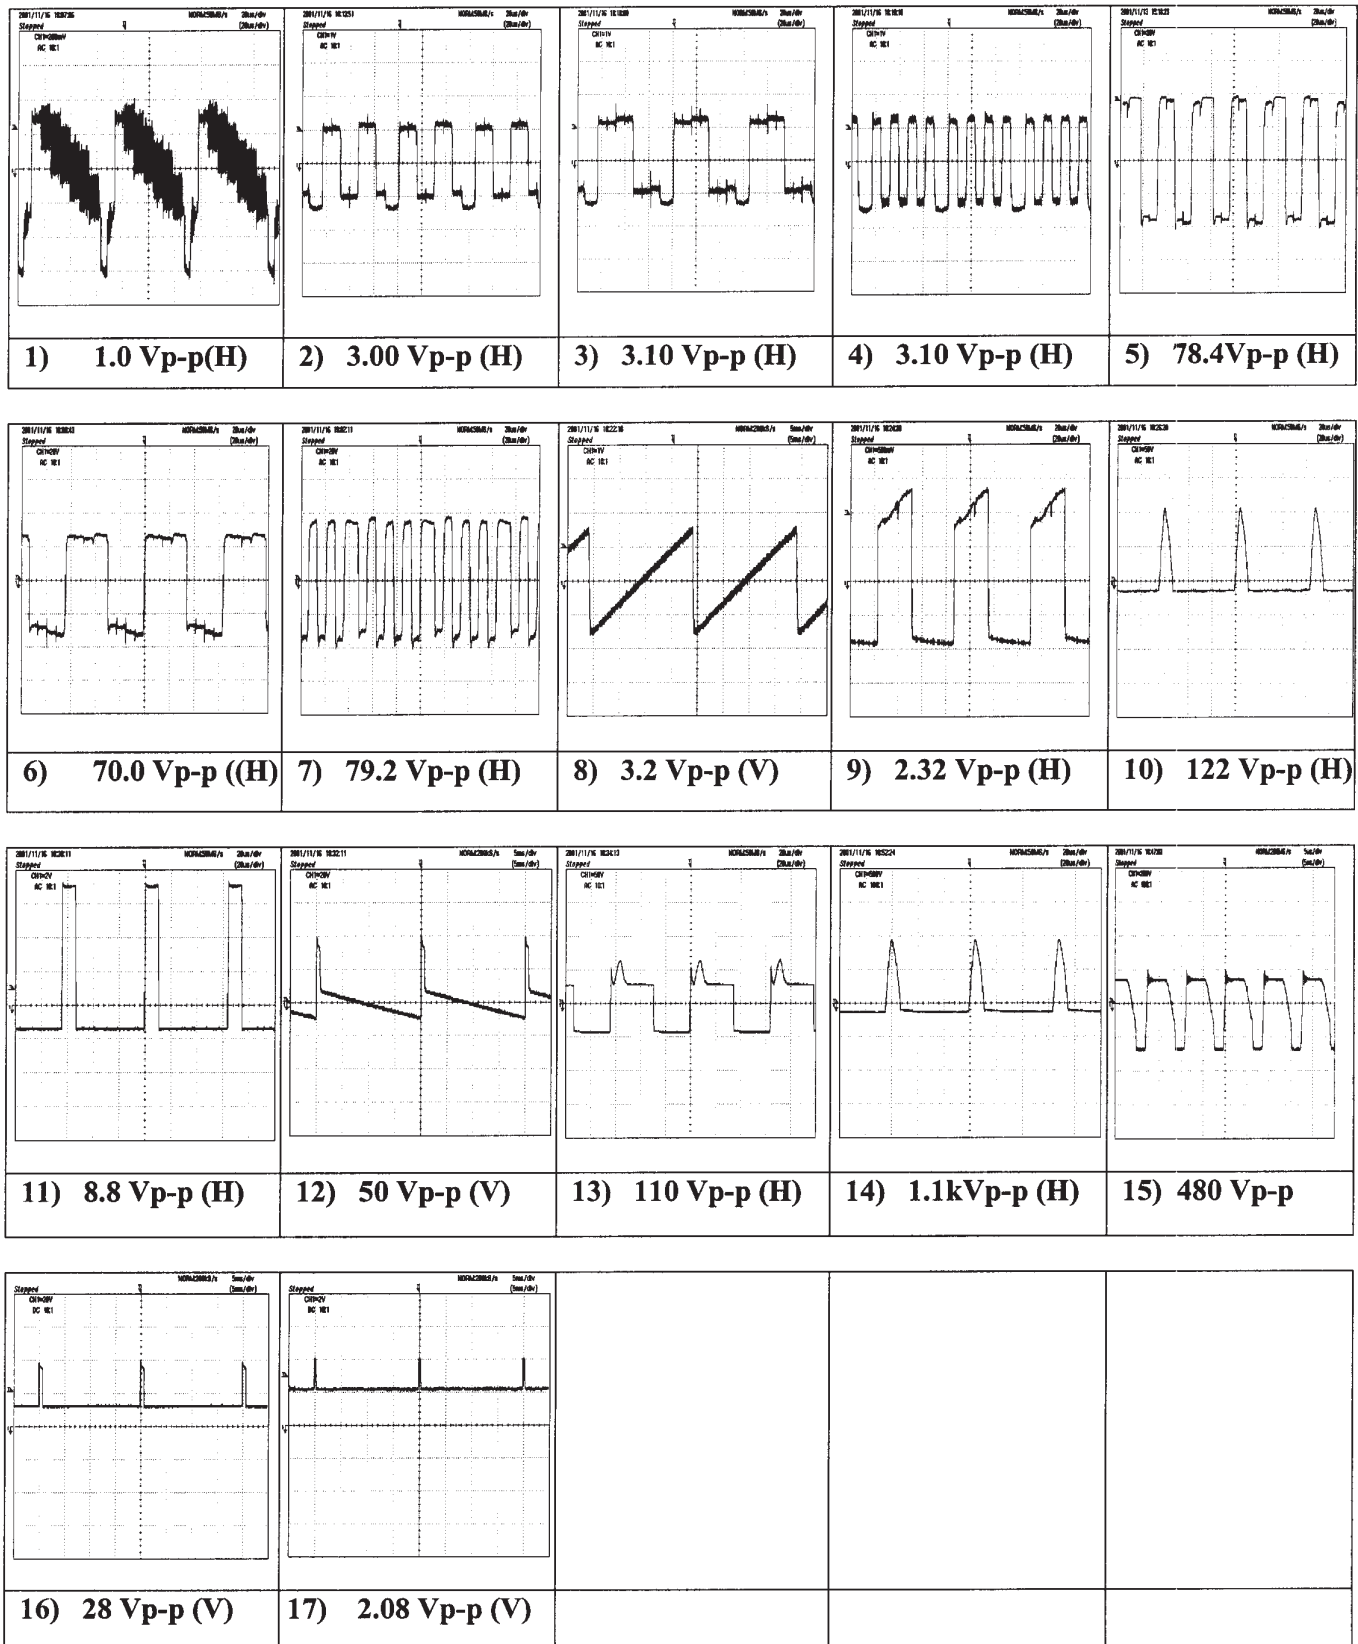


SOLID STATE DEVICE BASE DIAGRAM


TOP VIEW



**CAT24W04
(BR24C04)
(M24C04W)**

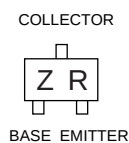

D601A

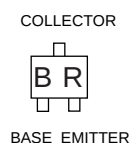


B709A




IX3368CE


SIDE VIEW

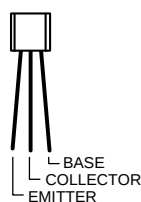


**TX0110BM
TX0124BM
2SC3198**

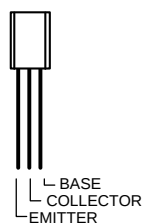


2SC3207

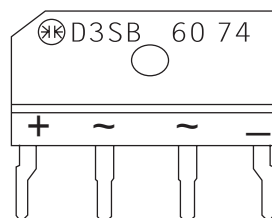


DX0476CE




2SD2586

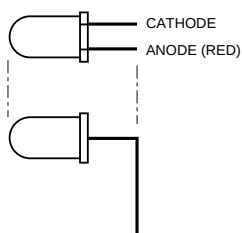


PX0013PE

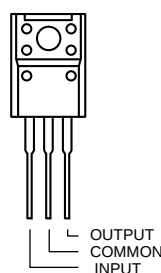


KA7808A

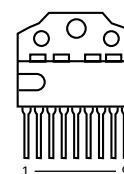

AN7523

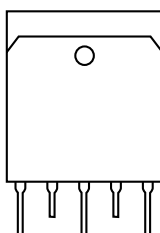

STRG5653

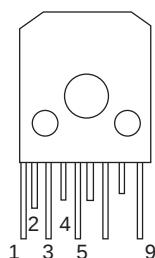


AN5522


- M E M O -

This image shows a full page of white paper with horizontal dashed lines, typical of primary-ruled notebook paper. The lines are evenly spaced and run across the width of the page. There is no handwriting or other markings on the paper.


CHASSIS LAYOUT (14D1-SA/GA)

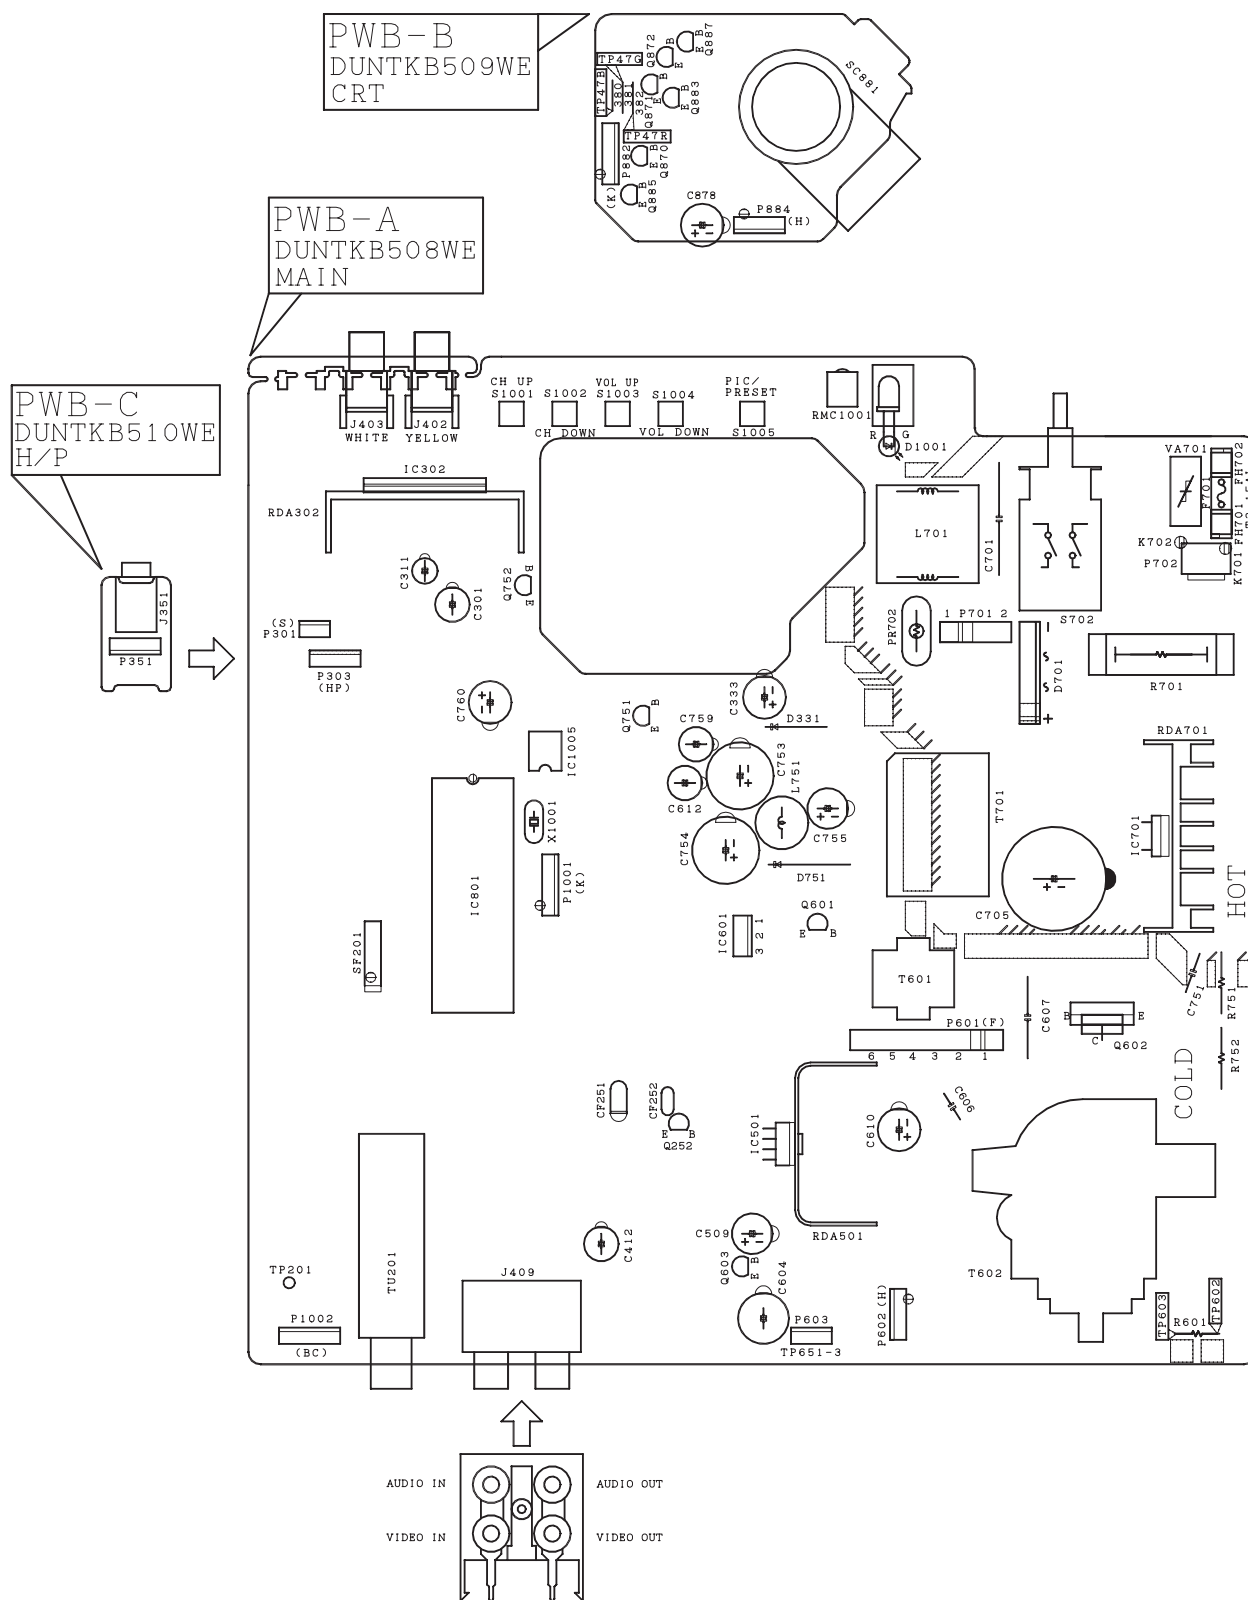


CHASSIS LAYOUT (14D1-SF/GF)

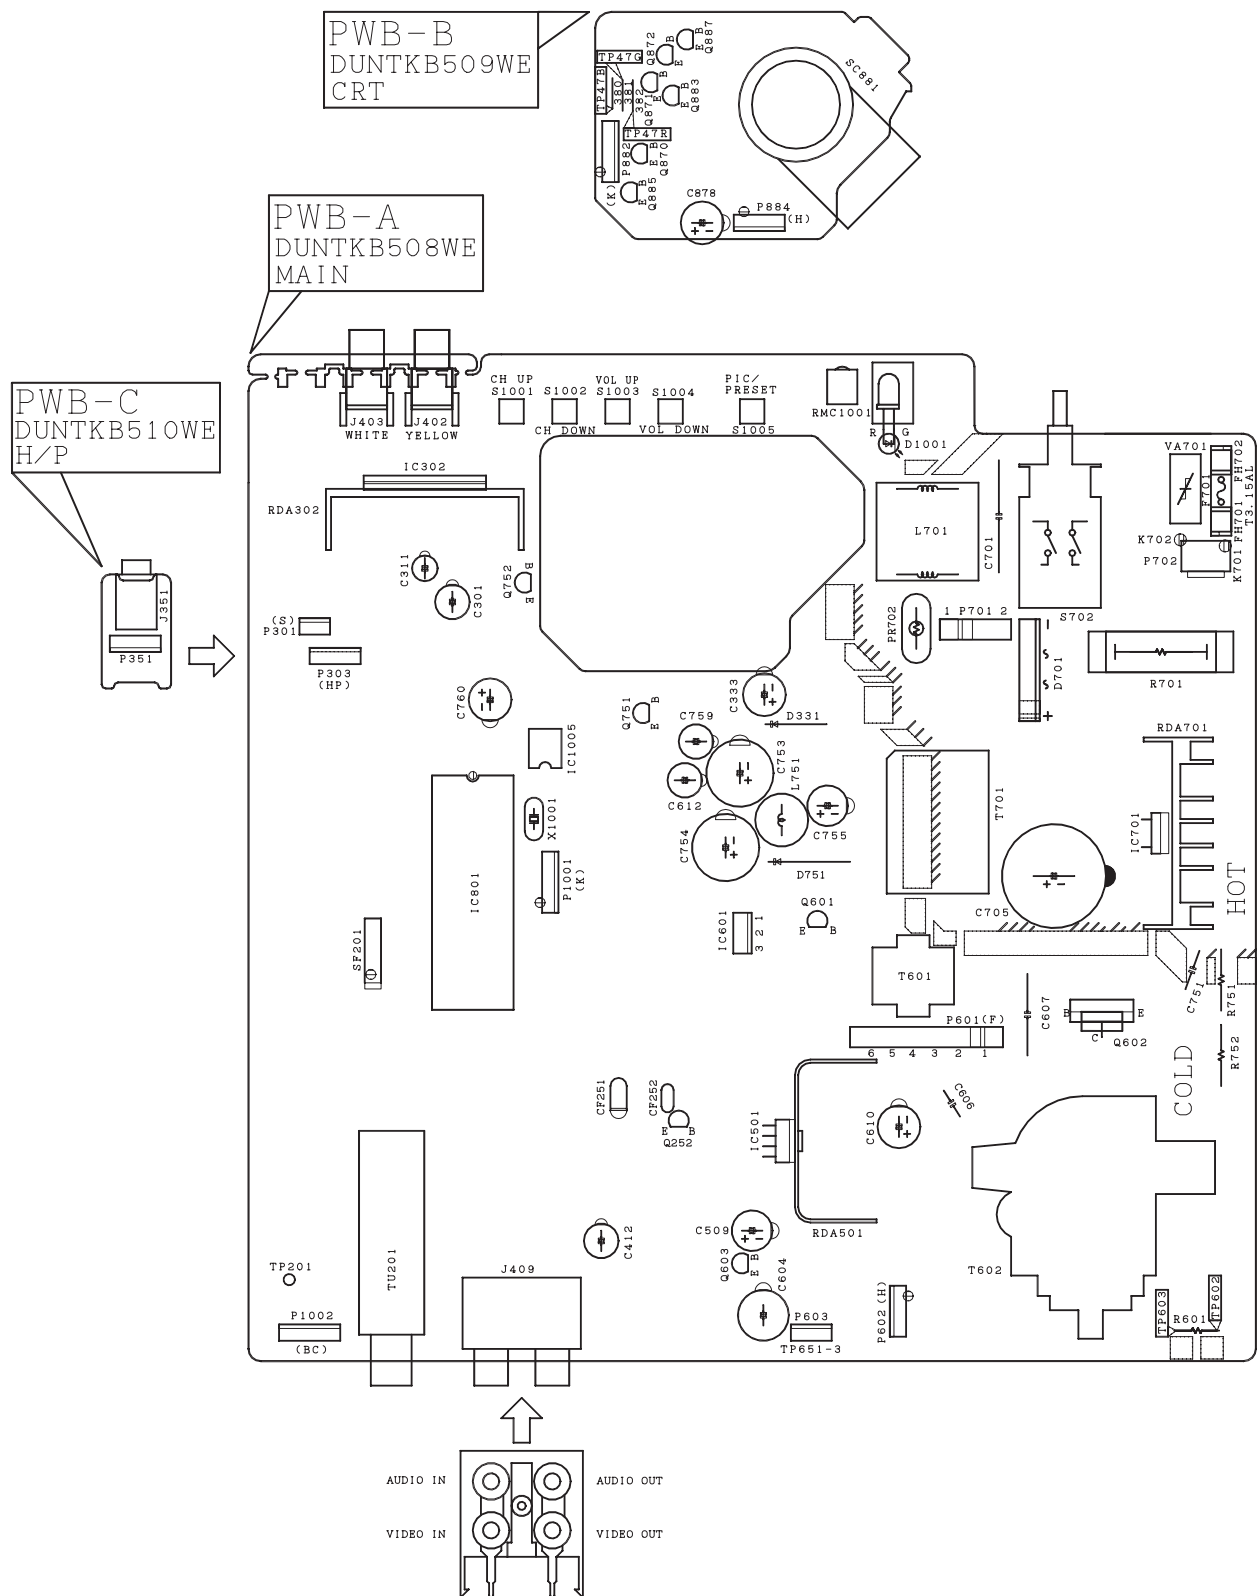


CHASSIS LAYOUT (14D2-SA/GA)

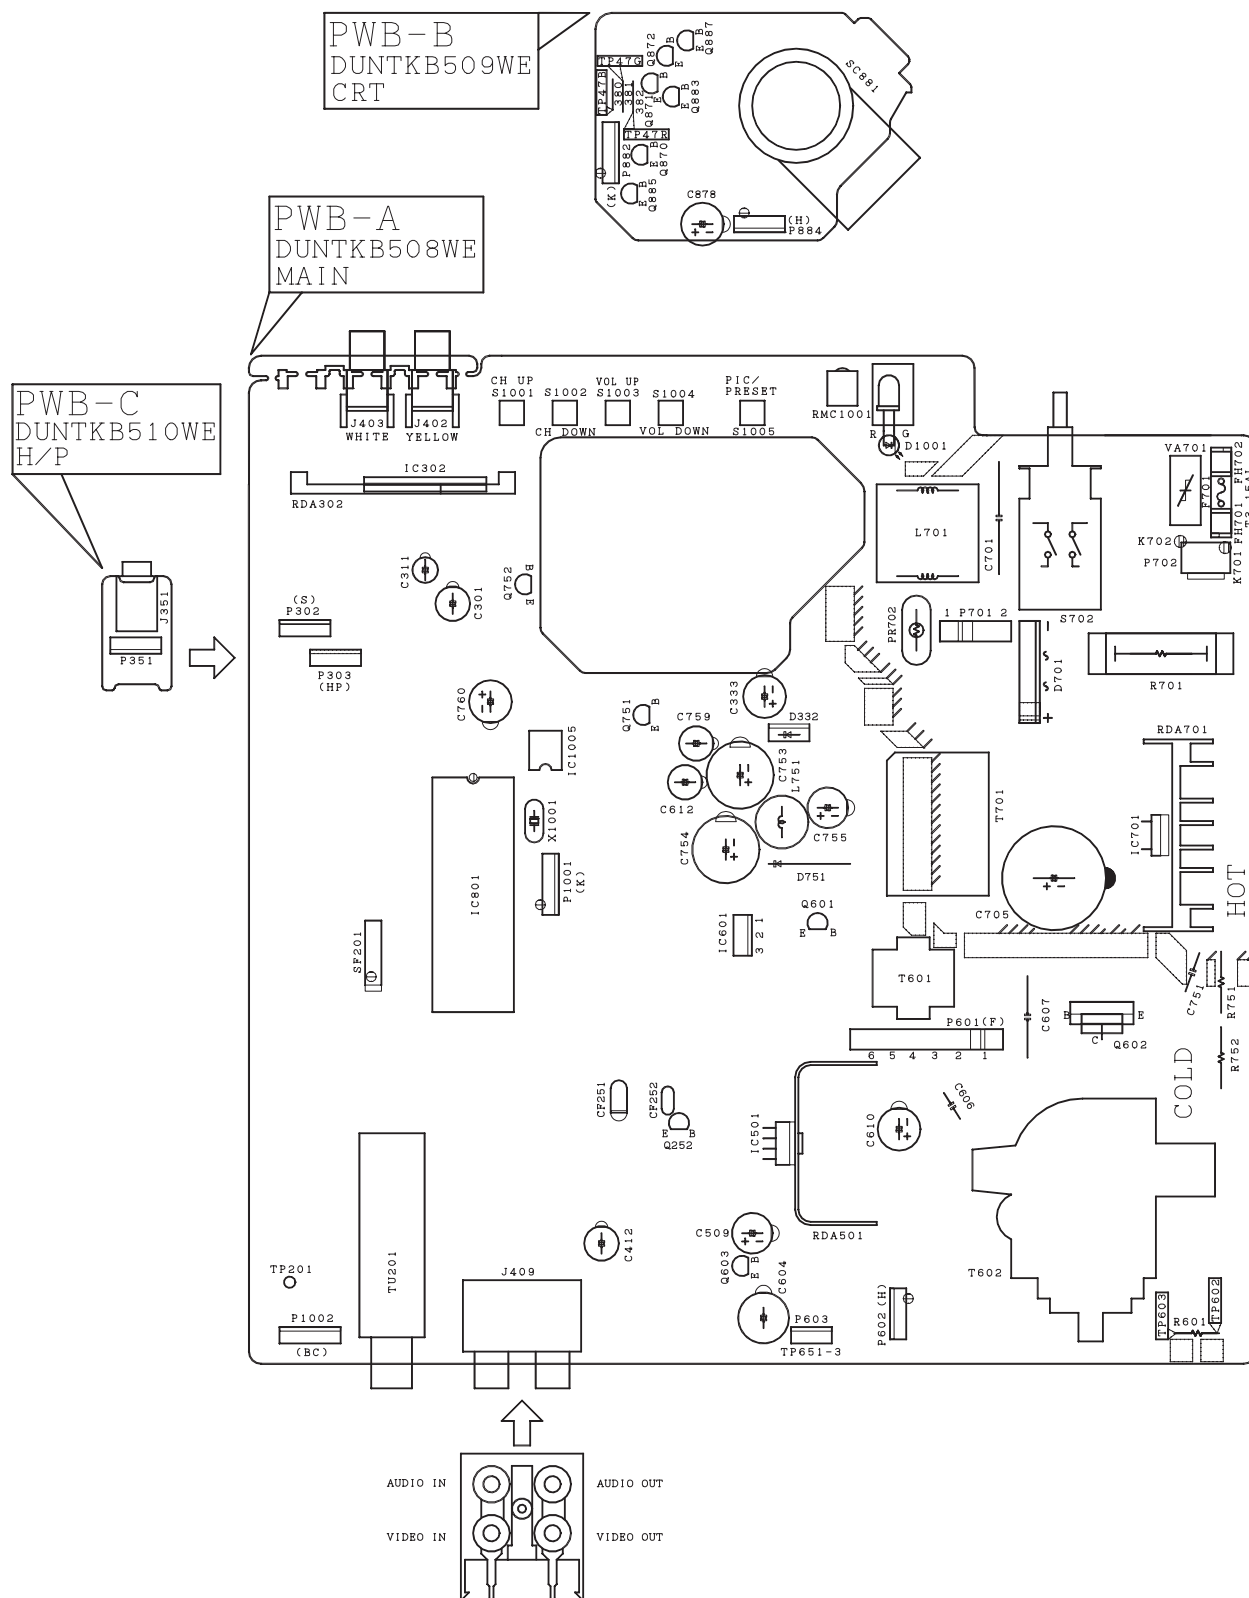


BLOCK DIAGRAM:CRT UNIT (14D1-SA/SF/GA/GF)

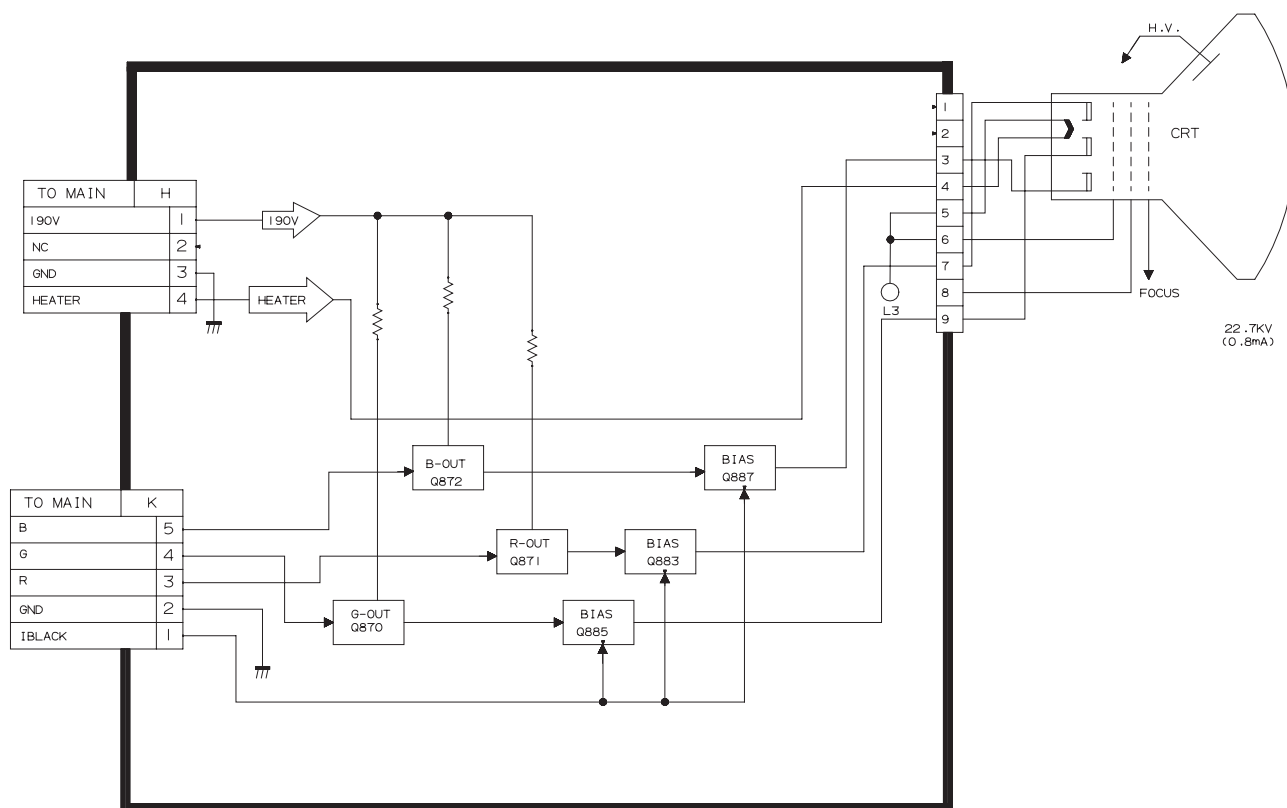


BLOCK DIAGRAM:CRT UNIT (14D2-SA/SF/GA/GF)

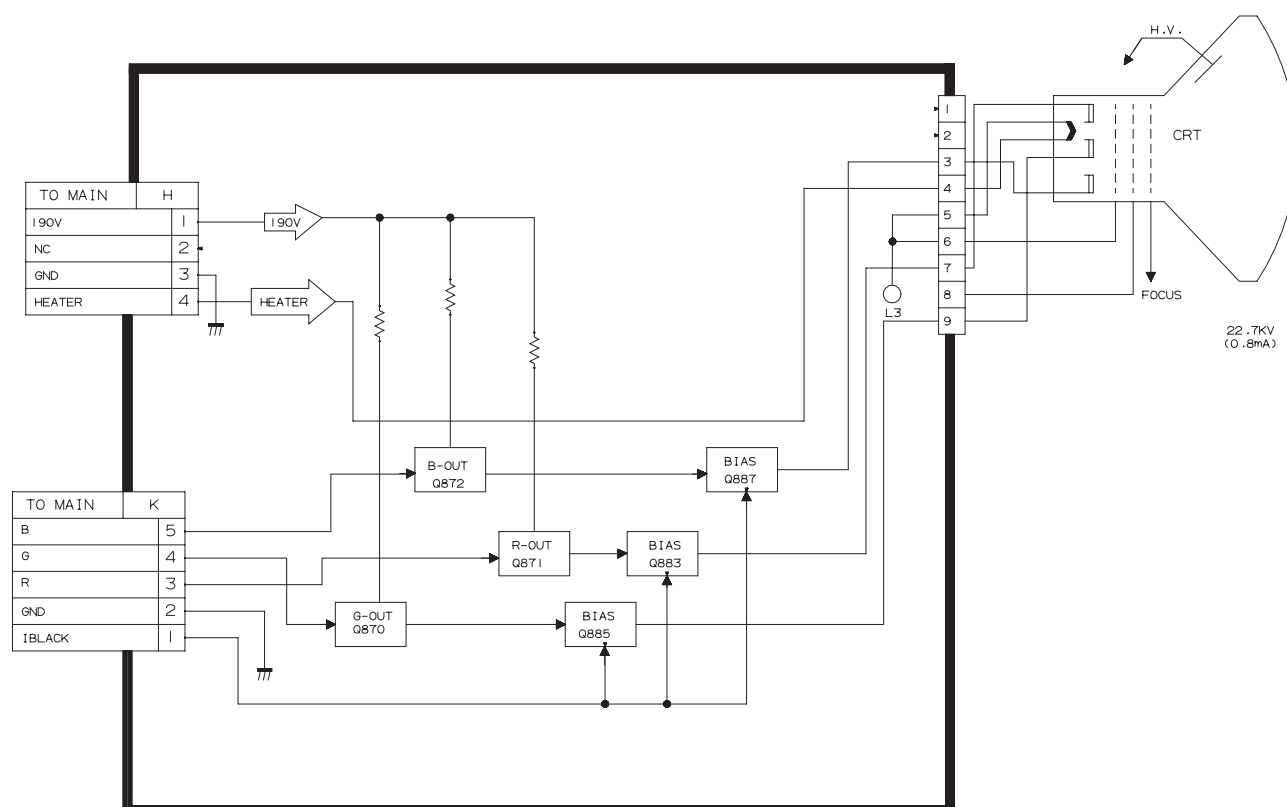



BLOCK DIAGRAM:MAIN UNIT (14D1-SA/SF/GA/GF)

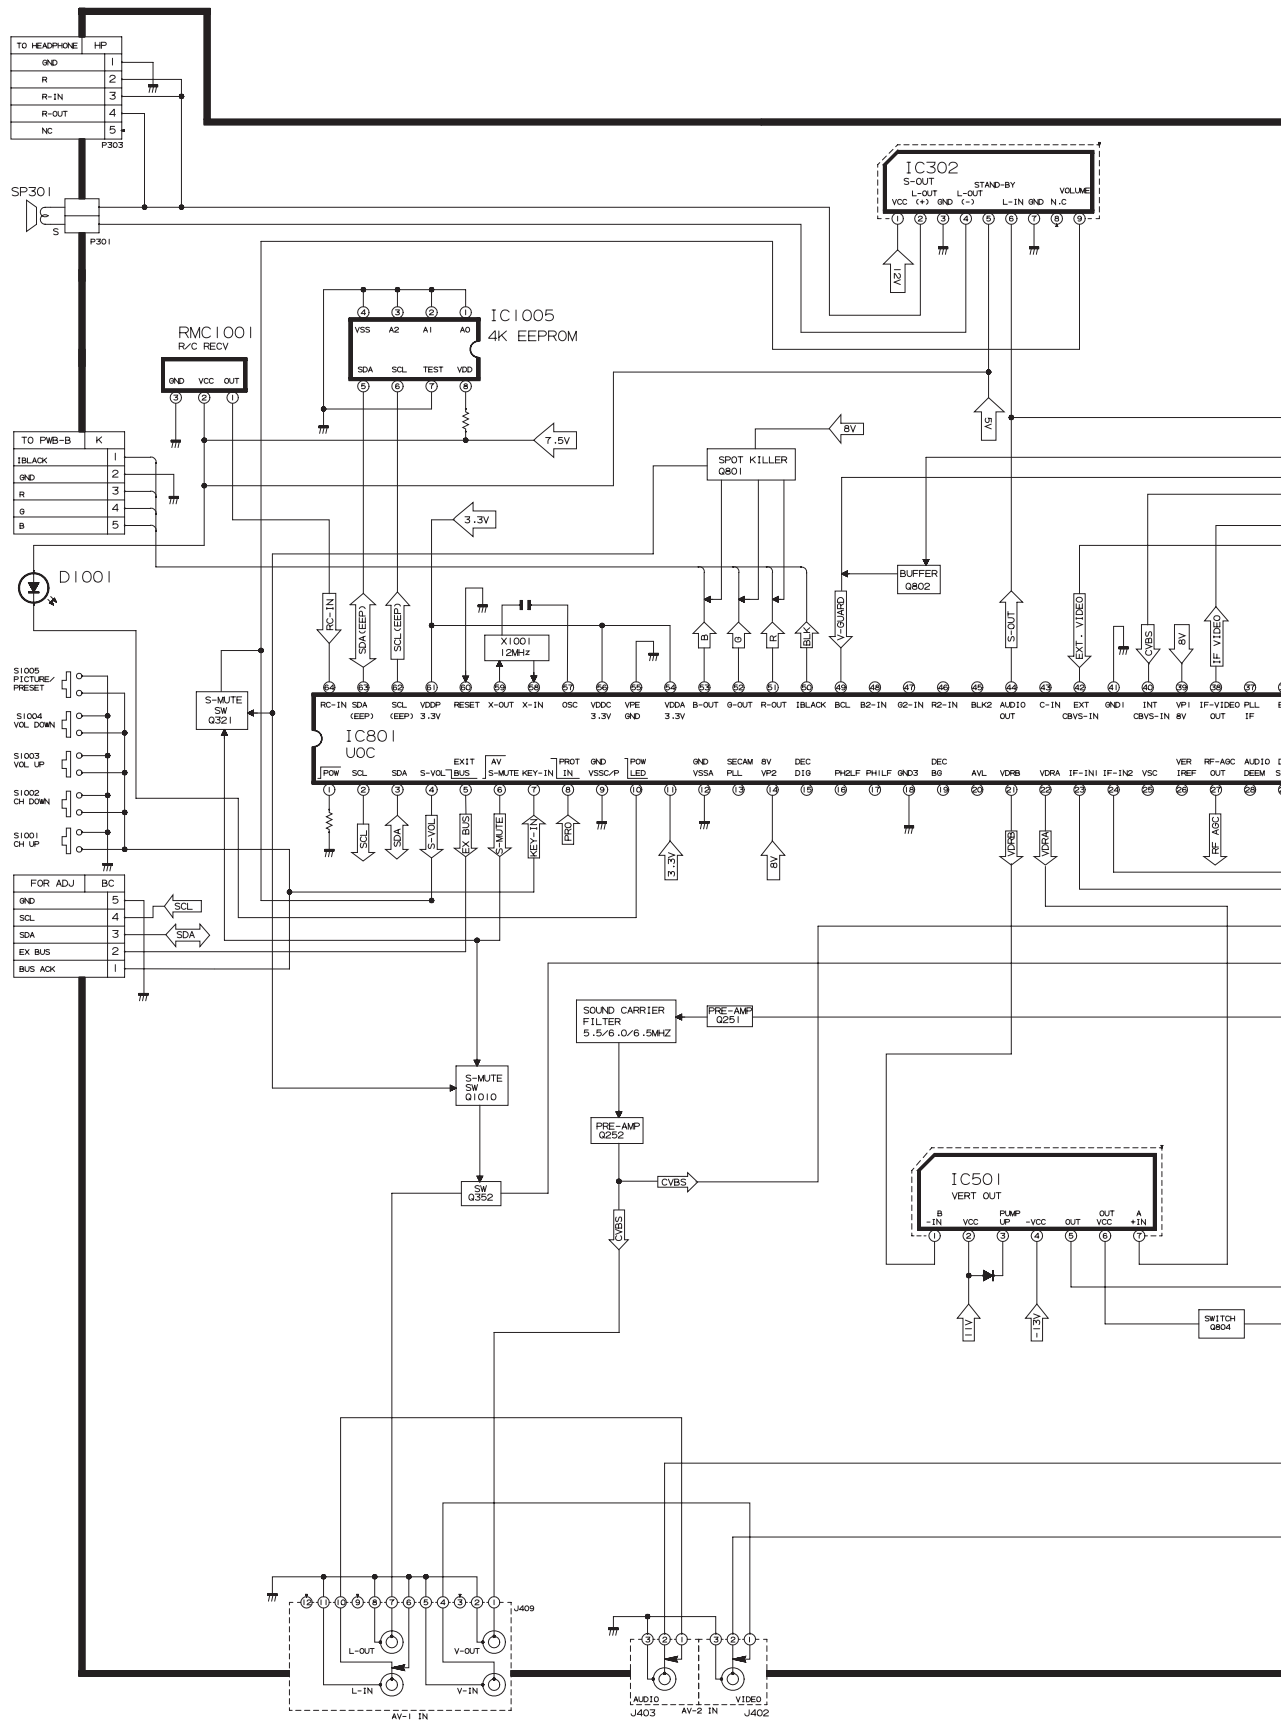

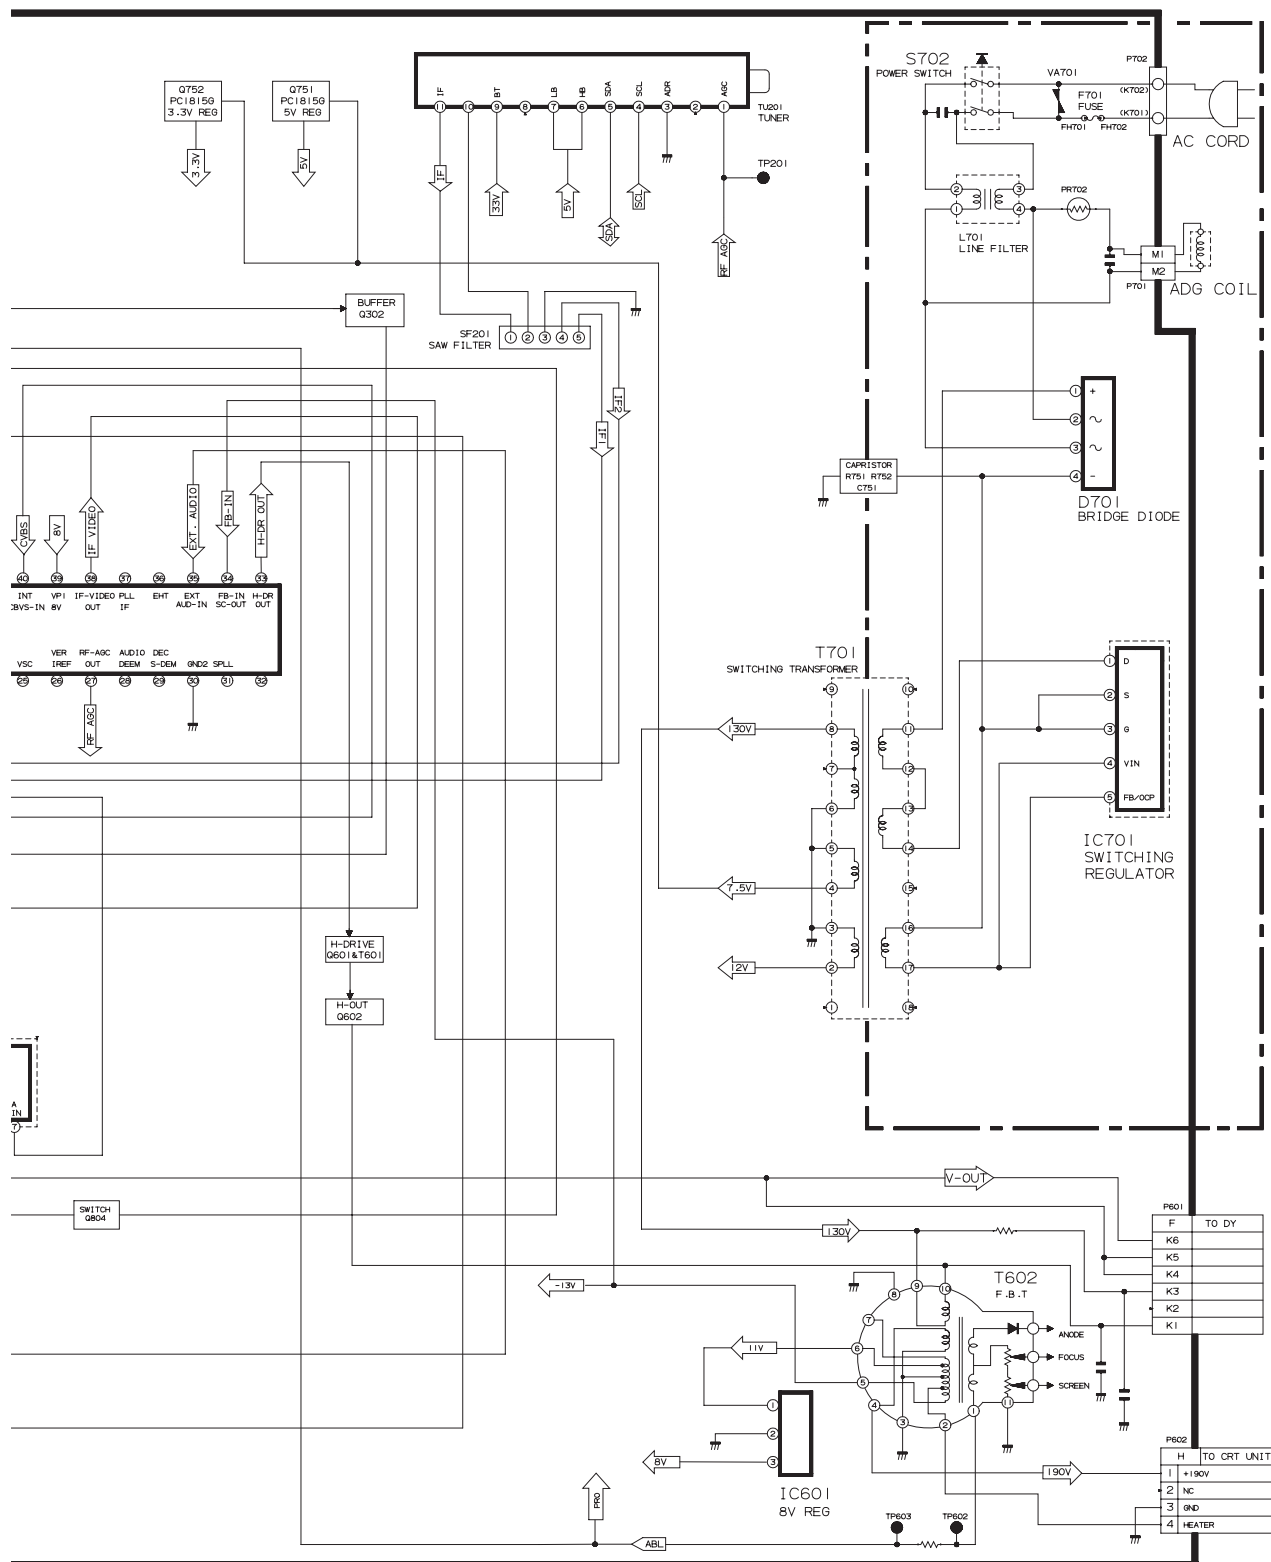


BLOCK DIAGRAM:MAIN UNIT (14D2-SA/SF/GA/GF)

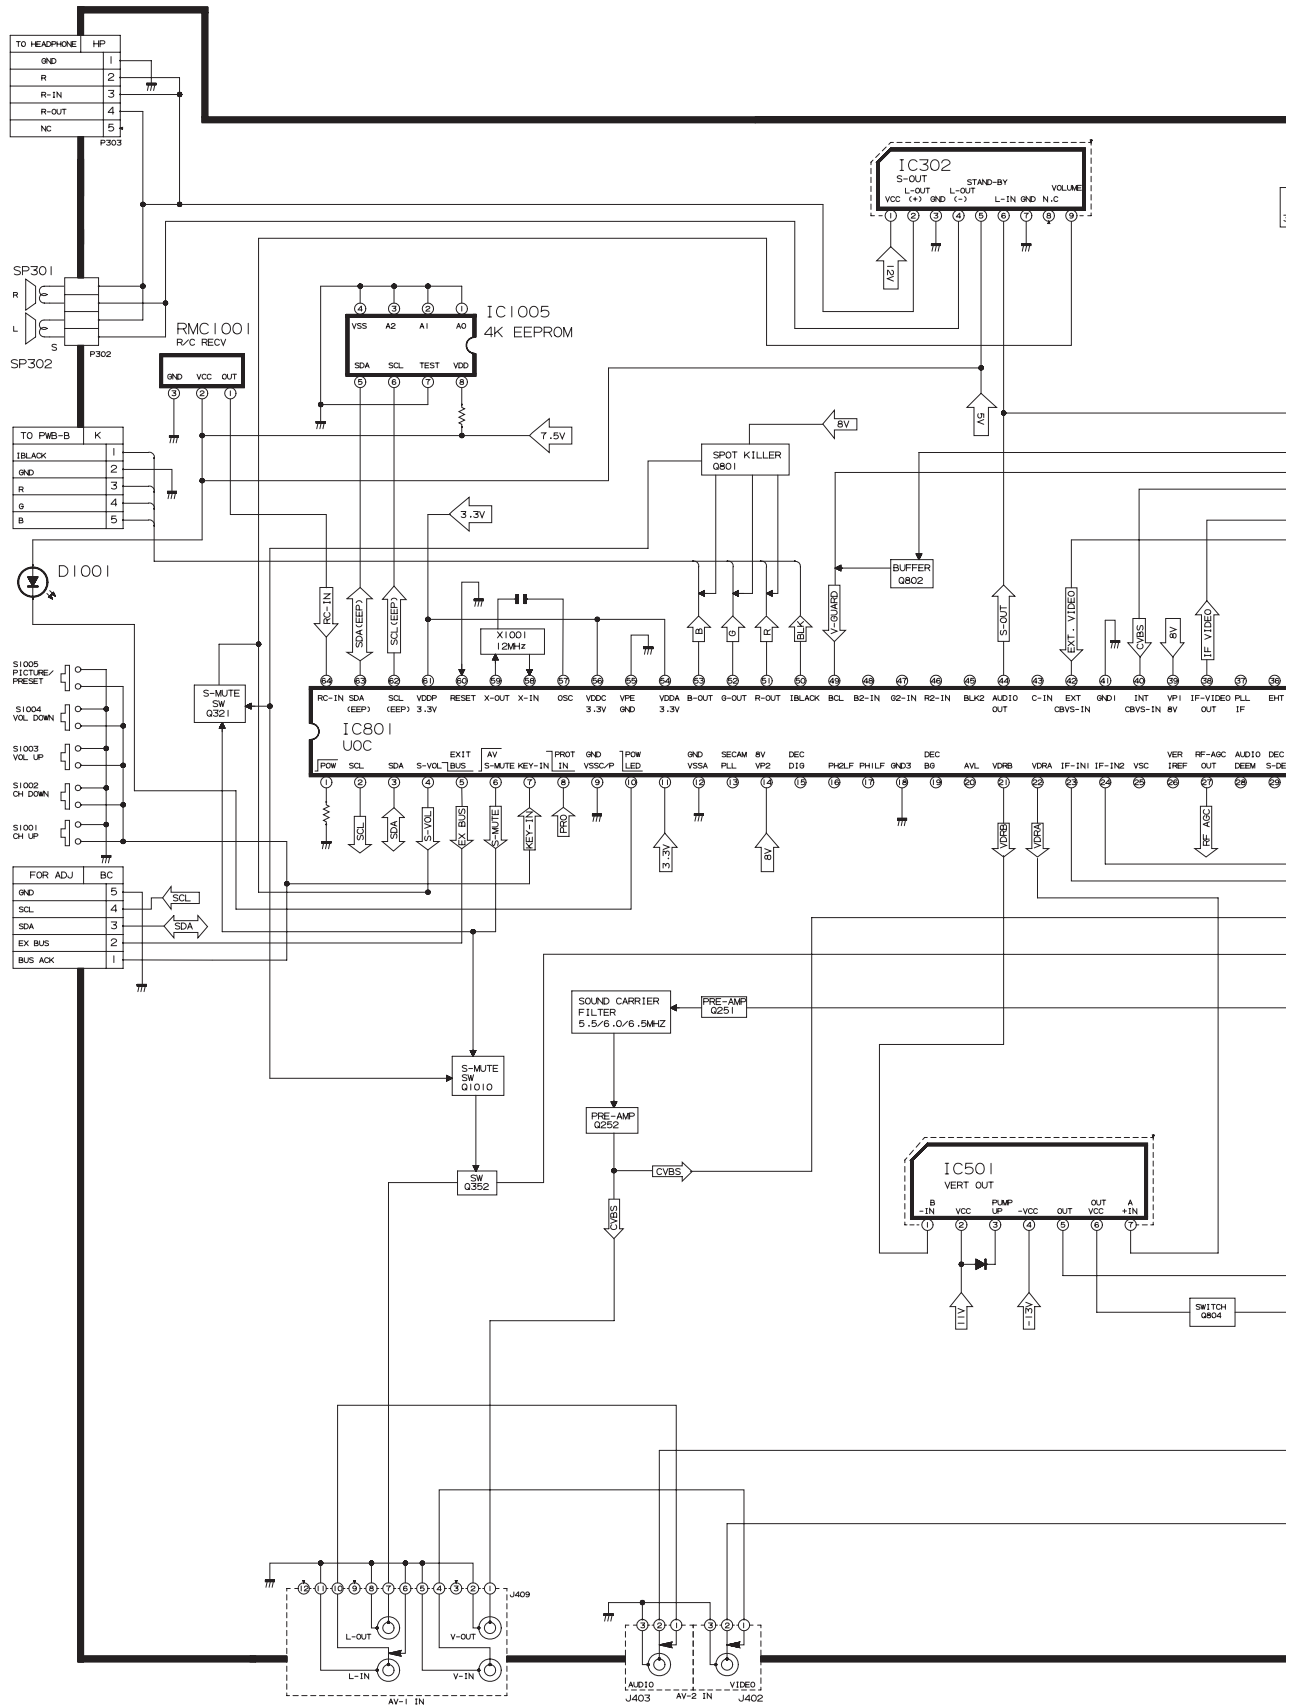


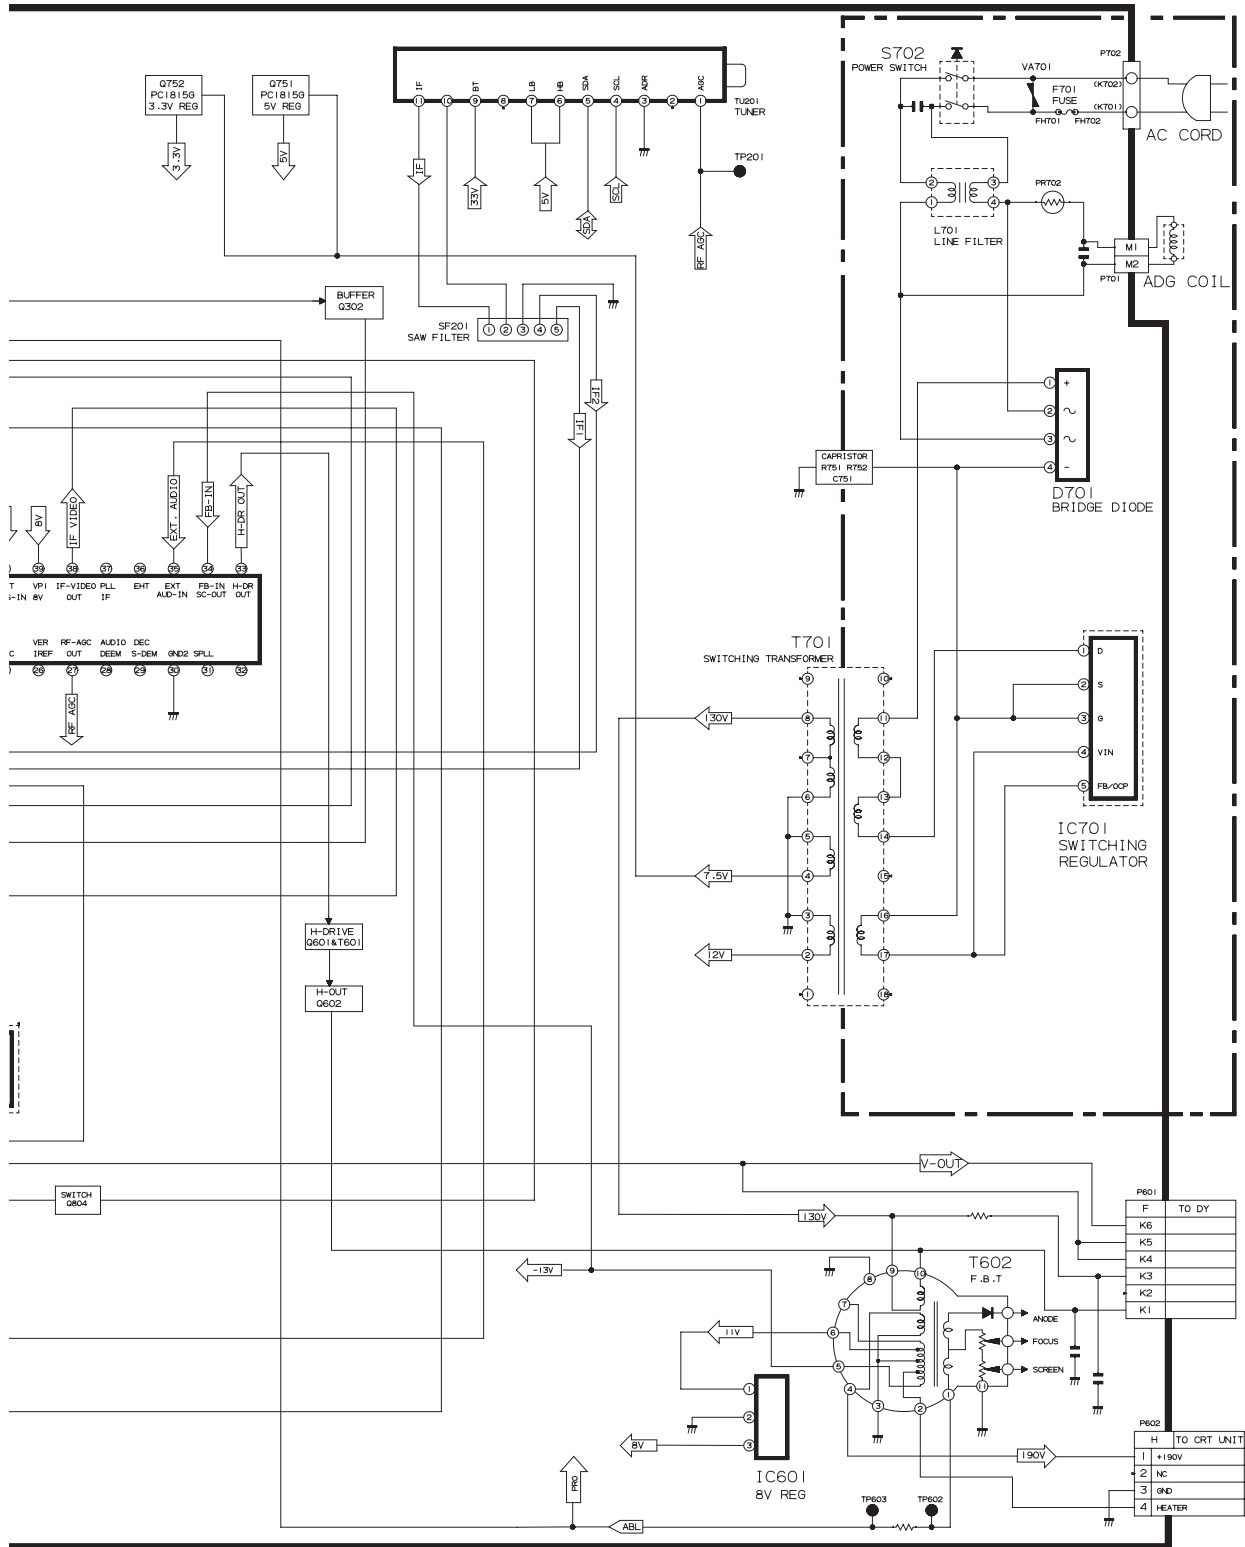

BLOCK DIAGRAM:HEADPHONE UNIT (14D1-SA/SF/GA/GF)

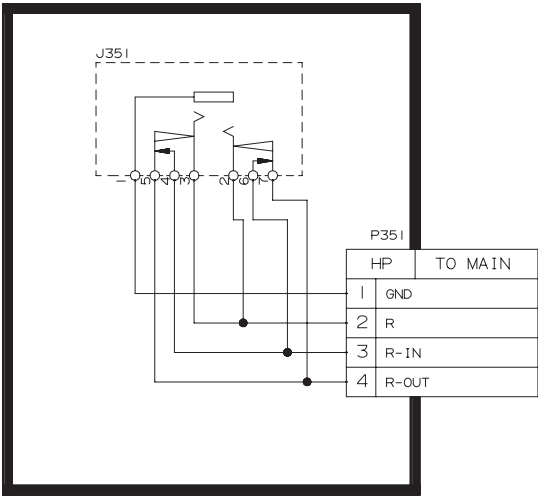

BLOCK DIAGRAM:HEADPHONE UNIT (14D2-SA/SF/GA/GF)

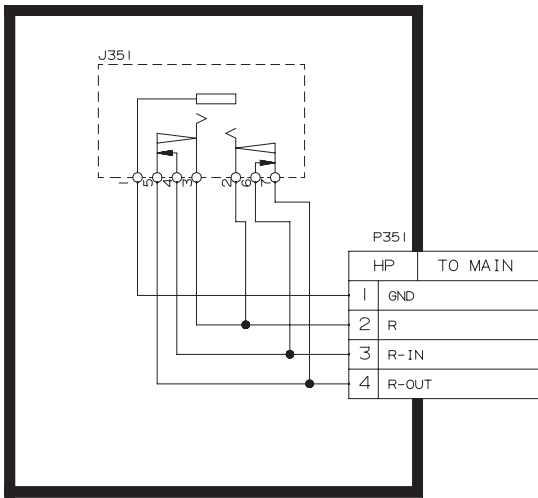

DESCRIPTION OF SCHEMATIC DIAGRAM

SAFETY NOTES:

1. DISCONNECT THE AC PLUG FROM THE AC OUTLET BEFORE REPLACING PARTS.
2. SEMICONDUCTOR HEAT SINKS SHOULD BE REGARDED AS POTENTIAL SHOCK HAZARDS WHEN THE CHASSIS IS OPERATING.

IMPORTANT SAFETY NOTICE:

PARTS MARKED WITH "△" () ARE IMPORTANT FOR MAINTAINING THE SAFETY OF THE SET. BE SURE TO REPLACE THESE PARTS WITH SPECIFIED ONES FOR MAINTAINING THE SAFETY AND PERFORMANCE OF THE SET.

SERVICE PRECAUTION:

THE AREA ENCLOSED BY THIS LINE (— - —) IS DIRECTLY CONNECTED WITH AC MAINS VOLTAGE.
WHEN SERVICING THE AREA, CONNECT AN ISOLATING TRANSFORMER BETWEEN TV RECEIVER AND AC LINE TO ELIMINATE HAZARD OF ELECTRIC SHOCK.

NOTES:

1. The unit of resistance "ohm" is omitted.
(K = 1000 ohms, M = Mega ohm).
2. All resistors are 1/10 watt, unless otherwise noted.
3. All capacitors are μF , unless otherwise noted. (P = $\mu\mu F$).


VOLTAGE MEASUREMENT CONDITIONS:

1. Voltages in parenthesis measured with no signal.
2. Voltages without parenthesis measured with 3mV B & W or Colour signal.
3. All the voltages in each point are measured with VTVM.


WAVEFORM MEASUREMENT CONDITIONS:

1. The colour bar generator signal of 2.0V peak applied at of Base Video Buffer Amp. Q252.
2. Approximately 4V AGC bias.



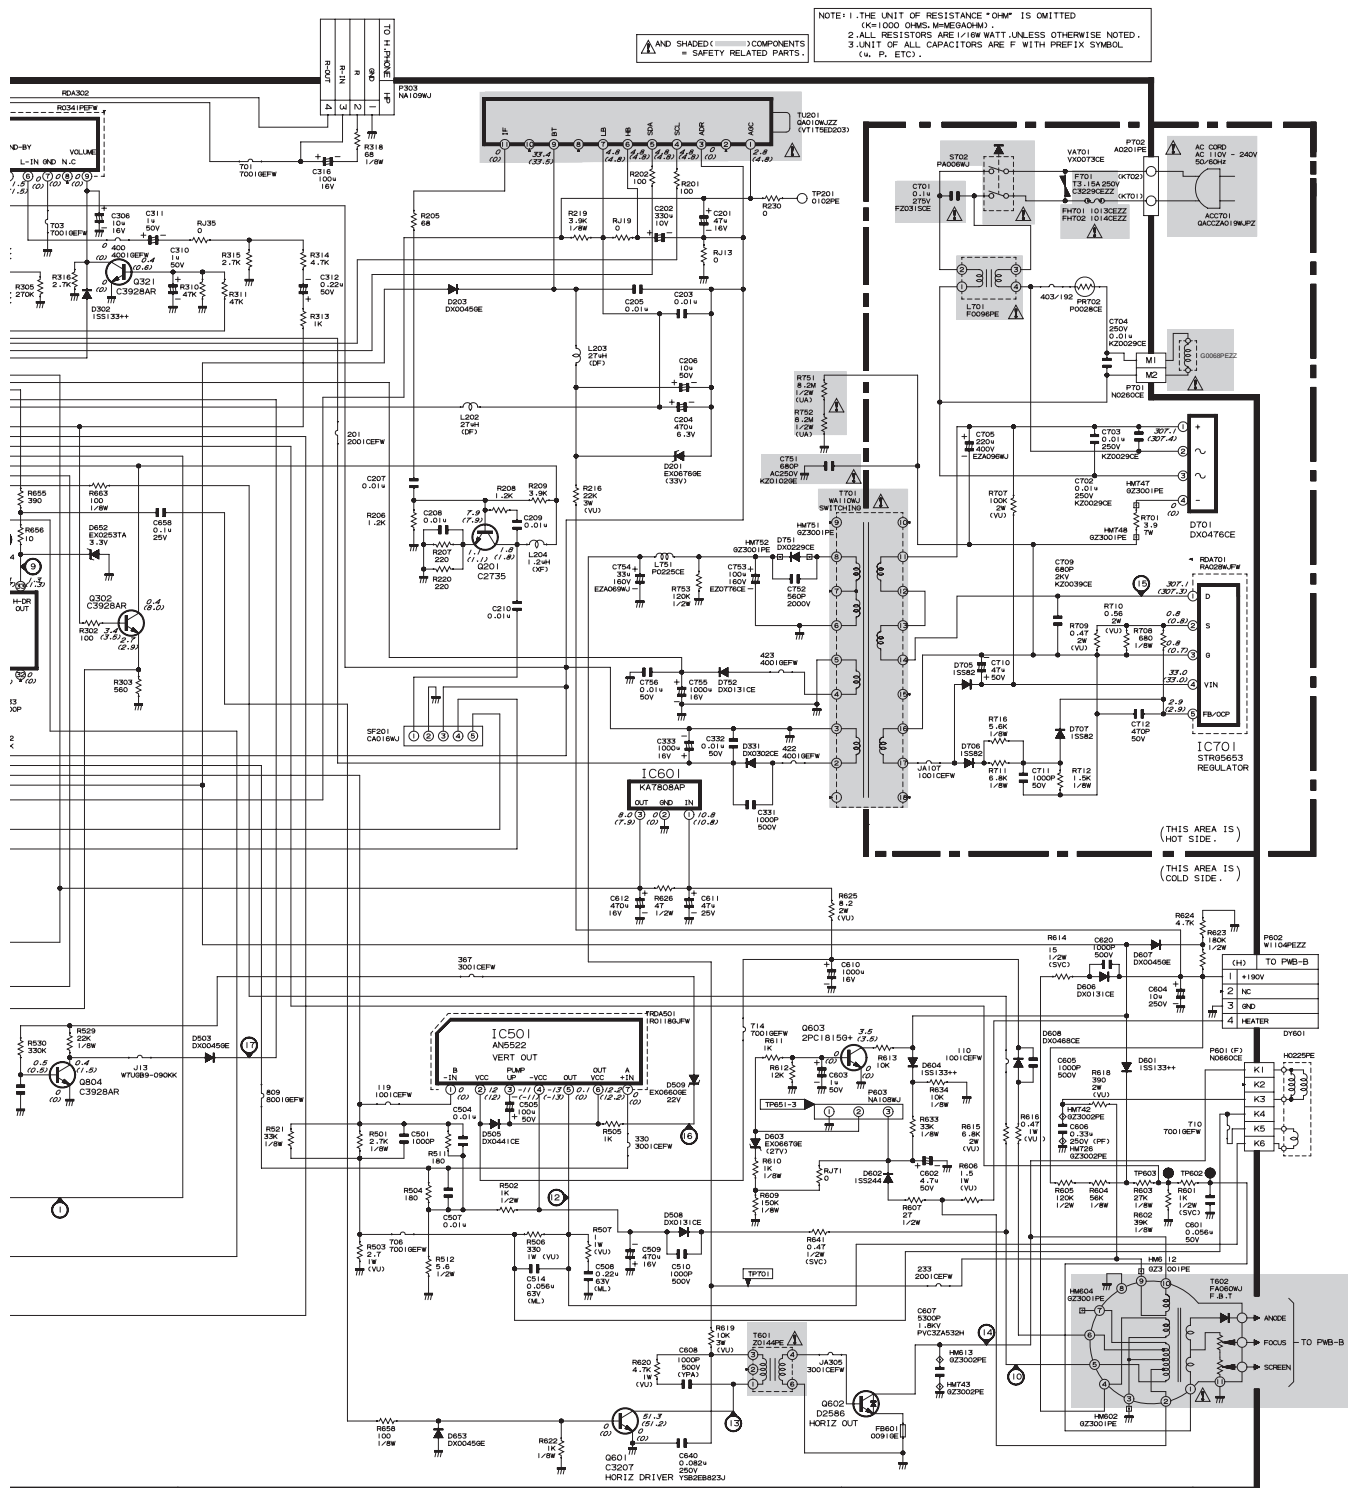




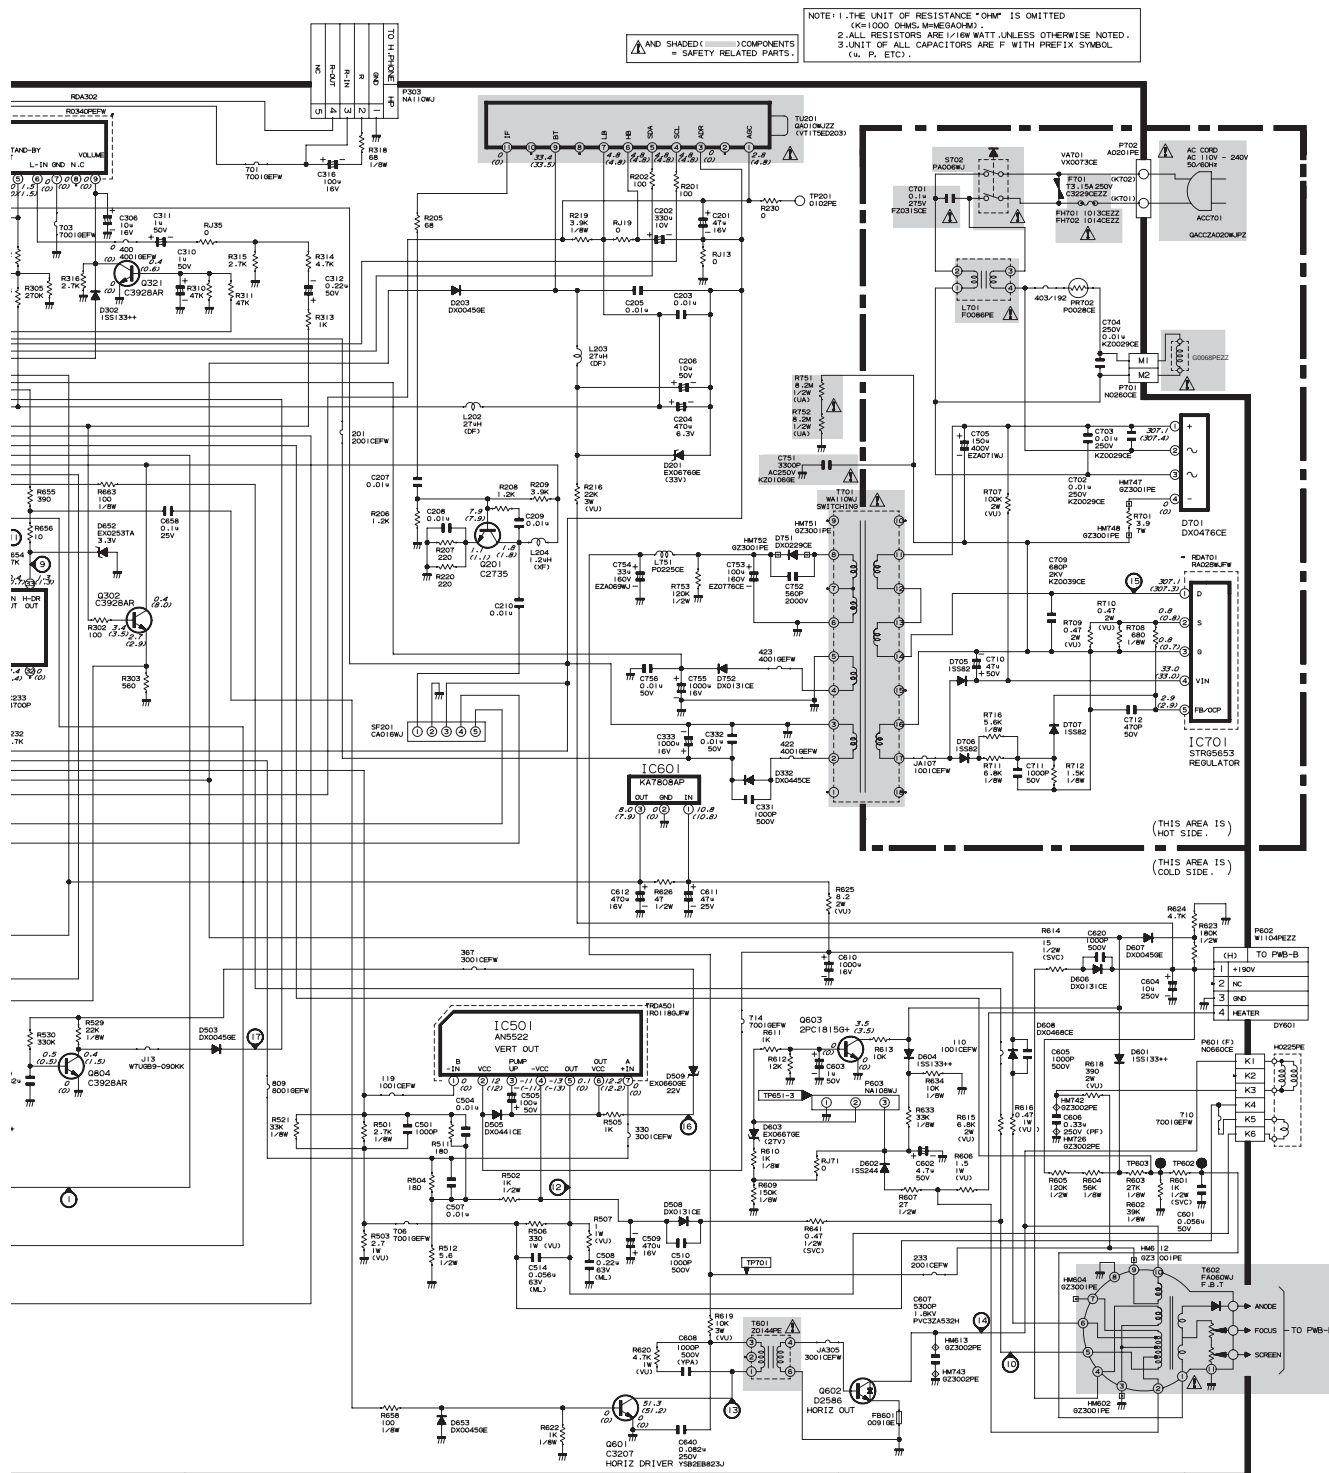


10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----




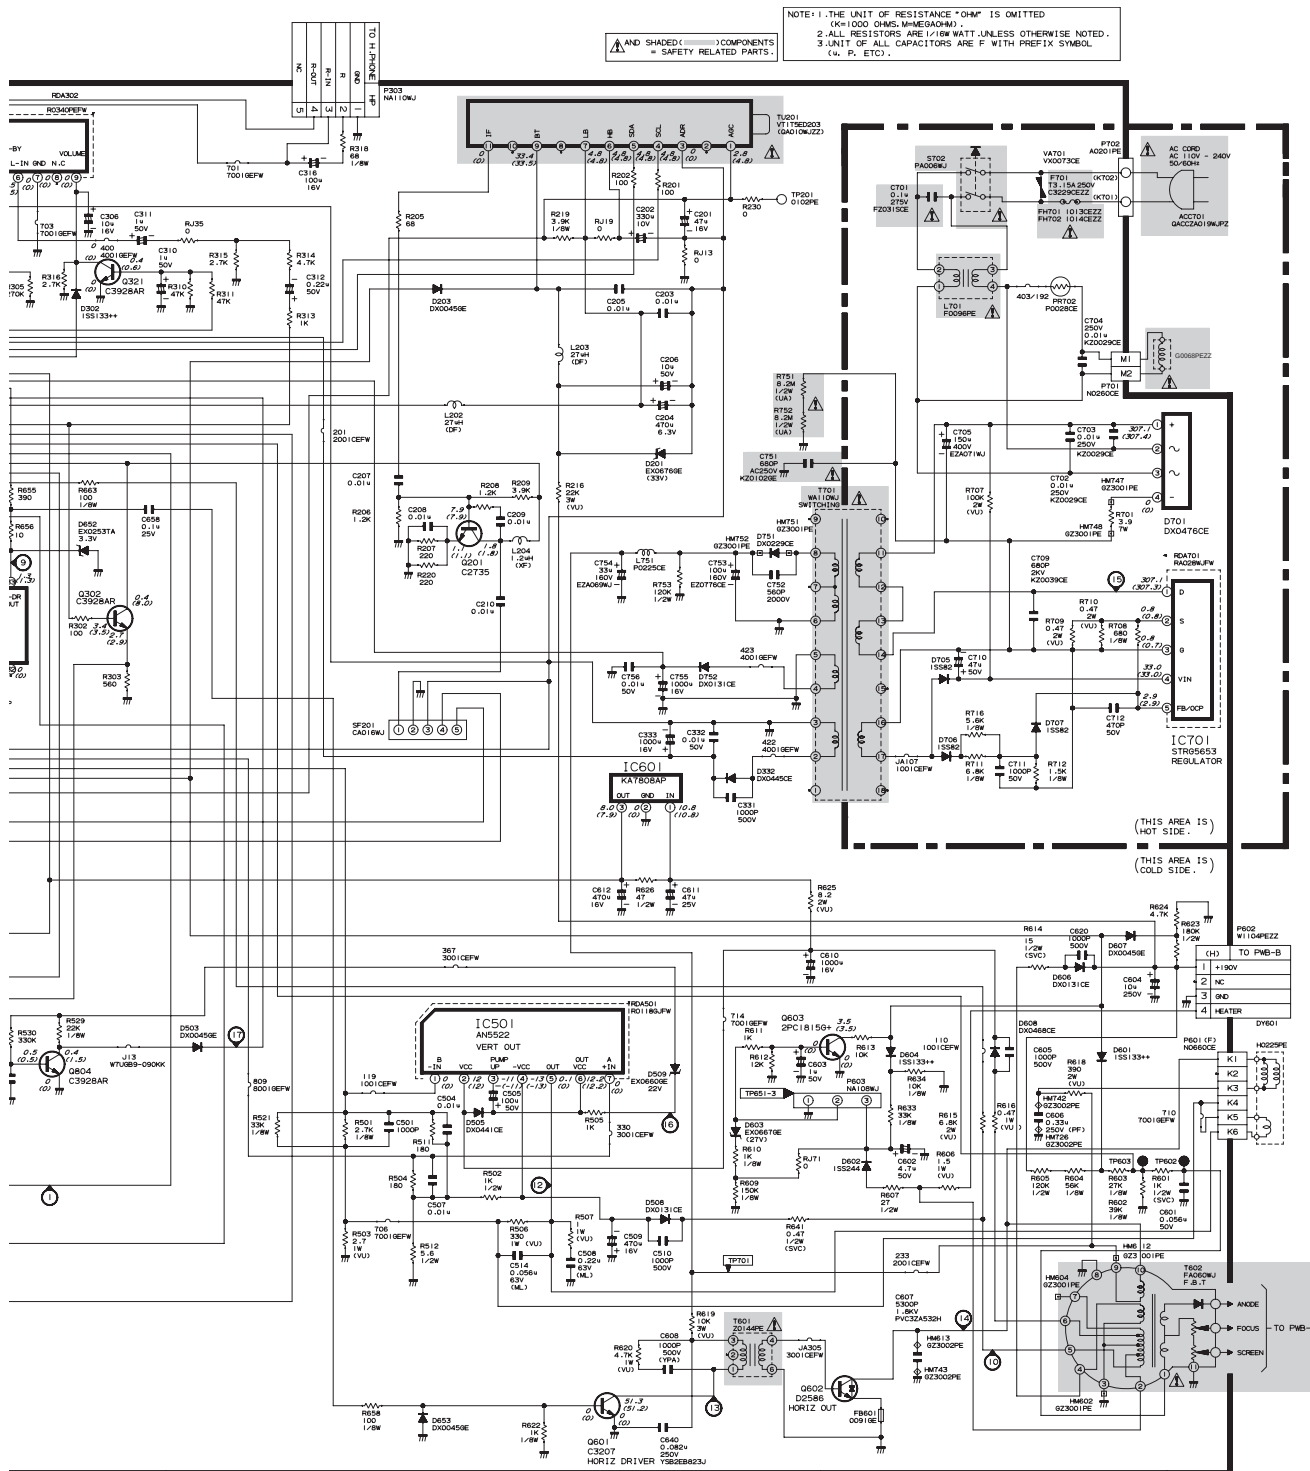

10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----

SCHEMATIC DIAGRAM:MAIN UNIT (14D2-SF/GF)

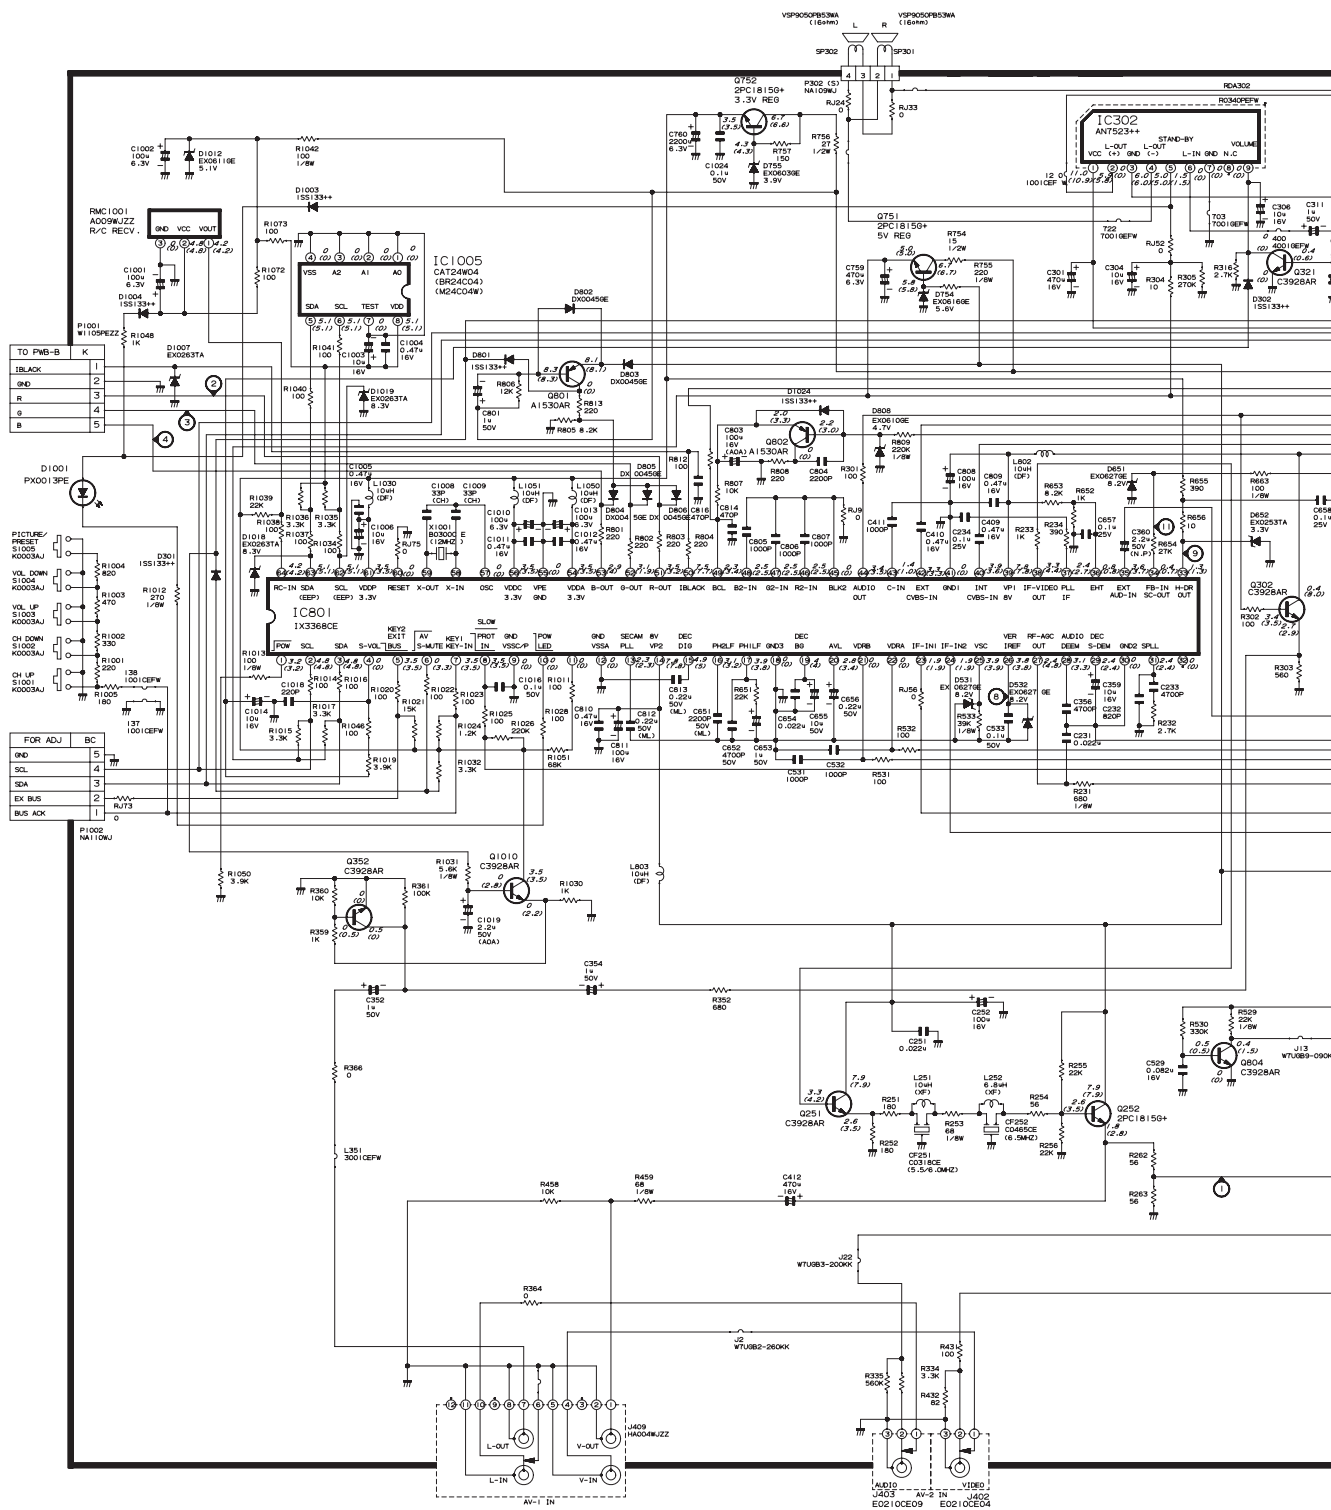

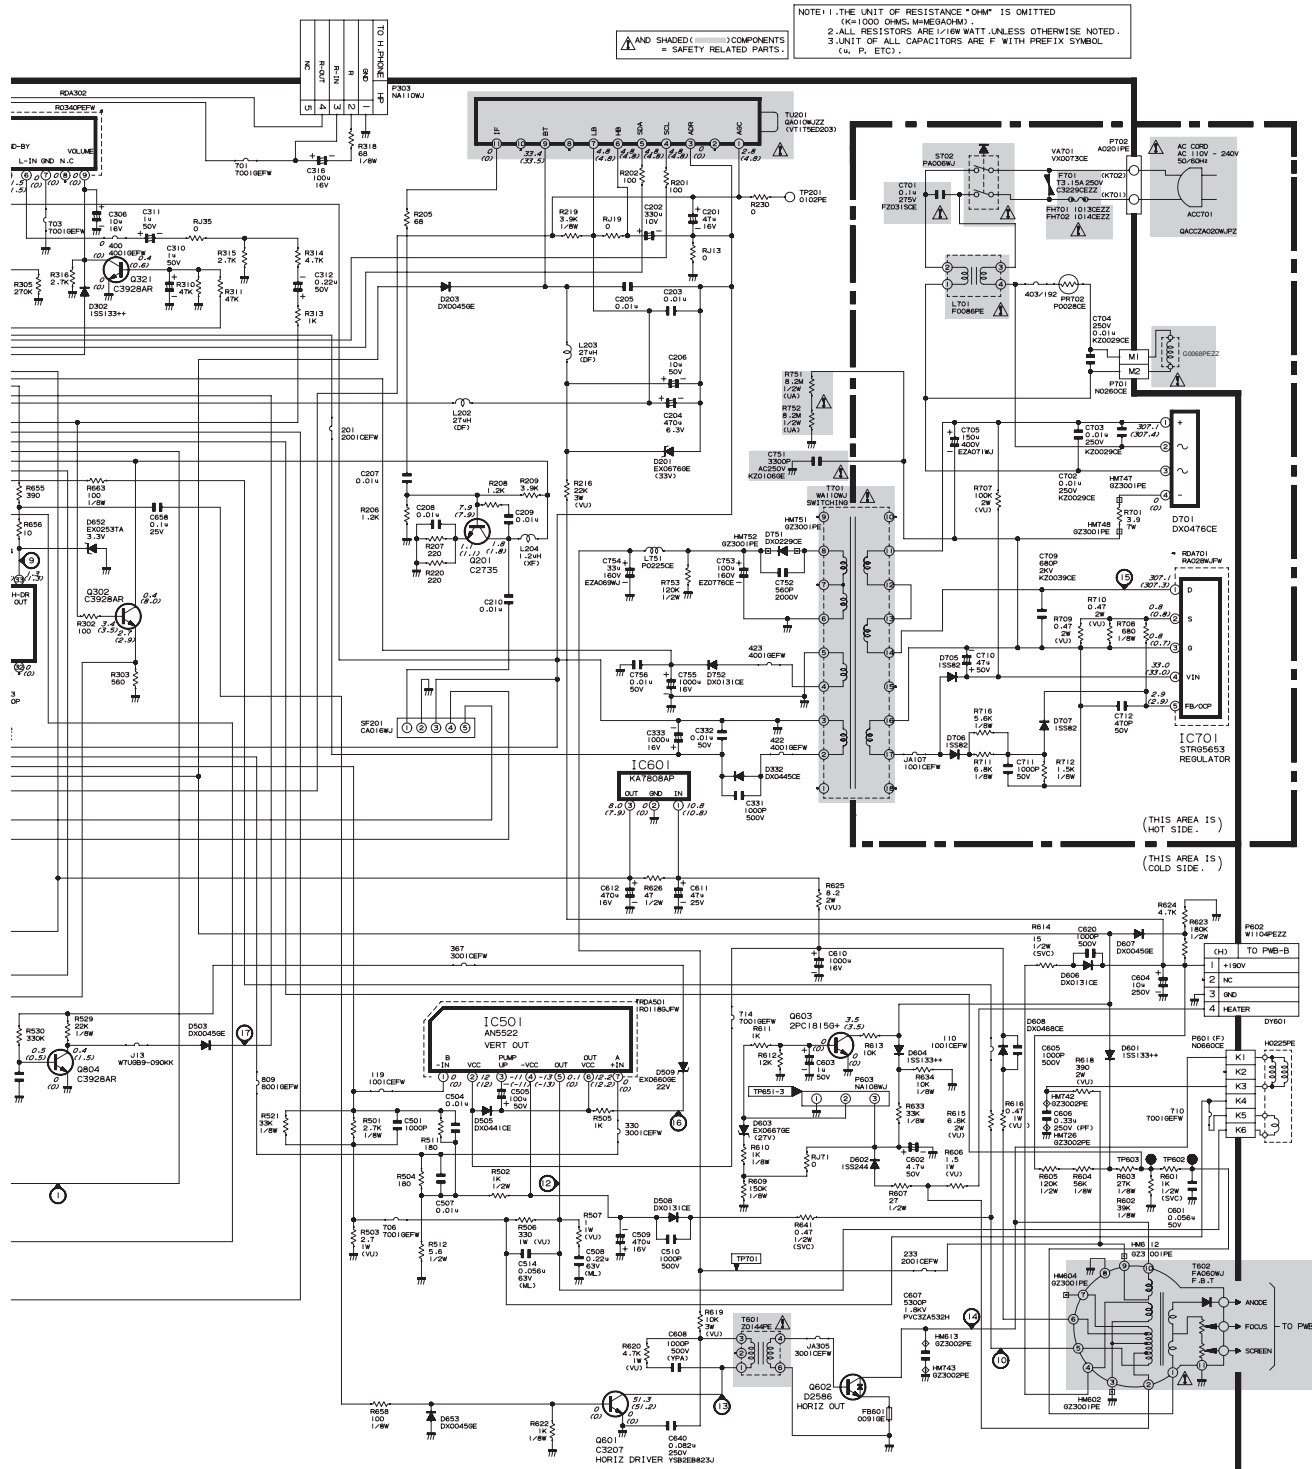


10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----

SCHEMATIC DIAGRAM: CRT UNIT (14D1-SA/GA)

AND SHADED () COMPONENTS
= SAFETY RELATED PARTS.

NOTE: 1. THE UNIT OF RESISTANCE "OHM" IS OMITTED
(K=1000 OHMS, M=MEG OHM).
2. ALL RESISTORS ARE 1/16W WATT, UNLESS OTHERWISE NOTED.
3. UNIT OF ALL CAPACITORS ARE F WITH PREFIX SYMBOL
(u, p, etc.).

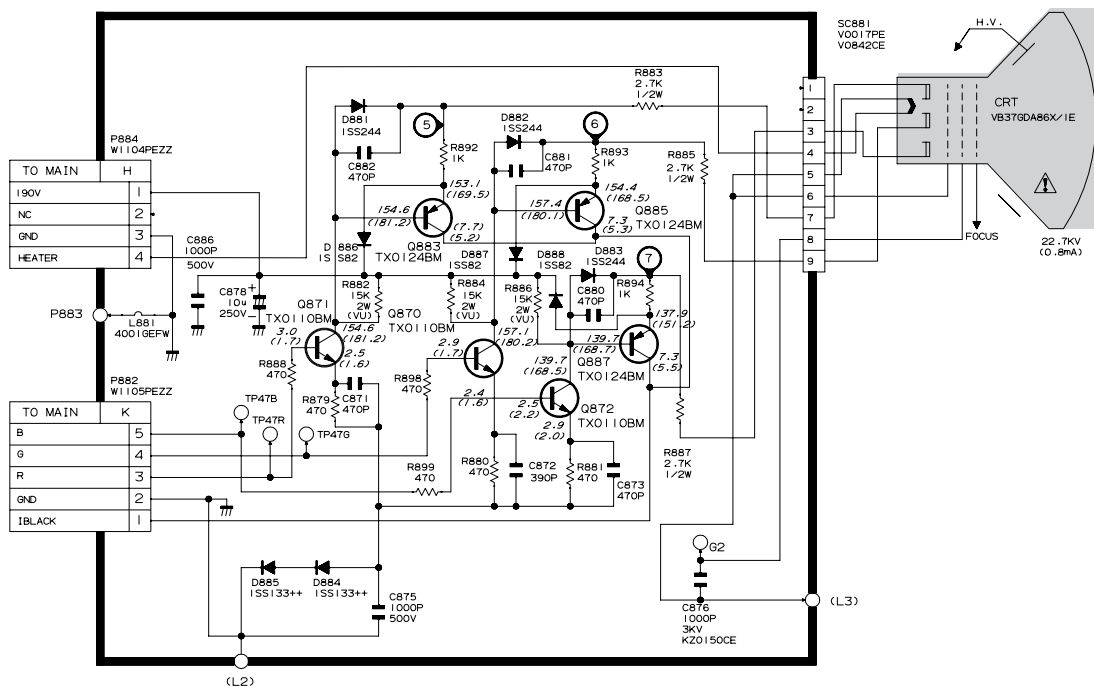


CRT	DY
VB37GDA86X/1E	RC1LH0225PEZZ
VB37GBVK1S-S/1U-S	RC1LH0220PEZZ
VB34LFG90X/*S	RC1LH0220PEZZ
VB34LR90X/*S	RC1LH0220PEZZ
VB34KPU02X/*S	RC1LH0220PEZZ
VB34JLL90X/*S	RC1LH0221PEZZ

(14D1-SF/GF)


AND SHADED () COMPONENTS
= SAFETY RELATED PARTS.

NOTE: 1. THE UNIT OF RESISTANCE "OHM" IS OMITTED
(K=1000 OHMS, M=MEG OHM).
2. ALL RESISTORS ARE 1/16W WATT, UNLESS OTHERWISE NOTED.
3. UNIT OF ALL CAPACITORS ARE F WITH PREFIX SYMBOL
(u, p, etc.).

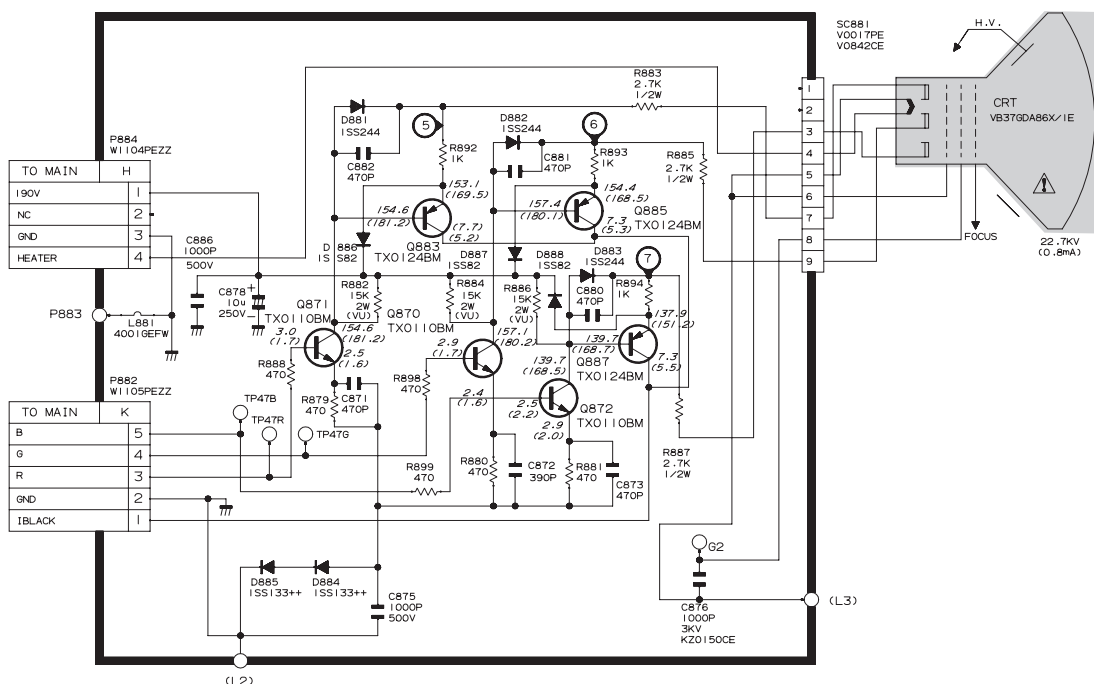

CRT	DY
VB37GDA86X/1E	RC1LH0225PEZZ
VB37GBVK1S-S/1U-S	RC1LH0220PEZZ
VB34LFG90X/*S	RC1LH0220PEZZ
VB34LR90X/*S	RC1LH0220PEZZ
VB34KPU02X/*S	RC1LH0220PEZZ
VB34JLL90X/*S	RC1LH0221PEZZ

(14D1-SF/GF)

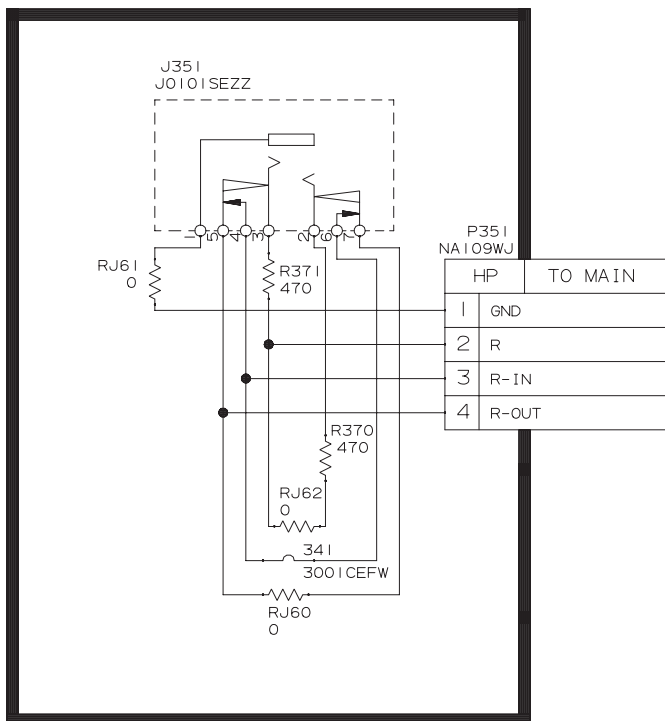

J

I

H

G

F

E


D

C


B

A

SCHEMATIC DIAGRAM:HEADPHONE UNIT
(14D2-SA/GA)

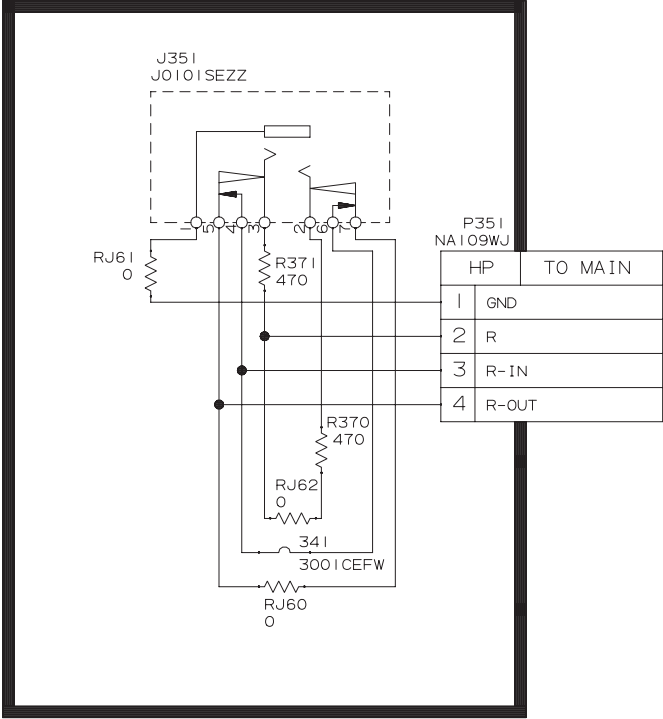



(14D2-SF/GF)

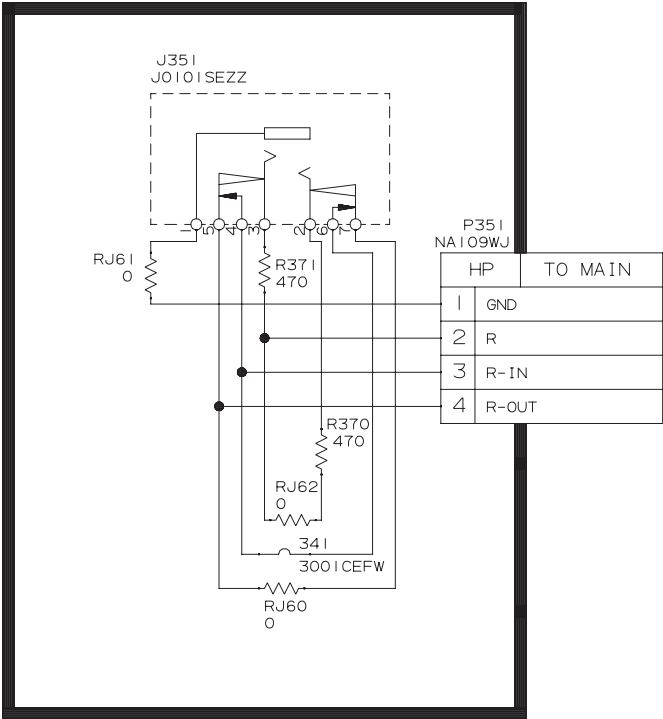

PRINTED WIRING BOARD ASSEMBLIES


PWB-A: MAIN UNIT (Wiring side)

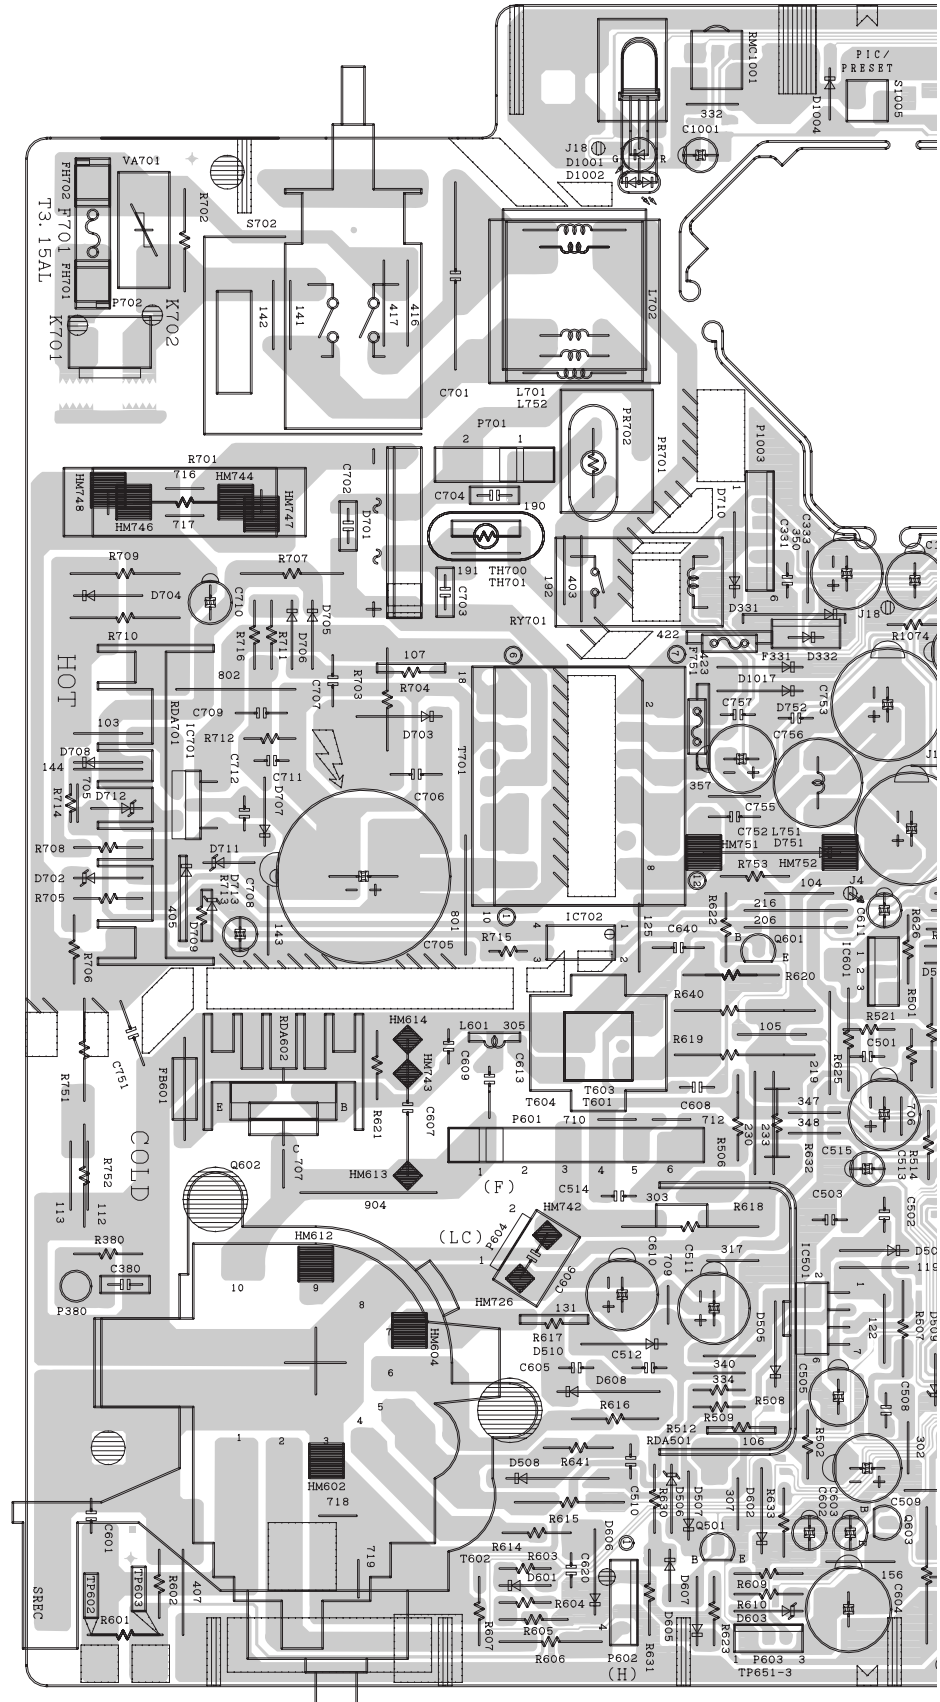

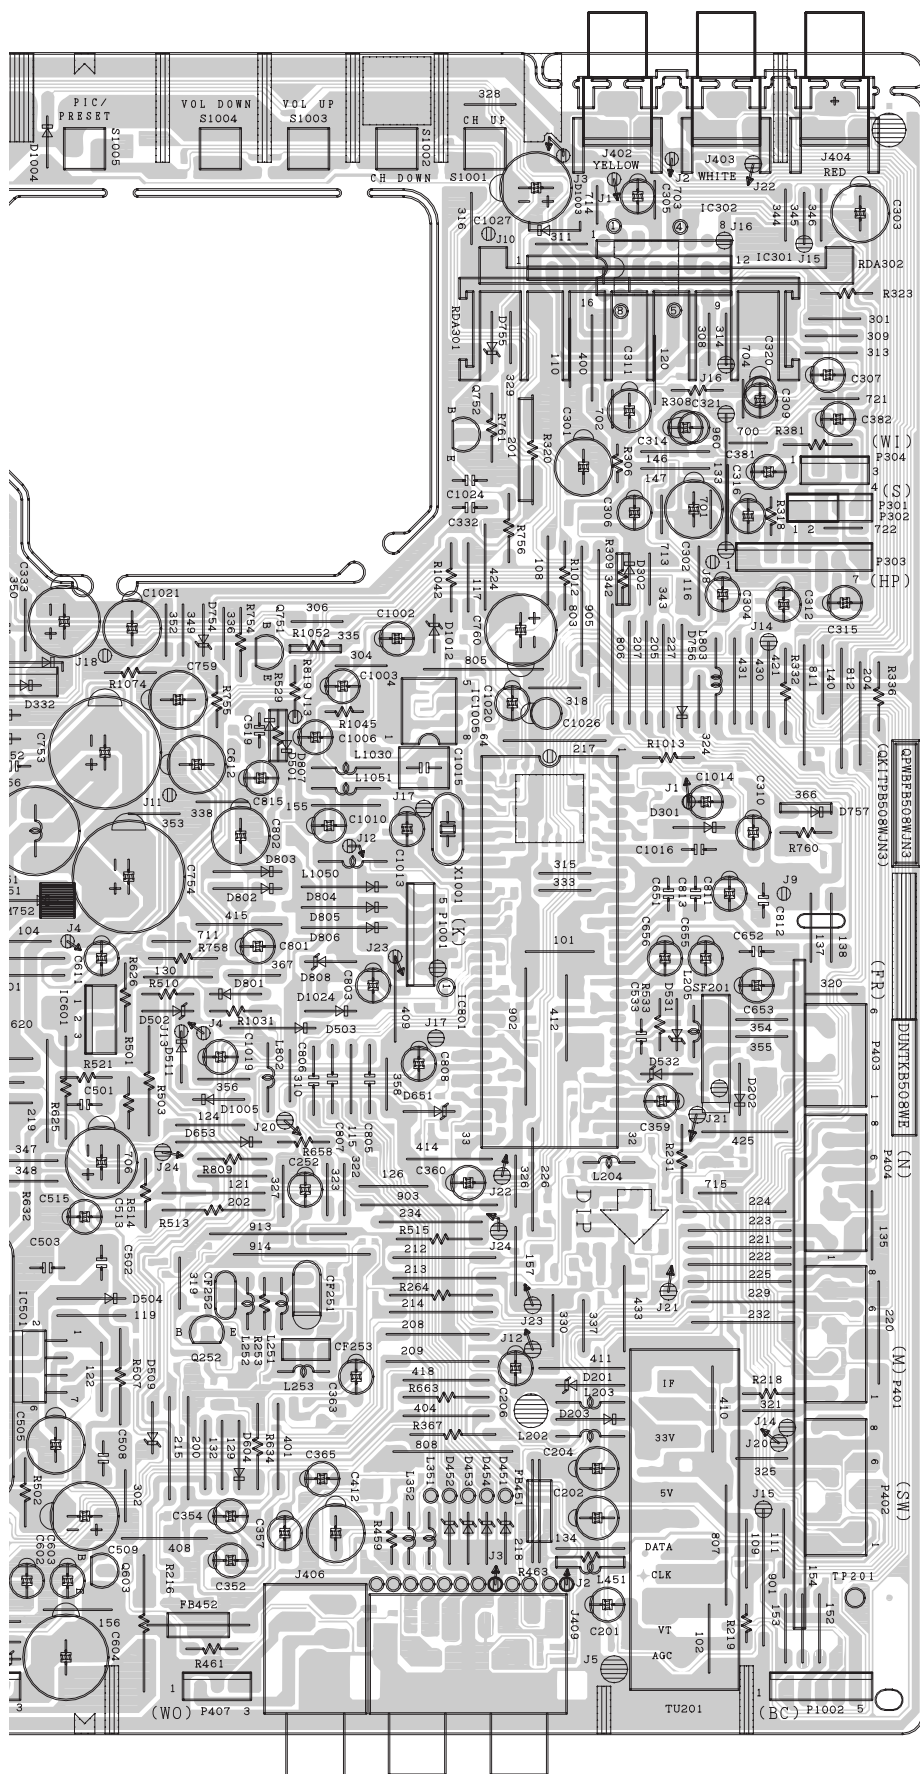


10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----



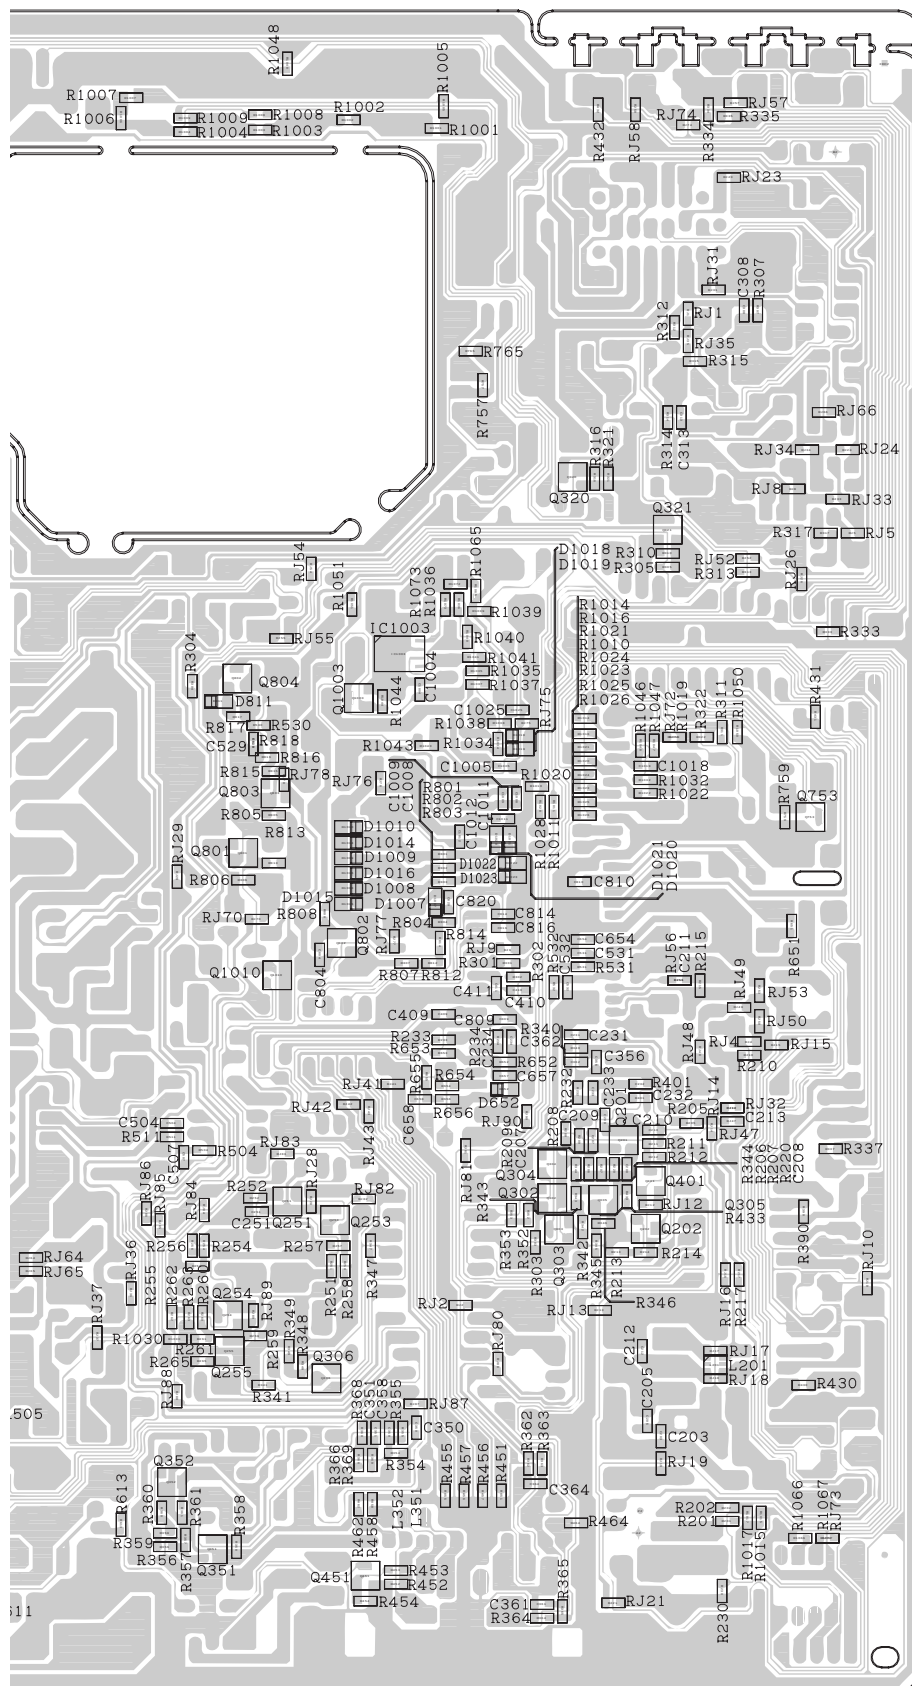


10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----


J
I
H
G
F
E
D
C
B
A

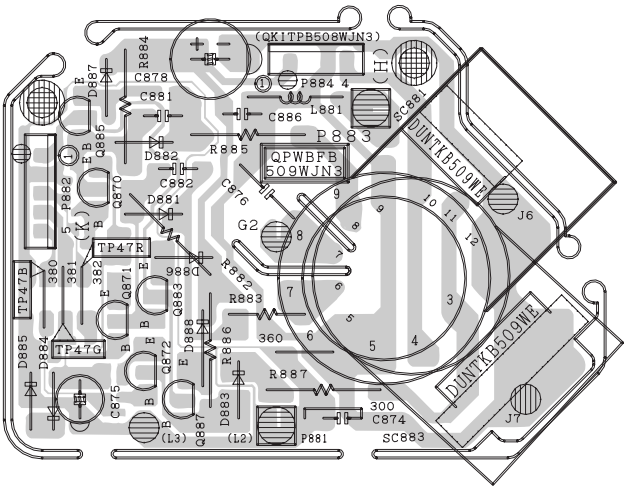


PWB-B: CRT UNIT (Wiring side)

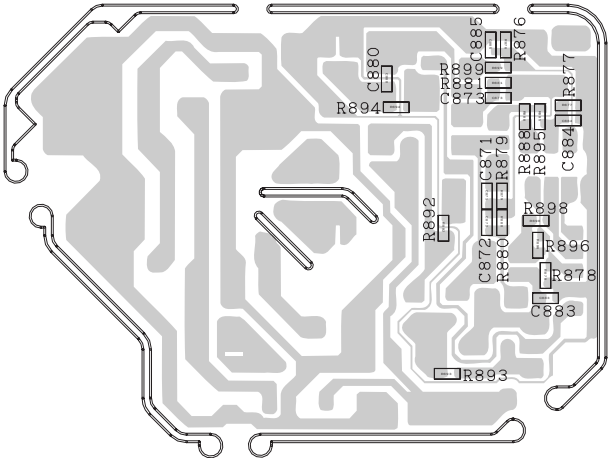

PWB-B: CRT UNIT (Chip Parts Side)

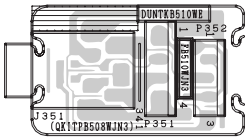

PWB-C: HEADPHONE UNIT (Wiring side)

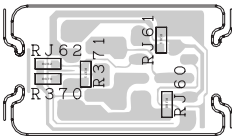

PWB-C HEADPHONE UNIT (Chip Parts Side)

REPLACEMENT PARTS LIST

PARTS REPLACEMENT

Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by "△" in the Replacement Parts Lists. The use of a substitute replacement part which does not have the same safety characteristics as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following informations.

- | | |
|-----------------|----------------|
| 1. MODEL NUMBER | 2. REF. NO. |
| 3. PART NO. | 4. DESCRIPTION |

MARK ★ : SPARE PARTS-DELIVERY SECTION.

Ref. No.	Part No.	★	Description	Code
PICTURE TUBE				
△	VB37GDA86X/1E	R	Picture Tube	CB
△	RCiLG0068PEZZ	R	Degaussing Coil	AH
△	RCiLH0225PEZZ	R	Deflection Yoke	AX
△	PMAGF3045CEZZ	R	Magnet	AG
△	QEARC1422PEZZ	R	Ground-Part	AD

PRINTED WIRING BOARD ASSEMBLY

PWB-A	DUNTKB508WED6	—	Main Unit (14D1-SA/14D1-GA)	—
PWB-A	DUNTKB508WED7	—	Main Unit (14D1-SF/14D1-GF)	—
PWB-A	DUNTKB508WED4	—	Main Unit (14D2-SA/14D2-GA)	—
PWB-A	DUNTKB508WED5	—	Main Unit (14D2-SF/14D2-GF)	—
PWB-B	DUNTKB509WED3	—	CRT Unit (14D1-SA/14D1-GA)	—
PWB-B	DUNTKB509WED4	—	CRT Unit (14D1-SF/14D1-GF)	—
PWB-B	DUNTKB509WED1	—	CRT Unit (14D2-SA/14D2-GA)	—
PWB-B	DUNTKB509WED2	—	CRT Unit (14D2-SF/14D2-GF)	—
PWB-C	DUNTKB510WEB4	—	Headphone Unit	—

Ref. No. Part No. ★ Description Code

DUNTKB508WED6 (14D1-SA/14D1-GA)
DUNTKB508WED7 (14D1-SF/14D1-GF)
DUNTKB508WED4 (14D2-SA/14D2-GA)
DUNTKB508WED5 (14D2-SF/14D2-GF)
PWB-A MAIN UNIT

BSTUNERS

△ TU201	RTUNQA010WJZZ	R	Tuner (14D1-SA/14D1-SF/14D1-GA/ 14D1-GF/14D2-SF/14D2-GF)	AW
△ TU201	VTUVT1T5ED203	R	VHF Tuner (14D2-SA/14D2-GA)	AX

INTEGRATED CIRCUITS

IC302	VHiAN7523++-1	R	AN7523	AH
IC501	VHiAN5522++-1	R	AN5522	AH
IC601	VHiKA7808AP-1	R	KIA7808API	AE
IC701	VHiSTRG5653-1	R	STR-G5653	AQ
IC801	RH-iX3368CEN7	R	I.C.	BB
IC1005	VHiCAT24W04-1	R	CAT24WC04PI	AE

TRANSISTORS

Q201	VS2SC2735//1EY	R	2SC2735	AC
Q251	VS2SC3928AR-1Y	R	2SC3928AR	AB
Q252	VS2PC1815G+-1+	R	2PC1815G	AC
Q302	VS2SC3928AR-1Y	R	2SC3928AR	AB
Q321	VS2SC3928AR-1Y	R	2SC3928AR	AB
Q352	VS2SC3928AR-1Y	R	2SC3928AR	AB
Q601	VS2SC3207//1+	R	2SC3207	AC
Q602	VS2SD2586//1E	R	2SD2586	AM
Q603	VS2PC1815G+-1+	R	2PC1815G	AC
Q751	VS2PC1815G+-1+	R	2PC1815G	AC
Q752	VS2PC1815G+-1+	R	2PC1815G	AC
Q801	VS2SA1530AR-1Y	R	2SA1530AR	AB
Q802	VS2SA1530AR-1Y	R	2SA1530AR	AB
Q804	VS2SC3928AR-1Y	R	2SC3928AR	AB
Q1010	VS2SC3928AR-1Y	R	2SC3928AR	AB

DIODES AND LED'S

D201	RH-EX0676GEZZY	R	"Zener Diode, 33V"	AA
D203	RH-DX0045GEZZY	R	DX0045GE	AA
D301	VHD1SS133+-1Y	R	1SS133++	AA
D302	VHD1SS133+-1Y	R	1SS133++	AA
D331	RH-DX0302CEZZY	R	DX0302CE (14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	AC
D332	RH-DX0445CEZZ	R	DX0445CE (14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	AL
D503	RH-DX0045GEZZY	R	DX0045GE	AA
D505	RH-DX0441CEZZY	R	DX0441CE	AC
D508	RH-DX0131CEZZY	R	DX0131CE	AC
D509	RH-EX0660GEZZY	R	Zener Diode, 22V	AB
D531	RH-EX0627GEZZY	R	Zener Diode, 8.2V	AA
D532	RH-EX0627GEZZY	R	Zener Diode, 8.2V	AA
D601	VHD1SS133+-1Y	R	1SS133++	AA
D602	VHD1SS244//1Y	R	1SS244	AB
D603	RH-EX0667GEZZY	R	Zener Diode, 27V	AA
D604	VHD1SS133+-1Y	R	1SS133++	AA
D606	RH-DX0131CEZZY	R	DX0131CE	AC
D607	RH-DX0045GEZZY	R	DX0045GE	AA
D608	RH-DX0468CEZZ	R	DX0468CE	AE
D651	RH-EX0627GEZZY	R	Zener Diode, 8.2V	AA
D652	RH-EX0253TAZZY	R	Zener Diode, 3.3V	AC
D653	RH-DX0045GEZZY	R	DX0045GE	AA
D701	RH-DX0476CEZZ	R	DX0476CE	AG
D705	VHD1SS82///1AY	R	1SS82	AC
D706	VHD1SS82///1AY	R	1SS82	AC
D707	VHD1SS82///1AY	R	1SS82	AC
D751	RH-DX0229CEZZ	R	DX0229CE	AF
D752	RH-DX0131CEZZY	R	DX0131CE	AC
D754	RH-EX0616GEZZY	R	Zener Diode, 5.6V	AA
D755	RH-EX0603GEZZY	R	Zener Diode, 3.9V	AA
D801	VHD1SS133+-1Y	R	1SS133++	AA

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code
D802	RH-DX0045GEZZY	R	DX0045GE	AA	C332	VCQYTA1HM103J+	R	0.01 50V Mylar	AB
D803	RH-DX0045GEZZY	R	DX0045GE	AA	C333	VCEA0A1CW108M	R	1000 16V Electrolytic	AD
D804	RH-DX0045GEZZY	R	DX0045GE	AA	C352	VCEA0A1HW105M+R	1	50V Electrolytic	AB
D805	RH-DX0045GEZZY	R	DX0045GE	AA	C354	VCEA0A1HW105M+R	1	50V Electrolytic	AB
D806	RH-DX0045GEZZY	R	DX0045GE	AA	C356	VCKYCY1HB472KYR	4700p	50V Ceramic	AA
D808	RH-EX0610GEZZY	R	Zener Diode, 4.7V	AA	C359	VCEA0A1CW106M+R	10	16V Electrolytic	AB
D1001	RH-PX0013PEZZ	R	PhotoDiode	AC	C360	VCE9GA1HW225M+R	2.2	50V Electrolytic	AB
D1003	VHD1SS133+++1Y	R	1SS133++	AA	C409	VCKYCY1CF474ZY	R	0.47 16V Ceramic	AB
D1004	VHD1SS133+++1Y	R	1SS133++	AA	C410	VCKYCY1CF474ZY	R	0.47 16V Ceramic	AB
D1007	RH-EX0263TAZZY	R	Zener Diode	AC	C411	VCKYCY1HB102KYR	1000p	50V Ceramic	AA
D1012	RH-EX0611GEZZY	R	Zener Diode, 5.1V	AA	C412	VCEA0A1CW477M+R	470	16V Electrolytic	AC
D1018	RH-EX0263TAZZY	R	Zener Diode, 8.3V	AC	C501	VCKYPA1HB102K+	R	1000p 50V Ceramic	AA
D1019	RH-EX0263TAZZY	R	Zener Diode, 8.3V	AC	C504	VCKYCY1HB103KYR	0.01	50V Ceramic	AA
D1024	VHD1SS133+++1Y	R	1SS133++	AA	C505	VCEA0A1HW107M+R	100	50V Electrolytic	AB
VA701	RH-VX0073CEZZ	R	Varistor	AD	C507	VCKYCY1HB103KYR	0.01	50V Ceramic	AA
PACKAGED CIRCUITS					C508	VCFYSA1JB224J+	R	0.22 63V Mylar	AD
PR702	RMPTP0028CEZZ	R	Packaged Circuit	AG	C509	VCEA0A1CW477M+R	470	16V Electrolytic	AC
X1001	RCRSB0300CEZZ	R	Crystal	AF	C510	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA
COILS					C514	VCFYSA1JB563J+	R	0.056 63V Mylar	AD
L202	VP-DF270K0000Y	R	Peaking, 27μH	AB	C529	VCKYCY1CB823KYR	0.082	16V Ceramic	AH
L203	VP-DF270K0000Y	R	Peaking, 27μH	AB	C531	VCKYCY1HB102KYR	1000p	50V Ceramic	AA
L204	VP-XF1R2K0000Y	R	Peaking, 1.2μH	AB	C532	VCKYCY1HB102KYR	1000p	50V Ceramic	AA
L251	VP-XF100K0000Y	R	Peaking, 10μH	AB	C533	VCQYTA1HM104J+	R	0.1 50V Mylar	AB
L252	VP-XF6R8K0000Y	R	Peaking, 6.8μH	AB	C601	VCQYTA1HM563J+	R	0.056 50V Mylar	AB
⚠ L701	RCILF0086PEN1	R	Coil (14D1-SF/14D1-GF/14D2-SF/ 14D2-GF)	AF	C602	VCEA0A1HW475M+R	4.7	50V Electrolytic	AB
⚠ L701	RCILF0096PEZZ	R	Coil (14D1-SA/14D1-GA/14D2-SA/ 14D2-GA)	AF	C603	VCEA0A1HW105M+R	1	50V Electrolytic	AB
L751	RCILP0225CEZZ	R	Coil	AF	C604	VCEA0A2EW106M	R	10 250V Electrolytic	AD
L802	VP-DF100K0000Y	R	Peaking, 10μH	AB	C605	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA
L803	VP-DF100K0000Y	R	Peaking, 10μH	AB	C606	VCFPFA2EB334J	R	0.33 250V Metallized Polypro Film	AD
L1030	VP-DF100K0000Y	R	Peaking, 10μH	AB	C607	VCFPVC3ZA532H	R	5300p 1800V Metallized Polypro Film	AD
L1050	VP-DF100K0000Y	R	Peaking, 10μH	AB	C608	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA
L1051	VP-DF100K0000Y	R	Peaking, 10μH	AB	C610	VCEA0A1CW108M	R	1000 16V Electrolytic	AD
FILTERS					C611	VCEA0A1EW476M+R	47	25V Electrolytic	AB
CF251	RFILC0318CEZZ	R	Filter	AG	C612	VCEA0A1CW477M+R	470	16V Electrolytic	AC
CF252	RFILC0465CEZZ	R	Filter	AD	C620	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA
SF201	RFILCA016WJZZ	R	Filter	AH	C640	VCFYSB2EB823J	R	0.082 250V M.Polyester Film	AD
TRANSFORMERS					C651	VCQYTA1HM222J+	R	2200p 50V Mylar	AA
⚠ T601	RTRNZ0144PEZZ	R	Transformer	AE	C652	VCQYTA1HM472J+	R	4700p 50V Mylar	AB
⚠ T602	RTRNFA060WJZZ	R	H-Volt Transformer	AV	C653	VCEA0A1HW105M+R	1	50V Electrolytic	AB
⚠ T701	RTRNWA110WJZZ	R	Transformer	AH	C654	VCKYCY1HF223ZY	R	0.022 50V Ceramic	AB
CAPACITORS					C655	VCEA0A1HW106M+R	10	50V Electrolytic	AB
C201	VCEA0A1CW476M+R	47	16V Electrolytic	AB	C656	VCEA0A1HW224M+R	0.22	50V Electrolytic	AB
C202	VCEA0A1AW337M+R	330	10V Electrolytic	AC	C657	VCKYCY1EF104ZY	R	0.1 25V Ceramic	AA
C203	VCKYCY1HF103ZY	R	0.01 50V Ceramic	AA	C658	VCKYCY1EF104ZY	R	0.1 25V Ceramic	AA
C204	VCEA0A0JW477M+R	470	6.3V Electrolytic	AC	⚠ C701	RC-FZ031SCEZZ	R	0.1 275V	AD
C205	VCKYCY1HF103ZY	R	0.01 50V Ceramic	AA	C702	RC-KZ0029CEZZ+	R	0.01 250V Ceramic	AC
C206	VCEA0A1HW106M+R	10	50V Electrolytic	AB	C703	RC-KZ0029CEZZ+	R	0.01 250V Ceramic	AC
C207	VCKYCY1HF103ZY	R	0.01 50V Ceramic	AA	C704	RC-KZ0029CEZZ+	R	0.01 250V Ceramic	AC
C208	VCKYCY1HF103ZY	R	0.01 50V Ceramic	AA	C705	RC-EZA071WJZZ	R	150 400V Electrolytic	AL
C209	VCKYCY1HF103ZY	R	0.01 50V Ceramic	AA	(14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)				
C210	VCKYCY1HF103ZY	R	0.01 50V Ceramic	AA	C705	RC-EZA096WJZZ	R	220 400V Electrolytic	AL
C231	VCKYCY1HF223ZY	R	0.022 50V Ceramic	AB	(14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)				
C232	VCKYCY1HB821KYR	820p	50V Ceramic	AA	C709	RC-KZ0039CEZZ	R	680p 2kV Ceramic	AB
C233	VCKYCY1HB472KYR	4700p	50V Ceramic	AA	C710	VCEA0A1HW476M+R	47	50V Electrolytic	AB
C234	VCKYCY1EF104ZY	R	0.1 25V Ceramic	AA	C711	VCKYPA1HB102K+	R	1000p 50V Ceramic	AA
C251	VCKYCY1HF223ZY	R	0.022 50V Ceramic	AB	C712	VCKYPA1HB471K+	R	470p 50V Ceramic	AA
C252	VCEA0A1CW107M+R	100	16V Electrolytic	AC	⚠ C751	RC-KZ0102GEZZ	R	680p AC250V Ceramic	AE
C301	VCEA0A1CW477M+R	470	16V Electrolytic	AC	(14D1-SA/14D1-GA/14D2-SA/ 14D2-GA)				
C304	VCEA0A1CW106M+R	10	16V Electrolytic	AB	⚠ C751	RC-KZ0106GEZZ	R	3300p AC250V Ceramic	AG
C306	VCEA0A1CW106M+R	10	16V Electrolytic	AB	(14D1-SF/14D1-GF/14D2-SF/ 14D2-GF)				
C310	VCEA0A1HW105M+R	1	50V Electrolytic	AB	C752	VCKYPH3DB561K	R	560p 2000V Ceramic	AC
C311	VCEA0A1HW105M+R	1	50V Electrolytic	AB	C753	RC-EZ0776CEZZ	R	100 160V Electrolytic	AF
C312	VCEA0A1HW224M+R	0.22	50V Electrolytic	AB	C754	RC-EZA069WJZZ	R	33 160V Electrolytic	AE
C316	VCEA0A1CW107M+R	100	16V Electrolytic	AC	C755	VCEA0A1CW108M	R	1000 16V Electrolytic	AD
C331	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA	C756	VCQYTA1HM103J+	R	0.01 50V Mylar	AB
					C759	VCEA0A0JW477M+R	470	6.3V Electrolytic	AC
					C760	VCEA0A0JW228M	R	2200 6.3V Electrolytic	AD
					C801	VCEA0A1HW105M+R	1	50V Electrolytic	AB
					C803	VCEA0A1CW107M+R	100	16V Electrolytic	AC

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code
C804	VCKYCY1HB222KY R	2200p	50V Ceramic	AA	R205	VRS-CY1JF680JY	R 68	1/16W Metal Oxide	AA
C805	VCKYD41HB102KY R	1000p	50V Ceramic	AA	R206	VRS-CY1JF122JY	R 1.2k	1/16W Metal Oxide	AA
C806	VCKYD41HB102KY R	1000p	50V Ceramic	AA	R207	VRS-CY1JF221JY	R 2.2k	1/16W Metal Oxide	AA
C807	VCKYD41HB102KY R	1000p	50V Ceramic	AA	R208	VRS-CY1JF122JY	R 1.2k	1/16W Metal Oxide	AA
C808	VCEA0A1CW107M+R	100	16V Electrolytic	AC	R209	VRS-CY1JF392JY	R 3.9k	1/16W Metal Oxide	AA
C809	VCKYCY1CF474ZY R	0.47	16V Ceramic	AB	R216	VRS-VU3LE223J	R 22k	3W Metal Oxide	AC
C810	VCKYCY1CF474ZY R	0.47	16V Ceramic	AB	R219	VRD-RA2BE392JY	R 3.9k	1/8W Carbon	AA
C811	VCEA0A1CW107M+R	100	16V Electrolytic	AC	R220	VRS-CY1JF221JY	R 220	1/16W Metal Oxide	AA
C812	VCFYFA1HA224J+ R	0.22	50V M.Polyester Film	AB	R230	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA
C813	VCFYFA1HA224J+ R	0.22	50V M.Polyester Film	AB	R231	VRD-RA2BE681JY	R 680	1/8W Carbon	AA
C814	VCKYCY1HB471KY R	470p	50V Ceramic	AA	R232	VRS-CY1JF272JY	R 2.7k	1/16W Metal Oxide	AA
C816	VCKYCY1HB471KY R	470p	50V Ceramic	AA	R233	VRS-CY1JF102JY	R 1k	1/16W Metal Oxide	AA
C1001	VCEA0A0JW107M+R	100	6.3V Electrolytic	AB	R234	VRS-CY1JF391JY	R 390	1/16W Metal Oxide	AA
C1002	VCEA0A0JW107M+R	100	6.3V Electrolytic	AB	R251	VRS-CY1JF181JY	R 180	1/16W Metal Oxide	AA
C1003	VCEA0A1CW106M+R	10	16V Electrolytic	AB	R252	VRS-CY1JF181JY	R 180	1/16W Metal Oxide	AA
C1004	VCKYCY1CF474ZY R	0.47	16V Ceramic	AB	R253	VRD-RA2BE680JY	R 68	1/8W Carbon	AA
C1005	VCKYCY1CF474ZY R	0.47	16V Ceramic	AB	R254	VRS-CY1JF560JY	R 56	1/16W Metal Oxide	AA
C1006	VCEA0A1CW106M+R	10	16V Electrolytic	AB	R255	VRS-CY1JF223JY	R 22k	1/16W Metal Oxide	AA
C1008	VCCCY1HH330JY R	33p	50V Ceramic	AA	R256	VRS-CY1JF223JY	R 22k	1/16W Metal Oxide	AA
C1009	VCCCY1HH330JY R	33p	50V Ceramic	AA	R262	VRS-CY1JF560JY	R 56	1/16W Metal Oxide	AA
C1010	VCEA0A0JW107M+R	100	6.3V Electrolytic	AB	R263	VRS-CY1JF560JY	R 56	1/16W Metal Oxide	AA
C1011	VCKYCY1CF474ZY R	0.47	16V Ceramic	AB	R301	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
C1012	VCKYCY1CF474ZY R	0.47	16V Ceramic	AB	R302	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
C1013	VCEA0A0JW107M+R	100	6.3V Electrolytic	AB	R303	VRS-CY1JF561JY	R 560	1/16W Metal Oxide	AA
C1014	VCEA0A1CW106M+R	10	16V Electrolytic	AB	R304	VRS-CY1JF100JY	R 10	1/16W Metal Oxide	AA
C1016	VCQYTA1HM104J+ R	0.1	50V Mylar	AB	R305	VRS-CY1JF274JY	R 270k	1/16W Metal Oxide	AA
C1018	VCKYCY1HB221KY R	220p	50V Ceramic	AA	R310	VRS-CY1JF473JY	R 47k	1/16W Metal Oxide	AA
C1019	VCEA0A1HW225M+R	2.2	50V Electrolytic	AB	R311	VRS-CY1JF473JY	R 47k	1/16W Metal Oxide	AA
C1024	VCQYTA1HM104J+ R	0.1	50V Mylar	AB	R313	VRS-CY1JF102JY	R 1k	1/16W Metal Oxide	AA
RESISTORS					R314	VRS-CY1JF472JY	R 4.7k	1/16W Metal Oxide	AA
RJ2	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R315	VRS-CY1JF272JY	R 2.7k	1/16W Metal Oxide	AA
RJ4	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R316	VRS-CY1JF272JY	R 2.7k	1/16W Metal Oxide	AA
RJ9	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R318	VRD-RA2BE680JY	R 68	1/8W Carbon	AA
RJ10	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R334	VRS-CY1JF332JY	R 3.3k	1/16W Metal Oxide	AA
RJ13	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R335	VRS-CY1JF564JY	R 560k	1/16W Metal Oxide	AA
RJ14	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R352	VRS-CY1JF681JY	R 680	1/16W Metal Oxide	AA
RJ15	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R359	VRS-CY1JF102JY	R 1k	1/16W Metal Oxide	AA
RJ16	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R360	VRS-CY1JF103JY	R 10k	1/16W Metal Oxide	AA
RJ17	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R361	VRS-CY1JF104JY	R 100k	1/16W Metal Oxide	AA
RJ19	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R364	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA
RJ21	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R366	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA
RJ24	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R431	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
(14D2-SA/14D2-SF/14D2-GA/14D2-GF)					R432	VRS-CY1JF820JY	R 82	1/16W Metal Oxide	AA
RJ26	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R458	VRS-CY1JF103JY	R 10k	1/16W Metal Oxide	AA
RJ28	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R459	VRD-RA2BE680JY	R 68	1/8W Carbon	AA
RJ32	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R501	VRD-RA2BE272JY	R 2.7k	1/8W Carbon	AA
RJ33	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R502	VRD-RM2HD102JY	R 1k	1/2W Carbon	AA
(14D2-SA/14D2-SF/14D2-GA/14D2-GF)					R503	VRS-VU3AE2R7J	R 2.7	1W Metal Oxide	AB
RJ35	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R504	VRS-CY1JF181JY	R 180	1/16W Metal Oxide	AA
RJ37	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R505	VRS-CY1JF102JY	R 1k	1/16W Metal Oxide	AA
RJ41	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R506	VRS-VU3AE331J	R 330	1W Metal Oxide	AB
RJ42	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R507	VRS-VU3AE1R0J	R 1	1W Metal Oxide	AB
RJ43	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R511	VRS-CY1JF181JY	R 180	1/16W Metal Oxide	AA
RJ44	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R512	VRD-RM2HD5R6JY	R 5.6	1/2W Carbon	AA
RJ45	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R521	VRD-RA2BE333JY	R 33k	1/8W Carbon	AA
RJ48	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R529	VRD-RA2BE223JY	R 22k	1/8W Carbon	AA
RJ49	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R530	VRS-CY1JF334JY	R 330k	1/16W Metal Oxide	AA
RJ51	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R531	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
RJ52	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R532	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
RJ53	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R533	VRD-RA2BE393JY	R 39k	1/8W Carbon	AA
RJ56	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R601	VRS-SV2HC102J	R 1k	1/2W Metal Oxide	AA
RJ71	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R602	VRD-RA2BE393JY	R 39k	1/8W Carbon	AA
RJ73	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R603	VRD-RA2BE273JY	R 27k	1/8W Carbon	AA
RJ75	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R604	VRD-RA2BE563JY	R 56k	1/8W Carbon	AA
RJ76	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R605	VRD-RM2HD124JY	R 120k	1/2W Carbon	AA
RJ77	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R606	VRS-VU3AE1R5J	R 1.5	1W Metal Oxide	AB
RJ78	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R607	VRD-RM2HD270JY	R 27	1/2W Carbon	AA
RJ83	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R609	VRD-RA2BE154JY	R 150k	1/8W Carbon	AA
RJ88	VRS-CY1JF000JY	R 0	1/16W Metal Oxide	AA	R610	VRD-RA2BE102GY	R 1k	1/8W Carbon	AB
R201	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA	R611	VRS-CY1JF102JY	R 1k	1/16W Metal Oxide	AA
R202	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA	R612	VRS-CY1JF123JY	R 12k	1/16W Metal Oxide	AA
					R613	VRS-CY1JF103JY	R 10k	1/16W Metal Oxide	AA
					R614	VRS-SV2HC150J	R 15	1/2W Metal Oxide	AA
					R615	VRS-VU3DE682J	R 6.8k	2W Metal Oxide	AB
					R616	VRS-VU3AER47J	R 0.47	1W Metal Oxide	AB
					R618	VRS-VU3DE391J	R 390	2W Metal Oxide	AB

Ref. No.	Part No.	★	Description	Code
R619	VRS-VU3LE103J	R 10k	3W Metal Oxide	AB
R620	VRS-VU3AE472J	R 4.7k	1W Metal Oxide	AB
R622	VRD-RA2BE102JY	R 1k	1/8W Carbon	AA
R623	VRD-RM2HD184JY	R 180k	1/2W Carbon	AA
R624	VRS-CY1JF472JY	R 4.7k	1/16W Metal Oxide	AA
R625	VRS-VU3DE8R2J	R 8.2	2W Metal Oxide	AB
R626	VRD-RM2HD470JY	R 47	1/2W Carbon	AA
R633	VRD-RA2BE333JY	R 33k	1/8W Carbon	AA
R634	VRD-RA2BE103JY	R 10k	1/8W Carbon	AA
R641	VRN-SV2HCR47J	R 0.47	1/2W Metal Film	AA
R651	VRS-CY1JF223JY	R 22k	1/16W Metal Oxide	AA
R652	VRS-CY1JF102JY	R 1k	1/16W Metal Oxide	AA
R653	VRS-CY1JF822JY	R 8.2k	1/16W Metal Oxide	AA
R654	VRS-CY1JF273JY	R 27k	1/16W Metal Oxide	AA
R655	VRS-CY1JF391JY	R 390	1/16W Metal Oxide	AA
R656	VRS-CY1JF100JY	R 10	1/16W Metal Oxide	AA
R658	VRD-RA2BE101JY	R 100	1/8W Carbon	AA
R663	VRD-RA2BE101JY	R 100	1/8W Carbon	AA
R701	VRW-KQ3NC3R9K	R 3.9	7W Cement	AE
R707	VRS-VU3DE104J	R 100k	2W Metal Oxide	AB
R708	VRD-RA2BE681JY	R 680	1/8W Carbon	AA
R709	VRS-VU3DER47J	R 0.47	2W Metal Oxide	AB
R710	VRS-VU3DER47J	R 0.47	2W Metal Oxide	AB
(14D2-SA/14D2-SF/14D2-GA/14D2-GF)				
R710	VRS-VU3DER56J	R 0.56	2W Metal Oxide	AB
(14D1-SA/14D1-SF/14D1-GA/14D1-GF)				
R711	VRD-RA2BE682JY	R 6.8k	1/8W Carbon	AA
R712	VRD-RA2BE152JY	R 1.5k	1/8W Carbon	AA
R716	VRD-RA2BE562JY	R 5.6k	1/8W Carbon	AA
⚠ R751	VRC-UA2HG825KY	R 8.2M	1/2W Solid	AA
⚠ R752	VRC-UA2HG825KY	R 8.2M	1/2W Solid	AA
R753	VRD-RM2HD124JY	R 120k	1/2W Carbon	AA
R754	VRD-RM2HD150JY	R 15	1/2W Carbon	AA
R755	VRD-RA2BE221JY	R 220	1/8W Carbon	AA
R756	VRD-RM2HD270JY	R 27	1/2W Carbon	AA
R757	VRS-CY1JF151JY	R 150	1/16W Metal Oxide	AA
R801	VRS-CY1JF221JY	R 220	1/16W Metal Oxide	AA
R802	VRS-CY1JF221JY	R 220	1/16W Metal Oxide	AA
R803	VRS-CY1JF221JY	R 220	1/16W Metal Oxide	AA
R804	VRS-CY1JF221JY	R 220	1/16W Metal Oxide	AA
R805	VRS-CY1JF822JY	R 8.2k	1/16W Metal Oxide	AA
R806	VRS-CY1JF123JY	R 12k	1/16W Metal Oxide	AA
R807	VRS-CY1JF103JY	R 10k	1/16W Metal Oxide	AA
R808	VRS-CY1JF221JY	R 220	1/16W Metal Oxide	AA
R809	VRD-RA2BE224JY	R 220k	1/8W Carbon	AA
R812	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
R813	VRS-CY1JF221JY	R 220	1/16W Metal Oxide	AA
R1001	VRS-CY1JF221JY	R 220	1/16W Metal Oxide	AA
R1002	VRS-CY1JF331JY	R 330	1/16W Metal Oxide	AA
R1003	VRS-CY1JF471JY	R 470	1/16W Metal Oxide	AA
R1004	VRS-CY1JF821JY	R 820	1/16W Metal Oxide	AA
R1005	VRS-CY1JF181JY	R 180	1/16W Metal Oxide	AA
R1011	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
R1012	VRD-RA2BE271JY	R 270	1/8W Carbon	AA
R1013	VRD-RA2BE101JY	R 100	1/8W Carbon	AA
R1014	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
R1015	VRS-CY1JF332JY	R 3.3k	1/16W Metal Oxide	AA
R1016	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
R1017	VRS-CY1JF332JY	R 3.3k	1/16W Metal Oxide	AA
R1019	VRS-CY1JF392JY	R 3.9k	1/16W Metal Oxide	AA
R1020	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
R1021	VRS-CY1JF153JY	R 15k	1/16W Metal Oxide	AA
R1022	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
R1023	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
R1024	VRS-CY1JF122JY	R 1.2k	1/16W Metal Oxide	AA
R1025	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
R1026	VRS-CY1JF224JY	R 220k	1/16W Metal Oxide	AA
R1028	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
R1030	VRS-CY1JF102JY	R 1k	1/16W Metal Oxide	AA
R1031	VRD-RA2BE562JY	R 5.6k	1/8W Carbon	AA
R1032	VRS-CY1JF332JY	R 3.3k	1/16W Metal Oxide	AA
R1034	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
R1035	VRS-CY1JF332JY	R 3.3k	1/16W Metal Oxide	AA
R1036	VRS-CY1JF332JY	R 3.3k	1/16W Metal Oxide	AA

Ref. No.	Part No.	★	Description	Code
R1037	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
R1038	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
R1039	VRS-CY1JF223JY	R 22k	1/16W Metal Oxide	AA
R1040	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
R1041	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
R1042	VRD-RA2BE101JY	R 100	1/8W Carbon	AA
R1046	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
R1048	VRS-CY1JF102JY	R 1k	1/16W Metal Oxide	AA
R1050	VRS-CY1JF392JY	R 3.9k	1/16W Metal Oxide	AA
R1051	VRS-CY1JF683JY	R 68k	1/16W Metal Oxide	AA
R1072	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
R1073	VRS-CY1JF101JY	R 100	1/16W Metal Oxide	AA
BALUNE				
FB601	RBLN-0091GEZZY	R	Balun	AB
SWITCHES				
⚠ S702	QSW-PA006WJZZ	R	Switch	AG
S1001	QSW-K0003AJZZ+	R	Switch, CH UP	AB
S1002	QSW-K0003AJZZ+	R	Switch, CH DOWN	AB
S1003	QSW-K0003AJZZ+	R	Switch, VOL. UP	AB
S1004	QSW-K0003AJZZ+	R	Switch, VOL. DOWN	AB
S1005	QSW-K0003AJZZ+	R	Switch, PICTUER/PRESET	AB
MISCELLANEOUS PARTS				
⚠ ACC701	QACCCA019WJPZ	R	AC Cord	AH
(14D1-SA/14D1-GA/14D2-SA/14D2-GA)				
⚠ ACC701	QACCCA020WJPZ	R	AC Cord	AH
⚠ F701	QFS-C3229CEZZ	R	Fuse, T3.15A/250V	AD
⚠ FH701	QFSDH1013CEZZ+	R	Fuse Holder	AC
⚠ FH702	QFSDH1014CEZZ+	R	Fuse Holder	AC
J402	QJAKE0210CE04	R	Jack, Video	AC
J403	QJAKE0210CE09	R	Jack, Audio	AC
J409	QJAKHA004WJZZ	R	Jack, AV-1 IN	AE
P301	QPLGNA107WJZZ	R	Plug, 2Pin(S)	AA
(14D1-SA/14D1-SF/14D1-GA/14D1-GF)				
P302	QPLGNA109WJZZ	R	Plug, 4Pin(S)	AB
(14D2-SA/14D2-SF/14D2-GA/14D2-GF)				
P303	QPLGNA109WJZZ	R	Plug, 4Pin(HP)	AB
(14D1-SA/14D1-SF/14D1-GA/14D1-GF)				
P303	QPLGNA110WJZZ	R	Plug, 5Pin(HP)	AB
(14D2-SA/14D2-SF/14D2-GA/14D2-GF)				
P601	QPLGN0660CEZZ	R	Plug, 6Pin(F)	AC
P602	LHLDW1104PEZZ	R	Holder, 4Pin(H)	AB
P603	QPLGNA108WJZZ	R	Plug, 3Pin(TP651-3)	AB
P701	QPLGN0260CEZZ	R	Plug, 2Pin(M)	AC
P702	QPLGA0201PEZZ	R	Plug, 2Pin	AB
P1001	LHLDW1105PEZZ	R	Holder, 5Pin(K)	AB
P1002	QPLGNA110WJZZ	R	Plug, 5Pin(BC)	AB
RDA302	PRDAR0340PEFW	R	Heat Sink for IC302	AE
(14D2-SA/14D2-SF/14D2-GA/14D2-GF)				
RDA302	PRDAR0341PEFW	R	Heat Sink for IC302	AD
(14D1-SA/14D1-SF/14D1-GA/14D1-GF)				
RDA501	PRDAR0118GJFW	R	Heat Sink for IC501	AD
RDA701	PRDARA028WJFW	R	Heat Sink for IC701	AE
RMC1001	RRMCUA009WJZZ	R	Remote Receiver	AF
LHLDP1066PE00				
R Holder				
TP201	QLUGP0102PEZZ	R	Lug	AA

Ref. No.	Part No.	★	Description	Code
DUNTKB509WED3 (14D1-SA/14D1-GA)				
DUNTKB509WED4 (14D1-SF/14D1-GF)				
DUNTKB509WED1 (14D2-SA/14D2-GA)				
DUNTKB509WED2 (14D2-SF/14D2-GF)				
PWB-B CRT UNIT				

TRANSISTORS

Q870	RH-TX0110BMZZ+	R	TX0110BM	AC
Q871	RH-TX0110BMZZ+	R	TX0110BM	AC
Q872	RH-TX0110BMZZ+	R	TX0110BM	AC
Q883	RH-TX0124BMZZ+	R	TX0124BM	AC
Q885	RH-TX0124BMZZ+	R	TX0124BM	AC
Q887	RH-TX0124BMZZ+	R	TX0124BM	AC

DIODES

D881	VHD1SS244//-1Y	R	1SS244	AB
D882	VHD1SS244//-1Y	R	1SS244	AB
D883	VHD1SS244//-1Y	R	1SS244	AB
D884	VHD1SS133++-1Y	R	1SS133++	AA
D885	VHD1SS133++-1Y	R	1SS133++	AA
D886	VHD1SS82///1AY	R	1SS82	AC
D887	VHD1SS82///1AY	R	1SS82	AC
D888	VHD1SS82///1AY	R	1SS82	AC

CAPACITORS

C871	VCCCCY1HH471JY	R	470p 50V Ceramic	AA
C872	VCCCCY1HH391JY	R	390p 50V Ceramic	AB
C873	VCCCCY1HH471JY	R	470p 50V Ceramic	AA
C875	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA
C876	RC-KZ0150CEZZ	R	1000p 3kV	AB
C878	VCEAOA2EW106M+	R	10 250V Electrolytic	AD
C880	VCCCCY1HH471JY	R	470p 50V Ceramic	AA
C881	VCKYPA1HB471K+	R	470p 50V Ceramic	AA
C882	VCKYPA1HB471K+	R	470p 50V Ceramic	AA
C886	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA

RESISTORS

R879	VRS-CY1JF471JY	R	470 1/16W Metal Oxide	AA
R880	VRS-CY1JF471JY	R	470 1/16W Metal Oxide	AA
R881	VRS-CY1JF471JY	R	470 1/16W Metal Oxide	AA
R882	VRS-VU3DE153J	R	15k 2W Metal Oxide	AB
R883	VRD-RM2HD272JY	R	2.7k 1/2W Carbon	AA
R884	VRS-VU3DE153J	R	15k 2W Metal Oxide	AB
R885	VRD-RM2HD272JY	R	2.7k 1/2W Carbon	AA
R886	VRS-VU3DE153J	R	15k 2W Metal Oxide	AB
R887	VRD-RM2HD272JY	R	2.7k 1/2W Carbon	AA
R888	VRS-CY1JF471JY	R	470 1/16W Metal Oxide	AA
R892	VRS-CY1JF102JY	R	1k 1/16W Metal Oxide	AA
R893	VRS-CY1JF102JY	R	1k 1/16W Metal Oxide	AA
R894	VRS-CY1JF102JY	R	1k 1/16W Metal Oxide	AA
R898	VRS-CY1JF471JY	R	470 1/16W Metal Oxide	AA
R899	VRS-CY1JF471JY	R	470 1/16W Metal Oxide	AA

MISCELLANEOUS PARTS

SC881	QSOCV0017PEZZ	R	Socket, 9Pin	AF
P882	LHLDW1105PEZZ	R	Holder, 5Pin(K)	AB
P884	LHLDW1104PEZZ	R	Holder, 4Pin(H)	AB

DUNTKB510WEB4
PWB-C HEADPHONE UNIT**RESISTORS**

RJ60	VRS-CY1JF000JY	R	0 1/16W Metal Oxide	AA
RJ61	VRS-CY1JF000JY	R	0 1/16W Metal Oxide	AA
RJ62	VRS-CY1JF000JY	R	0 1/16W Metal Oxide	AA
R370	VRS-CY1JF471JY	R	470 1/16W Metal Oxide	AA
R371	VRS-CY1JF471JY	R	470 1/16W Metal Oxide	AA

MISCELLANEOUS PARTS

J351	QJAKJ0101SEZZ	R	Jack	AE
P351	QPLGNA109WJZZ	R	Plug, 4Pin(HP)	AB

Ref. No.	Part No.	★	Description	Code
MISCELLANEOUS PARTS				
SP301	VSP9050PB53WA	R	Speaker (R) (14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	AH
SP301	VSP9050PB53WA	R	Speaker (14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	AH
SP302	VSP9050PB53WA	R	Speaker (14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	AH
QCNW-A291WJZZ		R	Connecting Cord (14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	AD
QCNW-A292WJZZ		R	Connecting Cord (14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	AD
QCNW-A293WJZZ		R	Connecting Cord (14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	AC
QCNW-A343WJZZ		R	Connecting Cord (14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	AC
QCNW-C007WJZZ		R	Connecting Cord (14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	AF
QCNW-2206PEZZ		R	Connecting Cord (14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	AD
QCNW-2379PEZZ		R	Connecting Cord (14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	AE
QCNW-2452PEZZ		R	Connecting Cord (14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	AE
QPLGA0017CEZZ		R	Plug (14D1-SF/14D1-GF/14D2-SF/ 14D2-GF)	AK
QPLGJ0113CEZZ		R	Plug	AG

SUPPLIED ACCESSORIES**ACCESSORIES**

RRMCG1342PESA	R	I/R Control Unit	AU
TiNS-B017WJZZ	R	Operation Manual (14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	AH
TiNS-B069WJZZ	R	Operation Manual (14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	AH
TMAPCA049WJZZ	R	Circuit Diagram (14D2-SA/14D2-GA)	AC
TMAPCA050WJZZ	R	Circuit Diagram (14D1-SA/14D1-GA)	AC
TMAPCA054WJZZ	R	Circuit Diagram (14D2-SF/14D2-GF)	AC
TMAPCA057WJZZ	R	Circuit Diagram (14D1-SF/14D1-GF)	AC
QANTRA002WJZZ	R	Rod Antenna	AL

14D1-SA/SF/GA/GF
14D2-SA/SF/GA/GF

Ref. No.	Part No.	★	Description	Code
PACKING PARTS (NOT REPLACEMENT ITEM)				
	SPAKCB094WJZZ	—	Packing Case(14D1-SA)	—
	SPAKCB095WJZZ	—	Packing Case(14D1-GA)	—
	SPAKCB096WJZZ	—	Packing Case(14D1-SF)	—
	SPAKCB097WJZZ	—	Packing Case(14D1-GF)	—
	SPAKCB020WJZZ	—	Packing Case(14D2-SA)	—
	SPAKCB022WJZZ	—	Packing Case(14D2-GA)	—
	SPAKCB021WJZZ	—	Packing Case(14D2-SF)	—
	SPAKCB023WJZZ	—	Packing Case(14D2-GF)	—
	SPAKXA138WJZZ	—	Packing Form	—
			(14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	
	SPAKXA163WJZZ	—	Buffer Material	—
			(14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	
	SSAKH0015PEZZ	—	Wrapping Bag	—
			(14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	
	SSAKH0009PEZZ	—	Wrapping Bag	—
			(14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	
	SPAKP0056PEZZ	—	Wrapping Sheet	—
			(14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	

CABINET PARTS


14D1-SA				
1	CCABAA484WEV0	R	Front Cabinet Ass'y	BD
1-1	<i>Not Available</i>	—	Front Cabinet	—
1-2	HBDGB0018PESB	R	SHARP Badge	AD
1-3	JBTN-A067WJSA	R	Control Button	AG
1-4	GCOVAA193WJSA	R	R/C LED Cover	AD
1-5	JBTN-A175WJSA	R	Power Button	AD
1-6	MSPRC0005PEFW	R	Power Button Spring	AB
2	CCABBA087WEV1	R	Rear Cabinet Ass'y	AV
2-1	<i>Not Available</i>	—	Rear Cabinet	—
14D1-GA				
1	CCABAA485WEV0	R	Front Cabinet Ass'y	BC
1-1	<i>Not Available</i>	—	Front Cabinet	—
1-2	HBDGB0018PESB	R	SHARP Badge	AD
1-3	JBTN-A067WJSA	R	Control Button	AG
1-4	GCOVAA193WJSA	R	R/C LED Cover	AD
1-5	JBTN-A175WJSA	R	Power Button	AD
1-6	MSPRC0005PEFW	R	Power Button Spring	AB
2	CCABBA087WEV1	R	Rear Cabinet Ass'y	AV
2-1	<i>Not Available</i>	—	Rear Cabinet	—
14D1-SF				
1	CCABAA486WEV0	R	Front Cabinet Ass'y	BD
1-1	<i>Not Available</i>	—	Front Cabinet	—
1-2	HBDGB0018PESB	R	SHARP Badge	AD
1-3	JBTN-A067WJSA	R	Control Button	AG
1-4	GCOVAA193WJSA	R	R/C LED Cover	AD
1-5	JBTN-A175WJSA	R	Power Button	AD
1-6	MSPRC0005PEFW	R	Power Button Spring	AB
2	CCABBA087WEV1	R	Rear Cabinet Ass'y	AV
2-1	<i>Not Available</i>	—	Rear Cabinet	—

14D1-GF				
1	CCABAA487WEV0	R	Front Cabinet Ass'y	BC
1-1	<i>Not Available</i>	—	Front Cabinet	—
1-2	HBDGB0018PESB	R	SHARP Badge	AD
1-3	JBTN-A067WJSA	R	Control Button	AG
1-4	GCOVAA193WJSA	R	R/C LED Cover	AD
1-5	JBTN-A175WJSA	R	Power Button	AD
1-6	MSPRC0005PEFW	R	Power Button Spring	AB
2	CCABBA087WEV1	R	Rear Cabinet Ass'y	AV
2-1	<i>Not Available</i>	—	Rear Cabinet	—
14D2-SA				
1	CCABAA458WEV0	R	Front Cabinet Ass'y	BC
1-1	<i>Not Available</i>	—	Front Cabinet	—
1-2	HBDGB0019PESB	R	SHARP Badge	AD
1-3	JBTN-A028WJSA	R	Control Button	AF
1-4	GCOVAA106WJSA	R	R/C LED Cover	AC
1-5	JBTN-A206WJSA	R	Power Button	AD
1-6	MSPRC0068CEFW	R	Power Button Spring	AA
2	CCABBA096WEV0	R	Rear Cabinet Ass'y	AX
2-1	<i>Not Available</i>	—	Rear Cabinet	—
14D2-GA				
1	CCABAA460WEV0	R	Front Cabinet Ass'y	BC
1-1	<i>Not Available</i>	—	Front Cabinet	—
1-2	HBDGB0019PESB	R	SHARP Badge	AD
1-3	JBTN-A028WJSA	R	Control Button	AF
1-4	GCOVAA106WJSA	R	R/C LED Cover	AC
1-5	JBTN-A206WJSA	R	Power Button	AD
1-6	MSPRC0068CEFW	R	Power Button Spring	AA
2	CCABBA096WEV0	R	Rear Cabinet Ass'y	AX
2-1	<i>Not Available</i>	—	Rear Cabinet	—
14D2-SF				
1	CCABAA459WEV0	R	Front Cabinet Ass'y	BC
1-1	<i>Not Available</i>	—	Front Cabinet	—
1-2	HBDGB0019PESB	R	SHARP Badge	AD
1-3	JBTN-A028WJSA	R	Control Button	AF
1-4	GCOVAA106WJSA	R	R/C LED Cover	AC
1-5	JBTN-A206WJSA	R	Power Button	AD
1-6	MSPRC0068CEFW	R	Power Button Spring	AA
2	CCABBA096WEV0	R	Rear Cabinet Ass'y	AX
2-1	<i>Not Available</i>	—	Rear Cabinet	—
14D2-GF				
1	CCABAA461WEV0	R	Front Cabinet Ass'y	BC
1-1	<i>Not Available</i>	—	Front Cabinet	—
1-2	HBDGB0019PESB	R	SHARP Badge	AD
1-3	JBTN-A028WJSA	R	Control Button	AF
1-4	GCOVAA106WJSA	R	R/C LED Cover	AC
1-5	JBTN-A206WJSA	R	Power Button	AD
1-6	MSPRC0068CEFW	R	Power Button Spring	AA
2	CCABBA096WEV0	R	Rear Cabinet Ass'y	AX
2-1	<i>Not Available</i>	—	Rear Cabinet	—


Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

CABINET PARTS LOCATION

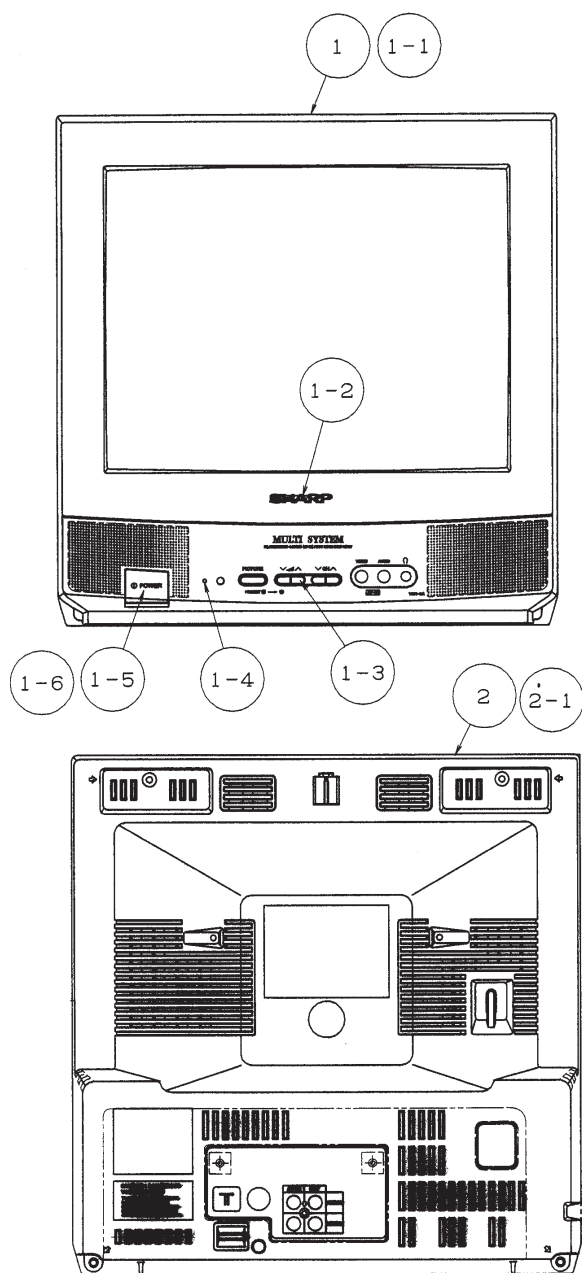


14D1-SA/SF/GA/GF

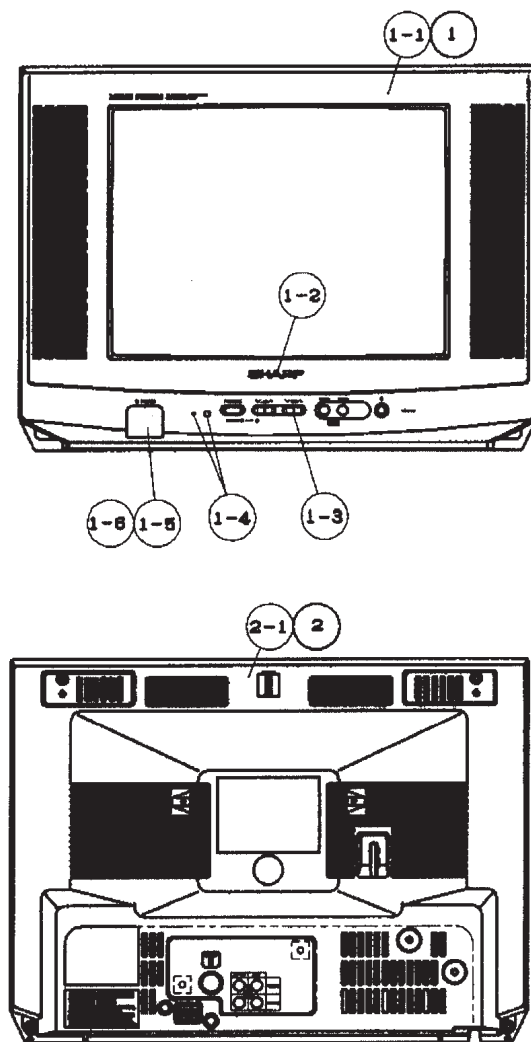


14D2-SA/SF/GA/GF


PACKING OF THE SET (14D1-SA/GA)

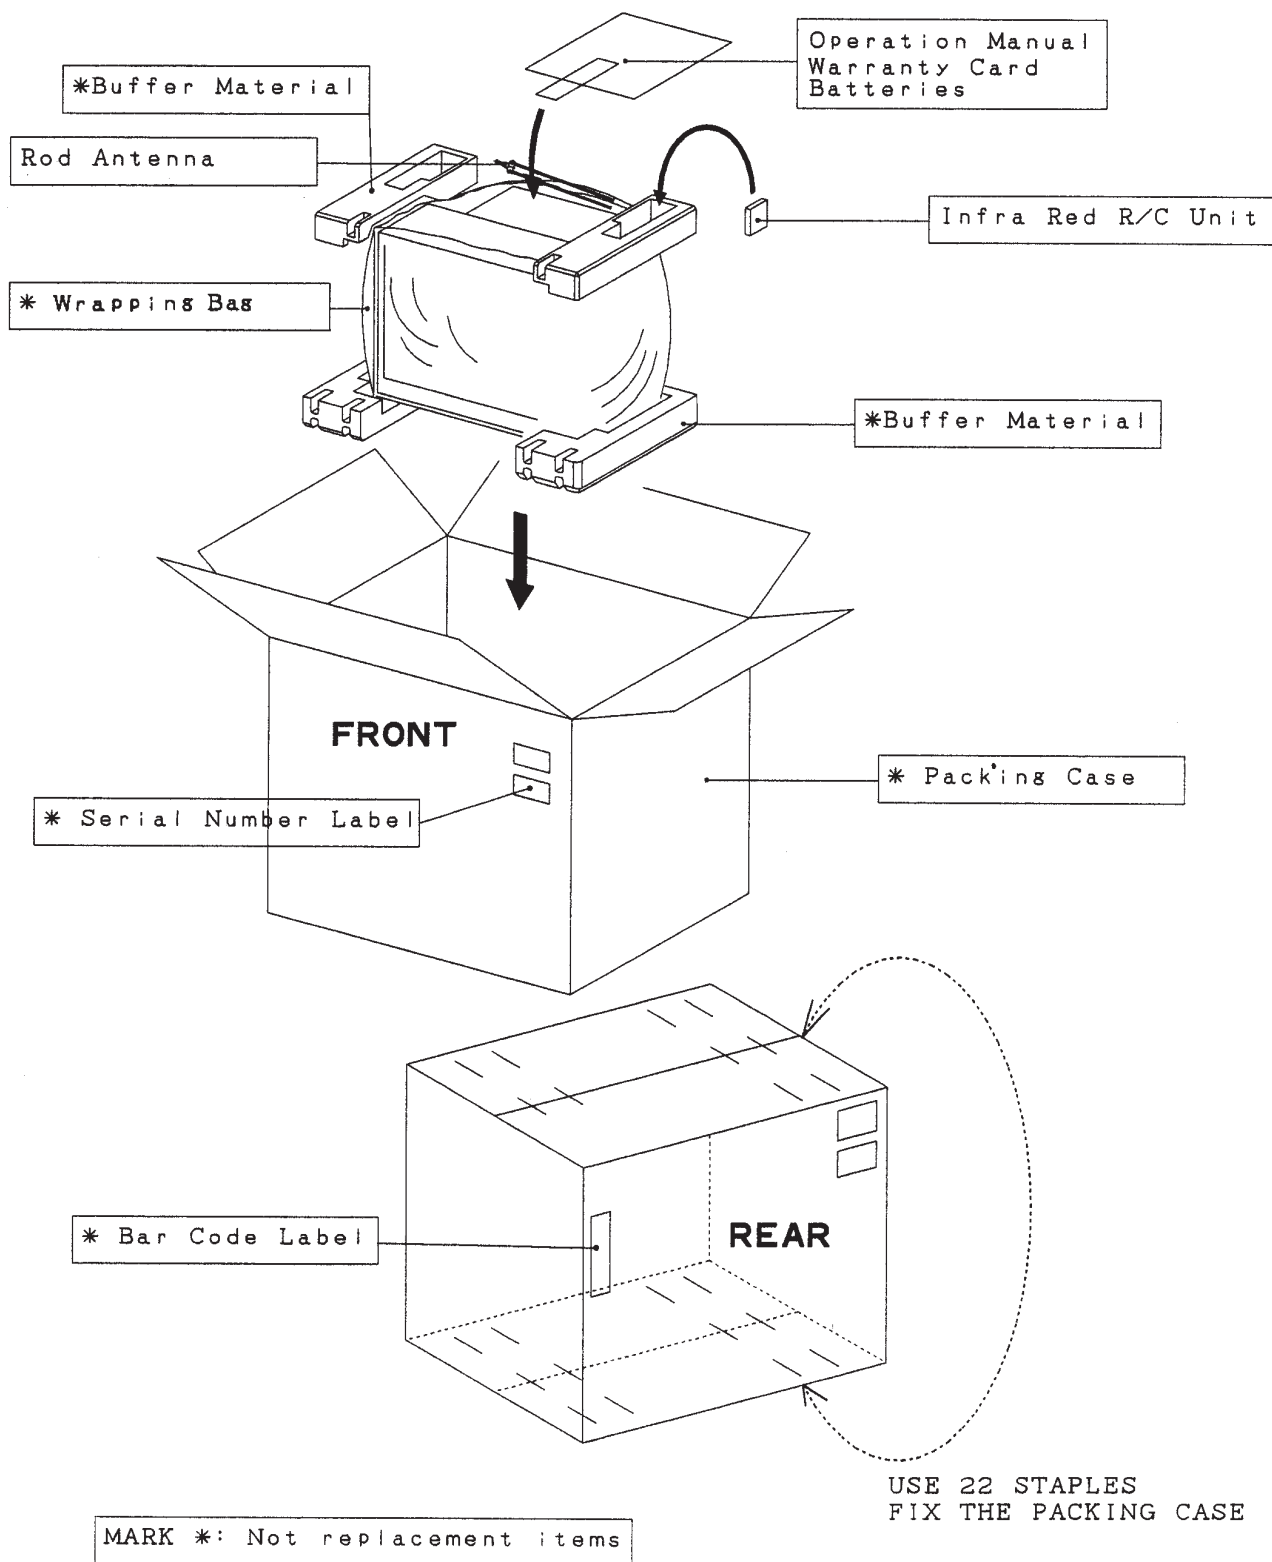


(14D1-SF/GF)

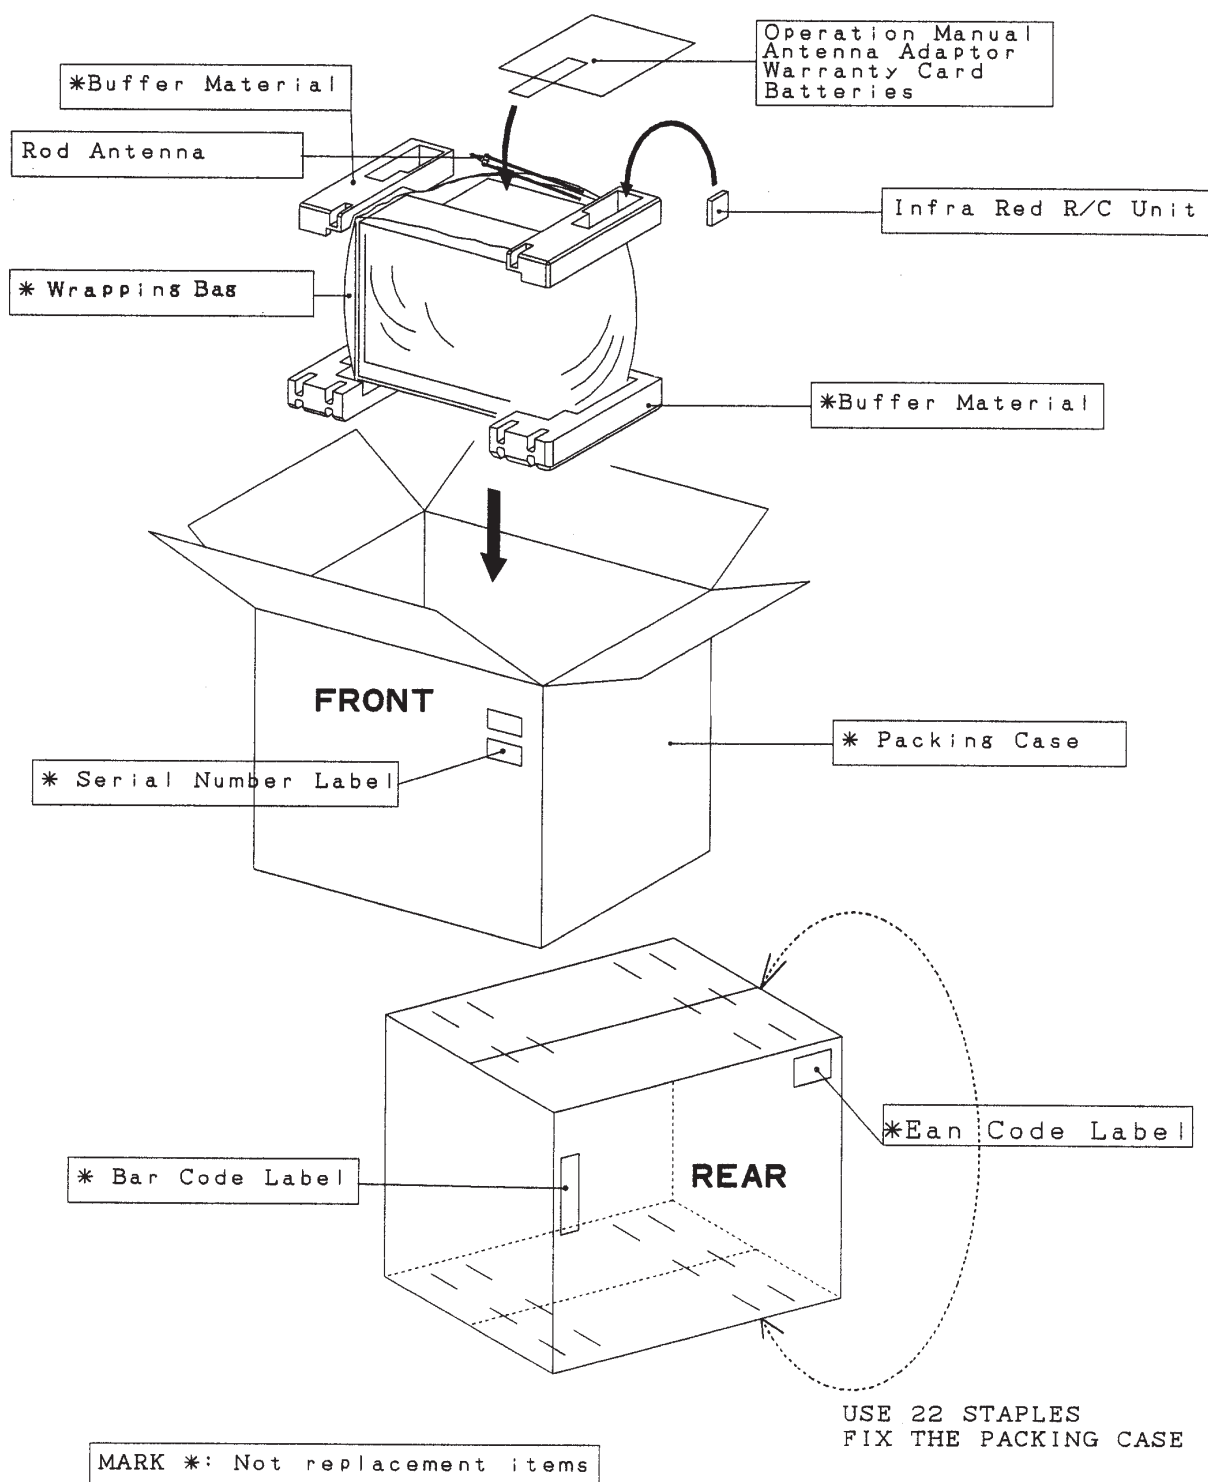

(14D2-SA/GA)

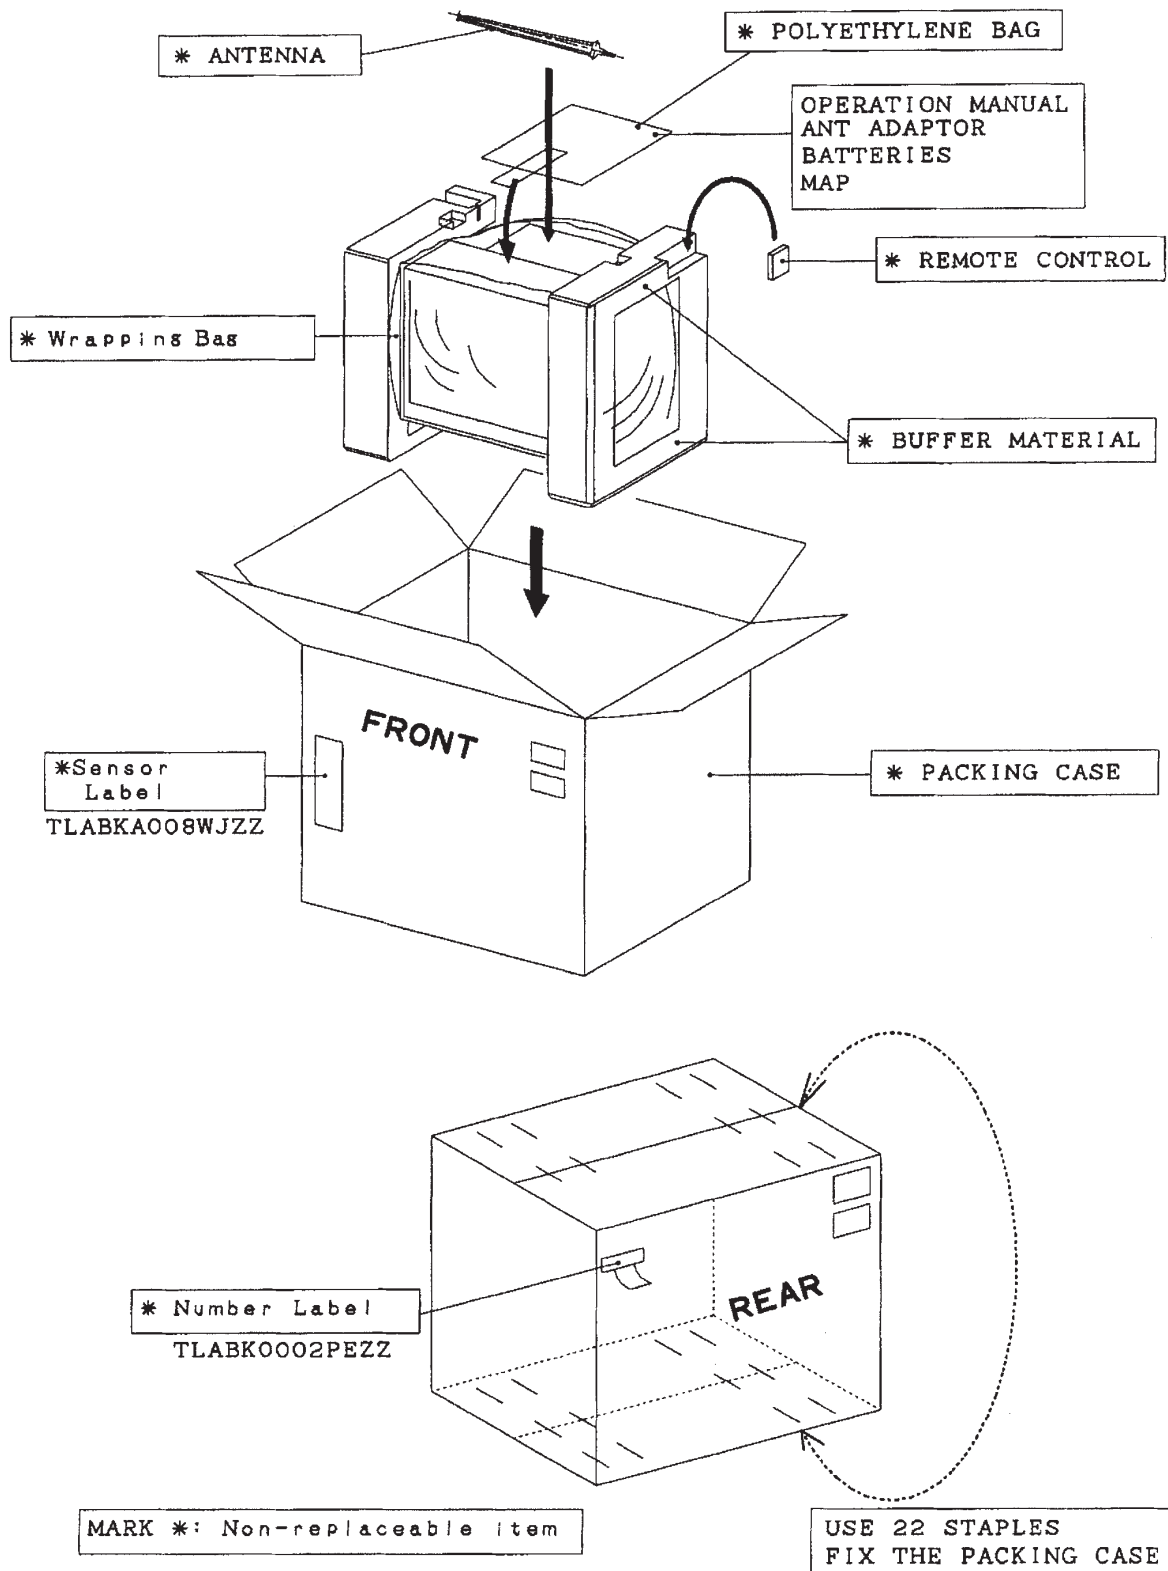

(14D2-SF/GF)

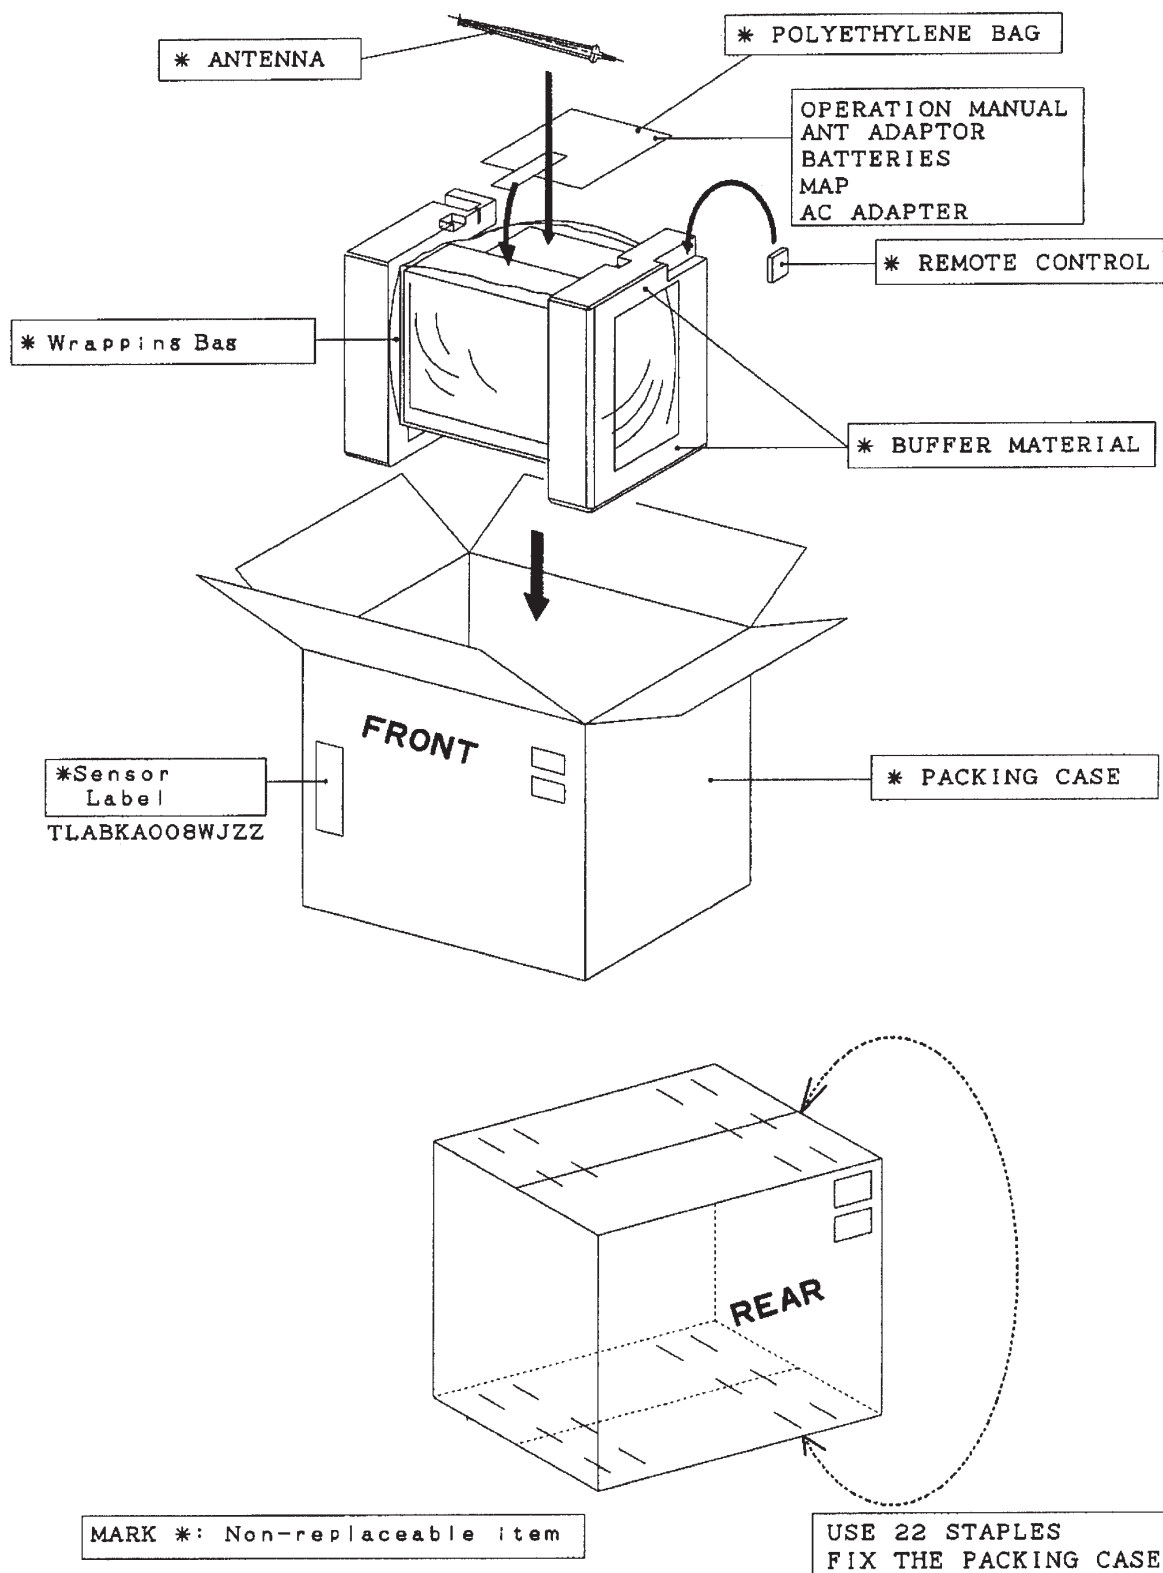

SHARP

COPYRIGHT © 2004 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted in
any form or by any means, electronic, mechanical,
photocopying, recording, or otherwise, without
prior written permission of the publisher.

TQ1671-S
Jan. 2004 Printed in Japan
In Japan gedruckt

Design and Production Information	
Design	: SEM
Production	: SREC

MY. DS

SHARP CORPORATION
AV Systems Group
Quality & Reliability Control Center
Yaita, Tochigi 329-2193, Japan