




For more Hi-Fi manuals and set-up information
please visit www.hifiengine.com

Service Manual

Stereo Integrated Amplifier

SU-8080

(M), (MC)

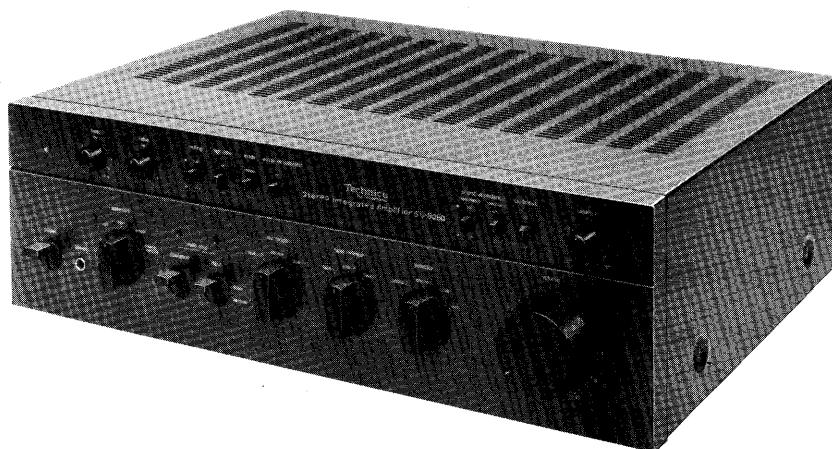

- The model SU-8080 (M) is available in America only.
- The model SU-8080 (MC) is available in Canada only.

TECHNICAL SPECIFICATIONS

(Specifications are subject to change without notice for further improvement.)

POWER AMPLIFIER SECTION

Rated minimum sine wave RMS power output

20 Hz ~ 20 kHz

both channels driven

0.02% total harmonic distortion

72W per channel (8 ohms)

20 Hz ~ 20 kHz continuous power output

both channels driven

0.05% total harmonic distortion

90W per channel (4 ohms)

1 kHz continuous power output

both channels driven

0.02% total harmonic distortion

74W per channel (8 ohms)

92W per channel (4 ohms)

Total harmonic distortion

0.02% at rated power (20 Hz ~ 20 kHz)

0.0015% at half power (1 kHz)

Frequency response

20 Hz ~ 20 kHz, +0 dB
-0.1 dB0 Hz ~ 100 kHz, +0 dB
-3 dB

S/N (IHF, A)

115 dB

Residual hum & noise

100μV

Damping factor

70 (8 ohms)

Input sensitivity & impedance

1V/47 kilohms

Load impedance

MAIN or REMOTE

4 ~ 16 ohms

MAIN+REMOTE

8 ~ 16 ohms

PRE-AMPLIFIER SECTION

Input sensitivity & impedance

PHONO 1, 2

2.5mV/27, 47 kilohms

TUNER

200mV/35 kilohms

AUX

200mV/35 kilohms

TAPE DECK 1, 2 PLAYBACK

200mV/35 kilohms

PHONO maximum input voltage (1 kHz, RMS)

280mV

Total harmonic distortion

0.01%

S/N (IHF, A)

PHONO 1, 2

88 dB

TUNER, AUX

via tone

100 dB

direct

106 dB

Frequency response

PHONO 1, 2

RIAA standard curve ±0.2 dB

TUNER, AUX

20 Hz ~ 20 kHz, +0 dB
-0.1 dB

Tone controls

BASS

50 Hz, +7.5 dB ~ -7.5 dB

TREBLE

20 kHz, +7.5 dB ~ -7.5 dB

Equalizer subsonic filter

30 Hz, -12 dB/oct.

High filter

10 kHz, -6 dB/oct.

Loudness control (volume at -30 dB)

100 Hz, +8 dB

Muting

-14 dB

Output voltage

PRE OUT rated

1V

maximum

9V

TAPE DECK 1, 2 REC OUT

200mV

GENERAL

Power supply

AC 120V 60 Hz

Power consumption

190W (only for America)

435VA (only for Canada)

Dimensions (W x H x D)

450 x 140 x 371 mm

(17 3/4" x 5 1/2" x 14 1/2")

Weight

13.5 kg (29.8 lb.)

Weights and dimensions shown are approximate.


Technics
by Panasonic

Panasonic Company
Division of Matsushita Electric
Corporation of America
One Panasonic Way, Secaucus,
New Jersey 07094


Matsushita Electric of Hawaii, Inc.
320 Waiakamilo Road, Honolulu,
Hawaii 96817

Matsushita Electric of Canada Ltd.
40 Ronson Drive, Rexdale,
Ontario, Canada M9W 1B5


■ LOCATION OF CONTROLS

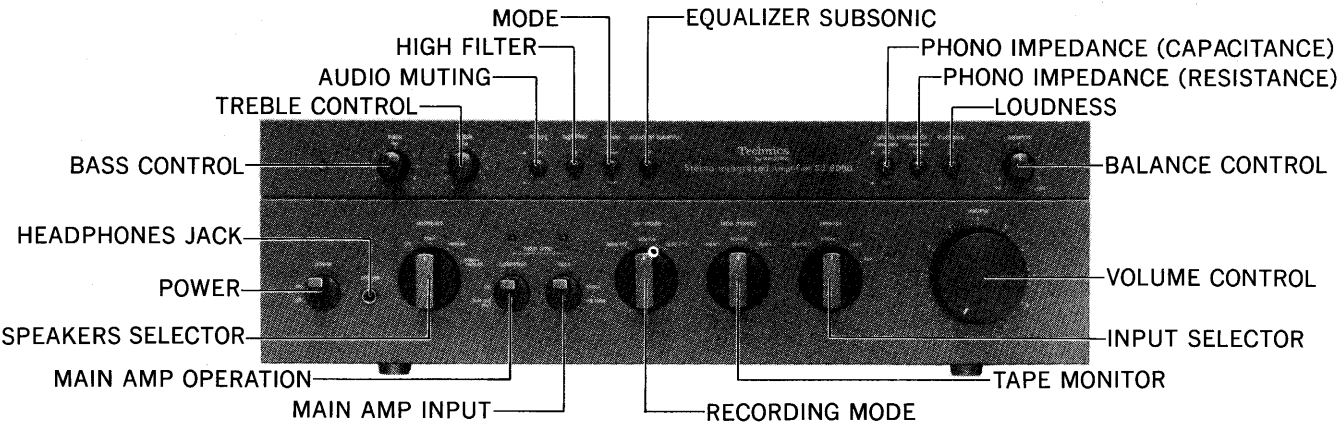

Front Panel View

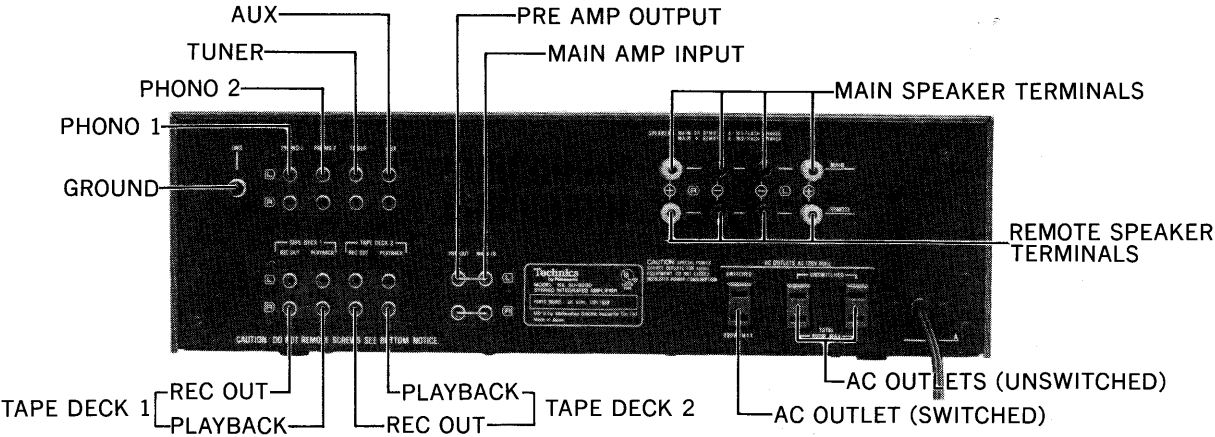

Rear Panel View

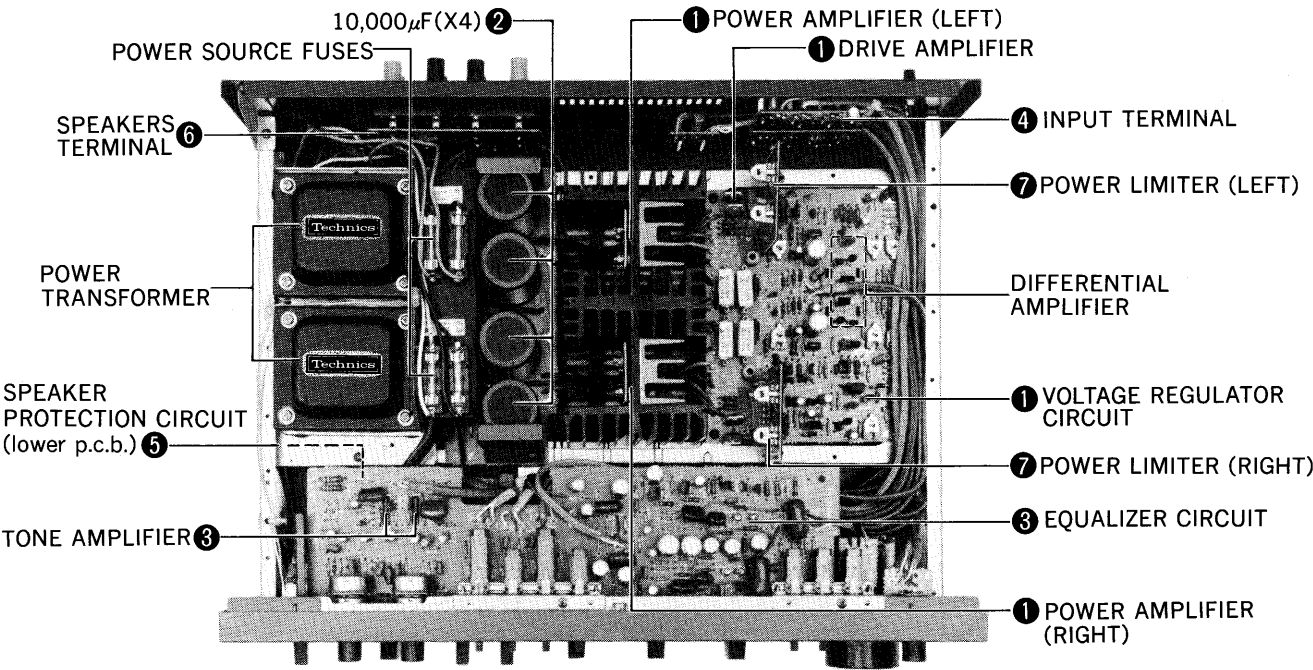

■ SERVICE AID

In the equalizer circuit of this unit, the ultra-Low Noise Transistors specially developed for the unit have been adopted at the initial stage, while carefully selected parts are employed for the NF elements to obtain high S/N ratio. Additionally, in the initial stages of the equalizer circuit and main amplifier circuit, the differential amplifier of current Mirror Load which provides high gain and stable functioning has been adopted.

- Although the tone amplifier has gain of 14 dB, the input signal is directly applied to the main amplifier when the "main amp input" switch is set to "direct", resulting in shortage of gain by -14 dB as compared with the case where the tone amplifier gain is obtained with the same switch set to "Via-tone". Therefore, in the "direct" position, the input to the main amplifier is increased by 14 dB, while the same input is decreased by 14 dB in the "Via tone" position to obtain flat characteristics.
- In the output circuit, there are connected the speaker protection circuit which prevents damages to the speaker when DC current is developed at the speaker terminals and the overload having impedance less than 4Ω , with the power limiter circuit being employed for preventing breakage of the power amplifier when excessive power is developed or upon short-circuiting of the speaker terminals. In cases where sufficient output is not produced even when playing is started with the speakers connected, or where the sound is interrupted intermittently, check the speakers for connections and impedance.

• POWER LIMITER CIRCUIT

Fig. 1 shows the power limiter circuit. In cases where the speaker terminals are short-circuited or large power is developed with overload of less than 4Ω impedance connected, large current flows through the emitter resistances R345 and R347 of TR319 and TR321, resulting in increased voltage drop. The voltage is applied to the bases of TR351 and TR352 of the power limiter circuit, thus turning these 2 transistors "ON".

The collectors of TR351 and TR352 are connected to the bases of TR313 and TR315 of the driver amplifier through D350 and D351. Therefore, when TR351 and D351. Therefore, when TR351 and TR352 are rendered conductive, the base bias for the driver amplifier becomes shallow, and the voltage to be applied to TR319 and TR321 of the power amplifier is reduced to make these transistors inoperative, with the output being consequently suspended.

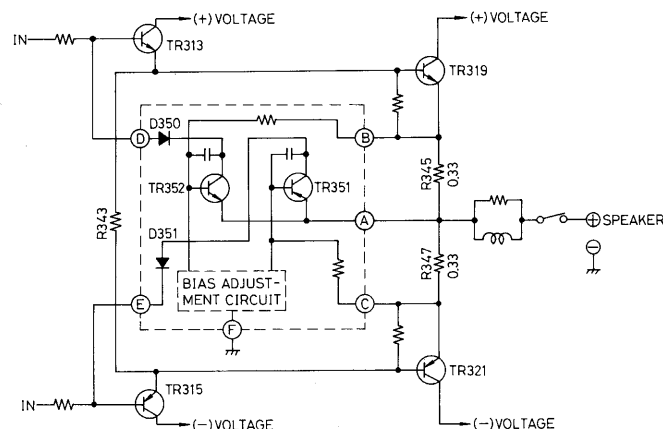


Fig. 1

■ TO REMOVE EQUALIZER AND TONE AMPLIFIER PRINTED CIRCUIT BOARD

- * For repairing the printed circuit board for the equalizer • tone amplifier printed circuit board, and the relay circuit and the tape monitor circuit at its lower stage (bottom board side), remove the equalizer • tone amplifier printed circuit board to the following procedure.

1. Remove the cabinet.
2. Discharge the charged voltage of the power source capacitor in the manner as shown in "Before starting the repairing".
3. Remove the screws ① and ② at the upper surface of the front panel, as shown in fig. 2.
4. Pull off the knobs for "bass" and "treble" from the front panel.
5. Remove the nuts ① and ②, taking care not to scratch the front panel, with a thin cloth or the like applied to the tip of a 8mm nut driver, and then remove the equalizer and tone amplifier printed circuit board from the chassis.

- * For removing other printed circuit board, such printed circuit boards are detachable when each of the knobs is pulled off, with the nuts fixed to the front panel being removed.

For removing the lever switches of the "main amp." and "power" switches, remove the screws secured to the chassis after the front panel has been detached.



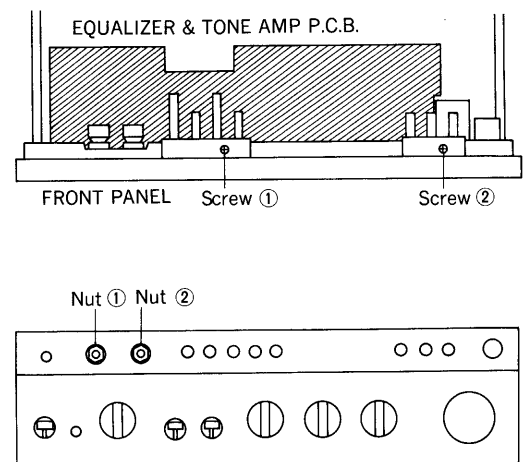


Fig. 2


① MAIN AMPLIFIER & POWER TRANSISTOR PRINTED CIRCUIT BOARD

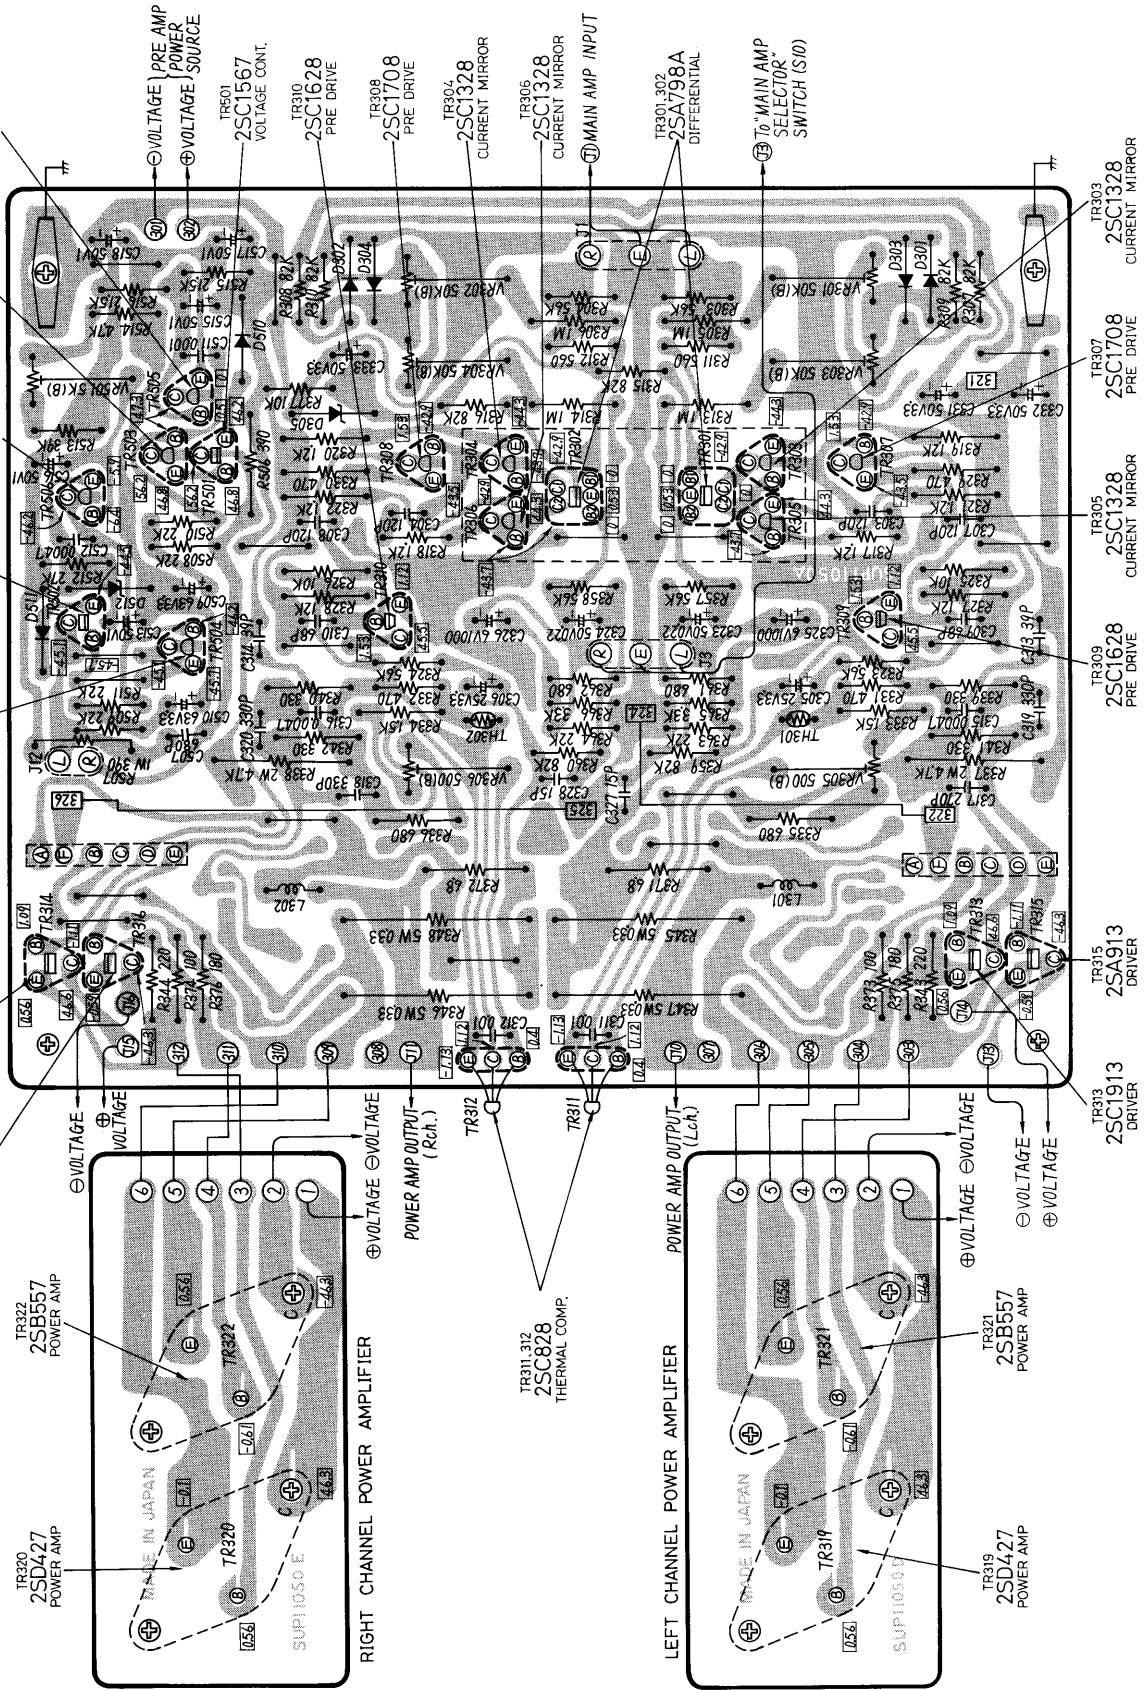

② POWER SUPPLY PRINTED CIRCUIT BOARD FOR MAIN AMPLIFIER



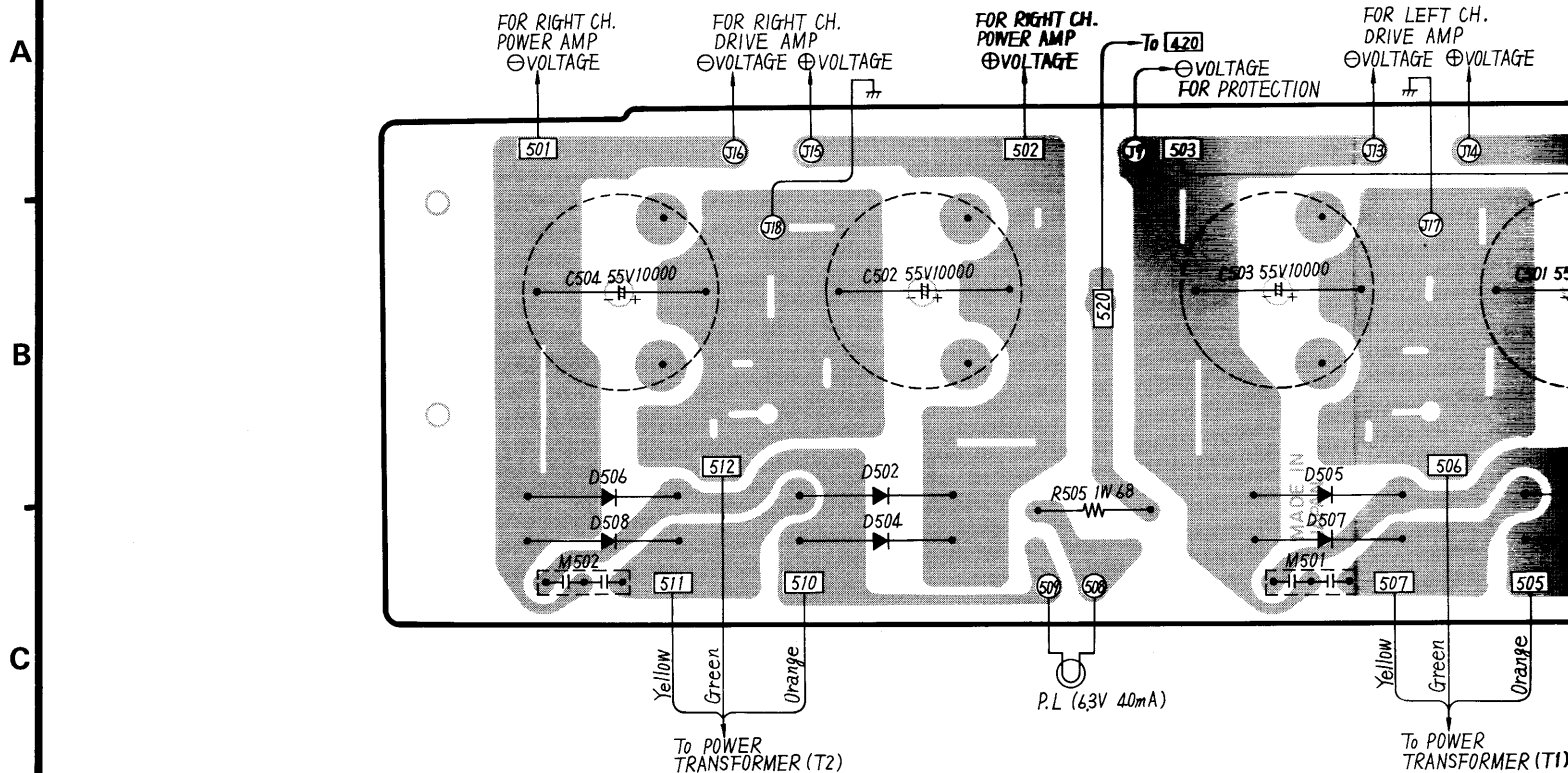


③ EQUALIZER & TONE AMPLIFIER PRINTED CIRCUIT BOARD

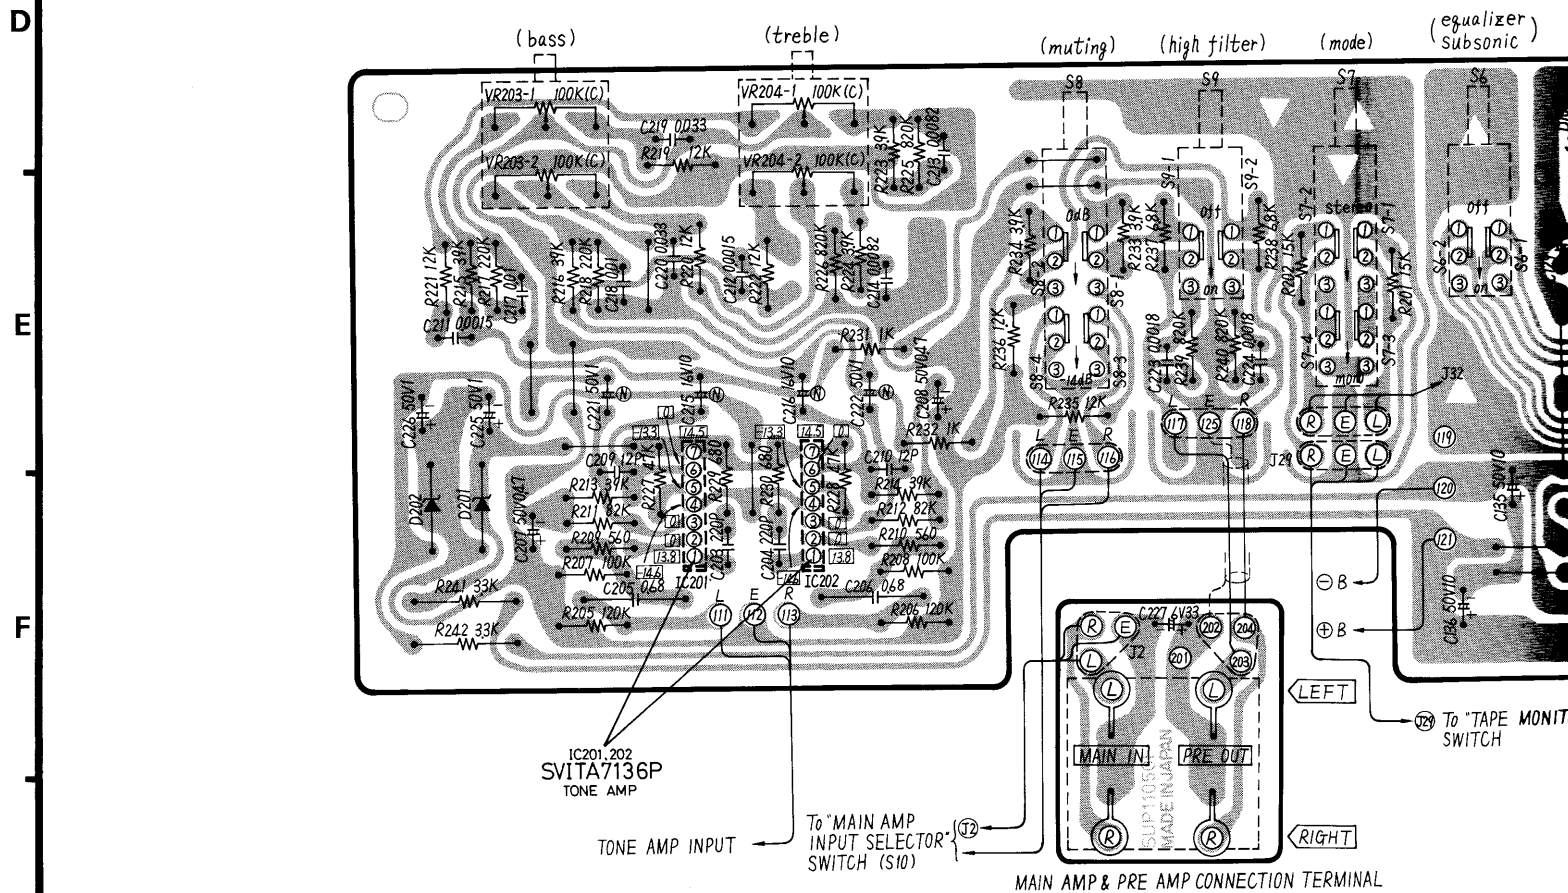

FOR LEFT CH.
DRIVE AMP
VOLTAGE ⊕ VOLTAGE

FOR LEFT CH.
POWER AMP
VOLTAGE ⊕ VOLTAGE

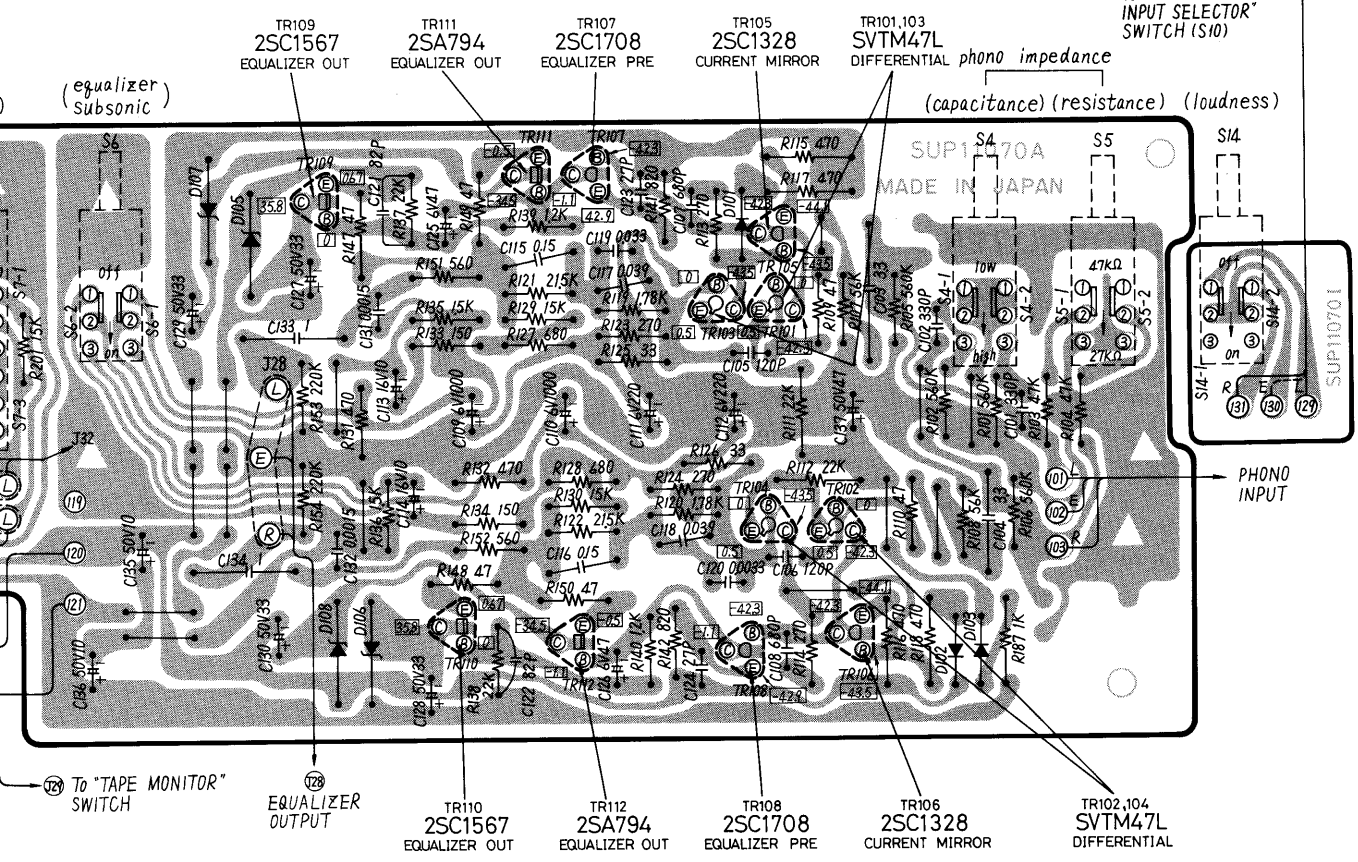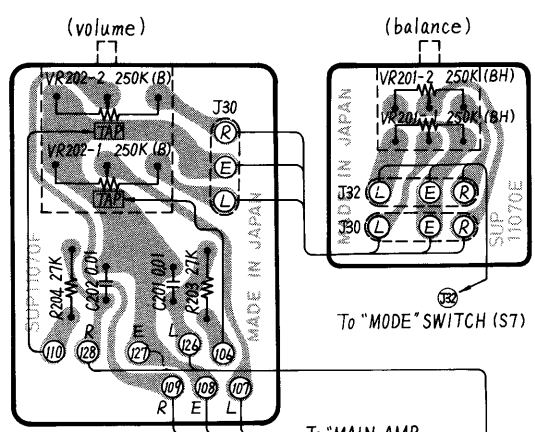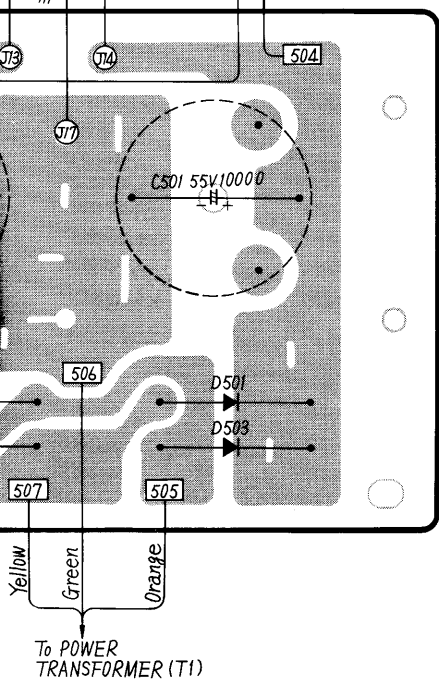


④ INPUT & TAPE MONITOR SWITCH PRINTED CIRCUIT BOARD

A

B

C

D

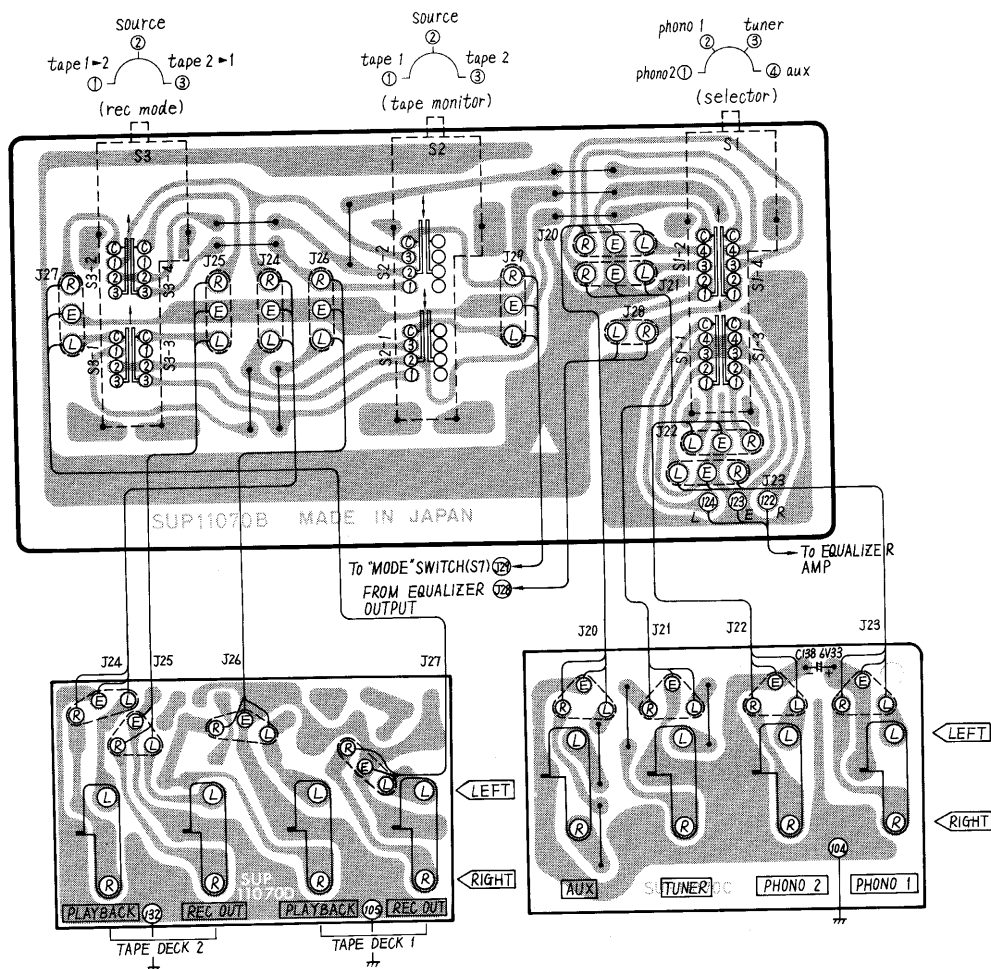


1

2


3

4


⑤ PROTECTION & MAIN AMPLIFIER SELECTOR PRINTED CIRCUIT BOARD

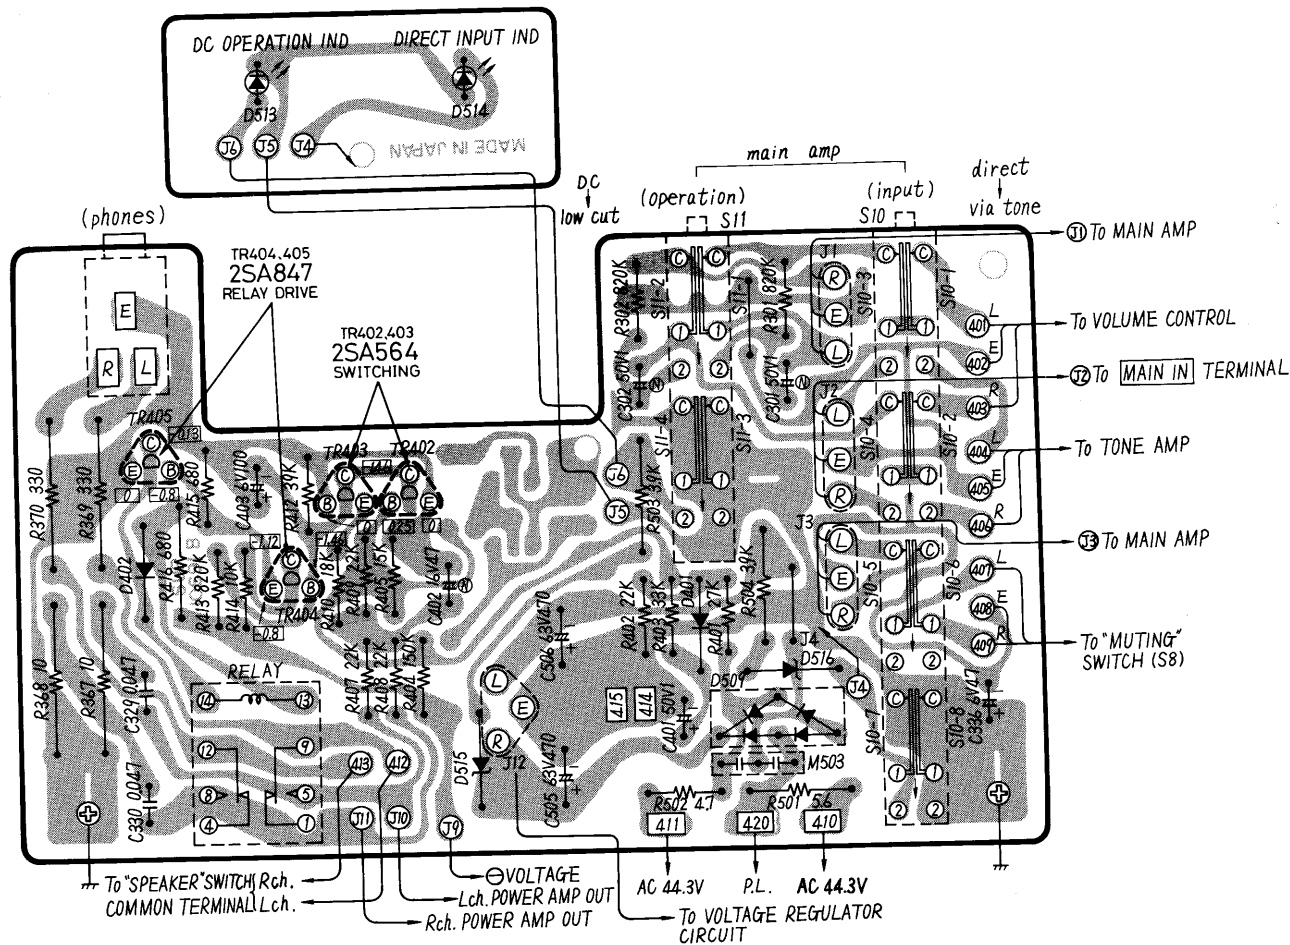


⑥ SPEAKERS TERMINAL PRINTED CIRCUIT BOARD

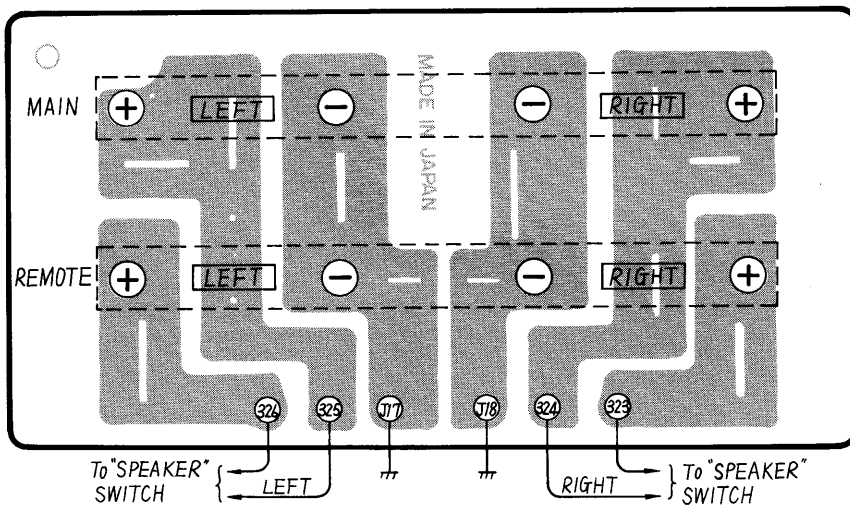

⑦ POWER LIMITER PRINTED CIRCUIT BOARD (left or right channel)

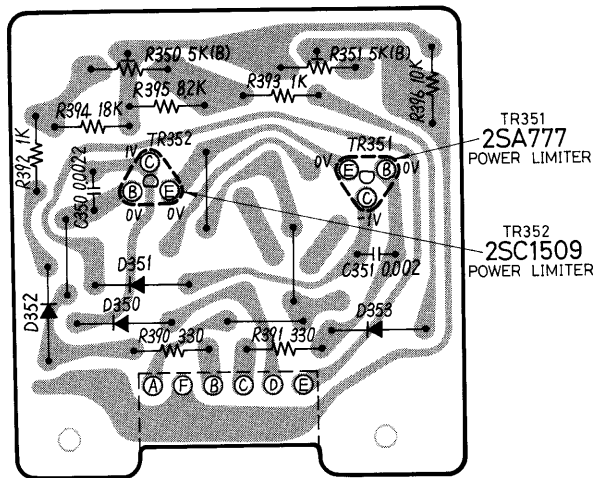


■ BLOCK DIAGRAM

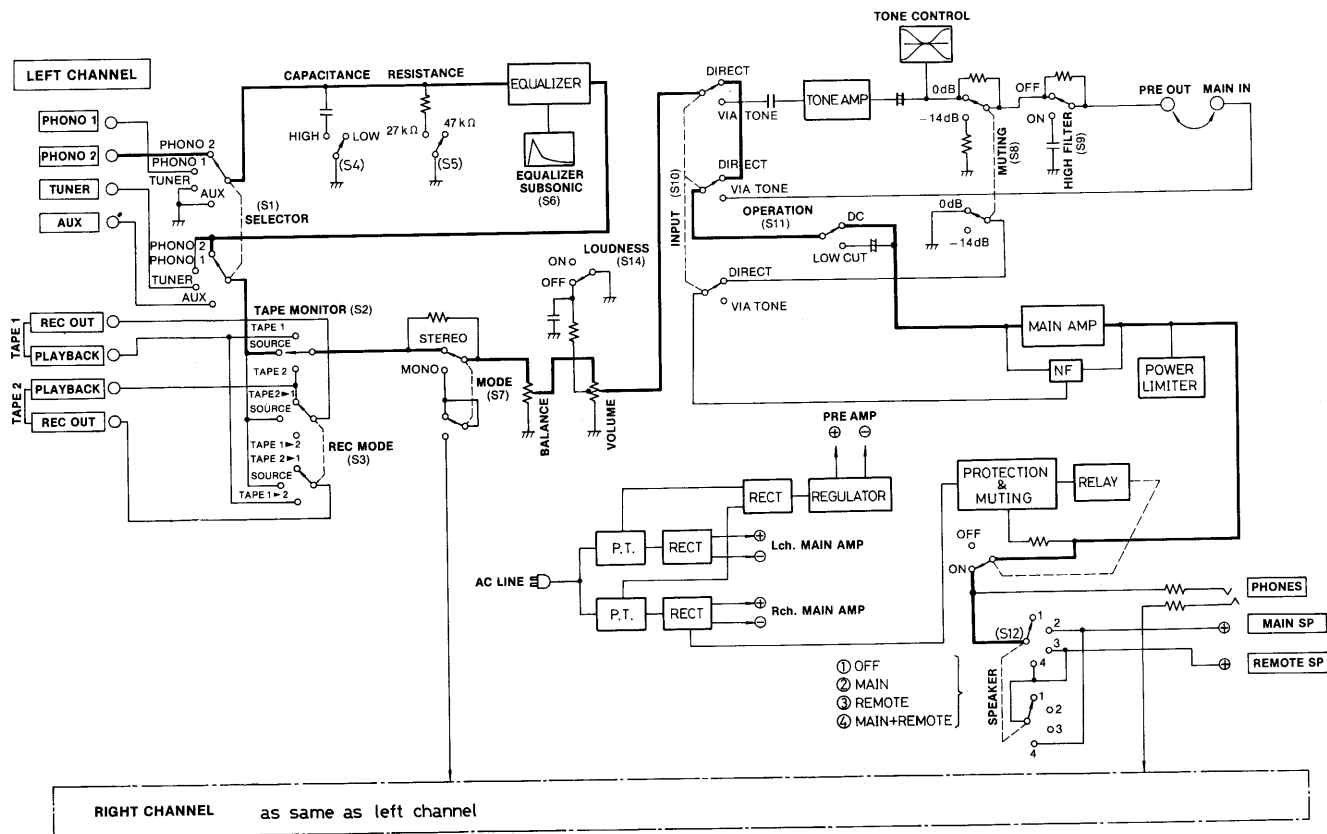



Schematic Diagram Model SU-8080

(This schematic diagram may be modified at any time with the development of new technology.)


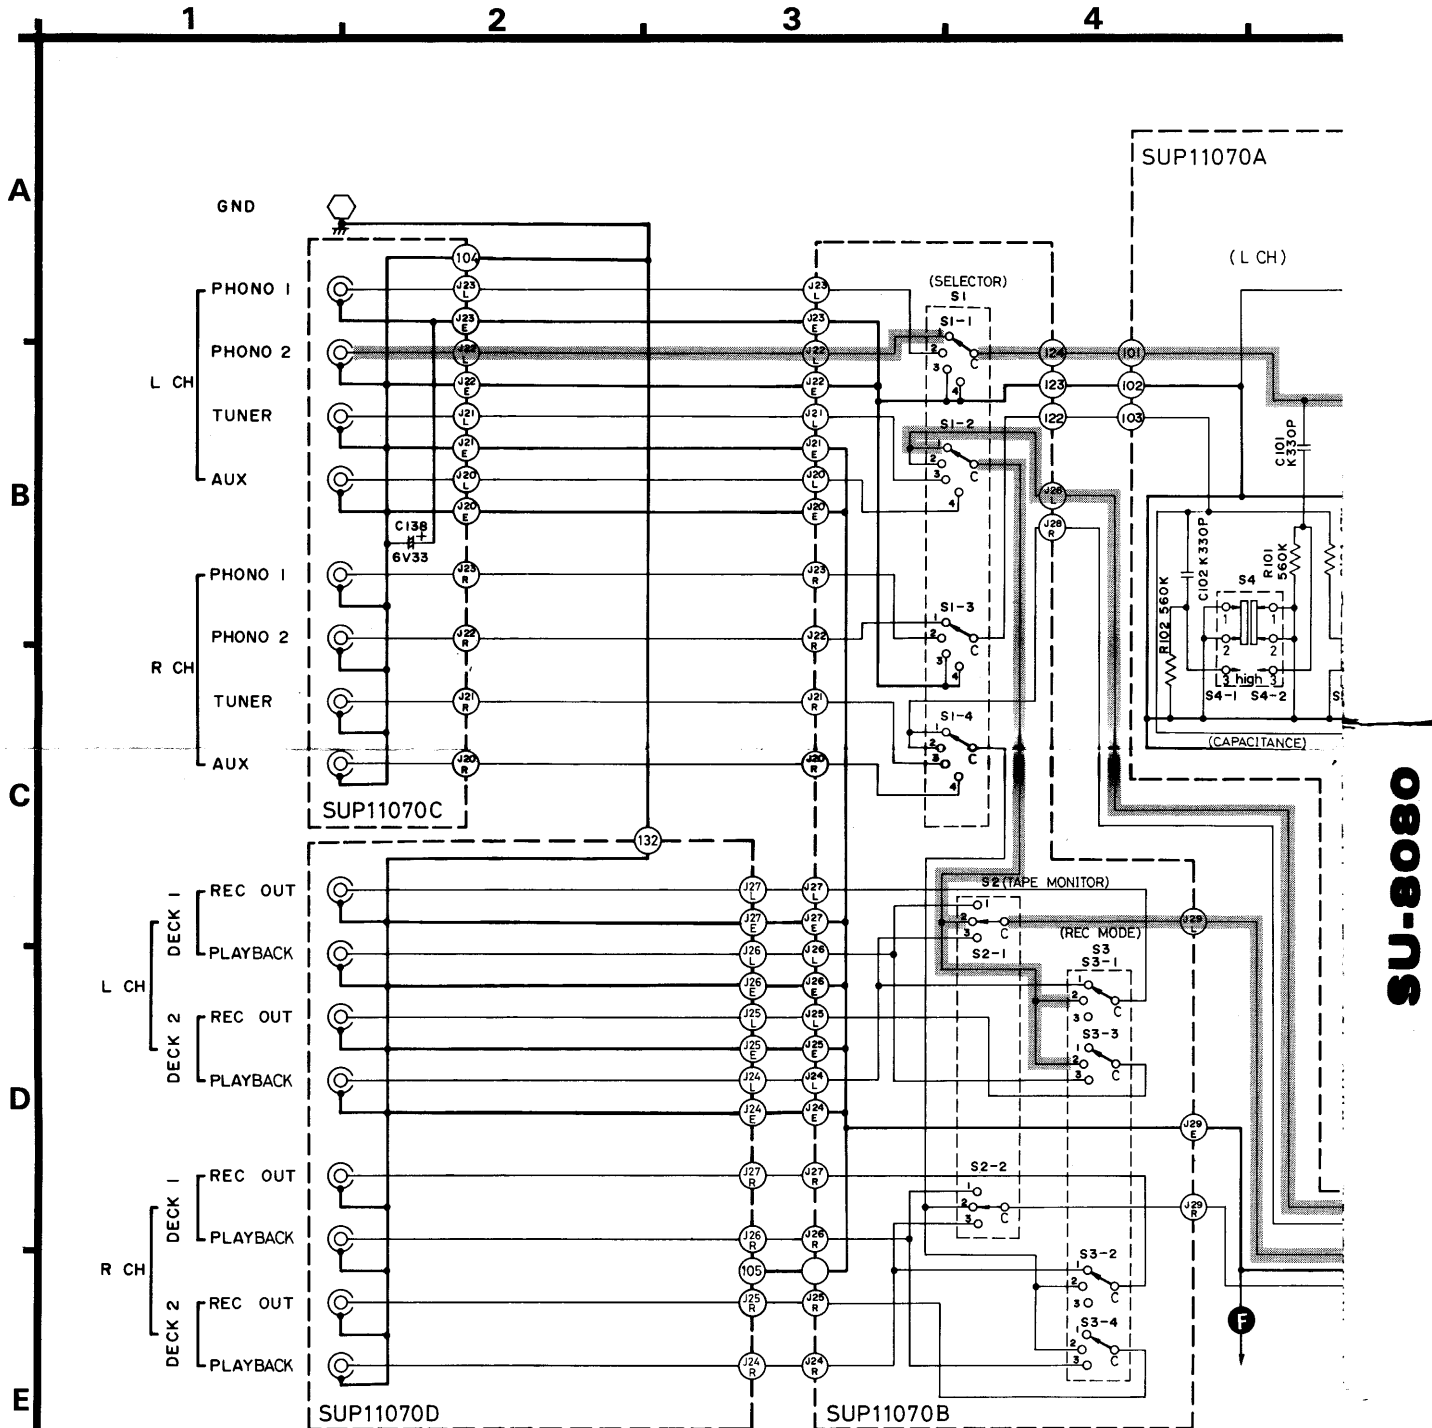


SU-8080

**IC101, IC102
(SVITA7136P)**

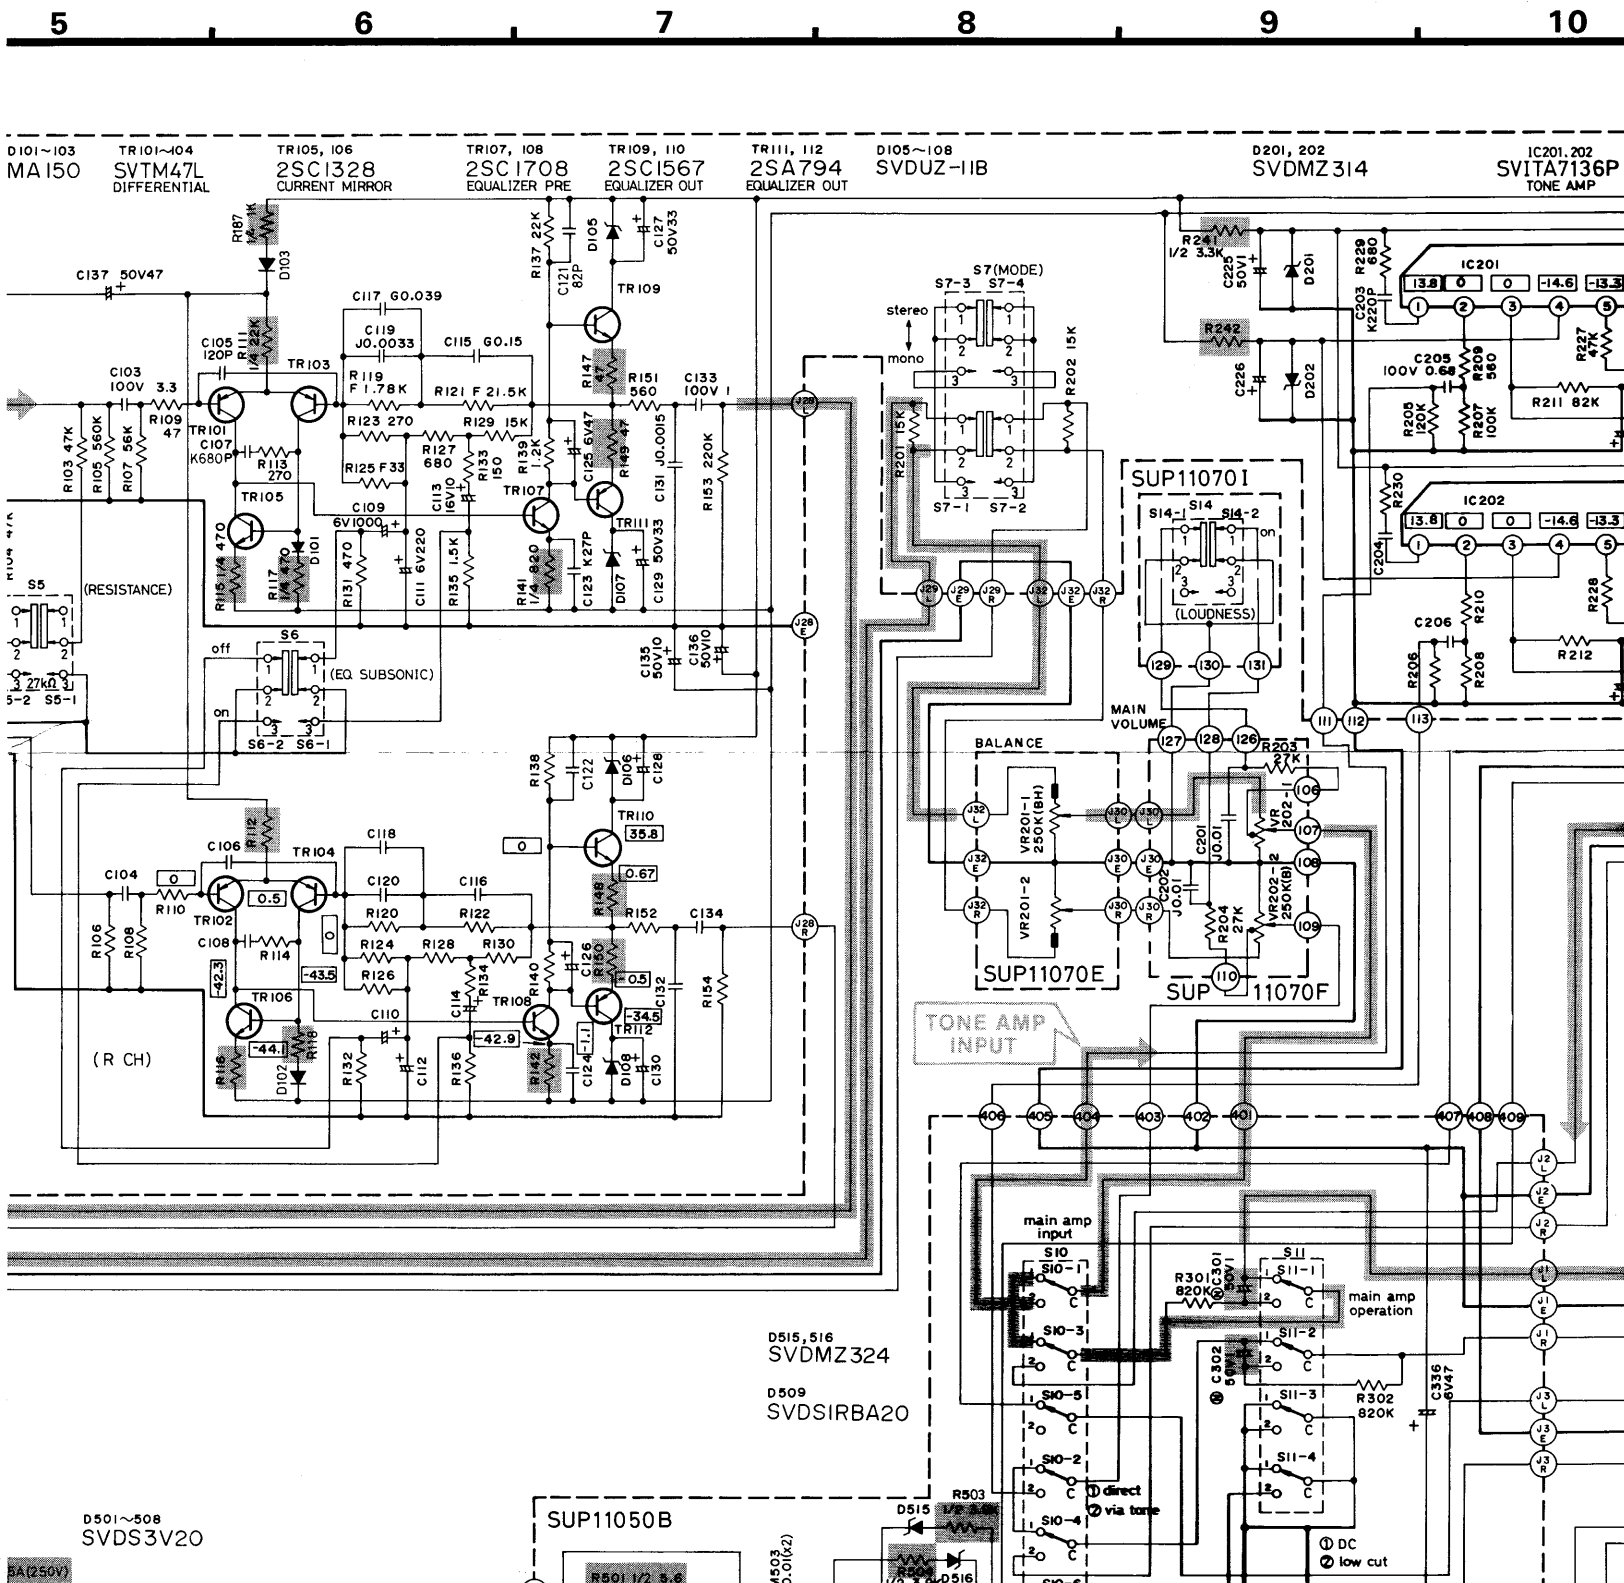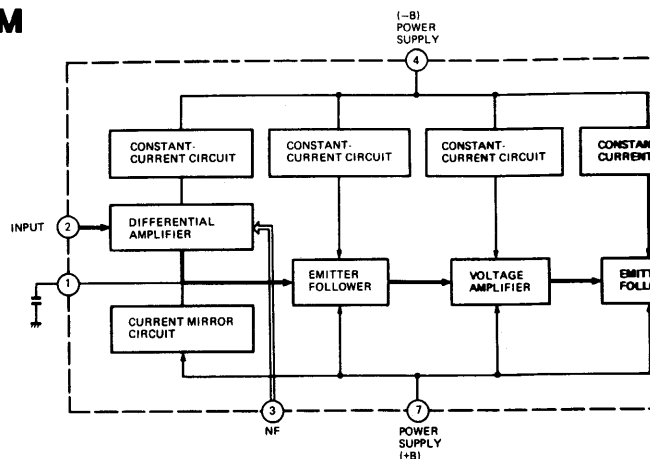

■ TERMINAL GUIDE

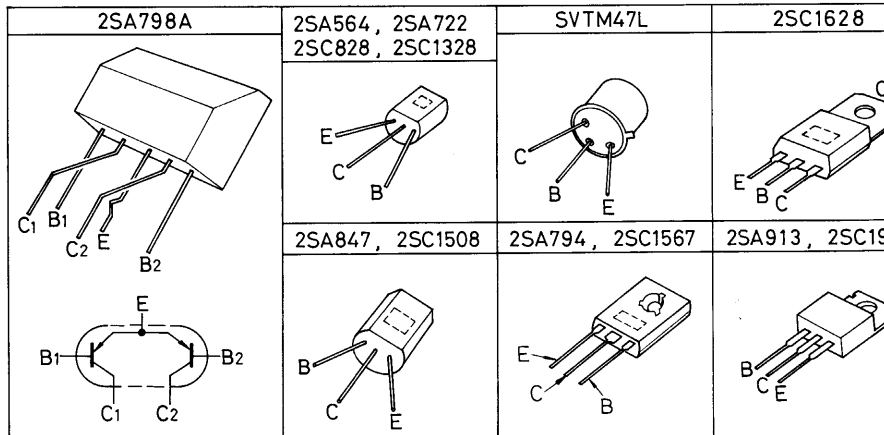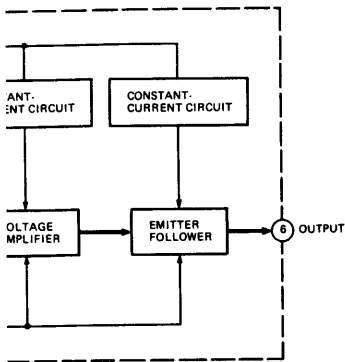

10



11

12

13

14

IC201, 202
SVTA7136P
TONE AMP

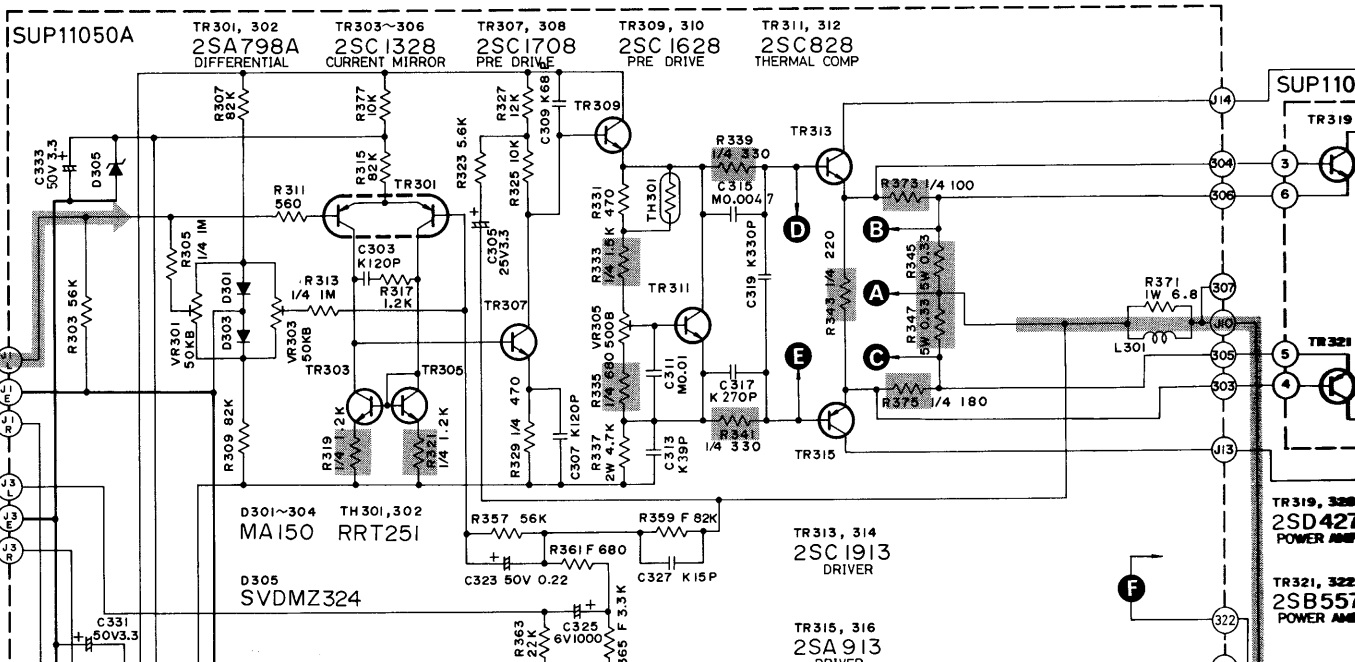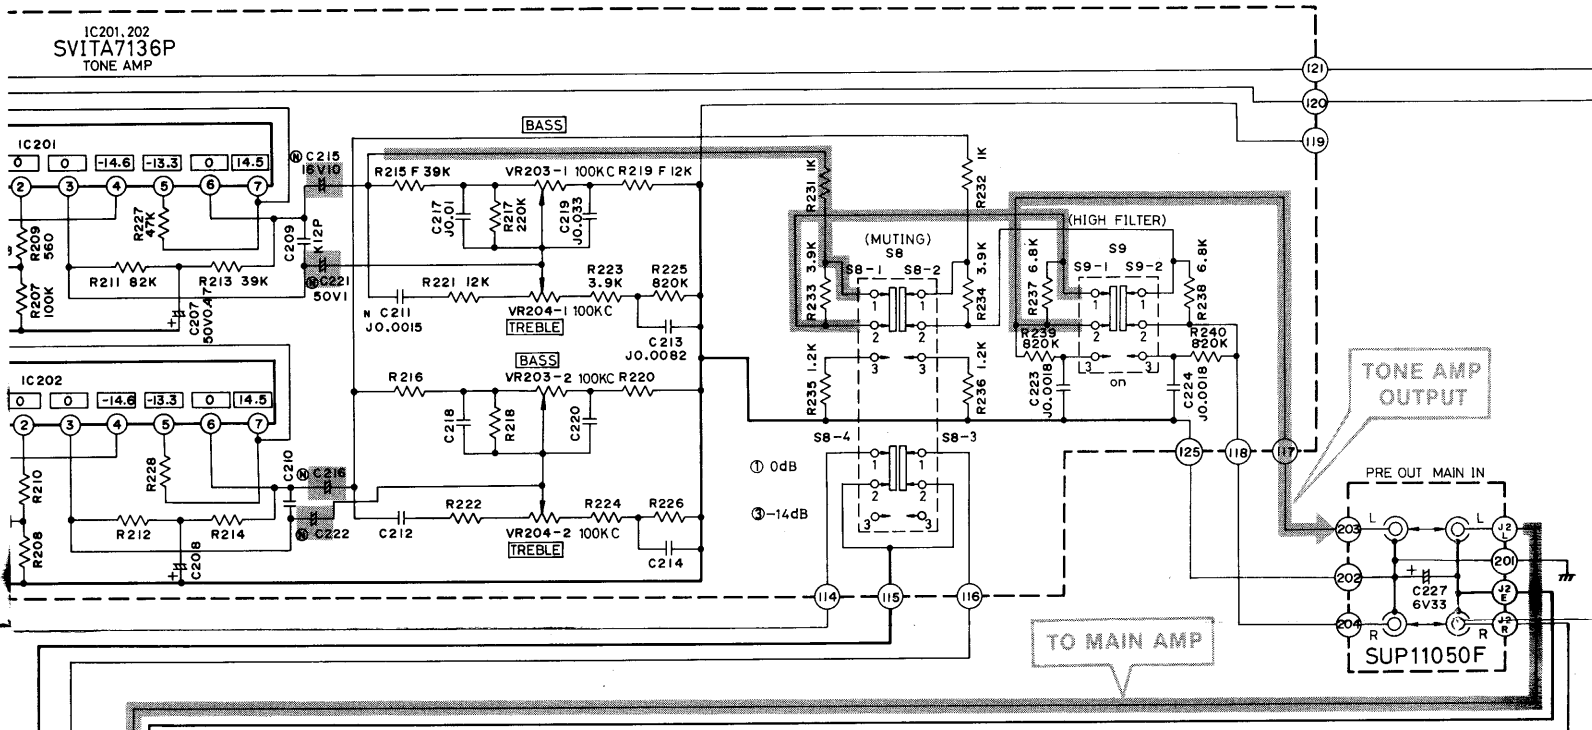


2SC1628	SVITA7136P
5A913, 2SC1913	2SB557, 2SD427

15

IMPORTANT SAFETY NOTICE
THE SHADED AREA ON THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR SAFETY. WHEN SERVICING IT IS ESSENTIAL THAT ONLY MANUFACTURER'S SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SHADED AREAS OF THE SCHEMATIC.



Notes:

- S1-1 ~ S1-4:** Input selector switch in "phono 2" position.
① phono 2 ↔ ② phono 1 ↔ ③ tuner ↔ ④ aux
- S2-1 ~ S2-2:** Tape monitor switch in "source" position.
① tape 1 ↔ ② source ↔ ③ tape 2
- S3-1 ~ S3-4:** Recording mode switch in "tape 2 ▶ 1" position.
① tape 2 ▶ 1 ↔ ② source ↔ ③ tape 1 ▶ 2
- S4-1 S4-2:** Phono impedance (capacitor) switch in "low" position.
① low ↔ ③ high
- S5-1, S5-2:** Phono impedance (resistance) switch in "47kΩ" position.
① 47kΩ ↔ ③ 27kΩ
- S6-1, S6-2:** Equalizer subsonic filter switch in "off" position.
① off ↔ ③ on
- S7-1 ~ S7-4:** Mode switch in "stereo" position.
① stereo ↔ ③ mono
- S8-1 ~ S8-4:** Muting switch in "0dB" position.
① 0 dB ↔ ③ -14 dB
- S9-1 ~ S9-2:** High filter switch in "off" position.
① off ↔ ③ on
- S10-1 ~ S10-7:** Main amplifier input switch in "direct" position.
① direct ↔ ② via tone
- S11-1 ~ S11-4:** Main amplifier operation switch in "DC" position.
① DC ↔ ② low cut (2 Hz)
- S12-1, S12-2:** Speaker selector switch in "off" position.
off ↔ main ↔ remote ↔ main + remote
- S13:** Power source switch in "off" position.
① on ↔ ③ off
- S14-1, S14-2:** Loudness switch in "off" position.
① on ↔ ③ off
- Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high impedance) with the chassis taken as standard.
Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.

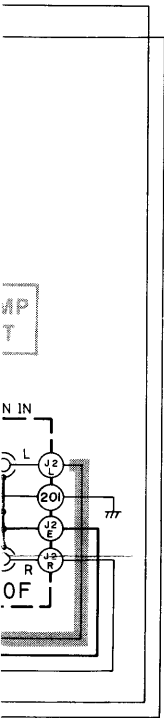

➔ PHONO 2 SIGNAL LINE

■ POWER LIMITER

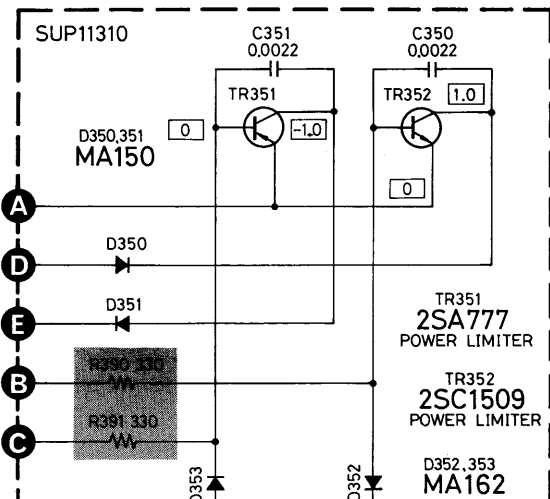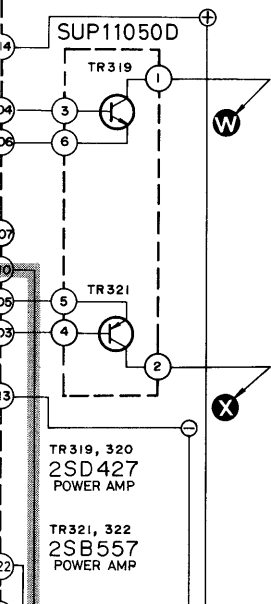

C

D



E


F


G

H

I

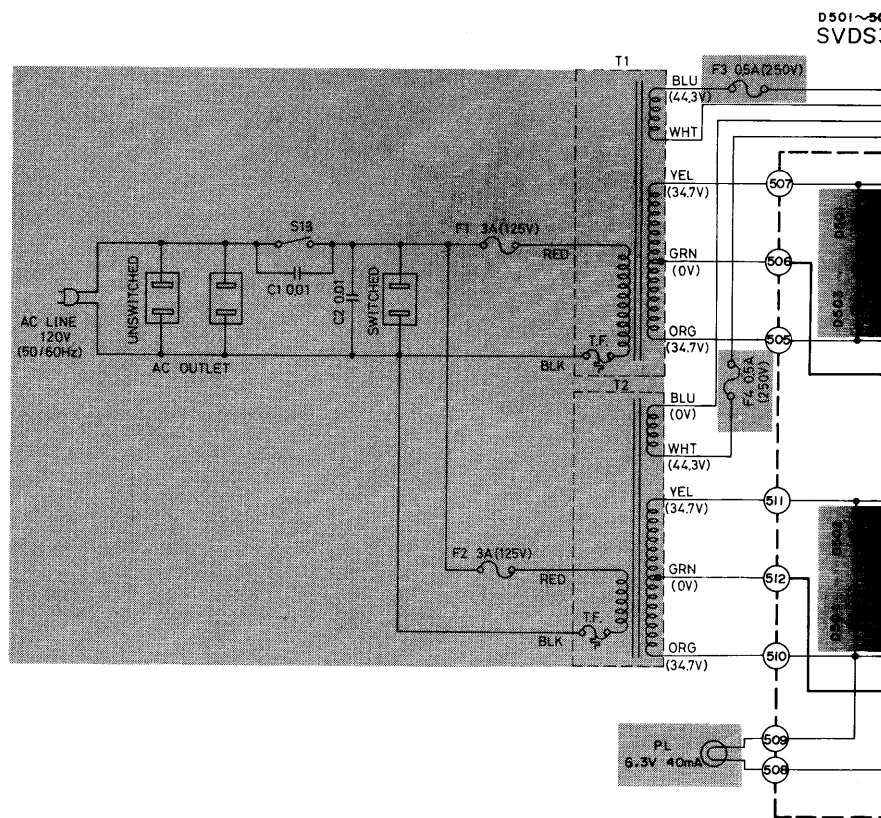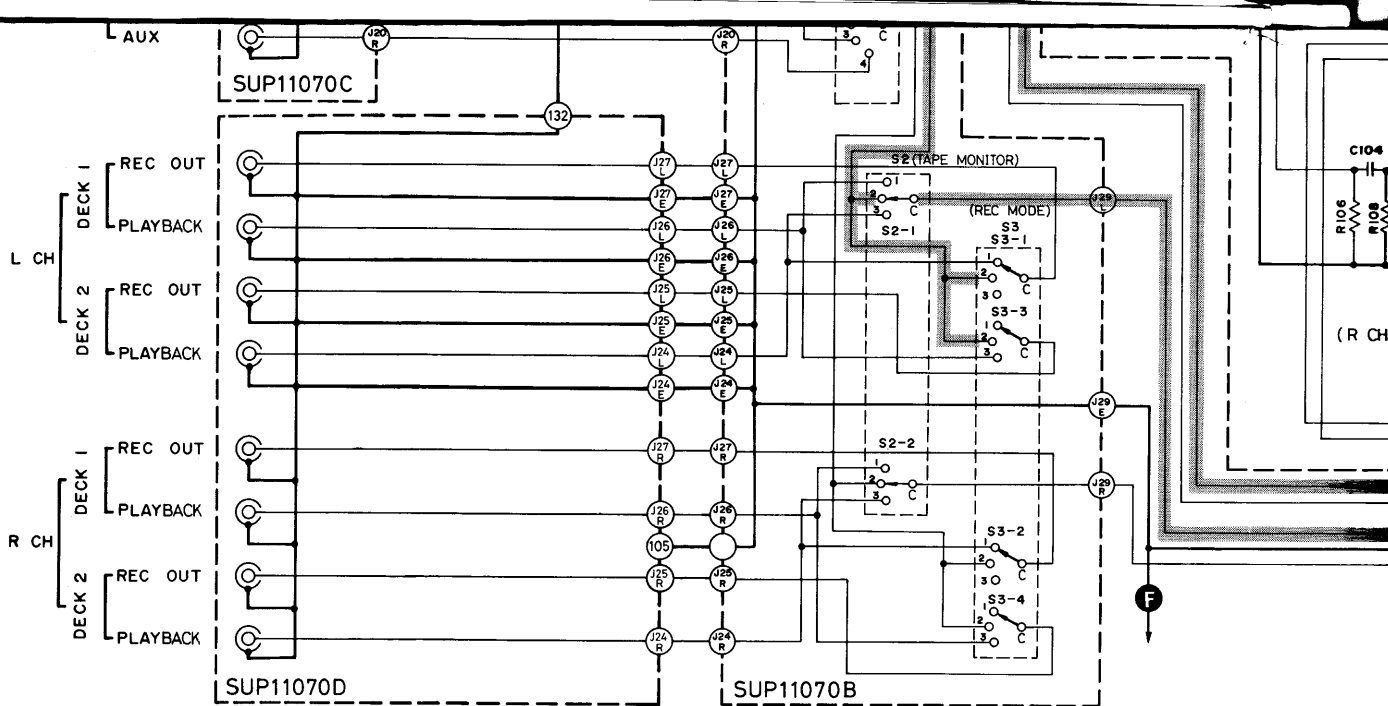





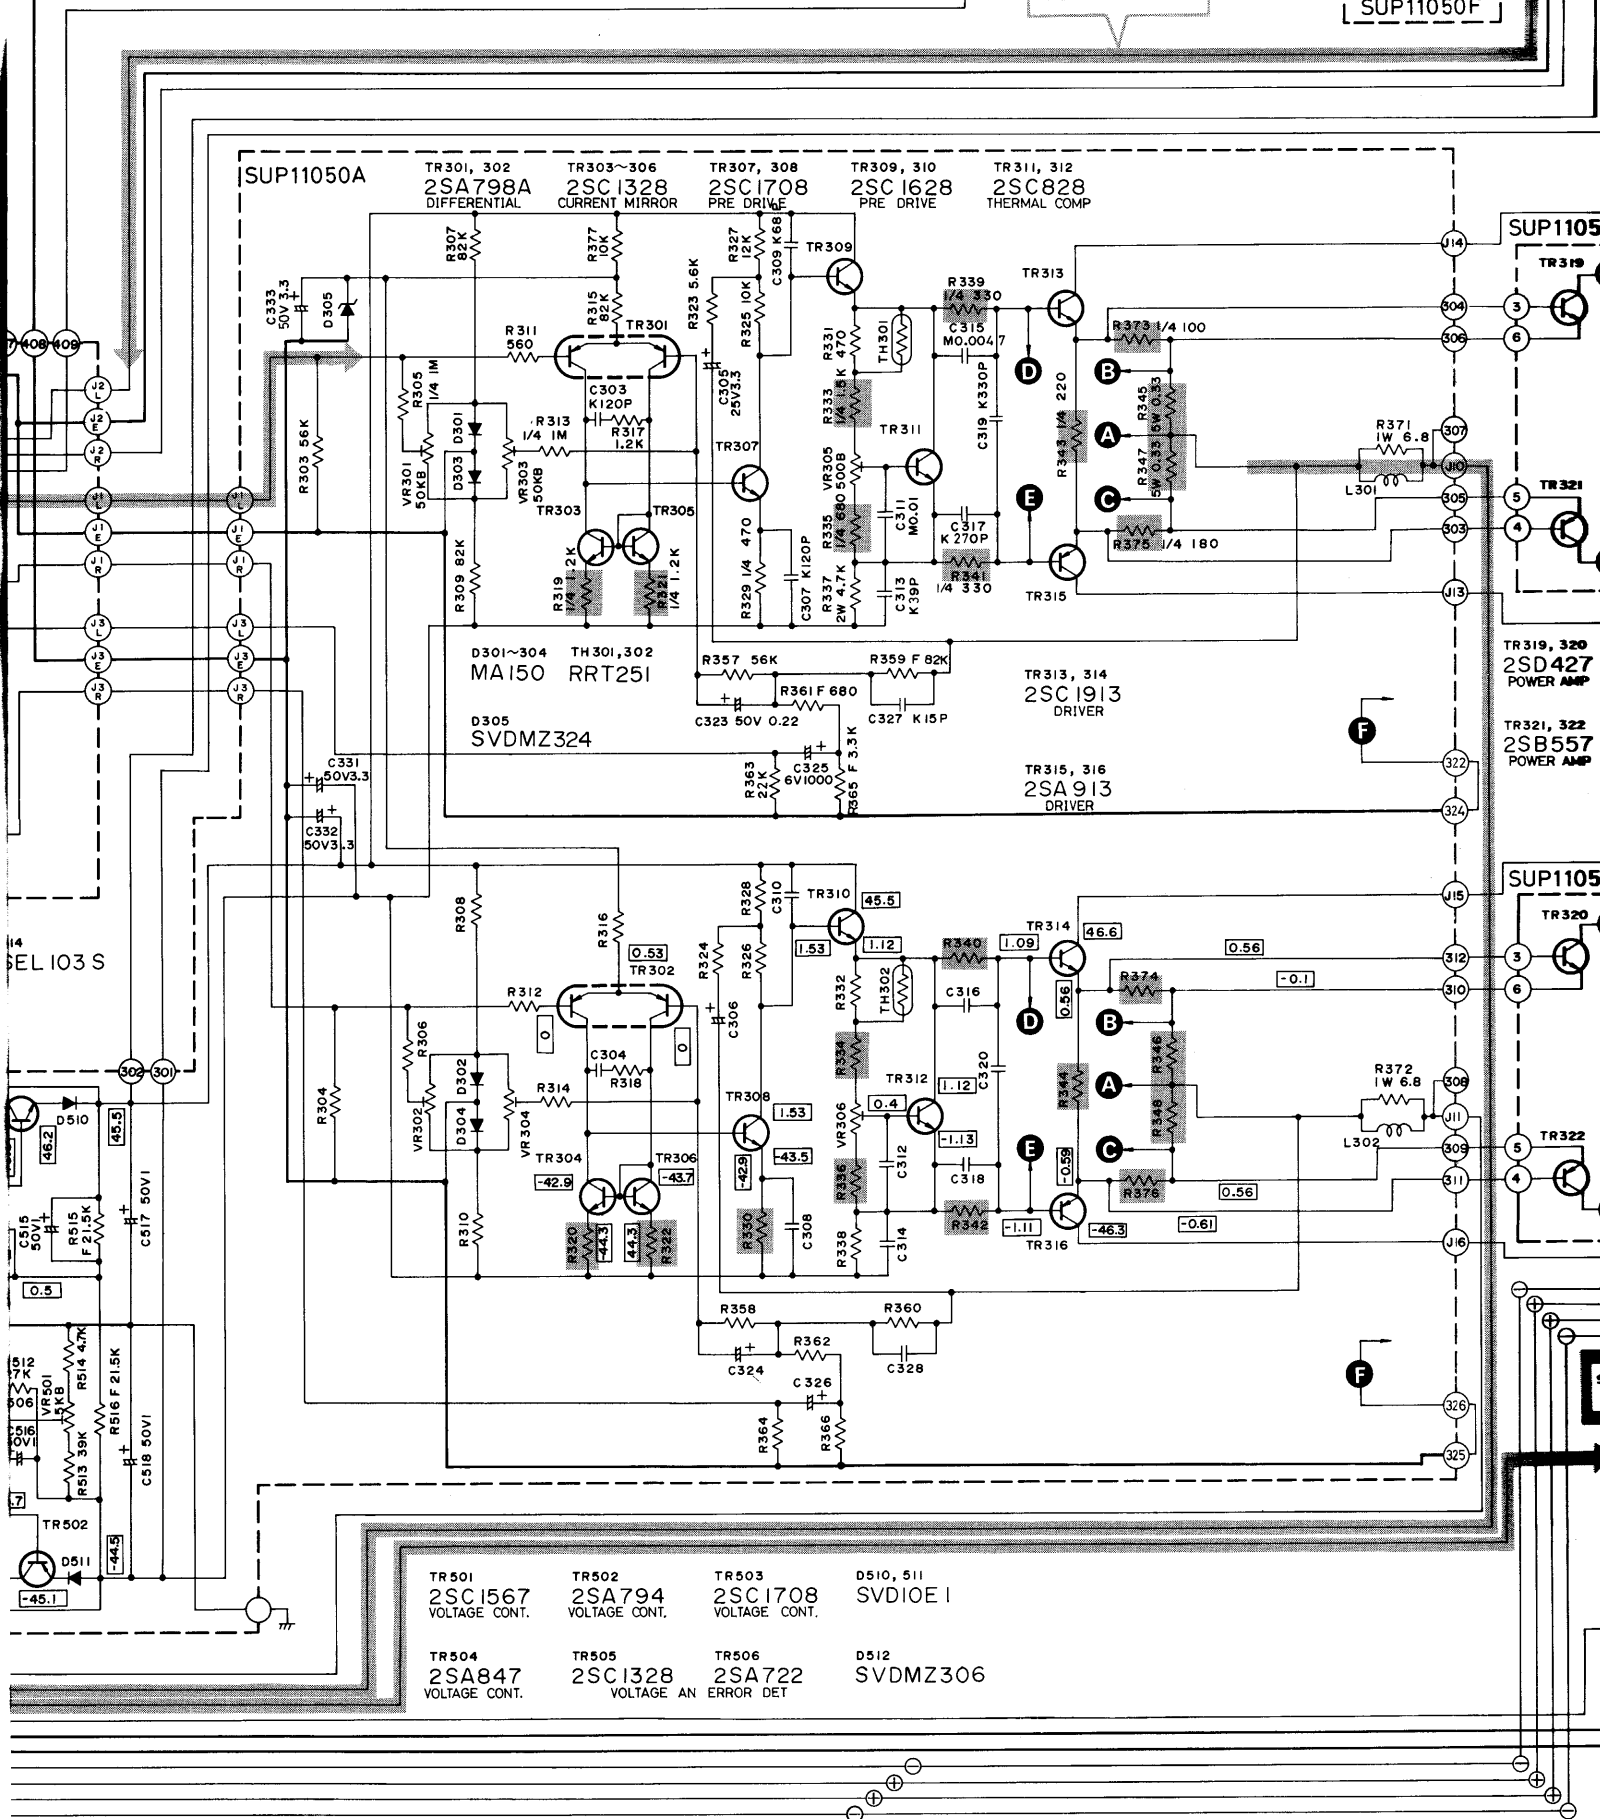

Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.

➔ PHONO 2 SIGNAL LINE

■ POWER LIMITER

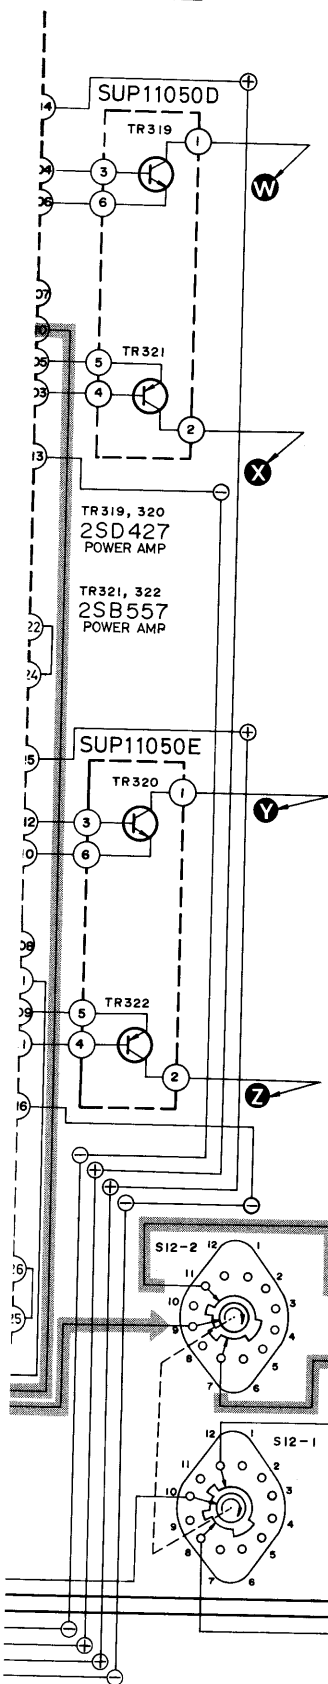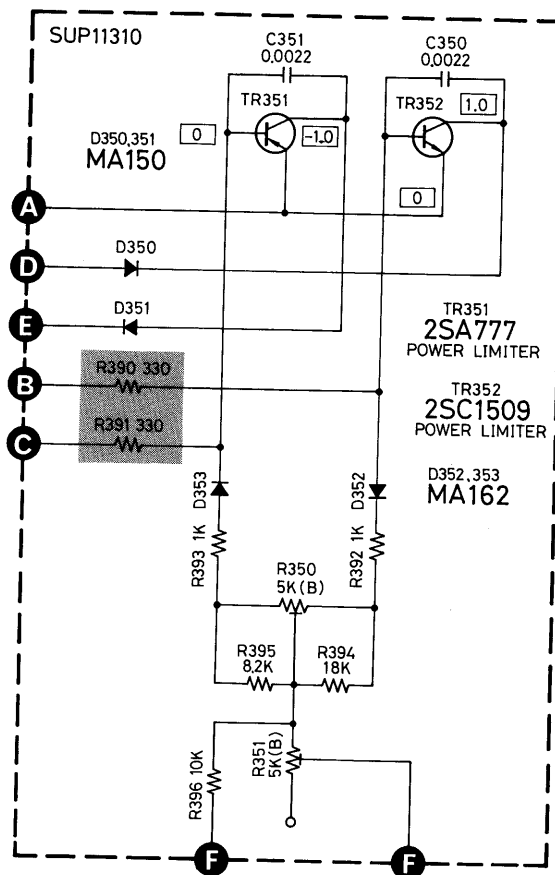

MAIN

REMOTE

■ BEFORE STARTING THE REPAIRING

- For repairing this unit, be particularly careful about the following points.

Since 4 capacitors of large capacity at $1000\mu\text{F}$ are employed for power source, charged voltage remains for a long period of time once the power supply is turned on, with danger of electric shock if the (+) and (−) power voltage line is touched with hands. Therefore, before repairing, be sure to short-circuit opposite poles of the $10000\mu\text{F}$ capacitor (C501 ~ C504) with a resistor approximately of “15Ω 10W” for discharging the charged voltage. Short-circuiting with a screw driver and the like is not only dangerous, but may destroy transistors and diodes, and should therefore be avoided.

■ ALIGNMENT INSTRUCTIONS

• Instruments to be used

- DC electronic voltmeter.
- 8Ω load resistance (to be connected to the speaker terminals only during DC balance adjustment)

• Conditions of the set

- Turn the sound volume to minimum (Condition for all adjustments)
- Other conditions should be in agreement with those for each adjustment.

1. ADJUSTMENT OF (−B) VOLTAGE (NEGATIVE POWER SUPPLY)

Connection of DC voltmeter	Conditions	Portions to be adjusted	Adjusting procedures
To be connected between 119 and 120 terminals.	None	VR501	To be adjusted to $-44.5\text{V} \pm 0.1\text{V}$

2. ADJUSTMENT OF SPEAKER TERMINAL DC BALANCE

Connection of DC voltmeter and 8Ω load resistance	Conditions	Portions to be adjusted	Adjusting procedures
For left and right channels of the speaker, connect the voltmeter in parallel with resistor.	- Set the operation change-over to “DC”. - Set the input change-over to “via tone”. - Short-circuit the “MAIN IN” terminals.	VR303 (left ch.) VR304 (right ch.)	Adjust to 0mV at as small a range as possible.
	- Set the operation change-over to “low cut”. - Set the input change-over to “via tone”. - Short-circuit the “MAIN IN” terminal.	VR301 (left ch.) VR302 (right ch.)	Adjust to 0mV at as small a range as possible.

3. ICQ (IDLING OF POWER TRANSISTOR) ADJUSTMENT

Connndtion of DC voltmeter	Conditions	Portions to be adjusted	Adjusting procedures
(left ch.) . . . Connect between 305 and 307 terminals.	Make adjustment over 5 minutes after turning “ON” the power source.	VR305 (left ch.)	Adjust to 15mV.
(right ch.) . . . Connect between 308 and 310 terminals.		VR306 (right ch.)	

In the case where ICQ adjustment is made through current adjustment by the circuit tester (In this case, the DC voltmeter is not required.)

- Note:**
- For using the circuit tester, be sure to turn the power source “OFF” for discharging the charge voltage as in “Before starting the repairing”.
 - Subsequently, connect the circuit tester perfectly so as not to be disengaged.
 - After adjustments also, the lead wires should be perfectly soldered as in the original state, only after turning “OFF” of the power source.
 - Adjustments should be made about 5 minutes after turning “ON” of the power source.

• In the case of left channel

- With the rear panel of the set removed, disconnect the lead wire of 504 terminal soldered to the power supply printed circuit board for the main amplifier, and connect the circuit tester in the DC current measuring range as in fig. 3.
- Adjust VR305 to reach 25 ~ 30mA (may differ to a certain extent depending on internal impedances of the circuit tester)

(In the case of right channel)

- Disconnect the lead wire of 502 terminal in the similar manner as in left channel., and connect the circuit tester.
- Adjust VR306 to obtain 25 ~ 30 mA.

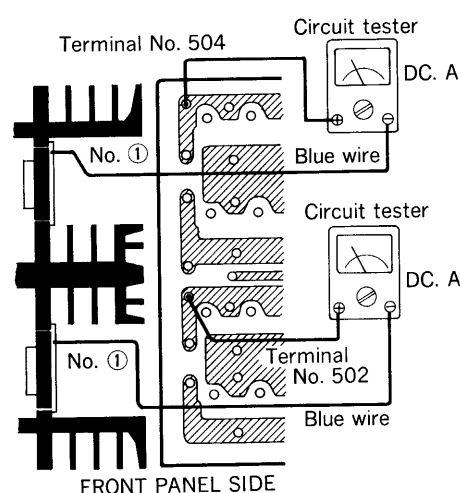


Fig. 3

4. ADJUSTMENT OF POWER LIMITER (as same as left channel and right channel)

Adjustments by distortion meter	Adjustment by oscilloscope
① Connect the distortion meter to the speaker terminals with the volume control turned to maximum.	① Connect the oscilloscope to the speaker terminals with the volume control turned to maximum.
② Keep R351 of the power limiter circuit fully turned to the left.	② Keep R351 of the power limiter circuit fully turned to the left.
③ Apply 1 kHz signal to the set so that the output is clipped to 5% distortion.	③ Apply 1 kHz signal to the set that the output reaches the clip point.
④ Adjust R350 so that the output distortion is reduced to minimum.	④ Adjust R350 so that the waveform becomes vertically symmetrical. (Fig. 4)
⑤ Adjust R351 so that the output distortion becomes 5.5%.	⑤ Adjust R351 so that the upper and lower portions of the waveform are clipped to a slight extent (Fig. 5).

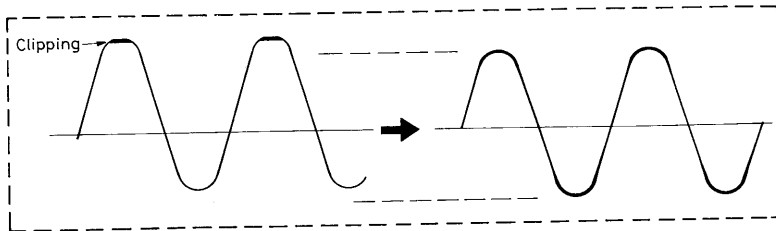


Fig. 4

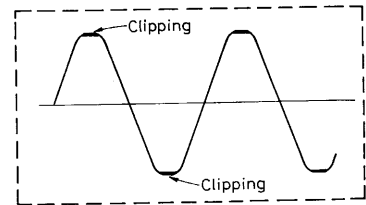


Fig. 5

■ DIAGRAM FOR PORTIONS TO BE ADJUSTED

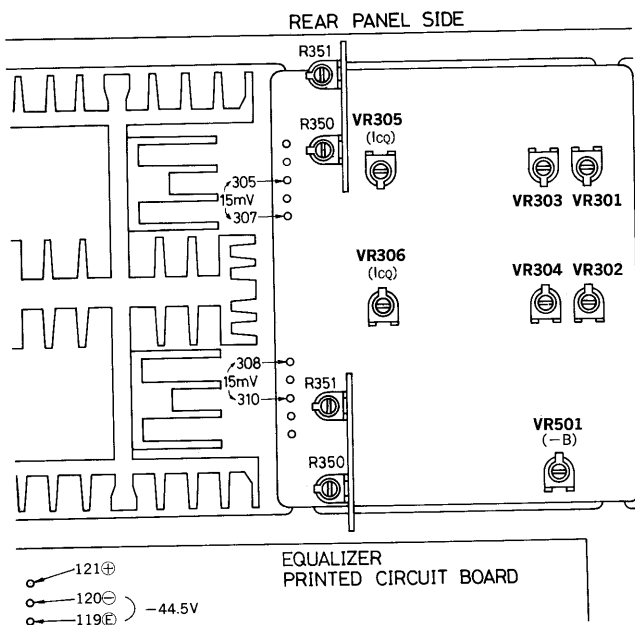


Fig. 6

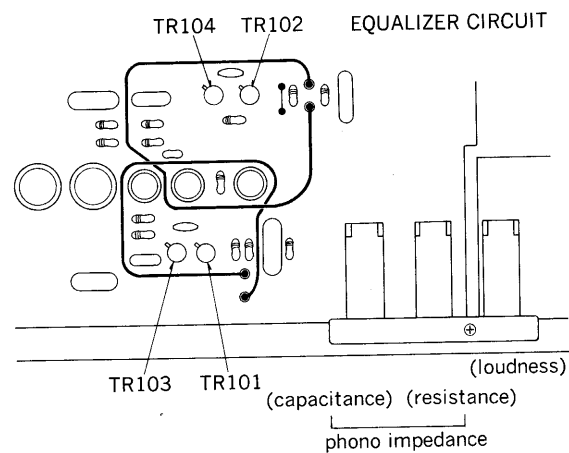


Fig. 7

■ ARRANGENEMTS OF WIRING AFTER REPAIRING

S/N for the equalizer circuit is delicately affected by the location of wirings. After repairing the circuit, form the lead wires into a loop shape as shown in fig. 7. By this arrangement, effect for offsetting the hum noise can be obtained. Additionally, the wires led from the print base (lower stage) of the relay circuit should be bundled together with the wires to the speaker terminals to avoid approaching to the tone amplifier print base at the upper stage. If these wires are brought close to the tone amplifier section, residual noises may be increased.

REPLACEMENT PARTS LIST

Important Safety Notice

Components identified by shaded area have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.

NOTE: 1. Part numbers are indicated on most mechanical parts.
Please use this part number for parts orders.

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
INTEGRATED CIRCUITS				
IC 201, 202	SVITA7136PM	IC, Tone Amplifier	2	
TRANSISTORS				
TR101, 102, 103, 104	SVTM47L	Transistor, Differential Amplifier (Use in ranks S, T or U)	4	○
TR105, 106	2SC1328-T	Transistor, Currentmirror (Use in ranks S, T or U)	2	
TR107, 108, 307, 308, 503	2SC1708-G	Transistor, Equalizer & Pre Drive Amplifier (Use in ranks F or G)	5	
T109, 110	2SC1567-Q	Transistor, Equalizer Output Amplifier (Use in ranks Q or R)	2	
TR111, 112	2SA794-Q	Transistor, Equalizer Output Amplifier (Use in ranks Q or R)	2	
TR301, 302	2SA798A-G2	Transistor, Differential Amplifier (Use in ranks F2 or G2)	2	
TR303, 304, 305, 306, 505	2SC1328-T	Transistor, Currentmirror (Use in ranks S, T or U)	5	
TR 309, 310	2SC1628-Y	Transistor, Pre Drive Amplifier (Use in ranks O or Y)	2	
TR311, 312	2SC828 A-R	Transistor, Thermal Compensation	2	
TR313, 314	2SC1913-R	Transistor, Drive Amplifier (Use in ranks Q, R or S)	2	
TR315, 316	2SA913-R	Transistor, Drive Amplifier (Use in ranks Q, R or S)	2	
TR319, 320	2SD427-0	Transistor, Power Amplifier (Use in ranks O or R)	2	
TR321, 322	2SB557-0	Transistor, Power Amplifier (Use in ranks O or R)	2	Use in pair ranks
TR351 (X2)	2SA777-Q	Transistor, Power Limiter (Use in ranks Q or R)	2	
TR352 (X2)	2SC1509F-Q	Transistor, Power Limiter (Use in ranks Q or R)	2	
TR402, 403	2SA666A1-R	Transistor, Switching	2	
TR404, 405, 504	2SA847-G	Transistor, Relay Drive Amplifier (Use in ranks F or G)	3	
TR501	2SC1567-Q	Transistor, Voltage Control Amplifier (Use in ranks Q, R or S)	1	
TR502	2SA794-Q	Transistor Voltage Control Amplifier (Use in ranks Q, R or S)	1	
TR506	2SA902S-F	Transistor, Voltage Error Detector	1	
DIODES				
D101, 102, 103, 301, 302, 303, 304, 350 (X2), 351 (X2), 401	MA150	Diode, Switching	12	
D105, 106, 107, 108	SVDUZ-11B	Zener Diode, 11V	4	

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
D201, 202	SVDMZ314C	Zener Diode, 14V	2	○
D305, 515, 516	SVDMZ324	Zener Diode, 24V	3	○
D352(X2), 353(X2)	MA162	Diode, Switching,	4	
D402, 510, 511	SVD10E1	Diode	3	
D501, 502, 503	SVDS3V20	Rectifier	8	○
504, 505, 506, 507, 508				
D509	SVDS1RBA20	Rectifier	1	○
D512	SVDMZ306	Zener Diode, 6V	1	
D513, 514	SVDSEL103S	Light Emitting Diode	2	
COILS and TRANSFORMERS				
L301, 302	SLQY15G-1U	Coil, Compensation	2	
T1, 2	SLT5P87	Power Transformer	2	○
THERMISTERS				
TH301, 302	RRT251	Thermister	2	
RESISTORS				
R101	ERD25TJ564	Carbon, 560k Ω , 1/4W, $\pm$ 5%	1	
R102	ERD25TJ564	Carbon, 560k Ω , 1/4W, $\pm$ 5%	1	
R103	ERD25TJ473	Carbon, 47k Ω , 1/4W, $\pm$ 5%	1	
R104	ERD25TJ473	Carbon, 47k Ω , 1/4W, $\pm$ 5%	1	
R105	ERD25TJ564	Carbon, 560k Ω , 1/4W, $\pm$ 5%	1	
R106	ERD25TJ564	Carbon, 560k Ω , 1/4W, $\pm$ 5%	1	
R107	ERD25TJ563	Carbon, 56k Ω , 1/4W, $\pm$ 5%	1	
R108	ERD25TJ563	Carbon, 56k Ω , 1/4W, $\pm$ 5%	1	
R109	ERD25TJ470	Carbon, 47 Ω , 1/4W, $\pm$ 5%	1	
R110	ERD25TJ470	Carbon, 47 Ω , 1/4W, $\pm$ 5%	1	
R111	ERD14FJ223	Carbon, 22k Ω , 1/4W, $\pm$ 5%	1	
R112	ERD14FJ223	Carbon, 22k Ω , 1/4W, $\pm$ 5%	1	
R113	ERD25TJ271	Carbon, 270 Ω , 1/4W, $\pm$ 5%	1	
R114	ERD25TJ271	Carbon, 270 Ω , 1/4W, $\pm$ 5%	1	
R115	ERD14FJ471	Carbon, 470 Ω , 1/4W, $\pm$ 5%	1	
R116	ERD14FJ471	Carbon, 470 Ω , 1/4W, $\pm$ 5%	1	
R117	ERD14FJ471	Carbon, 470 Ω , 1/4W, $\pm$ 5%	1	
R118	ERD14FJ471	Carbon, 470 Ω , 1/4W, $\pm$ 5%	1	
R119	ERO25CKF1781	Metal Film, 1.78k Ω , 1/4W, $\pm$ 1%	1	
R120	ERO25CKF1781	Metal Film, 1.78k Ω , 1/4W, $\pm$ 1%	1	
R121	ERO25CKF2152	Metal Film, 21.5k Ω , 1/4W, $\pm$ 1%	1	
R122	ERO25CKF2152	Metal Film, 21.5k Ω , 1/4W, $\pm$ 1%	1	
R123	ERD25TJ271	Carbon, 270 Ω , 1/4W, $\pm$ 5%	1	
R124	ERD25TJ271	Carbon, 270 Ω , 1/4W, $\pm$ 5%	1	
R125	ERO25CKF33RO	Metal Film, 33 Ω , 1/4W, $\pm$ 1%	1	
R126	ERO25CKF33RO	Metal Film, 33 Ω , 1/4W, $\pm$ 1%	1	
R127	ERD25TJ681	Carbon, 680 Ω , 1/4W, $\pm$ 5%	1	
R128	ERD25TJ681	Carbon, 680 Ω , 1/4W, $\pm$ 5%	1	
R129	ERD25TJ153	Carbon, 15k Ω , 1/4W, $\pm$ 5%	1	
R130	ERD25TJ153	Carbon, 15k Ω , 1/4W, $\pm$ 5%	1	
R131	ERD25TJ471	Carbon, 470 Ω , 1/4W, $\pm$ 5%	1	
R132	ERD25TJ471	Carbon, 470 Ω , 1/4W, $\pm$ 5%	1	

Ref. No.	Part No.	Part Name & Description					Per Set	Remarks
R133	ERD25TJ151	Carbon,	150Ω,	1/4W,	± 5%		1	
R134	ERD25TJ151	Carbon,	150Ω,	1/4W,	± 5%		1	
R135	ERD25TJ152	Carbon,	1.5kΩ,	1/4W,	± 5%		1	
R136	ERD25TJ152	Carbon,	1.5kΩ,	1/4W,	± 5%		1	
R137	ERD25TJ223	Carbon,	22kΩ,	1/4W,	± 5%		1	
R138	ERD25TJ223	Carbon,	22kΩ,	1/4W,	± 5%		1	
R139	ERD25TJ122	Carbon,	1.2kΩ,	1/4W,	± 5%		1	
R140	ERD25TJ122	Carbon,	1.2kΩ,	1/4W,	± 5%		1	
R141	ERD14FJ821	Carbon,	820Ω,	1/4W,	± 5%		1	
R142	ERD14FJ821	Carbon,	820Ω,	1/4W,	± 5%		1	
R147	ERD14FJ470	Carbon,	47Ω,	1/4W,	± 5%		1	
R148	ERD14FJ470	Carbon,	47Ω,	1/4W,	± 5%		1	
R149	ERD14FJ470	Carbon,	47Ω,	1/4W,	± 5%		1	
R150	ERD14FJ470	Carbon,	47Ω,	1/4W,	± 5%		1	
R151	ERD25TJ561	Carbon,	560Ω,	1/4W,	± 5%		1	
R152	ERD25TJ561	Carbon,	560Ω,	1/4W,	± 5%		1	
R153	ERD25TJ224	Carbon,	220kΩ,	1/4W,	± 5%		1	
R154	ERD25TJ224	Carbon,	220kΩ,	1/4W,	± 5%		1	
R187	ERD14FJ102	Carbon,	1kΩ,	1/4W,	± 5%		1	
R201	ERD25TJ153	Carbon,	15kΩ,	1/4W,	± 5%		1	
R202	ERD25TJ153	Carbon,	15kΩ,	1/4W,	± 5%		1	
R203	ERD25TJ273	Carbon,	27kΩ,	1/4W,	± 5%		1	
R204	ERD25TJ273	Carbon,	27kΩ,	1/4W,	± 5%		1	
R205	ERD25TJ124	Carbon,	120kΩ,	1/4W,	± 5%		1	
R206	ERD25TJ124	Carbon,	120kΩ,	1/4W,	± 5%		1	
R207	ERD25TJ104	Carbon,	100kΩ,	1/4W,	± 5%		1	
R208	ERD25TJ104	Carbon,	100kΩ,	1/4W,	± 5%		1	
R209	ERD25TJ561	Carbon,	560Ω,	1/4W,	± 5%		1	
R210	ERD25TJ561	Carbon,	560Ω,	1/4W,	± 5%		1	
R211	ERD25TJ823	Carbon,	82kΩ,	1/4W,	± 5%		1	
R212	ERD25TJ823	Carbon,	82kΩ,	1/4W,	± 5%		1	
R213	ERD25TJ393	Carbon,	39kΩ,	1/4W,	± 5%		1	
R214	ERD25TJ393	Carbon,	39kΩ,	1/4W,	± 5%		1	
R215	ERO25CKF3902	Metal Film,	39kΩ,	1/4W,	± 1%		1	
R216	ERO25CKF3902	Metal Film,	39kΩ,	1/4W,	± 1%		1	
R217	ERD25TJ224	Carbon,	220kΩ,	1/4W,	± 5%		1	
R218	ERD25TJ224	Carbon,	220kΩ,	1/4W,	± 5%		1	
R219	ERO25CKF1202	Metal Film,	12kΩ,	1/4W,	± 1%		1	
R220	ERO25CKF1202	Metal Film,	12kΩ,	1/4W,	± 1%		1	
R221	ERD25TJ123	Carbon,	12kΩ,	1/4W,	± 5%		1	
R222	ERD25TJ123	Carbon,	12kΩ,	1/4W,	± 5%		1	
R223	ERD25TJ392	Carbon,	3.9kΩ,	1/4W,	± 5%		1	
R224	ERD25TJ392	Carbon,	3.9kΩ,	1/4W,	± 5%		1	
R225	ERD25TJ824	Carbon,	820kΩ,	1/4W,	± 5%		1	
R226	ERD25TJ824	Carbon,	820kΩ,	1/4W,	± 5%		1	
R227	ERD25TJ473	Carbon,	47kΩ,	1/4W,	± 5%		1	
R228	ERD25TJ473	Carbon,	47kΩ,	1/4W,	± 5%		1	
R229	ERD25TJ681	Carbon,	680Ω,	1/4W,	± 5%		1	
R230	ERD25TJ681	Carbon,	680Ω,	1/4W,	± 5%		1	
R231	ERD25TJ102	Carbon,	1kΩ,	1/4W,	± 5%		1	
R232	ERD25TJ102	Carbon,	1kΩ,	1/4W,	± 5%		1	
R233	ERD25TJ392	Carbon,	3.9kΩ,	1/4W,	± 5%		1	
R234	ERD25TJ392	Carbon,	3.9kΩ,	1/4W,	± 5%		1	
R235	ERD25TJ122	Carbon,	1.2kΩ,	1/4W,	± 5%		1	
R236	ERD25TJ122	Carbon,	1.2kΩ,	1/4W,	± 5%		1	

Ref. No.	Part No.	Part Name & Description					Per Set	Remarks
R237	ERD25TJ682	Carbon,	6.8kΩ,	1/4W,	± 5%		1	
R238	ERD25TJ682	Carbon,	6.8kΩ,	1/4W,	± 5%		1	
R239	ERD25TJ824	Carbon,	820kΩ,	1/4W,	± 5%		1	
R240	ERD25TJ824	Carbon,	820kΩ,	1/4W,	± 5%		1	
R241	ERD12FJ332	Carbon,	3.3kΩ,	1/2W,	± 5%		1	
R242	ERD12FJ332	Carbon,	3.3kΩ,	1/2W,	± 5%		1	
R301	ERD25TJ824	Carbon,	820kΩ,	1/4W,	± 5%		1	
R302	ERD25TJ824	Carbon,	820kΩ,	1/4W,	± 5%		1	
R303	ERD25TJ563	Carbon,	56kΩ,	1/4W,	± 5%		1	
R304	ERD25TJ563	Carbon,	56kΩ,	1/4W,	± 5%		1	
R305	ERD25TJ105	Carbon,	1MΩ,	1/4W,	± 5%		1	
R306	ERD25TJ105	Carbon,	1MΩ,	1/4W,	± 5%		1	
R307	ERD25TJ823	Carbon,	82kΩ,	1/4W,	± 5%		1	
R308	ERD25TJ823	Carbon,	82kΩ,	1/4W,	± 5%		1	
R309	ERD25TJ823	Carbon,	82kΩ,	1/4W,	± 5%		1	
R310	ERD25TJ823	Carbon,	82kΩ,	1/4W,	± 5%		1	
R311	ERD25TJ561	Carbon,	560Ω,	1/4W,	± 5%		1	
R312	ERD25TJ561	Carbon,	560Ω,	1/4W,	± 5%		1	
R313	ERD25TJ105	Carbon,	1MΩ,	1/4W,	± 5%		1	
R314	ERD25TJ105	Carbon,	1MΩ,	1/4W,	± 5%		1	
R315	ERD25TJ823	Carbon,	82kΩ,	1/4W,	± 5%		1	
R316	ERD25TJ823	Carbon,	82kΩ,	1/4W,	± 5%		1	
R317	ERD25TJ122	Carbon,	1.2kΩ,	1/4W,	± 5%		1	
R318	ERD25TJ122	Carbon,	1.2kΩ,	1/4W,	± 5%		1	
R319	ERD14FJ122	Carbon,	1.2kΩ,	1/4W,	± 5%		1	
R320	ERD14FJ122	Carbon,	1.2kΩ,	1/4W,	± 5%		1	
R321	ERD14FJ122	Carbon,	1.2kΩ,	1/4W,	± 5%		1	
R322	ERD14FJ122	Carbon,	1.2kΩ,	1/4W,	± 5%		1	
R323	ERD25TJ562	Carbon,	5.6kΩ,	1/4W,	± 5%		1	
R324	ERD25TJ562	Carbon,	5.6kΩ,	1/4W,	± 5%		1	
R325	ERD25TJ103	Carbon,	10kΩ,	1/4W,	± 5%		1	
R326	ERD25TJ103	Carbon,	10kΩ,	1/4W,	± 5%		1	
R327	ERD25TJ123	Carbon,	12kΩ,	1/4W,	± 5%		1	
R328	ERD25TJ123	Carbon,	12kΩ,	1/4W,	± 5%		1	
R329	ERD14FJ471	Carbon,	470Ω,	1/4W,	± 5%		1	
R330	ERD14FJ471	Carbon,	470Ω,	1/4W,	± 5%		1	
R331	ERD25TJ471	Carbon,	470Ω,	1/4W,	± 5%		1	
R332	ERD25TJ471	Carbon,	470Ω,	1/4W,	± 5%		1	
R333	ERD14FJ152	Carbon,	1.5kΩ,	1/4W,	± 5%		1	
R334	ERD14FJ152	Carbon,	1.5kΩ,	1/4W,	± 5%		1	
R335	ERD14FJ681	Carbon,	680Ω,	1/4W,	± 5%		1	
R336	ERD14FJ681	Carbon,	680Ω,	1/4W,	± 5%		1	
R337	ERG2ANJ472	Metal Film,	4.7kΩ,	2W,	± 5%		1	
R338	ERG2ANJ472	Metal Film,	4.7kΩ,	2W,	± 5%		1	
R339	ERD14FJ331	Carbon,	330Ω,	1/4W,	± 5%		1	
R340	ERD14FJ331	Carbon,	330Ω,	1/4W,	± 5%		1	
R341	ERD14FJ331	Carbon,	330Ω,	1/4W,	± 5%		1	
R342	ERD14FJ331	Carbon,	330Ω,	1/4W,	± 5%		1	
R343	ERD14FJ221	Carbon,	220Ω,	1/4W,	± 5%		1	
R344	ERD14FJ221	Carbon,	220Ω,	1/4W,	± 5%		1	
R345	ERF5AKR33	Non-Flammable,	0.33Ω,	5W,	±10%		1	
R346	ERF5AKR33	Non-Flammable,	0.33Ω,	5W,	±10%		1	


Ref. No.	Part No.	Part Name & Description				Per Set	Remarks
R347	ERF5AKR33	Non-Flammable,	0.33Ω	5W,	±10%	1	
R348	ERF5AKR33	Non-Flammable,	0.33Ω	5W,	±10%	1	
R357	ERD25TJ563	Carbon,	56kΩ,	1/4W,	± 5%	1	
R358	ERD25TJ563	Carbon,	56kΩ,	1/4W,	± 5%	1	
R359	ERO25CKF8202	Metal Film,	82kΩ,	1/4W,	± 1%	1	
R360	ERO25CKF8202	Metal Film,	82kΩ,	1/4W,	± 1%	1	
R361	ERO25CKF6800	Metal Film,	680Ω,	1/4W,	± 1%	1	
R362	ERO25CKF6800	Metal Film,	680Ω,	1/4W,	± 1%	1	
R363	ERD25TJ223	Carbon,	22kΩ,	1/4W,	± 5%	1	
R364	ERD25TJ223	Carbon,	22kΩ,	1/4W,	± 5%	1	
R365	ERO25CKF3301	Metal Film,	3.3kΩ,	1/4W,	± 1%	1	
R366	ERO25CKF3301	Metal Film,	3.3kΩ,	1/4W,	± 1%	1	
R367	ERX2ANJ100	Metal Film,	10Ω,	2W,	± 5%	1	
R368	ERX2ANJ100	Metal Film,	10Ω,	2W,	± 5%	1	
R369	ERG2ANJ331	Metal Film,	330Ω,	2W,	± 5%	1	
R370	ERG2ANJ331	Metal Film,	330Ω,	2W,	± 5%	1	
R371	ERX1ANJ6R8	Metal Film,	6.8Ω,	1W,	± 5%	1	
R372	ERX1ANJ6R8	Metal Film,	6.8Ω,	1W,	± 5%	1	
R373	ERD14FJ101	Carbon,	100Ω,	1/4W,	± 5%	1	
R374	ERD14FJ101	Carbon,	100Ω,	1/4W,	± 5%	1	
R375	ERD14FJ181	Carbon,	180Ω,	1/4W,	± 5%	1	
R376	ERD14FJ181	Carbon,	180Ω,	1/4W,	± 5%	1	
R377	ERD25TJ103	Carbon,	10kΩ,	1/4W,	± 5%	1	
R390 (X2)	ERD18FJ331	Carbon,	330Ω,	1/8W,	± 5%	2	
R391 (X2)	ERD18FJ331	Carbon,	330Ω,	1/8W,	± 5%	2	
R392 (X2)	ERD25TJ102	Carbon,	1kΩ,	1/4W,	± 5%	2	
R393 (X2)	ERD25TJ102	Carbon,	1kΩ,	1/4W,	± 5%	2	
R394 (X2)	ERD25TJ183	Carbon,	18kΩ,	1/4W,	± 5%	2	
R395 (X2)	ERD25TJ822	Carbon,	8.2kΩ,	1/4W,	± 5%	2	
R396 (X2)	ERD25TJ103	Carbon,	10kΩ,	1/4W,	± 5%	2	
R401	ERD25TJ273	Carbon,	27kΩ,	1/4W,	± 5%	1	
R402	ERD25TJ223	Carbon,	22kΩ,	1/4W,	± 5%	1	
R403	ERD25TJ333	Carbon,	33kΩ,	1/4W,	± 5%	1	
R404	ERD25TJ154	Carbon,	150kΩ,	1/4W,	± 5%	1	
R405	ERD25TJ153	Carbon,	15kΩ,	1/4W,	± 5%	1	
R407	ERD25TJ223	Carbon,	22kΩ,	1/4W,	± 5%	1	
R408	ERD25TJ223	Carbon,	22kΩ,	1/4W,	± 5%	1	
R409	ERD25TJ223	Carbon,	22kΩ,	1/4W,	± 5%	1	
R410	ERD25TJ183	Carbon,	18kΩ,	1/4W,	± 5%	1	
R412	ERD25TJ393	Carbon,	39kΩ,	1/4W,	± 5%	1	
R413	ERD25TJ824	Carbon,	820kΩ,	1/4W,	± 5%	1	
R414	ERD25TJ103	Carbon,	10kΩ,	1/4W,	± 5%	1	
R415	ERD25TJ681	Carbon,	680Ω,	1/4W,	± 5%	1	
R416	ERG1ANJ681	Metal Film,	680Ω,	1W,	± 5%	1	
R501	ERQ12HJ5R6	Fuse Type Metallic,	5.6Ω,	1/2W,	± 5%	1	
R502	ERD18FJ4R7	Carbon,	4.7Ω,	1/8W,	± 5%	1	
R503	ERD12FJ392	Carbon,	3.9kΩ,	1/2W,	± 5%	1	
R504	ERD12FJ392	Carbon,	3.9kΩ,	1/2W,	± 5%	1	
R505	ERG1ANJ680	Metal Film,	68Ω,	1W,	± 5%	1	
R506	ERG1ANJ391	Metal Film,	390Ω,	1W,	± 5%	1	
R507	ERG1ANJ391	Metal Film,	390Ω,	1W,	± 5%	1	
R508	ERD25TJ223	Carbon,	22kΩ,	1/4W,	± 5%	1	

Ref. No.	Part No.	Part Name & Description				Per Set	Remarks
R509	ERD25TJ223	Carbon,	22kΩ,	1/4W,	± 5%	1	
R510	ERD25TJ223	Carbon,	22kΩ,	1/4W,	± 5%	1	
R511	ERD25TJ223	Carbon,	22kΩ,	1/4W,	± 5%	1	
R512	ERD25TJ273	Carbon,	27kΩ,	1/4W,	± 5%	1	
R513	ERD25TJ393	Carbon,	39kΩ,	1/4W,	± 5%	1	
R514	ERD25TJ472	Carbon,	4.7kΩ,	1/4W,	± 5%	1	
R515	ERO25CKF2152	Metal Film,	21.5kΩ,	1/4W,	± 1%	1	
R516	ERO25CKF2152	Metal Film,	21.5kΩ,	1/4W,	± 1%	1	
VARIABLE RESISTORS							
VR201	EWKE6A029252	Balance Control,	250kΩ (BH)			1	○
VR202	EWKF77A031BF5	Volume Control,	250kΩ (B)			1	○
VR203	EWKF4XA063C15	Bass Control,	100kΩ (C)			1	○
VR204	EWKF3XA063C15	Treble Control,	100kΩ (C)			1	○
VR301, 302, 303	EVT3SMA00B54	DC Balance Adjustment,	50kΩ (B)			4	
VR305, 306	EVLS3AA00B52	ICQ Adjustment,	500Ω (B)			2	
R350(X2), 351(X2)	EVLS0AA00B53	Power Limiter Adjustment,	5kΩ (B)			4	
VR501	EVLS3AA00B53	Voltage Control Adjustment,	5kΩ (B)			1	
CAPACITORS							
C1 [M]	ECQU1A103MD	Polyester,	0.01μF,	125V.AC,±20%		1	
C1 [MC]	ECQU1A103MC	Polyester,	0.01μF,	125V.AC,±20%		1	
C2 [M]	ECQU1A103MD	Polyester,	0.01μF,	125V.AC,±20%		1	
C2 [MC]	ECQU1A103MC	Polyester,	0.01μF,	125V.AC,±20%		1	
C101	ECKD1H331KB	Ceramic,	330pF,	50V,	±10%	1	
C102	ECKD1H331KB	Ceramic,	330pF,	50V,	±10%	1	
C103	ECQE1335KZ	Polyester,	3.3μF,	125V,	±10%	1	
C104	ECQE1335KZ	Polyester,	3.3μF,	125V,	±10%	1	
C105	ECCD1H121K	Ceramic,	120pF,	50V,	±10%	1	
C106	ECCD1H121K	Ceramic,	120pF,	50V,	±10%	1	
C107	ECCD1H681KB	Ceramic,	680pF,	50V,	±10%	1	
C108	ECCD1H681KB	Ceramic,	680pF,	50V,	±10%	1	
C109	ECEA10V1000V	Electrolytic,	1000μF,	10V		1	
C110	ECEA10V1000V	Electrolytic,	1000μF,	10V		1	
C111	ECEA6V220V	Electrolytic,	220μF,	6.3V		1	
C112	ECEA6V220V	Electrolytic,	220μF,	6.3V		1	
C113	ECEA16V10	Electrolytic,	10μF,	16V		1	
C114	ECEA16V10	Electrolytic,	10μF,	16V		1	
C115	ECQF05154GZN	Polypropylene,	0.15μF,	50V,	± 2%	1	
C116	ECQF05154GZN	Polypropylene,	0.15μF,	50V,	± 2%	1	
C117	ECQF1393GZN	Polypropylene,	0.039μF,	125V,	± 2%	1	
C118	ECQF1393GZN	Polypropylene,	0.039μF,	125V,	± 2%	1	
C119	ECQM1H332JZ	Polyester,	0.0033μF,	50V,	± 5%	1	
C120	ECQM1H332JZ	Polyester,	0.0033μF,	50V,	±5%	1	
C121	ECCD1H820K	Ceramic,	82pF,	50V,	±10%	1	
C122	ECCD1H820K	Ceramic,	82pF,	50V,	±10%	1	
C123	ECCD1H270K	Ceramic,	27pF,	50V,	±10%	1	
C124	ECCD1H270K	Ceramic,	27pF,	50V,	±10%	1	
C125	ECEA6V47	Electrolytic,	47μF,	6.3V		1	

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
C126	ECEA6V47	Electrolytic, 47 μ F, 6.3V	1	
C127	ECEA63V33V	Electrolytic, 33 μ F, 63V	1	
C128	ECEA63V33V	Electrolytic, 33 μ F, 63V	1	
C129	ECEA63V33V	Electrolytic, 33 μ F, 63V	1	
C130	ECEA63V33V	Electrolytic, 33 μ F, 63V	1	
C131	ECQMIH152JZ	Polyester, 0.0015 μ F, 50V, $\pm 5\%$	1	
C132	ECQMIH152JZ	Polyester, 0.0015 μ F, 50V, $\pm 5\%$	1	
C133	ECQE1105KZ	Polyester, 1 μ F, 125V, $\pm 10\%$	1	
C134	ECQE1105KZ	Polyester, 1 μ F, 125V, $\pm 10\%$	1	
C135	ECEA50V10	Electrolytic, 10 μ F, 50V	1	
C136	ECEA50V10	Electrolytic, 10 μ F, 50V	1	
C137	ECEA50V47V	Electrolytic, 47 μ F, 50V	1	
C138	ECEA6V33	Electrolytic, 33 μ F, 6.3V	1	
C201	ECQM1H103KZ	Polyester, 0.01 μ F, 50V, $\pm 10\%$	1	
C202	ECQM1H103KZ	Polyester, 0.01 μ F, 50V, $\pm 10\%$	1	
C203	ECCD1H221K	Ceramic, 220pF, 50V, $\pm 10\%$	1	
C204	ECCD1H221K	Ceramic, 220pF, 50V, $\pm 10\%$	1	
C205	ECQE1684KZ	Polyester, 0.68 μ F, 125V, $\pm 10\%$	1	
C206	ECQE1684KZ	Polyester, 0.68 μ F, 125V, $\pm 10\%$	1	
C207	ECEA50VR47	Electrolytic, 0.47 μ F, 50V	1	
C208	ECEA50VR47	Electrolytic, 0.47 μ F, 50V	1	
C209	ECCD1H120K	Ceramic, 12pF, 50V, $\pm 10\%$	1	
C210	ECCD1H120K	Ceramic, 12pF, 50V, $\pm 10\%$	1	
C211	ECQM1H152KZ	Polyester, 0.0015 μ F, 50V, $\pm 10\%$	1	
C212	ECQM1H152KZ	Polyester, 0.0015 μ F, 50V, $\pm 10\%$	1	
C213	ECQM1H822KZ	Polyester, 0.0082 μ F, 50V, $\pm 10\%$	1	
C214	ECQM1H822KZ	Polyester, 0.0082 μ F, 50V, $\pm 5\%$	1	
C215	ECEA16N10	Non-Polar Electrolytic, 10 μ F, 16V	1	
C216	ECEA16N10	Non-Polar Electrolytic, 10 μ F, 16V	1	
C217	ECQM1H103KZ	Polyester, 0.01 μ F, 50V, $\pm 10\%$	1	
C218	ECQM1H103KZ	Polyester, 0.01 μ F, 50V, $\pm 10\%$	1	
C219	ECQM1H333KZ	Polyester, 0.033 μ F, 50V, $\pm 10\%$	1	
C220	ECQM1H333KZ	Polyester, 0.033 μ F, 50V, $\pm 10\%$	1	
C221	ECEA50N1	Non-Polar Electrolytic, 1 μ F, 50V	1	
C222	ECEA50N1	Non-Polar Electrolytic, 1 μ F, 50V	1	
C223	ECQM1H182KZ	Polyester, 0.0018 μ F, 50V, $\pm 10\%$	1	
C224	ECQM1H182KZ	Polyester, 0.0018 μ F, 50V, $\pm 10\%$	1	
C225	ECEA50V1	Electrolytic, 1 μ F, 50V	1	
C226	ECEA50V1	Electrolytic, 1 μ F, 50V	1	
C227	ECEA6V33	Electrolytic, 33 μ F, 6.3V	1	
C301	ECEA50N1	Non-Polar Electrolytic, 1 μ F, 50V	1	
C302	ECEA50N1	Non-Polar Electrolytic, 1 μ F, 50V	1	
C303	ECCD2H121K	Ceramic, 120pF, 500V, $\pm 10\%$	1	
C304	ECCD2H121K	Ceramic, 120pF, 500V, $\pm 10\%$	1	
C305	ECEA25V3R3	Electrolytic, 3.3 μ F, 25V	1	
C306	ECEA25V3R3	Electrolytic, 3.3 μ F, 25V	1	
C307	ECCD2H121K	Ceramic, 120pF, 500V, $\pm 10\%$	1	
C308	ECCD2H121K	Ceramic, 120pF, 500V, $\pm 10\%$	1	
C309	ECCD2H680K	Ceramic, 68pF, 500V, $\pm 10\%$	1	
C310	ECCD2H680K	Ceramic, 68pF, 500V, $\pm 10\%$	1	
C311	ECKD1H103PF	Ceramic, 0.01 μ F, 50V, $\pm 100\%$	1	
C312	ECKD1H103PF	Ceramic, 0.01 μ F, 50V, $\pm 100\%$	1	
C313	ECCD2H390K	Ceramic, 39pF, 500V, $\pm 10\%$	1	
C314	ECCD2H390K	Ceramic, 39pF, 500V, $\pm 10\%$	1	
C315	ECKD1H472PF	Ceramic, 0.0047 μ F, 50V, $\pm 100\%$	1	
C316	ECKD1H472PF	Ceramic, 0.0047 μ F, 50V, $\pm 100\%$	1	

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
C317	ECCD1H271K	Ceramic, 270pF, 50V, $\pm 10\%$	1	
C318	ECCD1H271K	Ceramic, 270pF, 50V, $\pm 10\%$	1	
C319	ECKD1H331K	Ceramic, 330pF, 50V, $\pm 10\%$	1	
C320	ECKD1H331K	Ceramic, 330pF, 50V, $\pm 10\%$	1	
C323	ECEA50MR22	Electrolytic, 0.22 μ F, 50V	1	
C324	ECEA50MR22	Electrolytic, 0.22 μ F, 50V	1	
C325	ECEA10V1000V	Electrolytic, 1000 μ F, 10V	1	
C326	ECEA10V1000V	Electrolytic, 1000 μ F, 10V	1	
C327	ECCD1H150K	Ceramic, 15pF, 50V, $\pm 10\%$	1	
C328	ECCD1H150K	Ceramic, 15pF, 50V, $\pm 10\%$	1	
C329	ECQM1473KZ	Polyester, 0.047 μ F, 125V, $\pm 10\%$	1	
C330	ECQM1473KZ	Polyester, 0.047 μ F, 125V, $\pm 10\%$	1	
C331	ECEA50V3R3	Electrolytic, 3.3 μ F, 50V	1	
C332	ECEA50V3R3	Electrolytic, 3.3 μ F, 50V	1	
C333	ECEA50V3R3	Electrolytic, 3.3 μ F, 50V	1	
C336	ECEA6V47	Electrolytic, 47 μ F, 6.3V	1	
C350 (X2)	ECKD1H222PF	Ceramic, 0.0022 μ F, 50V, $\pm 100\%$	2	
C351 (X2)	ECKD1H222PF	Ceramic, 0.0022 μ F, 50V, $\pm 100\%$	2	
C401	ECEA50V1	Electrolytic, 1 μ F, 50V	1	
C402	ECEA16N47	Non-Polar Electrolytic, 47 μ F, 16V	1	
C403	ECEA6V100V	Electrolytic, 100 μ F, 6.3V	1	
C501	ECET55R103Y	Electrolytic, 10000 μ F, 55V	1	
C502	ECET55R103Y	Electrolytic, 10000 μ F, 55V	1	
C503	ECET55R103Y	Electrolytic, 10000 μ F, 55V	1	
C504	ECET55R103Y	Electrolytic, 10000 μ F, 55V	1	
C505	ECEA63V470V	Electrolytic, 470 μ F, 63V	1	
C506	ECEA63V470V	Electrolytic, 470 μ F, 63V	1	
C507	ECKD2H681KB	Ceramic, 680pF, 500V, $\pm 10\%$	1	
C509	ECEA63V3R3	Electrolytic, 3.3 μ F, 63V	1	
C510	ECEA63V3R3	Electrolytic, 3.3 μ F, 63V	1	
C511	ECKD1H102PF	Ceramic, 0.001 μ F, 50V, $\pm 100\%$	1	
C512	ECKD1H472PF	Ceramic, 0.0047 μ F, 50V, $\pm 100\%$	1	
C513	ECEA50V1	Electrolytic, 1 μ F, 50V	1	
C515	ECEA50V1	Electrolytic, 1 μ F, 50V	1	
C516	ECEA50V1	Electrolytic, 1 μ F, 50V	1	
C517	ECEA50V1	Electrolytic, 1 μ F, 50V	1	
C518	ECEA50V1	Electrolytic, 1 μ F, 50V	1	
PILOT LAMP				
PL	XAMR21S350C	Power indicator, 6.3V 40mA	1	
FUSES				
F1, 2	XBA1F30NU100	Fuse, 3A (125V), Power Source	2	
F3, 4	XBA2F05NU100	Fuse, 0.5A (250V), Power Source	2	
SWITCHES				
S1	SSR65	Switch, Selector	1	○
S2, 3	SSR49	Switch, Tape Monitor & Rec Mode	2	
S4, 5, 14	SSH333S	Switch, Capacitance, Resistance & Loudness	1	○
S6, 7, 8, 9	SSH411S	Switch, EQ Subsonic, Mode, Muting & High Filter	1	○



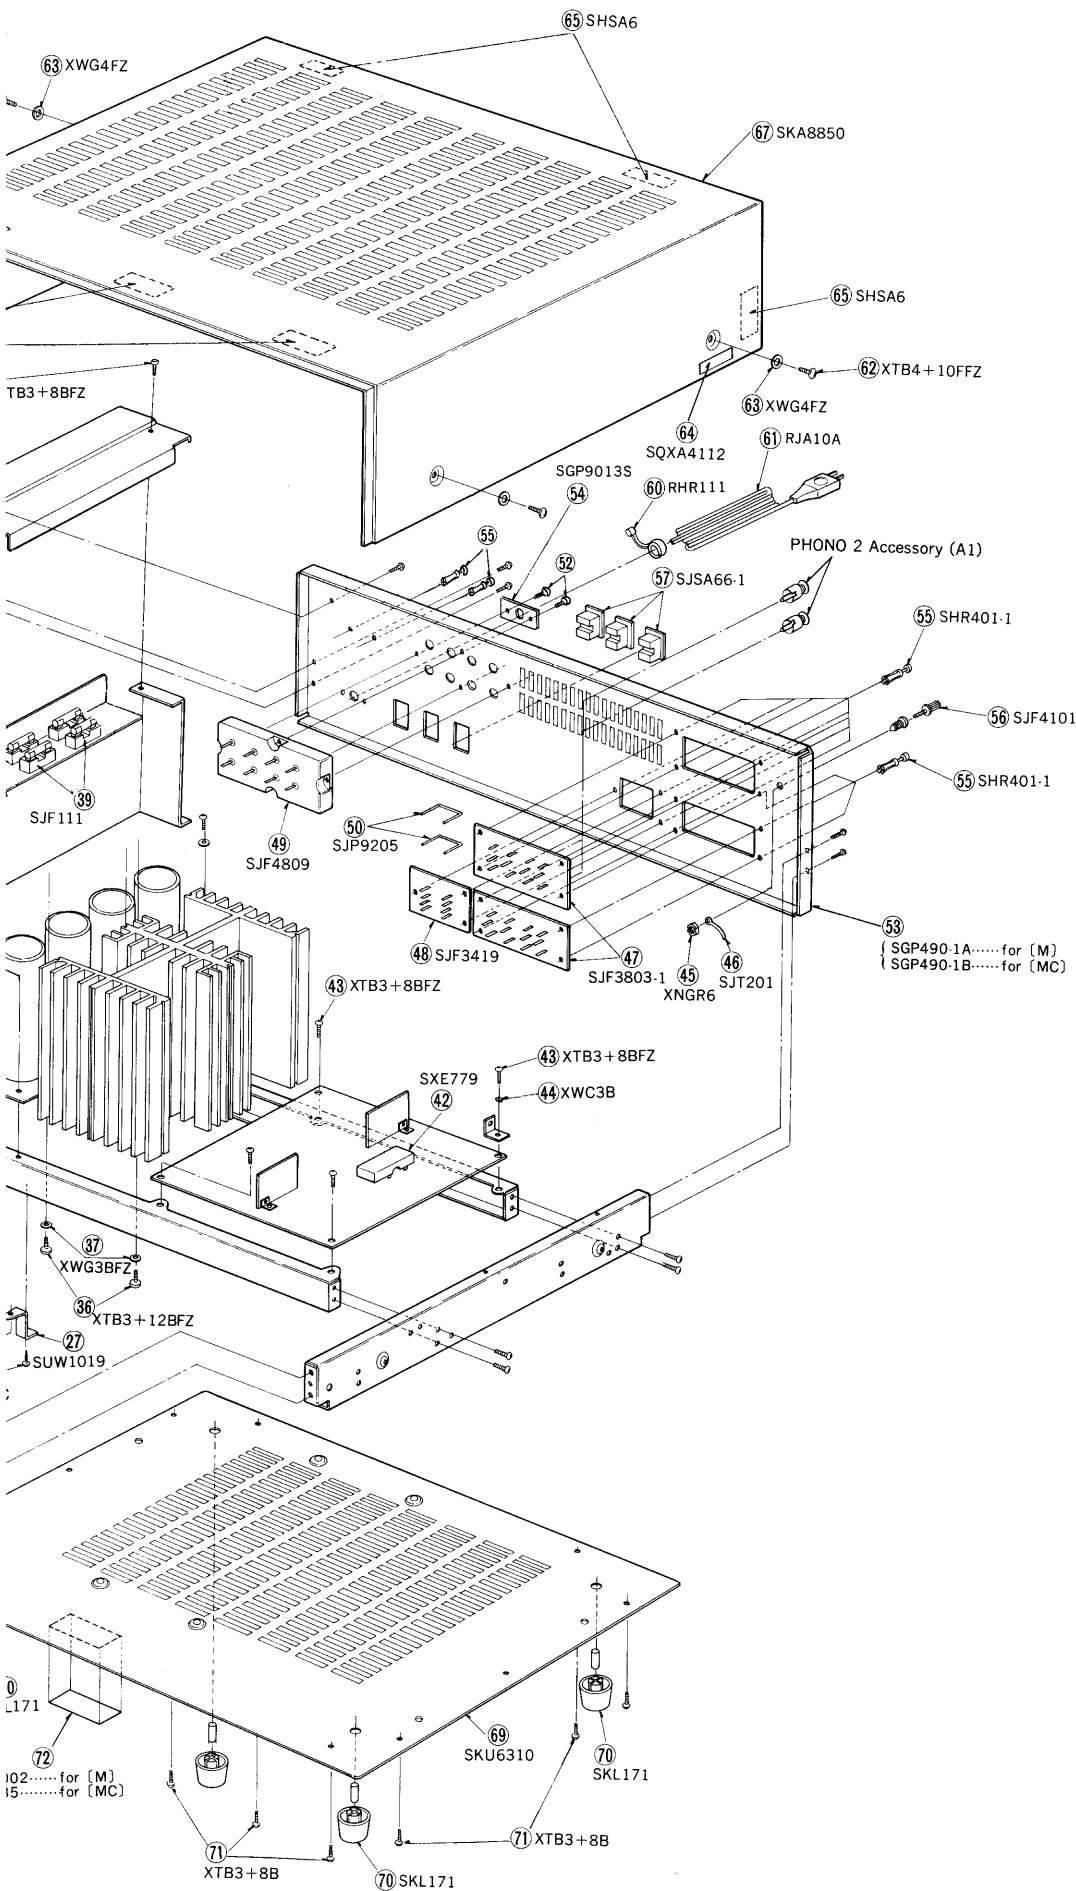

Ref. No.	Part No.	Part Name & Description	Par Set	Remarks
S10	SSL33S	Switch, Direct	1	○
S11	SSL31S	Switch, Operation	1	○
S12	ESRC124F25B	Switch, Speaker	1	
S13	SSL45S	Switch, Power Source	1	○
RELAY				
RELAY	SSY21	Relay, Speakers Protection & Muting	1	
COMPONENT COMBINATIONS				
M501, 502, 503	RXAF103P22HD	Component Combination, 0.01μF, (X2)	3	
CABINET and CHASSIS PARTS				
1	SBN643	Knob, Volume Control	1	○
2	SBN667	Knob, Bass, Treble & Balance Control	3	○
3	SBN647-1	Knob, Speakers, Rec Mode, Tape Monitor & Selector	4	○
4	SBD9-2	Knob, Power Switch, Operation & Input	3	○
5	XNS8	Nut, Volume, Bass, Treble, Balance Volume & Selector	7	
6	XWV8	Washer (Spring)	7	
7	XNS9	Nut, Headphones & Speaker Switch	2	
8	XWV9	Washer (Spring), Speaker Switch	1	
9	SGW7991-1B	Panel, Front	1	○
10	SGX6481	Sleeve, Push Switch Button	1	○
11	SGLA9	Panel Light, Orange	1	*
12	SHR6001	Shading Cloth, Panel Light	1	○
13	SGX6481	Sleeve, Push Switch Buttons	2	○
14	SBC173-1	Button, Push Switch	7	○
15	SUS123-1	Spring, Push Switch Button	7	○
16	SGX6483	Sleeve, Push Switch Buttons	2	○
17	SGX6485	Sleeve, Push Switch Buttons	1	○
18	SHSA22	Shading Cloth	2	
19	SHSA21	Shading Cloth	1	
20	XSN3+6S	Screw, Power Source & Push Switch M'tg	6	
21	XWA3	Washer (Spring), Power Source & Push Switch Screw	6	
22	SHR401-1	Latch, LED Bracket	1	
23	SNW923	Washer, Headphones Jack	1	
24	SHGA204	Bracket, Lamp	1	
25	SUW891	Bracket, LED	2	*
26	XTV3+8C	Screw, Printed Circuit Board Ass'y M'tg	4	
27	SUW1019	Bracket, Printed Circuit Board Ass'y	2	* ○
28	XCJ6P11B-A	Jack, Headphones	1	
29	XNG4BS	Nut, Power Transformer	8	
30	XWA4B	Washer (Spring), Power Transformer	8	
31	XWG4	Washer, Power Transformer	8	
33	SXE513	Lead Clamp	1	
34	XTV3+8C	Screw, Lead Clamp M'tg	2	
35	SGB499	Label, Technics	2	* ○

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
36	XTB3+12BFZ	Screw, Heat Sink M'tg	2	
37	XWG3BFZ	Washer, Heat Sink Screw	2	
38	SHRA307	Lead Clamp	1	
39	SJF111	Holder, Fuse	4	
40	XTB3+8BFZ	Screw, Fuse Cover Bracket M'tg	2	
42	SXE779	Shield Case	1	○
43	XTB3+8BFZ	Screw, Printed Circuit Board Ass'y M'tg	2	
44	XWC3B	Washer, Printed Circuit Board Ass'y	1	
45	XNGR6	Nut, Ground Terminal	1	
46	SJT201	Lug, Ground	1	
47	SJF3803-1	Terminal, Input	2	
48	SJF3419	Terminal, Pre Out & Main In	1	
49	SJF4809	Terminal Board, Speaker	1	○
50	SJP9205	Short Pin, Pre & Main Amplifier	2	
52	XS83+8FZS	Screw, AC Cord Bracket M'tg	2	
53 [M]	SGP490-1A	Rear Panel	1	○
53 [MC]	SGP490-1B	Rear Panel	1	○
54	SGP9013S	Bracket, AC Cord	1	
55	SHR401-1	Latch, Input, Antenna & Speaker Terminals	17	
56	SJF4101	Terminal, Ground	1	
57	SJSA66-1	Socket, AC Outlet	3	
60	RHR111	Bushing, AC Cord	1	
61	RJA10A	AC Cord, Power Source	1	
62	XTB4+10FFZ	Screw, Cabinet M'tg	4	
63	XWG4FZ	Washer, Cabinet Screw	4	
64	SQXA4112	Caution Label, Cabinet Screw	1	
65	SHSA6	Shading Cloth	6	
67	SKA8850	Cabinet, Black Wooden	1	○
69	SKU6310	Bottom Board	1	* ○
70	SKL171	Foot, Set	4	
71	XTB3+8B	Screw, Bottom Board M'tg	10	
72 [M]	SQXA4002	Caution Label, Bottom Board	1	
72 [MC]	SQX4435	Caution Label, Bottom Board	1	
ACCESSORIES				
A1	SJPA11	Short Pin, Phono 2 input terminal	2	
PACKING PARTS				
P1	SPP511	Soft Cover	1	
P2	SPS801-1	Pad, Left Side	1	
P3	SPS803-1	Pad, Right Side	1	
P4	SPS1013	Pad, Bottom Side	1	○
P5 [M]	SPG1053	Carton Box	1	○
P5 [MC]	SPG1055	Carton Box	1	○
P6 [M]	SQF1579	Instructions Book, Printed Matter	1	○
P6 [MC]	SQF1581	Instructions Book, Printed Matter	1	○
Notes: The model [M] is available in America only. The model [MC] is available in Canada only.				

■ PACKINGS

